1997

Revised

EV1™

Electrical

Service Manual

CamScanner

1997

Revised

EV1™

Electrical

Service Manual

CamScanner

CAUTION

To reduce the chance of personal injury and/or property damage, the following instructions must be carefully observed.

Proper service and repair are important to the safety of the service technician and the safe, reliable operation of all motor vehicles. If part replacement is necessary, the part must be replaced with one of the same part number or with an equivalent part. Do not use a replacement part of lesser quality.

The senice procedures recommended and described in this service manual are effective methods of performing service and repair. Some of these procedures require the use of tools specifically designed for the purpose.

Accordingly, anyone who intends to use a replacement part, service procedure, or tool that is not recommended by the vehicle manufacturer must first determine that neither his safety nor the safe operation of the vehicle will be jeopardized by the replacement part, service procedure, or tool selected.

It is important to note that this manual contains various “Cautions” and “Notices” that must be carefully observed in order to reduce the risk of personal injury during sendee or repair or the possibility that improper service or repair may damage the vehicle or render it unsafe. It is also important to understand that these “Cautions” and “Notices” are not exhaustive; it is impossible to warn of all the possible hazardous consequences that might result from failure to follow these instructions.

This vehicle has a high voltage power system. Disabling the system is required when working on or around the high voltage system and high voltage battery pack (other than testing the system using the procedures in this manual).

To help avoid severe shocks and burns and vehicle damage, always follow the cautions in this manual to disable the high voltage system. See the high voltage disable and enable procedure in the front of this service manual.

This vehicle is equipped with Supplemental Inflatable Restraint (SIR). Refer to “CAUTIONS” under “On-Vehicle Service” and the SIR Component and Wiring Location views in the “SIR Service Manual” before performing service on or around SIR components or wiring. Failure to follow “CAUTIONS” could result in possible air bag deployment, personal injury, otherwise unneeded SIR system repairs.

To help avoid accidental air bag deployment and personal injury, when servicing a vehicle that requires repair of the SIR system and another vehicle system, it is recommended that the SIR be repaired first using service manual procedures.

CAUTION

Saturn Service Manuals are intended for use by professional, qualified technicians. Attempting repairs or service without the appropriate training, tools, and equipment could cause injury to you or others and damage to your vehicle that may cause it not to operate.

CamScanner

All information, illustratio s a
latest product *inhmanon^hat*^ Specifica/jons contained in this guide are based on the
was ava ab the time of publica tion, Sat,m, reserves
<be right to make changes at anytatriSmtVo'tte

No part of this publication mnv h
transmitted, in any form or bv ° repro ,ced, stored in any retrieval system or
mechanical photocopying recordm^*^ m 4 Tans\ incl uding but not limited to electronic,
the Saturn Corporation. This inrhif °F „ erwise> without the prior written permission of
es text, illustrations, tables and charts.

©Copyright 1997 Saturn Corporation U.S.A. All rights reserved.

CamScanner

Table of Contents

ELECTRICAL

NOTICE

Always use the correct fastener in the proper location. When you replace a fastener, use ONLY the exact part number for that application.

The applicable service procedure will identify, where necessary, those fasteners that must be replaced after removal; or those fasteners that require thread lockers or thread sealant

UNLESS OTHERWISE SPECIFIED, do not use supplemental coatings (paints, greases, or other corrosion inhibitors) on threaded fasteners or fastener joint interfaces. Generally, such coatings adversely affect the fastener torque and the joint clamping force, and may damage the fastener.

When you install fasteners, use the correct tightening sequence and specifications.

Following these instructions can help you avoid damage to parts and systems.

GLOSSARY OF ACRONYMS..... 19

HIGH VOLTAGE DISABLE..... 24

Removal 24

HIGH VOLTAGE ENABLE 25

Installation 25

12 VOLT DISABLE/ENABLE..... 26

SIR SYSTEM..... 27

ON VEHICLE SERVICE 27

Service Precautions 27

Disabling the SIR System 27

Enabling the SIR System..... 28

LIFTING, JACKING, AND SUPPORT POINTS..... 29

GENERAL INFORMATION 30

Hoisting/Lifting For a 2 Post Above Ground Hoist - (Side Car)..... 31

Hoisting/Lifting For a 2 Post Inground Hoist - (Front and Rear)..... 33

Hoisting/Lifting With a Floor Jack..... 34

Underbody Front Air Deflector..... 37

Removal..... 37

Installation..... 38

CamScanner

Table of Contents

HANDLING ELECTROSTATIC DISCHARGE (ESD) SENSITIVE PARTS 41

JUNCTION BLOCK GROUND STRAP INSTALLATION / REMOVAL PROCEDURE 42

Installation . .....

Removal 42

Procedure For Using Low Current Amp Probe - EV9726Z 43

Scan Tool Information 44

RSA to BPM 44

IPCtoBPM 44

Scanner Mode 45

RSA - General Information 45

IPC 48

General Information 48

VEHICLE ELECTRICAL DIAGNOSIS 49

Trouble Shooting Guides 49

Before Trouble Shooting 49

Five-Step Trouble Shooting 49

Helpful Hints 49

Cautions 50

READING WIRING SCHEMATICS AND SYMBOLS .. 50

Schematics 50

Wire Sizes 50

Electrical Symbols 52

DIGITAL MULTIMETER USAGE 53

Introduction To Diagnosis Of Electrical Faults 53

Digital Multimeter 53

Voltage 54

Amperage (Cunent) 54

CamScanner

Continuity/Rcsistance/Diode 54
Continuity 54
Resistance 54
Diode Testing 54
Multimeter Display Reading 55
DIAGNOSTICS USING THE DIAGNOSTIC SERVICE PROBE ... 56
Diagnostic Service Probe 56
CONNECTOR JUMPER USAGE 57
WIRE REPAIR 58
Splicing 58
CONNECTOR REPAIR 59
Push-To-Seat Connectors 59
Terminal Removal 59
Cut Lead Installation 59
Pull-To-Seat Connectors 60
Terminal Removal 60
Cut Lead Installation 60
Weather Pack Connectors 62
Terminal Removal 62
Cut Lead Installation 62
POWER DISTRIBUTION 63
GENERAL DESCRIPTION 63
SIR System 63
How To Use This Section Of The Manual 63
Circuits 63
Power Circuits 63
Signal (Control or Data) Circuits 63
Ground Circuits 63
Runl/Run2 Circuit Operation 63
Vehicle "Wake-UP Command" and "Run 1/wake-up" During Charging 63
Periodic Wake-Up 63
PROTECTION DEVICES 64
Positive Temperature Coefficients (PTC) 64
Maxifuses 64

CamScanner

PARASITIC LOADS 64
Parasitic Load Test 65
JUNCTION BLOCKS 66
FUSE BLOCK DETAILS 67
Underhood Fuse Block #1 67
Underhood Fuse Block #2 67
Circuit and Cavity Location 67
ELECTRICAL CIRCUITS 68
Circuit Schematics 68
Diagnosis 68
SUB-SYSTEM SCHEMATICS 69
Accessory AC and DC Power Module 70
Accessory AC and DC Power Module Component Location 74
Backup Lamps 76
Backup Lamps Component Location 77
Backup Lamps Trouble Tree Index 78
Battery Pack (High Voltage) 84
Battery Pack (Low Voltage) 85
Battery Pack (Low Voltage) Component Location 93
Brake System 94
Brake System Component Location 102
Brake Transaxle Shift Interlock (BTSI) System 104
Brake Transaxle Shift Interlock (BTSI) System Component Location 105
Brake Transmission Shift Interlock (BTSI) 106
Brake Transmission Shift Interlock (BTSI) Trouble Tree Index 106
Check Low Tire Pressure System 110
Check Low Tire Pressure System Component Location 112
Check Tire Pressure System (CTPS) 113
General Description 113
System Reset and Calibration 113

CamScanner

Detection 114
Check Tire Pressure System (CT'PS) Trouble Tree Index 114
Climate Control 118
Climate Controls Location Views 127
Cooling Fan 130
Cooling Fan Component Location View 131
Cruise Control 132
Cruise Control Component Location View 134
Data Link Connector 136
Data Link Connector Component Location View 138
Dim Illumination Lamps 140
Dim Illumination Lamps Component Location View 141
Displays Dimming 142
Displays Dimming Trouble Tree Index 142
Exterior Lights 148
Exterior Lights Component Location Views 154
Brake Lights 155
Park/Marker Lamps 155
Tum/Hazard Lamps 155
Daytime Running Lamps (DRL) 155
Exterior Lights Trouble Tree Index 155
Single Lights Out Troubletrees 156
Multiple Lights Out Troubletrees 156
Ground Distribution 194
Ground Point Locations 205
Headlamps 206
Headlamp Component Location Views 208
Circuit Operation 209
Flash To Pass 209
System Check 209
Headlamps Trouble Tree Index 209
Horns 224
Horns Component Location View 226

CamScanner

Pedestrian Alert Mode 227
Reverse Warning 227
Horn Trouble Tree Index . ...
Hom 500 hz (HI Note) 236
Removal 236
Installation 236
Hom 400 hz (LO Note) .....
Installation 236
Instrument Panel Cluster 238
Instrument Panel Cluster (IPC) Component Location View 247
General Description 248
Power Steering Control 248
Power Steering Hand Wheel Sensor 248
Commanded Steering Pump Speed 248
Telltale Control 248
Seat Belt Switch Input 249
vehicle speed Input 249
Turn Signal Indicators 249
Range Display 249
Power Remaining (State Of Charge) 249
Power Use Display 249
HI Beam Indicator 249
Check Messages Warning 249
Charge Hours and Charge Indicator 249
Trip/Season Odometer 249
PRND (Park, Reverse, Neutral, Drive) 249
IPC Chimes 249
Air Bag Telltale 250
Keyminder 250
Display Steering Chime Module (IP$_C$i Tmi ki T 250
DTC011 - Uss Of BPMPoll 250
DTC 012-Loss Of PCM Eavesdrop..... 268
^^4-^ofHrcM$_E$ave$_{Sdr0P}$:::..... 270
^{DTC}014-Uss$_{Of}$R$_{SAEavesdrop}$..... 272
..... 274

CamScanner

DTC 015 — Loss Of BTCM Eavesdrop..... 276
DTC 016 - Handwheel Sensor Fault..... 278
DTC 031 — HTCM Service Now Telltale..... 280
DTC 032 — HTCM Temperature Telltale 281
DTC 033 — PCM Service Now Telltale 282
DTC 034 - PCM Temperature Telltale..... 284
DTC 035 — BPM Service Now Telltale 285
DTC 036 — BPM Temperature Telltale..... 286
DTC 037 - Reduced Performance Telltale..... 287
DTC 038 - Battery Life Telltale..... 288
DTC 039 — Check Tire Pressure Telltale..... 289
DTC 040 - Air Bag (Sir) Telltale..... 290
DTC 041 — Security Telltale..... 291
DTC 042 - Brake Telltale..... 292
DTC 043 — Anti-Lock Telltale 293
DTC 044-Seat Belt Telltale 294
DTC 045 — PCM Service Soon Telltale..... 296
Interior Lights..... 298
Interior Lights Component Location Views..... 300
Courtesy Lamps 301
Interior Lamp 301
Map Lights..... 301
Trunk Lamp..... 301
Courtesy Lamps Trouble Tree Index..... 301
Junction Block Details..... 310
Junction Block Locations..... 326
Power Distribution..... 338
Power Distribution Component Location View 332
Power Distribution..... 333
Fuse Block Details..... 333
RH Upper Maxifuse Block 333
LH Lower Maxifuse Block..... 333
Circuit and Cavity Location 334
Power Door Locks..... 330
Power Door Locks Component Location View..... 338

CamScanner

Power Door Locks 339
Keyless Door Unlocking 339
Power Door Locks Trouble Tree Index 339
Power Mirrors 348
Power Mirrors Component Location View 349
Power Mirrors 350
Power Mirrors Trouble Tree Index 350
Power Outlet 356
Power Outlet Component Location View 357
Power Steering Control Module 358
Power Steering Control
Module Component Location View 360
Power Steering Control module 361
Chart 1 364
Chart 2 365
Chart 3 366
Chart 4 367
Power Windows 368
Power Windows Component Location View
Power Windows 370
..... 371
Power Windows Trouble Tree Index
Propulsion (High Voltage) 371
Propulsion (Low Voltage) 378
Radio 382
..... 392
Radio Component Location View...
Audio Systems 394
Circuit Operation 395
Radio Controls 395
Power Button (PWR) 395
Volume Control (VOL).. 395
Stereo Indicator 395
Tune Control 394
AM-FM Switching 396
Recall Button (RCL) 396
Bass and Treble Controls 396
..... 396

CamScanner

Fade Control 396
Balance 396
Station Preset Setting 395
Seek Buttons 397
Scan Button 397
Preset Scan 397
Setting Time Of Day 398
Tone Control 398
Cassette Tape Player 398
Tape Load 398
Eject Button 398
Fast Reverse Button (REV) 399
fast Forward Button (FWD) 399
Seek Button 399
Program Button (PROG) 399
Dolby 399
Compact Disc Player 399
Power Cycling 399
Priority Structure 400
CD Load 400
CD Eject 400
Play 400
Stop 400
Seek 400
Scan 400
Random 401
Fast Reverse 401
Fast Forward 401
NR Button 401
VF Display 401
Error (ERR) Detection 401
Mode Switching 401
Speakers 401
Theft Deterrent (Theftlock) 401
Diagnosis/Troubleshooting Hints 402
Radio Inoperative Hints 402
Radio Noise Hints 403
FM Stereo 403
AM Stereo 403

CamScanner

Antenna Systems 403
Testing Antenna Ground/Connections .....
Checking Lead-In Cable 403
Using a Test Antenna 404
Tape Player Will Not Work 404
Ihpes Sound Weak or Noisy 404
Tape Head and Capstan Cleaning 405
System Diagnosis 406
RearDefogger 416
Rear Defogger Component Location View .....
rear defogger Trouble tree index 418
Recharging 422
Recharging Component Location Views 428
Run/Lock Shifter Assembly 432
Run/Lock Shifter Assembly (RSA)
Component Location View 439
General Description 441
Power Windows..... 441
Mode Selection (Lock, OftyAccy, and Run) 441
Retained Accessory Power (RAP) 441
Radio Wakeup 441
Backlighting Dim Controls 441
Courtesylamp Control 441
RSA Keypad 442
Security Telltale/Disable 442
Changing the RSA Key Code 442
External Keypad 442
External Keypad Key Code 442
Changing the External Keypad Key Code 443
Coast DOUD Feature 443
Cabin Preconditioning 443
MVKM Button 444
Trip/Resct 444
Gage Button 444
Climate Control System Buttons 444
Climate Control Modes umions..... 444
Airflow Controls 445
Fan Controls 445
^fogging and De-icing 445
..... 445

CamScanner

Keyminder 445
Shifter 445
BTSI Control 446
Check Tire Pressure Reset 446
Run/Lock Shifter Assembly (RSA) Trouble Tree Index 446
DTC11 - Serial Data Loss From BTCM 462
DTC12 — Serial Data Loss From HTCM 464
DTC 13 — Serial Data Loss From PCM 466
DTC 23 — Tire Pressure — Low Or High 468
DTC 33 — Tire Reports Invalid Signal 470
Run/Lock Shifter Assembly Trimplate (RSA Trimplate) 471
Removal 471
Installation 474
Supplemental Inflatable Restraint System 478
SIR Component Location View 480
Telltales 482
Telltales Component Location Views 486
Security Telltale 488
Hazard Telltale 488
Wait Telltale 488
Parking Brake Telltale 488
Battery Life Telltale 488
Brake System Telltale 488
Check Tire Pressure Telltale 488
Reduced Performance Telltale 489
Service Now Telltale 489
Anti-lock Telltale 489
Temp Telltale 489
Seatbelt Telltale 489
Low Trac Telltale 489
Air Bag Telltale 490
Service Soon Telltale 490
Telltales Trouble Tree Index 490
Windshield Wiper 510
Windshield Wiper Component Location Views 512

CamScanner

Windshield Wiper/Washer System 514
General Description 514
WiperOperation 514
Pulse System 514
Washer Operation 514
Ground Control Of Wiper/Washer 515
Diagnosis 515
Troubleshooting Hints 515
System Diagnosis 524
Junction Blocks 526

HARNESS CONNECTOR FACES 526
Accessory AC and DC Power Module (APM) 528
Accessory Power Module (APM)..... 529
Backup Lamp 529
Battery Pack 530
Battery Pack Fan Inline — Female Connector 531
Battery Pack Fan Inline - Male Connector 531
Battery Pack Inline 532
Battery Pack Module (JI) 534
Battery Pack Module (J2) 536
Battery Recovery Switch (BRS) 536
Blower Motor Module 537
Brake Pressure Modulator 537
Brake Pressure Sensor-Downstream 538
Brake Solenoid..... 539
Brake Torque Controller Module (BTCM) - JI 541
Brake Torque Controller Module (BTCM) - J2 542
Brake Torque Controller Module (BTCM) - J3 543
Center High Mounted Stop Lamp (CHMSL) 543
Charger Receptacle 544
Charger Receptacle 544
Charger Receptacle Coolant Valve 545
Check Tire Pressure Reset Switch 545
Compressor Motor Cannon Connector 546
Coolant Level Sensor 546

CamScanner

Coolant Pump Buffer..... 546
Coolant Pump Temperature Sensor 547
Coolant Recovery Check Valve 547
Cruise Control Switch 548
Data Link Connector (DLC) 549
Defogger and Battery Pack Fan Inline - Female Connector 550
Defogger and Battery Pack Fan Inline — Male Connector 550
Discharge Temperature Sensor 551
Driver Door Jamb Switch 551
Drive Motor 552
Drive Motor Speed/Direction Sensor 552
Electric Brake Motor 553
External Keypad 554
Four Bar Lamp 555
Front Electromechanical Brake (EMB) 555
Front Marker Lamp 556
Front Park/Tum Lamp 556
Headlamp Switch 557
Heat Pump Ventilation System/Thermal Control Module (HTCM) 558
High Beam Headlamp 562
High Note Hom 563
High Pressure Sensor 563
Inside Rearview Mirror 564
Instrument Panel Cluster (IPC) 565
Left Hand Junction Block (LHJB) (JI) 567
Left Hand Junction Block (J2) 569
Left Hand Junction Block (LHJB) (J3) 571
Left Hand Junction Block (LHJB) (J4) 572
Left Hand Junction Block (LHJB) (J5) 573
Left Hand Junction Block (J6) 574
Left Hand Junction Block (J8) 576
Left Hand Junction Block (J9) 578
Left Hand Junction Block (LHJB) (J10) 580
Left Hand Junction Block (LHJB) (J12) 581

11200183

CamScanner

Left Hand Junction Block (LHJB) (J13) 582
Low Beam Headlamp 583
Low Note Hom 584
Low Pressure Sensor 584
Master Cylinder (MC) Pressure Sensor-Upstream 585
ModeValve Actuator 586
Motor Winding Temperature Sensor 586
OIL Pressure Switch 587
OIL Pump 587
Outside Air Valve Actuator 588
Outside Temperature Sensor 588
Park Brake Switch 589
Park Reverse Neutral Drive (PRND) Switch #1 589
Park Reverse Neutral Drive (PRND) Switch #2 590
Passenger Door Jamb Switch 591
Pedal Position Sensor 592
Power Door Lock Motor 593
Power Inverter Module (PIM) - JI 594
Power Inverter Module (J2) 596
Power Door Lock Switch 598
Power Mirror Motor 598
Power Mirror Switch 599
Power Outlet 599
Power Steering Control Module (PSCM) 600
Power Steering Hand Wheel Sensor ..., ... 601
Power Steering Pump Motor. 601
Power Window Motor 602
Primary Rear Defogger 602
Radio 603
Rear License Lamp 605
Rear Marker Lamp 605
Rear Tail/Stop Lamp .., ... 606
Rear Turn I^amp 606
Refrigerant Temperature 607
Reversing Valve 607

Sensor

CamScanner

Right Hand Junction BLock (JI)..... 608
Right Hand Junction BLock (RHJB) (J2)..... 610
Right Hand Junction BLock (RHJB) (J3)..... 612
Right Hand Junction BLock (RHJB) (J5)..... 613
Right Handjunction BLock (RHJB) (J6)..... 614
Right Hand Junction BLock (RHJB) (J8)..... 615
Right Hand Junction BLock (J9)..... 617
Right Hand Junction BLock (J12)..... 619
Right Hand Junction BLock (J13)..... 621
Right I/P — Body Inline #1 — Female Connector..... 622
Right I/P — Body Inline #1 — Male Connector..... 623
Right I/P — Body Inline #2 — Female Connector..... 624
Right I/P - Body Inline #2 - Male Connector..... 625
Run/Lock Shifter Assembly (RSA) 626
Secondary Rear Defogger..... 628
Sensing and Diagnostic Module (SDM) 628
SIR Driver Inflator Module — Coil Pigtail..... 629
SIR Driver Inflator Module/IP-Hamess Connector (Disable) 629
SIR Inflator Disable — Coil Pigtail 630
SIR Passenger Inflator Module Pigtail 630
SIR Passenger Inflator Module/IP - Hamess Connector (Disable)..... 631
Speakers - Front/Rear..... 632
Stoplamp Switch..... ;.... 633
Trunk Junction Block (JI)..... 634
Trunk Junction Block (J2)..... 635
Trunk Junction Block (J3)..... 636
Trunk Junction Block (J4)..... 637
Trunk Lamp 638
Trunk Lamp Switch 638
Tum/Hazard Switch..... 639
Washer Pump 640
Wheel Speed Sensors..... 641
Windshield Wiper/Washer (WSW) Inline - Female Connector..... 642
Windshield Wiper/Washer (WSW) Inline - Male Connector 642
Wiper Motor..... 643
Wiper/Washer Switch..... 643
INDEX..... **644**
EVI SERVICE MANUAL COMMENT FORM **655**

CamScanner

NOTES

CamScanner

GLOSSARY OF ACRONYMS

Acronym	Definition
ABS	Anti-Lock Braking System
AC	Alternating Cunent
AM	Amplitude Modulation
Amp	Ampere
APM	Accessory AC and DC Power Control Module. With PIM, makes up PEB
APS	Auxiliary Power Supply (part of APM)
BCA	Bias Control Assembly
BPM	Battery Pack Module
BRS	Battery Reserve Switch
BTCM	Brake/Torque Control Module
BTSI	Brake Transmission Shift Interlock (GM)
CD	Compact Disc
cfm	Cubic Feet per Minute
eg	Center of Gravity
CHMSL	Center High-Mount Stop Lamp
CMC	Compressor Motor Controller (part of APM)
CPA	Connector - Positive Assurance
CR	Charge Receptacle
CRFM	Condenser Radiator Fan Module (part of HPVS)
CTPS	Check Tire Pressure System
DC	Direct Current
DLC	Data Link Connector
DERM	Diagnostic and Energy Reserve Module (SIR control module)
DIA	Dealer Installed Accessory
DM	Drive Motor
DRL	Daytime Running Light
E/M	English/Metric
EHPS	Electro-Hydraulic Power Steering
EKP	External Keypad
EMB	Electro-Magnetic Brake (part of ABS)
EMI	Electromagnetic Interference
EPS	Electric Power Steering. Also see EHPS

CamScanner

GLOSSARY OF ACRONYMS *CONTINUED*

Acronym	Definition
EEPROM	*Electronically Erasable Programmable Read Only Memory*
ETS	*Electronic Traction Sj'stem*
EV	*Electric Vehicle*
EVO	*Electronic Variable Orifice*
FLIP	*Forward Lamp - Instrument Panel Hamess. Name of major EV low voltage wire harne*ss
FM	*Frequency Modulation*
FOD	*Front of Dash*
g	Gram
GFI	Ground Fault Interrupt
GVMR	Gross Vehicle Mass Rating
GVW	Gross Vehicle Weight
HPVM	*Heat Pump Ventilation Module*
HPVS	*Heat Pump* Ventilation System. Similar to HVAC on ICE vehicles
HTCM	*HPVS,Thermal Control* Module
HV	High Voltage
HVAC	Heating. Ventilating, and Air Conditioning (on ICE *vehicles.* For EM see HPVS).
HWS	Heated Windshield
HWS	Hand Wheel Sensor
Hz	Hertz (cycles *per second)*
IC	Integrated Circuits
ICE	Internal Combustion Engine
IGBT	Isolated Gate Bipolar Transistor
IO	Input(s)/Output(s)
IP	Instrument Pane!
ISRV	Inside Rear View (mirror)
JB	Junction Block
KAM	Keep Alive Memory
kg	Kilogram
km	Kilometer
kmfo	deters pe$_r$ ho$_w$

GLOSSARY OF ACRONYMS CONTINUED

Acronym	Definition
kPa	Kilo Pascals
kW	Kilowatt
kWh	Kilowatt-hour
LCD	Liquid Crystal Display
LED	Light Emitting Diode
LF	Left Front
LH	Left Hand
LHD	Left Hand Drive
LHJB	Left Hand Junction Block
LR	Left Rear
LVW	Loaded Vehicle Weight
m	Meter
MMC	Metal Matrix Composite (rear brake drum material)
MHz	Megahertz
mi	Mile(s)
MPH	Miles Per Hour
MSRP	Manufacturers Suggested Retail Price (includes dealer preparation)
MUX	Multiplex or Multiplexer
N	Newton(s)
NTF	No Trouble Found. Reported failure does not reoccur under test
OEM	Original Equipment Manufacturer
OSRV	Outside Rear View (mirror)
PCM	Propulsion Control Module
PDT	Portable Diagnostic Tool
PEB	Power Electronics Bay
PIM	Power Inverter Module
POA	Part of Assembly
PPS	Pedal Position Sensor
PRND	Park-Reverse-Neutral-Drive, as in PRND Selector
PROM	Programmable Read Only Memory
PSOC	Pack State of Charge
PTC	Positive Thermal Coefficient. Term for resistive heating module

CamScanner

GLOSSARY OF ACRONYMS CONTINUED

Acronym	Definition
EEPROM	Electronically Erasable Programmable Read Only Memory
ETS	Electronic Traction System
EV	Electric Vehicle
EVO	Electronic Variable Orifice
FLIP	Forward Lamp - Instrument Panel Harness. Dnnpj Harness Name of major EV low voltage wire harness
FM	Frequency Modulation
FOD	Front of Dash
g	Gram
GFI	Ground Fault Interrupt
GVMR	Gross Vehicle Mass Rating
GVW	Gross Vehicle Weight
HPVM	Heat Pump Ventilation Module
HPVS	Heat Pump Ventilation System. Similar to HVAC on ICE vehicles
HTCM	HPVS/Thermal Control Module
HV	High Voltage
HVAC	Heating, Ventilating, and Air Conditioning (on ICE vehicles. For EV, see HPVS)
HWS	Heated Windshield
HWS	Hand Wheel Sensor
Hz	Hertz (cycles per second)
IC	Integrated Circuits
ICE	Internal Combustion Engine
IGBT	Isolated Gate Bipolar Transistor
I/O	Input(s)/Output(s)
IP	Instrument Panel
ISRV	Inside Rear View (mirror)
JB	Junction Block
KAM	Keep Alive Memory
kg	Kilogram
km	Kilometer
km/h	Kilometers per hour

CamScanner

GLOSSARY OF ACRONYMS CONTINUED

Acronym	Definition
kPa	Kilo Pascals
kW	Kilowatt
kWh	Kilowatt-hour
LCD	Liquid Crystal Display
LED	Light Emitting Diode
LF	Left Front
LH	Left Hand
LHD	Left Hand Drive
LHJB	Left Hand Junction Block
LR	Left Rear
LVW	Loaded Vehicle Weight
m	Meter
MMC	Metal Matrix Composite (rear brake drum material)
MHz	Megahertz
mi	Mile(s)
MPH	Miles Per Hour
MSRP	Manufacturers Suggested Retail Price (includes dealer preparation)
MUX	Multiplex or Multiplexer
N	Newton(s)
NTF	No Trouble Found. Reported failure does not reoccur under test
OEM	Original Equipment Manufacturer
OSRV	Outside Rear View (mirror)
PCM	Propulsion Control Module
PDT	Portable Diagnostic Tool
PEB	Power Electronics Bay
PIM	Power Inverter Module
POA	Part of Assembly
PPS	Pedal Position Sensor
PRND	Park-Reverse-Neutral-Drive, as in PRND Selector
PROM	Programmable Read Only Memory
PSOC	Pack State of Charge
PTC	Positive Thermal Coefficient. Term for resistive heating module

CamScanner

GLOSSARY OF ACRONYMS CONTINUED

Acronym	Definition
PWM	Pulse Width Modulation, or Pulse Width Modulated
QDM	Quad Driver Module
RAM	Random Access Memory
RAP	Retained Accessory Power
RF	Right Front
RF	Radio Frequency
RH	Right Hand
RHJB	Right Hand Junction Block
RMS	Root-Mean-Squared
ROM	Read Only Memory
RP	Reduced Performance
RPM	Revolutions Per Minute
RR	Right Rear
RSA	Run/Lock Shifter Assembly
SAE	Society of Automotive Engineers
SDL	Serial Data Link
SDM	Sensor Diagnostic Module
SIR	Supplemental Inflatable Restraint (air bag) system
SLA	Short-Long Control Arm (suspension system)
soc	State of Charge (battery pack). Usually expressed as a percentage
SN	Service Now
SSPO	Saturn Service Parts Operation
ss	Service Soon
SWA	Steering Wheel Angle
TNF	Trouble - Not Found. Reported failure reoccurs but cause cannot be determined
TJB	Trunk Junction Block
TOD	Time of Day
TPA	Te ·
T/S	rm,nal Positive Assurance
IT	Turn Signal
	Telltale

CamScanner

GLOSSARY OF ACRONYMS CONTINUED

Acronym	Definition
UART	Universal Asynchronous Receiver - Transmitter (communications IC)
UH	Under Hood
ULEV	Ultra-Low Emissions Vehicle
USOC	User State Of Charge
V5B	5 Volt Supply
VAC	Voltage, Alternating Cunent
VF	Vacuum Fluorescence
VH	Vehicle Handling
VIN	Vehicle Identification Number
VTD	Vehicle Theft Deterrent
W	Watt
WSS	Wheel Speed Sensor (part of ABS)
WSW	Windshield Washer/Wiper
ZEV	Zero Emission Vehicle

Qd CamScanner

HIGH VOLTAGE DISABLE

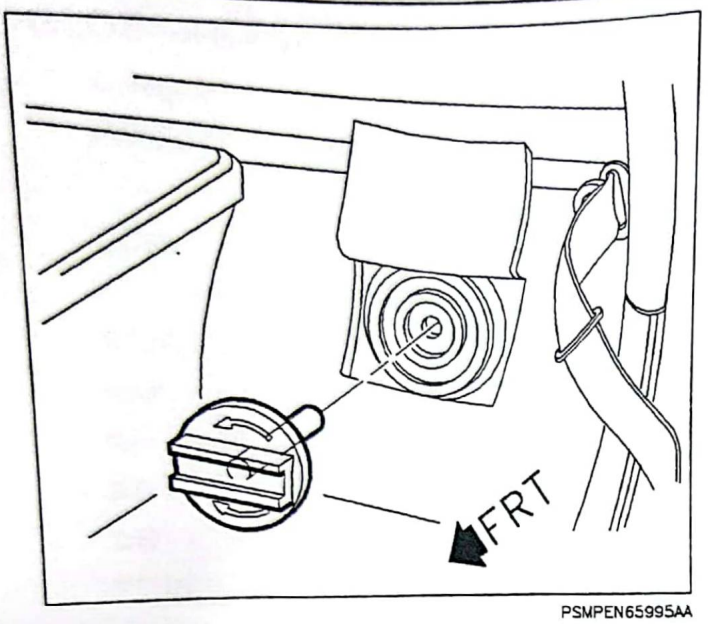

PSMPEN65995AA

REMOVAL

CAUTION: TO REDUCE THE RISK OF SEVERE SHOCKS AND BURNS, THE HIGH VOLTAGE SYSTEM SHOULD BE DISABLED ANY TIME SERVICE WORK IS BEING PERFORMED ON OR AROUND THE HIGH VOLTAGE SYSTEM. WHEN IN DOUBT, ALWAYS DISABLE THE HIGH VOLTAGE SYSTEM. THE 12 VOLT SYSTEM WILL STILL BE ACTIVE AFTER THE HIGH VOLTAGE SYSTEM HAS BEEN DISABLED.

1. **Place the vehicle in the "RUN" mode.**
2. Remove the manual disconnect knob.
   a. **Tilt the drivers seat forward.**
   b. **Raise the carpet flap, located on the battery tunnel behind the drivers seat.**
   c. Turn the manual disconnect knob counterclockwise and pull the manual disconnect knob straight out.

IMPORTANT: An audible click should be heard when turning the manual disconnect knob. This click indicates the automatic disconnect relays have opened.

3. Verify high voltage has been removed.
   a. Connect scan tool to the data link connector (DLC) and run the High Voltage special test. Battery pack module (BPM) diagnostic trouble codes (DTCs) 312, 280 and/or 275 should be present, which indicates BPM and auto disconnect recognized a high voltage disconnect.
   b. If test fails, refer to service manual "High Voltage Special Test Failed" in the "Battery and Charging System Service Manual/'
4. Remove engine compartment sight shield.

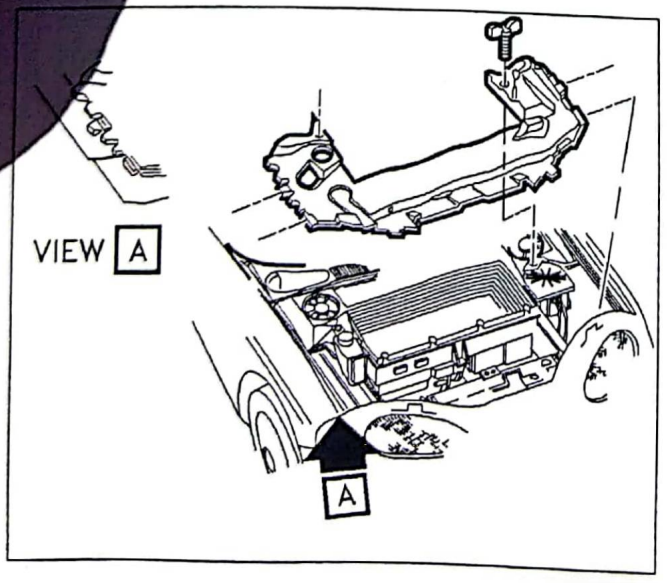

PSMGEP65869AC

CamScanner

CAUTION: TO REDUCE THE RISK OF SEVERE SHOCKS AND BURNS, ALWAYS ASSUME THE HIGH VOLTAGE IS PRESENT WHEN DISCONNECTING THE CHARGE RECEPTACLE TO PIM CONNECTOR. DO NOT ALLOW THE CONNECTOR BODY TO TOUCH THE PINS OF THE PIM WHEN REMOVING THE CONNECTOR.

5. Remove the charge receptacle to power inverter module (PIM) cannon connector using one hand.

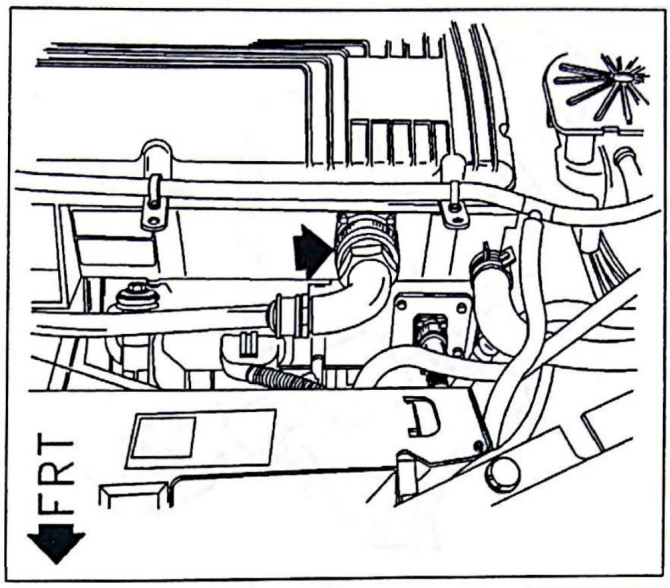

PSNPEN65997AA

6. Using a DVOM and only one hand, measure from pin A of the PIM to chassis ground and from pin C of the PIM to chassis ground and from pin A to C. All measurements should be less than 10 volts. Pin C and Pin A are the large high voltage pins on the PIM.
   a. If the voltage is less than 10 volts, high voltage system is disabled.
   b. If the voltage is greater than 10 volts, refer to the "High Voltage" section in the "Battery and Charging Service Manual."

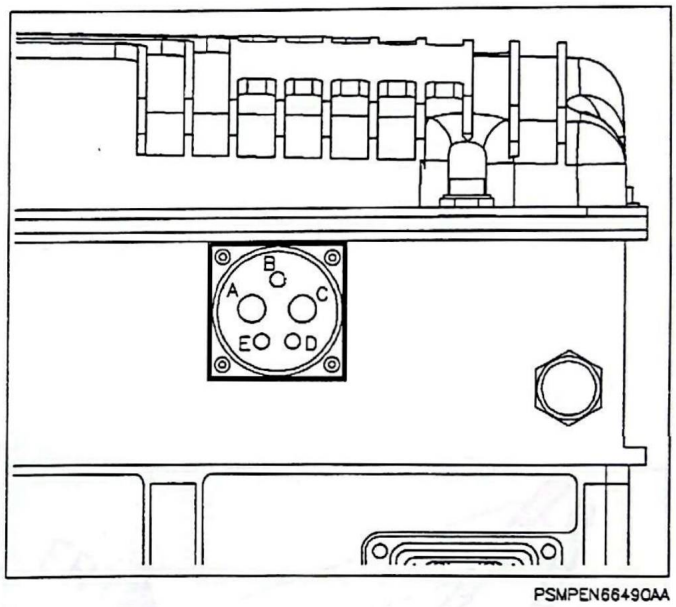

PSMPEN66490AA

HIGH VOLTAGE ENABLE

INSTALLATION

1- Install charge receptacle to PIM cannon connector.

2. Install engine compartment sight shield.

3. Tilt driver's seat forward.

4- Raise the carpet flap, located on the battery tunnel behind the driver's seat.

5. Install the manual disconnect knob by pushing the shaft straight into the hole and turning clockwise.

6. Clear all DTCs using the scan tool.

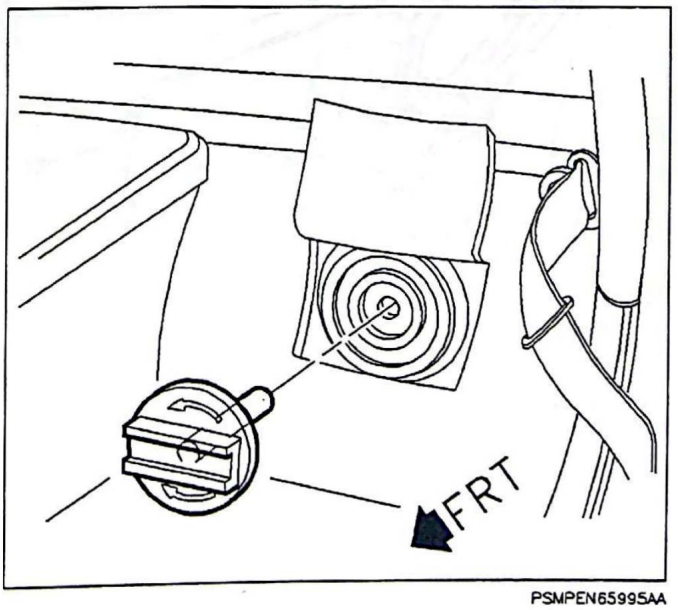

PSMPEN65995AA

CamScanner

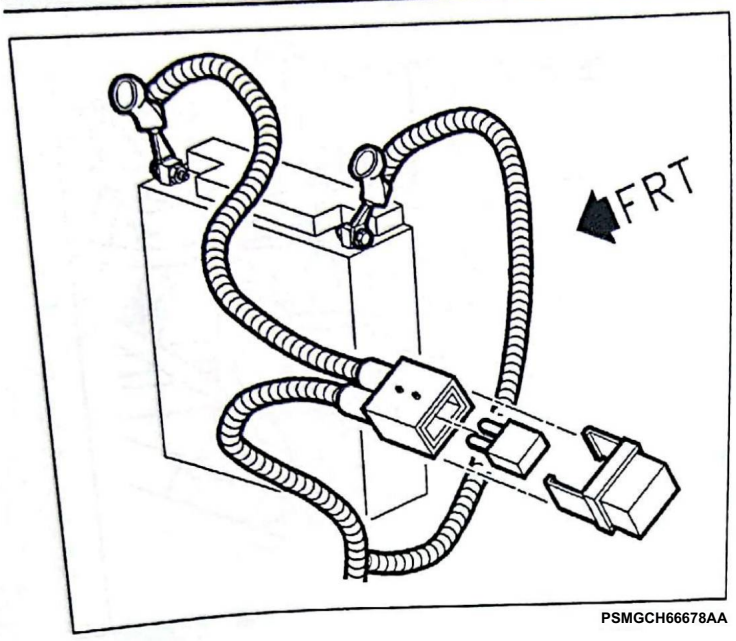

PSMGCH66678AA

12 VOLT SYSTEM DISABLE

CAUTION: DISABLE THE 12 VOLT ELECTRICAL SYSTEM TO HELP AVOID PERSONAL INJURY OR POSSIBLE DAMAGE.

IMPORTANT: The key pad must be in the LOCK mode for two minutes prior to performing the following step. Failure to do so could result in the loss of memory that retains the battery pack state of charge. If this occurs refer to "Battery Pack and Charging System" service manual for details.

1. Remove the cover on the 60 amp maxi fuse holder located in the negative auxiliary battery cable.
2. Remove the 60 amp maxi fuse.

12 VOLT SYSTEM ENABLE

1. Install 60 amp maxi fuse located on the negative auxiliary battery cable
2. Place cover on maxi fuse holder.

CamScanner

SIR SYSTEM

ON VEHICLE SERVICE

SERVICE PRECAUTIONS

CAUTION: WHEN PERFORMING SERVICE ON OR AROUND SIR COMPONENTS OR SIR WIRING FOLLOW THE PROCEDURE BELOW TO TEMPORARILY DISABLE THE SIR SYSTEM. FAILURE TO FOLLOW PROCEDURES COULD RESULT IN POSSIBLE AIR BAG DEPLOYMENT, PERSONAL INJURY OR OTHERWISE UNNEEDED SIR SYSTEM REPAIRS.

THE SENSING AND DIAGNOSTIC MODULE (SDM) CAN MAINTAIN SUFFICIENT VOLTAGE TO CAUSE A DEPLOYMENT FOR UP TO *10 MINUTES* AFTER THE KEY PAD HAS BEEN PLACED IN THE "LOCK" MODE, ALSO IF THE AUXILIARY BATTERY IS DISCONNECTED OR THE SIR "ENABLE/DISABLE" SWITCH IS PLACED IN THE DISABLE POSITION. MANY OF THE SERVICE PROCEDURES REQUIRE THE SIR "ENABLE/DISABLE" SWITCH TO BE PLACED IN THE "DISABLE" POSITION AND DISCONNECTION OF THE DEPLOYMENT LOOPS TO AVOID AN ACCIDENTAL DEPLOYMENT.

DISABLING THE SIR SYSTEM

1. Turn the steering wheel so that the vehicle's wheels are pointing straight ahead.
2. Place the key pad in the LOCK mode.
3. Place the SIR "ENABLE/DISABLE" switch in the right hand junction block in the DISABLE position.

IMPORTANT: With the SIR ENABLE/DISABLE switch in the DISABLE position and the key pad in the RUN mode, the AIR BAG telltale lamp will be "On." This is normal operation and does not indicate an SIR system malfunction.

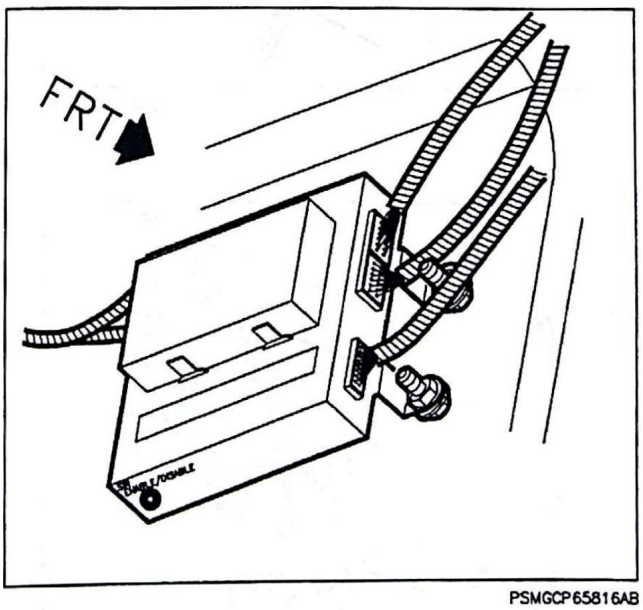

PSMGCP65816AB

CamScanner

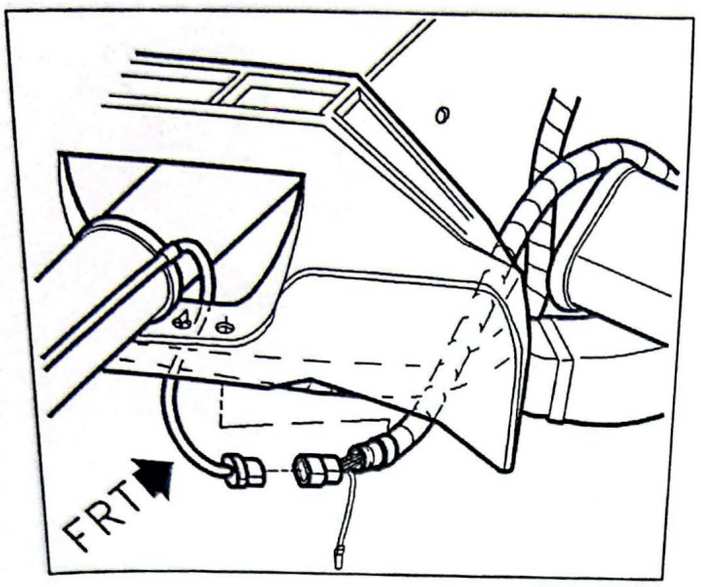

PSMELC65812M

4. Remove connector position assurance (CPA) device and disconnect yellow two-way connector located near the base of the steering column.

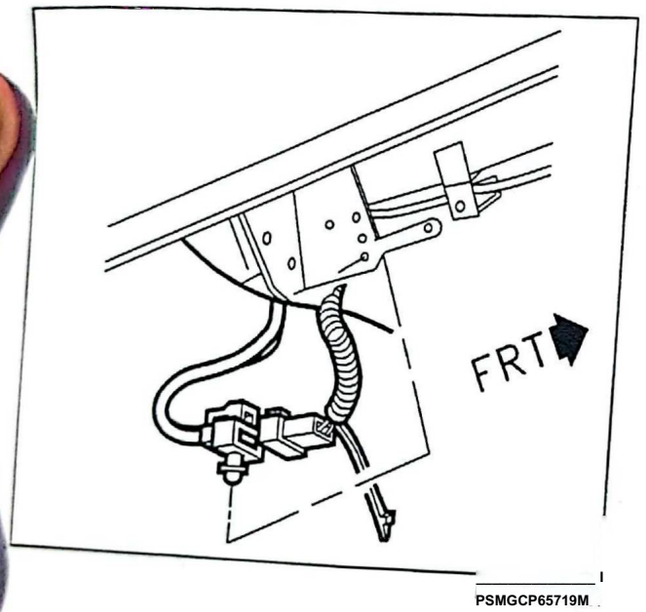

PSMGCP65719M

5. Remove connector position assurance (CPA) device and disconnect yellow two-way connector located on passenger inflator module *pigtail* under RH side of *I/P.*

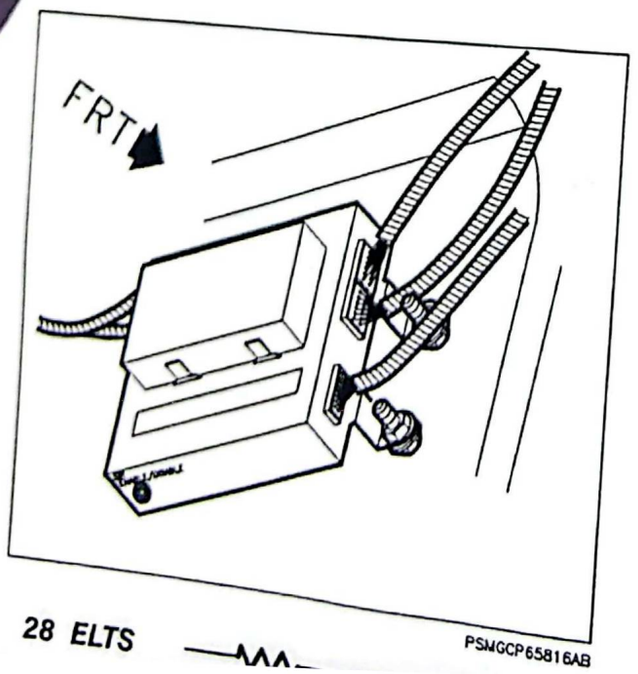

PSMGCP65816AB

ENABLING THE SIR SYSTEM

1 • Place key pad in the **LOCK** mode.

2. Connect yellow two-way SIR connector at the base of steering column and install connector position assurance (CPA) device to connector.

3. Connect yellow two-way passenger inflator modal PJgtail and install connector position assurance (CPA) to connector.

4. Place SIR **ENABLE/DISABLE** switch to the **ENABLE** position, located in the RH junction block.

5. Place key pad in the "RUN" mode and verify that the AIR BAG telltale lamp flashes seven times as the key pad is placed in the "RUN" *mode and then goes Off- If* lamp does not operate as described above Perform the "SIR Diagnostic *System Check*" in this manual.

CamScanner

LIFTING, JACKING, AND SUPPORT POINTS

CAUTION: TO HELP AVOID PERSONAL INJURY WHEN A VEHICLE IS ON A HOIST, PROVIDE ADDITIONAL SUPPORT FOR THE VEHICLE. THIS WILL REDUCE THE POSSIBILITY OF THE VEHICLE FALLING OFF THE HOIST.

CAUTION: TO HELP AVOID PERSONAL INJURY, ALWAYS USE JACK STANDS WHEN WORKING ON OR UNDER ANT VEHICLE THAT IS SUPPORTED ONLY BY A FLOOR JACK OR A HOIST.

NOTICE: When lifting with a frame contact hoist, and battery pack removal is not necessary, lift the vehicle on the body side frame-lower pinch weld flanges at specific lift locations. (Location views on next page).

NOTICE: Because of the uniqueness of the design of the EVl and its ground clearance, it is necessary to follow the hoisting directions very carefully. With an inground two post front and rear hoist, it may be necessary to use either low profile arms or ramps as needed in the front lift pad area to keep the fascia from being damaged when approaching or leaving the hoisting area. Ramp size needed:

1. 1050 mm in length (41-3/8 in.)
2. 155 mm in height (6-7/64 in.)
3. 230 mm in width (9-1/16 in.)

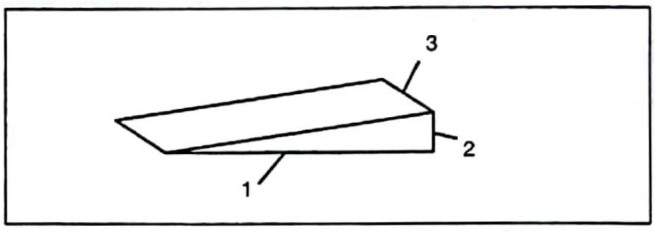

NOTICE: When lifting with a suspension contact hoist, position the front hoist lift pads under the lower control arms. Lift from under the rear tires for rear suspension. (Refer to “Hoisting/Lifting for a Two Post In Ground Hoist Front and Rear” in this section for more information and illustrations.)

ft
^When battery pack : removal is required, the use of two rear lift pad adaptors must be used. These lift pad adaptors are obtainable from:

General Motors Dealer Equipment

Telephone: 1-800-GM-TOOLS

CamScanner

GENERAL INFORMATION

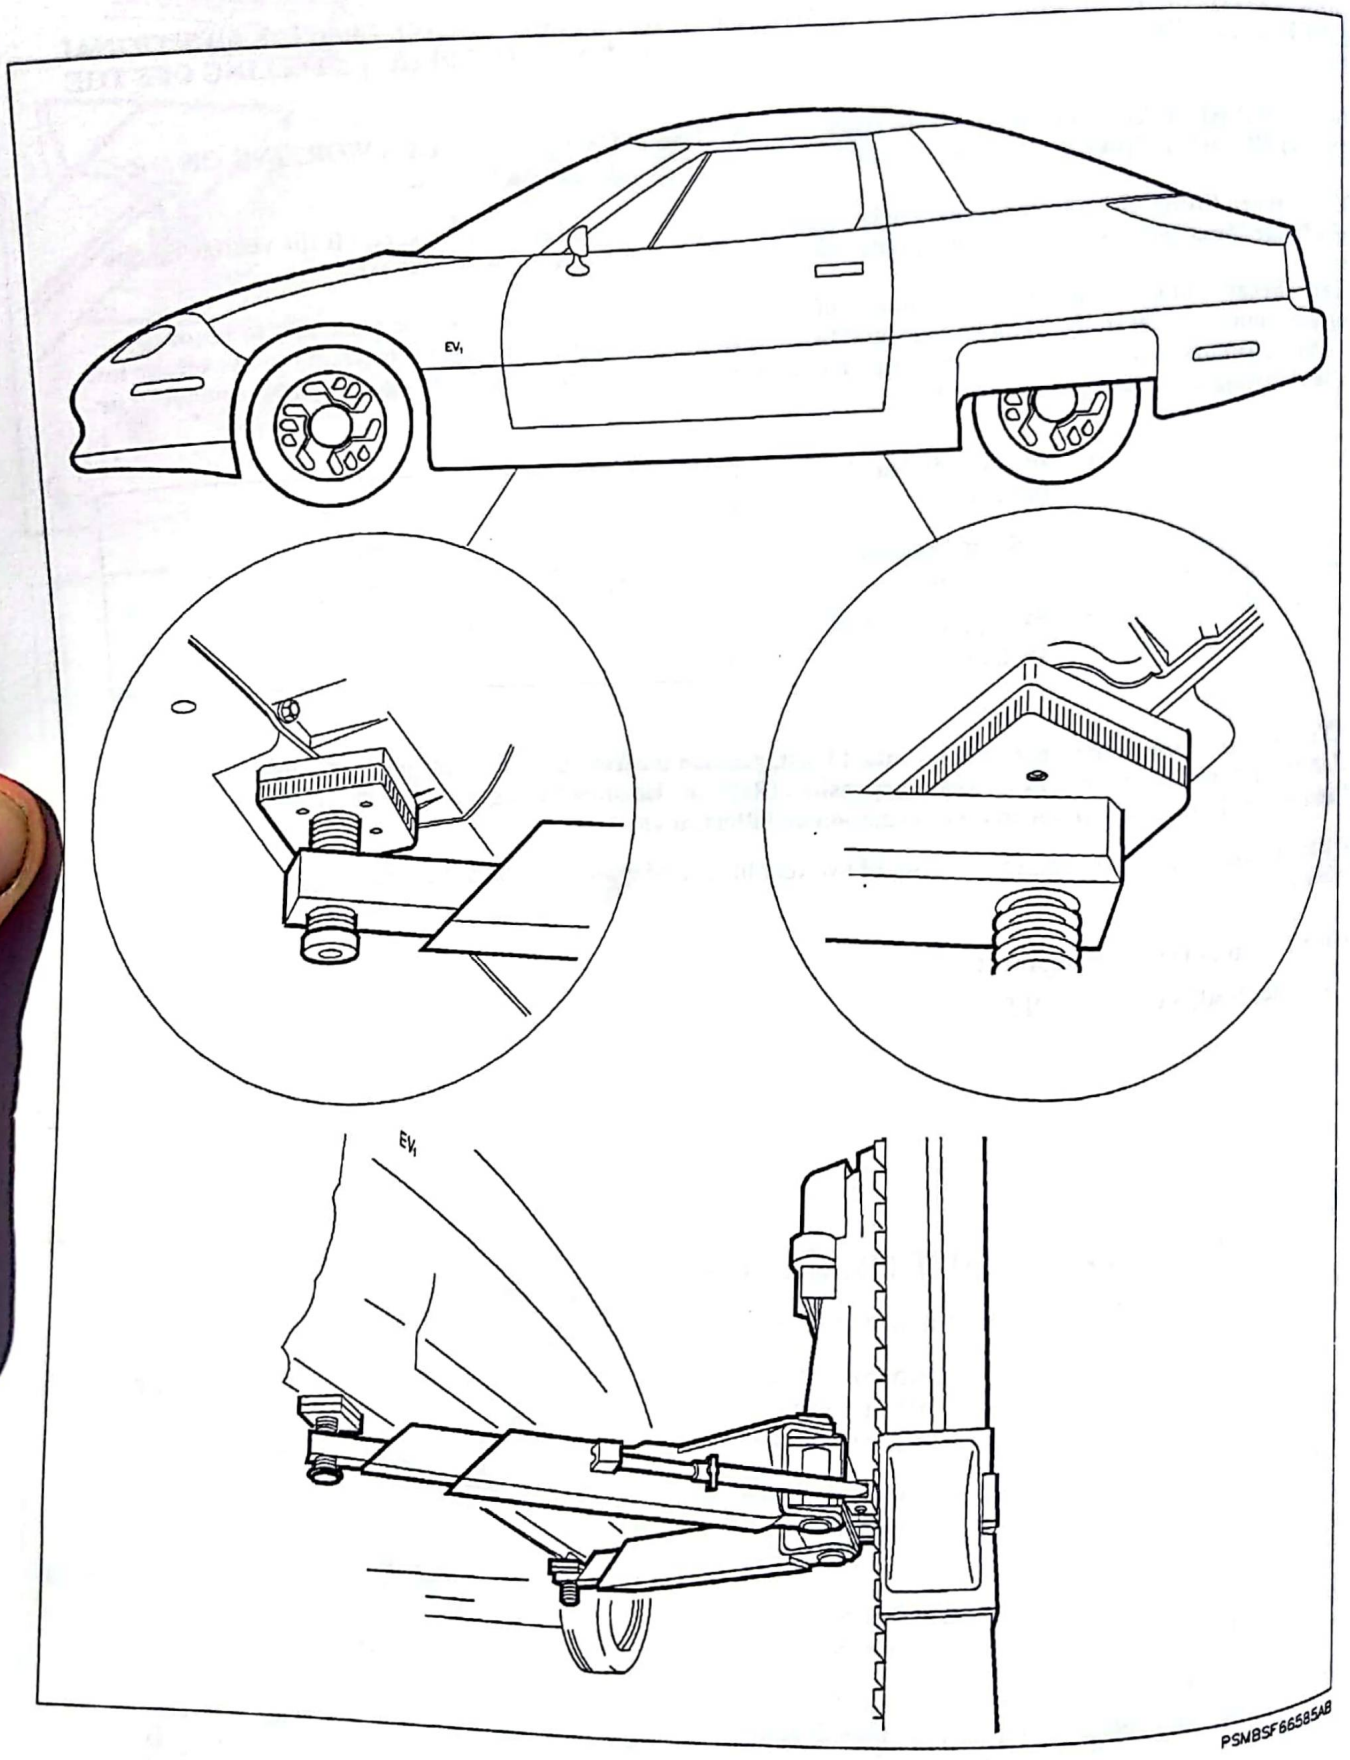

HOISTING/LIFTING FOR A 2 POST ABOVE GROUND HOIST - (SIDE CAR)

CAUTION: TO HELP AVOID PERSONAL INJURY, ALWAYS USE JACK STANDS WHEN WORKING ON OR UNDER ANY VEHICLE THAT IS LIFTED ONLY BY A FLOOR JACK OR A HOIST.

CAUTION: BEFORE ENTERING THE AREA UNDER A RAISED VEHICLE ALWAYS CHECK TO MAKE SURE HOIST SAFETY MECHANISMS ARE ENGAGED OR LIFT SAFETY STANDS ARE IN PLACE.

1. Position the vehicle in the hoisting area centering the vehicle between the towers. To center the vehicle to the hoist in its fore aft position, use the door lock switch on the door trim pad as a reference.

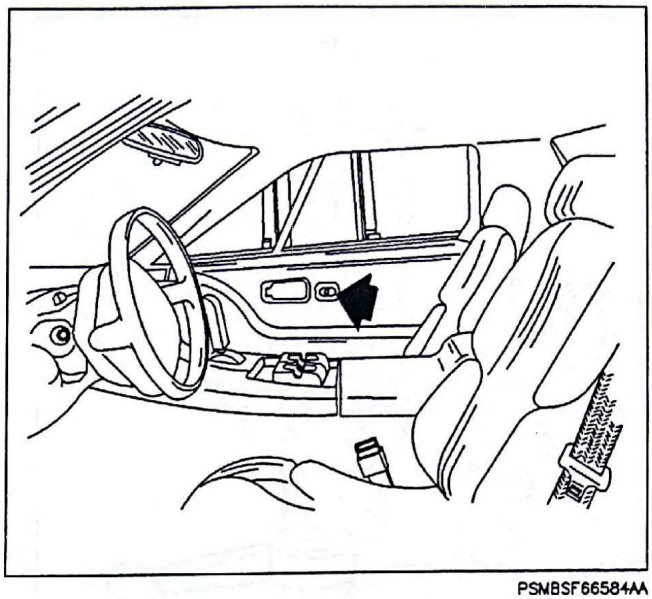

PSMBSF66584AA

2. Move lift arms under the vehicle and adjust the pads to the bottom of the pinch weld flange at specified lift locations.

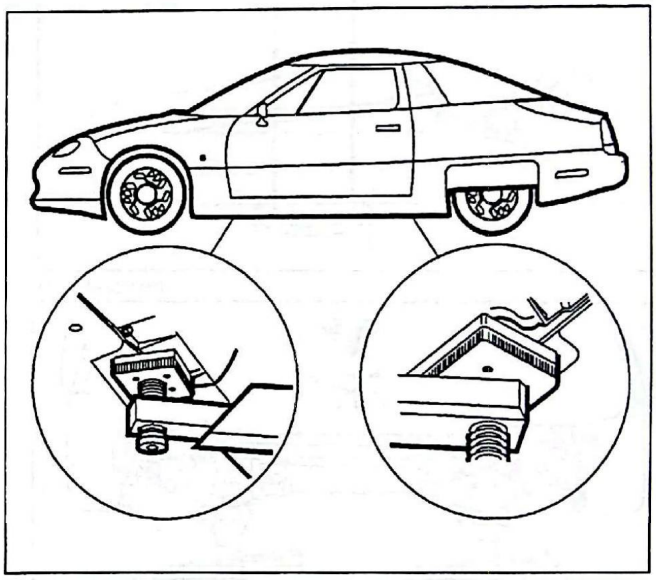

PSNBSF66859AA

3. Raise the vehicle to the required working height

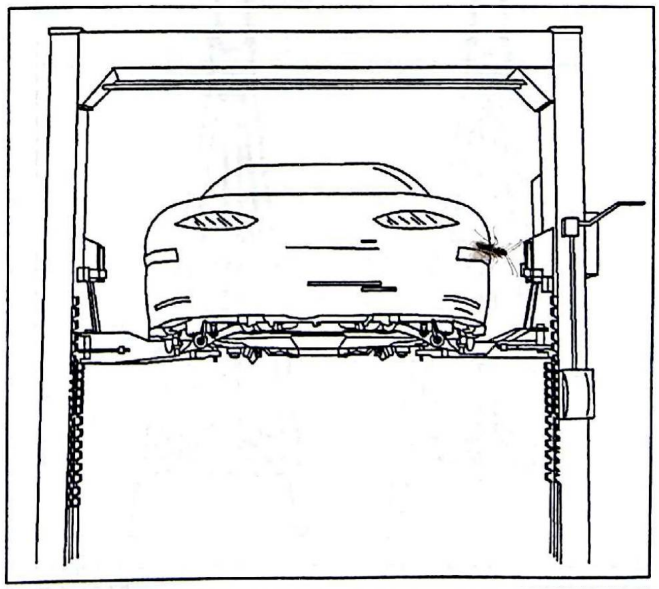

PSMBSF66534M

CamScanner

4. *Position* safety stands in place.

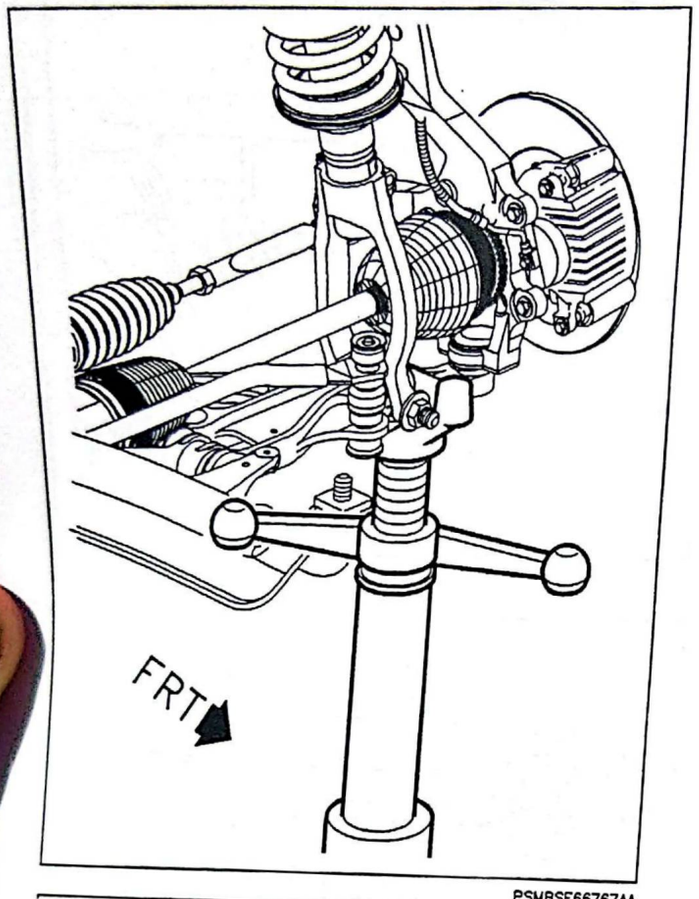

PSMBSF66767AA

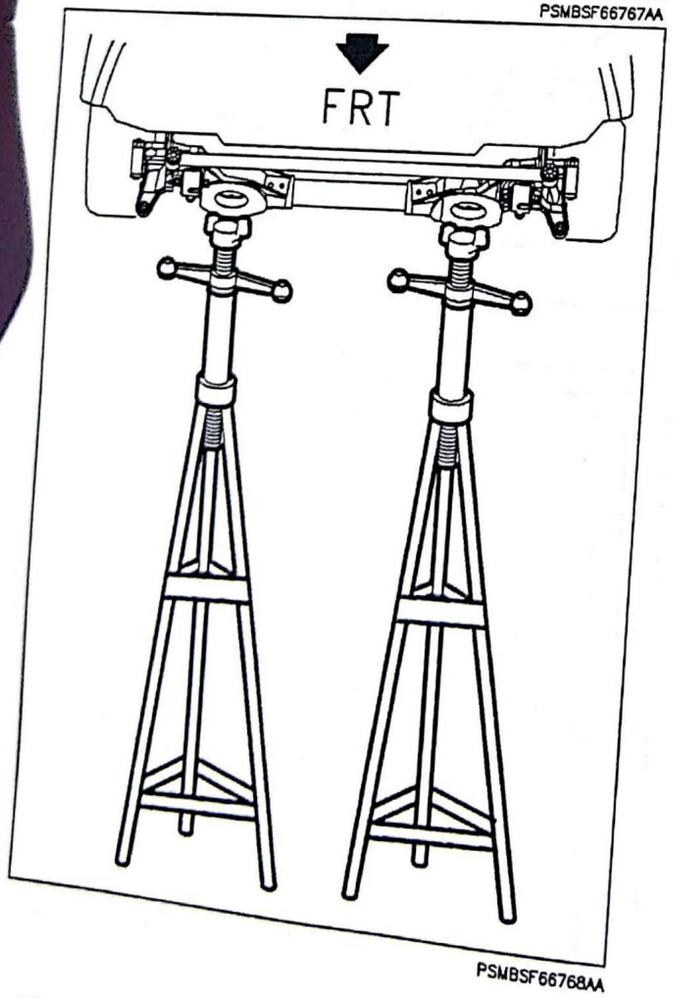

PSMBSF66768AA

HOISTING/LIFTING FOR A 2 POST INGROUND HOIST - (FRONT AND REAR)

CAUTION: BEFORE ENTERING THE AREA UNDER A RAISED VEHICLE ALWAYS CHECK TO MAKE SURE HOIST SAFETY MECHANISMS ARE ENGAGED OR LIFT SAFETY STANDS ARE IN PLACE.

NOTICE: When using an in ground hoist it is necessary to pay close attention to the ground clearance at the front end of the vehicle. Be careful not to damage any of the front end components.

NOTICE: The aid of a ramp for some models of lifts is helpful for obtaining clearance under the front end of the vehicle. Proper clearance will keep the fascia and underbody components from being damaged when approaching or leaving the hoisting area. Ramp size needed:

1. 1050 mm in length (41-3/8 in.)
2. *155* mm in width (6-7/64 in.)
3. 230 mm in height (9-1/16 in.)

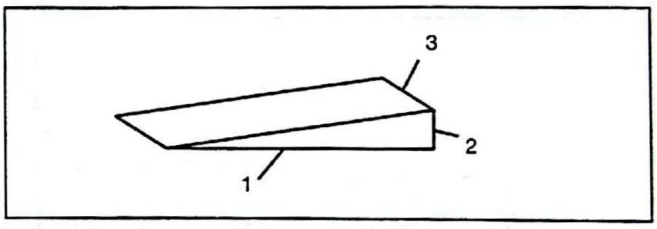

NOTICE: With the use of ramps, always have a partner who will be outside and in front of the vehicle guide and watch to ensure that proper alignment is achieved to the ramps and hoisting area. Be careful that you don't drive over or slip off the edge of the ramps. Failure to do so could result in damage to under body and mechanical components.

NOTICE: The first vehicle to be lifted using the ramp method may take several attempts to get properly aligned to the hoist pads under the front of the body structure. Marking the floor with tape, paint or permanent marker after the ramp position is determined **will** aid in the positioning ramps for future EVl vehicle lifting.

1. Drive the vehicle up to the hoisting area, centering the vehicle to the hoist in its side to side position.

2- Drive vehicle forward until the front of the rear tires contact the rear edge of the rear tire lift tray.

3* Flace the ramps on the floor. In front of the vehicle, center each ramp in front of the front tires.

4. Slide ramps rearward until they touch the front of the front tires, or align ramps to markings on floor made from previous lifting as described in the above "NOTICE."

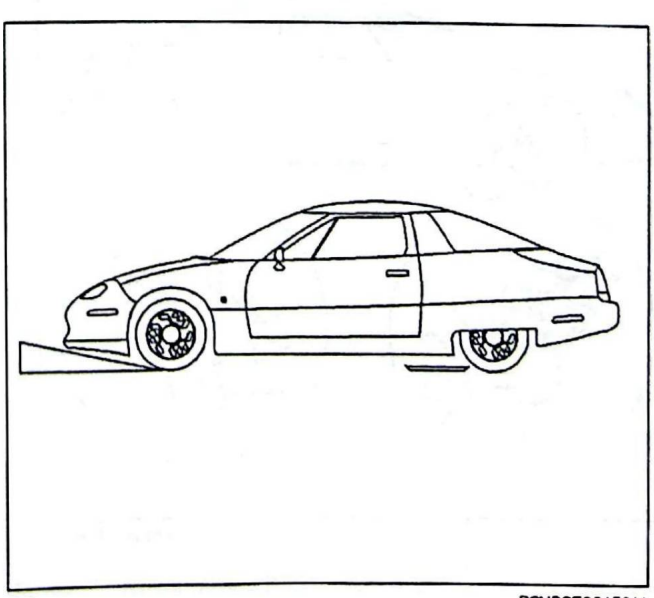

PSMBSF66450AA

CamScanner

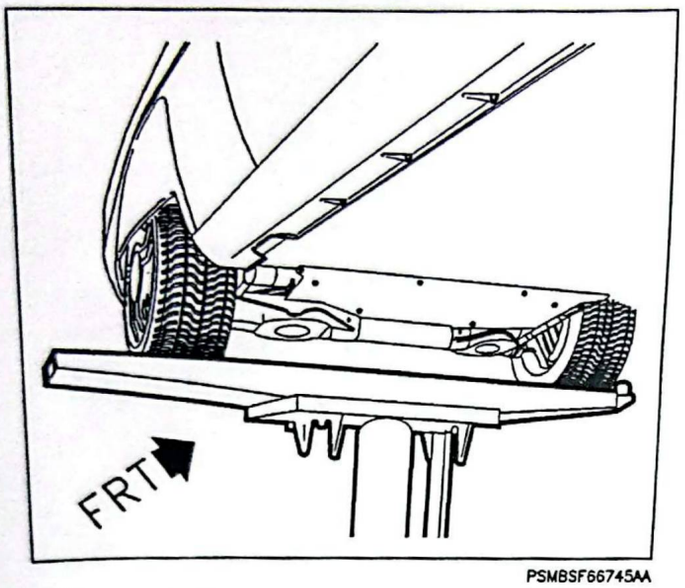

PSMBSF66745AA

5. Drive forward and up the ramps until the rear tires are centered in the rear tire tray portion of the hoist

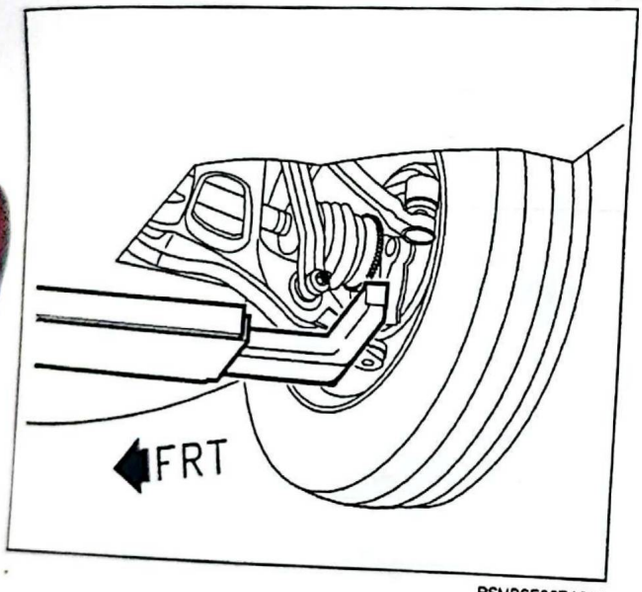

PSMBSF66746AA

6. Put the front lift pads under the vehicle's front lower control arms at the portion between the ball joint and the yoke.

7. Lift the vehicle to proper working height and position safety stands. (Refer to "Lifting, Jacking, and Support Points" and "Hoisting Lifting with a Floor Jack" sections in this section.)

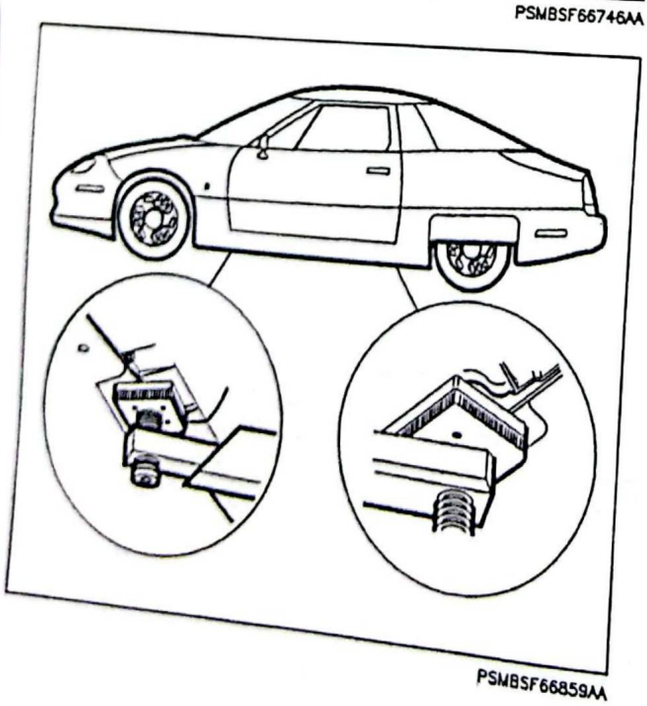

PSMBSF66859AA

LIFTING WITH A FLOOR JACK

NOTICE: Do not put floor jack under any P⁰^ the vehicle other than locations shown or dam[a]§ structure may occur.

1. Locate the rocker panel pinch weld flang areas, place floor jack in position, seat the place, and chock the wheels. (Refer to repor Information" in the "Lifting, Jacking, Points" section in this section.)

CAUTION: TO HELP AVOID PERSONAL INJURY, ALWAYS USE JACK STANDS WHEN WORKING ON OR UNDER ANY VEHICLE THAT IS LIFTED BY A FLOOR JACK OR A HOIST.

2. Lift vehicle with floor jack.

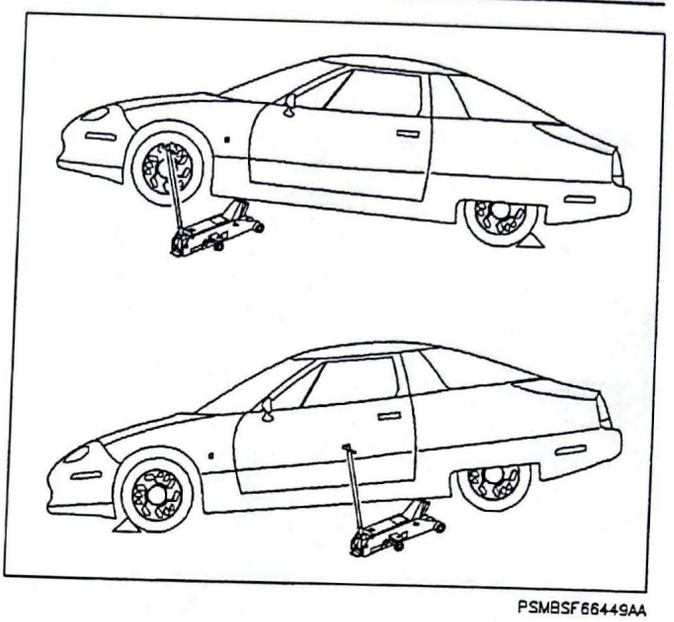

PSMBSF6644SAA

CamScanner

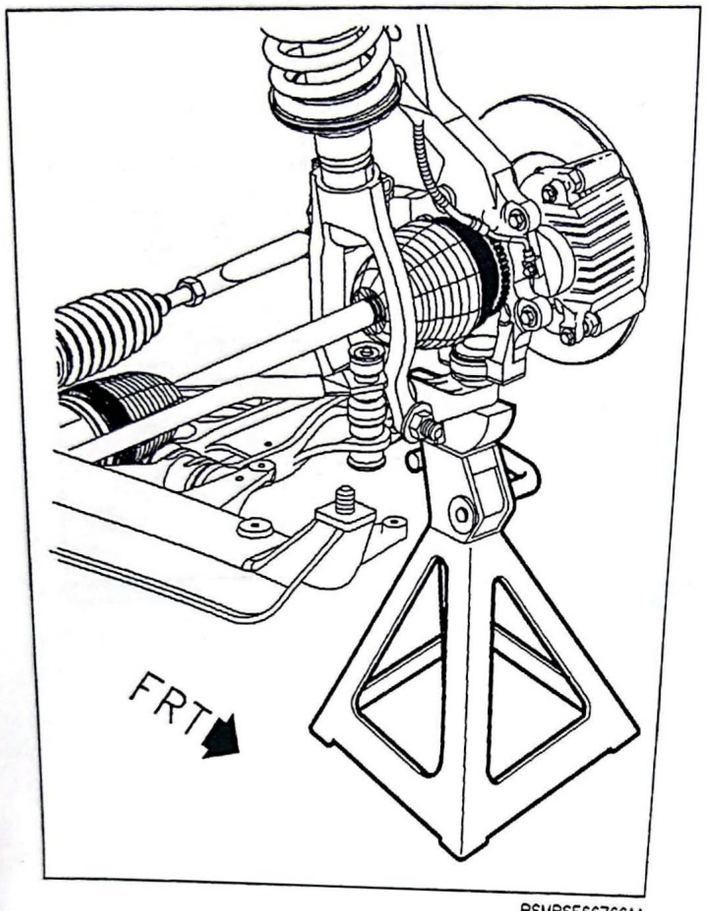

PSMBSF66766AA

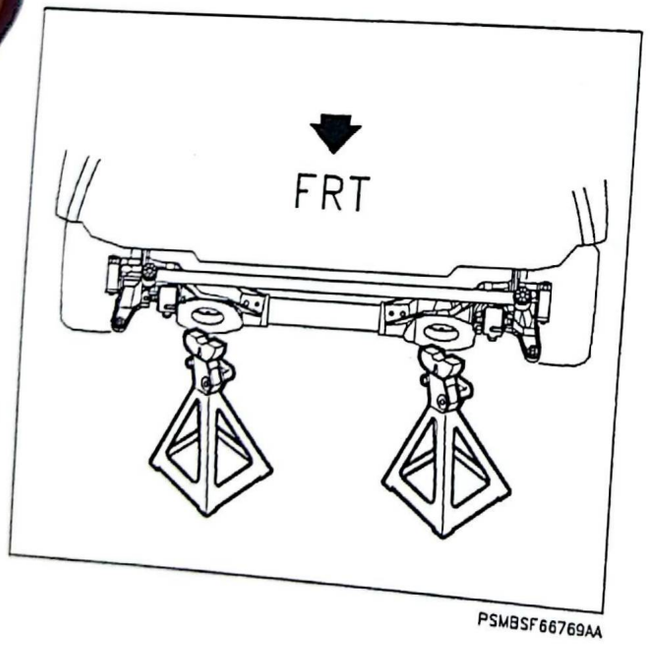

PSMBSF66769AA

3. Once the vehicle *is at the* required working E • 7 ei^1
   install safety stands.

CamScanner

UNDERBODY FRONT AIR DEFLECTOR

REMOVAL

1. Raise vehicle on hoist. (Refer to "Lifting, Jacking, and Support Points'' section in this manual.)
2. Remove bolts retaining underbody front air deflector to underbody center air deflectors.
3. Remove bolts retaining underbody front air deflector to front wheelhouse panel liners.

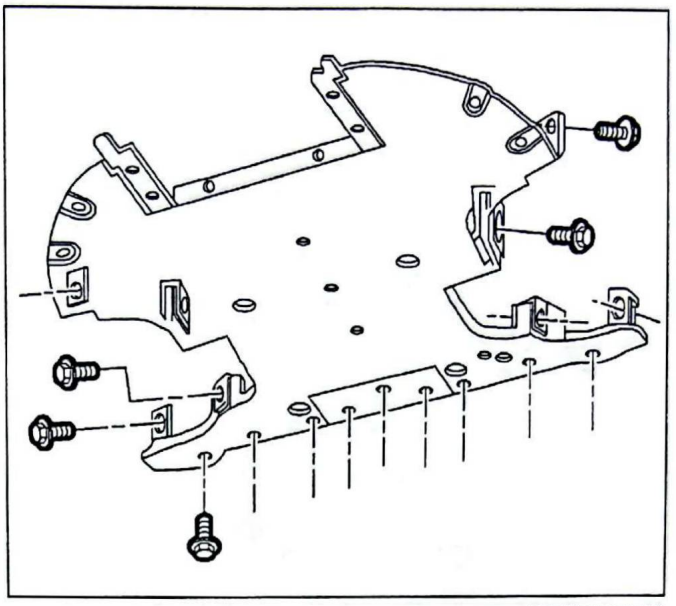

PSMGEP67582AA

4. Remove bolts retaining underbody front air deflector to front bumper fascia assembly.
5. Remove bolts retaining underbody front air deflector to condenser radiator fan module (CRFM) bracket.

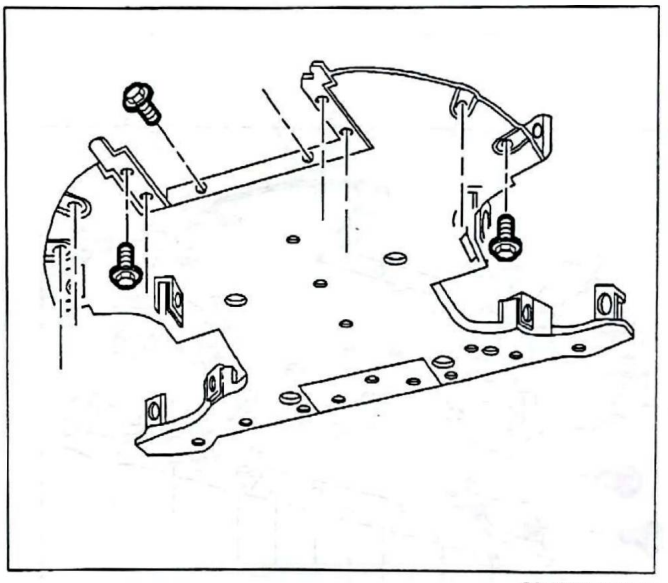

PSMGEP67583AA

6. Remove bolts retaining underbody front air deflector to side baffles.
7. Remove bolts retaining underbody front air deflector to drivetrain and front suspension crossmember assembly.
8. Lower underbody front air deflector and disengage tabs from front bumper fascia assembly.

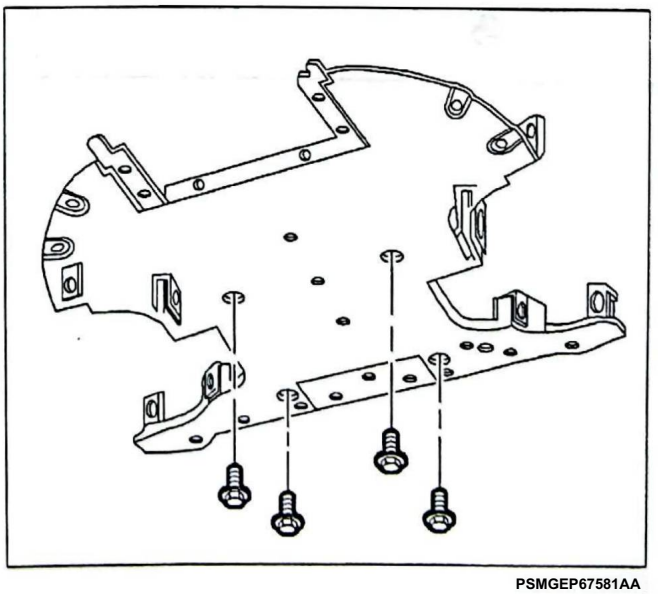

PSMGEP67581AA

CamScanner

INSTALLATION

IMPORTANT: If bolt threads or "J" nuts threads are damaged during removal or installation, remove bolt and fastener, inspect, and replace if necessary.

1. Raise front edge of air deflector and engage tabs into retaining slots on front bumper fascia assembly.
2. Raise and support underbody front air deflector to underside of vehicle.

IMPORTANT: Flange on air deflector must be located forward of Condenser Radiator Fan Module (CRFM) bracket.

3. Loosely install bolt retaining air deflector to CRFM bracket.
4. Loosely install bolts retaining underbody front air deflector to front mounting locations of drivetrain and front suspension crossmember assembly.
5. Loosely install bolts retaining underbody front air deflector to rear mounting locations of drivetrain and front suspension crossmember assembly.
6. Install and tighten bolts retaining underbody front air deflector to underbody center air deflectors. Torque as specified.

Torque: ***6 N'm (53*** **in-lbs)**

IMPORTANT: If cradle bolt begins to cross thread during installation, stop immediately, remove bolt, then run thread tap (M6.0 mm x 1.0) into insert to repair damaged threads.

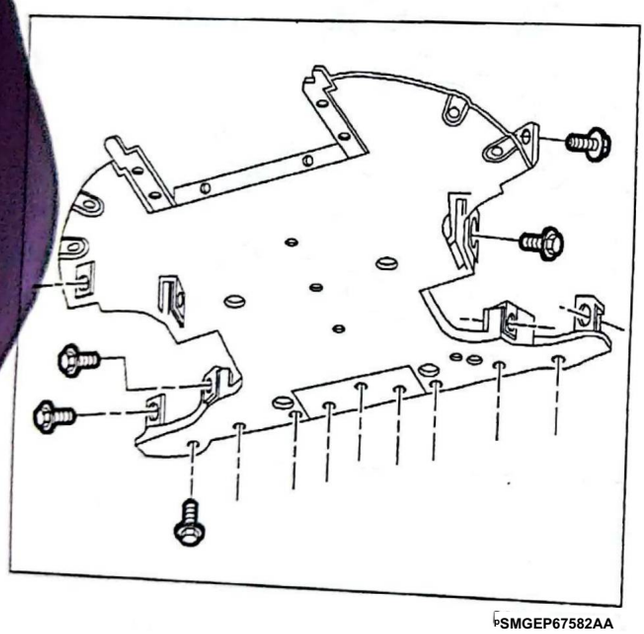

SMGEP67582AA

CamScanner

7. Tighten bolls retaining underbody front air deflector to front mounting locations of drivetrain and front suspension crossmember assembly. Torque as specified.

Torque: 6 N°m (53 in-lbs)

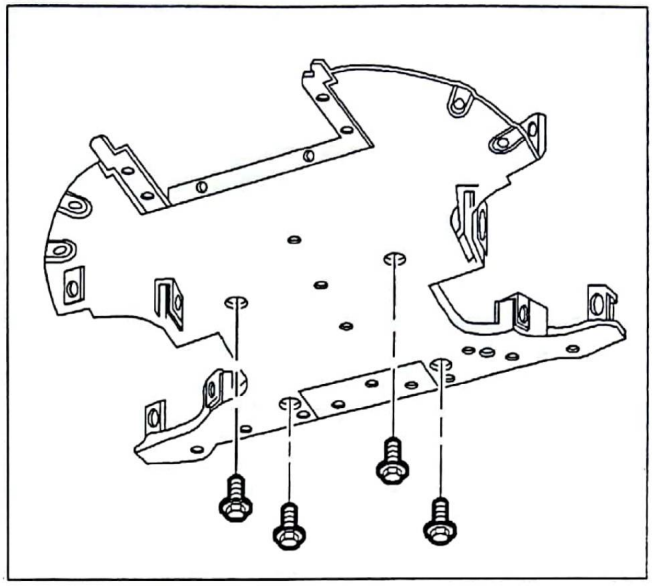

PSMGEP67581AA

IMPORTANT: At CRFM attachment, position air deflector flange so that it rests up against the bottom of the CRFM lower support.

8. Install and tighten bolt retaining underbody front air deflector to CRFM bracket. Torque as specified.

Torque: 6 N*m (53 in-lbs)

9. Tighten remaining bolt retaining air deflector to CRFM bracket. Ensure underbody front air deflector is up against bottom of CRFM lower support. Torque as specified.

Torque: 6 N*m (53 in-lbs)

10. Install and tighten bolts retaining underbody front air deflector to CRFM to fascia close-out side baffles. Torque as specified.

Torque: 6 N*m (53 in-lbs)

11. Install and tighten bolts retaining underbody front air deflector to front bumper fascia assembly. Torque as specified.

Torque: 6 N»m (53 in-lbs)

12. Install and tighten bolts retaining underbody front air deflector to front wheelhouse panel liner on one side of the vehicle. Front tires may need to be rotated to access mounting locations. Torque as specified.

Torque: 6 N-m (53 in-lbs)

13- Install and tighten bolts retaining underbody front air deflector to front wheelhouse panel liner on opposite side of the vehicle. Front tires may need to be rotated to access mounting locations. Torque as specifie !d.

Torque: 6 N-m (53 in-lbs)

I 14. Lower vehicle and turn front wheels to face in a straight ahead position.

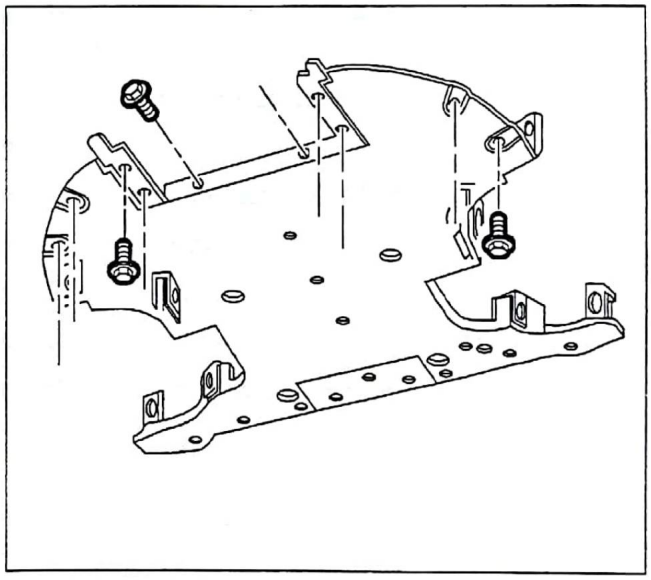

PSMGEP67583AA

CamScanner

NOTES

CamScanner

HANDLING ELECTROSTATIC DISCHARGE (ESD) ^SENSITIVE PARTS

NOTICE: When handling electronic parts identified as ESD sensitive, you should observe the following guidelines. These guidelines reduce possible electrostatic charge build-up from your body and from electronic parts in the Saturn retail facility.

NOTICE

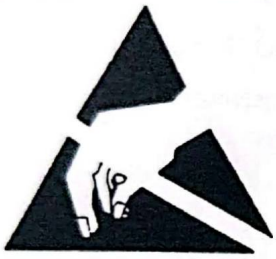

CONTENTS SENSITIVE TO STATIC ELECTRICITY

Do not open protective package until ready to install the part. When installing always touch the package to a ground before opening.

Avoid touching electrical terminals of the part when using a screwdriver or similar tool. Never jump, ground a circuit, or use test equipment probes on any component or connector unless specified to do so by the service manual when diagnosing an electronic system.

Remember solid-state components also can be damaged when bumped, dropped or laid on any metal work benches or components that operate electrically, such as a radio, TV or oscilloscope.

4. Always touch a known good ground before handling the part. This should be repeated while handling the part and more frequently after sliding across a seat, sitting down from a standing position or walking a distance.

5. When working with the instrument panel cluster and related internal components, the grounding wrist strap of the anti-static mat (SA9502Z) must be worn and the mat should be properly grounded.

Not all parts that can be damaged by an electrostatic discharge have an ESD label. Components that can be damaged by an electrostatic discharge are:

- Instrument panel cluster (IPC)
- Brake torque control module (BTCM)
- Heat pump ventilation system/thermal control module (HTCM)
- Propulsion control module (PCM)
- Radio
- Run/Lock shifter assembly (RSA)
- Battery pack module (BPM)
- Sensing and Diagnostic Module (SDM)
- Power steering control module (PSCM)

6. Remember solid-state components also can be damaged when bumped, dropped or laid on any metal work benches or components that operate electrically, such as a radio, TV or oscilloscope.

7. Always touch a known good ground before handling the part. This should be repeated while handling the part and more frequently after sliding across a seat, sitting down from a standing position or walking a distance.

CamScanner

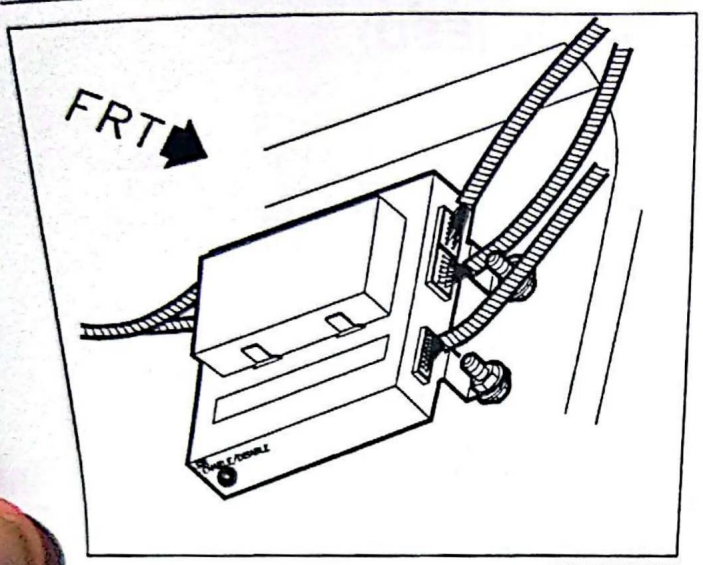

PSMGCP65816AB

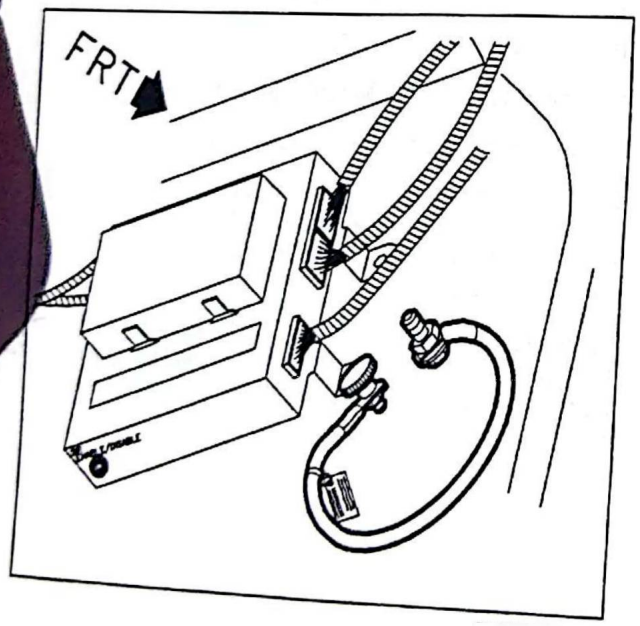

PSMGCP67427M

JUNCTION BLOCK GROUND STRAP INSTALLATION / REMOVAL PROCEDURE

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap Installation" in this manual.)

INSTALLATION

1. Place key pad in LOCK mode.
2. Remove the four fasteners that retain the RH or LH junction block.
3. Install junction block ground strap/straps to junction block using the captured fasteners as illustrated and tighten to 10 N*m +/- 2 N*m (89 in-lbs +/- 18 in-lbs).
4. Install the loose end of the junction block ground strap to the junction block mounting stud on front dash, using the existing nut.

REMOVAL

1. Remove the junction block ground strap from the junction block, RH and LH sides if necessary.
2. Mount the junction block to the front of dash and torque to 10 N*m +/- 2 N>m (89 in-lbs +/- 18 in-lbs).

CamScanner

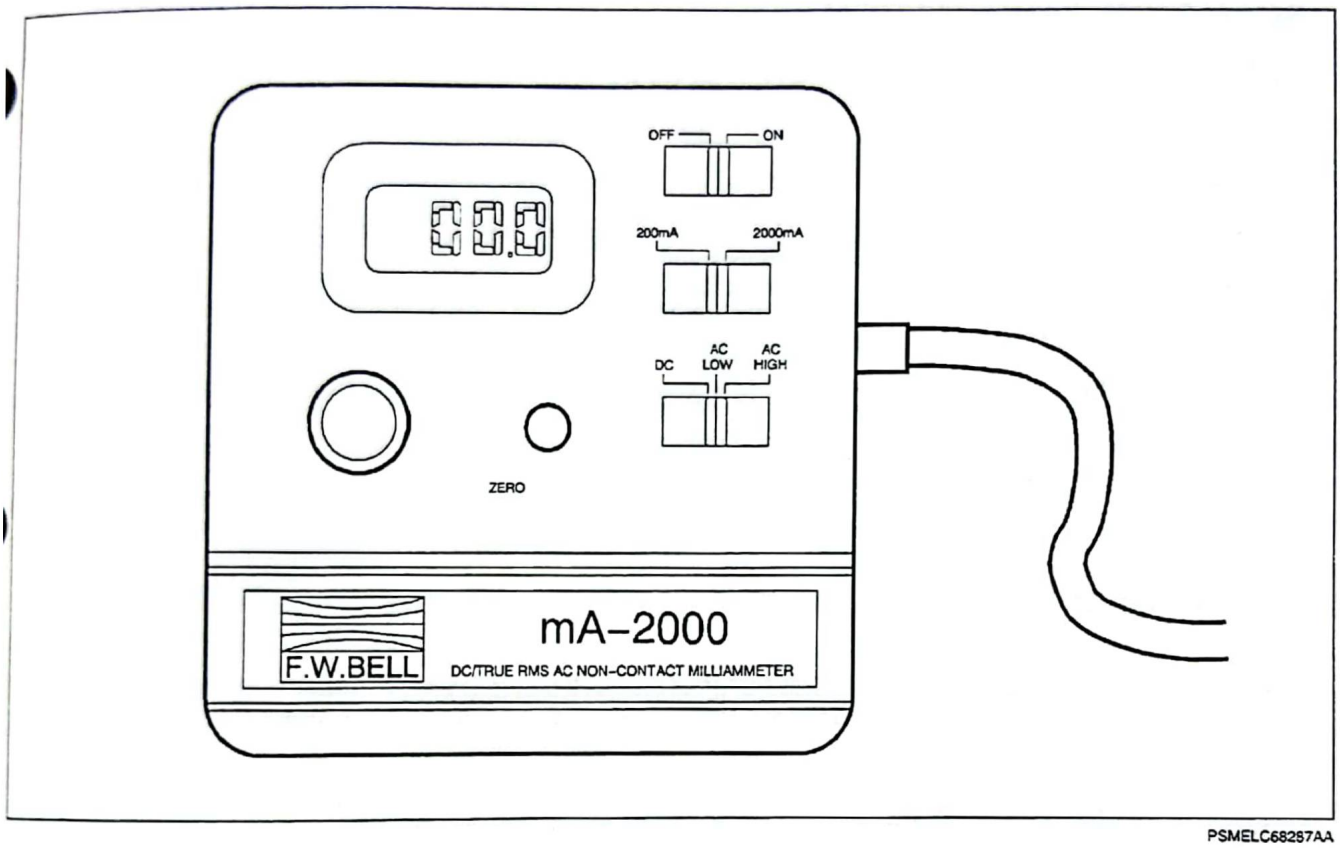

PSMELC68257AA

PROCEDURE FOR USING LOW CURRENT AMP PROBE - EV9726Z

1. Turn Amp meter On and allow to warm up for a few minutes.
2. Connect inductive pickup to Amp meter.
3. Select 2000mA and DC on the meter switches.
4. Zero reading on amp meter using the coarse (small) and then fine (large) adjustor knobs.
5. Access wire to be read and expose a section long enough to allow pickup to fit between wire and rest of harness.
6. Place wire in pickup, making sure that only that wire is in the pickup and that the pickup contacts close with the wire in the middle of the pickup.

IMPORTANT: If the pickup contacts do not fully close, erroneous readings will be generated. Note that the arrow on the probe indicates the current direction that will generate a positive reading on the meter.

7. Take desired current reading.
8. If other readings are taken, zero meter in between each reading. Re-zeroing may also be necessary as the unit continues to warm up.

CamScanner

SCAN TOOL INFORMATION

NORMAL MODE (AS DISPLAYED ON THE *SSS)*

RSA TO BPM

RUN/ACC ACTIVE (YES,NO) – Displays "Yes" while in the RSA commanding RUN or OFF/ACC modes.

COAST DOWN REQ (YES,NO) - Displays "YES" while the coast down button is depressed

rem TO TTY TT fON OFF) - Displays "ON" while the security mode is active.

ODO MODE REQ (YES,NO) – Displays "YES" momentarily when the TRIP button is pressed.

GAGE MODE REQ (YES,NO) – Displays "YES" momentarily when the GAGE button is pressed.

TRIP RESET REQ (YES,NO) – Displays "YES" momentarily when the RESET button is pressed, whether the trip odometer is *selected or not.*

E/M MODE REQ (YES,NO) - *Displays "YES"* momentarily when the EnglishMetric (Ml/km) button is pressed.

PRECON ENBL REQ (YES,NO) - Displays "YES" momentarily when the precondition ON button is *pressed.*

TIME DISPLY REQ (YES,NO) – Displays "YES" after the clock button is pressed and stays latched On until the HR or MN buttons are pressed. The time clock is displayed in the upper right corner of IPC while time request is on.

AIR CIRC REQ (RECIRC,FRESH,NONE) - Displays RECIRC or FRESH momentarily when one of those buttons is depressed. Displays NONE the rest of the time regardless of the mode selected.

AIR FLOW REQ (LOWER,BI-LVL,UPPER,NONE) - Displays LOWER, BI-LVL, or UPPER momentarily when one of those buttons is pressed. Displays NONE the rest of the time regardless of the mode selected.

CLIM CTRL REQ (NONE,COOL,HEAT) - Displays COOL or HEAT momentarily when cool or heat buttons are pressed, displays NONE the rest of the time.

VENT MODE REQ (ON,OFF) - Displays "ON" momentarily when the Vent button is pressed.

REAR DEFOG REQ (YES,NO) - Displays "YES" momentarily when rear defog button is pressed.

FAN SPD UP REQ (YES,NO) - Shows "YES" as long as the Fan up button is being pressed.

FAN SPD DWN REQ (YES,NO) - Shows "YES" as long as the Fan down button is being pressed.

TIME SET (YES,NO) — Shows "YES" while the time set mode is entered (by holding the HR or MN button)

TIME DISPLAY (YES,NO) - Shows "YES" while the time is displayed after pressing the clock or the HR or MN buttons *(for five* seconds).

FRONT DEICE REQ (YES,NO) - Shows "YES" momentarily when the Front De-ice button is pressed.

FRONI DEFOG *REQ (YES,NO)* - Shows "YES" momentarily when the Front Defog button is pressed.

CHECK T
mined On IRE 11 <ON,0FF) ~ Shows "0N" when the RSA requests the Check Tire Pressure telltale be

WAIT TT (ON,OFF –) Shows ON when the wait telltale is commanded on.

PREC TIME (XX.XX) - Shows the precondition set time in military time,

IPC TO BPM

ODOMETER FAULT (YES,NO) - Shows "YES" when there is an internal IPC fault.

GAGE MODE (USOC, POWER) - Shows USOC when user state of charge is displayed on the IPC and POWER when power use is being displayed.

ODOMETER (#) – shows the season odometer mileage stored in the IPC in kilometers

CamScanner

SCANNER MODE

RSA - STATUS FLAGS

T-CODE/FLAG (YES,NO) - The scan tool shows “YES” while a code is set. The service stall system displays all the codes set.

REAR DEFOG (YES,NO) — Shows “YES” while the rear defog button is pressed.

FRONT DEFOG (YES,NO) - Shows “YES” while the front defog button is pressed.

FRONT DEICE (YES,NO) - Shows “YES” while the front de-ice button is pressed.

RECIRC AIR (YES,NO) - Shows “YES” while the recirc air button is pressed.

OUTSIDE AIR (YES,NO) - Shows “YES” while the outside air button is pressed.

UPPER AIRFLOW (YES,NO) - Shows “YES” while upper airflow button is pressed.

BILEVEL AIR FLOW (YES,NO) - Shows “YES” while bi-level air button is pressed.

LOWER AIRFLOW (YES,NO) — Shows “YES” while lower airflow button is pressed.

FAN DOWN (YES,NO) - Shows “YES” while fan down button is pressed.

FAN UP (YES,NO) — Shows “YES” while fan up button is pressed.

COOL (YES,NO) - Shows “YES” while A/C mode button is pressed.

VENT (YES,NO) - Shows “YES” while vent mode button is pressed.

HEAT (YES,NO) - Shows “YES” while heat mode button is pressed.

HVAC OFF (YES,NO) - Shows “YES” while HVAC Off button is pressed.

TIME DAY CLOCK (YES,NO) - Shows “YES” while the clock button is pressed.

MINUTES (YES,NO) - Shows “YES” while minutes button is pressed.

HOUR (YES,NO) - Shows “YES” while hour button is pressed.

PRECON ENABLE (YES,NO) - Shows “YES” while precondition button is pressed.

GAGE BUTTON (YES,NO) - Shows “YES” while gage button is pressed.

ODO MODE (YES,NO) - Shows “YES” while trip button is pressed.

TRIP RESET (YES,NO) - Shows “YES” while reset button is pressed.

ENGLISH/METRIC (YES,NO) - Shows “YES” while English/Metric button is pressed.

DIM UP (YES,NO) - Shows “YES” while dim up button is pressed.

DIM DOWN (YES,NO) - Shows “YES” while dim down button is pressed.

DRVR WIN DOWN (YES,NO) - Shows “YES” while driver window button Down is pressed

DRVR WIN UP (YES,NO) - Shows “YES” while driver window button Up is pressed.

COAST DOWN (YES,NO) - Shows “YES” while coast down button is pressed.

PASS WIN DOWN (YES,NO) - Shows “YES” while passenger window button Down is pressed

PASS WIN UP (YES,NO) - Shows “YES” while passenger window button Up is pressed.

RSA KP CLEAR (YES,NO) - Shows “YES” while RSA keypad clear button is pressed.

RSA KP 9/0 (YES,NO) - Shows “YES” while RSA keypad 9/0 button is pressed.

RSA KP 7/8 (YES,NO) — Shows “YES” while RSA keypad 7/8 button is pressed.

RSA KP 5/6 (YES,NO) - Shows “YES” while RSA keypad 5/6 button is pressed.

RSA KP 3/4 (YES,NO) - Shows “YES” while RSA keypad 3/4 button is pressed.

RSA KP 1/2 (YES,NO) - Shows “YES” while RSA keypad 1/2 button is pressed.

RUN MODE SW (YES NO) - Shows “YES" while RSA Run button is pressed.

CamScanner

OFF/ACC MODE SW (YES.NO) - Shows “YES” while the OFF/ACC button is pressed.

LOCK MODE SW (YES.NO) - Shows “YES” while RSA Lock button is pressed.

EXT KP 9'0 (YES.NO) - Shows “YES” while external keypad 9/0 button is pressed.

EXT KP 7/8 (YES,NO) - Shows “YES” while external keypad 7/8 button is pressed.

EXT KP 5/6 (YES.NO) - Shows “YES” while external keypad 5/6 button is pressed.

EXT KP 3Z4 (YES.NO) - Shows “YES” while external keypad 3/4 button is pressed.

EXT KP 1/2 (YES,NO) - Shows “YES” while external keypad 1/2 button is pressed.

PARKLAMP POWER (ON,OFF) - Shows “ON” while parklamps are turned On.

PARK POS DETECT (YES, NO) - Shows YES whenever the switch in the RSA indicates the PRND is in Park.

EITHER DOOR (OPEN,CLOSED) - Shows OPEN whenever a door is open.

PARK SELECT (YES.NO) - Shows “YES” whenever the PRND switch on the drive motor is in park.

MFG SELF TEST (ON,OFF) - Shows ON when manufacturing self test is being performed.

LOW TIRE RESET (ON,OFF) - Shows ON when low tire switch is pressed.

RUNl (ON, OFF) - Shows ON while RUN1 is commanded On.

RUN 2 (ON,OFF) - Shows ON while RUN2 is commanded On.

WIPER GROUND (ENABLE, DISABLE) — Shows ENABLE while accessory command (grounded circuit) from the RSA to the wiper module (in the Junction Block) is active.

MAP LIGHT CTRL (YES.NO) - Shows “YES” while dome lamp is powered On by the RSA dim up button.

DRVR WIN UP RLY (YES,NO) - Shows “YES” while left window up relay is active.

DRVR WIN DN RLY (YES.NO) - Shows “YES” while left window down relay is active.

PASS WIN UP RLY (YES.NO) - Shows “YES” while right window up relay is active.

PASS WIN DN RLY (YES.NO) - Shows “YES” while right window down relay is active.

RUN MODE LED (ON,OFF) - Shows ON while Run mode LED is lit.

OFF/ACC LED (ON,OFF) - Shows ON while Off/Accessory mode LED is lit

FRONT DEICE LED (ON,OFF) - Shows ON while Front De-Ice LED is lit.

FRONT DEFOG LED (ON,OFF) - Shows ON while Front Defog LED is lit.

PRECON ON LED (ON,OFF) - Shows ON while Preconditioning LED is lit.

UP AIRFLOW LED (ON,OFF) - Shows ON while Upper airflow LED is lit.

BI AIRFLOW LED (ON,OFF) - Shows ON while Bi-Level airflow LED is lit.

LO AIRFLOW LED (ON,OFF) — Shows ON while Lower air flow LED is lit.

REAR DEFOG LED (ON,OFF) - Shows ON while Rear Defog LED is lit.

VENT LED (ON,OFF) - Shows ON while Vent LED is lit.

HEAT HI LED (ON,OFF) - Shows ON while Heating high LED is lit (in high mode).

HEAT MED LED (ON,OFF) - Shows ON while Heating medium LED is lit (in medium and high mcides)-

HEAT LO LED (ON,OFF) — Shows ON while Heating low LED is lit (in low, medium, and high nt odes).

COOL HIGH LED (ON,OFF) - Shows ON while Cooling high LED is lit (in high mode).

COOL MED LED (ON,OFF) - Shows ON while Cooling medium LED is lit (in medium and high m odes).

COOL LOW LED (ON,OFF) - Shows ON while Cooling low LED is lit (in low, medium, and high m odes).

RUN/ACC OUTPUT (ON, OFF) - Shows ON whenever key minder is On (one of the doors open an d the vehicle still in Run/Acc mode).

CamScanner

SECURITY IT (ON,OFF) Shows ON when the Security telltale is turned On.

FAN SPEED 1 LED (ON,OFF) - Shows ON when the #1 LED for low fan speed is lit.

FAN SPEED 2 LED (ON,OFF) - Shows ON when the #2 LED for medium-low fan speed is lit.

FAN SPEED 3 LED (ON,OFF) - Shows ON when the #3 LED for medium fan speed is lit.

FAN SPEED 4 LED (ON,OFF) - Shows ON when the #4 LED for medium-high fan speed is lit.

FAN SPEED 5 LED (ON,OFF) - Shows ON when the #5 LED for high fan speed is lit.

RADIO WAKEUP (ON,OFF) - Shows ON when the Radio power from the RSA is being provided.

OUTSIDE AIR LED (ON,OFF) - Shows ON when the Outside air mode LED is lit.

RECIRC AIR LED (ON,OFF) — Shows ON when the Recirculation air mode LED is lit.

COAST DOWN LED (ON,OFF) - Shows ON when the Coast down LED is lit.

VALID KEY LED (ON,OFF) - Shows ON when the Valid code LED is lit.

EXT DOOR UNLOCK (YES,NO) — Shows YES when door unlock activated from External Key Pad (EKP).

RSAKP FACT MODE (ON,OFF) — Shows ON when in RSA keypad programming mode for the very first time on RSA.

RSAKP USER MODE (ON, OFF) — Shows ON when in programming mode to program keycode.

EXTKP FACT MODE (ON,OFF) — Shows ON when in EKP programming mode for the very first time on RSA.

EXTKP USER MODE (ON,OFF) - Shows ON when in programming mode to program keycode

KEY P.AD LIGHT (ON,OFF) - Shows ON when the External Keypad backlighting is lit.

RADIO DIM LVL (%) — Shows Radio Vacuum flourescent dim level in % between 0% and 50% (0,10,15,20,25,30,35,45, 50).

BACKLITE LVL (%) - Shows RSA, Radio, IPC, and park brake switch backlighting dim level in % between 20% and 100%. (20,25, 35,45,55, 60,70,80,90,100).

LED DIM LVL (%) - Shows LED dim level between 35% and 100% (35,45,55,65,75,85,95,100,100).

CTPS STATE (INITIAL, NV_DATA, NS_SPEED, ALARM, CAL, CAL-MON, MON LEAK) - Shows status of Check Tire pressure system. INITIAL (initialize) is only shown for a moment while the low tire pressure reset switch is held. NVJDATA (no valid data) means there is a problem reading the wheel speed signals. A BTCM code should be set in this case. NS_SPEED (no stable speed) means the data is currently not stable enough to use for calibration or detection. It is normal to see NS_SPEED during acceleration, braking, and some other driving maneuvers. ALARM means a tire pressure variation has been detected. CAL (calibration) means the vehicle is still calibrating. CAL-MON (calibration-monitor) means the vehicle is roughly calibrated in one or more speed ranges. The vehicle may still not be able to monitor in any or all speed ranges. MON LEAK means the vehicle is calibrated in all speed ranges and is monitoring wheel speeds

FRONT OFFSET (#) - Shows the difference between the front left and right tires in rotation speed. Shows zero when stopped During normal driving numbers of up to +/— 300 are common. If numbers reach or exceed +/- WOO, especially at lower speed ranges, the vehicle is detecting a significant speed variation.

REAR OFFSET(#) - Same as FRONT OFFSET only for the rear wheels.

15-40 CAL CRAW CONVFRGE OFF) - Shows RAW until raw calibration is complete in the 15-40 mph range, shows CONVERGE until convergence calibration is complete in the 15-40 mph range. Shows OFF when calibration in the 15-40 mph speed range is complete.

40—65 CAL (OFF, RAW, CONVERGE) - Same as 15-40 CAL only for 40-65 mph.

65-80 CAL (OFF, RAW, CONVERGE) - Same as 15-40 CAL only for 65-80 mph.

15–28 MON (OFF, REDUCED, FULL) – Shows OFF when the related calibration ranges (refer to CTPS section "Detection") are in the OFF or RAW states. Shows REDUCED when the related calibration ranges are not completely calibrated and reduced monitoring is taking place. Shows FULL when full monitoring is taking place.

28–53 MON (OFF, REDUCED, FULL) – Refer to 15–28 MON

53–80 MON (OFF, REDUCED, FULL) – Refer to 15–28 MON

CTPS ACCUM (#) – The accumulator value is determined by the offsets and other calculated data. When the accumulator value is above zero and growing, the system is detecting a low tire condition. When the value reaches approximately 11,520 the CTPS telltale is turned on.

CamScanner

IPC

VEHICLE ID

VIN (#) - Vehicle Identification Number (VIN)

IPC

GENERAL INFORMATION

REDUCED PERF TT (ON, OFF) - Shows ON when REDUCED PERF telltale commanded On.

BATTERY LIFE TT (ON, OFF) - Shows ON when BAT LIFE telltale commanded On.

CHECK TIRE TT (ON, OFF) - Shows ON when CHECK TIRE PRESSURE telltale commanded On.

SEATBELT TT (ON, OFF) - Shows ON when SEATBELT telltale commanded On.

SERVICE NOW TT (ON, OFF) - Shows ON when SERVICE NOW telltale commanded On.

WAIT TT (ON,OFF) - Shows ON when WAIT telltale commanded On.

TEMP TT (ON, OFF) - Shows ON when TEMP telltale commanded On.

AIR BAG TT (ON, OFF) – Shows ON when SIR telltale is turned on by SDM.

RGHT TURN INPUT (ON,OFF) – Flashes ON when right turn signal indicator On.

LEFT TURN INPUT (ON,OFF) – Flashes ON when left turn signal indicator On.

MFG TEST (YES,NO) – Shows YES while manufacturing test is in progress.

RUN/ACC OUTPUT (ON, OFF) – Shows ON when vehicle in RUN mode.

DRIVER SEATBELT (ON,OFF) – Shows ON when drivers seat belt buckle switch is latched.

HIGH BEAM TT (ON,OFF)– Shows ON while the high beams are turned On or held on with flash to pass.

PARKLAMPS (ON,OFF) – Shows ON while parklamps are On.

EITHER DOOR (OPEN,CLOSED) – Shows OPEN when driver or passenger doors are closed.

RUN 1 (ON, OFF) – Shows ON when Run1 power is On.

VF PWR ENABLE (ON,OFF) – Shows YES whenever VF power is on.

CHIME PWR ENBL (ON,OFF) – Shows ON whenever power is available for chime.

RUN 1 (#) – Shows the Run1 voltage level.

DIM INPUT (#) – Shows the Dim input volts
(values read by pressing dim up/down switches – 0.0 Off, then 1.7, 1.8, 2.1, 2.3, 2.6, 2.8, 3.0, 3.3, 3.5, 3.7).

HWS ROTATION (#) – Shows the handwheel sensor input voltage. The value varies up and down between about 0.5 and 4.4 up and down repeatedly as the wheel is turned.

PARKLAMP REF (#) – Shows the parklamp voltage input to the IPC.

PROM ID (ALPHA/#) – Shows the Prom ID #

STRG PWM DUTY % (#) – Shows the PWM commanded duty cycle from the IPC (with vehicle speed = 0: 48 idle, 83 with steering input–returns to 48 after four seconds).

VF DIM PWM DTY (%) – Shows the vacuum flourescent PWM duty cycle (values read by pressing dim up/down switches – 0, 0, 1, 1, 2, 3, 5, 6, 8, 15)

CamScanner

VEHICLE ELECTRICAL DIAGNOSIS

TROUBLE SHOOTING GUIDES

NOTICE: When trouble shooting an electrical system, make sure there are no electrical loads on, except for the circuits or system being tested. This will help prevent false readings.

BEFORE TROUBLE SHOOTING

1. Visually inspect the wires and connectors.
2. Verify that terminal pins are clean and that there are no loose pins or terminals.
3. Verify that the Weather-Pac connectors are in good condition and sealed properly.
4. Check the maxifuse or positive temperature coefficient (PTC) used to protect the circuit or system being tested.
5. Check the battery for damage, state of charge, and for clean and tight connections.

FIVE-STEP TROUBLE SHOOTING

1. Verify the complaint.
   - Perform the System Performance Test, if the section has one, outlined at the beginning of each section. Do not fix only part of the problem. Do not begin disassembly or testing until you have narrowed down the possible causes.

2- Consult the Diagnostic Flow Charts and analyze the electrical schematic for the system being tested.

   - Use the Diagnostic Fllow Chart, to find the possible cause of the problem.
   - Look at the electrical schematic for the problem circuit. Determine how the circuit is supposed to work and look for maxifuses, wires and ground shared with other systems or components. See if a shared wired is at fault by checking the other components fed by the wire.
   - Based on the symptoms and your understanding of the circuit operation, identify one or more possible causes of the problem.

3. Isolate the problem by testing the circuit. Use diagnostic service probes as needed on 18,20, and 22 gage wires.
   - Perform circuit tests to check the diagnosis made in step two. You can either test for the most likely cause of failure first, or perform the tests which are most easily and quickly done.
   - Generally, fuses and grounds are easiest to check.
4. Fix the problem.
   - Once the problem is identified, make the repair. Make sure to use the proper tools and safe methods mentioned in this service manual.
5. Make sure the circuit works.
   - Turn on all components in the repaired circuit in all modes of operation. Make sure no new problems have come up and that the original problem has been fixed.

HELPFUL HINTS

1. If a fuse is blown, or a PTC is open look for a short to ground in the circuits between the junction block and the component or an internal component short. The short may also be in a circuit that is switched, such as a circuit beyond a relay contact or a electronic component that controls a circuit.
2. Before checking the integrity of a circuit by means of a voltmeter or ohmmeter, check to see if other components or systems fed or grounded by the circuit are operating properly.
3. Verify that the connector pin terminals are not spread apart, broken, worn, or corroded due to salt water, antifreeze, etc.
4. Verify that the terminals and pins are in their correct cavities.
5. Opens normally occur at connectors and terminals.
6. Use the diagnostic service probe and a multimeter to diagnose circuits that contain 18, 20, or 22 gage wires. The diagnostic service probe causes a minimum of disturbance to the circuit wiring and connections.

CamScanner

CAUTIONS

CAUTION: FAILING TO FOLLOW THE FOLLOWING PROCEDURES COULD RESULT IN SERIOUS PERSONAL INJURY OR PROPERTY DAMAGE.

CAUTION: ALWAYS REMOVE THE 60 AMP MAXI FUSE WHEN REPLACING COMPONENTS ON A VEHICLE.

CAUTION: REMOVE RINGS, WATCHES AND ALL OTHER JEWELRY.

CAUTION: WHEN WORKING AROUND THE BATTERY, ALWAYS SHIELD YOUR EYES. AVOID LEANING OVER THE BATTERY IF POSSIBLE.

CAUTION: DO NOT ALLOW BATTERY FLUID TO CONTACT EVES, SKIN, FABRICS OR PAINTED SURFACES; BATTERY FLUID IS A CORROSIVE ACID. FLUSH ANY CONTACTED AREA WITH WATER IMMEDIATELY AND THOROUGHLY, AND GET MEDICAL HELP.

CAUTION: BE CAREFUL THAT METAL TOOLS DO NOT CONTACT THE POSITIVE BATTERY TERMINAL (OR METAL IN CONTACT WITH TERMINAL) AND ANY OTHER METAL ON THE VEHICLE; A SHORT COULD OCCUR.

CAUTION: DO NOT EXPOSE A BATTERY TO OPEN FLAMES OR SPARKS (INCLUDING LIT TOBACCO). BATTERIES PRODUCE A GAS WHICH IS FLAMMABLE AND EXPLOSIVE.

CAUTION: NEVER WEAR LOOSE OR BAGGY CLOTHING AROUND MOVING MACHINERY. REMOVE TIES AND ANY HANGING JEWELRY, AND TIE BACK LONG HAIR.

READING WIRING SCHEMATICS AND SYMBOLS

SCHEMATICS

Each electrical section includes an electrical schematic for the system described in the section. This schematic includes only the fuses, positive temperature coefficient (PTC) devices, wiring and components required for the system. This prevents you from being distracted by wiring that is not part of the circuit you are working on.

IMPORTANT: For your convenience, all electrical schematics are included in this manual.

It is important to realize that no attempt is made to represent components and wiring as they physically appear on the vehicle.

For example, a four-foot length of wire is treated no differently in the electrical schematic than a 12-inch piece of wire.

WIRE SIZES

METRIC SIZE (SQ. mm)	AWG SIZE (gage)
.22	24
.35	22
.5	20
.8	18
1.0	16
2.0	14
3.0	12
5.0	10
8.0	8
13.0	6
19.0	4
32.0	2

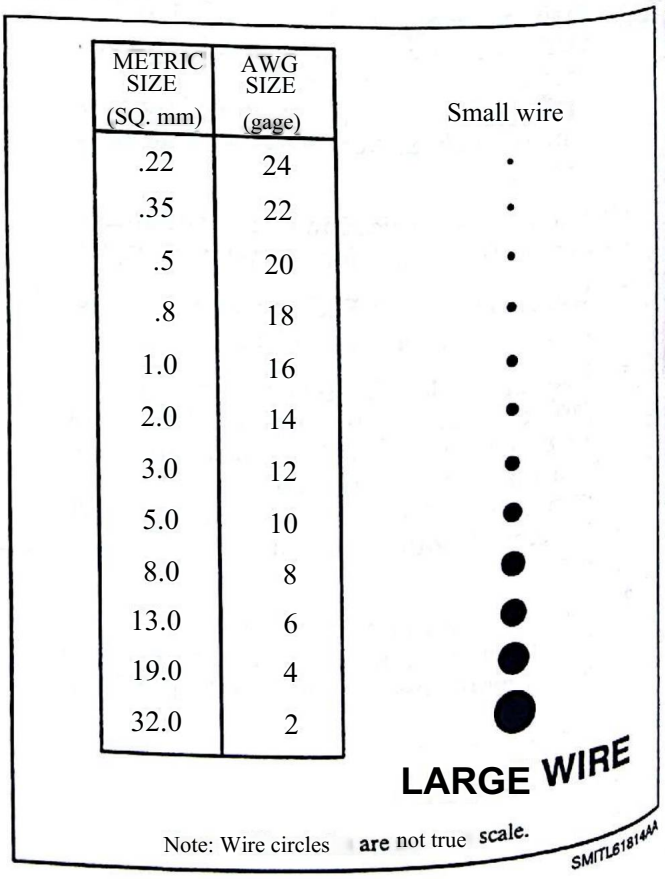

CamScanner

POWER OUTLET SCHEMATIC - SYMBOLS EXAMPLE

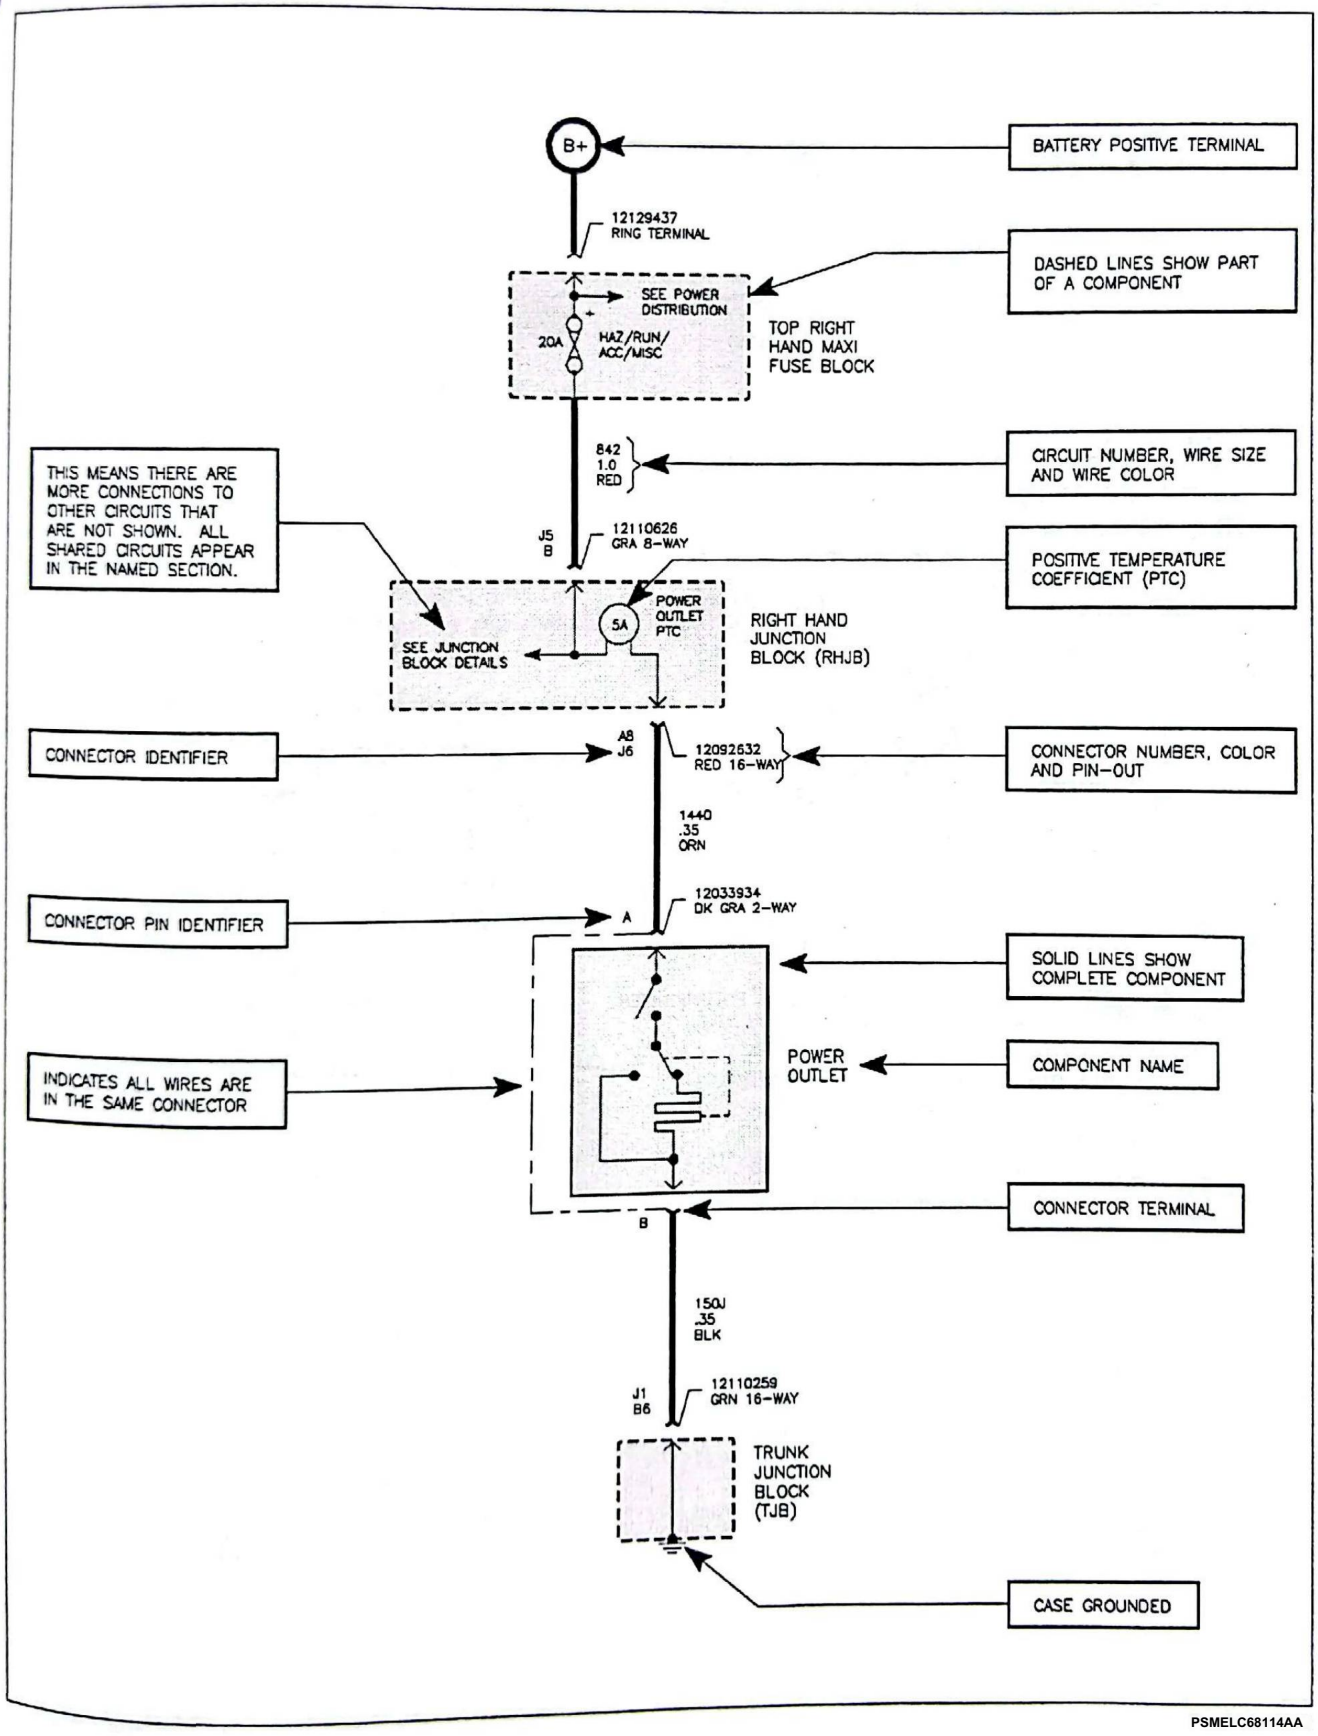

PSMELC68114AA

CamScanner

ELECTRICAL SYMBOLS

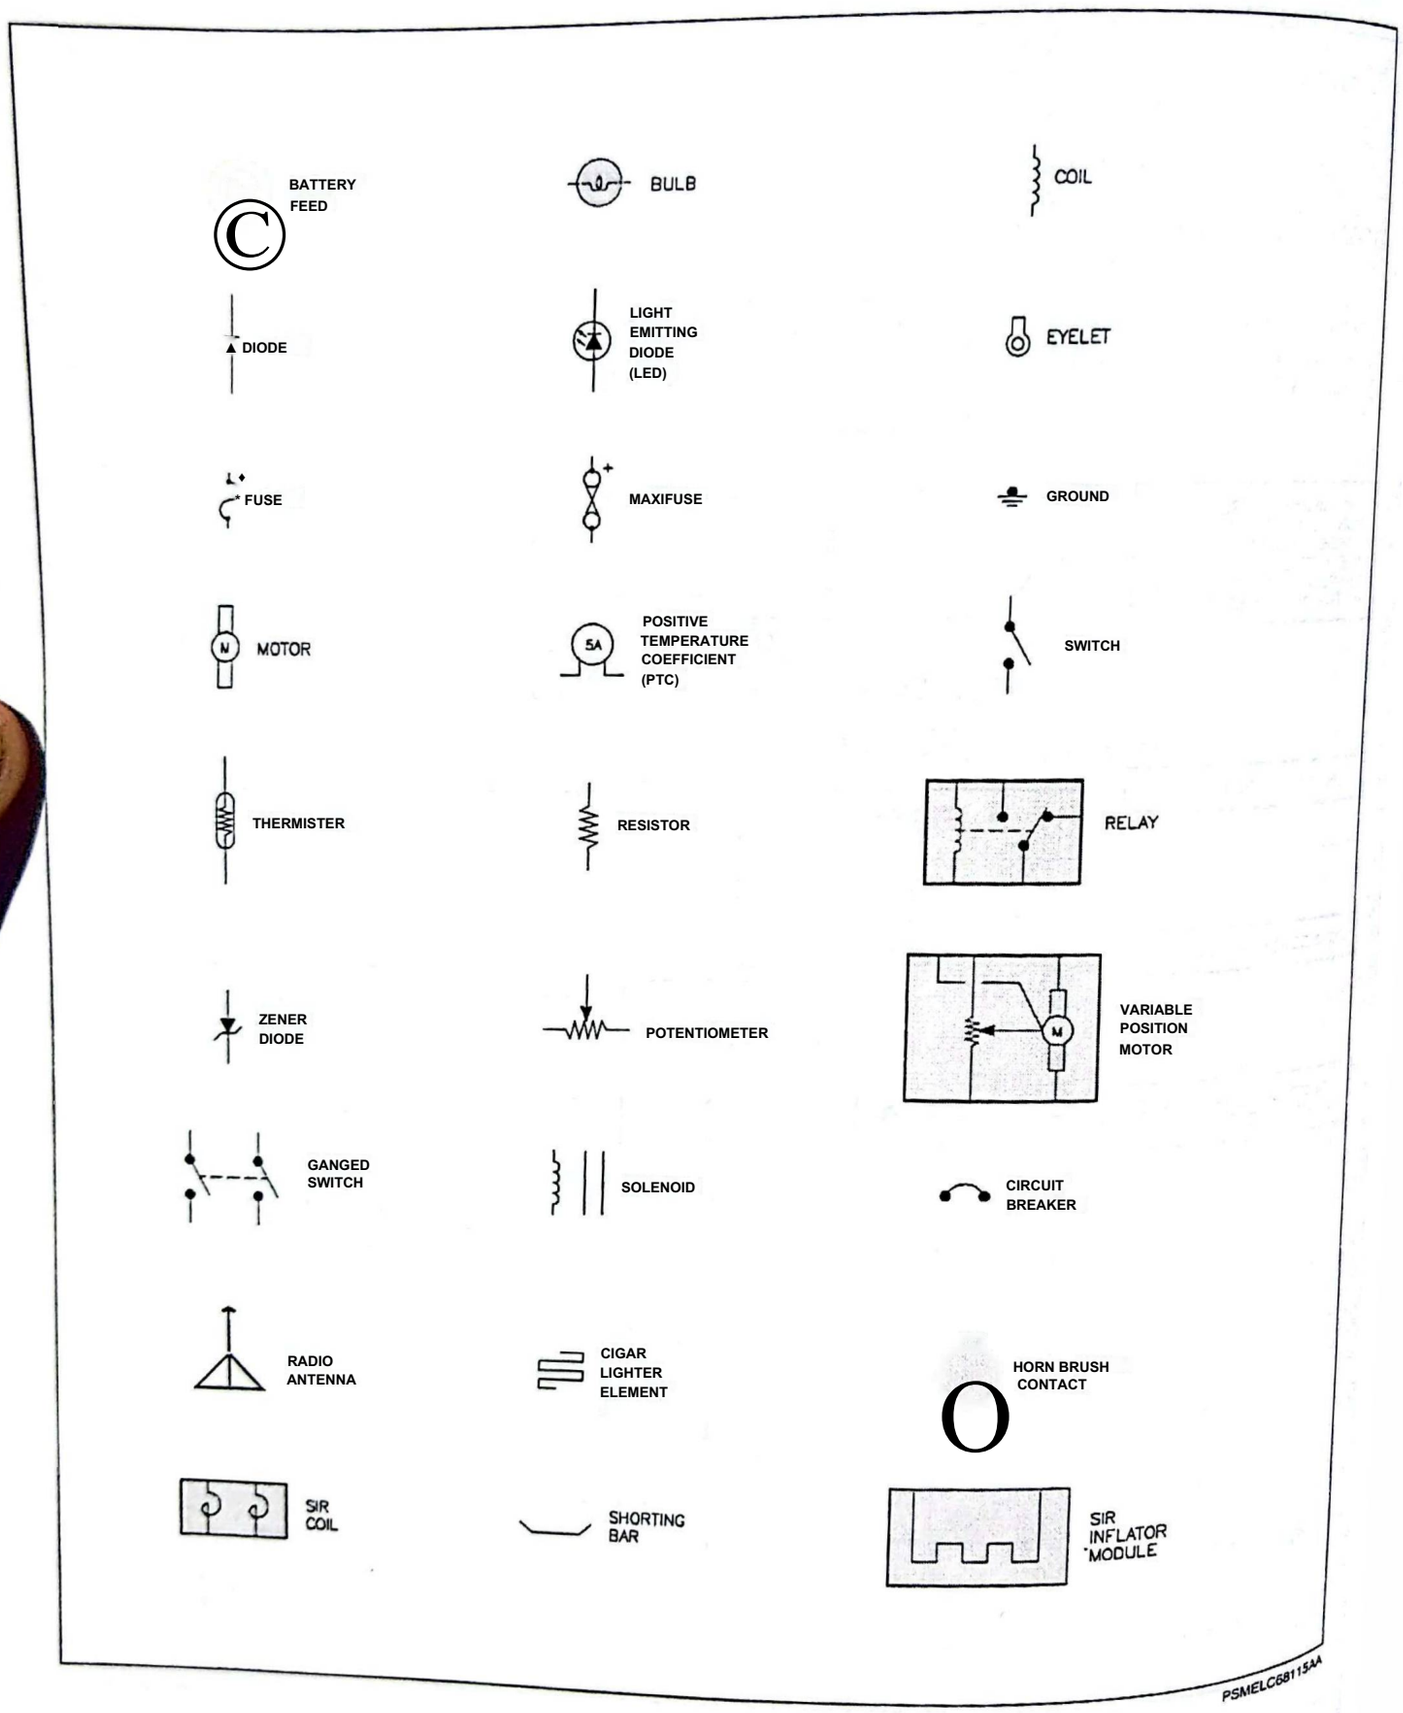

CamScanner

DIGITAL MULTIMETER USAGE

INTRODUCTION TO DIAGNOSIS OF ELECTRICAL FAULTS

A dicital multimeter is required to quickly and accurately diagnose most electrical faults. Due to the complexity of the circuitry and the use of electronic components, a multimeter is required to safely test the electrical circuits on an Electric vehicle. A test light should not be used to troubleshoot electrical circuits on a Saturn vehicle.

A test light is a low-resistance *load* on an electrical circuit On most test lights used today, this low-resistance is 50 ohms. Since electronics are designed to be used with high-resistance circuits, using a low-resistance test light can cause damage to an electronic module. Another problem that occurs when using a test light is accuracy. During some testing procedures, you will be asked to test for a certain voltage. For example, from 8-16 volts. With a test light it is impossible to determine the difference between 75 volts and 8.0 volts. A digital voltmeter will display the exact voltage on a circuit.

Another problem with test lights are the sharp probe tip that is often used to probe wires. Probing a wire with a test light, or any other sharp pointed instrument, can break strands of the wires and cause future circuit failures. Also, a break in the insulation allows the wire core to act as a *wick* pulling in moisture, not only damaging the wire, but allowing it to enter connectors and components. This moisture can include salt, antifreeze and other fluids as well as water. Some of these contaminants cause corrosion in the wire or connector. Corrosion increases a circuits resistance, and in electronic circuits, even a small increase in resistance can give a false reading from a sensor to an electronic module.

DIGITAL MULTIMETER

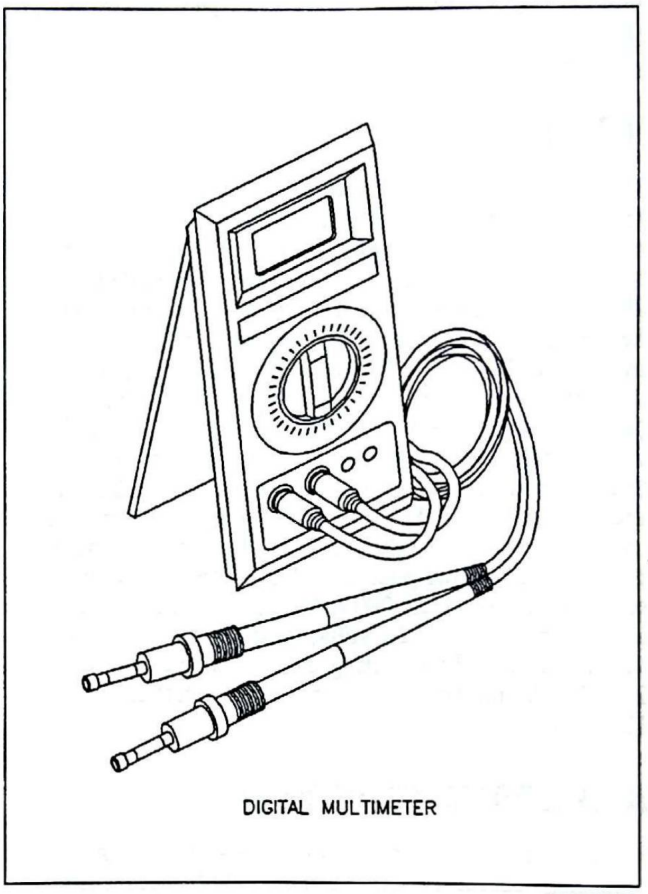

SMELC5O821

Digital multimeters approved for use on Electric vehicles must have an input impedance of ten megohms (10,000,000 ohms). Input impedance is listed in the multimeter's owner guide.

IMPORTANT: The input impedance of a multimeter stands for the resistance between the red and black leads, only when you are measuring voltage. When measuring resistance, the only resistance other than in the circuit being measured is in the actual leads being used.

A digital multimeter performs all the tests that a test light can perform, with a greater degree of accuracy. In addition, a multimeter can be used to test for current flow in a circuit.

CamScanner

IMPORTANTi Always follow the manufacturers recommendation when checking for current. All multimeters have a maximum current rating, do not exceed this rating. Not all multimeters contain a fuse that protects the multimeter from damage if a larger current draw is experienced. So be careful when checking for current draw.

VOLTAGE

Voltage is the electrical pressure in the circuit and is the most commonly used electrical test setting on the multimeter. Most digital multimeters have a number of different voltage scales. To determine what scale to use, always use the lowest scale on the multimeter that can be used to test the circuit. For example, if the multimeter has a 200 millivolt scale, a 20 volt scale and a 200 volt scale, and you are testing for battery voltage (approximately 12-14 volts), set the multimeter to the 20 volt scale. If you should select a scale that is too low, the meter indicates this by displaying a 7 or an *OL* on the display. This will not harm the multimeter, and you can always select a higher scale until a good reading is obtained. The same goes for selecting too high of a scale. If you select the 200 volt scale and you are testing for battery voltage (12.8 volts), most multimeters will display 12 volts. By selecting the next smallest scale, 20 volts, the multimeter's display will change to 12.8 volts.

AMPERAGE (CURRENT)

Since a multimeter has a very low resistance when measuring current, caution must be used to prevent damage to the multimeter. Always check the recommendations, listed in the multimeter's owner guide for the maximum current to be tested for. As previously mentioned, most multimeters are protected by a fuse when checking for current. However, not all multimeters are protected, and excessive current will damage a multimeter.

The most common use for measuring current in automotive applications is checking for parasitic current drain. This is the amount of cunent being drawn by the vehicle with all electrical loads off. The normal parasitic cunent drain for an Electric vehicle is less than 15 milliamps. This current drain comes from components that require voltage to sustain a memory circuit such as the clock, radio, propulsion control module, etc. However, when checking for parasitic cunent drain, always check to see if the customer has installed any non-faclory installed items that could require constant voltage such as a cellular phone, anti-theft system, etc.

CONTINUITY/RESISTANCE/ DIODE

This group of settings on a multimeter allow you to accurately test for continuity and determine the resistance of many vehicle components.

CONTINUITY

To check for continuity in a circuit use the lowest ohm scale available. Place the leads of the multimeter on each end of the circuit or component being tested. A reading of less than one ohm indicates acceptable continuity.

RESISTANCE

To test for resistance values, place the leads of the multimeter on each side of the circuit or component being tested. Adjust the ohm settings on the multimeter until an acceptable reading is displayed. The lowest scale that gives a reading without going over the range (7 or *OL)* gives the most accurate reading. Compare the reading displayed on the multimeter to the specification found in the service manual or bulletin. Verify that the scale reading on the multimeter is the same as in the specification (megohms, kilohms or ohms).

NOTICE: When using a multimeter on the ohmmeter or diode test scale, make sure the circuit or component is disconnected from a power source. Applying voltage to a multimeter when you are measuring resistance can damage the multimeter.

DIODE TESTING

Most digital multimeters have a *Diode setting. This setting* is used to test diode flows in *only one* dStion.6513 t0 VCnfy CUrrent

A good *inf met? 0 16 WiU displa y bet ween 0.4 and 0.8 volt on diode* W j- n t£le^eads are forward biasing the flow in th is]^lcates the *diode is allowing cunent to rXr atdirection- When the leads* are reversed, the blocking th ead 1 Or *0L ' indicating the diode is Thic • J- A e* current of the *opposite direction, _nis mdicates a good diode. If the diode allows current* flow in both re, c^0ns or prevents current flow in bo replaced or the diode is ^amaSecl and should be

CamScanner

MULTIMETER DISPLAY READING

MEGA	KILO	READING	MILLI	MICRO
Display x 1,000,000	Display x 1,000	As displayed	Display* 1,000	Display* 1,000,000

CamScanner

DIAGNOSTICS USING THE DIAGNOSTIC SERVICE PROBE

DIAGNOSTIC SERVICE PROBE

IMPORTANT: Diagnostic service probes are for use on .35, .50 and .80 mm (22,20 and 18 gage) wires only.

IMPORTANT: The diagnostic service probes must be left on the wire after use. The probe contains a sealant that will protect the wire from corrosion. Do not remove the diagnostic service probe after use.

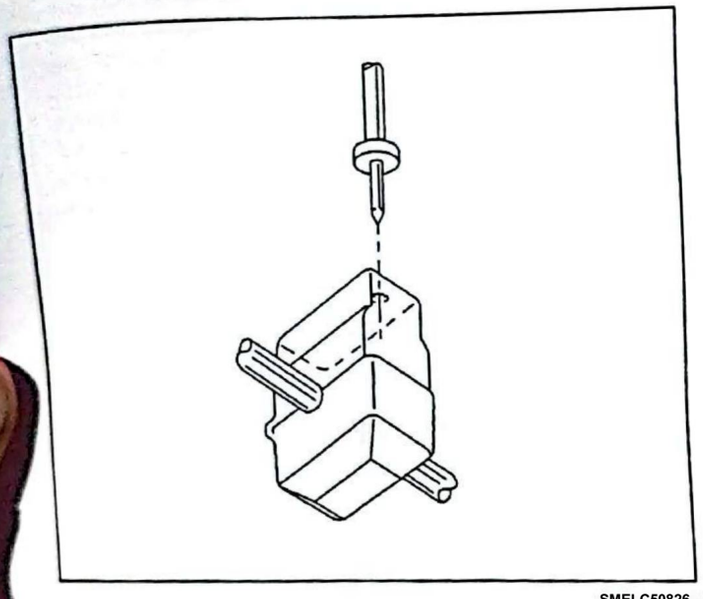

SMELC50826

The use of the diagnostic service probe offers many advantages in system diagnostics over the o *Jumper wire* and *terminal back-probe* methods. The most important advantage of the diagnostic service probe method of diagnostics is the ability to observe the ^Deration of a circuit without disturbing the (jmponents or connections. This is an important dvantage since many circuit failures are vibration or Lnnection related. The diagnostic service probe is Lsigned to firmly hold multimeter test probes to allow more accurate readings while the circuit is operating. Circuits with bad connectors, grounds or components are easier to diagnose while they are operating.

Attach the diagnostic service probe to the wire leading to the connector and insert your multimeter into the diagnostic service probe. Put the meter on the appropriate scale and observe the readings. If the readings do not compare with the expected readings, gently wiggle the wire back and forth in the connector. If the reading on the meter changes while you are wiggling the wire, the terminal or connector are faulty. Disconnect the connector and examine the terminals and connector cavities for damage. Check the terminals to see if a known good terminal makes a firm connection. Do this by inserting a known good male terminal into the female terminal you are testing The male terminal should be held firmly in place by the ternate terminal and should not be loose enough to fall out if the female terminal is held downward.

Likewise, test a male terminal by inserting it into a known good female terminal. The two terminals should fit snugly together and should not separate if the male terminal is held vertically downward.

If the connections are good (both wire connections and the connection to the component), check the ground connection. Attach a diagnostic service probe to the ground side of the circuit or component. Place a multimeter probe in the diagnostic service probe and the other probe to a known good ground.

NOTICE: Check the accuracy of the multimeter first **by touching the leads together. The meter should read less than 0.10 ohm with the leads touching.**

Place the multimeter on the lowest ohmmeter scale. The meter should read less than one ohm. If the meter reads more than one ohm, check the connections to the ground attachment point. Attach a jumper wire from the ground attachment point. Attach the other end of the jumper wire to a known good ground and watch the multimeter to see if the reading goes below one ohm. If the reading goes below one ohm, remove the ground screw or nut, clean the connection surfaces and install. If the reading stays above one ohm, check for an open in the ground wire. Also check for continuity from the component to the diagnostic service probe.

Other uses for the diagnostic service probe:

- Compare voltage readings across connectors, components, or lengths of wire. This allows you to observe the operation of a circuit without the addition of jumper wires or back-probing connections. The best time to diagnose most circuits is while they are operating.
- Observe changing voltages and compare them to what the brake torque control module (BTCM)[IS] reporting. This can be done by comparing the voltage readings of the BTCM inputs to the reported BTCM readings displayed on the portable diagnostic tool (Scan tool) or the service stall system (SSS). This can help detect damaged faulty BTCM connections, or a faulty BTCM-

IMPORTANT: There are differences between th[e] actual voltages from the sensors and the reported voltages by the BTCM. This is due to the internal ^version of these voltages to binary data by the B1 CM. However, the voltages should gencraUy vW together and the difference should be less than *0-**

- The diagnostic service probe can be used with future test equipment to gain access to a circuit for testing or calibration.
- The diagnostic service probe can be used to give a good ground access point. Attach a diagnostic service probe to a ground circuit * and insert the multimeter lead in the pr0^ * ground reference. Check the ground circui verify the ground path is good.

CamScanner

CONNECTOR JUMPER QUSAGE

NOTICE: Do not push multimeter probes into the connector terminals.

These devices are made of a short length of wire, a terminal, and a diagnostic service probe or an alligator clip. The terminals may be obtained from the service parts cut lead kits or from a scrap wiring harness.

They have a dual purpose. The first being to aid in measuring voltage, resistance, or current at a connector. Since diagnostic service probes are limited to use on .35, .50 and .80 mm, (22,20 and 18 gage) thin wall wire, many of the wires cannot be probed without disconnecting the connector. But, probing the terminal could spread the contacts and damage them. Once a contact is damaged it is very difficult to make good contact with a male terminal. By constructing a jumper, the probe can make excellent contact with the circuit through the diagnostic service probe or the alligator clip, and the terminal won't be damaged.

The second function is to determine if a terminal's contacts have been spread apart, making an open or intermittent open. This is known as a terminal tightness test. Connector terminals make contact with the pin by means of a tang which is sprung against the pin. If the tang is spread apart by a meter probe, the tang will not spring back to tightly grip the pin. Test this by inserting the jumper pin and removing it, noting how well the terminal holds the pin. It should be held well enough that the pin will not fall out of the terminal.

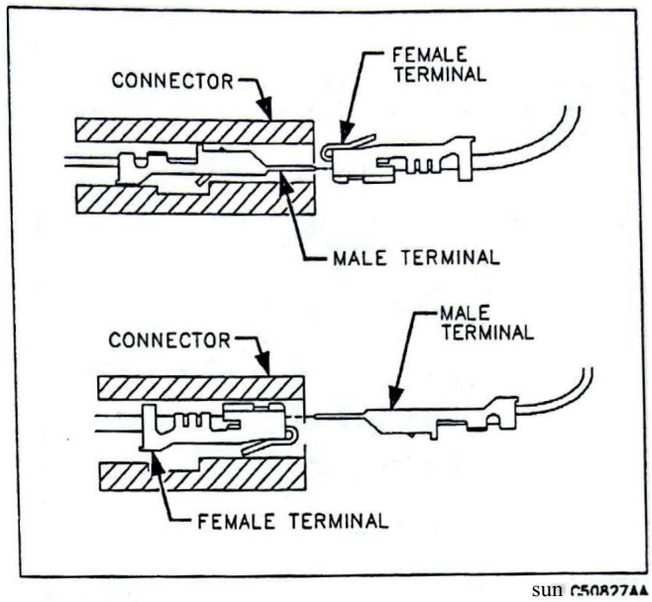

sun C50827AA

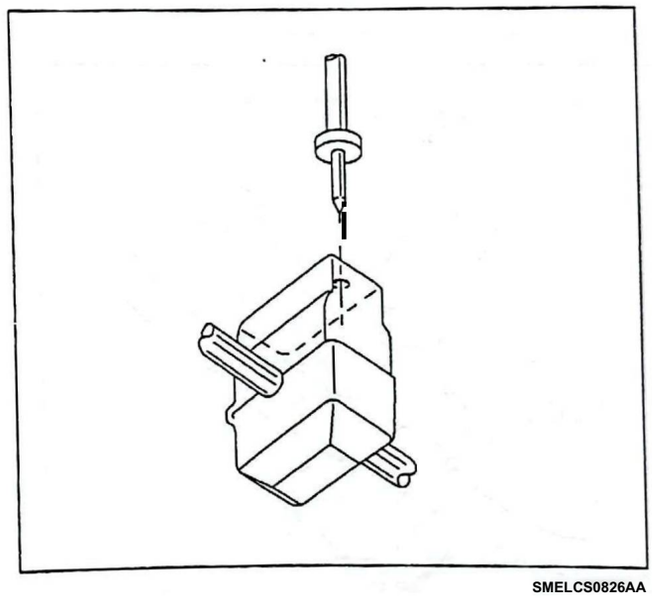

SMELCS0826AA

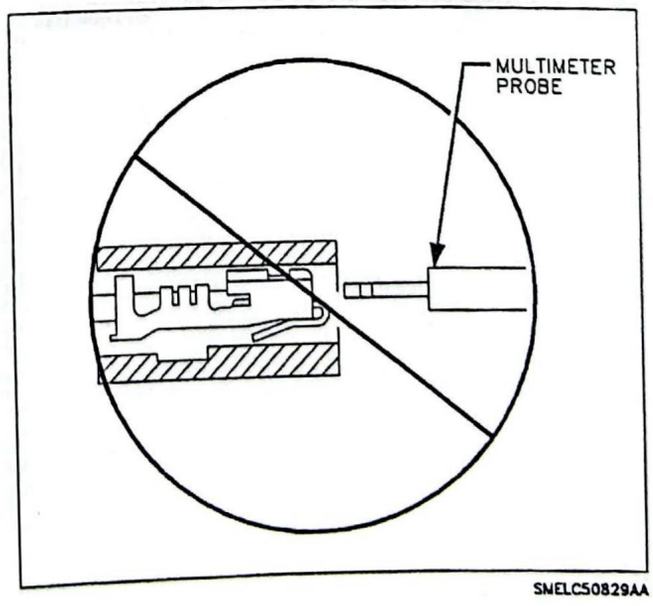

SMELCS0829AA

CamScanner

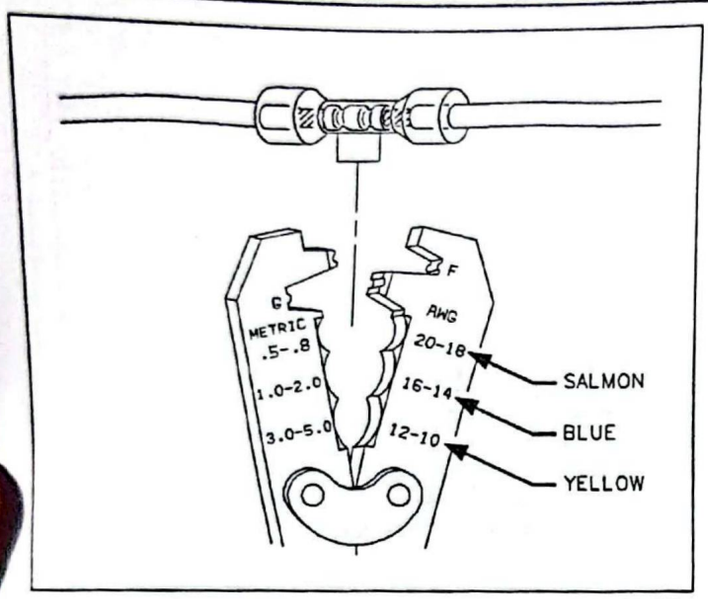

SMELC50961AA

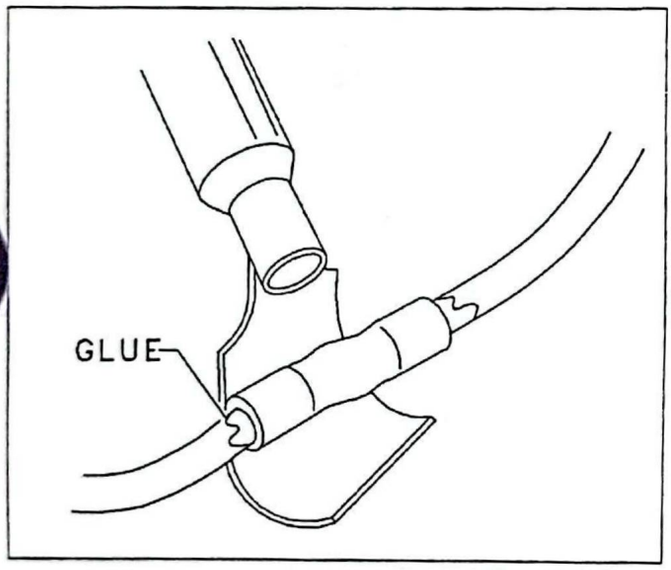

SMELC50831AA

WIRE REPAIR

SPLICING

With the low current and voltage wires in the Electric Vehicle, it is best to use approved Packard Electric Crimp and Seal Splice Sleeves (or equivalent).

1. Remove insulation from both ends, recommended strip length is 9.5 mm (3/8 in.). Caution must be used to prevent cutting the wire strands. Locate new splice a minimum of 40 mm (1.5 in.) from an outlet or other splice.
2. Determine proper sleeve for gage of wire. Position stripped ends in sleeve until wires hit stop.
3. Hand crimp using the approved crimping tool. Gently tug on wires to make sure they are secure before applying heat to them.

CAUTION: DO NOT USE MATCH OR OPEN FLAME TO APPLY HEAT TO SEAL.

4. Apply heat using Ultratorch® or some other device, heating to 175*C (347°F) until glue flows around edges of sleeve.
5. Check for continuity in the wire.

IMPORTANT: The salmon splice can be used on the .35 (22 gage) wire if the following additional steps are taken:

6. Remove 19 mm (3/4 in.) of insulation.
7. Bend the stripped portion in half to double the thickness.
8. Twist the stripped, doubled wire and insert into the splice sleeve.

CamScanner

CONNECTOR REPAIR

0 PUSH-TO-SEAT CONNECTORS

IMPORTANT: Cut leads with terminals are available from Saturn Service Parts for terminal replacement.

TERMINAL REMOVAL

1. Remove any terminal position assurance (TPA) locks.
2. Insert the terminal lock release tool into the front of the connector cavity. Pull the wires and terminal out of the back of the connector.

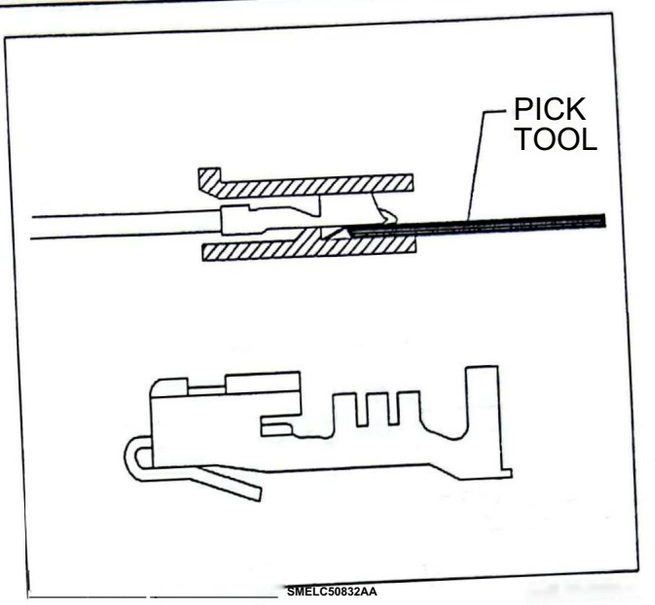

CUT LEAD INSTALLATION

1. Put connector seal (if equipped) on wire and strip approximately 9.5 mm (3/8 in.) of insulation off the wire.
2. Remove insulation from the end of the cut lead and the harness. Recommended strip length is 9.5 mm (3/8 in.). Caution must be used to prevent cutting the wire strands.
3. Determine proper sleeve for gage of wire.

WIRE SIZE mm (GAGE)	SPLICE COLOR
.35 mm (22)	salmon (pink)
.50 mm (20)	salmon (pink)
.80 mm (18)	salmon (pink)
1.0 mm (16)	blue
2.0 mm (14)	blue
3.0 mm (12)	yellow
5.0 mm (10)	yellow

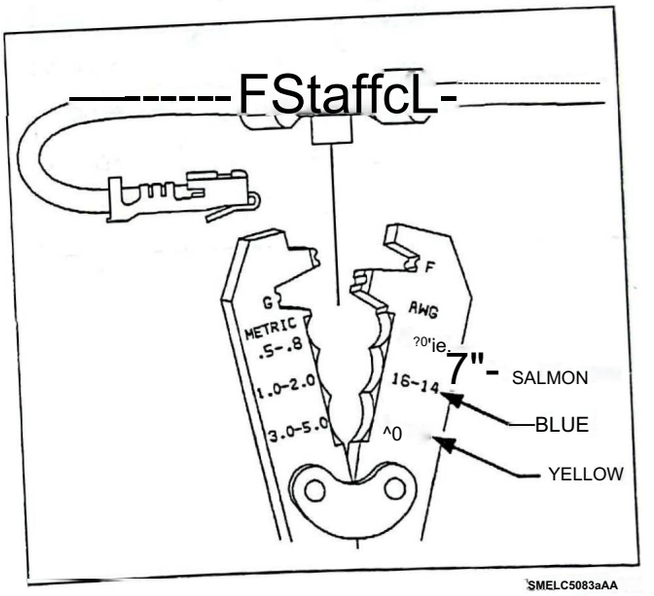

A Position stripped ends in sleeve until wires hi t the stop in the center of the splice.

5- Hand crimp using the approved ^P'S^ure Gently tug on wires to make sure they before applying heat to them.

CAUTION: DO NOT USE MATCH OR OPEN FLAME TO APPLY HEAT TO SEAL.

6. Apply h$_{ea}$t using Ultratorch® or some other *devic* , e. heating to 175'C (347°F) until glue Dow s around edge of sleeve.
7. Check for continuity.
8. insert the terminal into the connector- Che by gently ck to make sure the terminal lock tab is e gg a ed Egging on the wire.
9. Replace any terminal position assurance (TPA) devices.

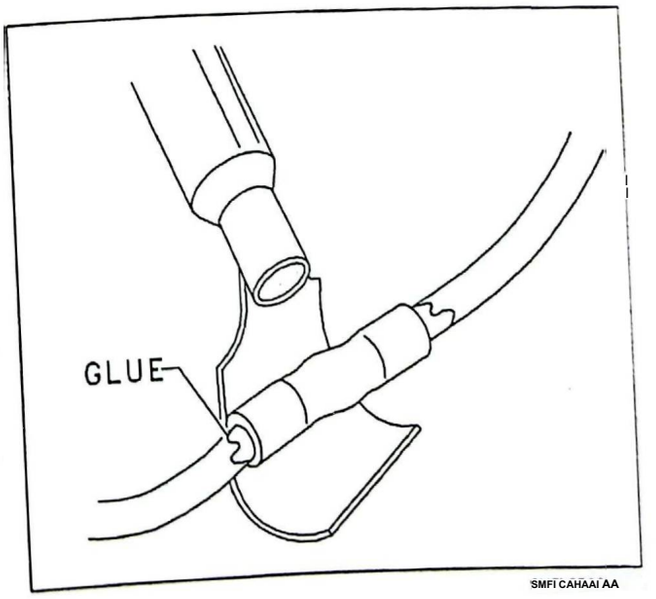

fcs CamScanner

IMPORTANT: The salmon splice can be used on the .35 (22 gage) wire if the following additional steps are taken:

10. Remove 19 mm (3/4 in.) of insulation.
11. Bend the stripped portion in half to double the thickness.
12. Twist the stripped, doubled wire and insert into the splice sleeve.

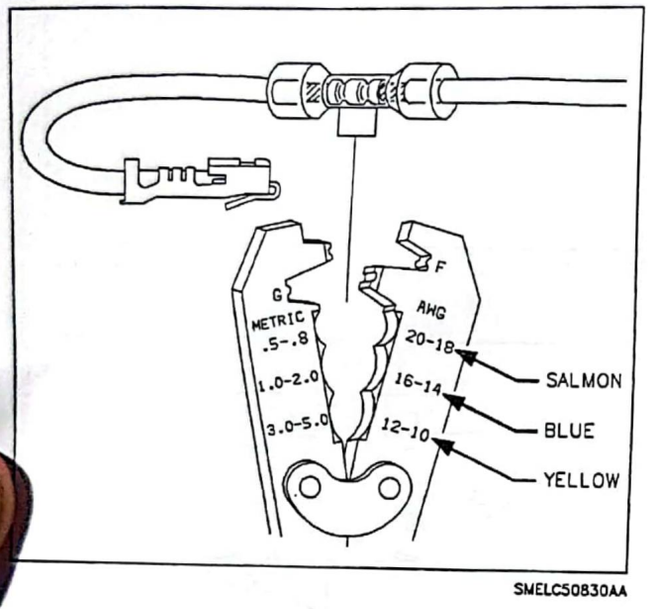

SMELC50830AA

PULL-TO-SEAT CONNECTORS

TERMINAL REMOVAL

IMPORTANT: Pull-to-seat connectors repair kits are available through Saturn Service Parts. The repair kits include the connector with terminals attached to a short length of wire and crimp and seal splices. Use these kits if the pull-to-seat connector needs replacement.

1. Remove any terminal position assurance (TPA) device.
2. Grasp the lead and pull the terminal to the forward most position. Hold the lead in this stop position.
3. Insert the lock release tool into the front of the terminal cavity. A safety pin may be used for the small Metri-pack 150 series pull-to-seat terminal.
4. Depress the lock tang to unseat the terminal. Never use force to remove a terminal from a connector.
5. Push the wire and the terminal out of the connector cavity.

CUT LEAD INSTALLATION

1. Insert the wire through the connector and seat the terminal in the connector. Check to make sure the lock tab is engaged.
2. Remove insulation from the end of the cut lead and the harness. Recommended strip length is 9.5 mm (3/8 in.). Caution must be used to prevent cutting the wire strands.
3. Determine proper sleeve for gage wire from the following chart:

WIRE SIZE GAGE	■35 .5 .8 22 20 18	1.0 2.0 16 14	3.0 ^f 12 JJL
Part Number*			
12089189 (217670)	**-Salmon-**		
12089190 (217671)		**-Blue-**	
12089191 (217672)			-Yellow

* Part of Saturn Electrical Tool Kit.

CamScanner

4 Position stripped ends in sleeve until wires hit the top in the center of the splice.

5. Hand crimp using the approved crimping tool. Gently tug on wires to make sure they are secure before applying heat to them.

CAUTION: DO NOT USE MATCH OR OPEN FLAME TO APPLY HEAT TO SEAL.

6. Apply heat using Ultratorch® or some other device, heating to 175°C (347°F) until glue flows around edges of sleeve.

IMPORTANT: The salmon splice can be used on the .35 (22 gage) wire if the following additional steps are taken:

7. Remove 19 mm (3/4 in.) of insulation.

8. Bend the stripped portion in half to double the thickness.

9. Twist the stripped, doubled wire and insert into the splice sleeve.

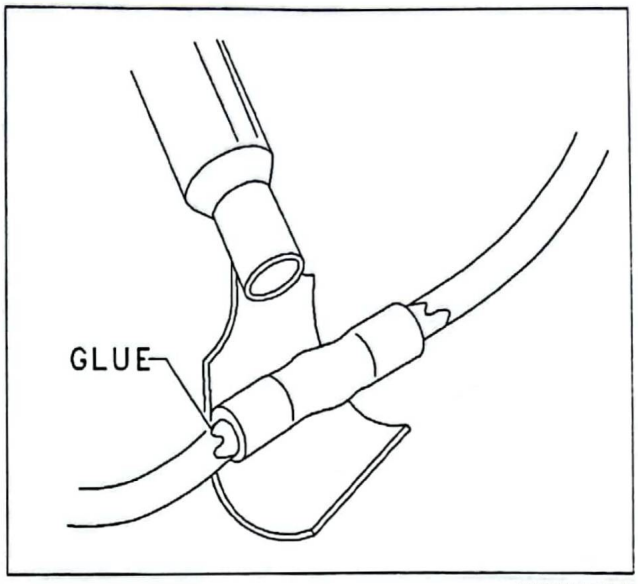

SMELC50831AA

CamScanner

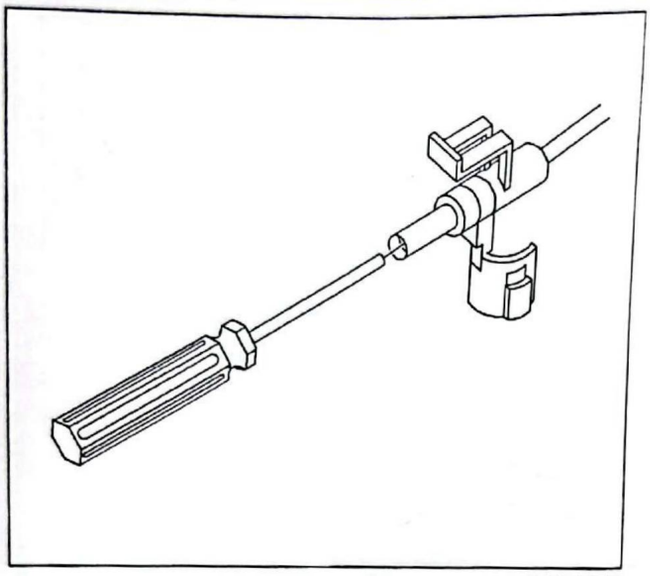

SMELC50833AA

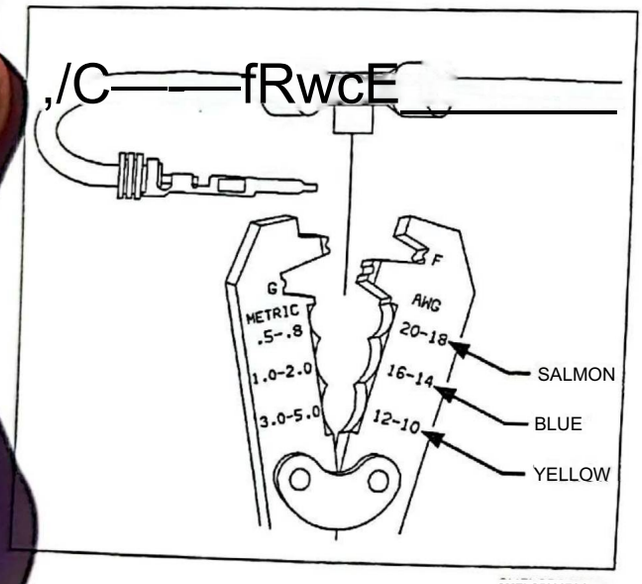

SMELC50967AA

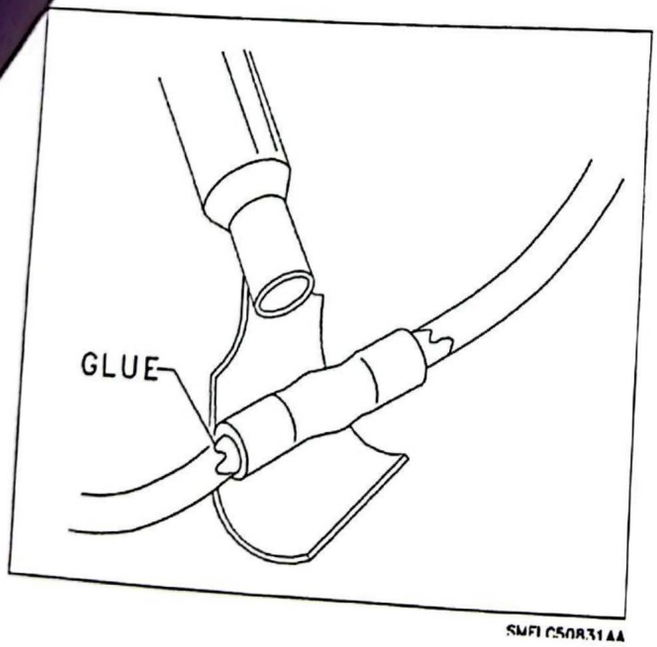

SMELC50831AA

WEATHER PACK CONNECTORS

TERMINAL REMOVAL

1. Remove any terminal position assurance (TPA) devices.
2. Insert the weather pack removal tool into the front of the terminal cavity.

CUT LEAD INSTALLATION

1. Put connector seal on wire and strip approximately 9.5 mm (3/8 in.) off the wire. Caution must be used to prevent cutting the wire strands.
2. Remove insulation from the end of the cut lead and the harness. Recommended strip length is 9.5 mm (3/8 in.). Caution must be used to prevent cutting the wire strands.
3. Determine proper sleeve for gage wire from the following chart:

WIRE SIZE GAGE	.35 .5 .8 22 20 18	1.0 2.0 16 14	3.0 5.0 12 10
Part Number*			
12089189 (217670)	**-Salmon-**		
12089190 (217671)		**-Blue-**	
12089191 (217672)			**-Yellow-**

* Part of Saturn Electrical Tool Kit.

4. Position stripped ends in sleeve until wires hit the stop in the center of the splice.
5. Hand crimp using the approved crimping tool. Gently tug on wires to make sure they are secure before applying heat.

CAUTION: DO NOT USE MATCH OR OPEN FLAME TO APPLY HEAT TO SEAL.

6. Apply heat using Ultratorch® or some other device, heating to 175'C (347 *F) until glue flows around edges of sleeve.
7. Check for continuity.
8. Insert the terminal into the connector. Check to make sure the terminal lock tab is engaged by gently tugging on the wire.
9. Replace any terminal position assurance (TPA) devices.

IMPORTANT: The salmon splice can be used on the t^k .5 (22 gage) wire if the a en: following additional steps are

10. Remove 19 mm (3/4 in.) of insulation.
11. Bend the stripped portion in half to double the thickness.
12. Twist the stripped, doubled wire and insert into the splice sleeve.

CamScanner

POWER DISTRIBUTION

GENERAL DESCRIPTION

kSIR SYSTEM

Refer to “Disabling and Enabling the SIR System" in the front of this manual.

RUN1/RUN2 CIRCUIT OPERATION

Conventional vehicles use a sw itch to control power-up of the electrical system, commonly known as an ignition switch. The EVi uses a different system to control power-up of the electrical system. The control used by the EV] is known as the key pad, located in the RUN/LOCK SHIFTER ASSEMBLY (RSA). The operator enters a valid key code into the key pad and depresses RUN. The ^\SA pulls the RUN1 and RUN2 command lines “low”, sending a command to the power moding module. The power moding module receives the command and powers-up the vehicles electrical system.

The power moding module, located in the RH junction block operates very similar to a relay, a device well known in the automotive industry today. The power moding module receives a “low” signal from the RSA similar to the “Control” side of a relay. After the signal is received the module then switches and supplies RUN1 and RUN2 voltage similar to the “Load” side of a relay.

HUN] is the 12 volt supply for low voltage components and RUN2 is the 12 volt supply that controls the high voltage components. During power-up if there is a high voitage system problem, the battery pack control module (BPM) will identify the subsystem and set a diagnostic trouble code (DTC) along with sending a serial data message to the RSA disabling RUN 2. If a high voltage '-vstem problem is identified by the BPM during a drive ^cie. RUN 2 will be disabled after the vehicle is bcJou] km/h.

VEHICLE “WAKE-UP COMMAND” AND “RUN 1/WAKE-UP” DURING CHARGING

When the charged coupler is inserted into the charge kCtptaclc the charge receptacle sends a wake-up ^nund on the WAKE-UP COMMAND line to the battery pack module (BPM) for 1.25 seconds. After (he command is received, the BPM then wakes-up for 3 0 seconds Mud sends out its own command on the same WAKE-UP line 10 the heat pump thermal control module (Iji CM). TCK HTCM wakes-up and continues to hold the WAKE-UP COMMAND line is an input to the power M ang module (located in the RH junction block).

When the Hi IC ho ding module sees the WAKE-UP line ga”, this &uPpbes power to cooling sptem components allowing IAc to<J'ln g system to function during charge events.

PERIODIC WAKE-UP

The HTCM will send a wake-up command on the WAKE-UP COMMAND line to the BPM every six hours, the BPM will then wake-up to check the state of the auxiliary battery. If the auxiliary battery has a low state of charge the BPM will command the accessory A/C and D/C power module (APM) to wake-up and charge the auxiliary battery for fifteen minutes. If the auxiliary battery state of charge is within the acceptable parameters the HTCM and BPM will go back to sleep.

HOW TO USE THIS SECTION OF THE MANUAL

The first part of this section provides:

- A general description of the type of circuits.
- Explain the types of protection devices and junctions blocks (fuse blocks).
- List the types of bulbs and fuses.

The second part of this section provides:

- Clean and simple electrical circuit schematics
- A graphic overview of the circuit shown on the schematic
- Trouble trees for troubleshooting an electrical problem and diagnosis information.

NOTE: Diagnosis follows some of the following sub-system schematics. If the diagnosis for that particular sub-system is not included in this section, it can be found in the appropriate service manual sections.

- General description of the circuit.

CIRCUITS

Automotive circuits are divided into three categories: power, signal (control or data), and ground circuits.

POWER CIRCUITS

Power circuits are classified as those cables that provide battery or mechanically switched battery voltages to electrical loads. Some examples of these circuits are:

- Runl circuits - 41A,41B, 41C
- Auxiliary Battery circuits - 1A, IB, IC
- Headlamp circuits - 142A, 342A
- Defog circuits - 1342B, 1242B

SIGNAL (CONTROL OR DATA) CIRCUITS

Signal circuits are classified as those cables that provide signal voltages from one electrical device to another device. Examples of these signals and devices arc:

- Power w indow switch to junction block 166,167.
- Instrument panel cluster to telltale bank - 30.-\, 2029,1084,2019

Signal wires arc usually current limited by one of the devices that is attached to the wire. In the above examples

CamScanner

the junction block and instrument panel cluster (IPC) fuel gage limit the current in these circuits through the use of electronics (pull up or pull down resistors, transistors, etc.). Signal wire current levels for short circuit conditions normally do not exceed operating levels by an appreciable amount.

GROUND CIRCUITS

Ground circuits are classified as those circuits that provide a ground (zero voltage level with reference to the batteiy) to the electrical system. Examples of these circuits are:

- Chassis ground - 350A, 350B, 35C
- PCM ground — 450P, 450R

Since ground circuits are already *shorted* to ground, the current level is based on the electrical load resistance. Like signal circuits, ground circuit cable selection is a function of operating current.

PROTECTION DEVICES

Circuit protection devices such as a maxifuse or a positive temperature coefficient (PTC) devices are utilized to protect the electrical system in case of an electrical short. The purpose of circuit protection is to protect the wiring assembly during normal operation and overload conditions. An overload occurs if too much current is flowing through a wire or device. This may occur as a result of a short to ground, voltage or overloaded components the short circuit could be caused by a pinched or cut wire or an internal device short circuit, such as an electronic module failure.

The primary intent of circuit protection is to protect the wiring assembly, and not the load at the end of the assembly. In some cases, load protection can also be accomplished at the same time.

For example, if an electronic module short circuits, the circuit protection device will assure minimum degradation to the wiring assembly, but will not necessarily prevent damage to the module. The EVi uses two types of circuit protection devices, the first being maxifuses and the second being PTCs. Hit maxifuses protect the power distribution part of the wiring harness and the PTCs protect the part of the wiring harness that feeds all the sub system components PTCs arc not replaceable separately. If a PTC is found to be defective the junction block that contains the PTC must be replaced as an assembly.

POSITIVE TEMPERATURE COEFFICIENTS (PTC)

Bits MC CJJCUII protection deuce* very Mintlar to circuit breaker* lire difference being, circuit breaker* arc deMgnrd to open in *a* high cuncnl iituation such a* circuit overload* or a *horl to ground. In a PTC, a* circuit overload* occur the material in the |'TC heat* up and increases in resistance. The higher the current, the higher the temperature and resistance of the PTC, until the current flow is limited to a safe level; therefore, protecting the wiring in the vehicle.

After the corrective action has been taken to repair the high cunent condition the PTC will return to its normal state automatically after it cools down. In some cases battery voltage will need to be removed from the circuit in order for the PTC to return to its normal state, depending on the in rush of that sub-system during normal operation. PTC resistance values are very low similar to a fuse, thus not effecting circuit operation. After a PTC has been "tripped" or the resistance is very high a small amount of current will be flowing in the circuit, unlike a blown fuse or circuit breaker that has been "tripped" where there is no current flowing. If a PTC does not return to its normal state after the repair, remove battery voltage from the circuit it insure the circuit in rush is not keeping the PTC in the "tripped" state.

MAXIFUSES

The maxifuse is a relatively new circuit protection device that is designed to be a serviceable replacement for the fusible link cables previously used in the automotive industry.

It operates very similar to a mini fused used in conventional vehicles except the current carrying capabilities are much higher. Maxifuses are available in 20—60 ratings. The blow characteristics have been designed to match cable temperature cures for overload conditions. All maxifuses are located underhood in the TH and RH maxifuse blocks.

PARASITIC LOADS

Small current drains called parasitic loads constantly dra' current from the auxiliary battery when the key pad is in the OFF mode. Normal parasitic draw's are from the devices in the vehicle that require constant power to retain memory such as the clock, propulsion control module (PCM), brake torque control module (BTCM). Depending on auxiliary battery state of charge parasitic loads can discharge the auxiliary' battery when the vehicle is not in use for long periods of time, this would be considered normal.

High parasitic load will discharge the auxiliary' battery at a much faster rate and may be fast enough overnight. High parasitic conditions can be caused from added equipment such as cellular phones that have been left On, radar detectors, alarm systems, etc. These types of things should be looked at first. If there is no added equipment to the vehicle and the vehicle is suspected to have high parasitic. perform the following "Parasitic Load Test. "

CamScanner

PARASITIC LOAD TEST

NOTICE: The normal parasitic load on the EVI is proximently **10mA to 15mA. If the draw is over 10A the DVM may be damaged. To prevent this situation make sure** the kt) pad **LOCK mode, Retained Accessory Power is not active and all accessories are Off while** performing **this test.**

1. Remove the 60 amp maxifuse located in the negative auxiliary battery cable.
2. Install maxifuse connector of the parasitic load tool EV9715Z, into the inline fuse holder of the negative auxiliary' battery cable.
3. Connect DVM EV 9712Z to parasitic load tool using the A and COM jacks and place the meter on the mA\A scale.
4. Wait 60 seconds and place the switch on the parasitic load tool to the "Monitor" position. Hold the switch until the reading is recorded.
   - If the amperage is below 25 mA, refer to "Battery and Charging System" section in the service manual.
   - If the amperage is above 25 mA there is a high parasitic draw. Continue to step 5.
5. Remove the maxifuse connector on the parasitic load tool from the auxiliary battery ground cable (60 amp. maxifuse holder). Reinstall 60 amp. maxifuse.
6. After the all obvious causes have been checked (something jammed in the power outlet, interior lighting on, etc.), make sure all accessories are Off. Remove the right hand or left hand maxifuse cover. Remove one fuse at a time, placing the parasitic tool in the open fuse location and place it in the "Monitor" position.
   - If the draw is over 25 mA, this is the circuit with the high parasitic load.
   - If the amperage is below 25 mA test all the underhood maxifuses until you find the circuit with the high parasitic load (above 25 mA)-
7. After the circuit has been identified, start removing components on that circuit until the draw has been located. If the draw still exists after all components are removed from that circuit, there must be a grounded wire (a resistance short) causing the draw, Using the schematics for that circuit, locate damaged wire and repair as necessary.
8. Recheck the overall parasitic draw after repair has been made to ensure the problem has been corrected.

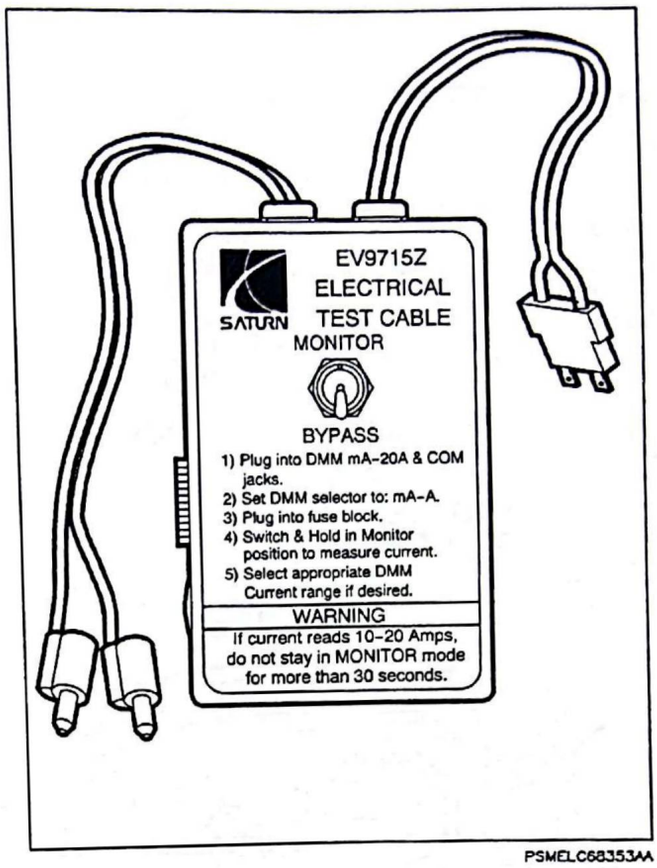
EV9715Z
ELECTRICAL
TEST CABLE
SATURN
MONITOR
BYPASS
1) Plug into DMM mA-20A & COM jacks.
2) Set DMM selector to: mA-A.
3) Plug into fuse block.
4) Switch & Hold in Monitor position to measure current.
5) Select appropriate DMM Current range if desired.
WARNING
If current reads 10-20 Amps, do not stay in MONITOR mode for more than 30 seconds.
PSMELC68353AA

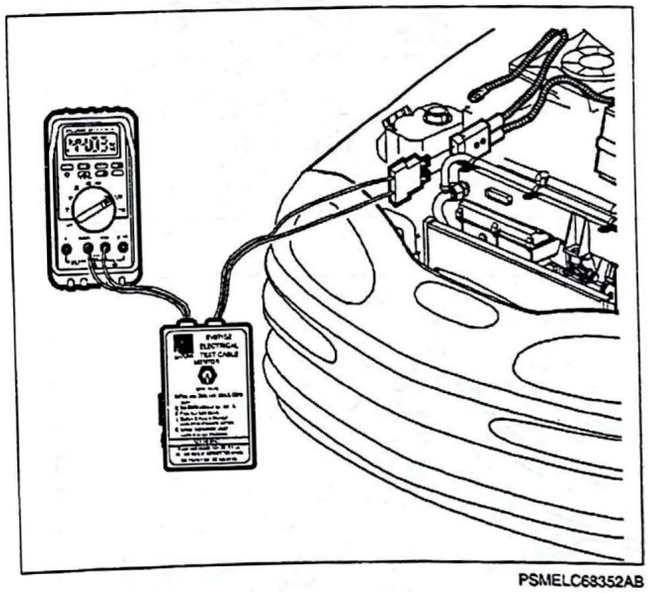
PSMELC68352AB

CamScanner

JUNCTION BLOCKS

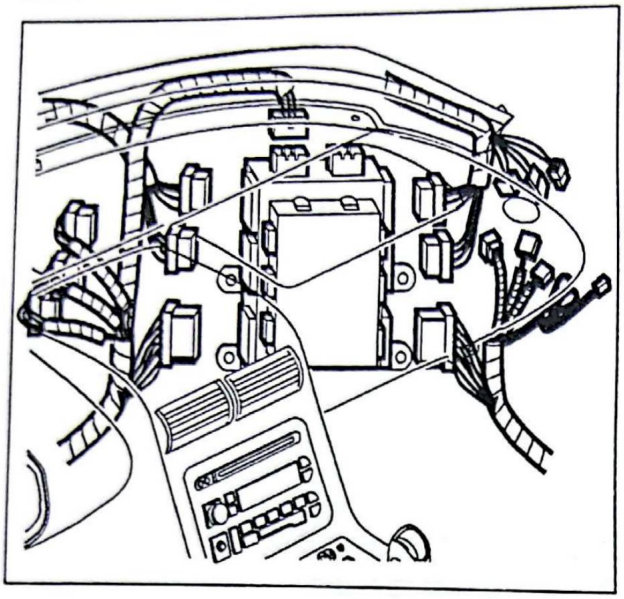

PSMELC68286AA

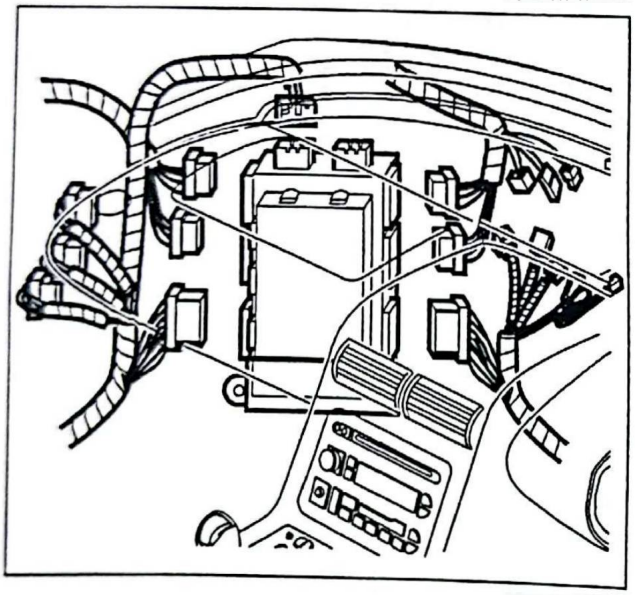

PSMELC6S285AA

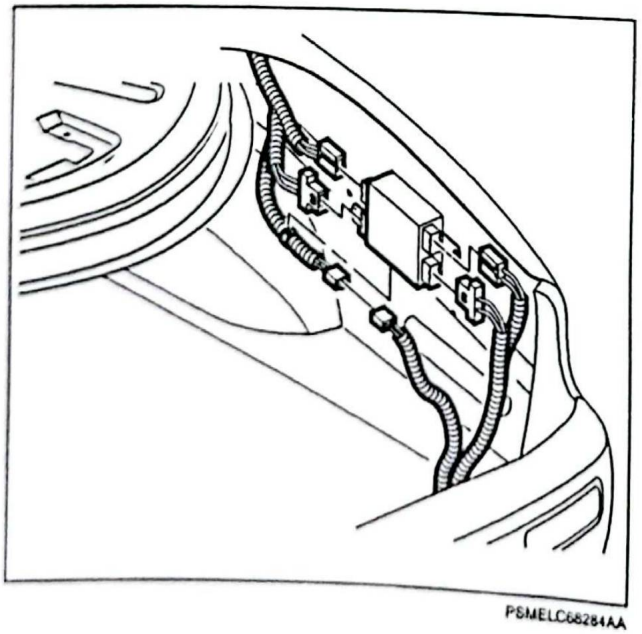

PSMELC68284AA

The power and ground distribution system used on EVi incorporates junction blocks to help remove complexity from the wiring assemblies and to provide central locations for circuit protection devices and relays.

With the advances in automotive electronics over the past few years, the size and complexity of wiring harnesses has increased. The use of junction blocks helps to reduce the complexity while also reducing cost and mass. This is accomplished by reducing the number of cut leads, sealed inline connectors and sealed splices (for underhood applications), and the reduction in the bundle size of wiring harnesses.

The EVi has three junction blocks.

Right hand junction block (RHJB), located in the passenger compartment, under right side of I/P, attached to front of dash.

Left hand juncton block (LHJB) located in the passenger compartment under the left side of I/P attached to front of dash.

Trunk junction block (TJB), located in the trunk compartment attached to the right side under carpet.

These junction blocks provide a home for relays, positive temperature coefficient (PTC's) and electronic modules also providing a central ground point, using case gr°un eliminating the need for serparate connections and mounting attachments. This design also provides a cen connection point for the major harnesses in the vehic e.

CamScanner

FUSE BLOCK DETAILS

UNDERHOOD FUSE BLOCK #1

FUSE	AMPERAGE RATING	FUSED CIRCUITS	PAGE
REG FAN	20	Cigar/DLC Fuse, Radio Fuse, Courtesy Fuse, HI Cooling Fan Relay	
	20	Horn Fuse, CNTL Fuse, BLWR Fan Fuse, HI CL PMP Fuse	
FRONT BRAKE	20	ABS Front Brake Enable Relay	
BRAKE REAR	20	ABS Rear Brake Enable Relay	
	20	LH HDLP LO Fuse, LH HDLP HI Fuse, LWDO Fuse, Stop Fuse	
	20	RH HDLP LO Fuse, FH HDLP HI Fuse, RWDO Fuse, Run #2 CNTL Fuse, I/P Electrical	
	20	I/P Relay Center, B-U LP Fuse, DR Lock/Mir Fuse, Trailering Fuse	
DEFOG	20	RR Defog Fuse, LR Defog Fuse	

UNDERHOOD FUSE BLOCK #2

FUSE	AMPERAGE RATING	FUSED CIRCUITS	PAGE
I---------	20	LO Cooling Fan Relay	
HVAC	20	LO CL PMP Fuse, REV VLV Fuse	
	20	Hazard Fuse, Oil PMP Fuse, Charge/Relay Fuse	

dRCUIT AND CAVITY LOCATION

U___UNDERHOOD FUSE BLOCK #1				UNDERHOOD FUSE BLOCK #1			
^AVITY	CIRCUIT	CAVITY	CIRCUIT	CAVITY	CIRCUIT	CAVITY	CIRCUIT
Ti	342	B1	REGULATED BATTERY	A1	4	B1	REGULATED BATTERY
A2	442	B2		A2	142	B2	
A3	542	B3		A3	242	B3	
A4	642	B4	1	A4		B4	3
A5	742	B5		A5		B5	
AB	842	B6		A6		B6	
A7	1042	B7		A7		B7	
A8	1142	B8		AB		B8	

CamScanner

ELECTRICAL CIRCUITS

CIRCUIT SCHEMATICS

The circuit schematics show the circuits and components that are covered in that particular system. By eliminating circuits and components not related to the system being covered, the circuit schematics are greatly simplified.

Circuit schematics provide a description of how a circuit is provided voltage, what the cunent path is to the components, and how the circuit is grounded.

Each wiring schematic is identified by circuit number, size (in mm) and color. Wire colors arc shown in the abbreviated form.

On the facing page is a schematic legend. This legend explains what is shown on the electrical schematic. It is important to realize that no attempt is made to represent components, and wiring as they physically appear on the vehicle. For example, a four-foot length of wire is treated no differently in a schematic from one which is a few inches long.

DIAGNOSIS

Before beginning any diagnosis, there are several important steps that should be taken:

Verify the Problem

Operate the system and list symptoms in order to:

- Check the accuracy and completeness of the concern.
- Learn more what might give a clue to the nature and location of the problem.
- Analyze what parts of the system are working.

Check the Circuit Schematic

Refer to the circuit schematic for the concern. and some idea of where the problem

The circuit schematics are designated to make it easy to identify common points in circuits. This knowledge can help narrow the problem to a specific area. For example, if several circuits fail at the same time check for a common volt r groun co tion. If part of a circuit check partX does no! woT between the ^art that works and the

Cause-to-Complaint Charts

Refer to the Cause-to-Complaint charts located after the graphic overview. This chart lists the types of problems that may be encountered in an electrical circuit and the possible fix. The chart will then refer you to

Oitao^sfoP'Usetlweltaicdsctatacatongwillnhecfagn Missi.pstohe'lpinttoubkshooting.d1*00116*1

Graphic Overview

Graphic overview illustrations are shown for each circuit. These illustrations can be used to help locate a component and/or connector while diagnosing.

General Description

The general description, describes how the circuit ooeratec interact to make a complete circuit. the circuit operates and how the components

Connector Views

At the back of this manual, connector views are shown ThA. vehicle. These views can be used to help show what th. show all of the connectors used in the connector is located. connector looks like and where a particular terminal in the

Make the Repair

Repair the problem circuit as described in the "Elertrimi r u. o. Electrical Trouble Shooting" section of this service manual.

Verify that the Repair is Complete

Operate the system and check that the repair has remove ,11. symptoms, and also has not caused any new symptoms.

CamScanner

SUB-SYSTEM SCHEMATICS

NOTE: Diagnosis follows some of the following sub-system schematics. If the diagnosis for that particular sub-system is not included in this section, it can be found in the appropriate service manual sections.

CamScanner

ACCESSORY AC AND DC POWER MODULE

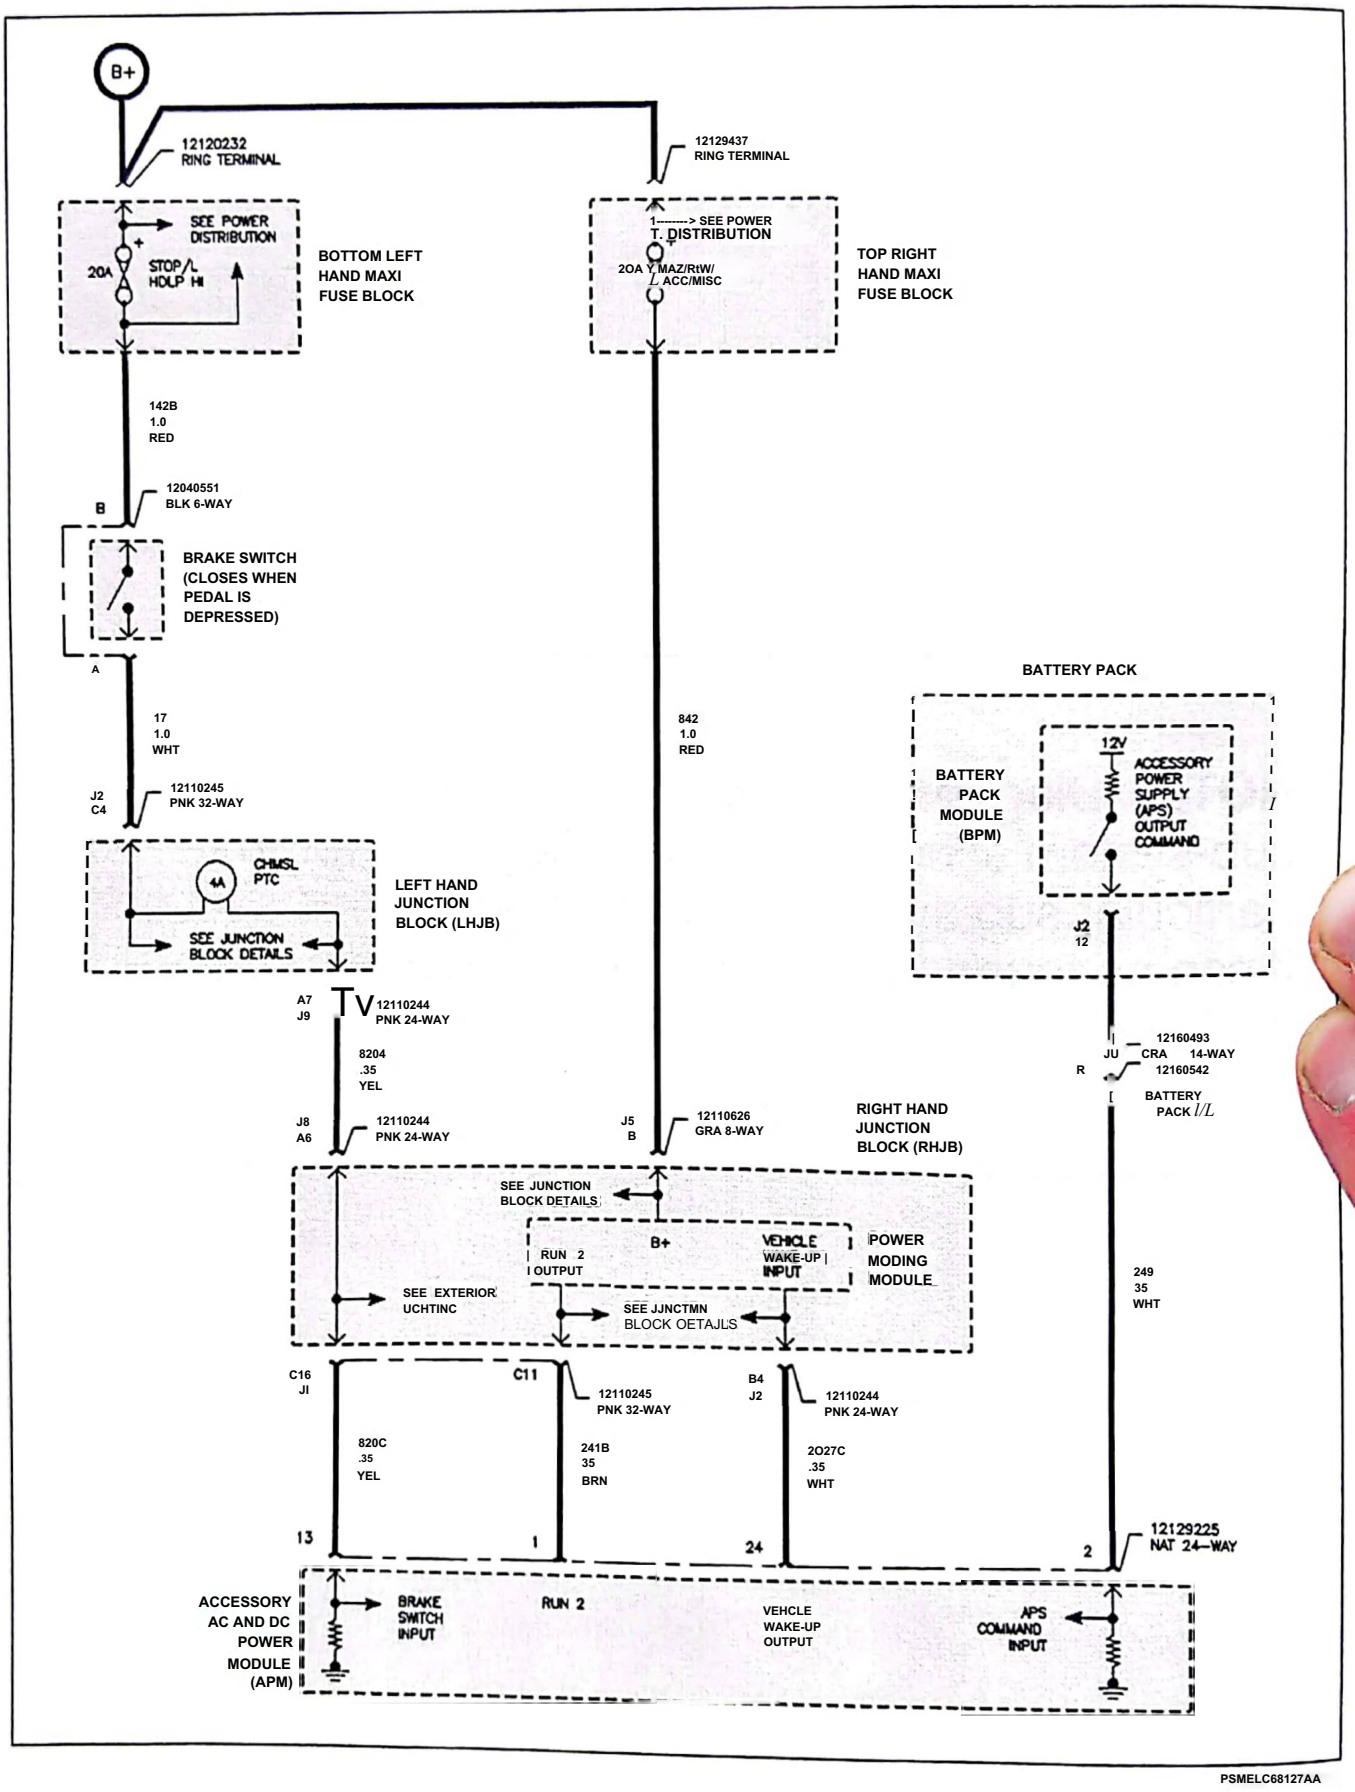

PSMELC68127AA

CamScanner

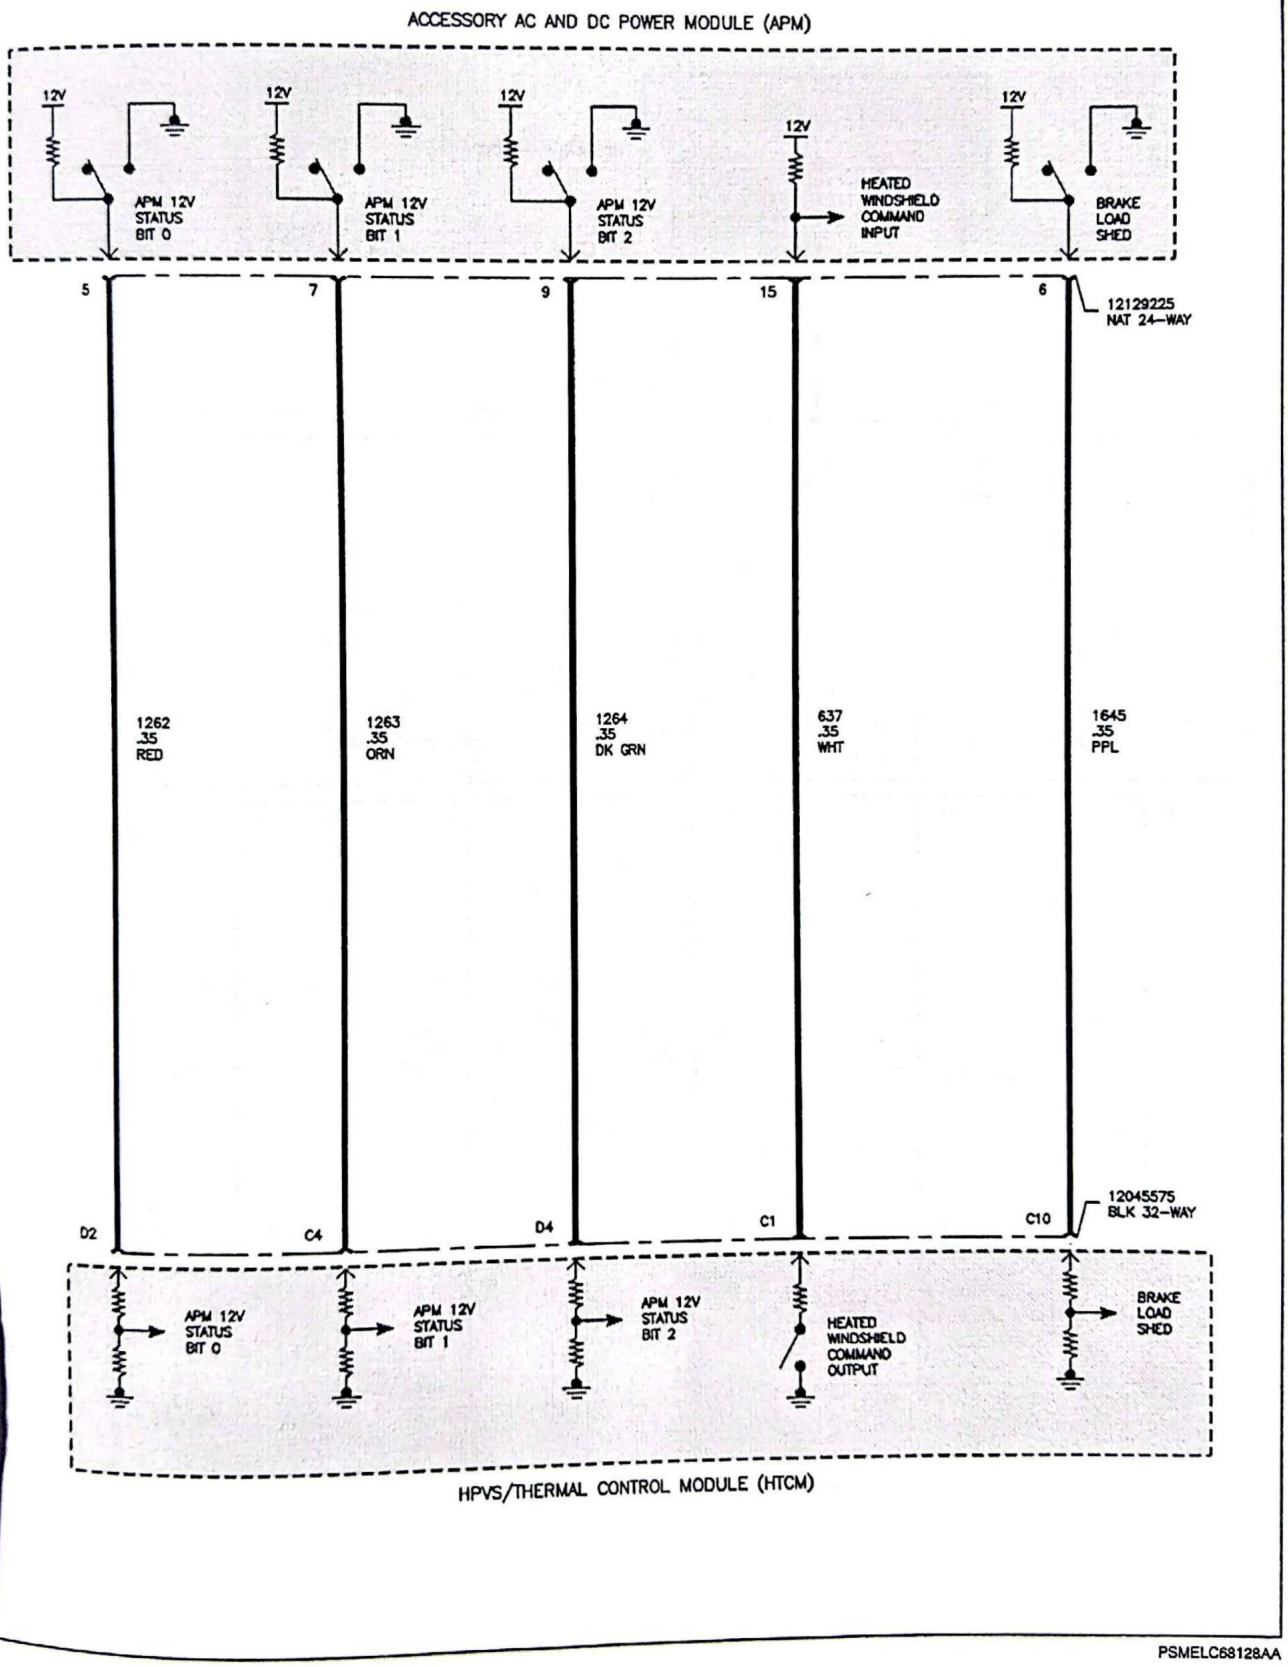

PSMELC68128AA

CamScanner

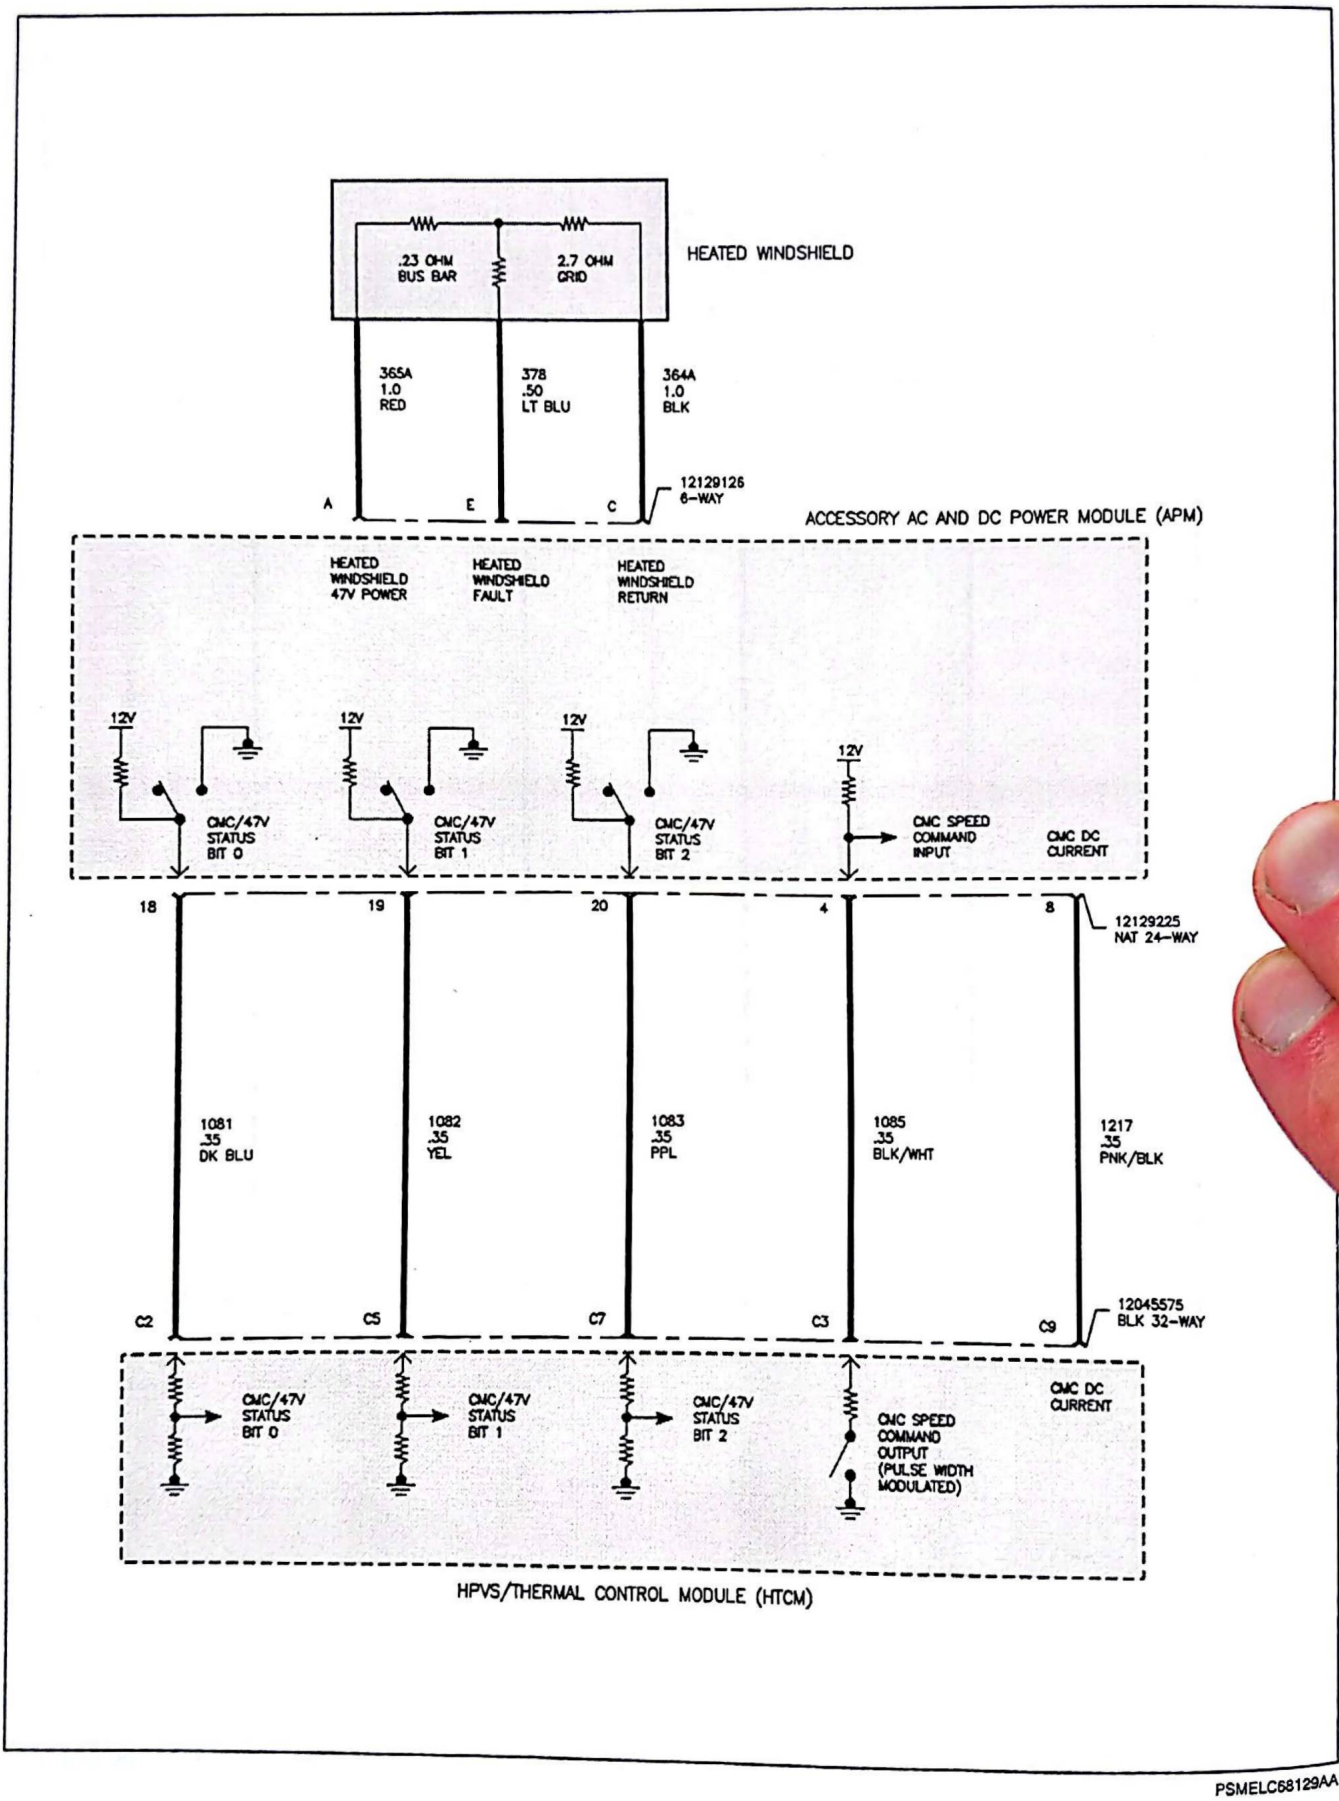

PSMELC68129AA

CamScanner

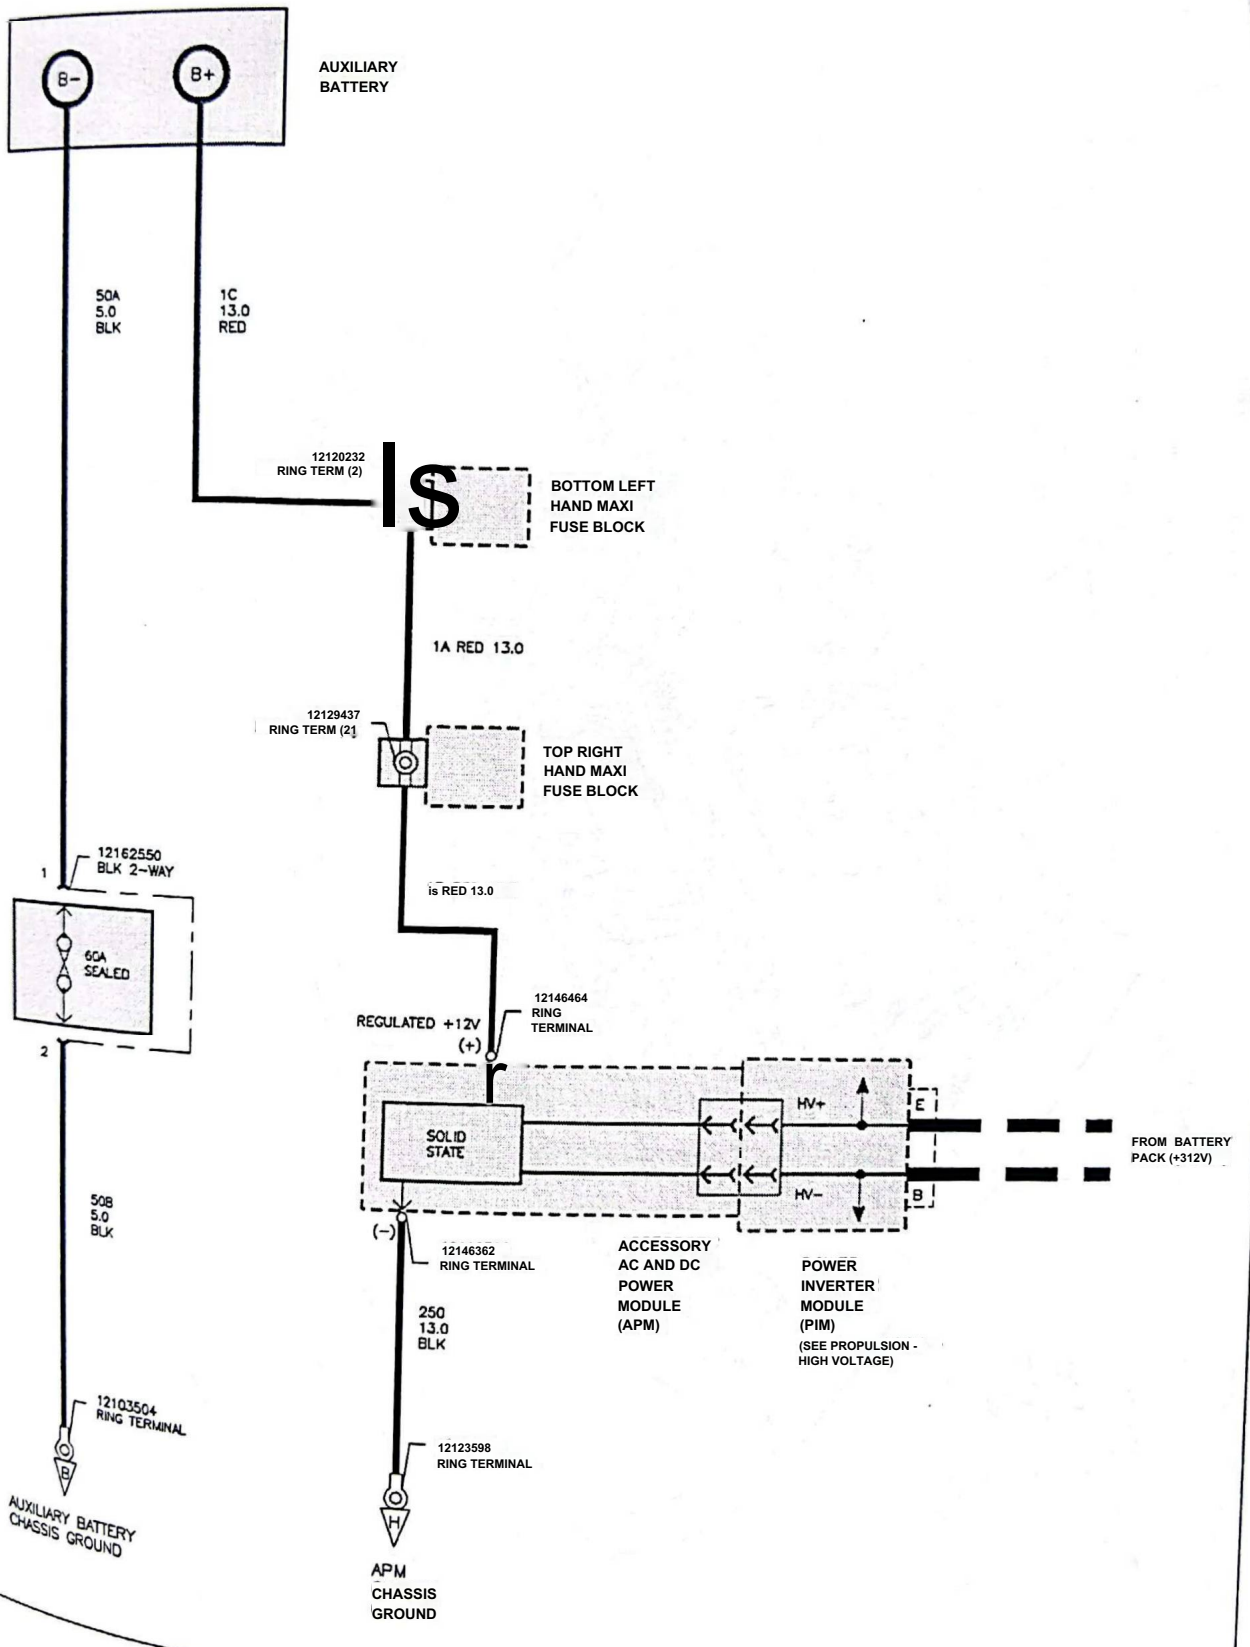

PSMELC68130AB

ACCESSORY AC AND DC POWER MODULE COMPONENT LOCATION VIEW

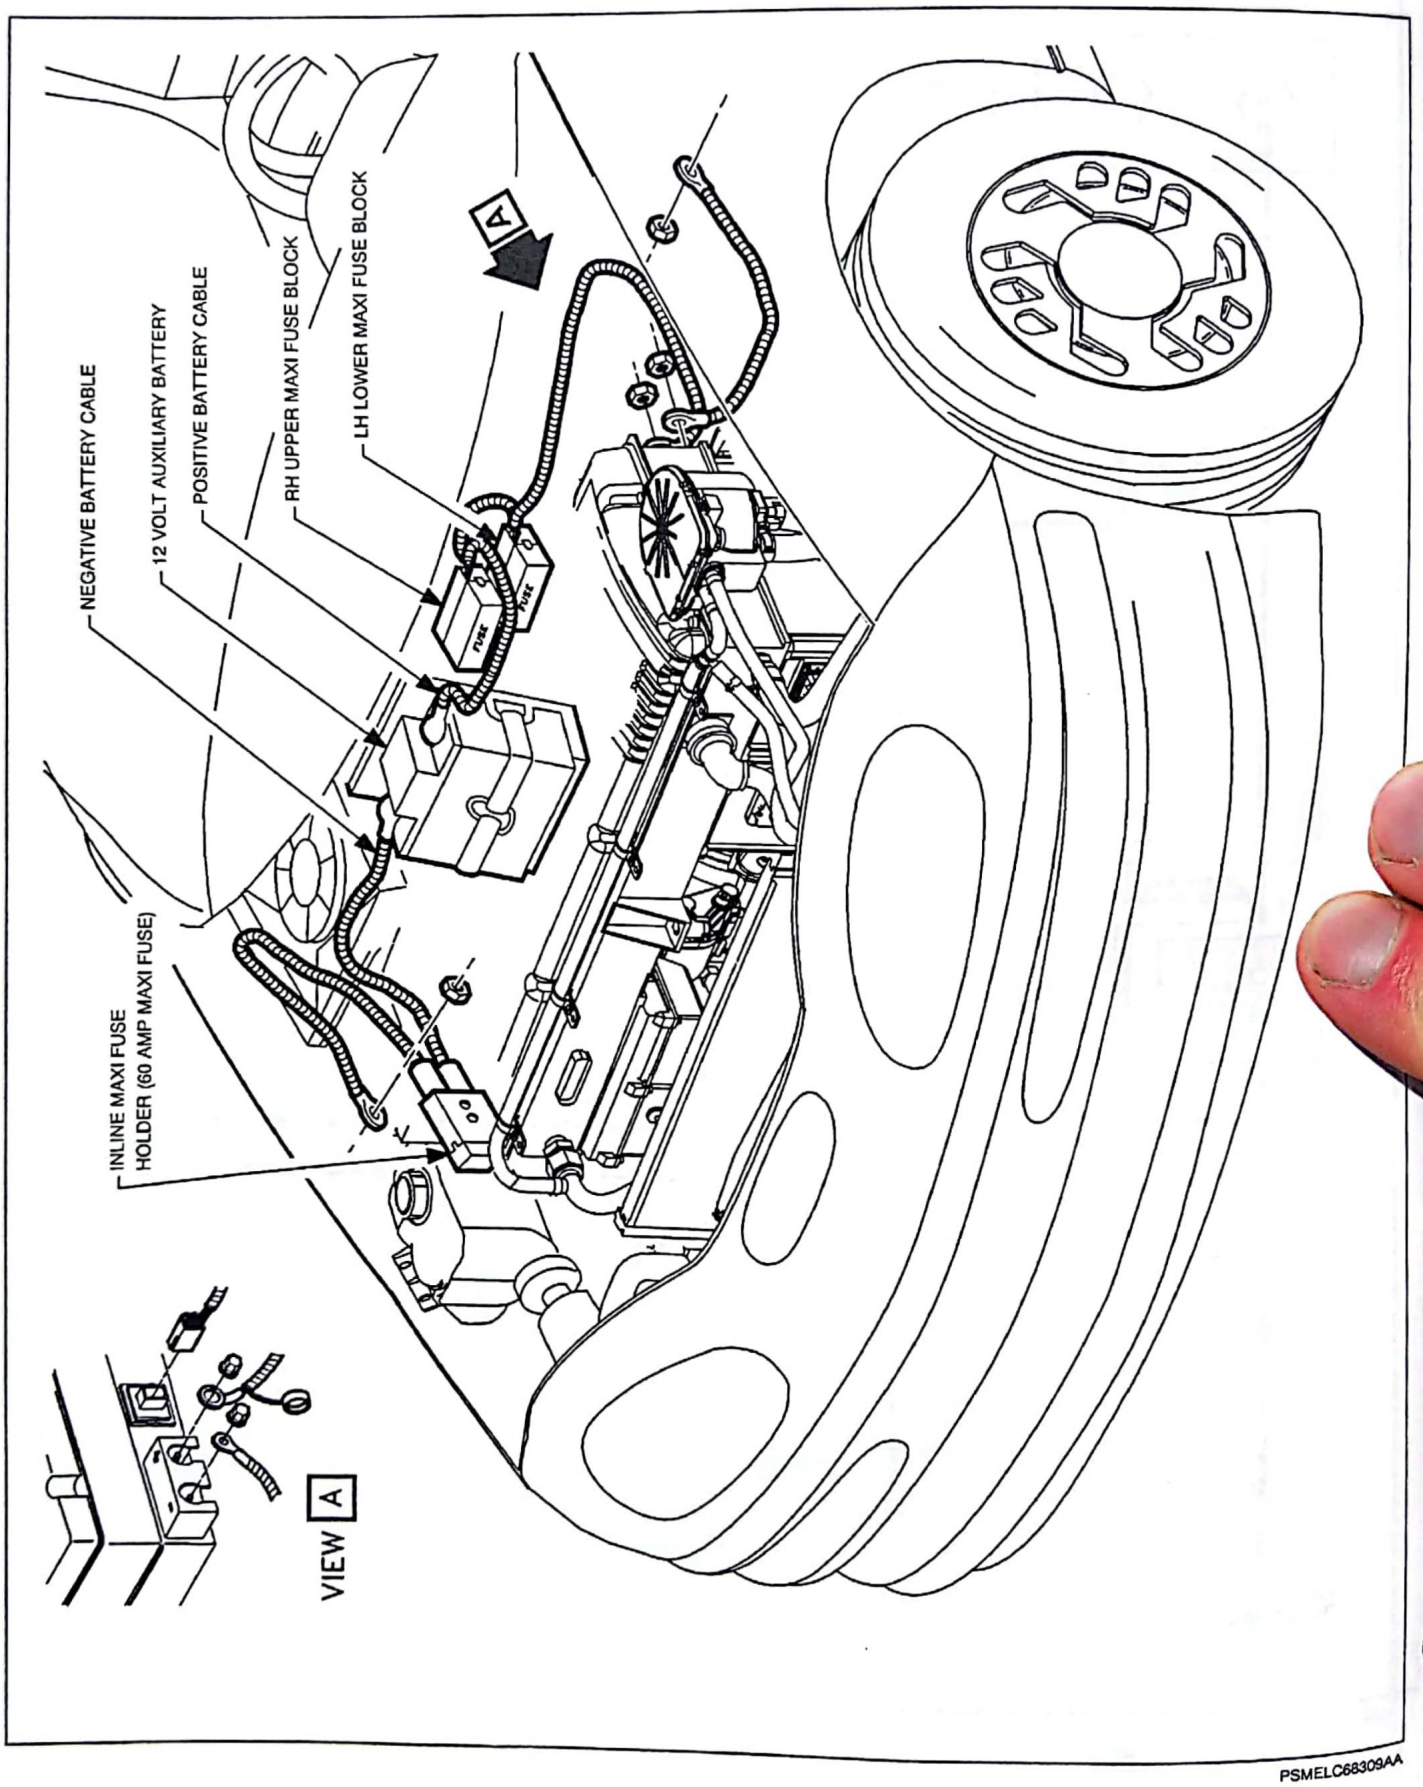

NOTES

CamScanner

BACKUP LAMPS

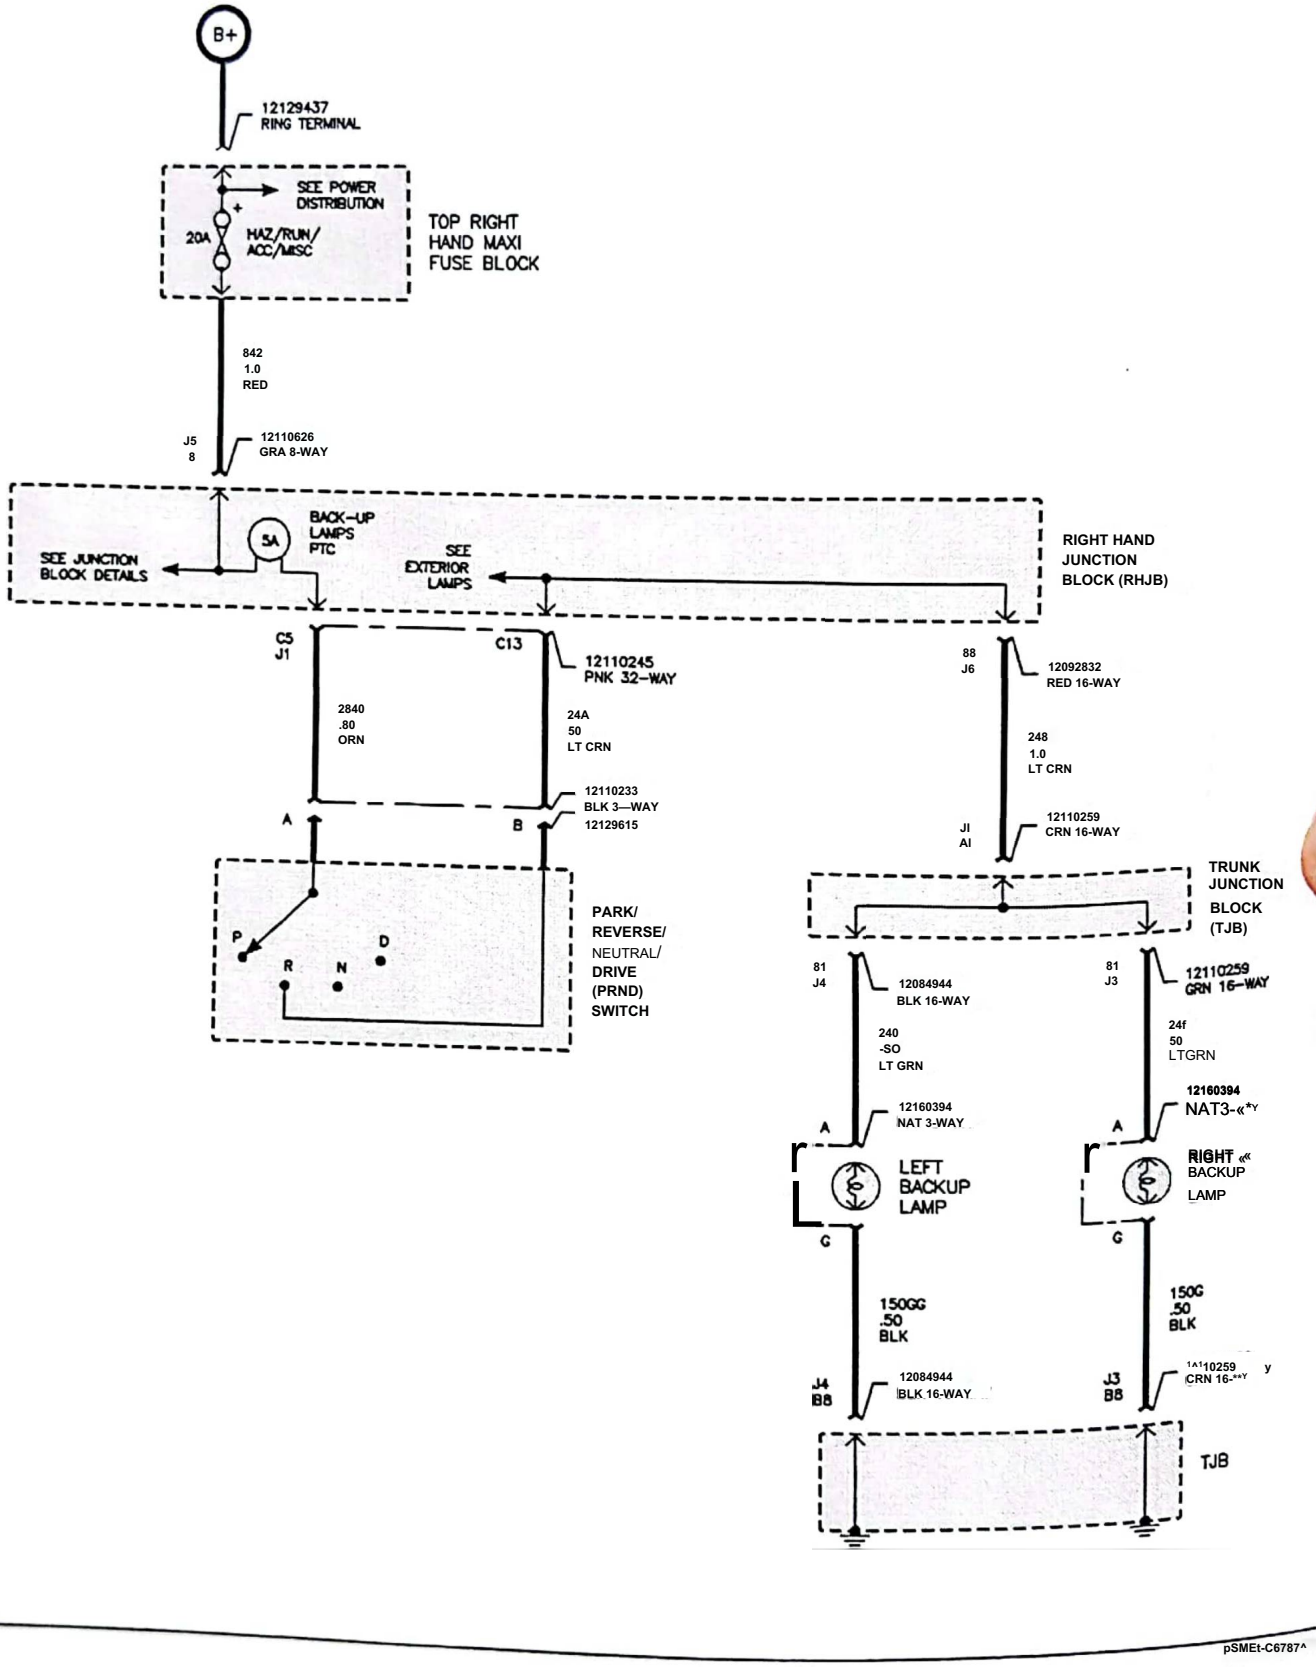

BACKUP LAMPS COMPONENT LOCATION

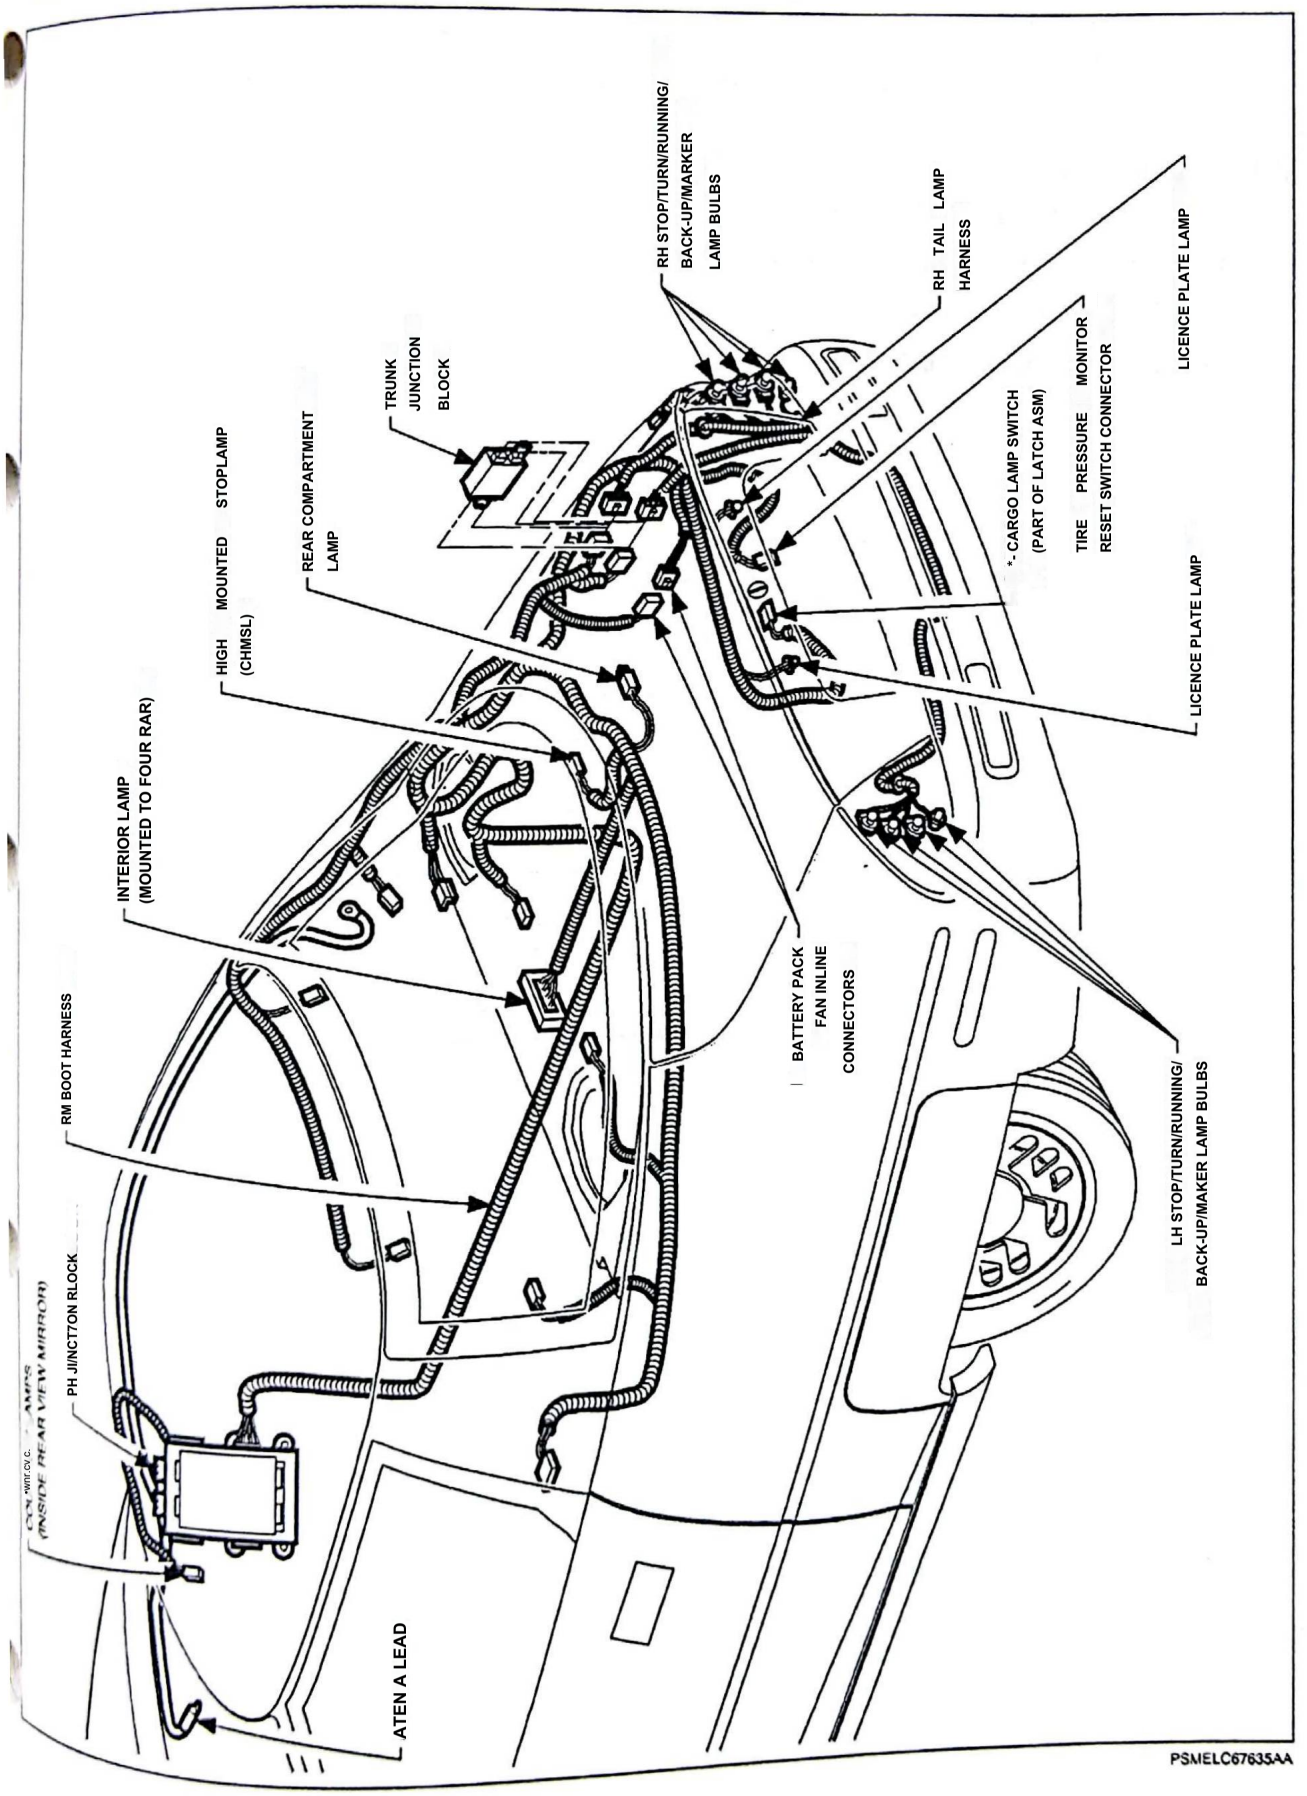
RH STOP/TURN/RUNNING/ BACK-UP/MARKER LAMP BULBS
RH TAIL LAMP HARNESS
LICENCE PLATE LAMP
TRUNK JUNCTION BLOCK
REAR COMPARTMENT LAMP
HIGH MOUNTED STOPLAMP (CHMSL)
INTERIOR LAMP (MOUNTED TO FOUR RAR)
*- CARGO LAMP SWITCH (PART OF LATCH ASM)
TIRE PRESSURE MONITOR RESET SWITCH CONNECTOR
LICENCE PLATE LAMP
RM BOOT HARNESS
BATTERY PACK FAN INLINE CONNECTORS
LH STOP/TURN/RUNNING/ BACK-UP/MAKER LAMP BULBS
ATEN A LEAD
PSMELC67635AA

BACKUP LAMPS

The backup lamps should botb On w come henever thp shifter is out in reverse. The backup lamps receive power from a five itive thermal ent PTC) in the right to nd junction block (RHJB). This power travels through the PRtSXMhe RHJB, Snk junction block (TJB), and finally to the backup lamp bulbs. They recede ground through the TJB.

BACKUP LAMPS TROUBLE TREE INDEX

- Chart 1 - Left Hand Backup Light Inoperative Only
- Chart 2 - Right Hand Backup Light Inoperative Only
- Chart 3 - Backup Lamps Both Inoperative
- Chart 4 - Backup Lamps On All the Time

CamScanner

LEFT HAND BACKUP LIGHT INOPERATIVE ONLY

CHART 1

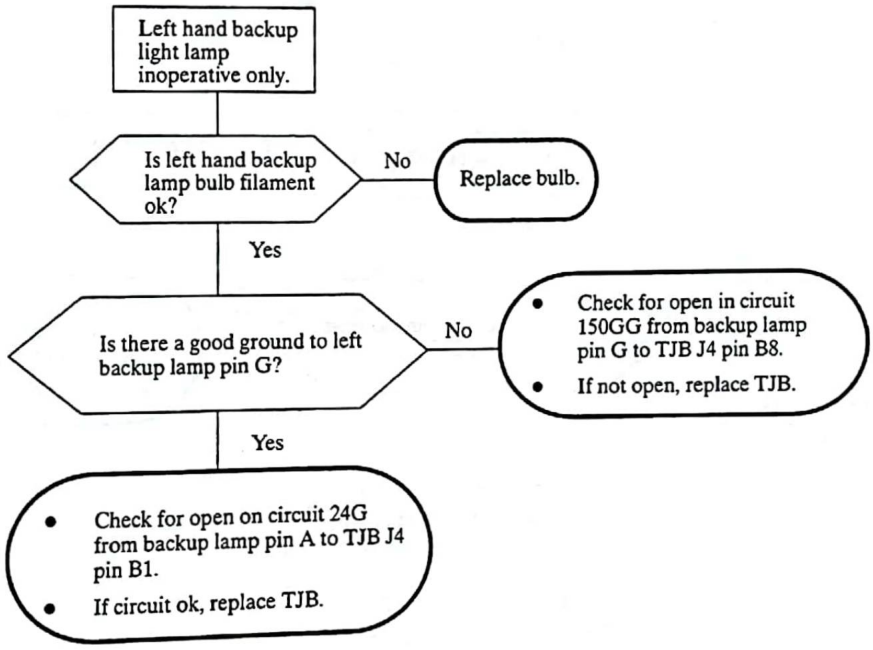
Left hand backup light lamp inoperative only.
Is left hand backup lamp bulb filament ok?
No
Replace bulb.
Yes
Is there a good ground to left backup lamp pin G?
No
• Check for open in circuit 150GG from backup lamp pin G to TJB J4 pin B8.
• If not open, replace TJB.
Yes
• Check for open on circuit 24G from backup lamp pin A to TJB J4 pin B1.
• If circuit ok, replace TJB.

CamScanner

RIGHT HAND BACKUP LIGHT INOPERATIVE ONLY

CHART2

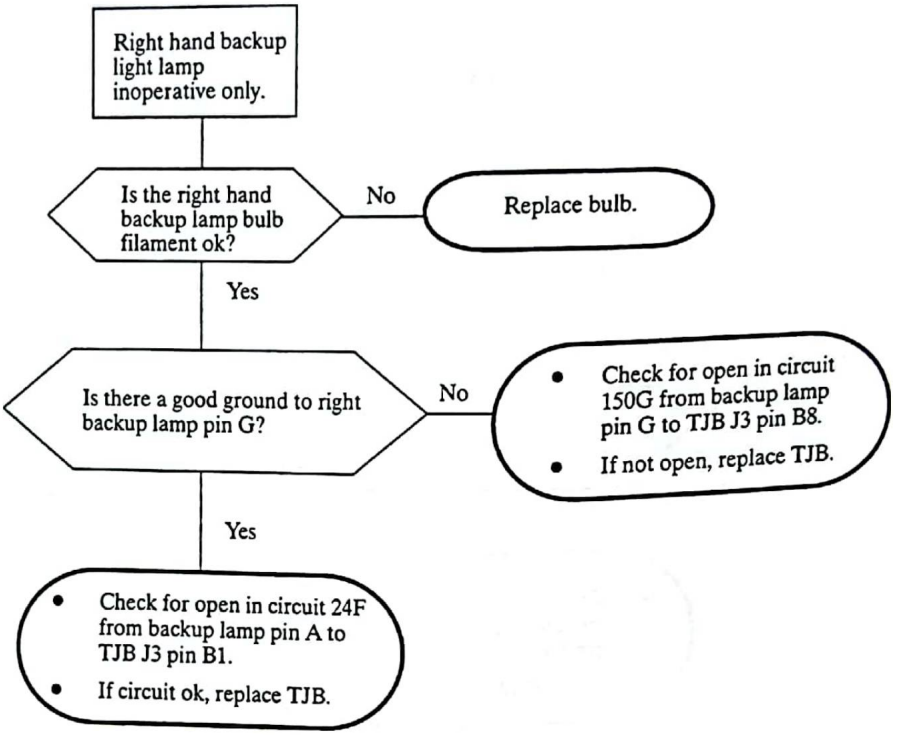
Right hand backup light lamp inoperative only.
Is the right hand backup lamp bulb filament ok?
No
Replace bulb.
Yes
Is there a good ground to right backup lamp pin G?
No
• Check for open in circuit 150G from backup lamp pin G to TJB J3 pin B8.
• If not open, replace TJB.
Yes
• Check for open in circuit 24F from backup lamp pin A to TJB J3 pin B1.
• If circuit ok, replace TJB.

CamScanner

BACKUP LAMPS BOTH INOPERATIVE

CHART 3

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

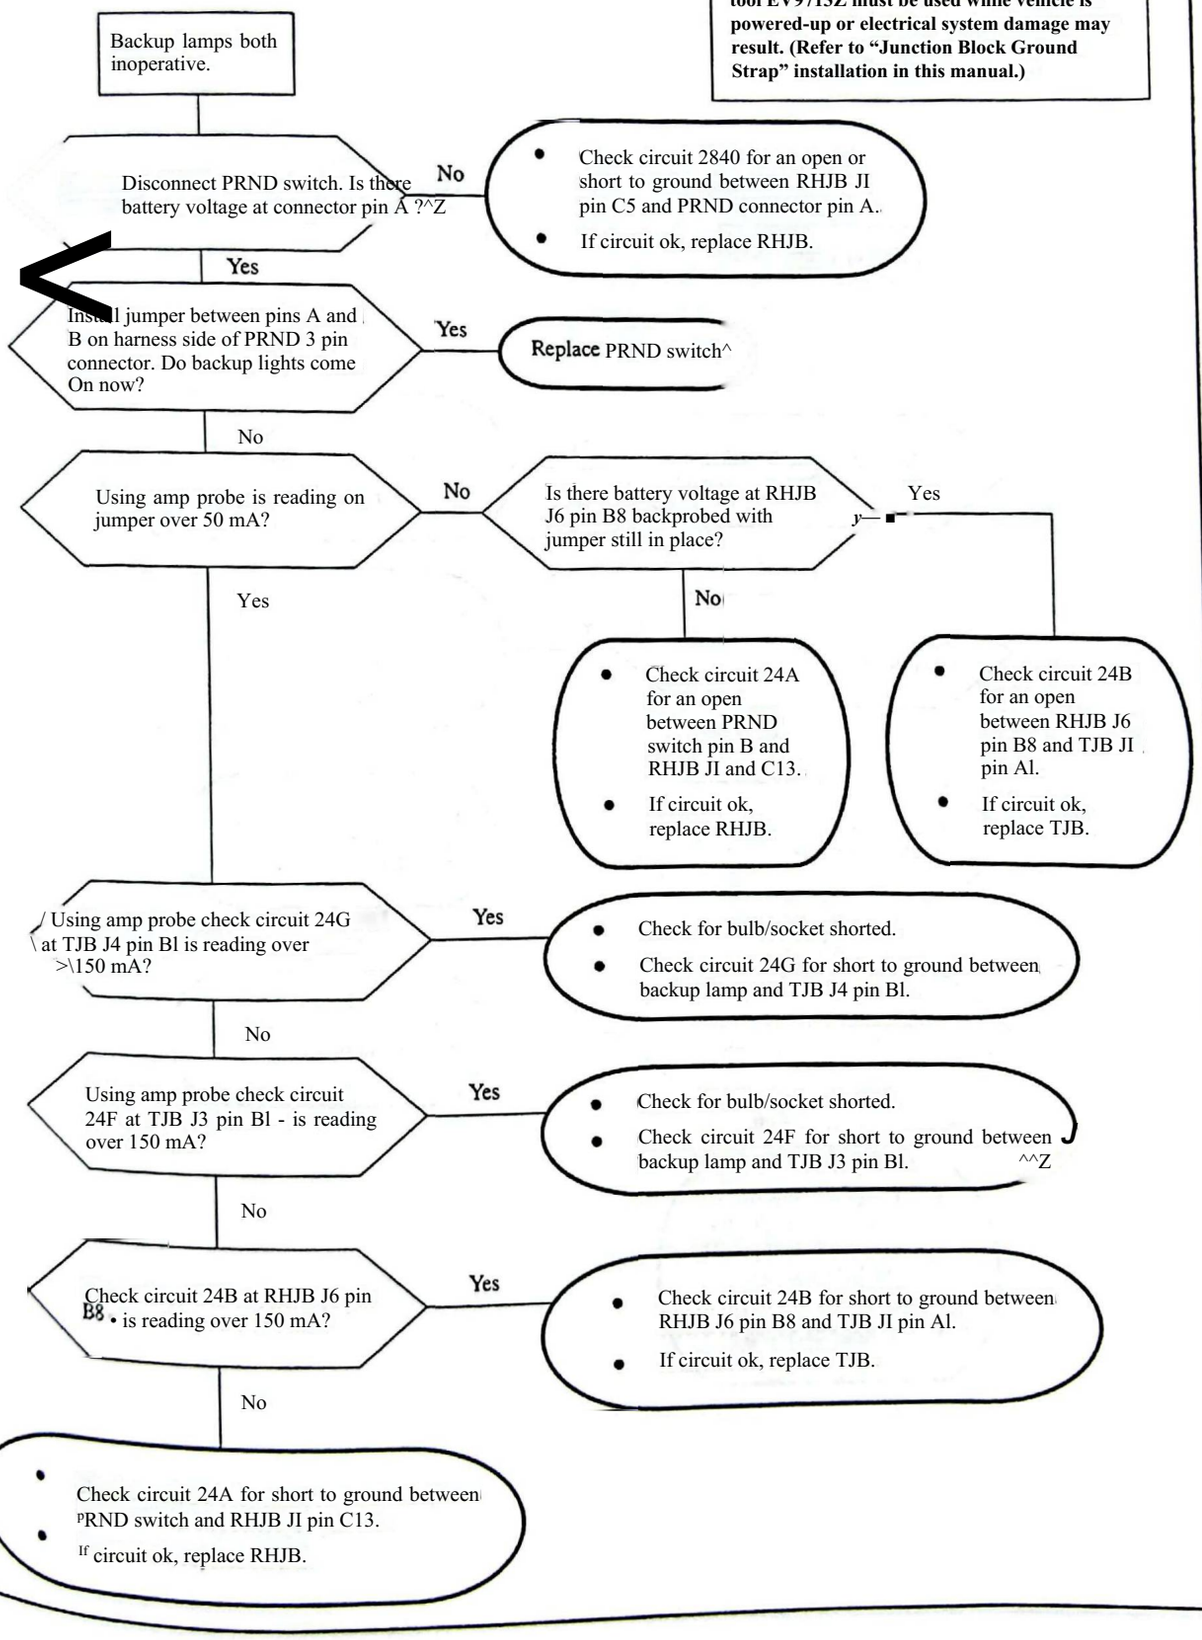
Backup lamps both inoperative.
Disconnect PRND switch. Is there battery voltage at connector pin A ?^Z
No
• Check circuit 2840 for an open or short to ground between RHJB JI pin C5 and PRND connector pin A.
• If circuit ok, replace RHJB.
Yes
Install jumper between pins A and B on harness side of PRND 3 pin connector. Do backup lights come On now?
Yes
Replace PRND switch^
No
Using amp probe is reading on jumper over 50 mA?
No
Is there battery voltage at RHJB J6 pin B8 backprobed with jumper still in place?
Yes
Yes
No
• Check circuit 24A for an open between PRND switch pin B and RHJB JI and C13.
• If circuit ok, replace RHJB.
• Check circuit 24B for an open between RHJB J6 pin B8 and TJB JI pin Al.
• If circuit ok, replace TJB.
Using amp probe check circuit 24G at TJB J4 pin Bl is reading over >\150 mA?
Yes
• Check for bulb/socket shorted.
• Check circuit 24G for short to ground between backup lamp and TJB J4 pin Bl.
No
Using amp probe check circuit 24F at TJB J3 pin Bl - is reading over 150 mA?
Yes
• Check for bulb/socket shorted.
• Check circuit 24F for short to ground between backup lamp and TJB J3 pin Bl. ^^Z
No
Check circuit 24B at RHJB J6 pin B8 • is reading over 150 mA?
Yes
• Check circuit 24B for short to ground between RHJB J6 pin B8 and TJB JI pin Al.
• If circuit ok, replace TJB.
No
• Check circuit 24A for short to ground between PRND switch and RHJB JI pin C13.
• If circuit ok, replace RHJB.

CamScanner

BACKUP LAMPS ON ALL THE TIME

CHART 4

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

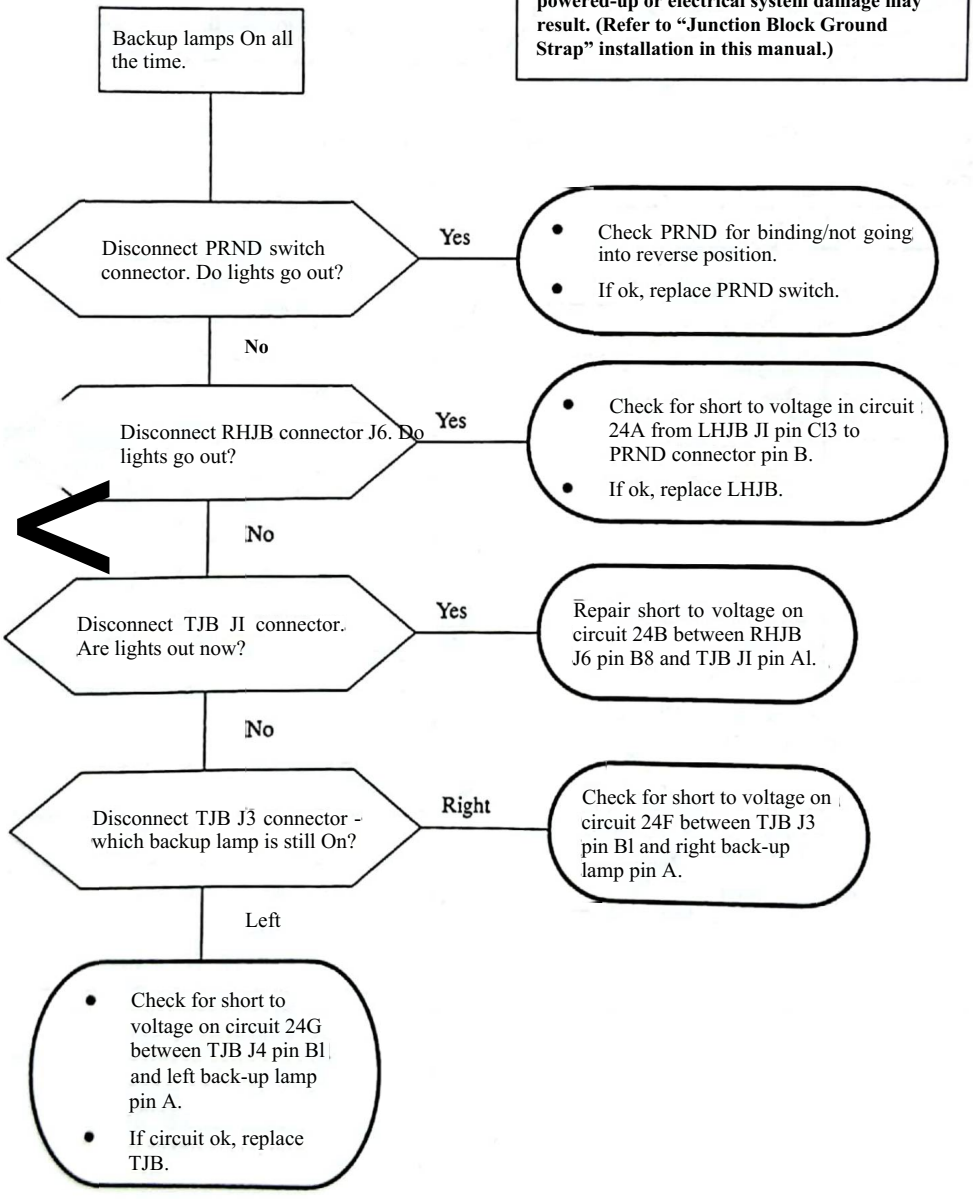
Backup lamps On all the time.
Disconnect PRND switch connector. Do lights go out?
Yes
Check PRND for binding/not going into reverse position.
If ok, replace PRND switch.
No
Disconnect RHJB connector J6. Do lights go out?
Yes
Check for short to voltage in circuit 24A from LHJB JI pin Cl3 to PRND connector pin B.
If ok, replace LHJB.
No
Disconnect TJB JI connector. Are lights out now?
Yes
Repair short to voltage on circuit 24B between RHJB J6 pin B8 and TJB JI pin Al.
No
Disconnect TJB J3 connector - which backup lamp is still On?
Right
Check for short to voltage on circuit 24F between TJB J3 pin Bl and right back-up lamp pin A.
Left
Check for short to voltage on circuit 24G between TJB J4 pin Bl and left back-up lamp pin A.
If circuit ok, replace TJB.

CamScanner

NOTES

CamScanner

BATTERY PACK (HIGH VOLTAGE)

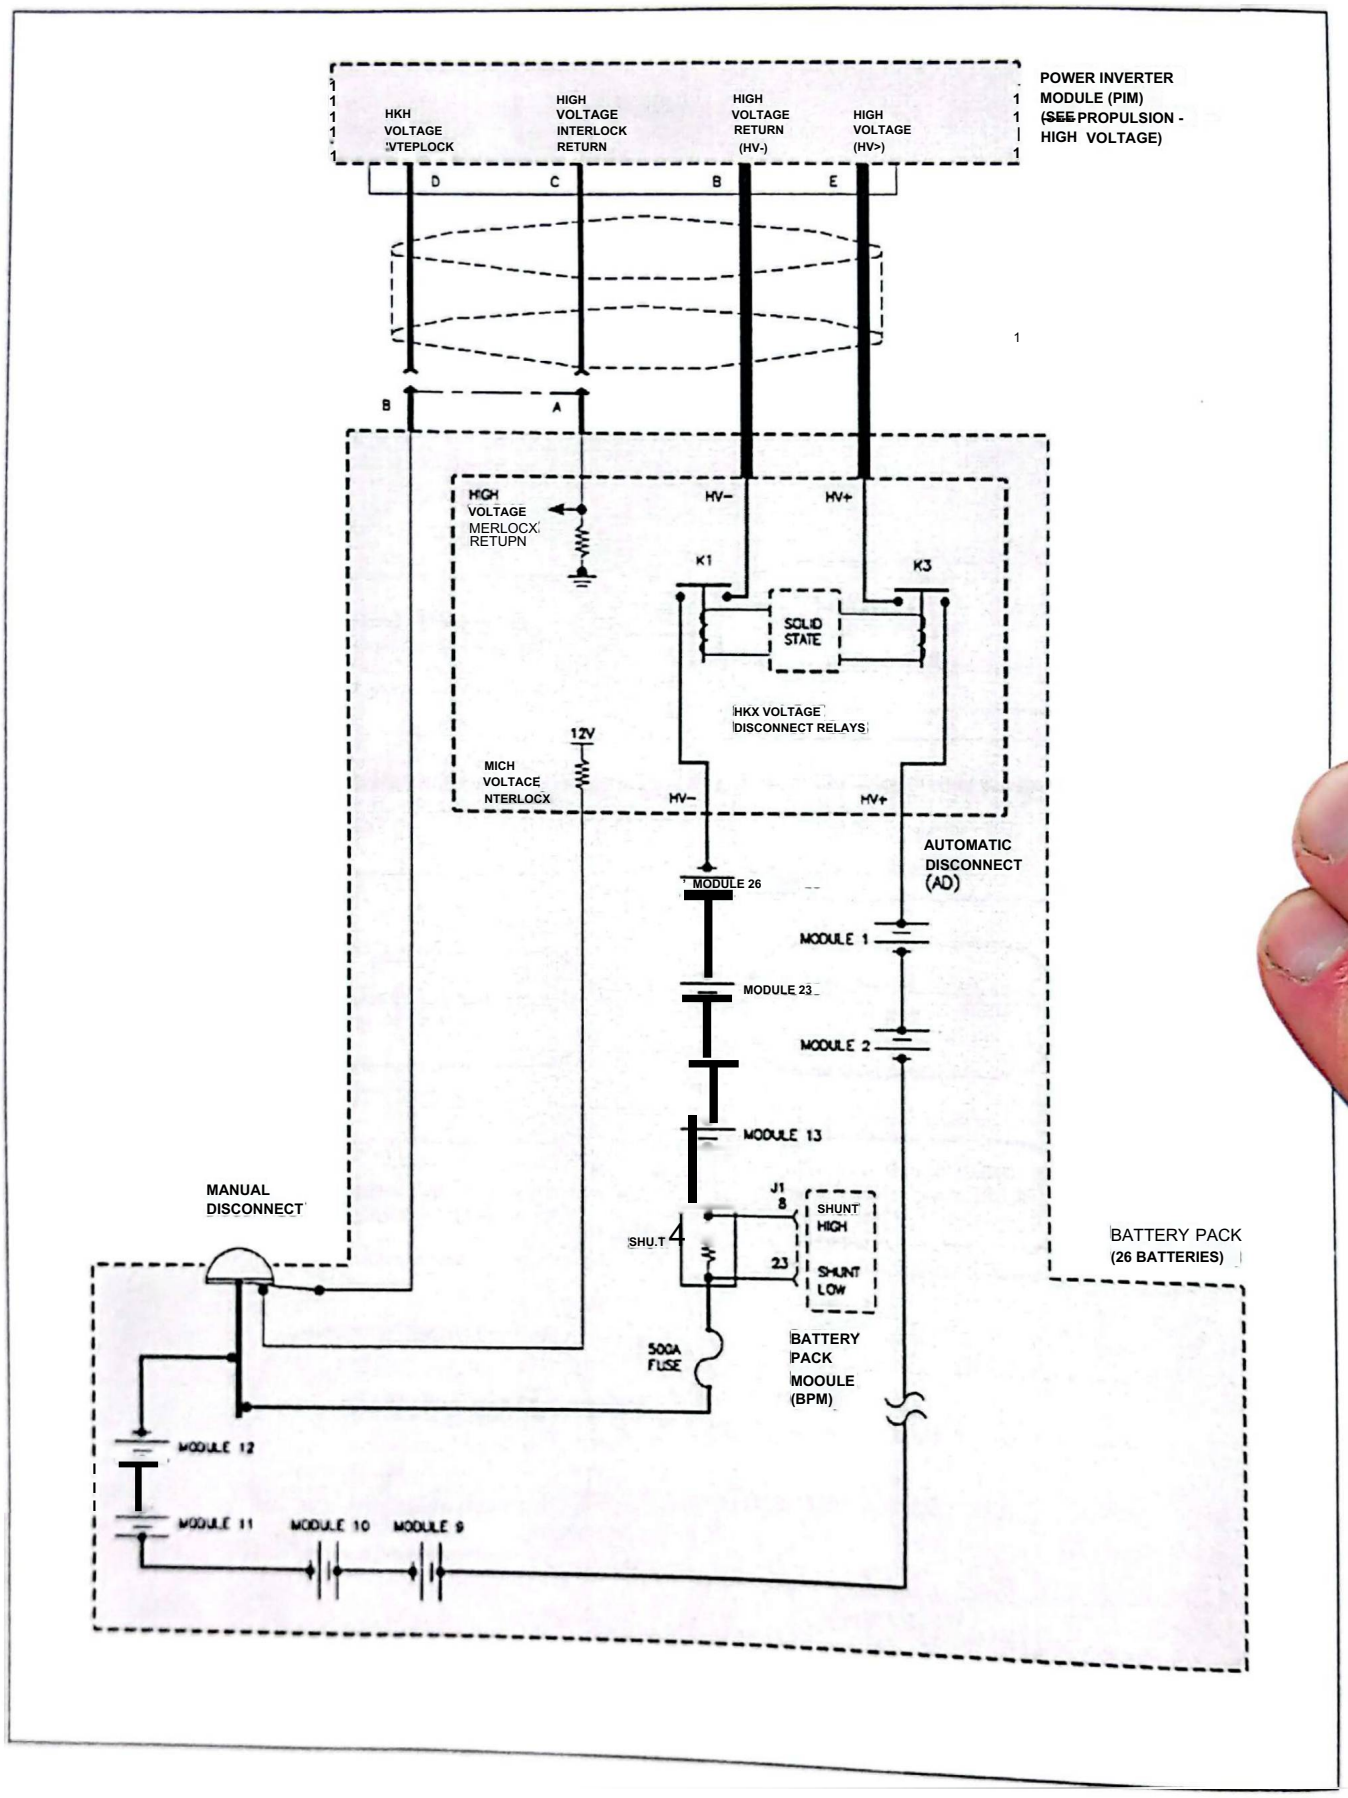

PSMELC68115AA

CamScanner

BATTERY PACK (LOW VOLTAGE)

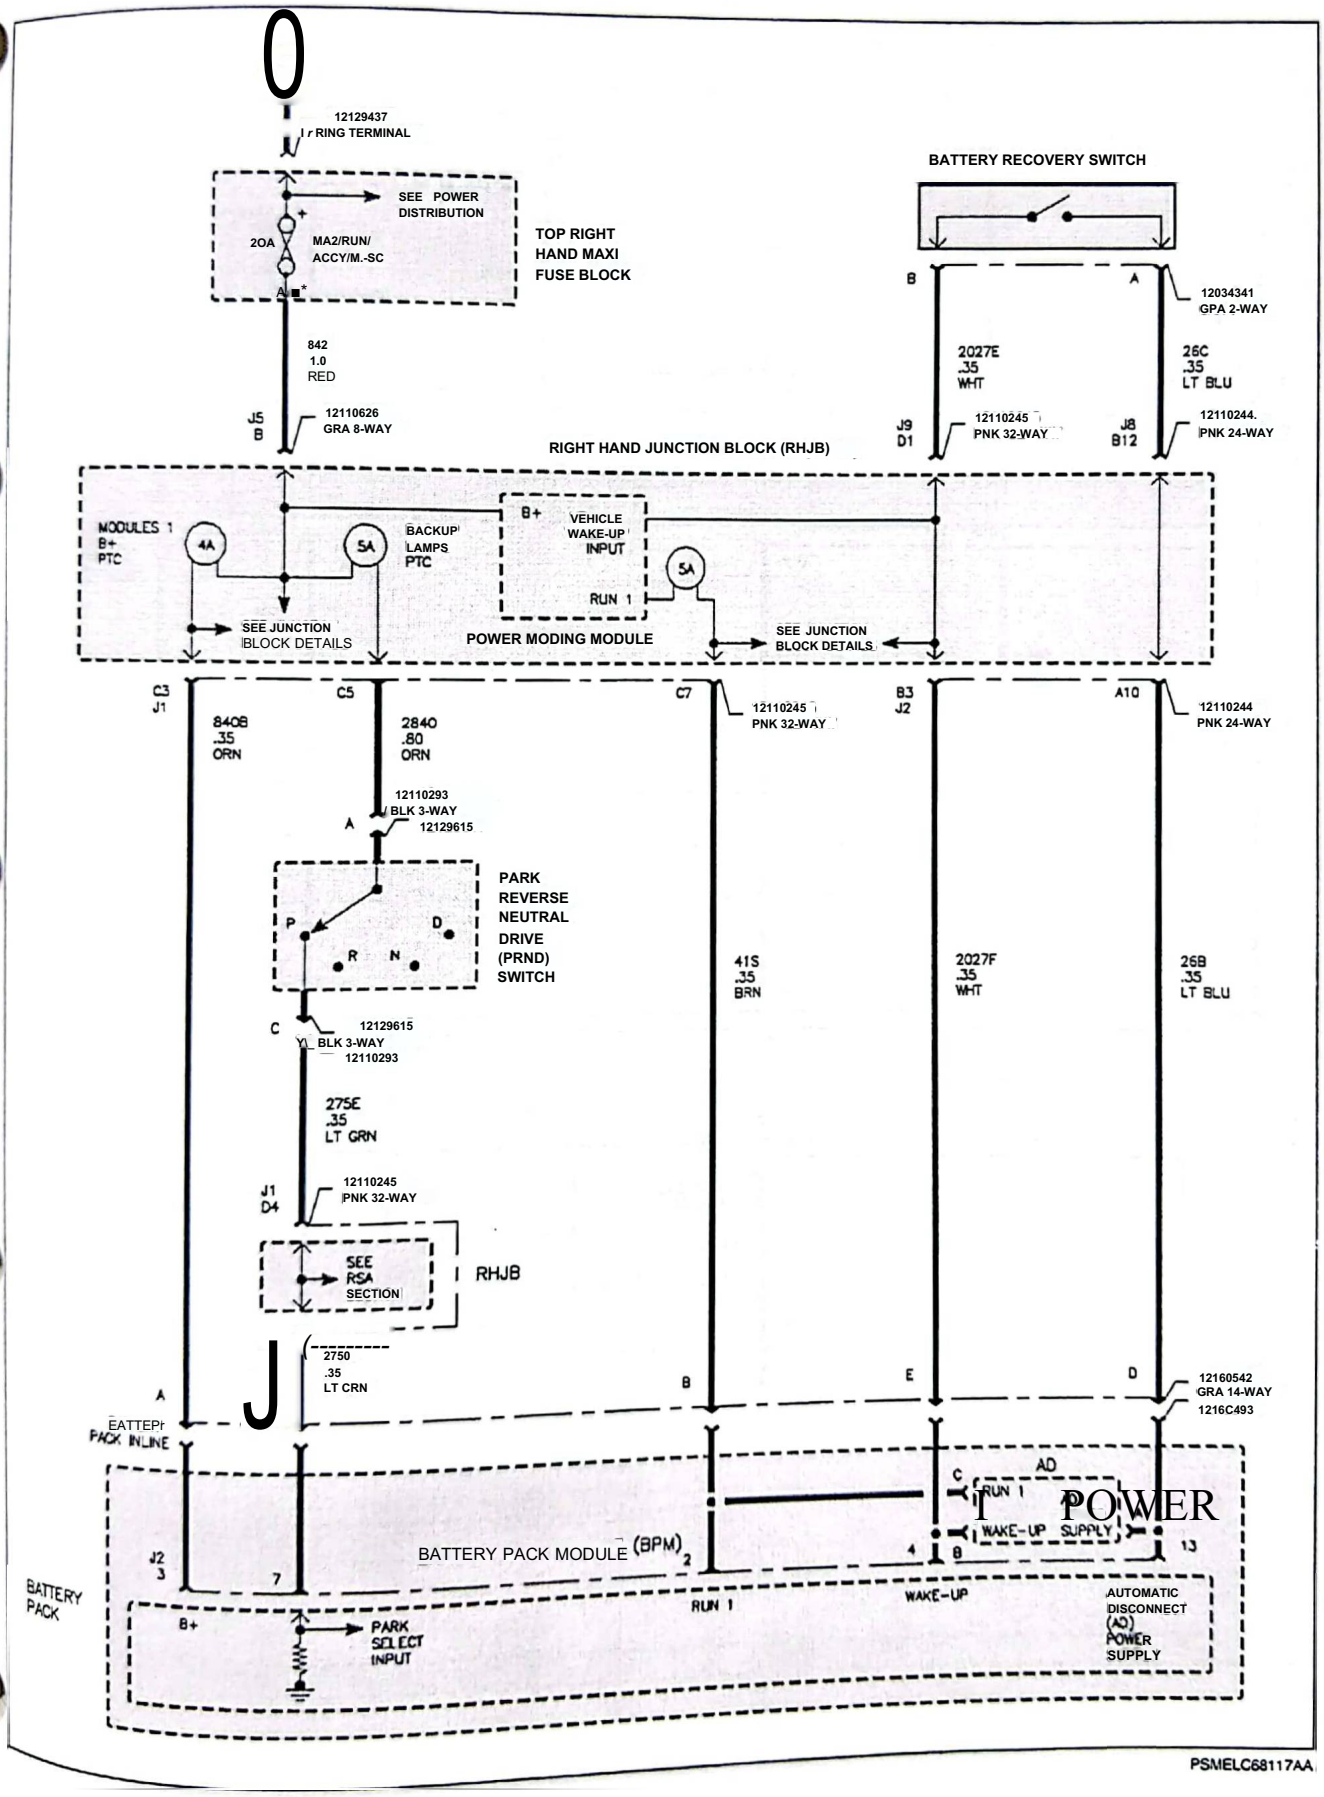

BATTERY PACK (LOW VOLTAGE - CONT.)

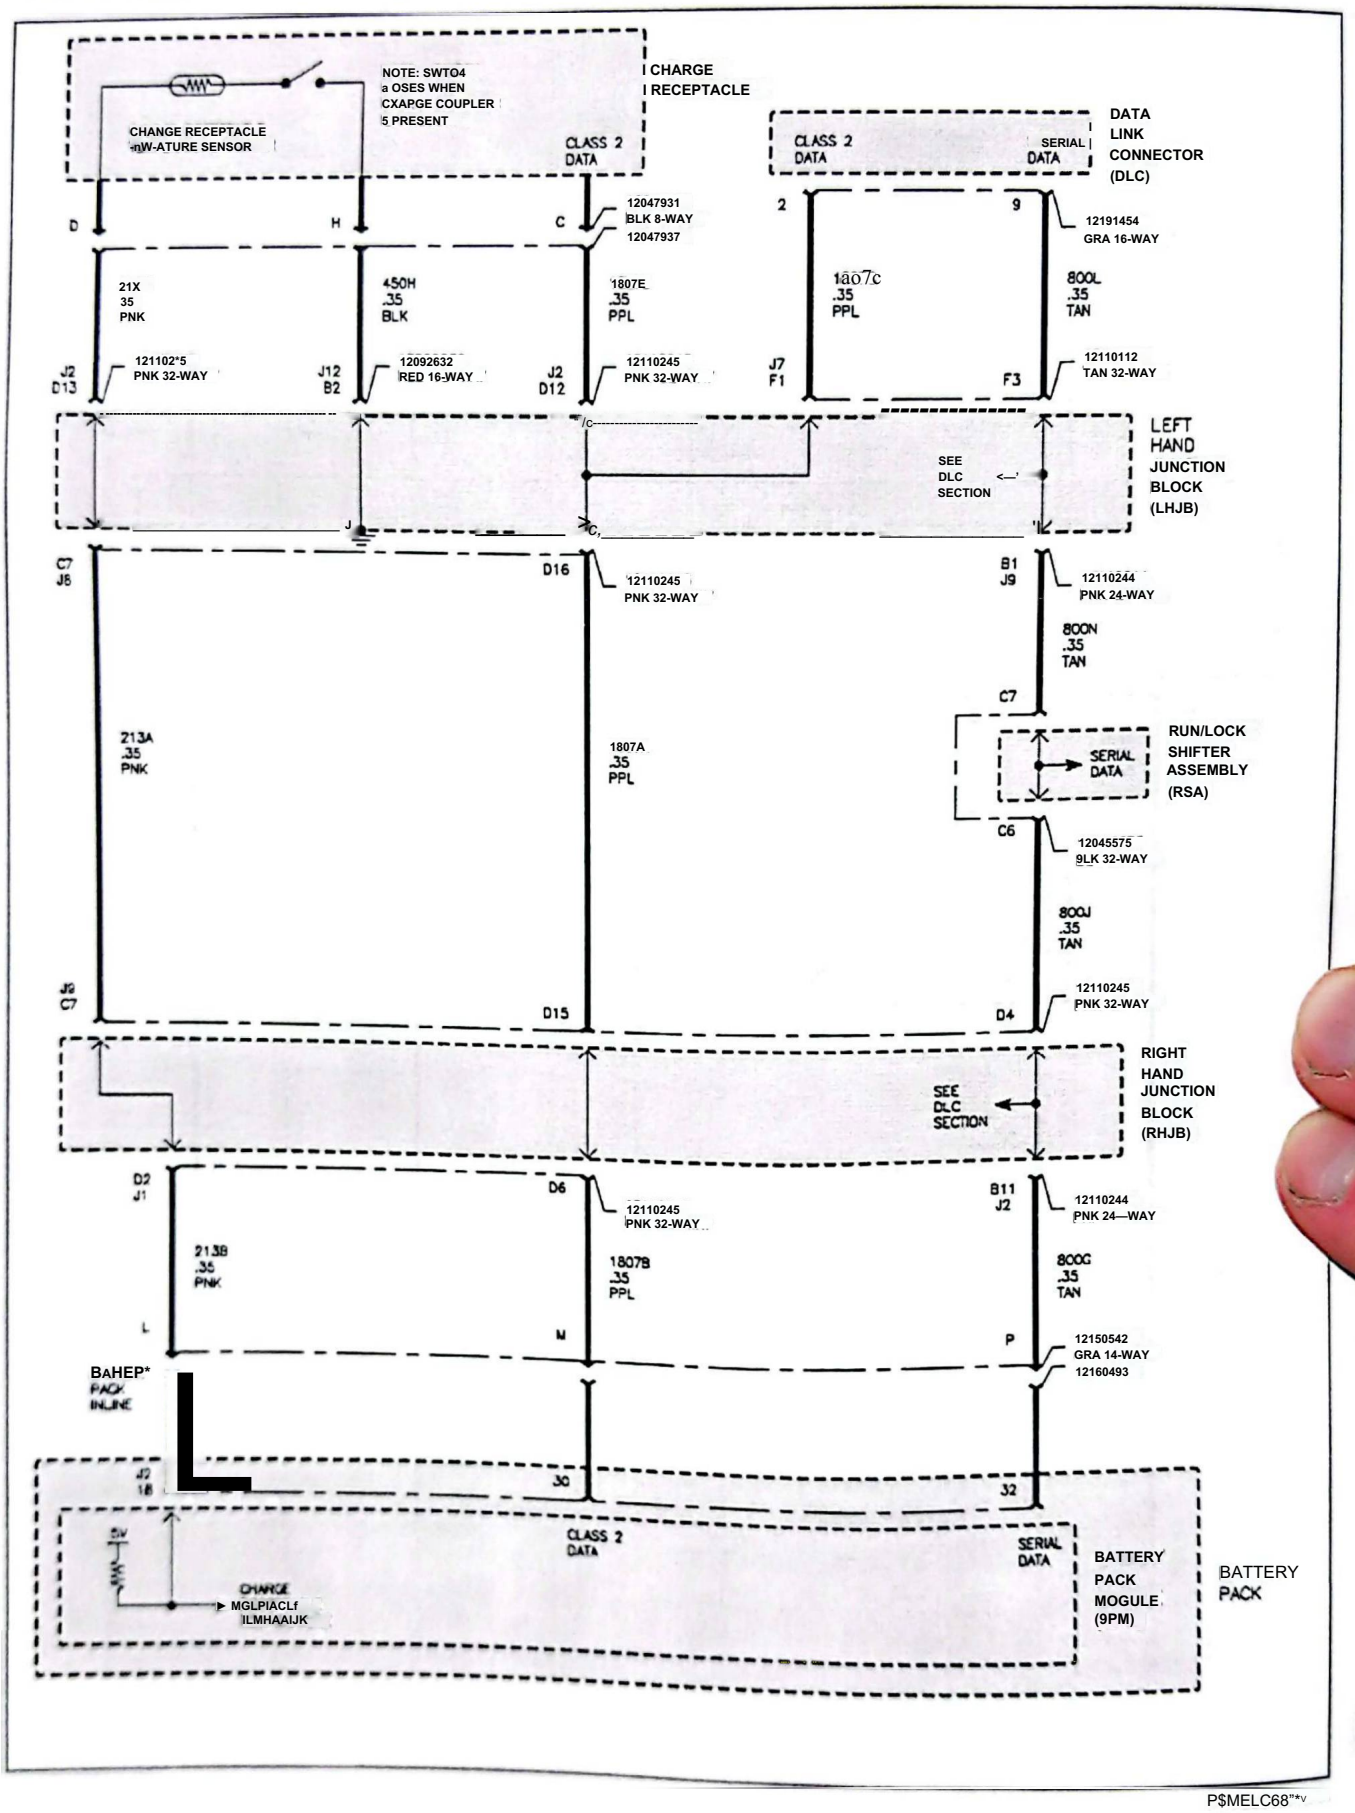

P$MELC68"*v

BATTERY PACK (LOW VOLTAGE)

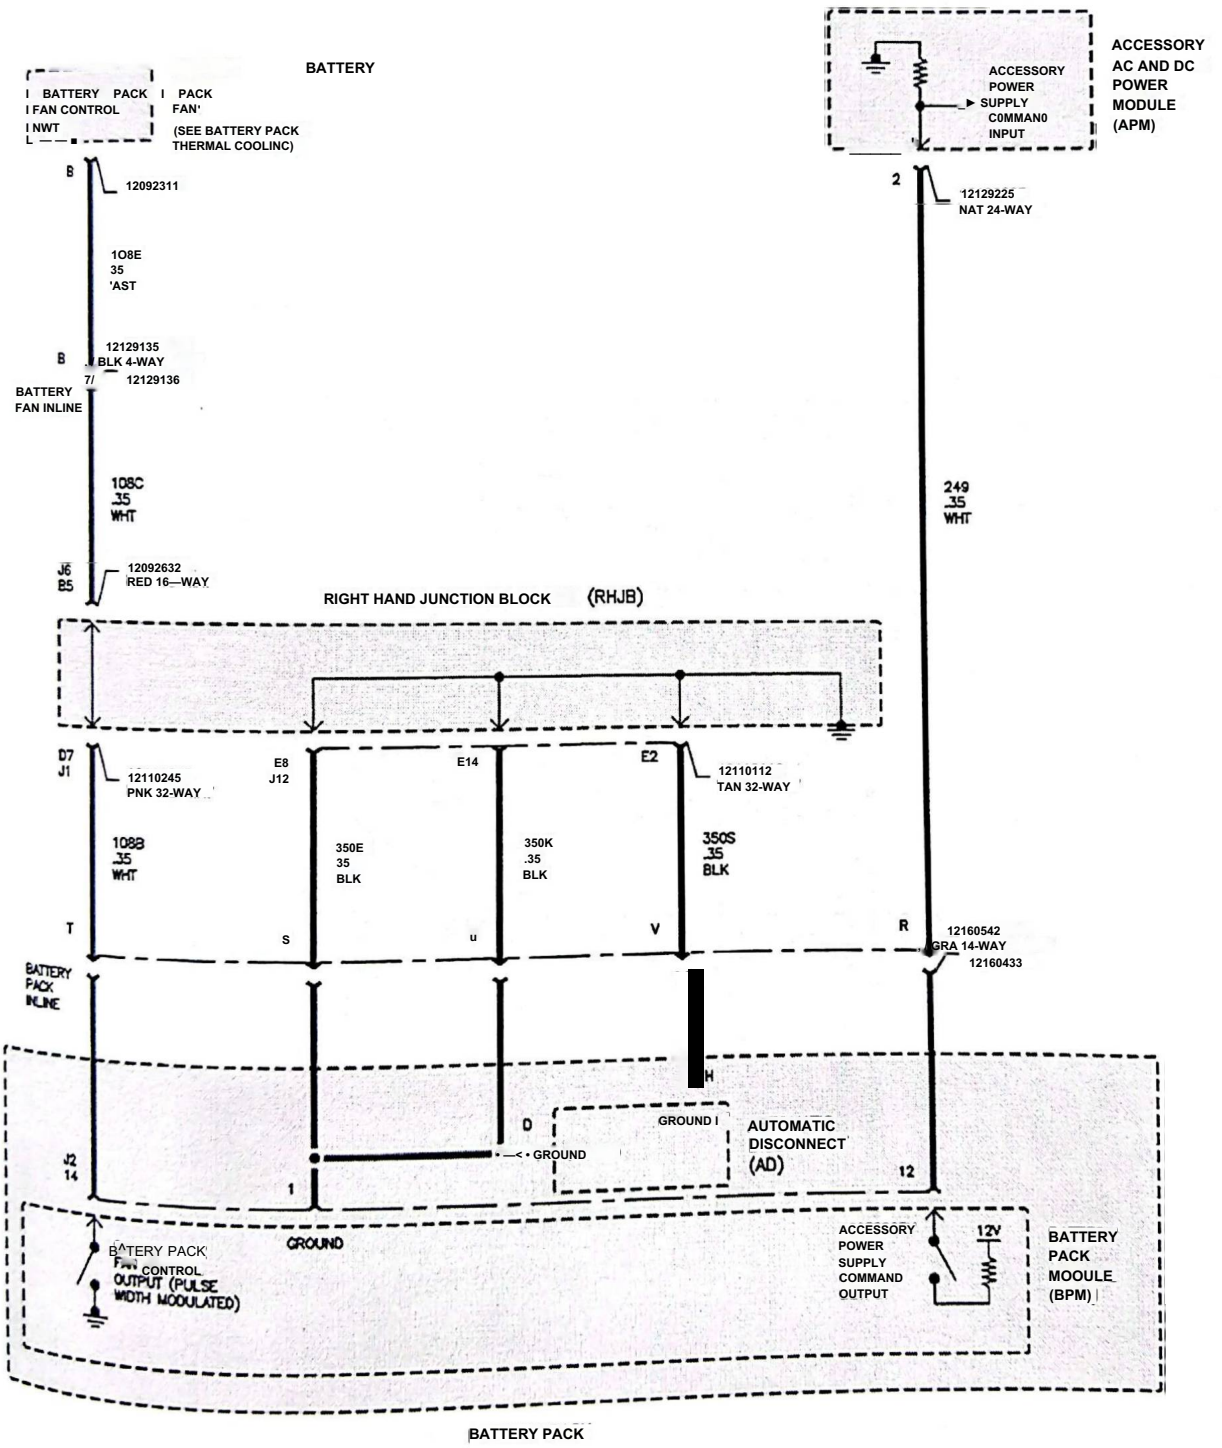

PSMELC68119AA

CamScanner

BATTERY PACK (LOW VOLTAGE - CONT.)

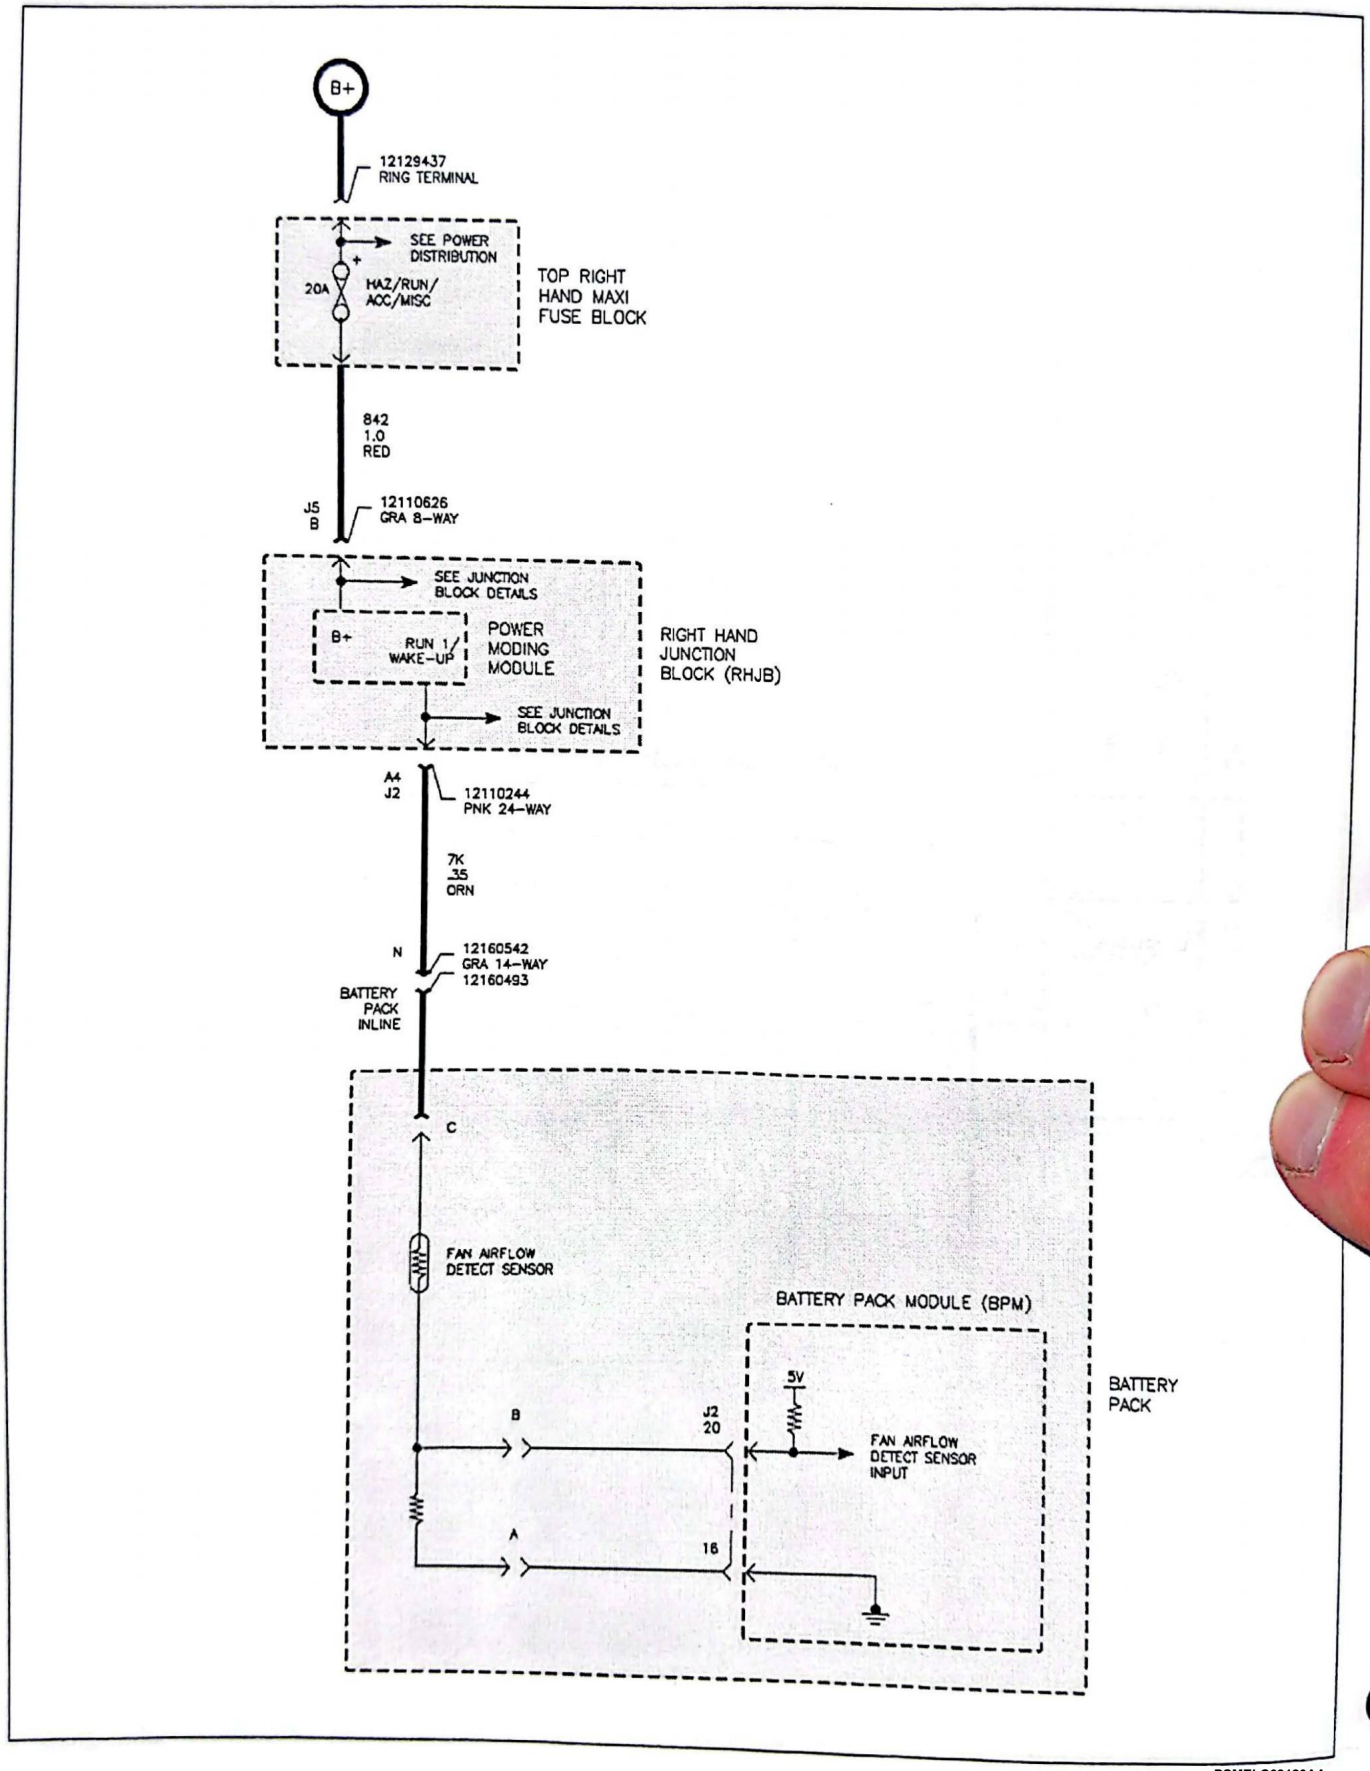

PSMELC68120AA

CamScanner

gATTERY PACK (LOW VOLTAGE-CONT.)

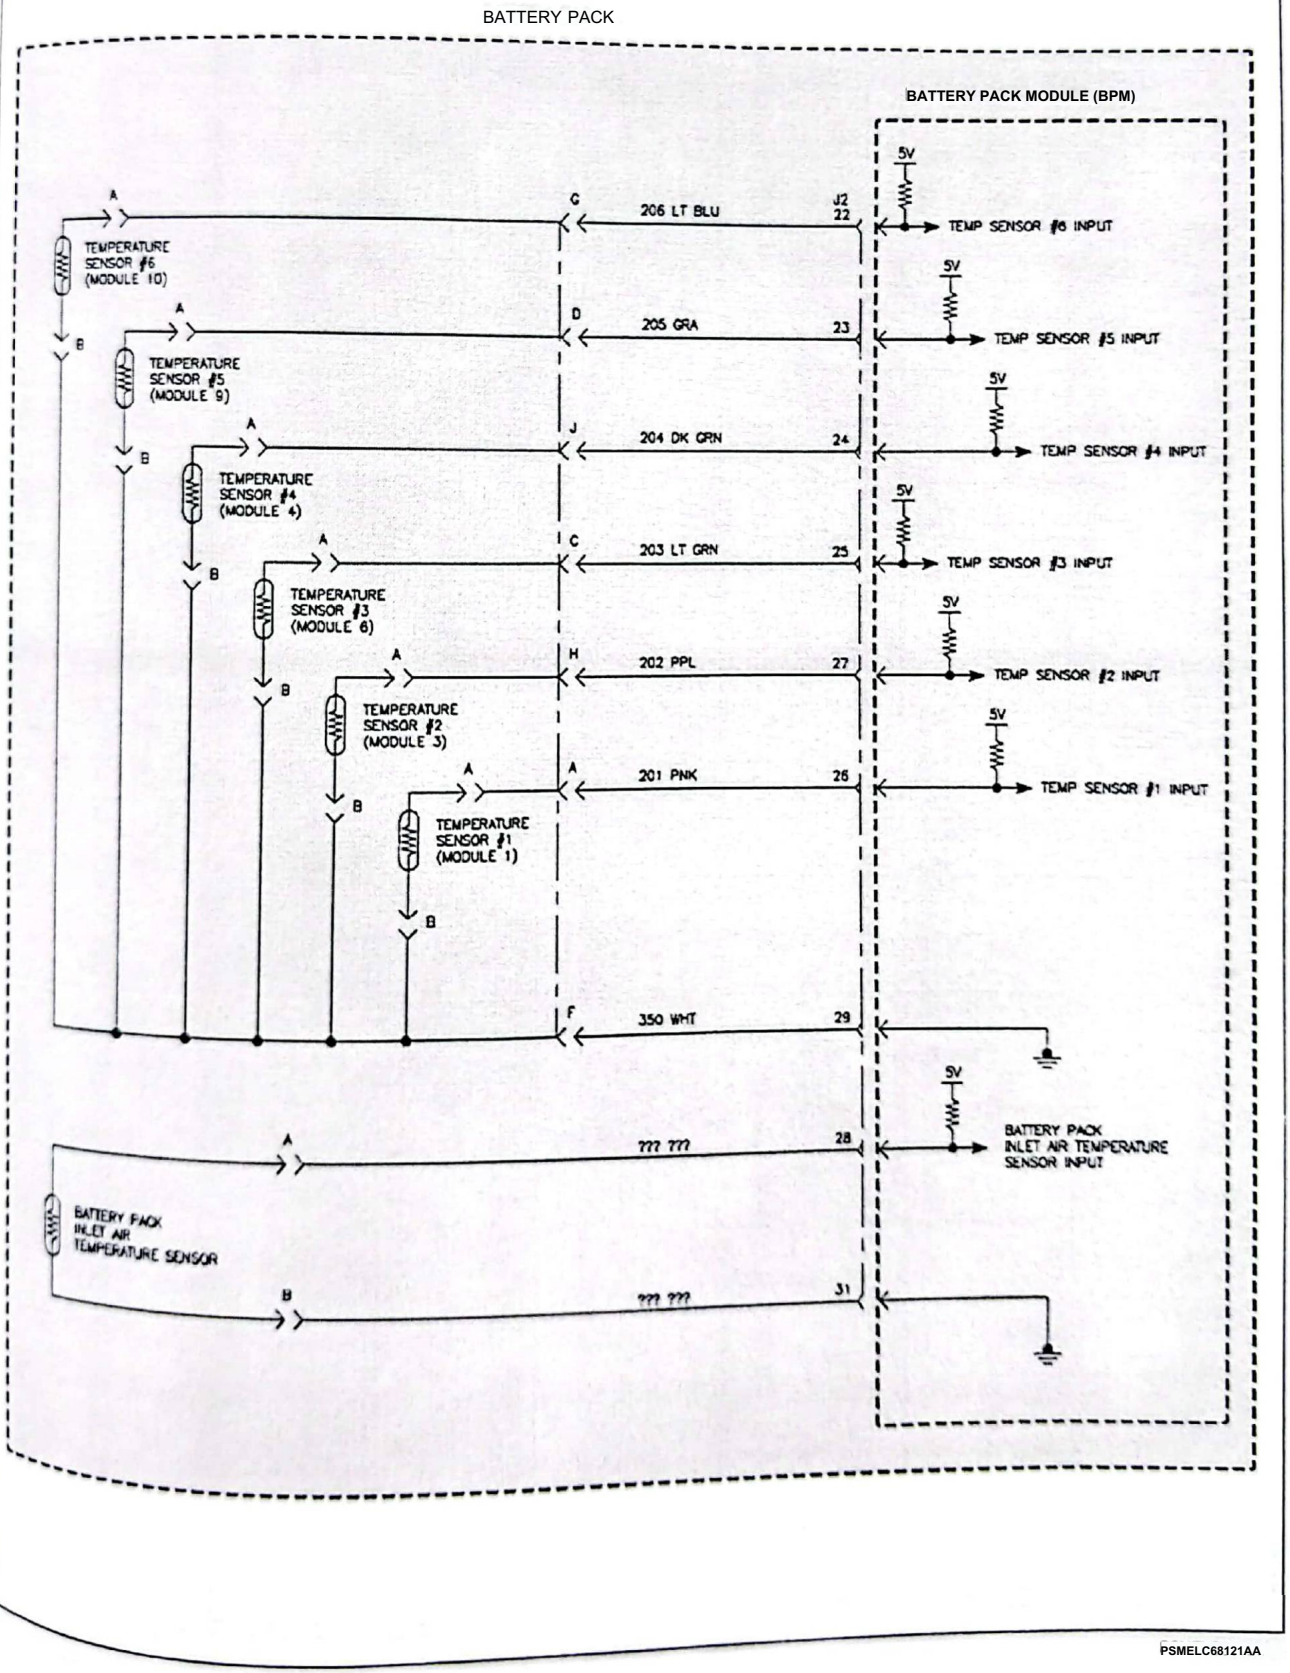

CamScanner

BATTERY PACK (LOW VOLTAGE-CONT.)

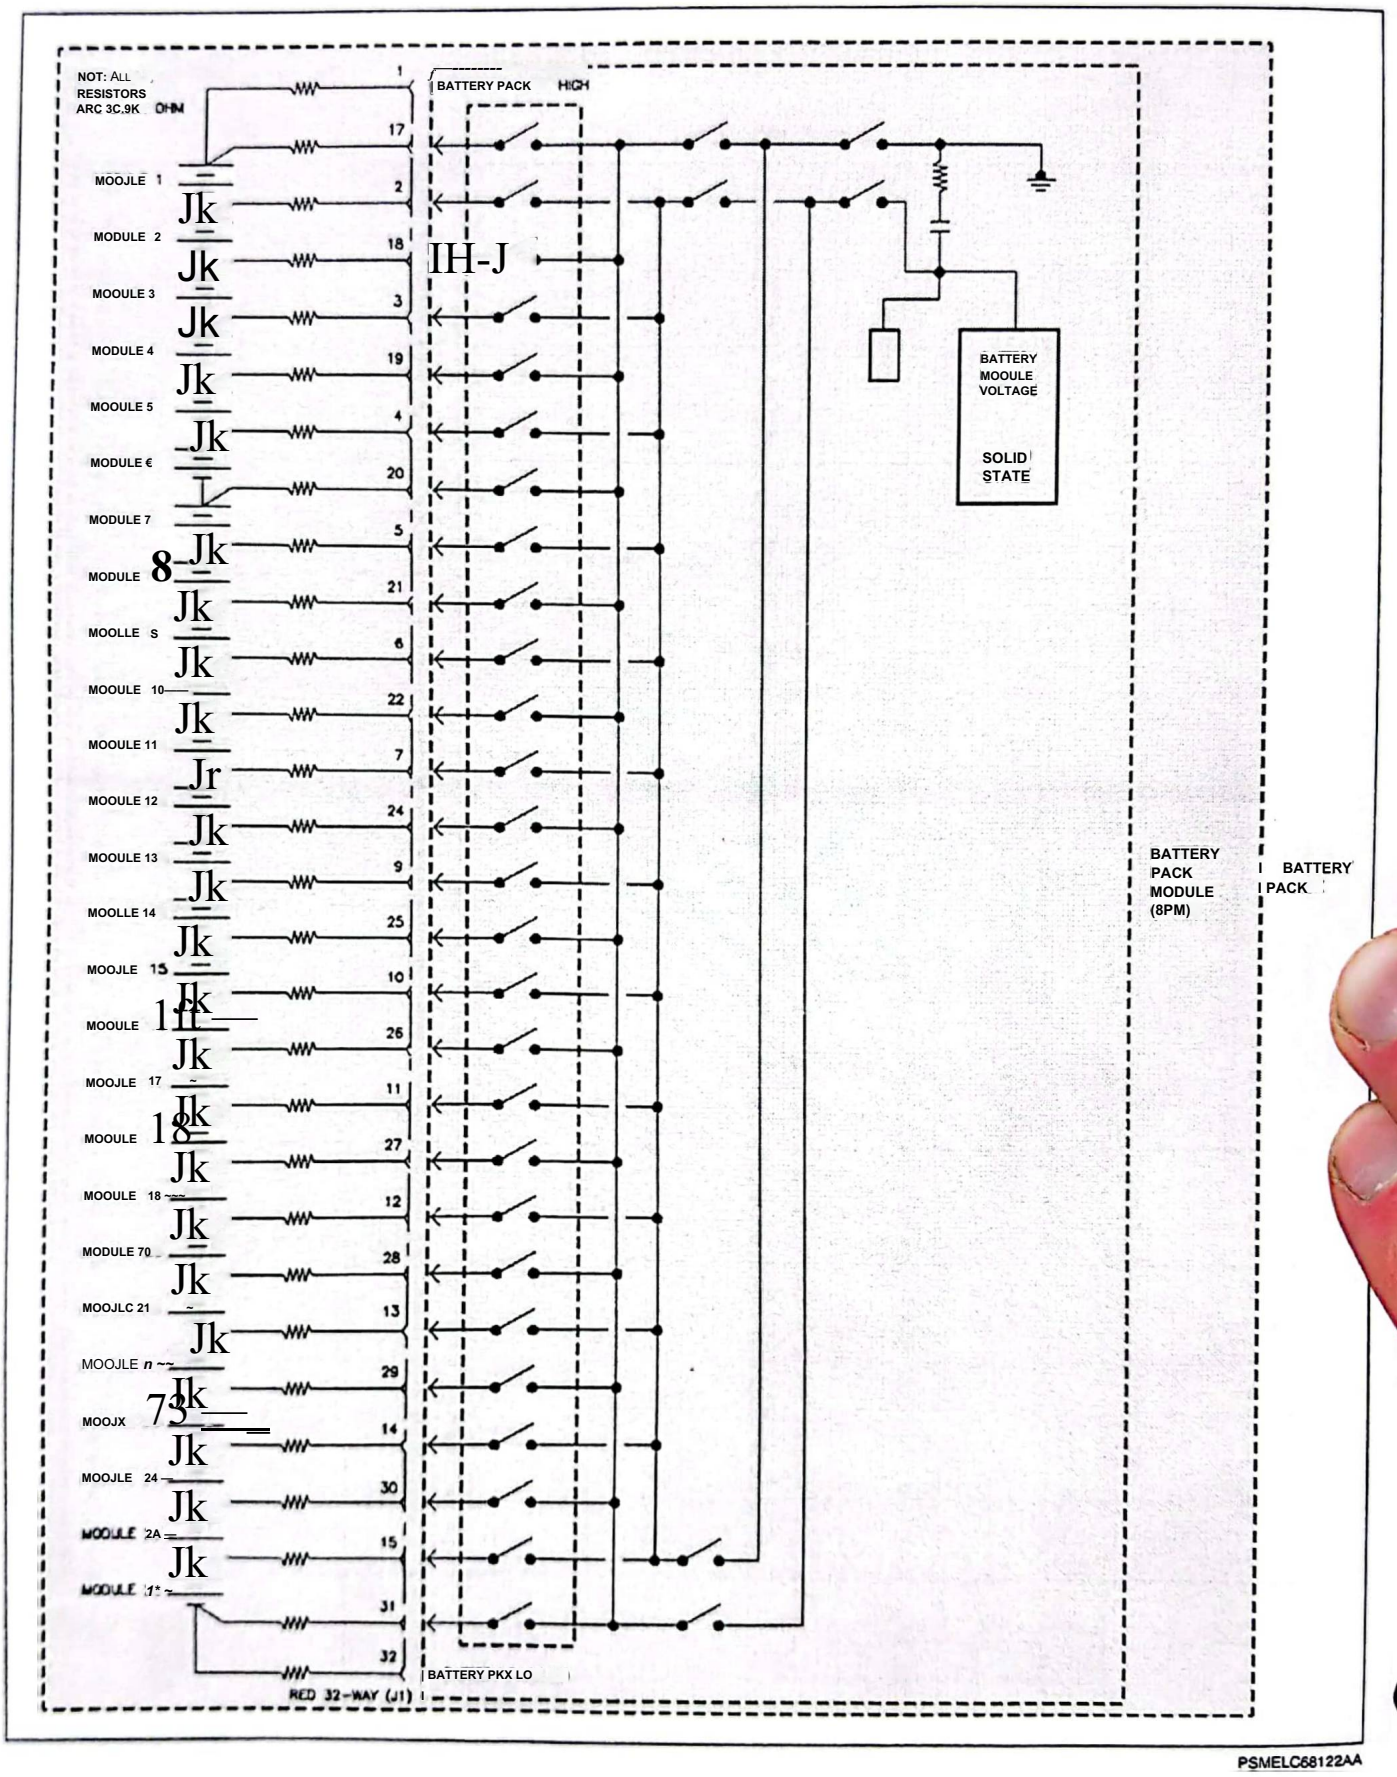

CamScanner

BATTERY PACK (LOW VOLTAGE–CONT.)

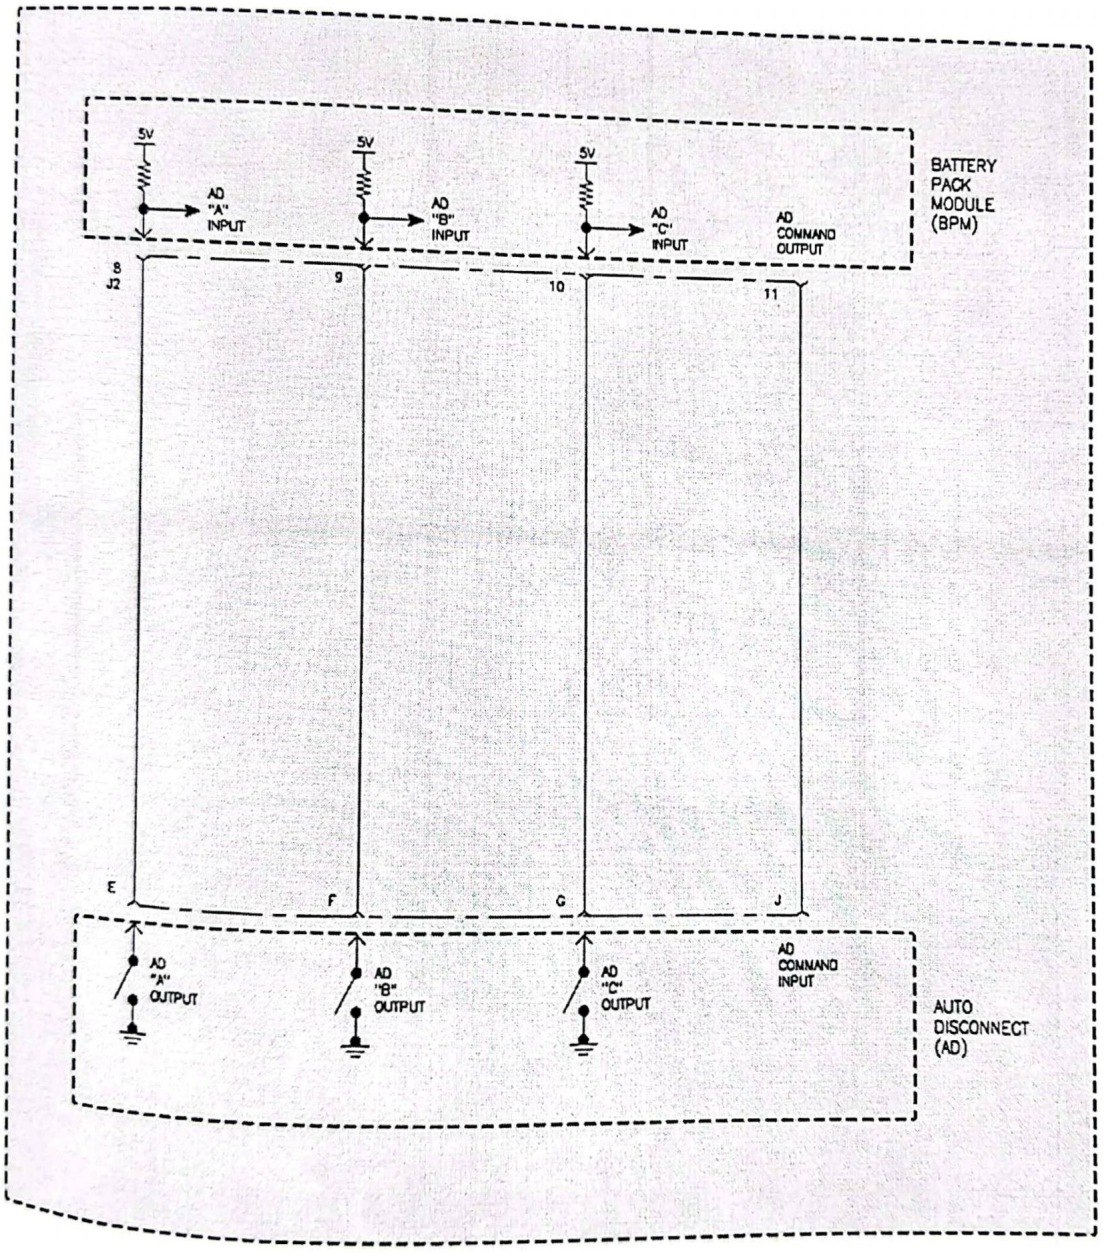

BATTERY PACK

PSMELC68123AA

CamScanner

BATTERY PACK (LOW VOLTAGE-CONT.)

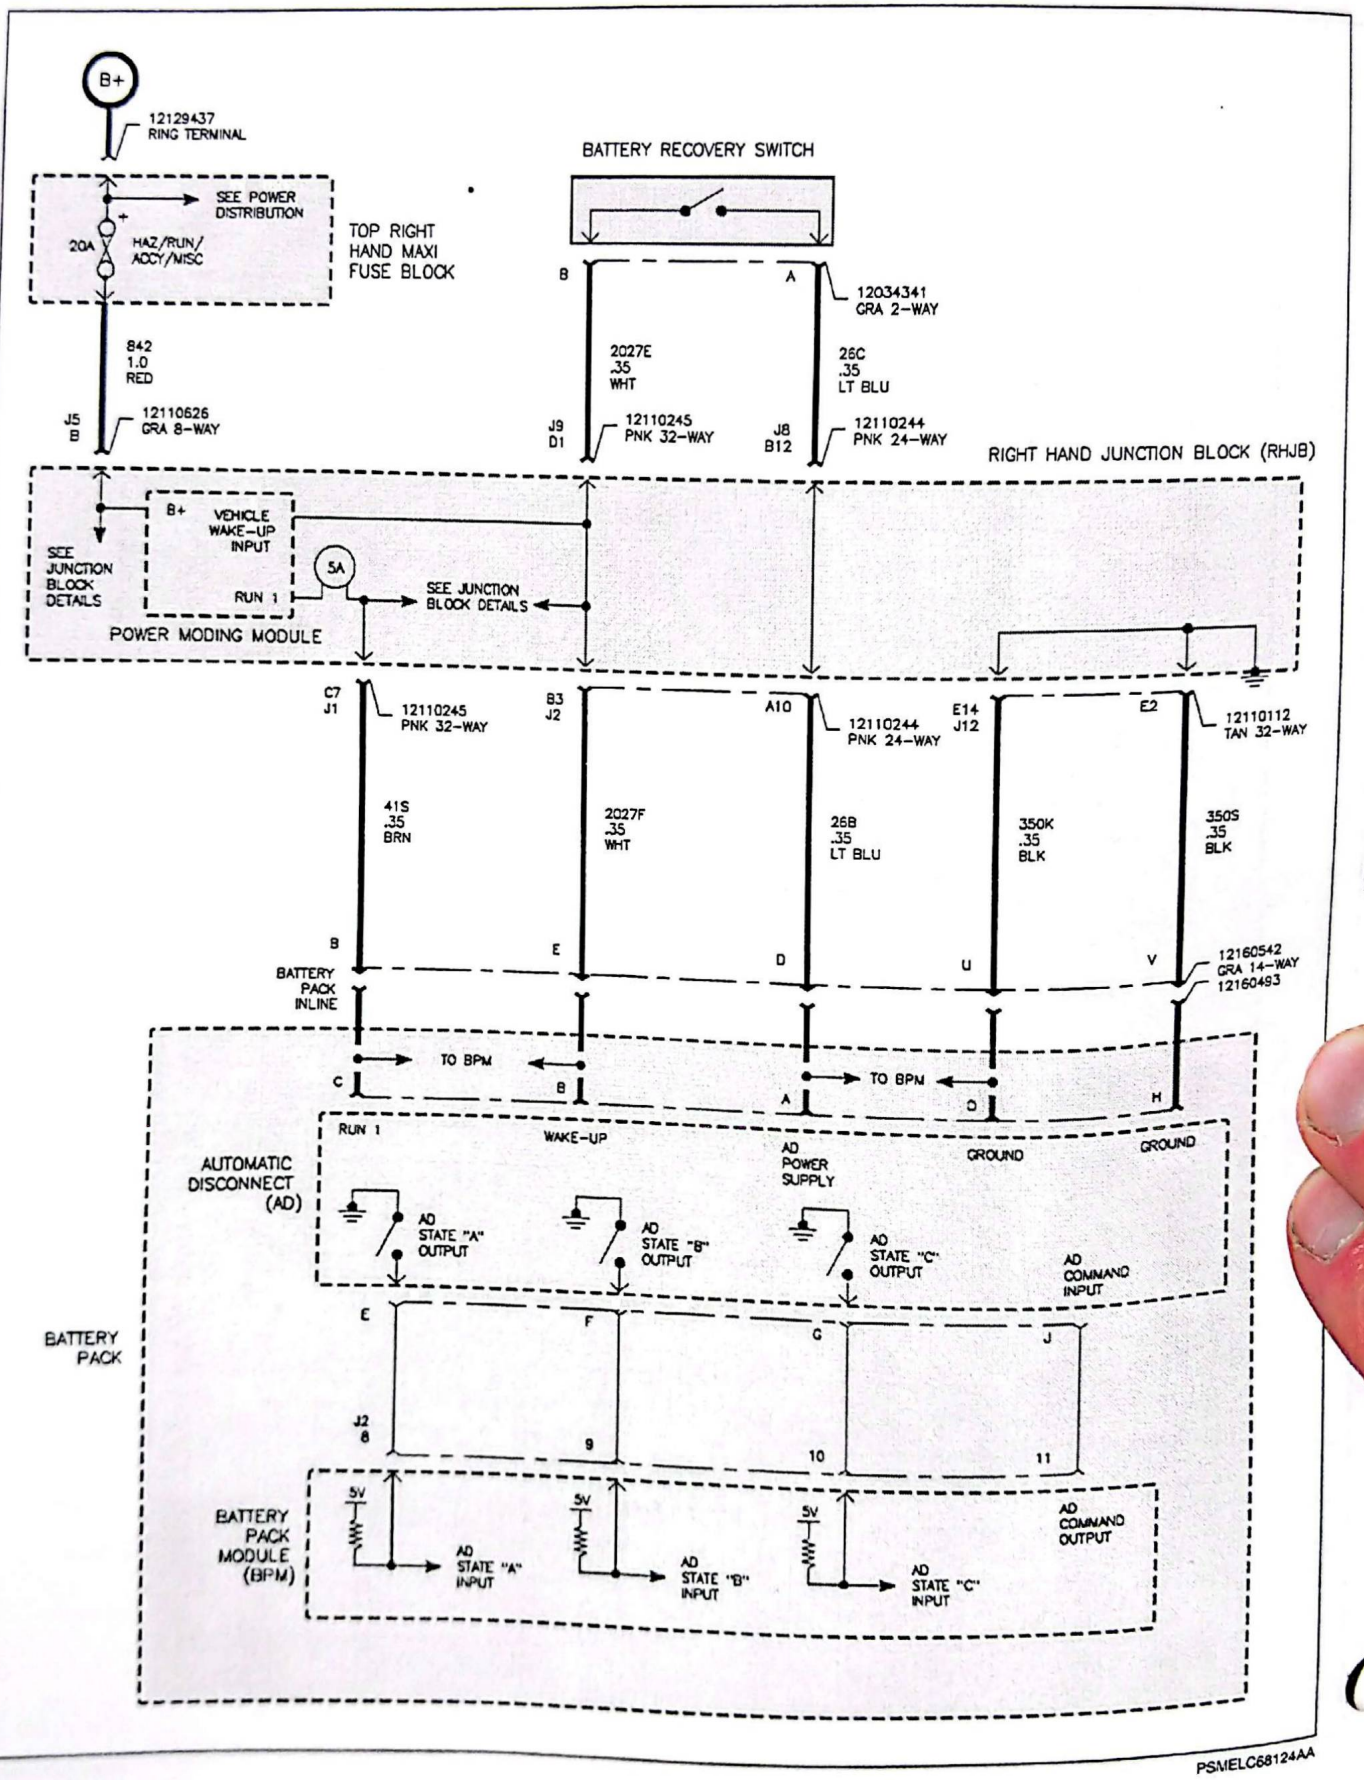

BATTERY PACK (LOW VOLTAGE) COMPONENT LOCATION VIEW

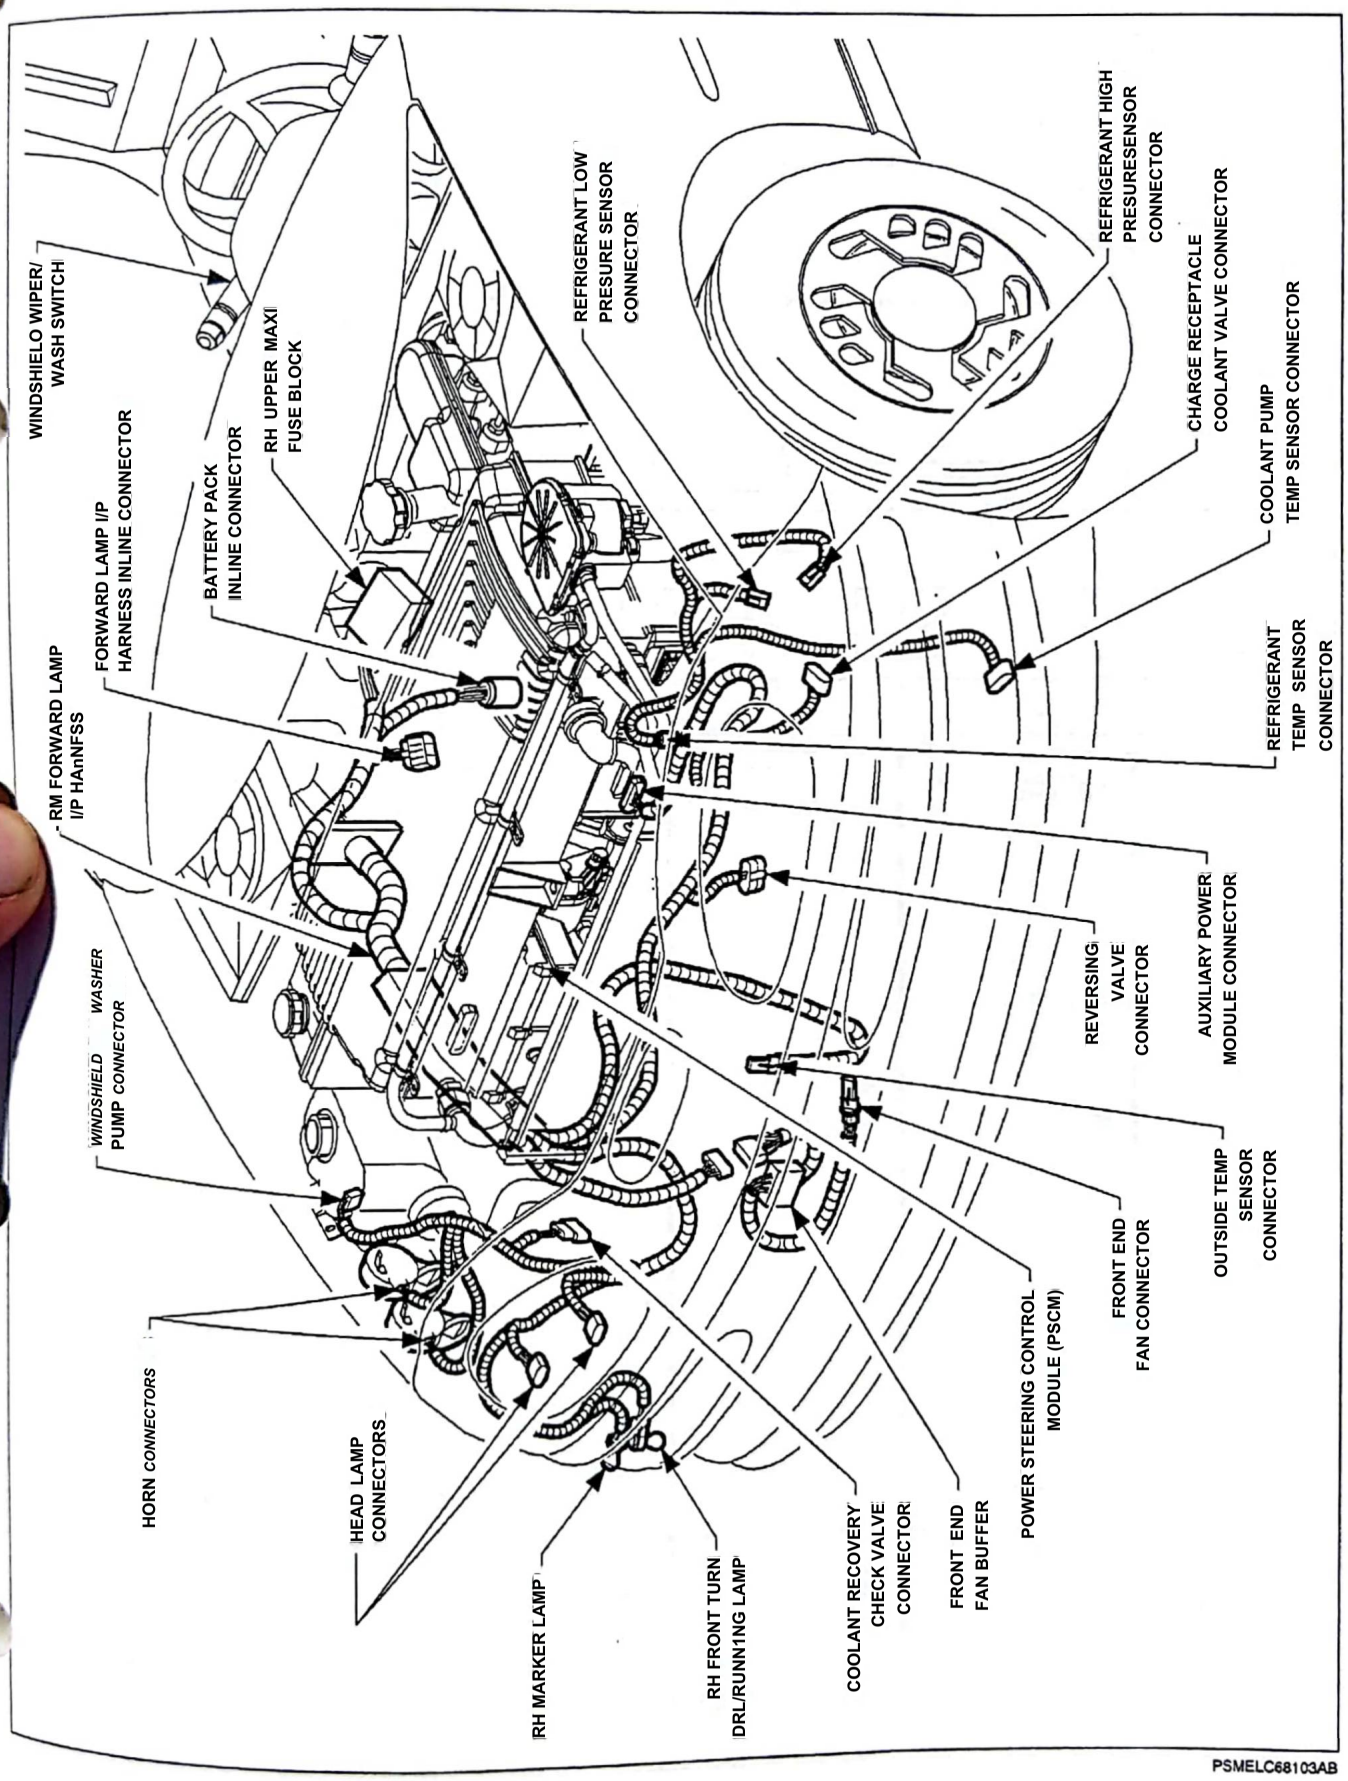
WINDSHIELO WIPER/ WASH SWITCH
RM FORWARD LAMP I/P HAnNFSS
FORWARD LAMP I/P HARNESS INLINE CONNECTOR
BATTERY PACK INLINE CONNECTOR
RH UPPER MAXI FUSE BLOCK
REFRIGERANT LOW PRESURE SENSOR CONNECTOR
REFRIGERANT HIGH PRESURESENSOR CONNECTOR
CHARGE RECEPTACLE COOLANT VALVE CONNECTOR
COOLANT PUMP TEMP SENSOR CONNECTOR
REFRIGERANT TEMP SENSOR CONNECTOR
AUXILIARY POWER MODULE CONNECTOR
REVERSING VALVE CONNECTOR
OUTSIDE TEMP SENSOR CONNECTOR
FRONT END FAN CONNECTOR
POWER STEERING CONTROL MODULE (PSCM)
FRONT END FAN BUFFER
COOLANT RECOVERY CHECK VALVE CONNECTOR
RH FRONT TURN DRL/RUNN1NG LAMP
RH MARKER LAMP
HEAD LAMP CONNECTORS
HORN CONNECTORS
WINDSHIELD WASHER PUMP CONNECTOR
PSMELC68103AB

BRAKE SYSTEM

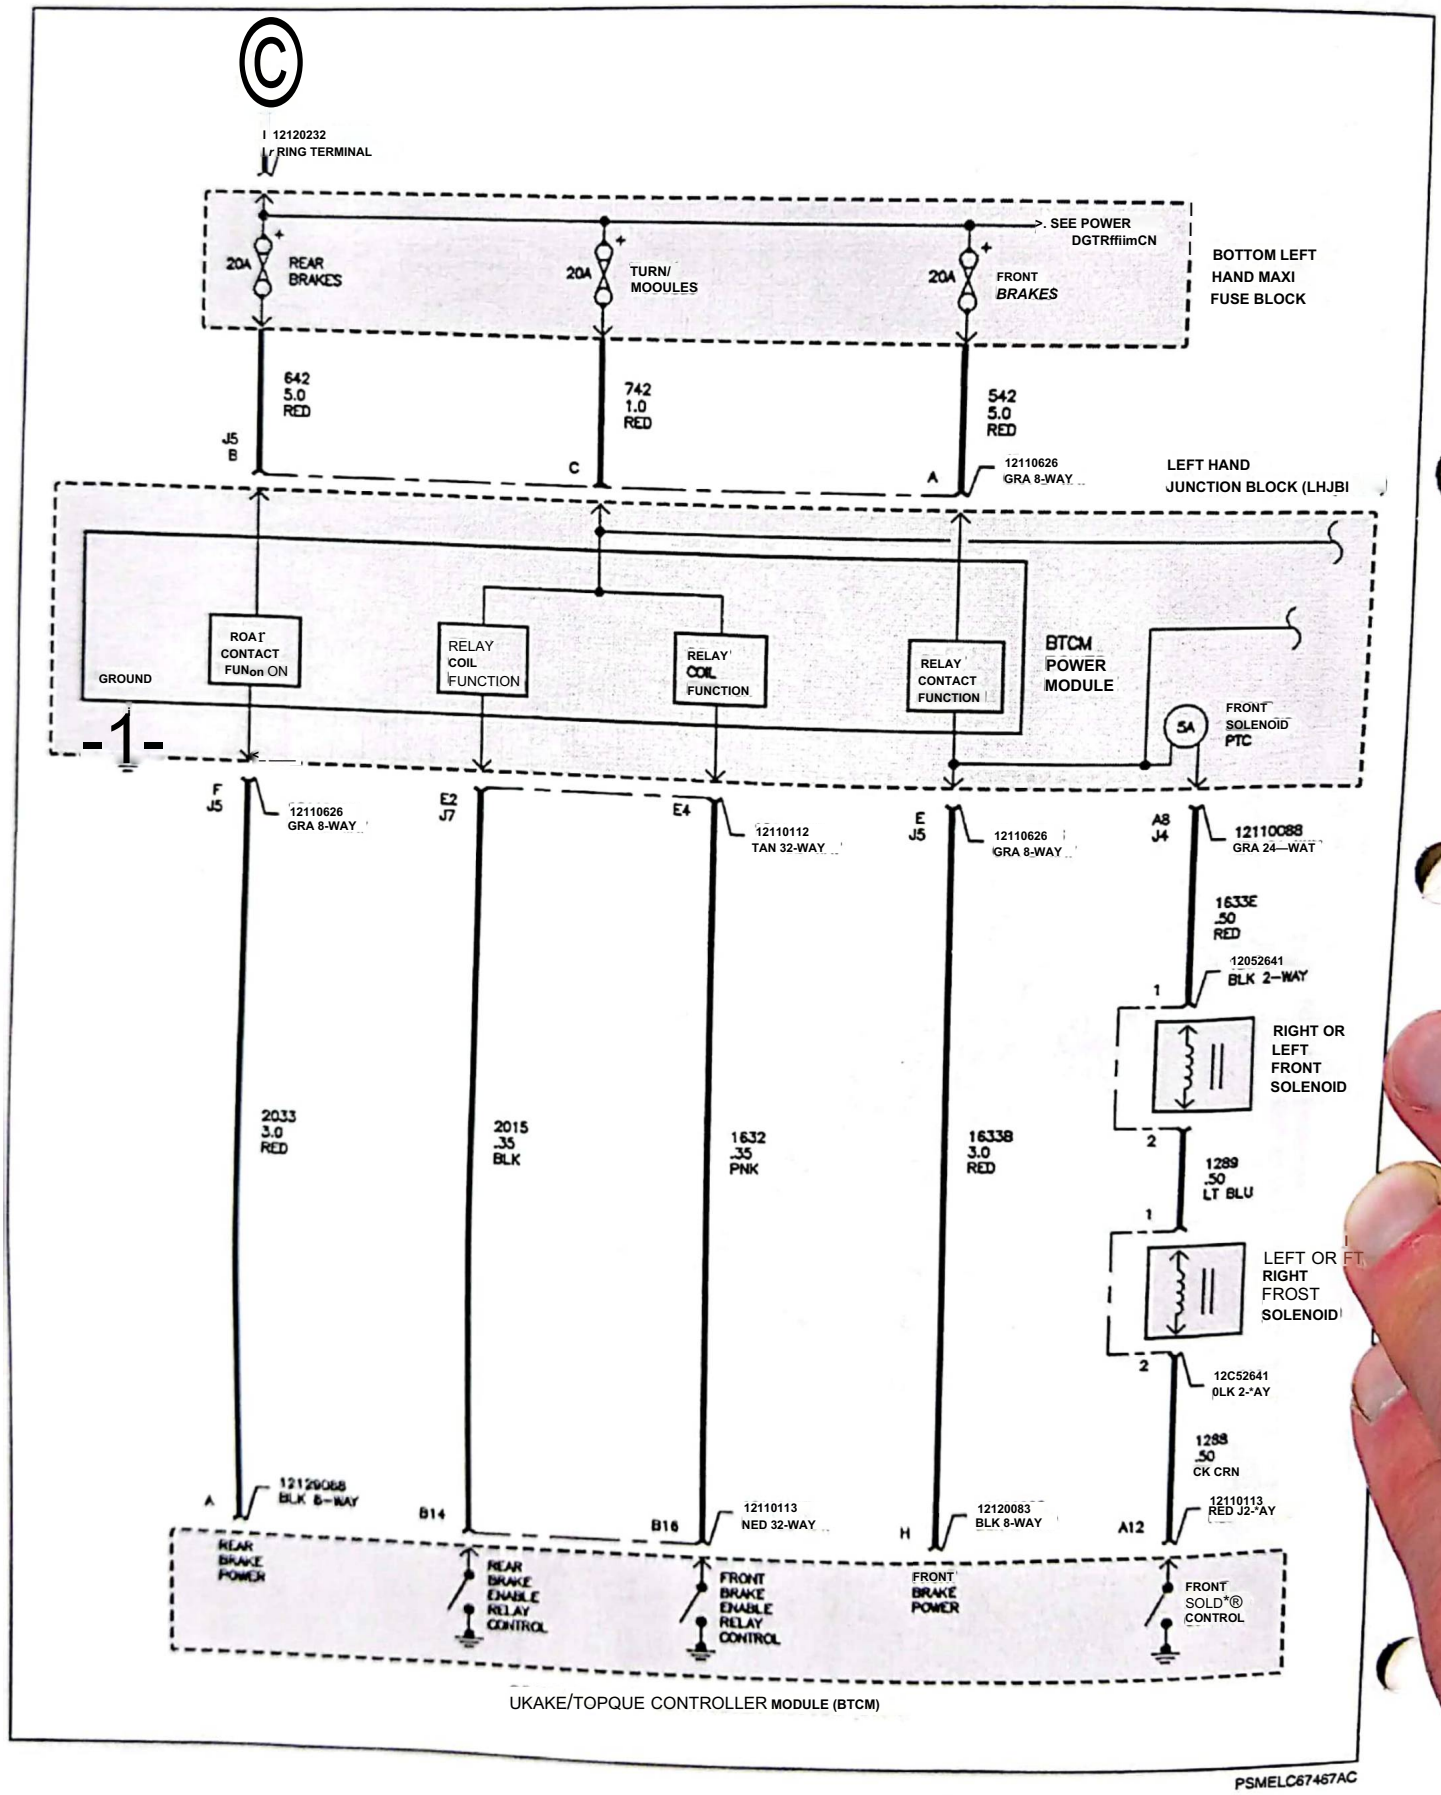

UKAKE/TOPQUE CONTROLLER MODULE (BTCM)

PSMELC67467AC

CamScanner

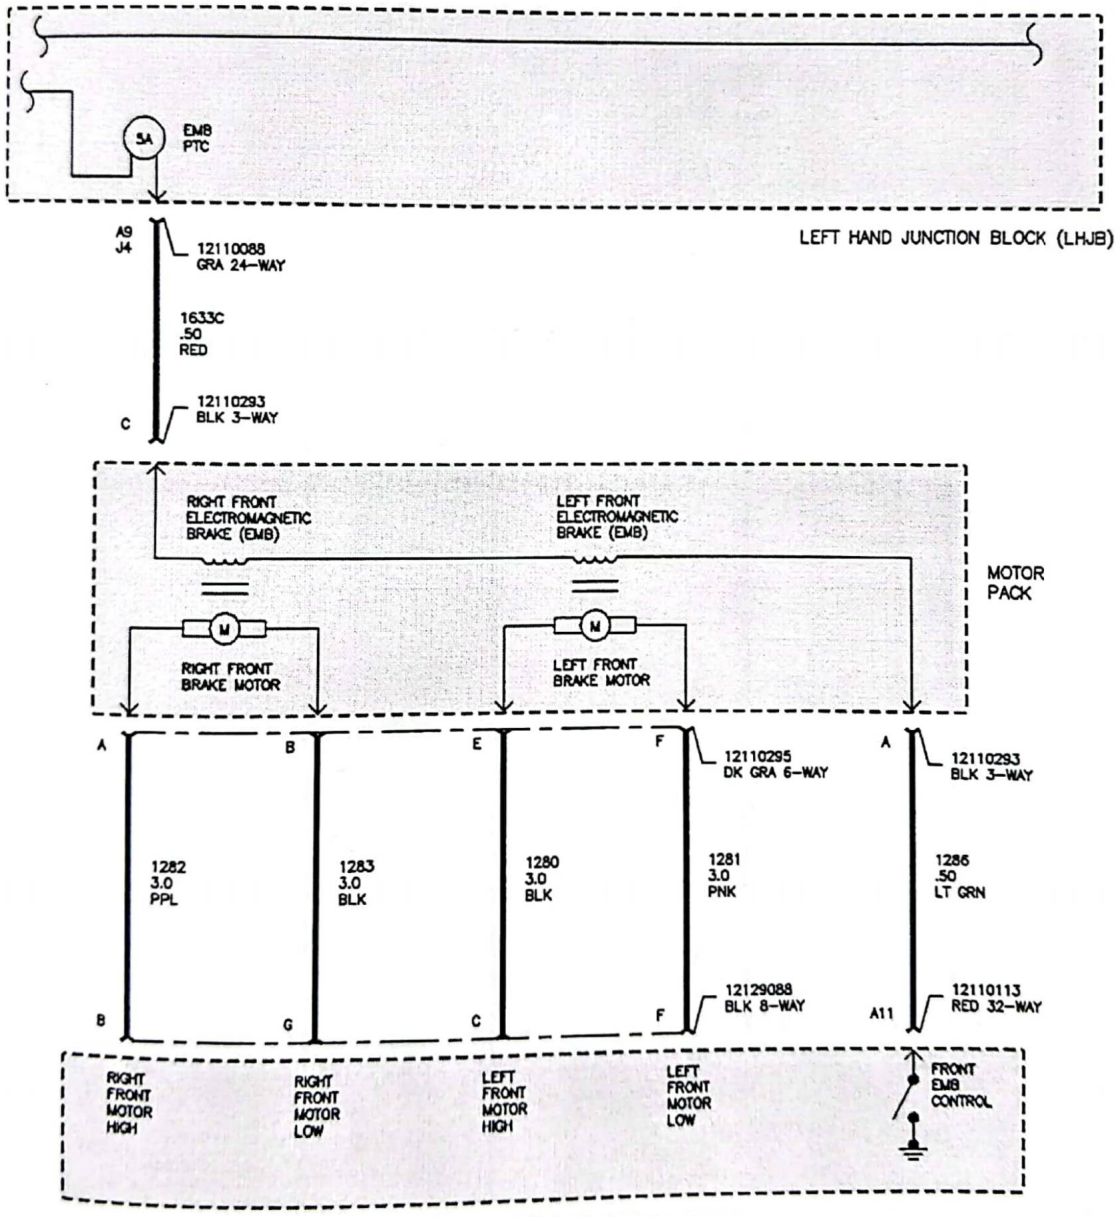

BRAKE/TORQUE CONTROLLER MODULE (0TCM)

PSMELC67468AB

CamScanner

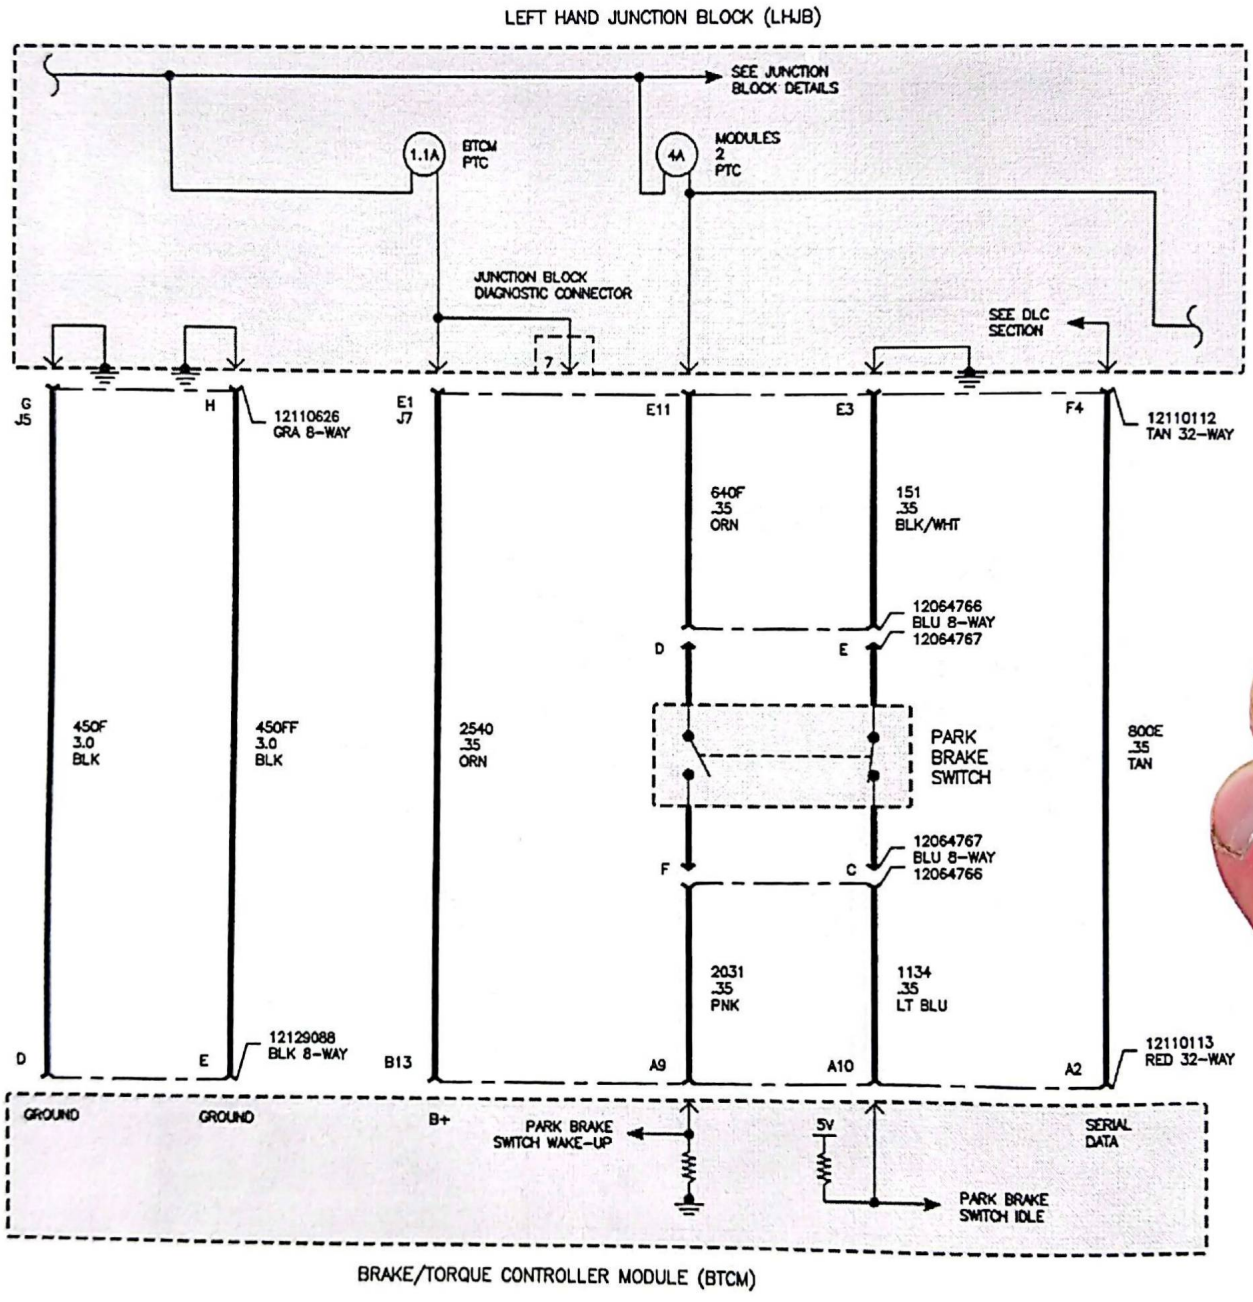

PSMELC67469AB

CamScanner

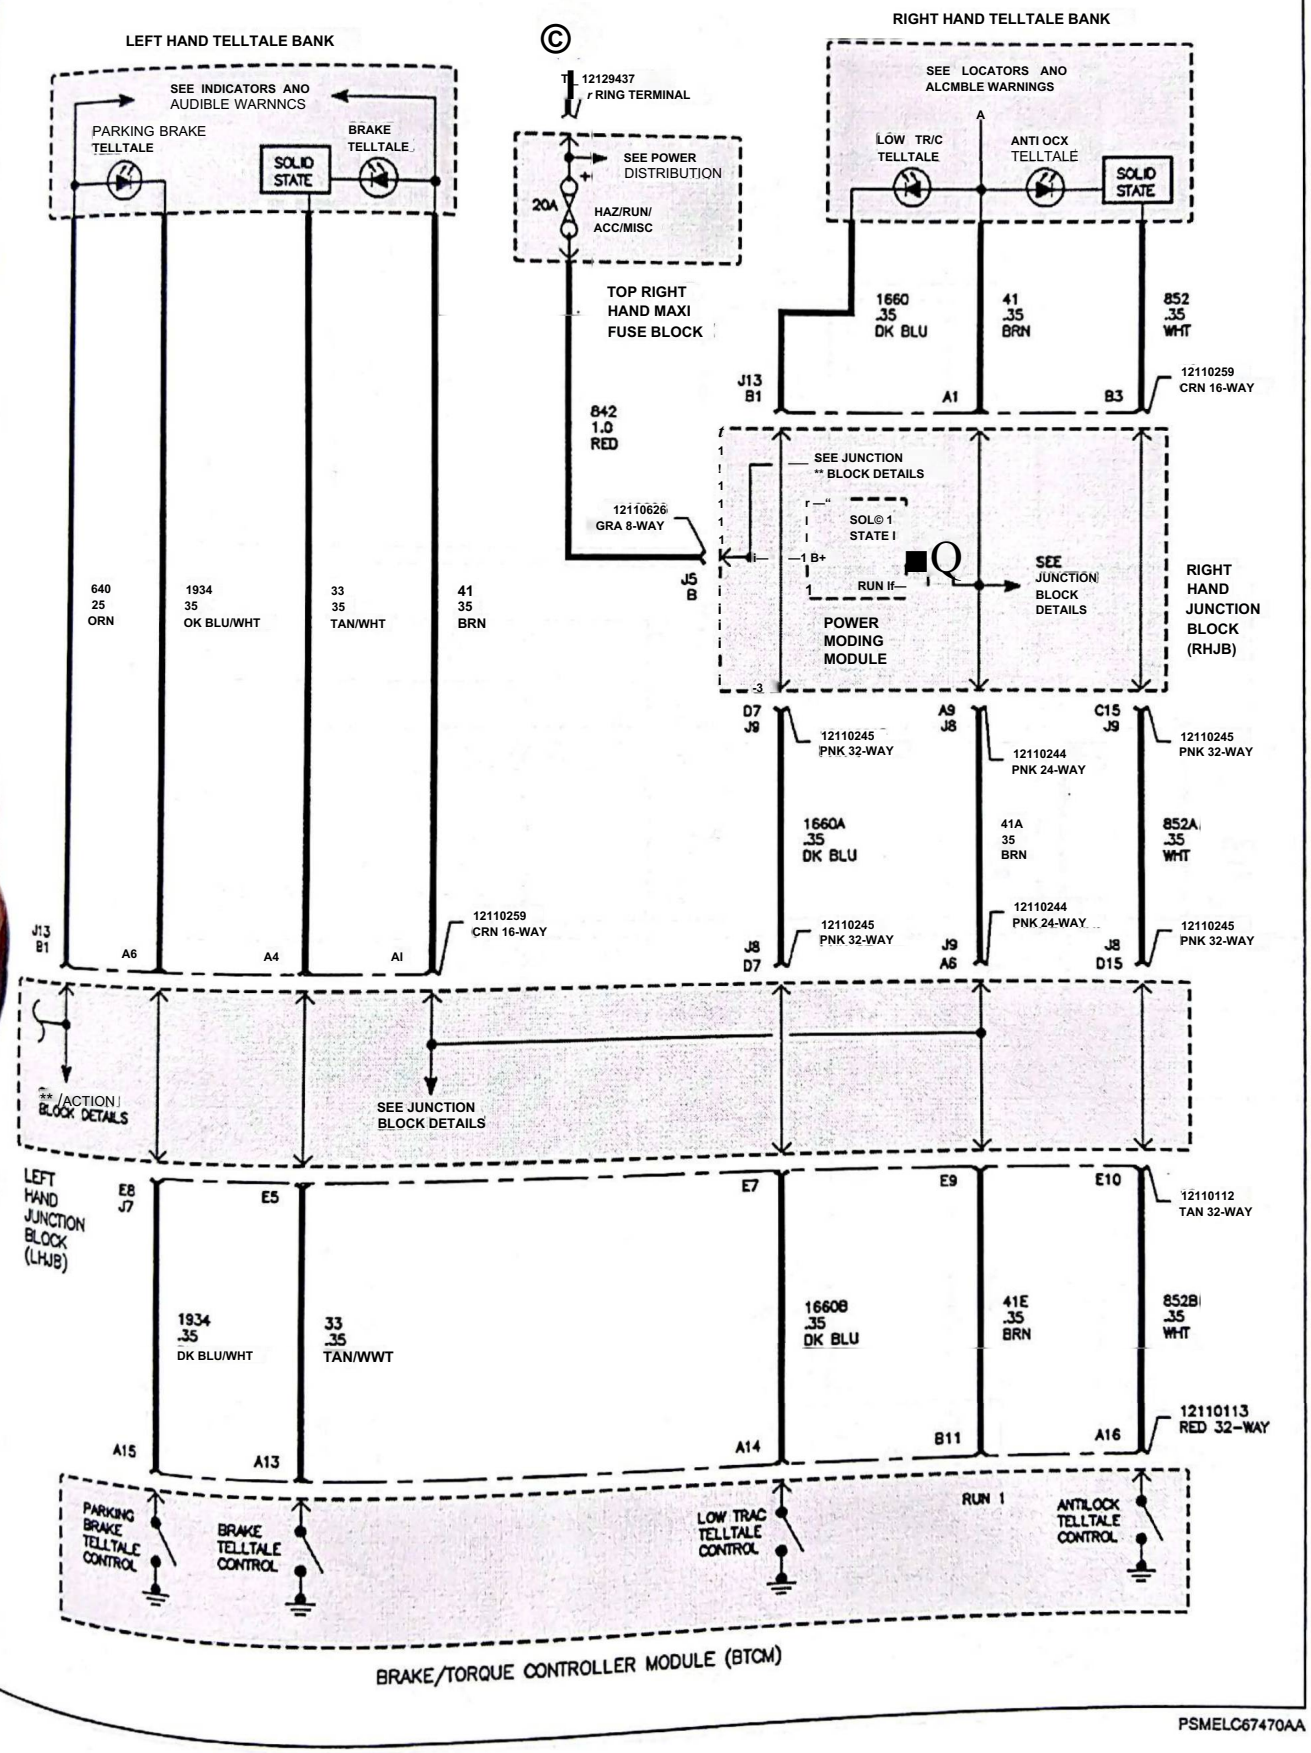
LEFT HAND TELLTALE BANK
SEE INDICATORS ANO AUDIBLE WARNNCS
PARKING BRAKE TELLTALE
SOLID STATE
BRAKE TELLTALE
RIGHT HAND TELLTALE BANK
SEE LOCATORS ANO ALCMBLE WARNINGS
LOW TR/C TELLTALE
ANTI OCX TELLTALE
SOLID STATE
12129437 RING TERMINAL
SEE POWER DISTRIBUTION
20A
HAZ/RUN/ ACC/MISC
TOP RIGHT HAND MAXI FUSE BLOCK
842 1.0 RED
12110626 GRA 8-WAY
J5 B
SEE JUNCTION ** BLOCK DETAILS
SOL© 1 STATE I
B+
RUN If
POWER MODING MODULE
SEE JUNCTION BLOCK DETAILS
RIGHT HAND JUNCTION BLOCK (RHJB)
1660 .35 DK BLU
41 .35 BRN
852 .35 WHT
J13 B1
A1
B3
12110259 CRN 16-WAY
640 25 ORN
1934 35 OK BLU/WHT
33 35 TAN/WHT
41 35 BRN
J13 B1
A6
A4
AI
12110259 CRN 16-WAY
D7 J9
A9 J8
C15 J9
12110245 PNK 32-WAY
12110244 PNK 24-WAY
12110245 PNK 32-WAY
1660A .35 DK BLU
41A 35 BRN
852A .35 WHT
12110245 PNK 32-WAY
12110244 PNK 24-WAY
12110245 PNK 32-WAY
J8 D7
J9 A5
J8 D15
** /ACTION BLOCK DETAILS
SEE JUNCTION BLOCK DETAILS
LEFT HAND JUNCTION BLOCK (LHJB)
E8 J7
E5
E7
E9
E10
12110112 TAN 32-WAY
1934 .35 DK BLU/WHT
33 .35 TAN/WWT
1660B .35 DK BLU
41E .35 BRN
852B .35 WHT
12110113 RED 32-WAY
A15
A13
A14
B11
A16
PARKING BRAKE TELLTALE CONTROL
BRAKE TELLTALE CONTROL
LOW TRAC TELLTALE CONTROL
RUN 1
ANTILOCK TELLTALE CONTROL
BRAKE/TORQUE CONTROLLER MODULE (BTCM)
PSMELC67470AA

CamScanner

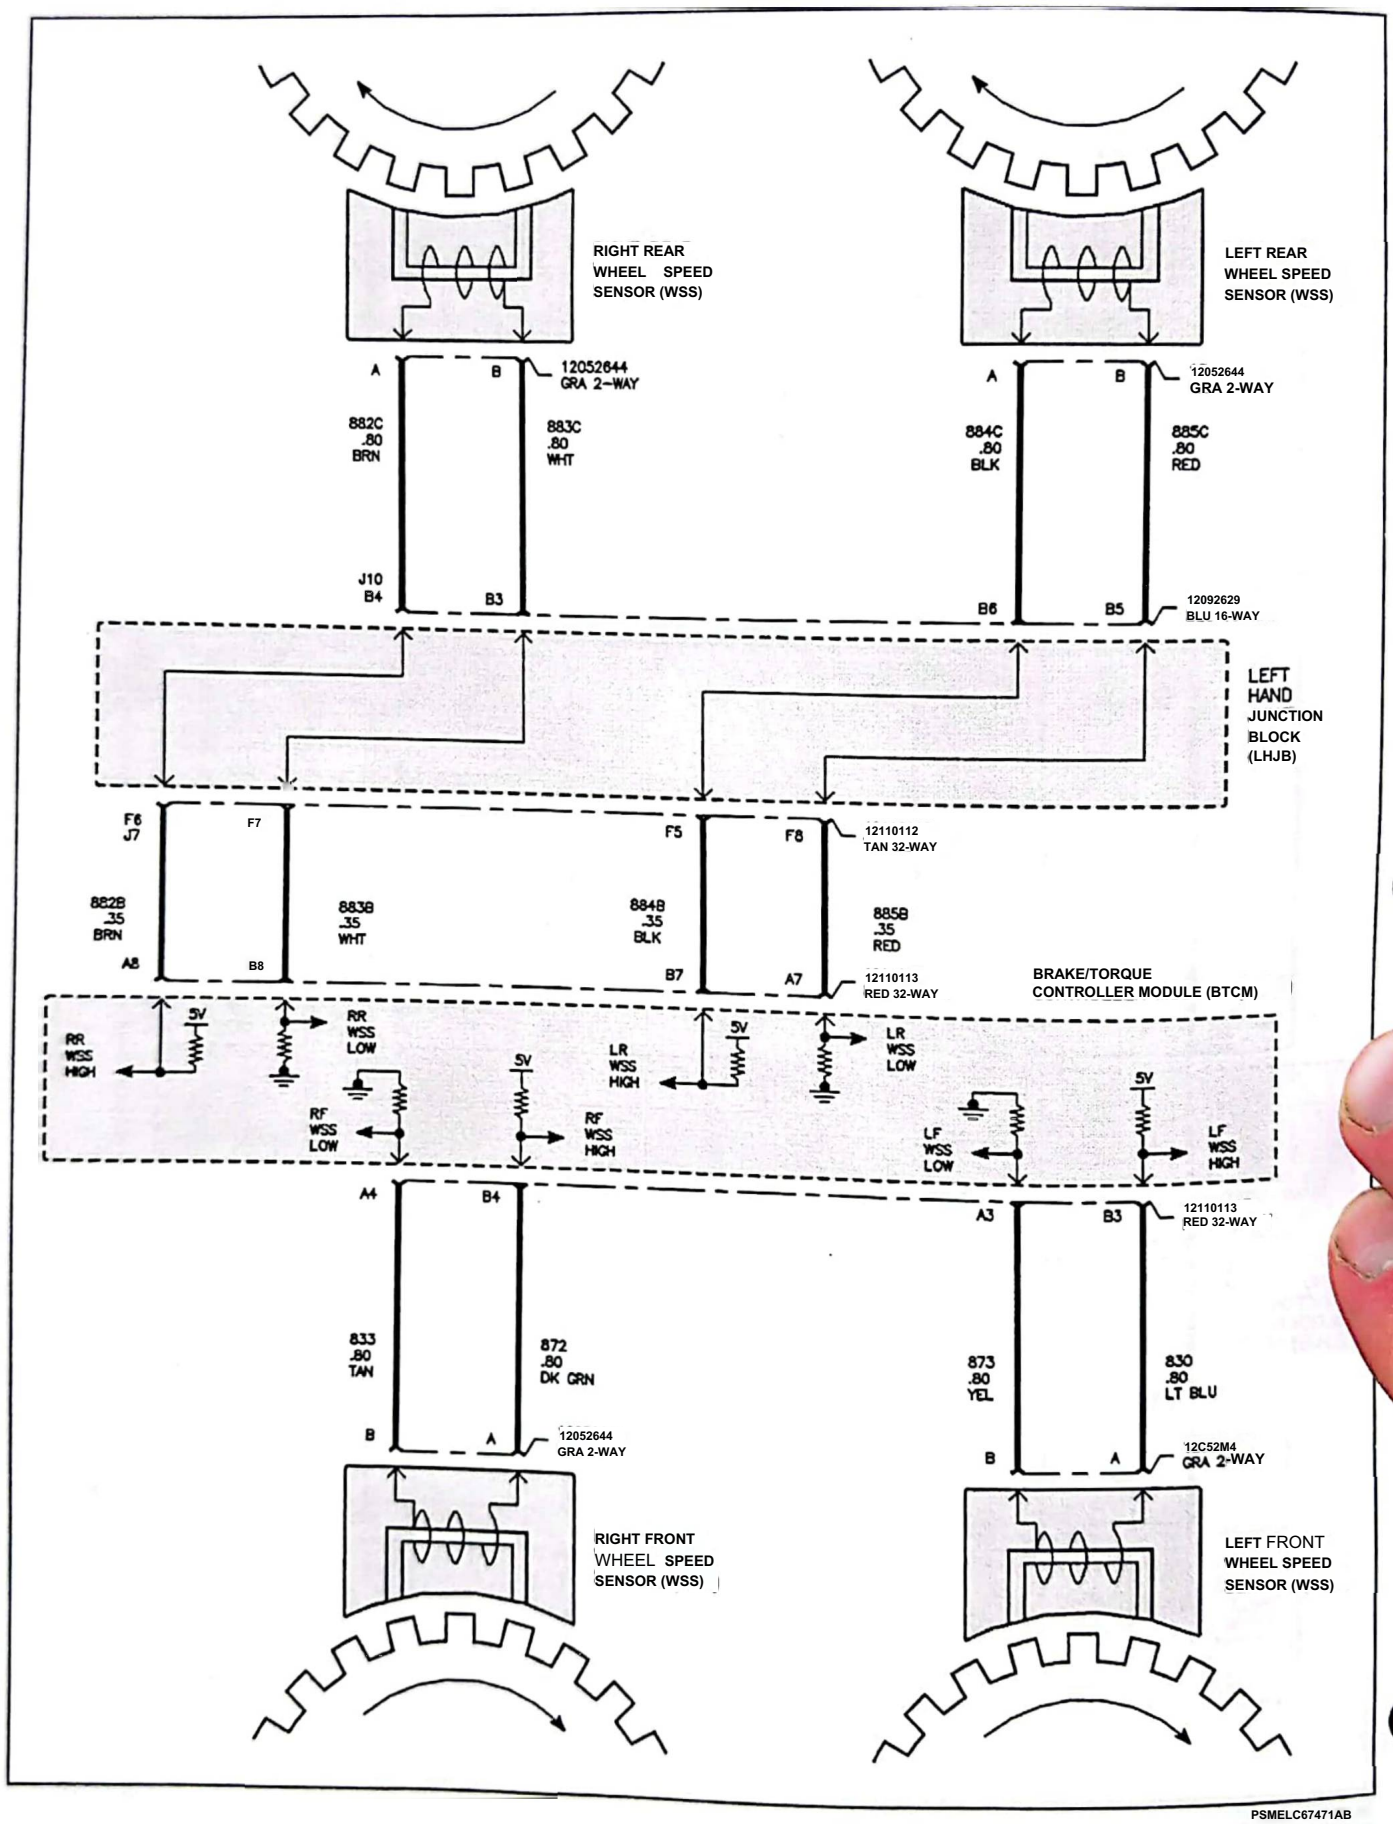
RIGHT REAR WHEEL SPEED SENSOR (WSS)
LEFT REAR WHEEL SPEED SENSOR (WSS)
A
B
12052644 GRA 2-WAY
882C .80 BRN
883C .80 WHT
884C .80 BLK
885C .80 RED
J10 B4
B3
B6
B5
12092629 BLU 16-WAY
LEFT HAND JUNCTION BLOCK (LHJB)
F6 J7
F7
F5
F8
12110112 TAN 32-WAY
882B .35 BRN
883B .35 WHT
884B .35 BLK
885B .35 RED
A8
B8
B7
A7
12110113 RED 32-WAY
BRAKE/TORQUE CONTROLLER MODULE (BTCM)
5V
RR WSS HIGH
RR WSS LOW
RF WSS LOW
RF WSS HIGH
LR WSS HIGH
LR WSS LOW
LF WSS LOW
LF WSS HIGH
A4
B4
A3
B3
12110113 RED 32-WAY
833 .80 TAN
872 .80 DK GRN
873 .80 YEL
830 .80 LT BLU
B
A
12052644 GRA 2-WAY
12C52M4 GRA 2-WAY
RIGHT FRONT WHEEL SPEED SENSOR (WSS)
LEFT FRONT WHEEL SPEED SENSOR (WSS)
PSMELC67471AB

CamScanner

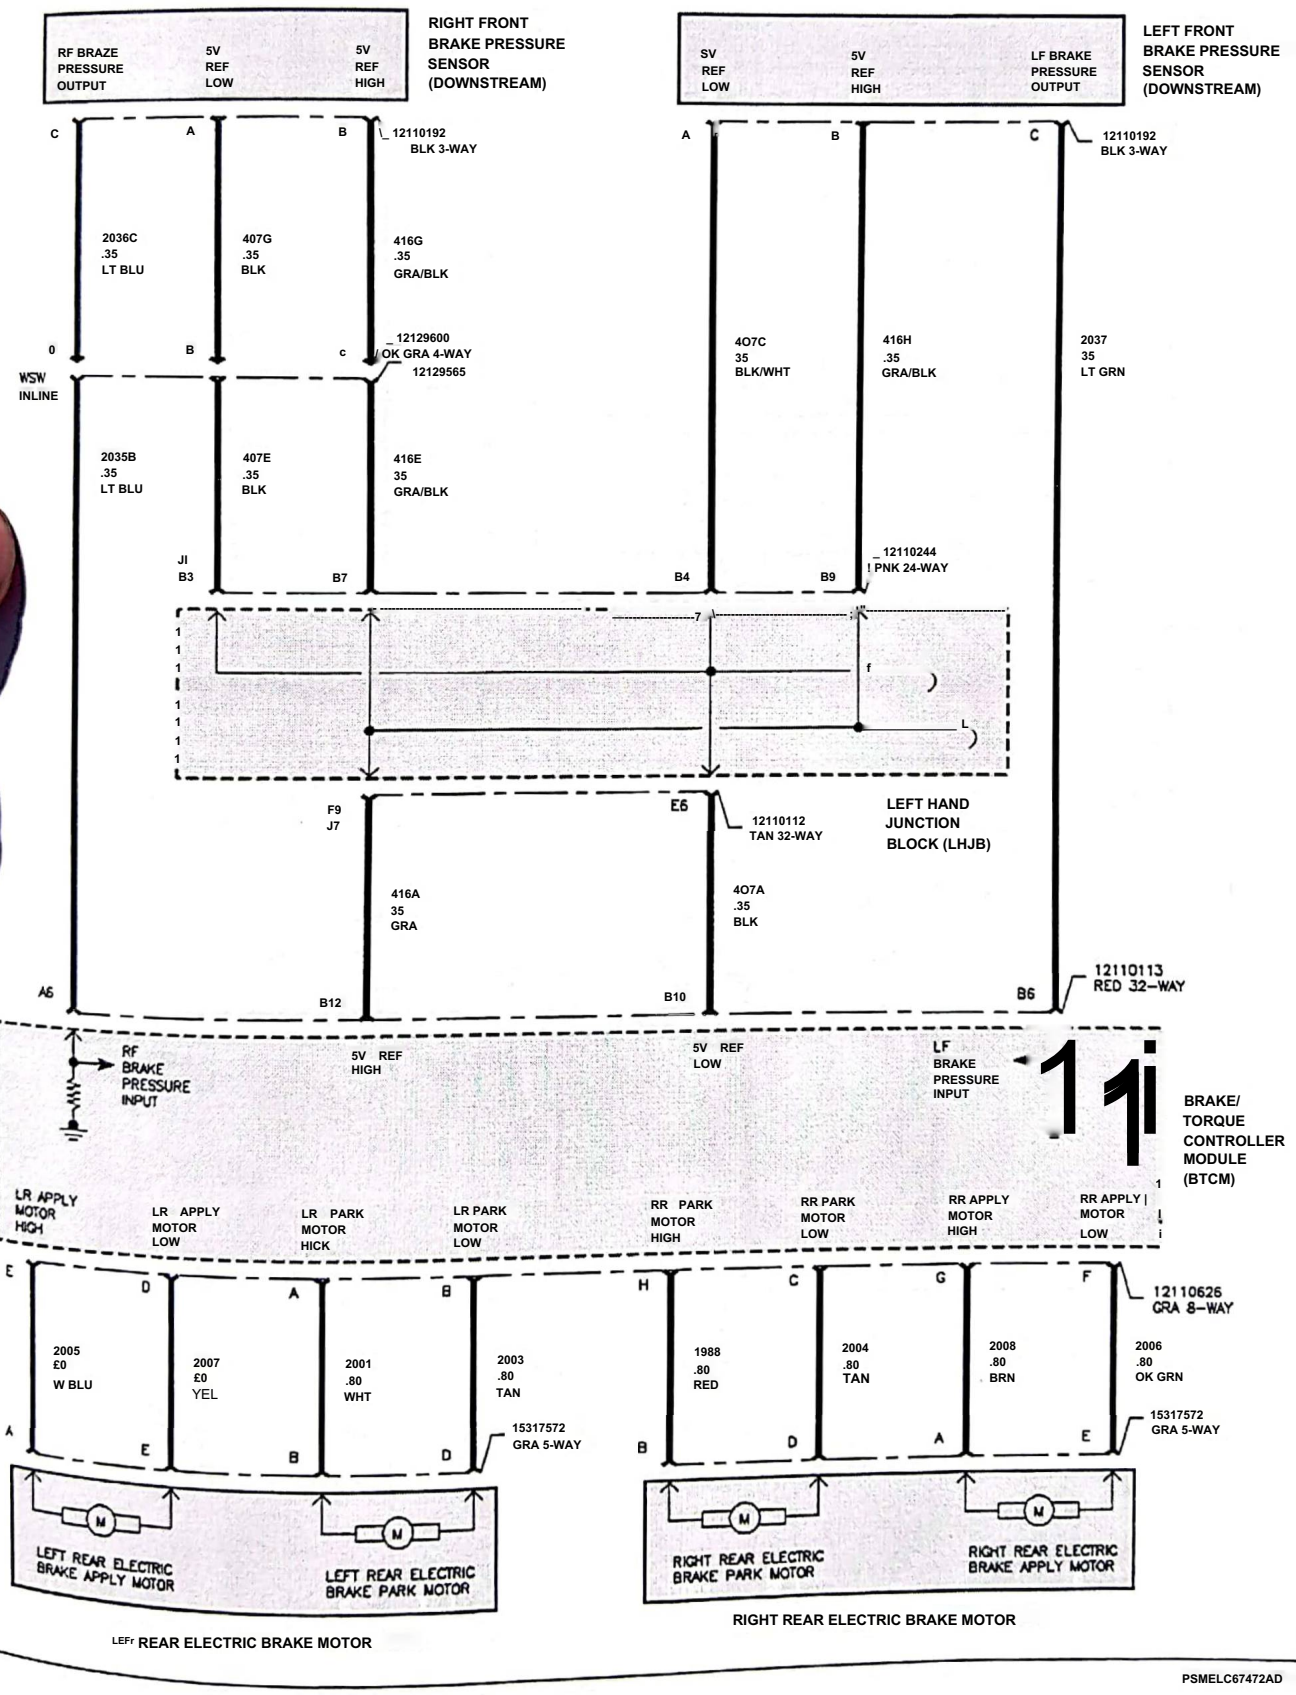
RF BRAZE PRESSURE OUTPUT
5V REF LOW
5V REF HIGH
RIGHT FRONT BRAKE PRESSURE SENSOR (DOWNSTREAM)
12110192 BLK 3-WAY
2036C .35 LT BLU
407G .35 BLK
416G .35 GRA/BLK
12129600 OK GRA 4-WAY
12129565
WSW INLINE
2035B .35 LT BLU
407E .35 BLK
416E 35 GRA/BLK
SV REF LOW
5V REF HIGH
LF BRAKE PRESSURE OUTPUT
LEFT FRONT BRAKE PRESSURE SENSOR (DOWNSTREAM)
12110192 BLK 3-WAY
4O7C 35 BLK/WHT
416H .35 GRA/BLK
2037 35 LT GRN
12110244 PNK 24-WAY
LEFT HAND JUNCTION BLOCK (LHJB)
12110112 TAN 32-WAY
416A 35 GRA
4O7A .35 BLK
12110113 RED 32-WAY
RF BRAKE PRESSURE INPUT
5V REF HIGH
5V REF LOW
LF BRAKE PRESSURE INPUT
BRAKE/ TORQUE CONTROLLER MODULE (BTCM)
LR APPLY MOTOR HIGH
LR APPLY MOTOR LOW
LR PARK MOTOR HICK
LR PARK MOTOR LOW
RR PARK MOTOR HIGH
RR PARK MOTOR LOW
RR APPLY MOTOR HIGH
RR APPLY MOTOR LOW
2005 £0 W BLU
2007 £0 YEL
2001 .80 WHT
2003 .80 TAN
15317572 GRA 5-WAY
1988 .80 RED
2004 .80 TAN
2008 .80 BRN
2006 .80 OK GRN
12110626 GRA 8-WAY
15317572 GRA 5-WAY
LEFT REAR ELECTRIC BRAKE APPLY MOTOR
LEFT REAR ELECTRIC BRAKE PARK MOTOR
RIGHT REAR ELECTRIC BRAKE PARK MOTOR
RIGHT REAR ELECTRIC BRAKE APPLY MOTOR
LEFr REAR ELECTRIC BRAKE MOTOR
RIGHT REAR ELECTRIC BRAKE MOTOR
PSMELC67472AD

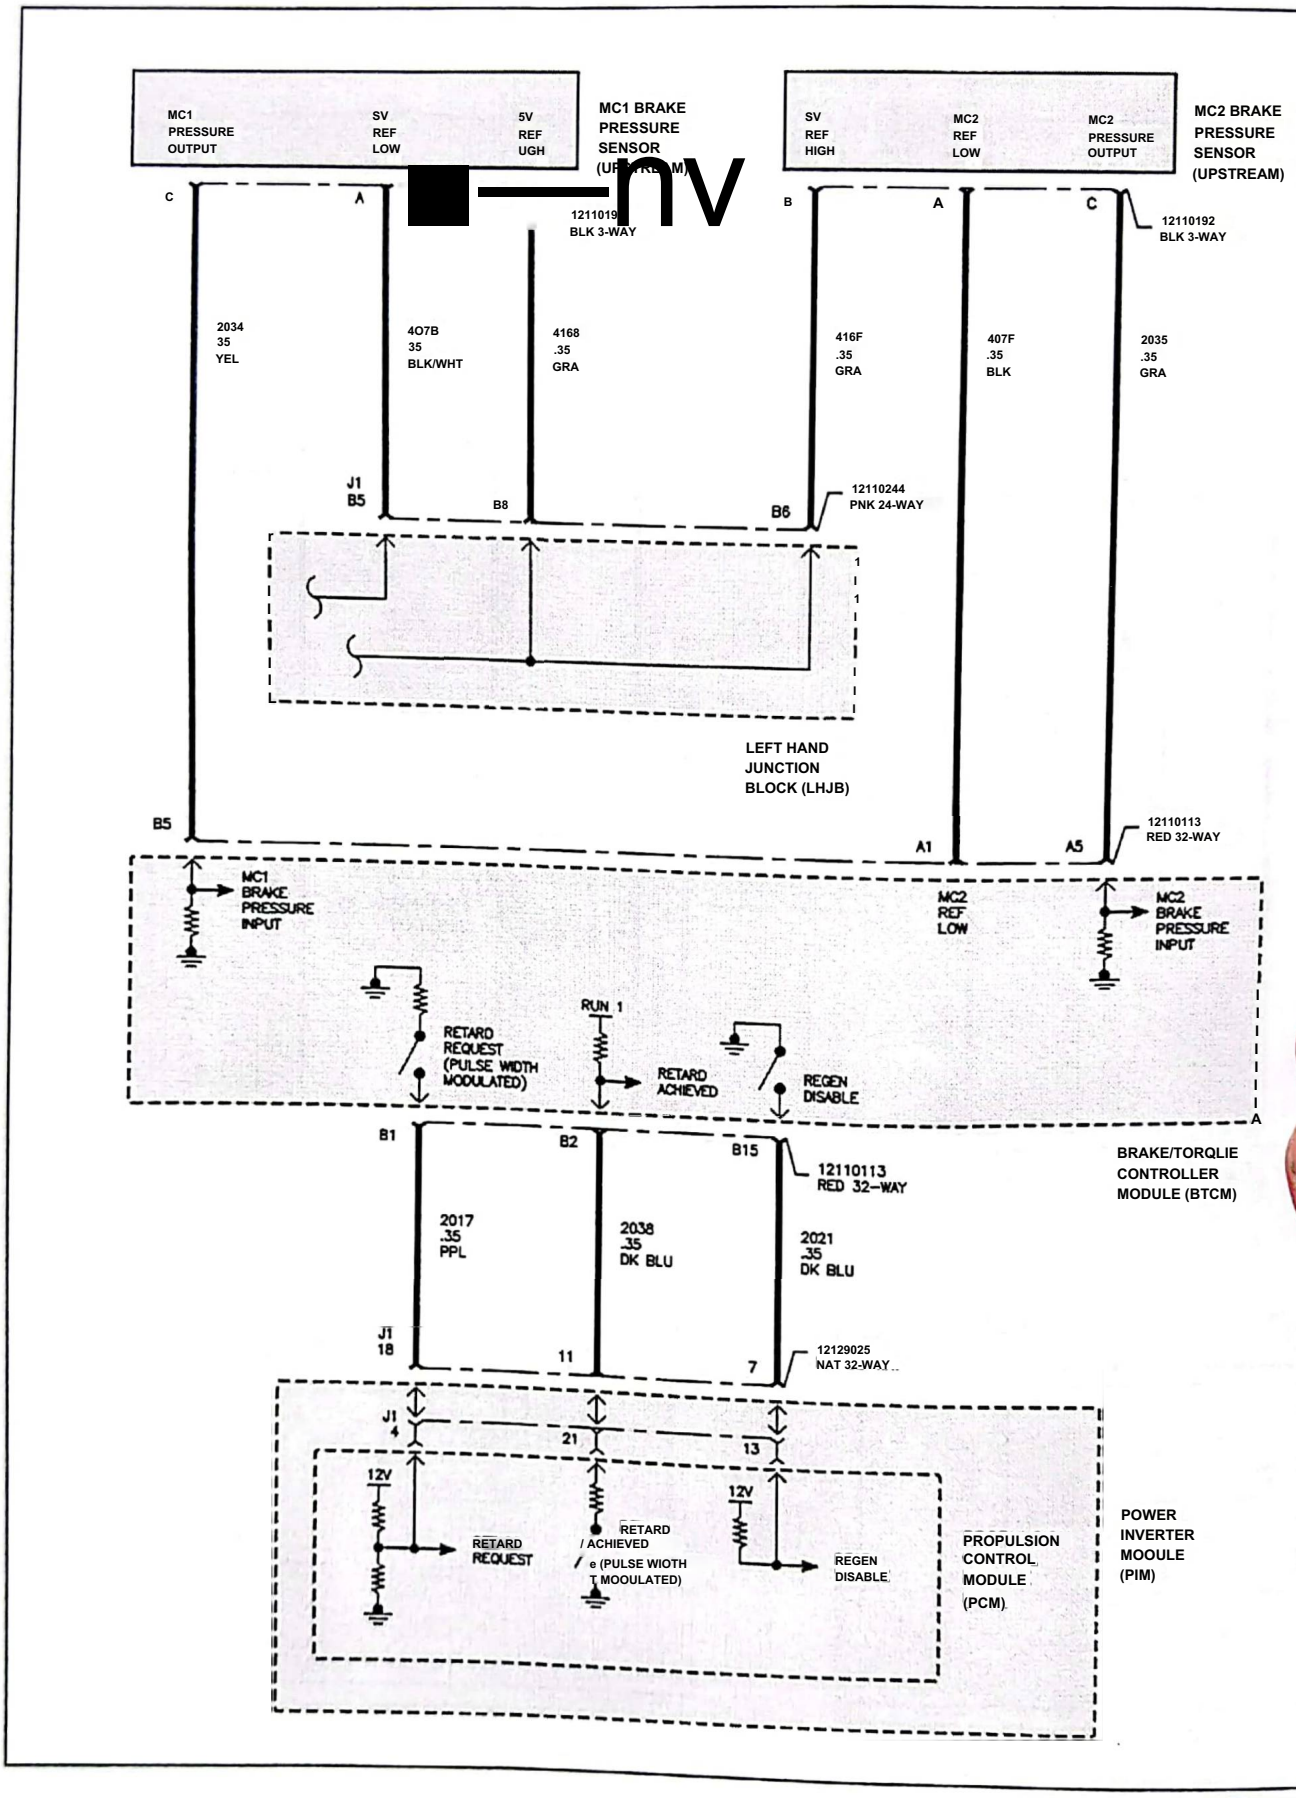

PSMELC67473AC

CamScanner

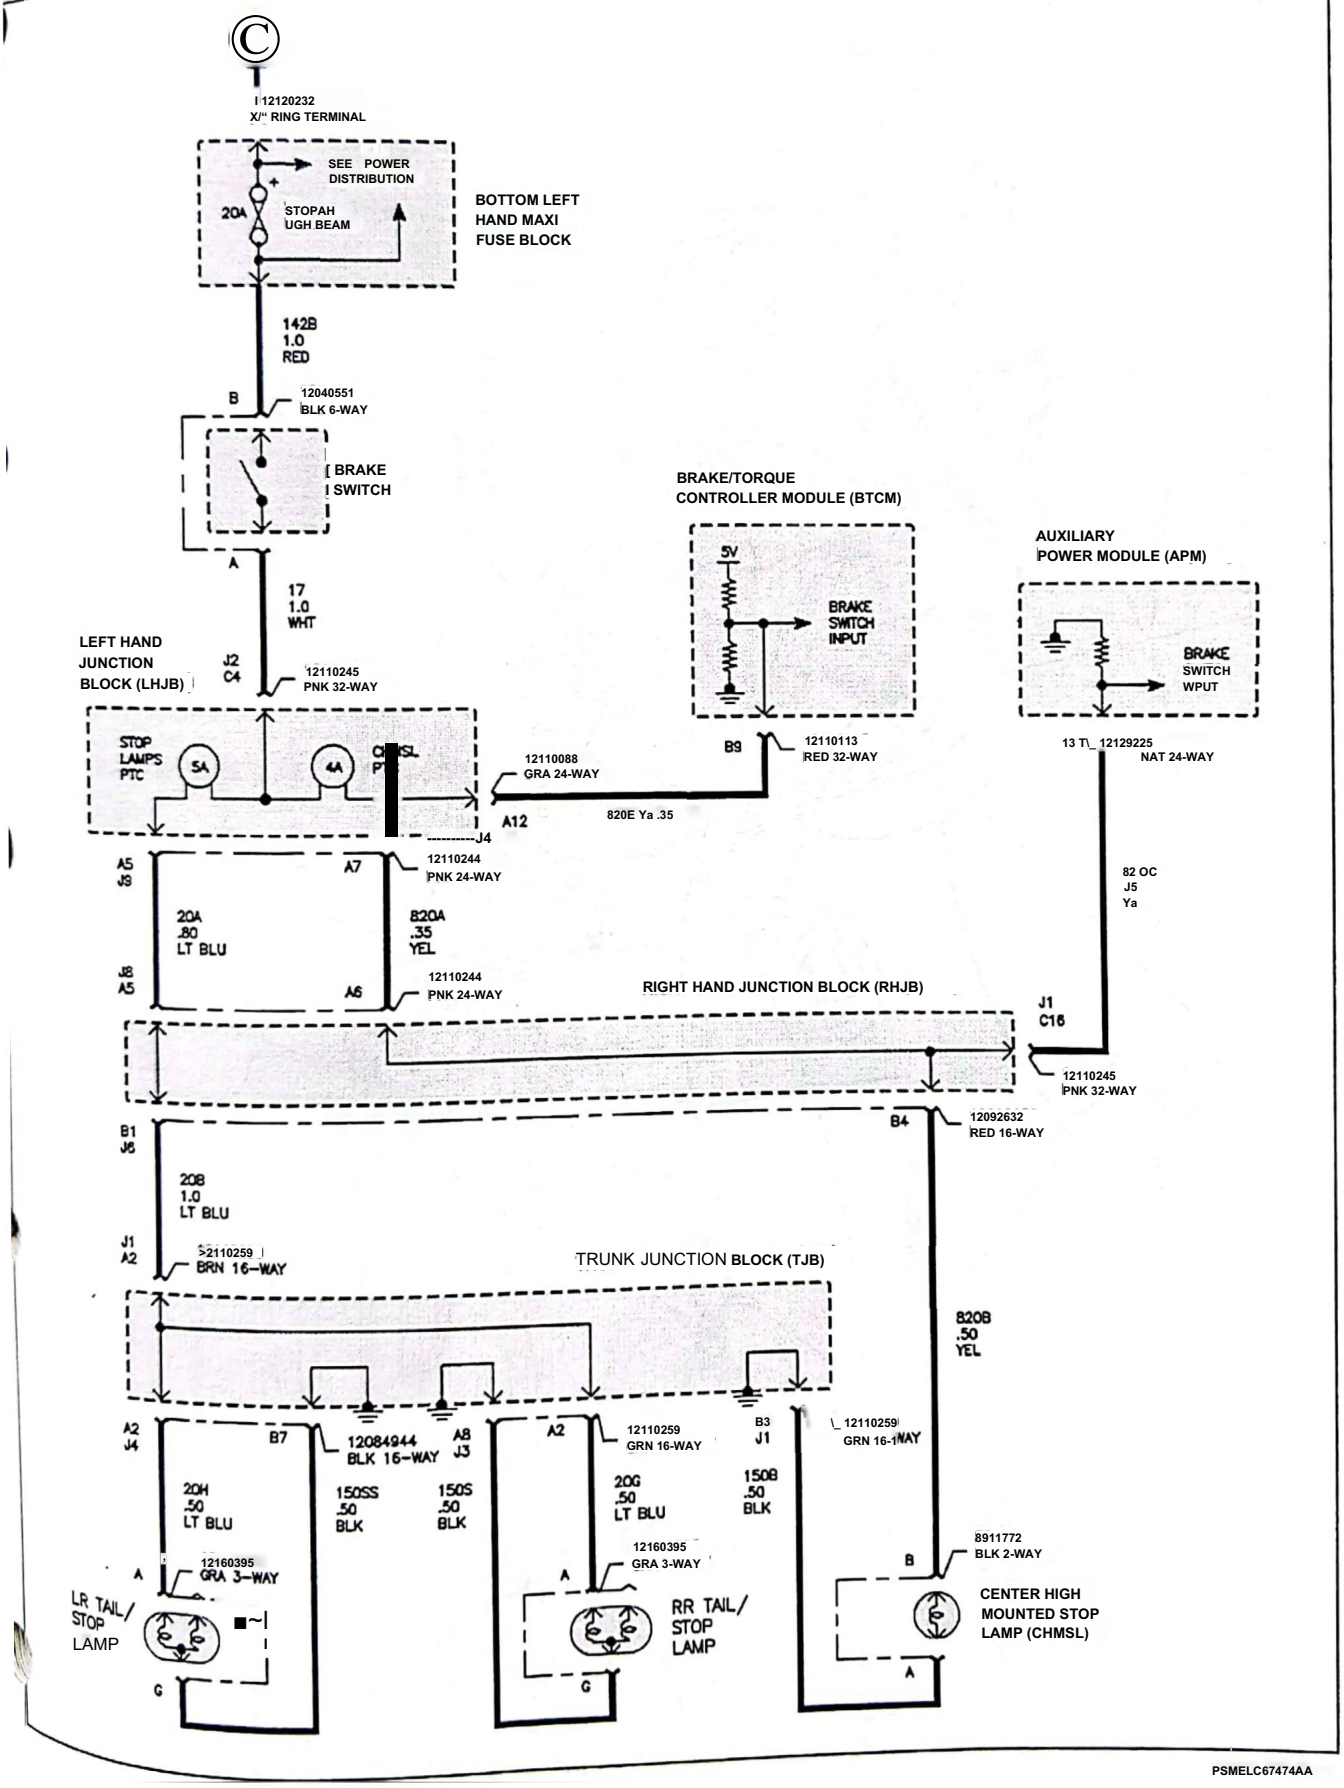
C
12120232
X/H RING TERMINAL
SEE POWER DISTRIBUTION
20A
STOPAH
UGH BEAM
BOTTOM LEFT HAND MAXI FUSE BLOCK
142B
1.0
RED
B
12040551
BLK 6-WAY
BRAKE SWITCH
A
17
1.0
WHT
LEFT HAND JUNCTION BLOCK (LHJB)
J2
C4
12110245
PNK 32-WAY
STOP LAMPS PTC
5A
4A
BRAKE/TORQUE CONTROLLER MODULE (BTCM)
5V
BRAKE SWITCH INPUT
AUXILIARY POWER MODULE (APM)
BRAKE SWITCH WPUT
B9
12110113
RED 32-WAY
12110088
GRA 24-WAY
A12
820E Ya .35
13 T_ 12129225
NAT 24-WAY
J4
A5
J9
A7
12110244
PNK 24-WAY
20A
.80
LT BLU
820A
.35
YEL
J8
A5
A6
12110244
PNK 24-WAY
82 OC
J5
Ya
RIGHT HAND JUNCTION BLOCK (RHJB)
J1
C16
12110245
PNK 32-WAY
B1
J6
B4
12092632
RED 16-WAY
20B
1.0
LT BLU
J1
A2
>2110259
BRN 16-WAY
TRUNK JUNCTION BLOCK (TJB)
820B
.50
YEL
A2
J4
B7
12084944
BLK 16-WAY
A8
J3
20H
.50
LT BLU
150SS
.50
BLK
150S
.50
BLK
A2
12110259
GRN 16-WAY
20G
.50
LT BLU
B3
J1
150B
.50
BLK
_ 12110259
GRN 16-1NAY
8911772
BLK 2-WAY
A
12160395
GRA 3-WAY
LR TAIL/ STOP LAMP
G
A
12160395
GRA 3-WAY
RR TAIL/ STOP LAMP
G
B
CENTER HIGH MOUNTED STOP LAMP (CHMSL)
A
PSMELC67474AA

CamScanner

BRAKE SYSTEM COMPONENT LOCATION VIEW

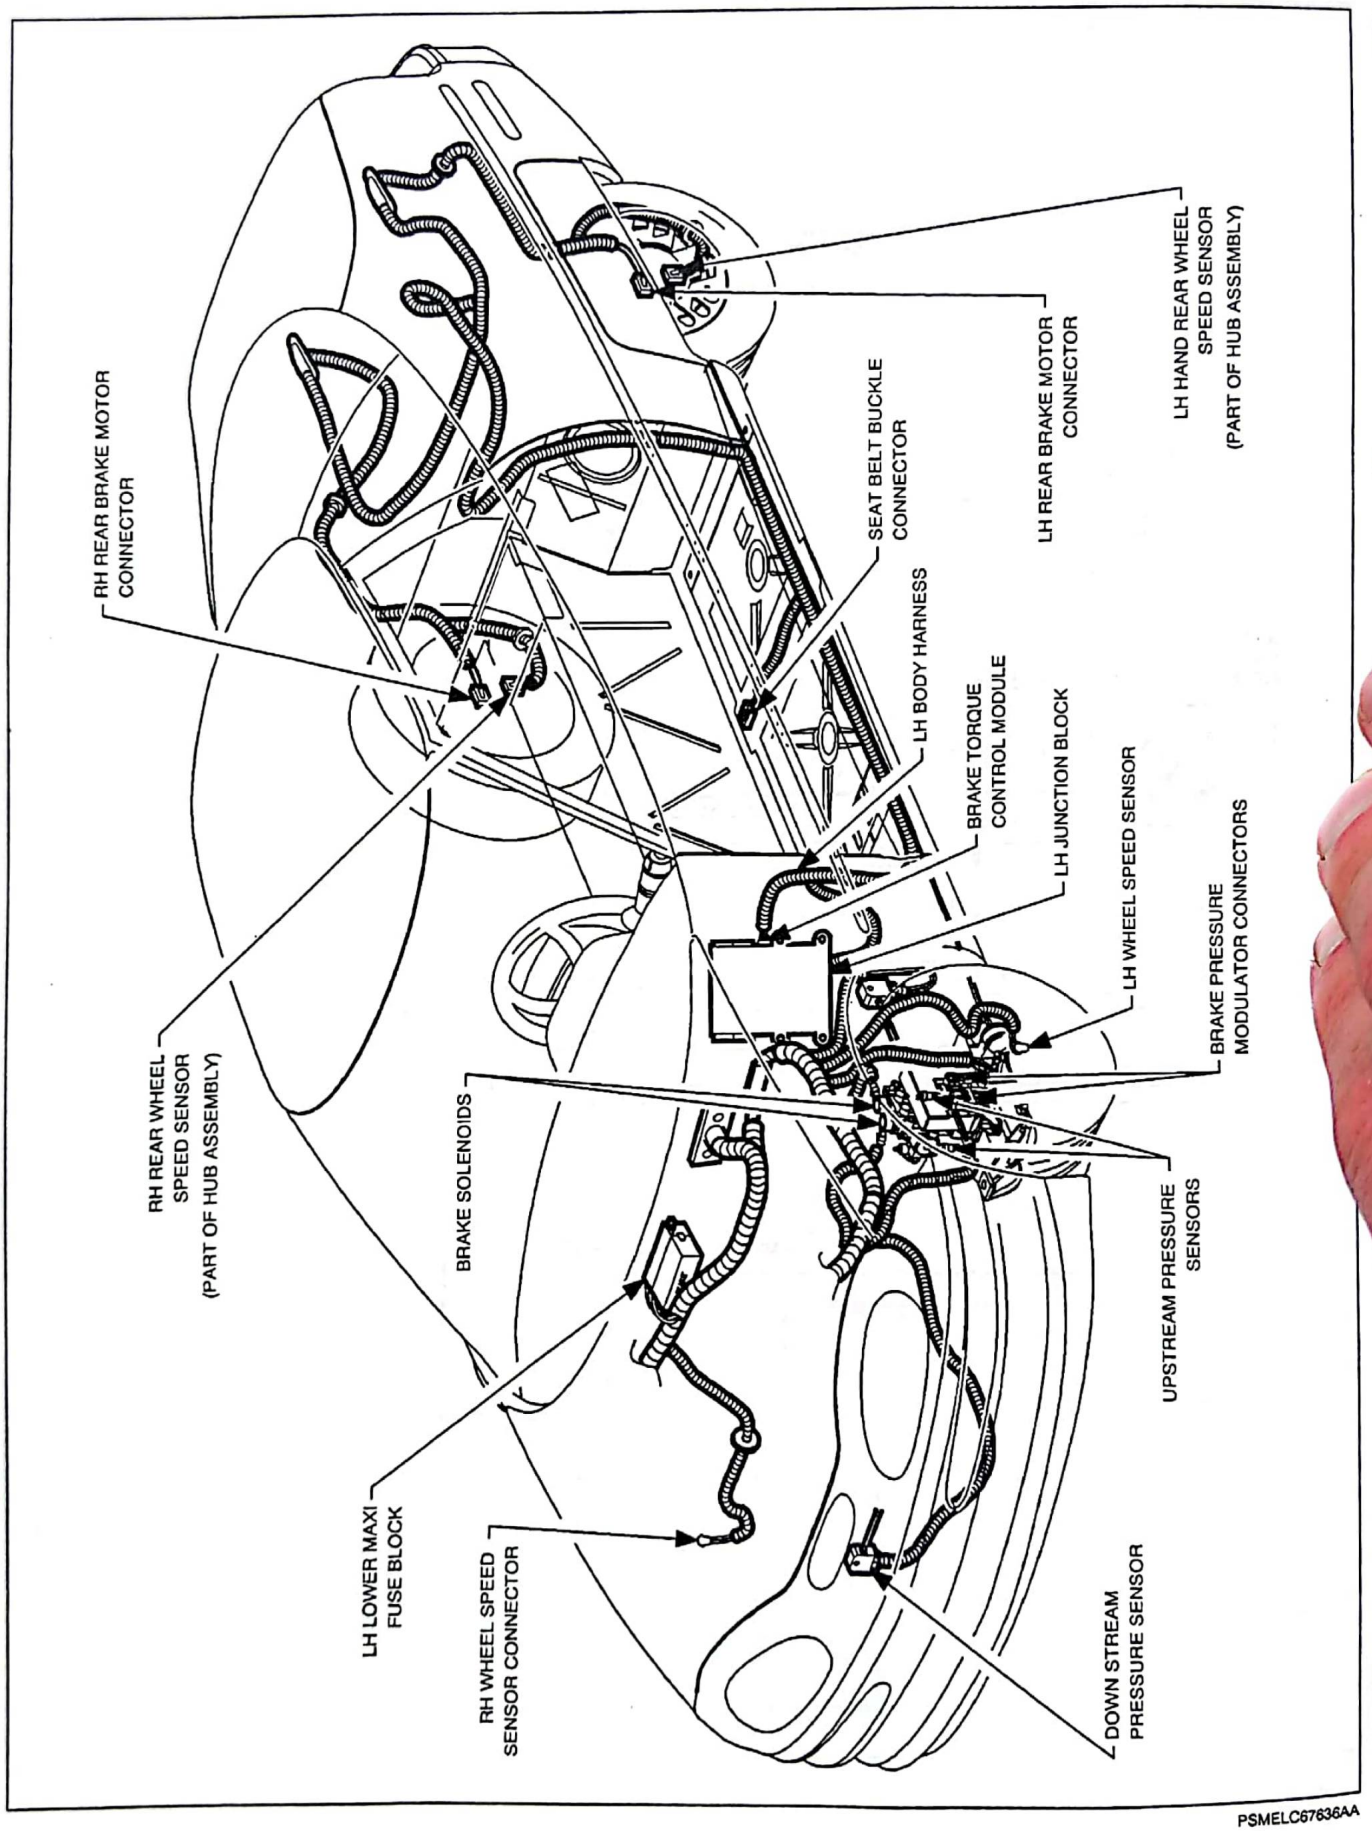
RH REAR BRAKE MOTOR CONNECTOR
SEAT BELT BUCKLE CONNECTOR
LH REAR BRAKE MOTOR CONNECTOR
LH HAND REAR WHEEL SPEED SENSOR (PART OF HUB ASSEMBLY)
LH BODY HARNESS
BRAKE TORQUE CONTROL MODULE
LH JUNCTION BLOCK
LH WHEEL SPEED SENSOR
BRAKE PRESSURE MODULATOR CONNECTORS
RH REAR WHEEL SPEED SENSOR (PART OF HUB ASSEMBLY)
BRAKE SOLENOIDS
UPSTREAM PRESSURE SENSORS
LH LOWER MAXI FUSE BLOCK
RH WHEEL SPEED SENSOR CONNECTOR
DOWN STREAM PRESSURE SENSOR
PSMELC67636AA

CamScanner

NOTES

CamScanner

BRAKE TRANSAXLE SHIFT INTERLOCK (BTSI) SYSTEM

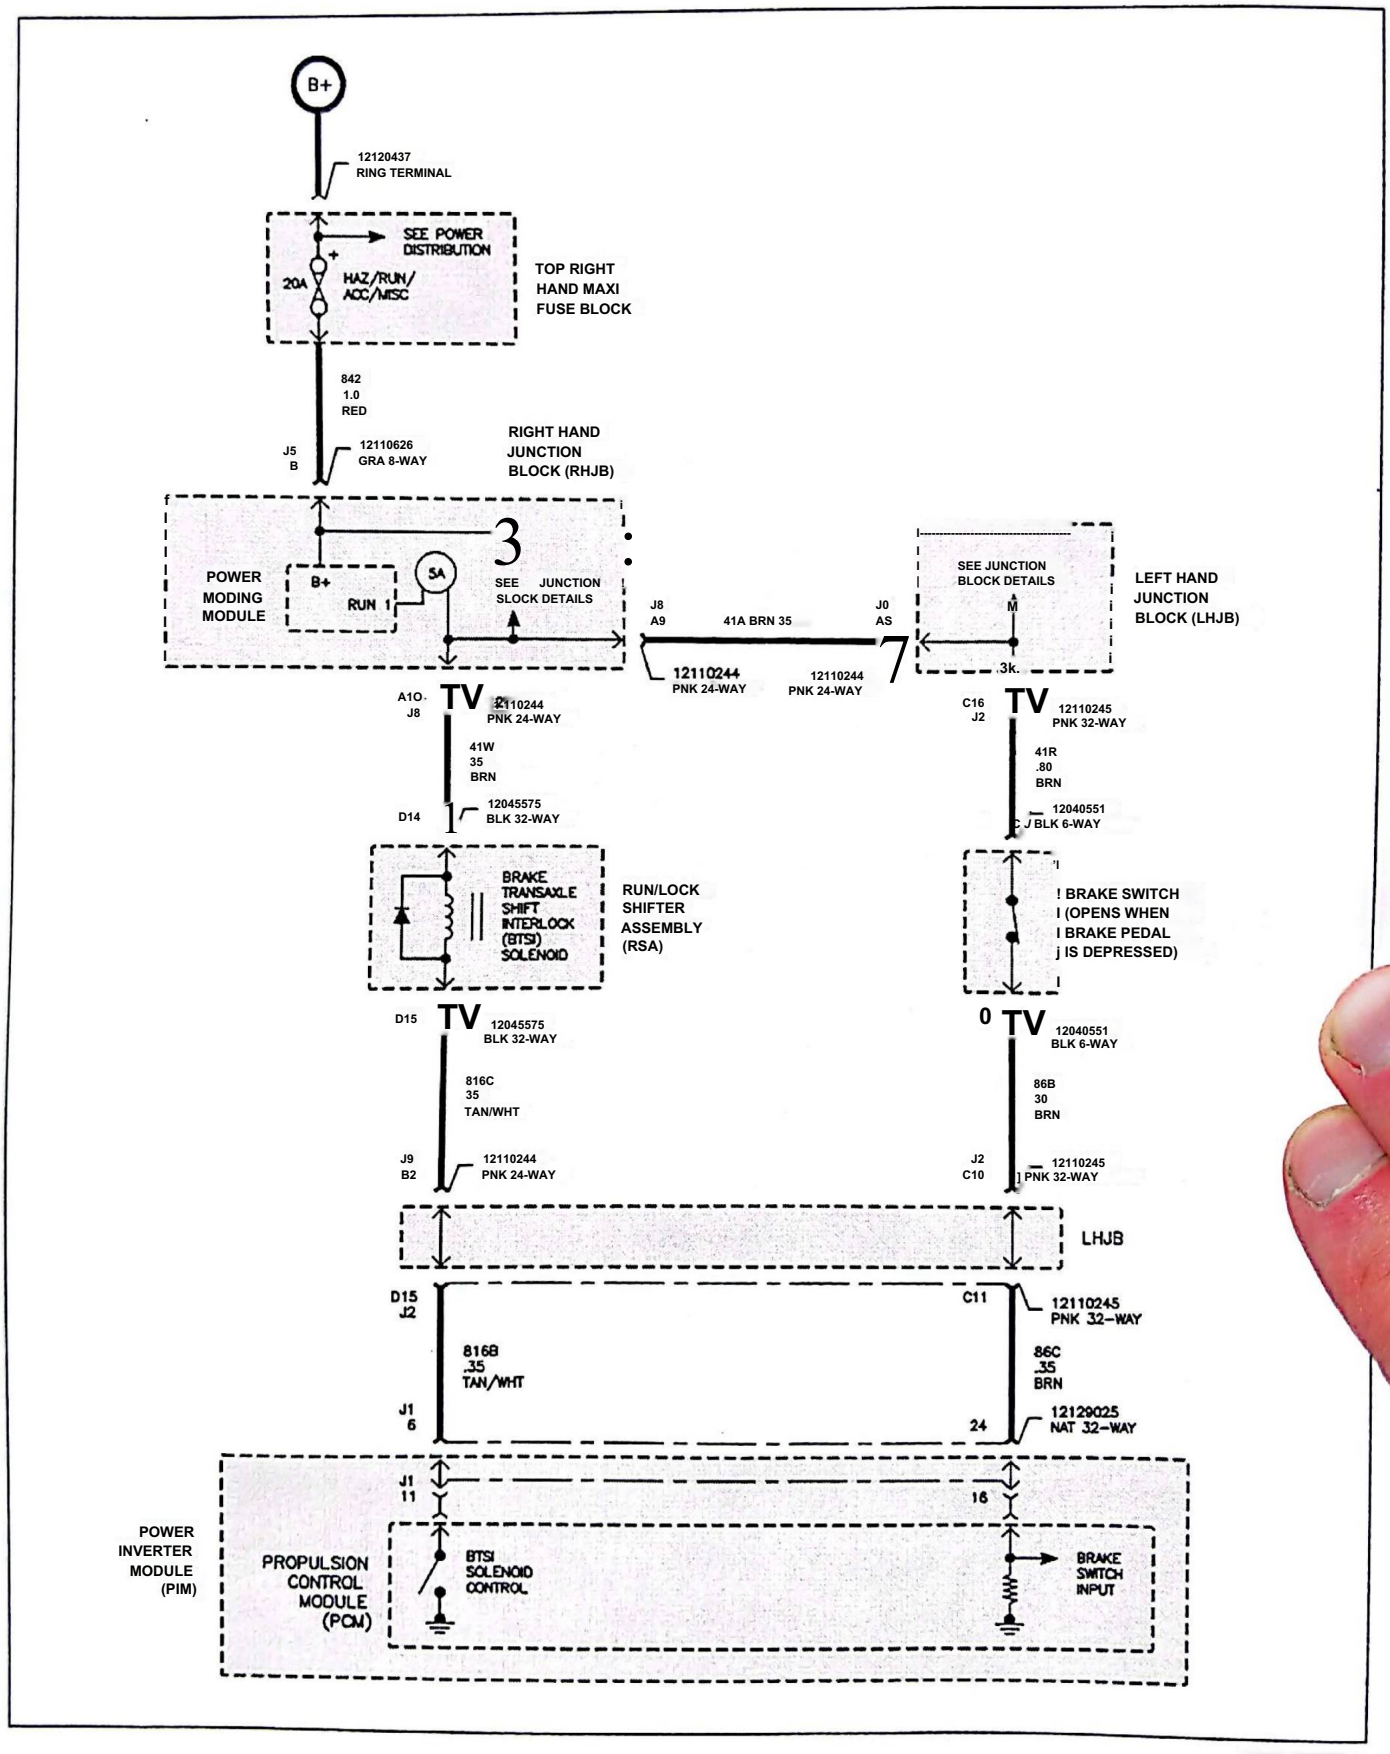

PSMELC67859AA

TO AKE TRAN CD SLE CD ZE IF T INTE a LO oK (o4 CD I) CD ■ CD T EM
OO TO OMPONEN T LO oATION v IEW

CamScanner

BRAKE TRANSMISSION SHIFT INTERLOCK (BTSI)

The Brake Transmission Shift Interlock (BTSI) solenoid receives power from the Run 1 power circuit 41 from the RHJB. The ground for the BTSI is controlled by the PCM based on several inputs. One input is a battery voltage from the brake switch. Whenever the brake pedal is depressed the PCM sees the 12 volt signal through the brake switch drop to zero volts. Another input to the PCM is the charge receptacle. If the charge receptacle indicates the charge paddle is inserted, the PCM will not allow the BTSI to be enabled. If the charge receptacle is not showing that a charge paddle is inserted, and the PCM sees a loss of battery voltage from the brake switch, the PCM grounds circuit 816 to turn on the BTSI solenoid.

There are additionally, certain DTCs that may cause the PCM not to enable the BTSI solenoid. DTCs should always be diagnosed first.

BRAKE TRANSMISSION SHIFT INTERLOCK (BTSI) TROUBLE TREE INDEX

- Chart 1 - Brake Transmission Shift Interlock (BTSI) Solenoid Not Allowing Shift Out of Park
- Chart 2 - Can Shift Out of Park Without Brake Applied

CamScanner

BRAKE TRANSMISSION SHIFT INTERLOCK (BTSI) SOLENOID NOT ALLOWING SHIFT OUT OF PARK

CHART 1

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap" installation in this manual.)

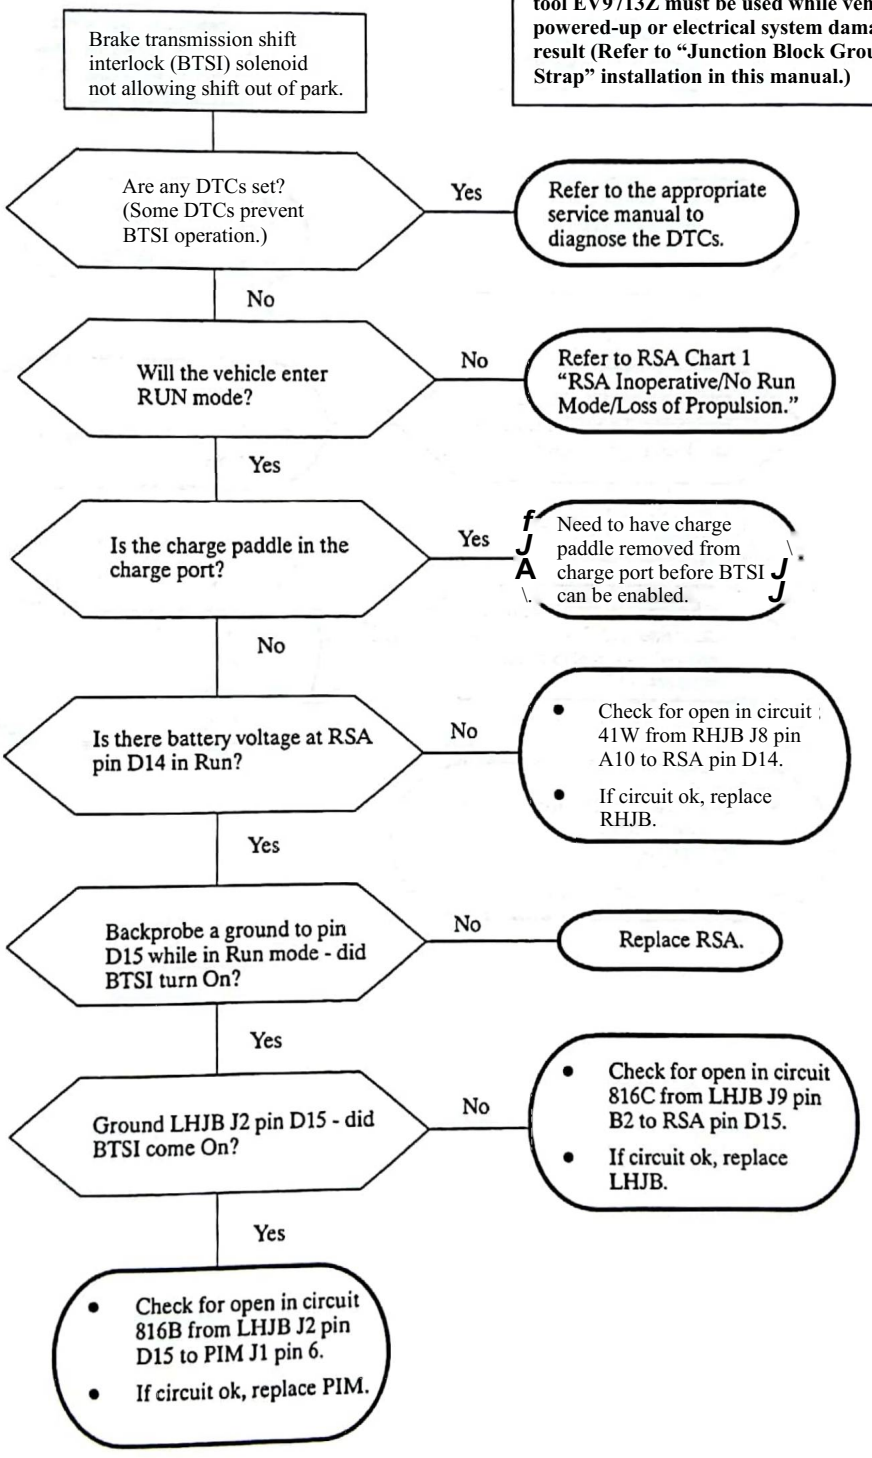
Brake transmission shift interlock (BTSI) solenoid not allowing shift out of park.
Are any DTCs set? (Some DTCs prevent BTSI operation.)
Yes
Refer to the appropriate service manual to diagnose the DTCs.
No
Will the vehicle enter RUN mode?
No
Refer to RSA Chart 1 "RSA Inoperative/No Run Mode/Loss of Propulsion."
Yes
Is the charge paddle in the charge port?
Yes
Need to have charge paddle removed from charge port before BTSI can be enabled.
No
Is there battery voltage at RSA pin D14 in Run?
No
Check for open in circuit 41W from RHJB J8 pin A10 to RSA pin D14.
If circuit ok, replace RHJB.
Yes
Backprobe a ground to pin D15 while in Run mode - did BTSI turn On?
No
Replace RSA.
Yes
Ground LHJB J2 pin D15 - did BTSI come On?
No
Check for open in circuit 816C from LHJB J9 pin B2 to RSA pin D15.
If circuit ok, replace LHJB.
Yes
Check for open in circuit 816B from LHJB J2 pin D15 to PIM J1 pin 6.
If circuit ok, replace PIM.

CamScanner

CAN SHIFT OUT OF PARK WITHOUT BRAKE APPLIED

CHART 2

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

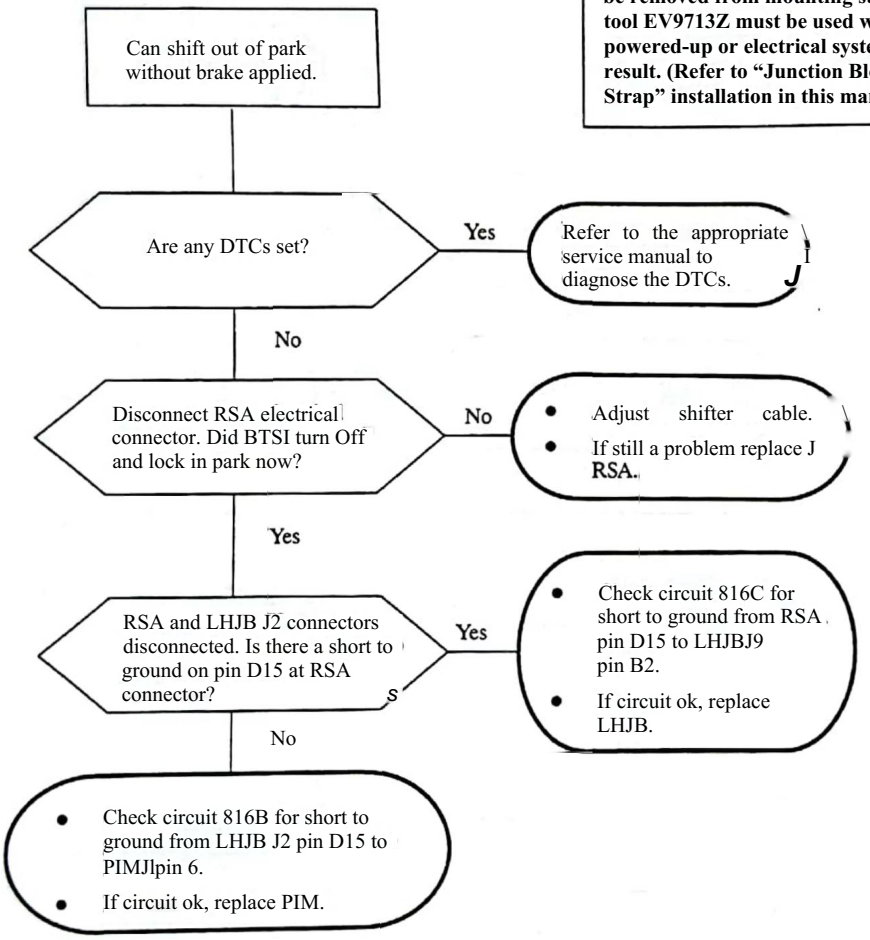
Can shift out of park without brake applied.
Are any DTCs set?
Yes
Refer to the appropriate service manual to diagnose the DTCs.
No
Disconnect RSA electrical connector. Did BTSI turn Off and lock in park now?
No
Adjust shifter cable.
If still a problem replace J RSA.
Yes
RSA and LHJB J2 connectors disconnected. Is there a short to ground on pin D15 at RSA connector?
Yes
Check circuit 816C for short to ground from RSA pin D15 to LHJBJ9 pin B2.
If circuit ok, replace LHJB.
No
Check circuit 816B for short to ground from LHJB J2 pin D15 to PIMJlpin 6.
If circuit ok, replace PIM.

CamScanner

NOTES

CamScanner

CHECK TIRE PRESSURE SYSTEM SCHEMATICS

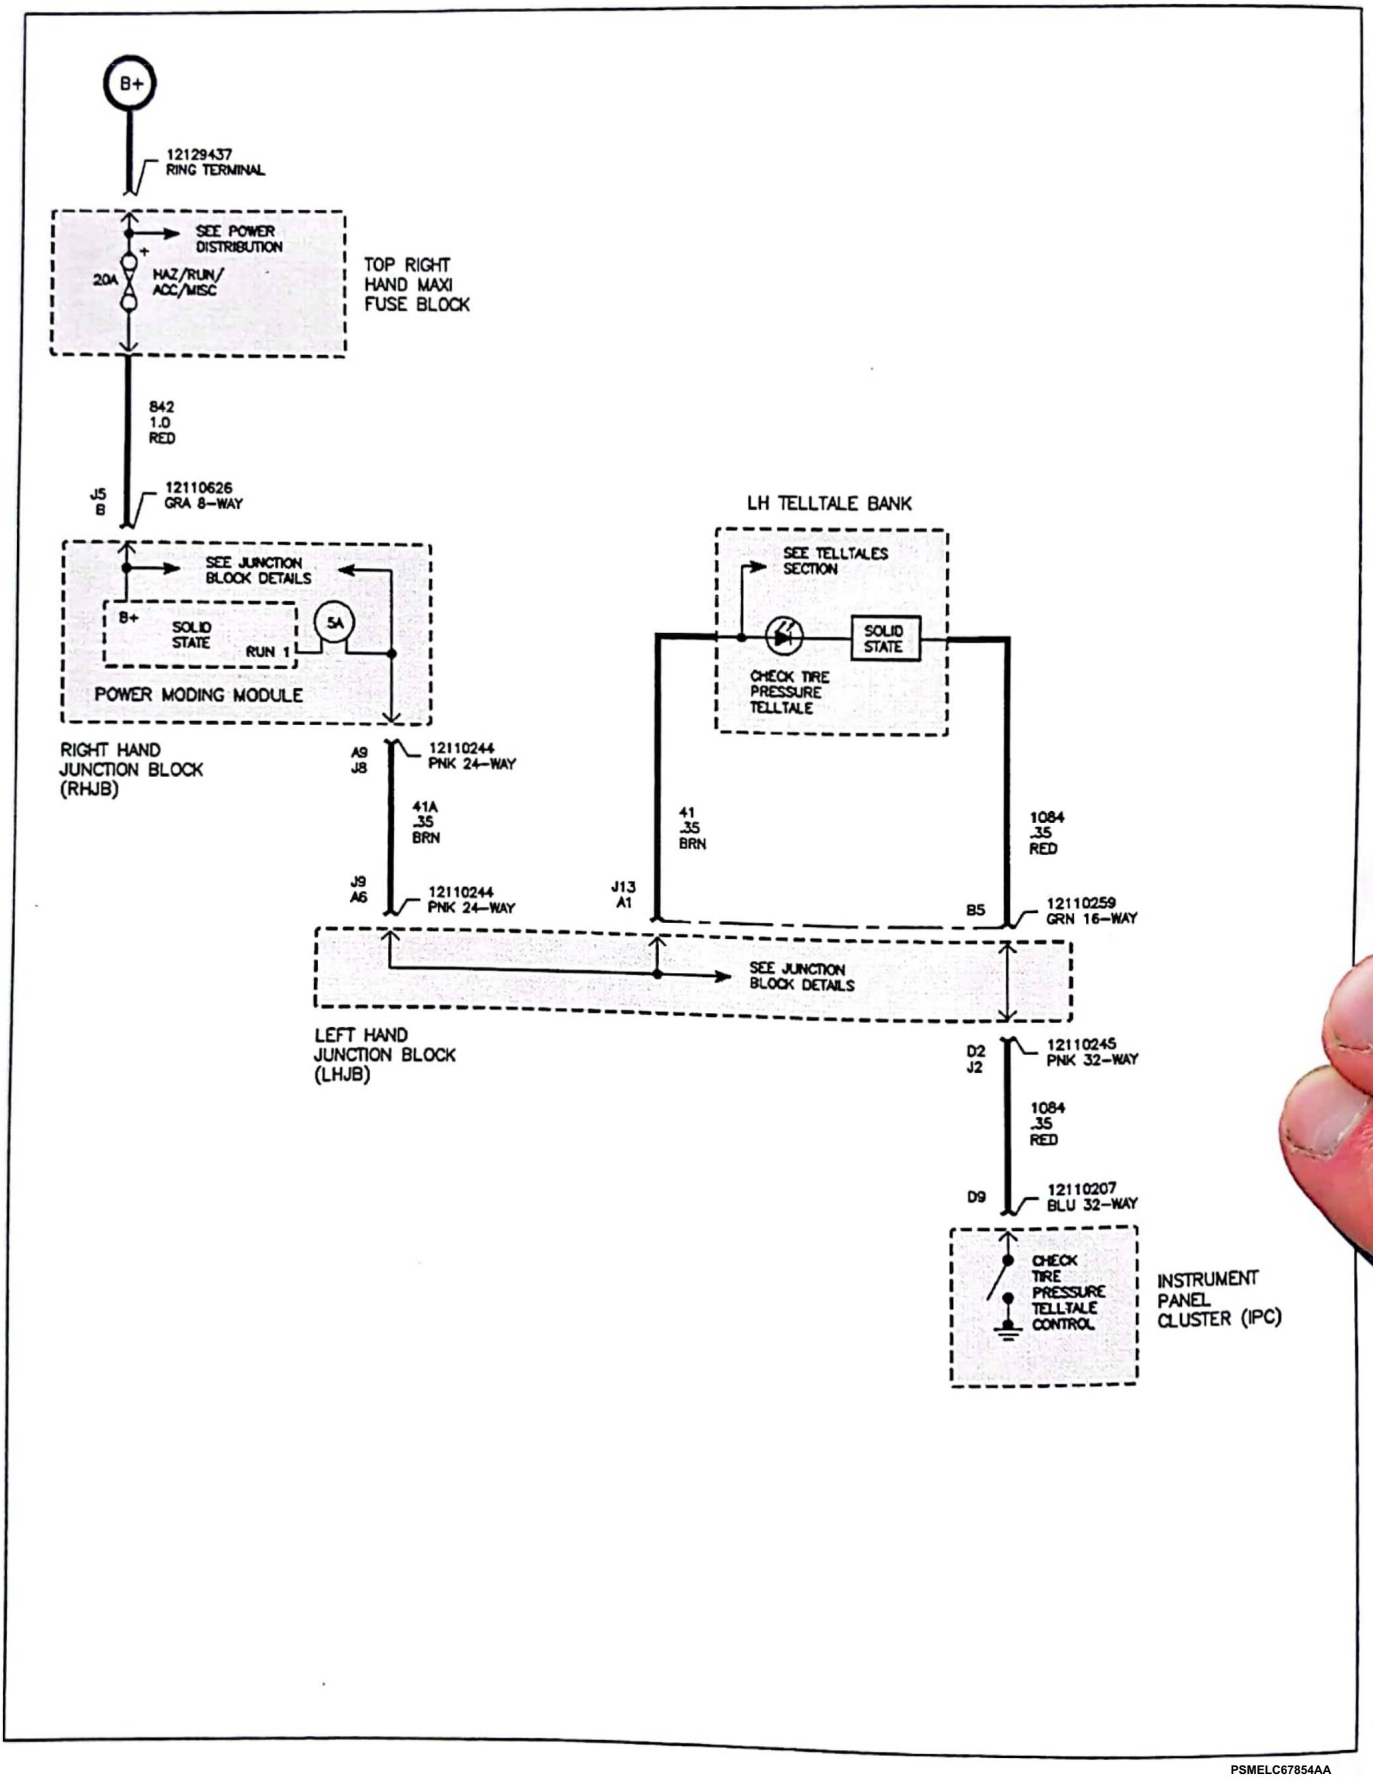

PSMELC67854AA

CamScanner

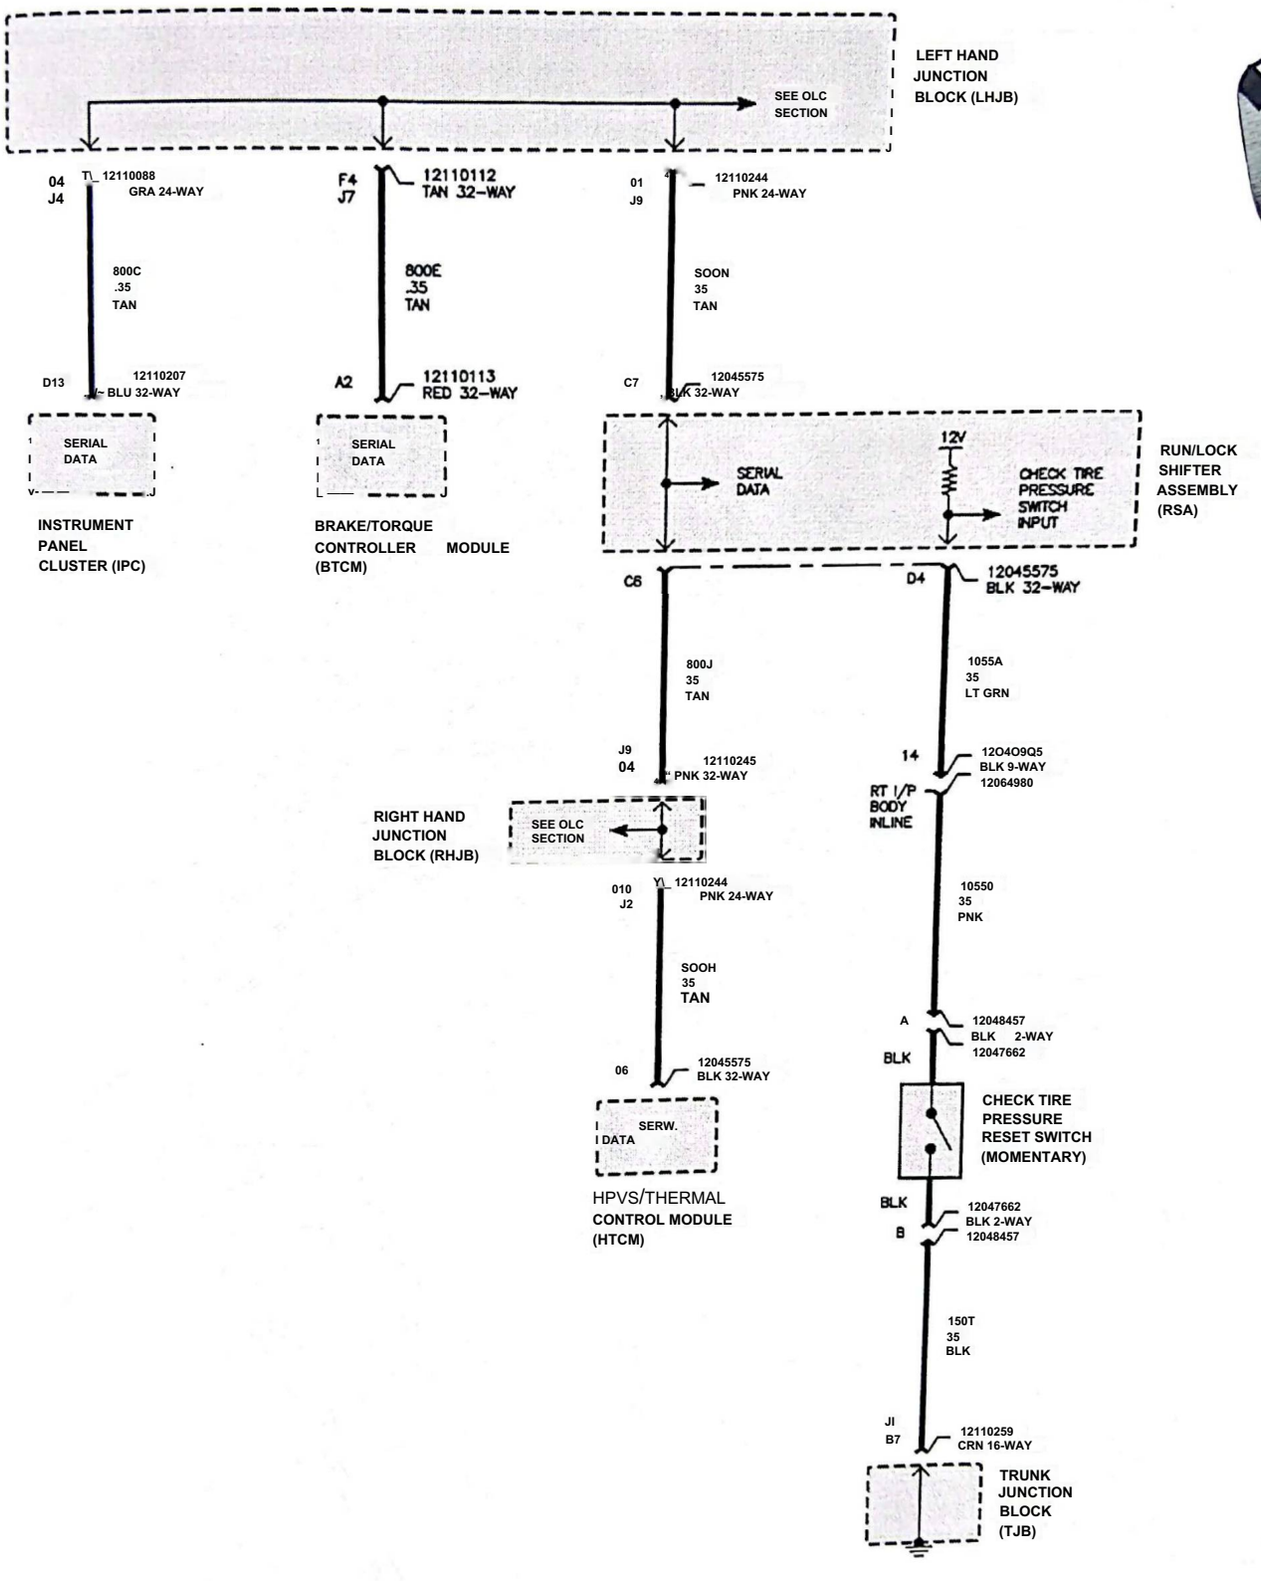

PSMELC673S5AA

CamScanner

CHECK TIRE PRESSURE SYSTEM COMPONENT LOCATION VIEW

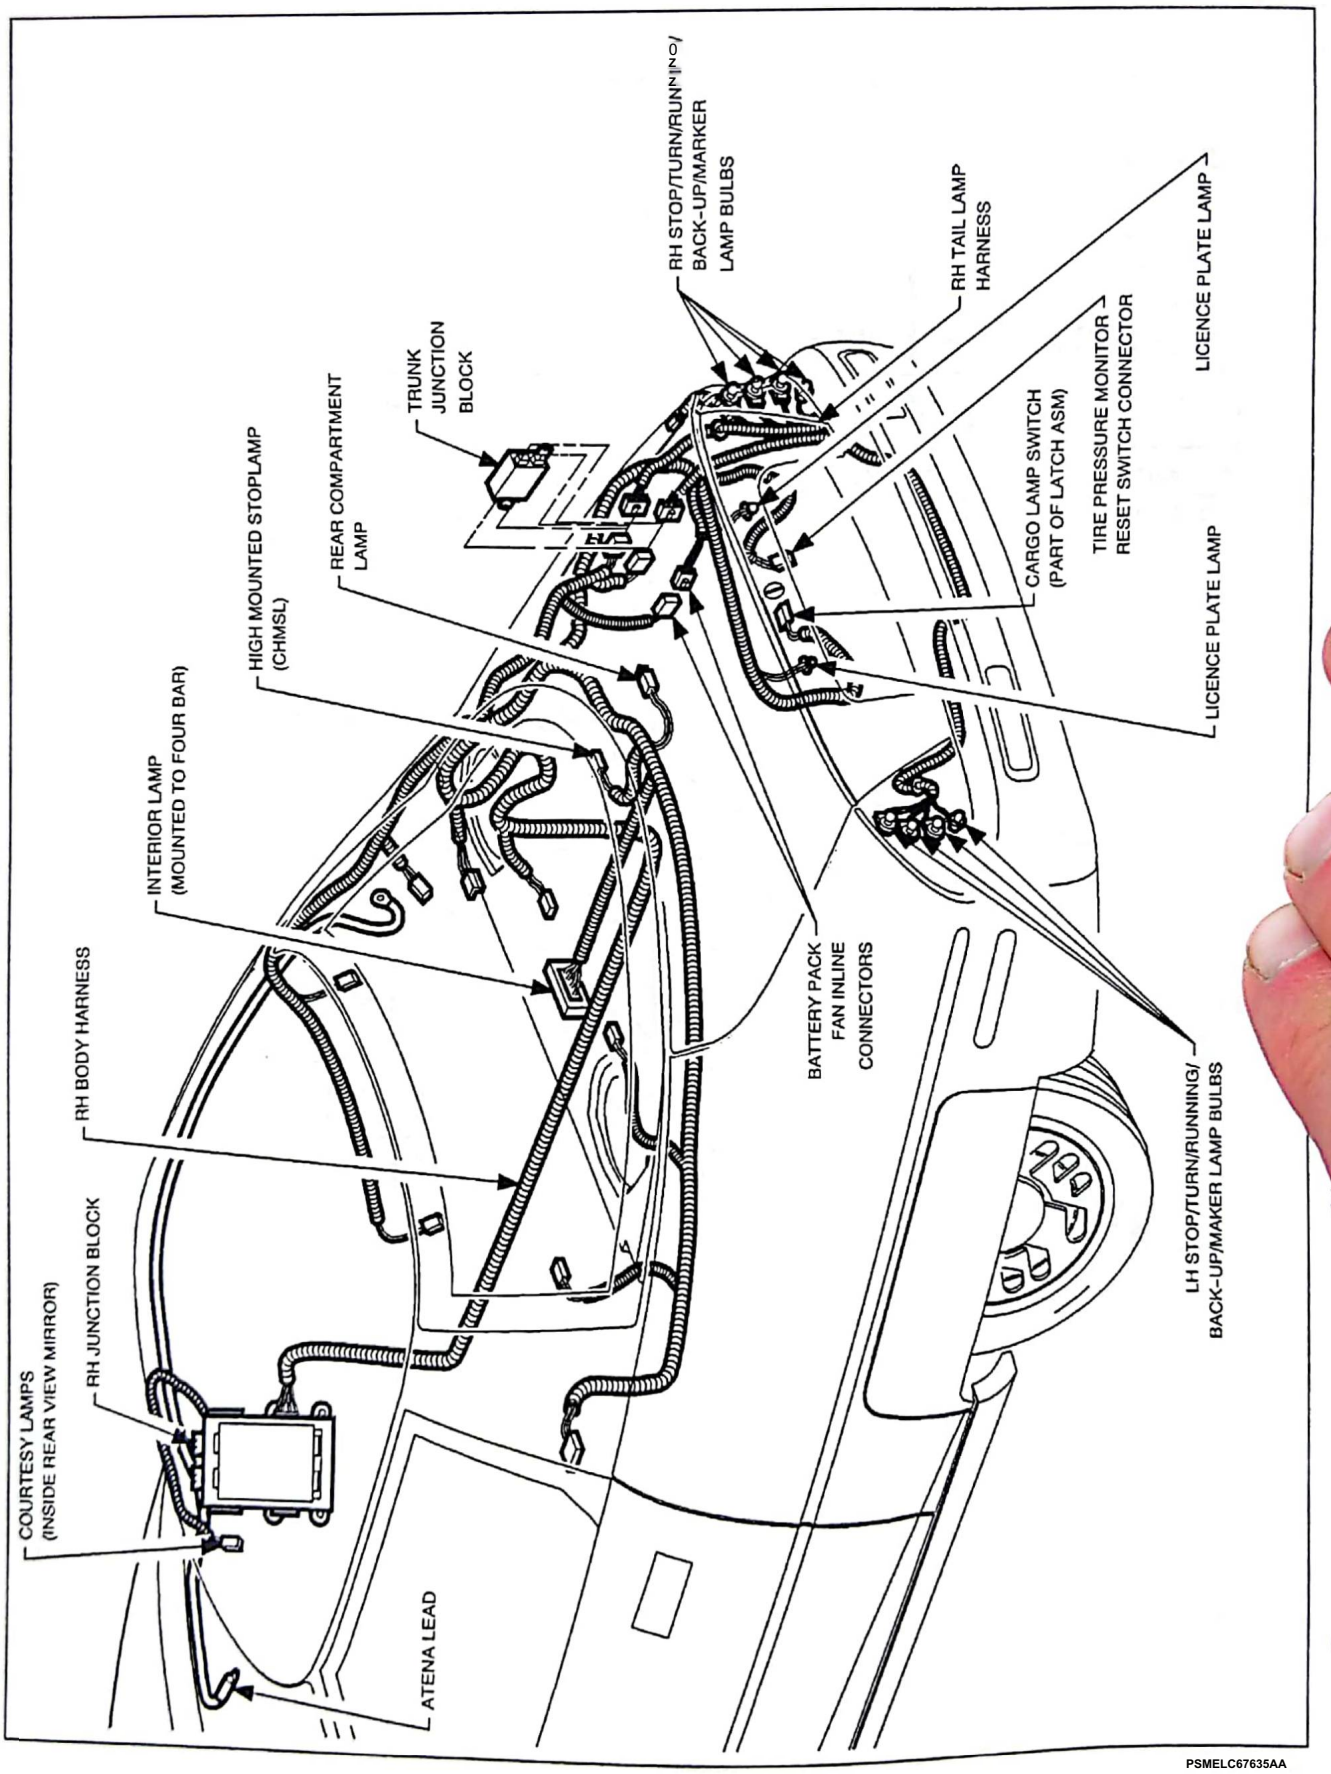
RH STOP/TURN/RUNNING/ BACK-UP/MARKER LAMP BULBS
RH TAIL LAMP HARNESS
LICENCE PLATE LAMP
TRUNK JUNCTION BLOCK
REAR COMPARTMENT LAMP
HIGH MOUNTED STOPLAMP (CHMSL)
CARGO LAMP SWITCH (PART OF LATCH ASM)
TIRE PRESSURE MONITOR RESET SWITCH CONNECTOR
LICENCE PLATE LAMP
INTERIOR LAMP (MOUNTED TO FOUR BAR)
RH BODY HARNESS
BATTERY PACK FAN INLINE CONNECTORS
LH STOP/TURN/RUNNING/ BACK-UP/MAKER LAMP BULBS
COURTESY LAMPS (INSIDE REAR VIEW MIRROR)
RH JUNCTION BLOCK
ATENA LEAD
PSMELC67635AA

CHECK TIRE PRESSURE SYSTEM (CTPS)

/^GENERAL DESCRIPTION

T1,C check tire pressure system (CTPS) can alert the driver , t e n/lock shifter assen y (RSA). Th S t0 a large change in the Pressure in ○ne tire- The CTPS is •F±\he ^br^e t^quecmitrol m^uhfBTCMl^d^J 110"110^ *heel sPeed information it receives over serial d3ta?°n S not alert vou if th pressure nS determine lf the re is a consistent difference in tire rotation speeds. It will not you the pressure in more than one tire is low or high or the system is not calibrated properly.

If RSA determines there is a low tire pressure condition, it will send a message via serial data to turn on the check ure pressure^tak The in tnimen panel cluster (IPC) will then turn on the telltale. Once a low tire pressure condition is detec ed the telltale will be kept on whenever in RUN mode until the RSA loses power or the check tire switch is pressed. The v tire switch is a momentary . ffE. MU reset the OTS^any S"' Wmi"8 TM,Ch "“aK<i ○" ,hc b○,,om side

Don’t press the tire monitor reset switch without first checking and adjusting the pressure in all four tires. When a reset occurs, the RSA begins its calibration all over and will assume tires are at a normal inflation level. Therefore, if a tire has lost pressure and the RSA is reset, the tire will have to lose significantly more air before the check tire pressure Earning will trigger again. For this reason, it is important that any leaks are repaired and tires are at normal inflation level before the reset is activated.

If the system has been calibrated and the pressure in one tire becomes at least 69 kPa (10 psi) lower than the other tnree tires the check tire pressure telltale will come On within about five to ten minutes of driving (within about four to se\en minutes if 83 kPa (12 psi) low, within about two to six minutes if 62 kPa (16 psi) low, and less than two minutes if tiat). The system won’t alert you before you drive that a tire is low or flat.

If the vehicle is driven over bumpy roads, at very low speeds, in turns, in ABS or traction control modes, or with repeated stopping and starting, detection will take longer.

Anytime the anti-lock telltale is On the check tire pressure system is disabled.

Any time the tires are repaired, replaced, or rotated, or tire pressure is adjusted, the CTPS system needs to be ^recalibrated.

SYSTEM RESET AND CALIBRATION

1. Switch the vehicle to the Run mode. (The CTPS may be reset with the vehicle in OFF/ACCY or LOCK mode also, It is preferred to perform reset in the Run mode so the telltale can be watched and is verified to go out.)

2. Press the CTPS reset switch, located on the underside of the decklid. The check tire pressure telltale should go out. If the telltale doesn’t go out within a few seconds after you press the CTPS reset switch, refer to Telltales - Chart 7- “Check Tire Pressure Telltale Inoperative/On AU the Time.”

3. System calibration will begin when the vehicle is driven.

NOTICE: Since the ^eck tire pressure system works off of wheel speed comparisons, it will not operate if the vehicle HS*brated Prior to the tire pressure loss. If the tires are replaced and the system is not calibrated a hre may go "Uhout triggering a fault THIS IS NORMAL OPERATION. If that has happened, the tire should be repaired as normal. After th e tir/is “ZZpaired“ ra“ CTPS S'ri‹Ch ,oea‹ed "" ,TM“k" (R"" vehicle, the in to ste ps listed above.)

C vibrations are performed in three different speed ranges: 94-64 km/h (15-40 mph), 64-105 km/h (40-65 mph), and J'129 km/h (65 80 "80'mPh)- The calibrations *for*_eac p ac eed ange for each speed range are performed while the vehicle is in that speed ange. An in; .:] during the first 10 minutes of driving in that speed range. The ca£Ugh CahbratlOn 1S Performed for ! 5 S ovel several kewad cycles. Once the initial calibration is complete the vl at 10n 15 Native and may be performed oyer several Keyp^ ·fine tuning calibration (e n pressure. The is a r^-'MON nn Ce WiU begin monitorin g tires fo[a cha”£ calibration is complete. If the vehicle is driven over bumpy Jds> at Verv i " Scan t001)that take* Place after l he r0Ugb i odes or with repeated stopping and starting, detection lb 01 take l On ^° n Speeds’in turns>in ABS or tractl0n C?nt^°i.hration is suspended. The fine tuning may take as little as ol temi nute8;; nf d Unng these 1611(15 of driving’ fine tUT,g ni r if the driving conditions are mostly not calibratable. SCel Se n dnVing Under ideal conditions to much urs mOre quickly, ^tune calibration is complete, low tire pressure detection occ

CamScanner

DETECTION

Detection checking only begins after calibration has occurred. Because of the way the detection works, more than one speed range usually needs to be at least rough calibrated before detection checking will operate. Detection speeds versus calibration speeds are shown in the table below. Note that the detection speed ranges are different from the calibration speed ranges.

For example, detection will occur between 24-45 kPa (15-28 mph) if the speed range 24-64 km/h (15-40 mph) is calibrated. For detection in the speed range 45-85 km/h (28-53 mph), however, both the 24-64 (15-40 mph) and the 64-105 km/h (40-65 mph) speed ranges must be calibrated. A special flat tire detection occurs during the first 30 seconds of driving over 8 km/h (5 mph). Flat tire detection takes place in any detection speed range that is calibrated.

WHEN AT LEAST ROUGH CALIBRATION IS COMPLETE IN THE INDICATED SPEED RANGES			
DETECTION OCCURS IN THE RANGE OF	**24-64 km/h (15-40 MPH)**	**64-105 km/h (40-65 MPH)**	**105-129 km/h (65-80 MPH)**
24-45 km/h (15—28 mph)	x		
45-85 km/h (28-53 mph)	x	x	
85 — 129 km/h (53-80 mph)		x	x

CHECK TIRE PRESSURE SYSTEM (CTPS) TROUBLE TREE INDEX

Chart 1 — Check tire pressure telltale on

Chart 2 — Tire low or flat with no “Check Tire Pressure” telltale

CamScanner

CHECK TIRE PRESSURE TELLTALE ON

CHART 1

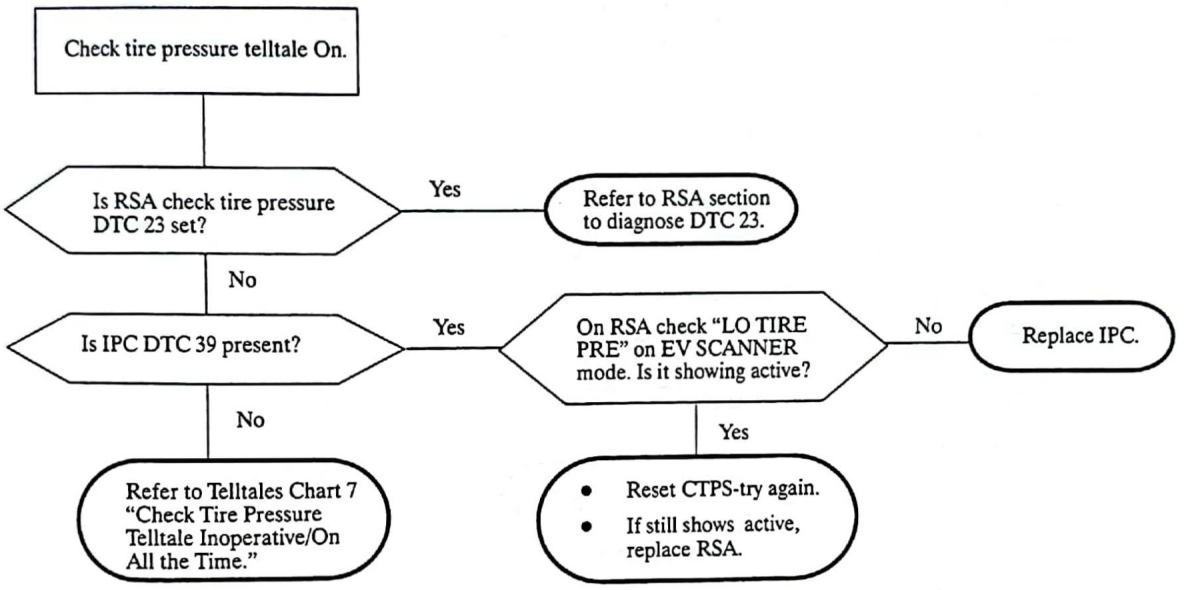
Check tire pressure telltale On.
Is RSA check tire pressure DTC 23 set?
Yes
Refer to RSA section to diagnose DTC 23.
No
Is IPC DTC 39 present?
Yes
On RSA check "LO TIRE PRE" on EV SCANNER mode. Is it showing active?
No
Replace IPC.
No
Yes
Refer to Telltales Chart 7 "Check Tire Pressure Telltale Inoperative/On All the Time."
• Reset CTPS-try again.
• If still shows active, replace RSA.

CamScanner

TIRE LOW OR FLAT WITH NO CHECK TIRE PRESSURE TELLTALE

CHART 2

Tire low or flat with no check tire pressure telltale.

Have you referred to " Tire Pressure System Operation"?

No (Refer to "Tire Pressure System Operation."

Yes

- Record tire pressure of all four tires.
- Repair low tire condition.
- Set all four tires to 345 kPa (50 psi).

Put vehicle in Run mode - does check tire pressure telltale come On during bulb check?

No — Go to next page.

Yes

Are any BTCM DTCs set?

Yes — Diagnose BTCM DTCs.

No

Is RSA DTC 23 set?

Yes — Replace RSA.

No

Reset check tire pressure system. Refer to System Reset and Calibration in this service manual.

Drive the vehicle between 24-64 km/h (15-40 mph) on a smooth straight road. On PDT in EV SCANNER check RSA ■ General Information parameter LOW TIRE. While driving it reads...

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

"T-

Calibrate or Cal-monitor.

Refer to "System Reset and Calibration." If the vehicle is driven far enough under the right conditions in the right speed ranges, the parameter should change from "calibrate" to "detection." This means the system is now starting to perform detection in that speed range.

Initialize

- Check for stuck/shorted low tire pressure switch.
- Check circuit 1055 from RSA pin D4 to low lire pressure switch for short to ground.
- If switch and circuit ok, replace RSA.

No Stable Speed

Road conditions prevent calibration - refer to "System Reset and Calibration."

No Valid Data

Wheel speed data may not be stable or I maybe invalid.

CamScanner

TIRE LOW OR FLAT WITH NO CHECK TIRE PRESSURE TELLTALE -CONTINUED

CHART 2

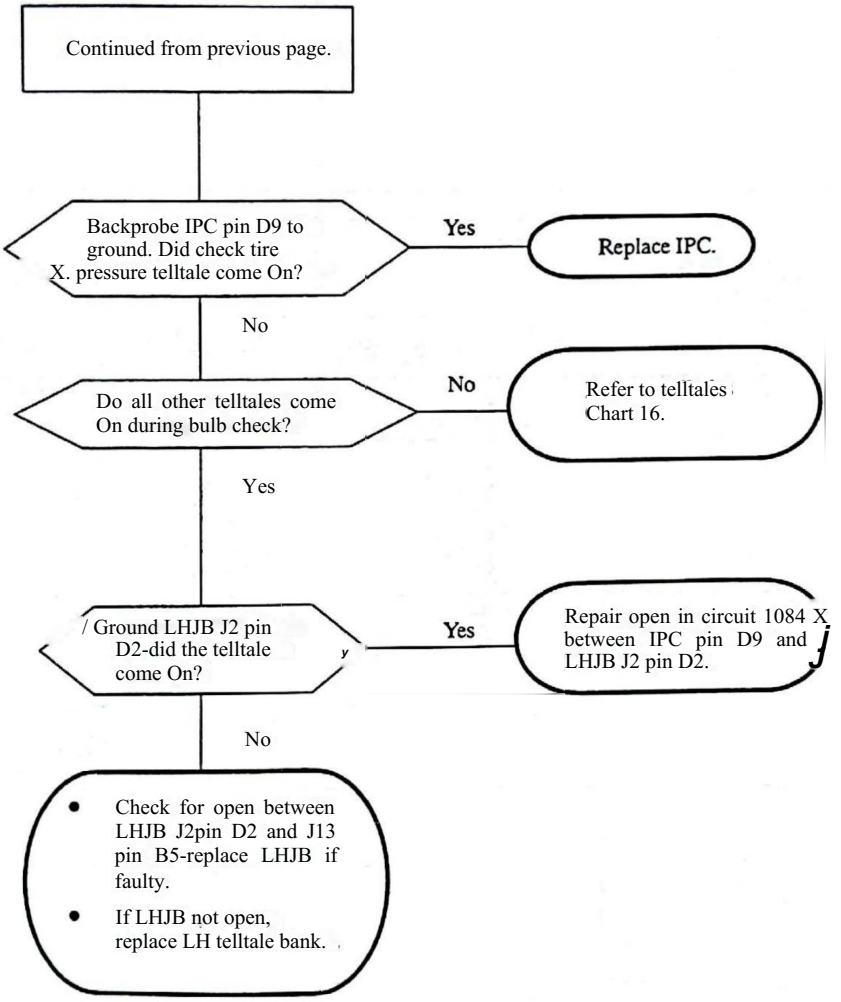
Continued from previous page.
Backprobe IPC pin D9 to ground. Did check tire X. pressure telltale come On?
Yes
Replace IPC.
No
Do all other telltales come On during bulb check?
No
Refer to telltales Chart 16.
Yes
Ground LHJB J2 pin D2-did the telltale come On?
Yes
Repair open in circuit 1084 X between IPC pin D9 and LHJB J2 pin D2.
No
Check for open between LHJB J2pin D2 and J13 pin B5-replace LHJB if faulty.
If LHJB not open, replace LH telltale bank.

CamScanner

CLIMATE CONTROL

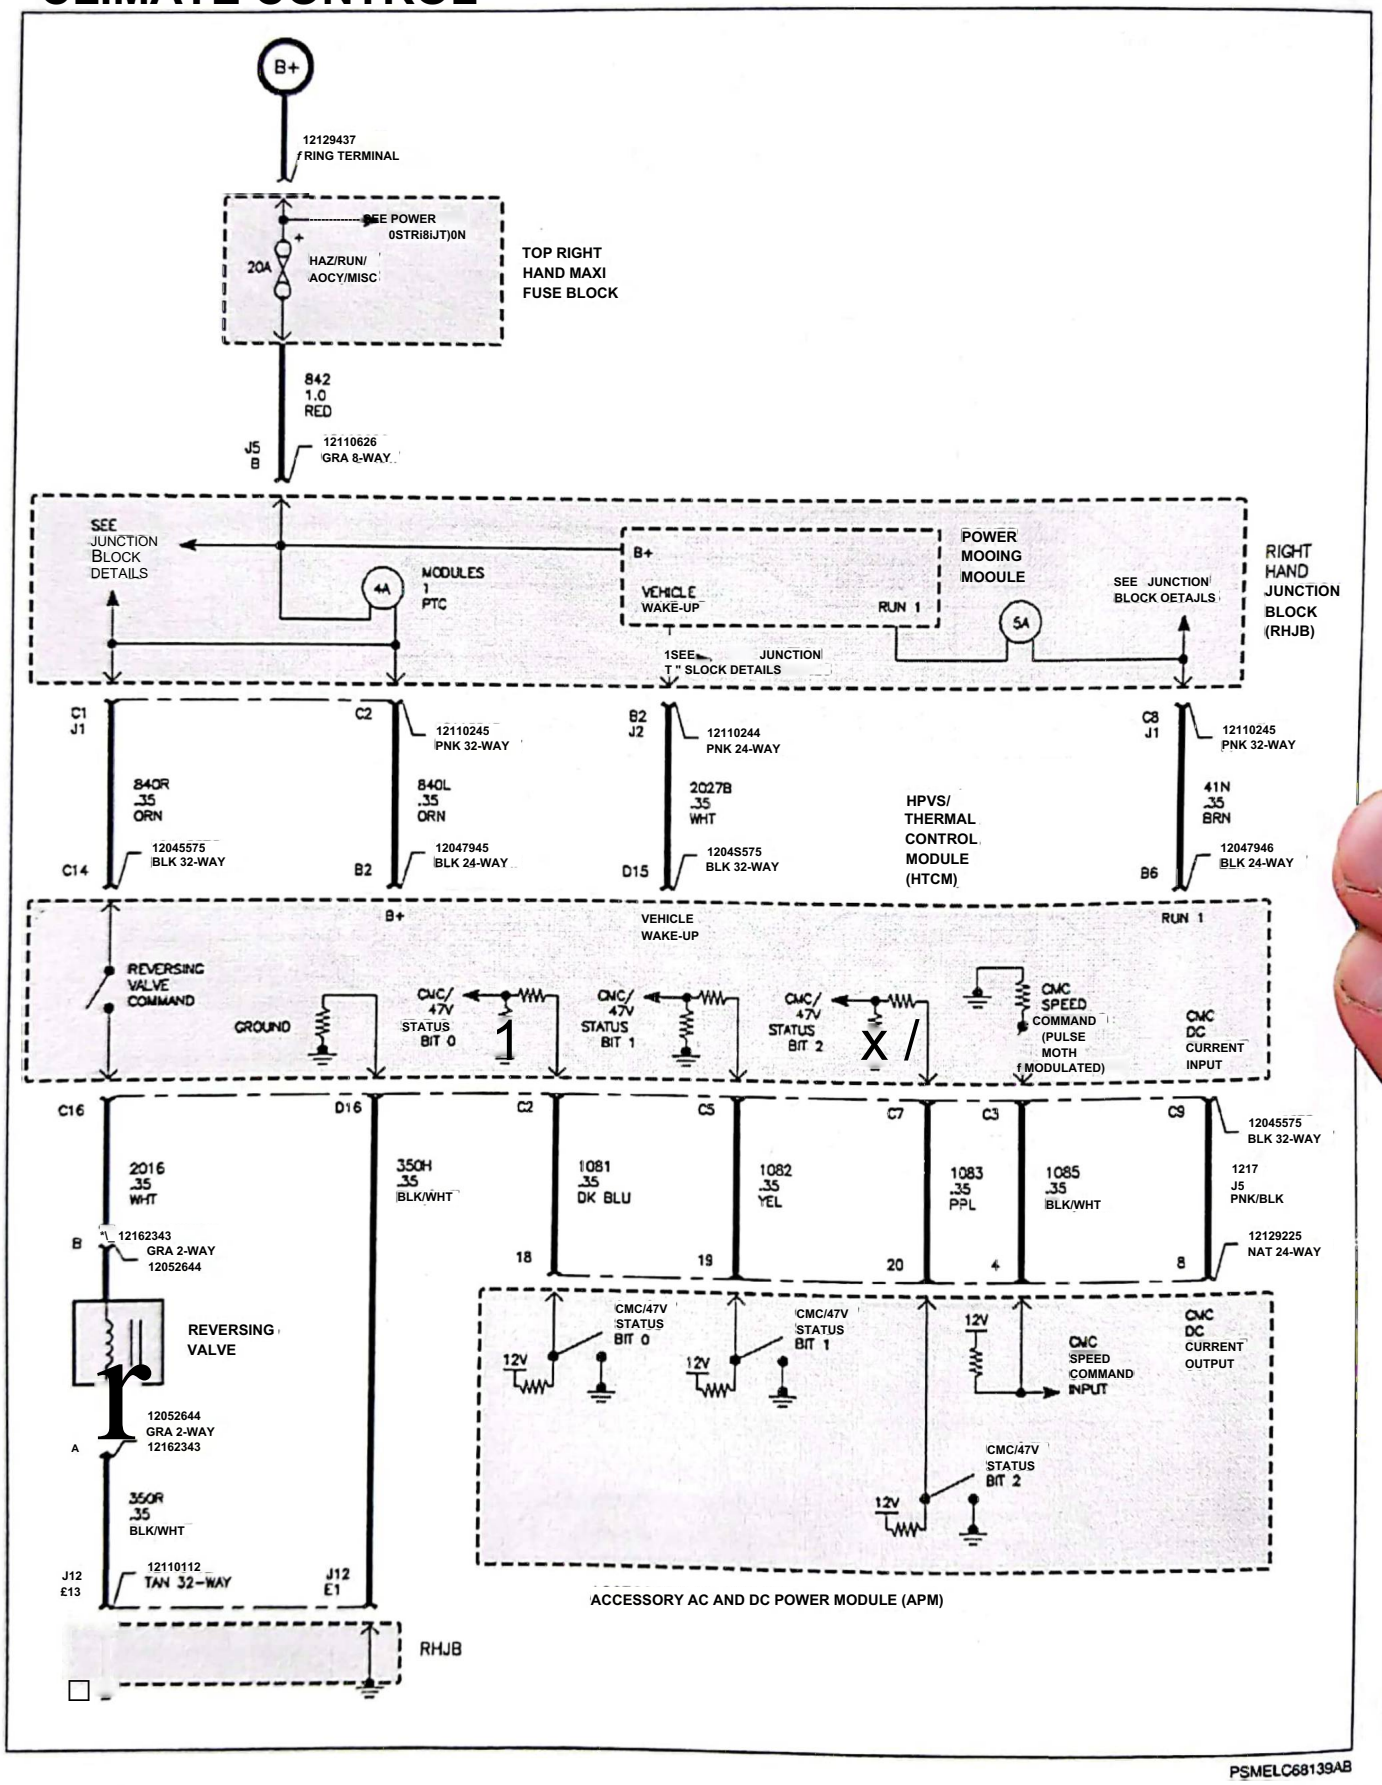

PSMELC68139AB

CamScanner

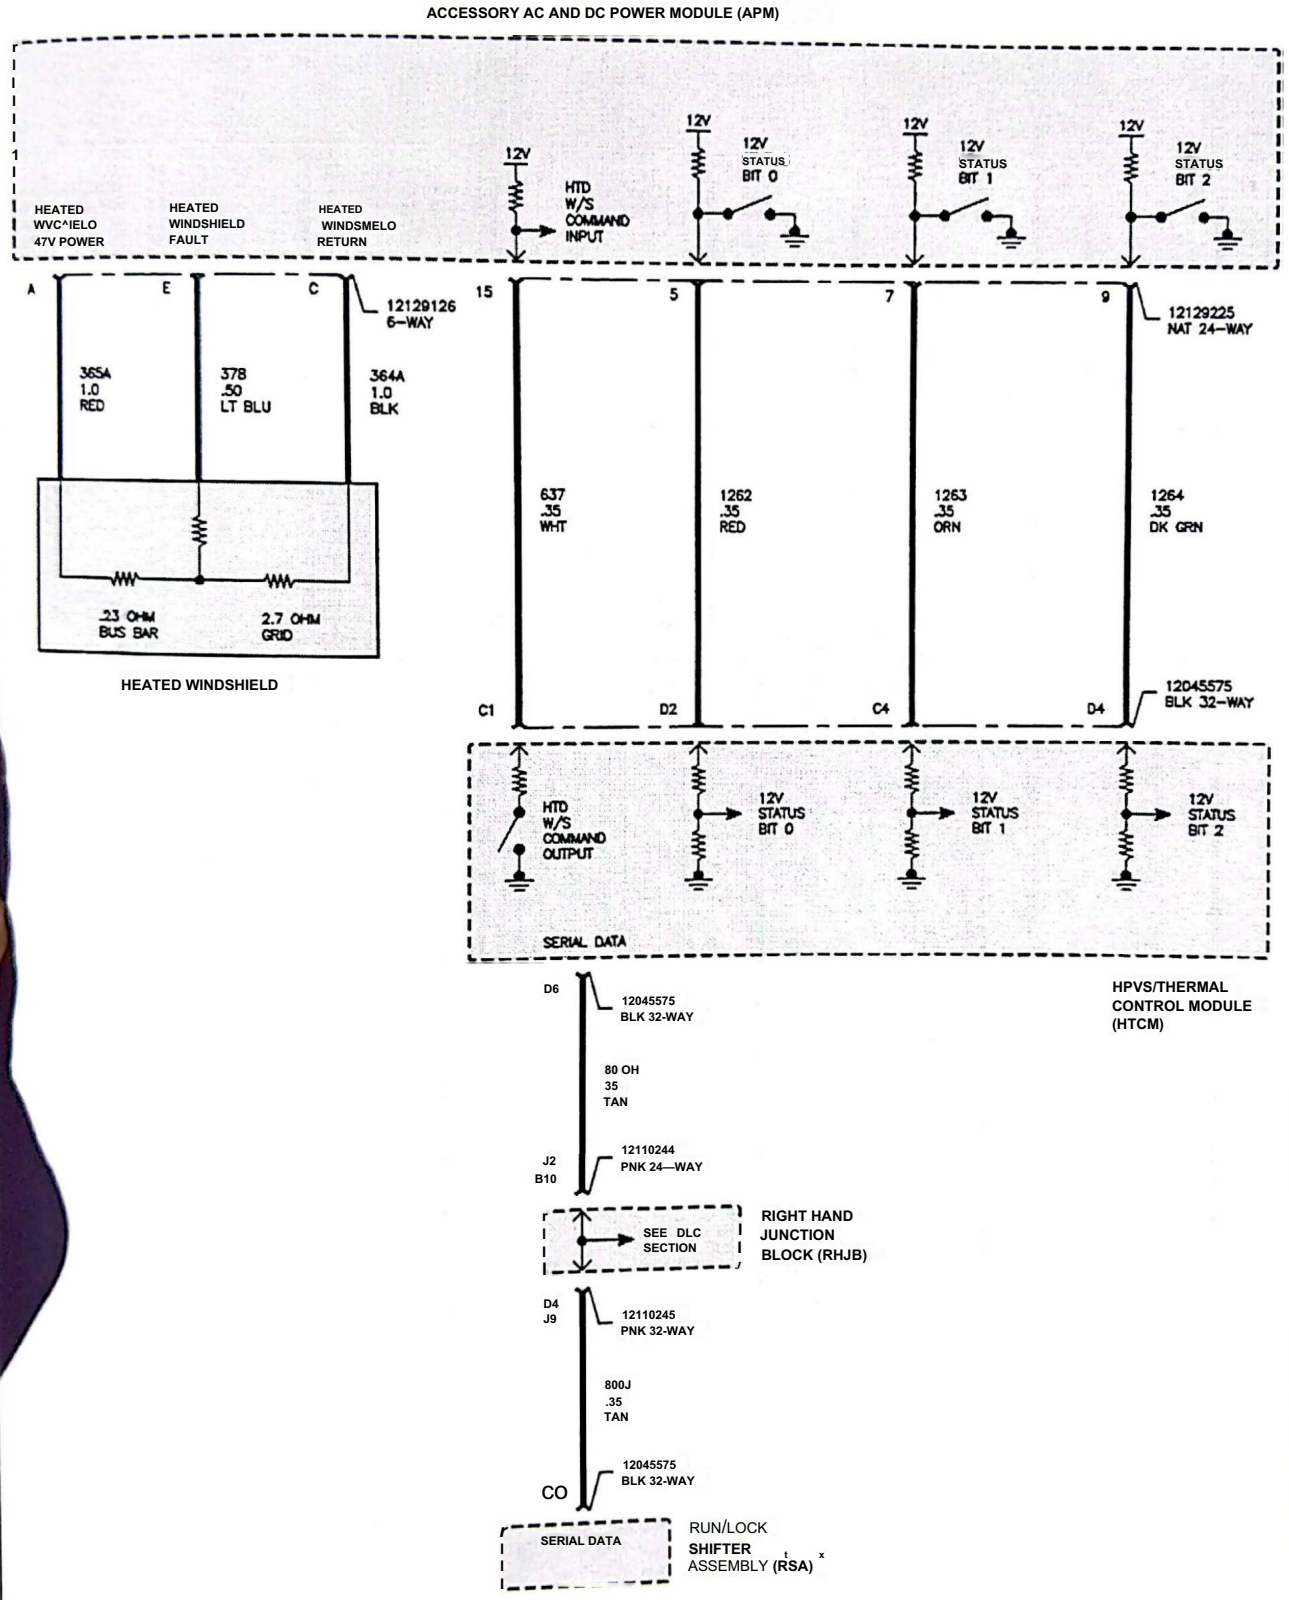
ACCESSORY AC AND DC POWER MODULE (APM)
1
HEATED WVC^IELO 47V POWER
HEATED WINDSHIELD FAULT
HEATED WINDSMELO RETURN
12V
HTD W/S COMMAND INPUT
12V
12V STATUS BIT 0
12V
12V STATUS BIT 1
12V
12V STATUS BIT 2
A
E
C
12129126 6-WAY
365A 1.0 RED
378 .50 LT BLU
364A 1.0 BLK
.23 OHM BUS BAR
2.7 OHM GRID
HEATED WINDSHIELD
15
5
7
9
12129225 NAT 24-WAY
637 .35 WHT
1262 .35 RED
1263 .35 ORN
1264 .35 DK GRN
C1
D2
C4
D4
12045575 BLK 32-WAY
HTD W/S COMMAND OUTPUT
12V STATUS BIT 0
12V STATUS BIT 1
12V STATUS BIT 2
SERIAL DATA
HPVS/THERMAL CONTROL MODULE (HTCM)
D6
12045575 BLK 32-WAY
80 OH 35 TAN
J2 B10
12110244 PNK 24—WAY
SEE DLC SECTION
RIGHT HAND JUNCTION BLOCK (RHJB)
D4 J9
12110245 PNK 32-WAY
800J .35 TAN
CO
12045575 BLK 32-WAY
SERIAL DATA
RUN/LOCK SHIFTER ASSEMBLY (RSA)
PSMELC68138AA

CamScanner

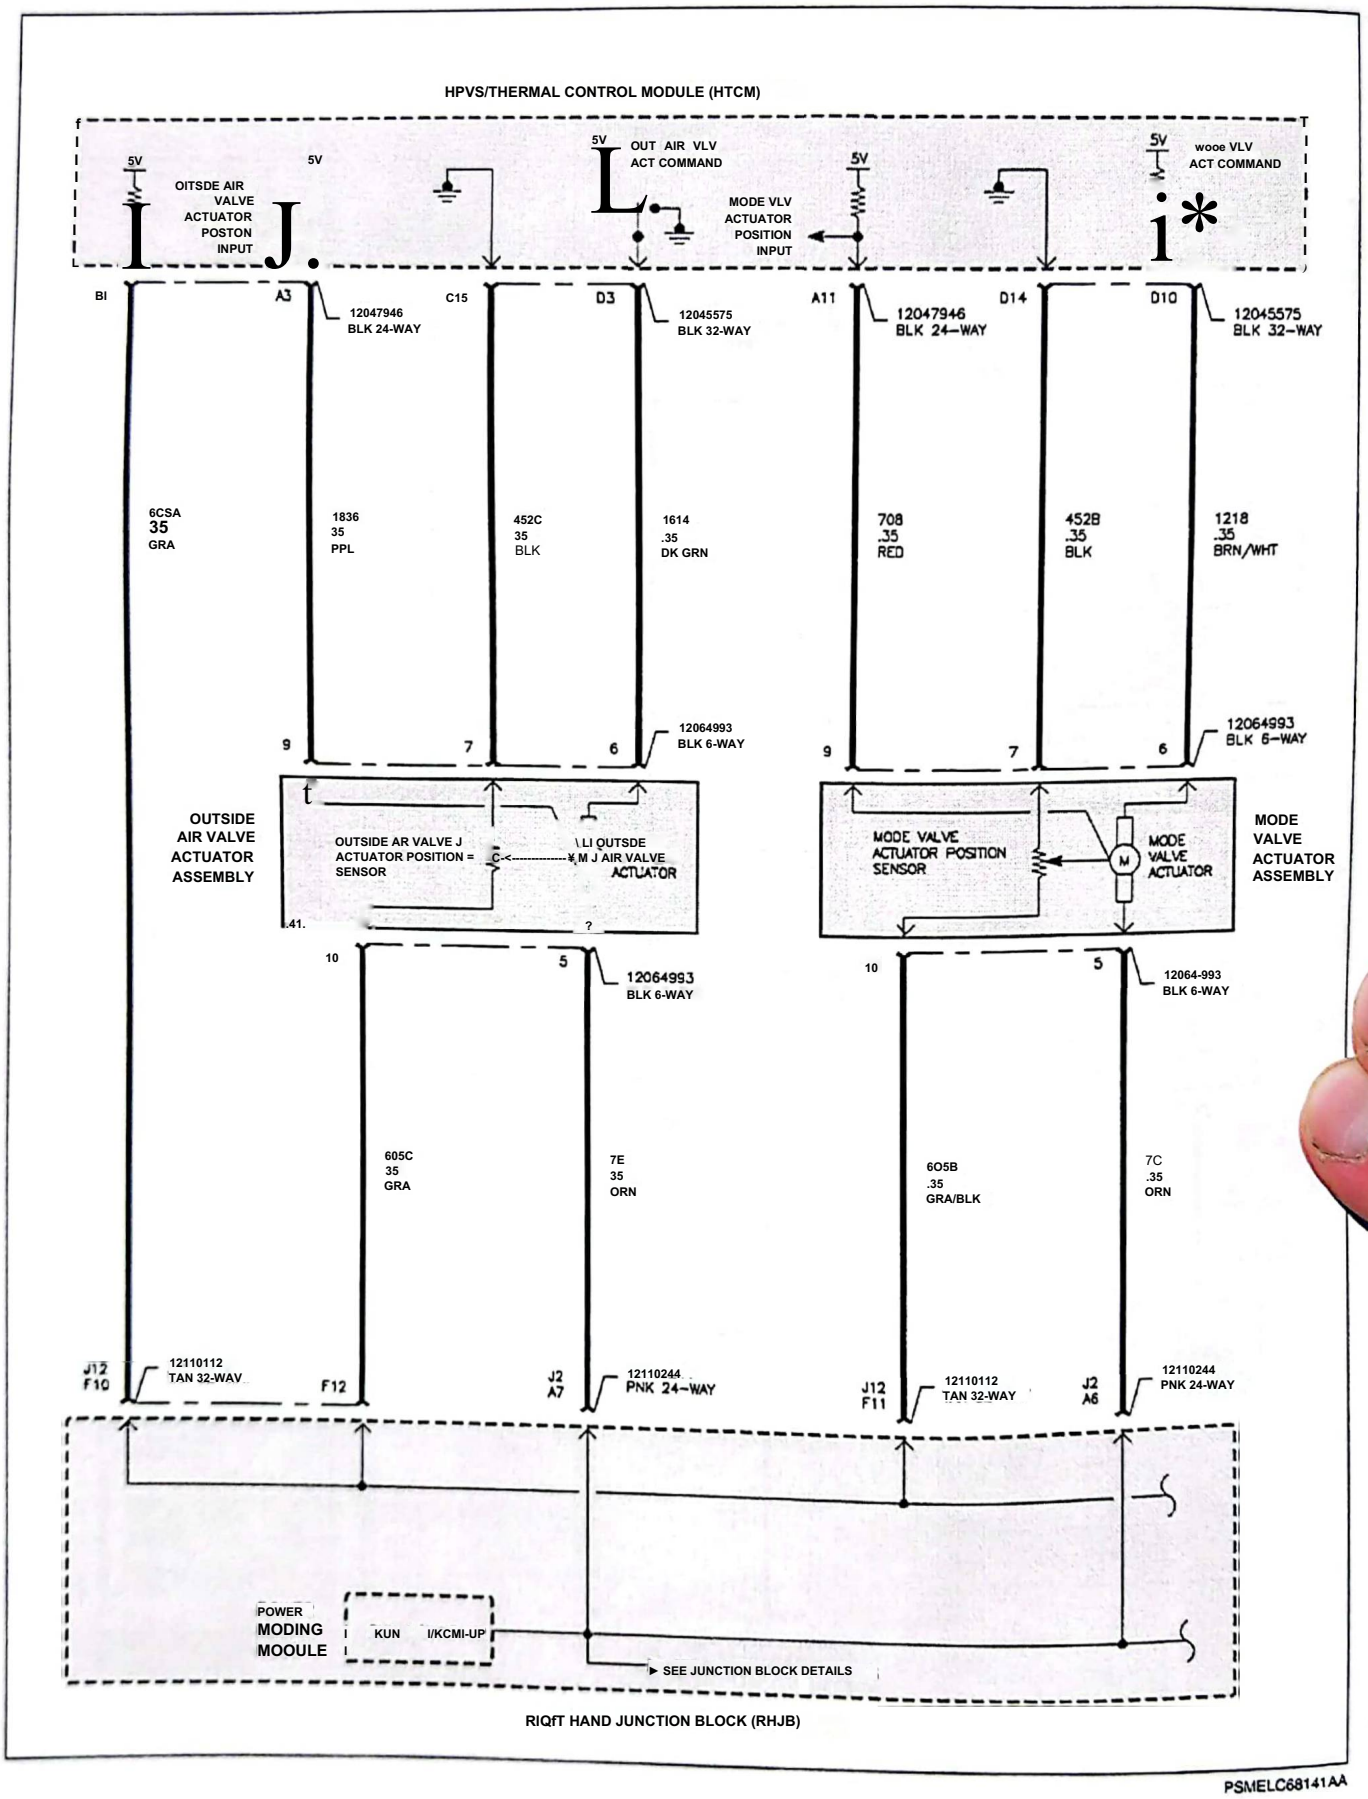
HPVS/THERMAL CONTROL MODULE (HTCM)
5V
OITSDE AIR VALVE ACTUATOR POSTON INPUT
5V
5V
OUT AIR VLV ACT COMMAND
MODE VLV ACTUATOR POSITION INPUT
5V
5V
wooe VLV ACT COMMAND
BI
A3
12047946 BLK 24-WAY
C15
D3
12045575 BLK 32-WAY
A11
12047946 BLK 24—WAY
D14
D10
12045575 BLK 32—WAY
6CSA 35 GRA
1836 35 PPL
452C 35 BLK
1614 .35 DK GRN
708 .35 RED
452B .35 BLK
1218 .35 BRN/WHT
9
7
6
12064993 BLK 6-WAY
9
7
6
12064993 BLK 6—WAY
OUTSIDE AIR VALVE ACTUATOR ASSEMBLY
OUTSIDE AR VALVE J ACTUATOR POSITION = SENSOR
LI OUTSDE M J AIR VALVE ACTUATOR
MODE VALVE ACTUATOR POSITION SENSOR
MODE VALVE ACTUATOR
MODE VALVE ACTUATOR ASSEMBLY
10
5
12064993 BLK 6-WAY
10
5
12064-993 BLK 6-WAY
605C 35 GRA
7E 35 ORN
6O5B .35 GRA/BLK
7C .35 ORN
J12 F10
12110112 TAN 32-WAV
F12
J2 A7
12110244 PNK 24—WAY
J12 F11
12110112 TAN 32-WAY
J2 A6
12110244 PNK 24-WAY
POWER MODING MOOULE
KUN
I/KCMI-UP
SEE JUNCTION BLOCK DETAILS
RIQfT HAND JUNCTION BLOCK (RHJB)
PSMELC68141AA

CamScanner

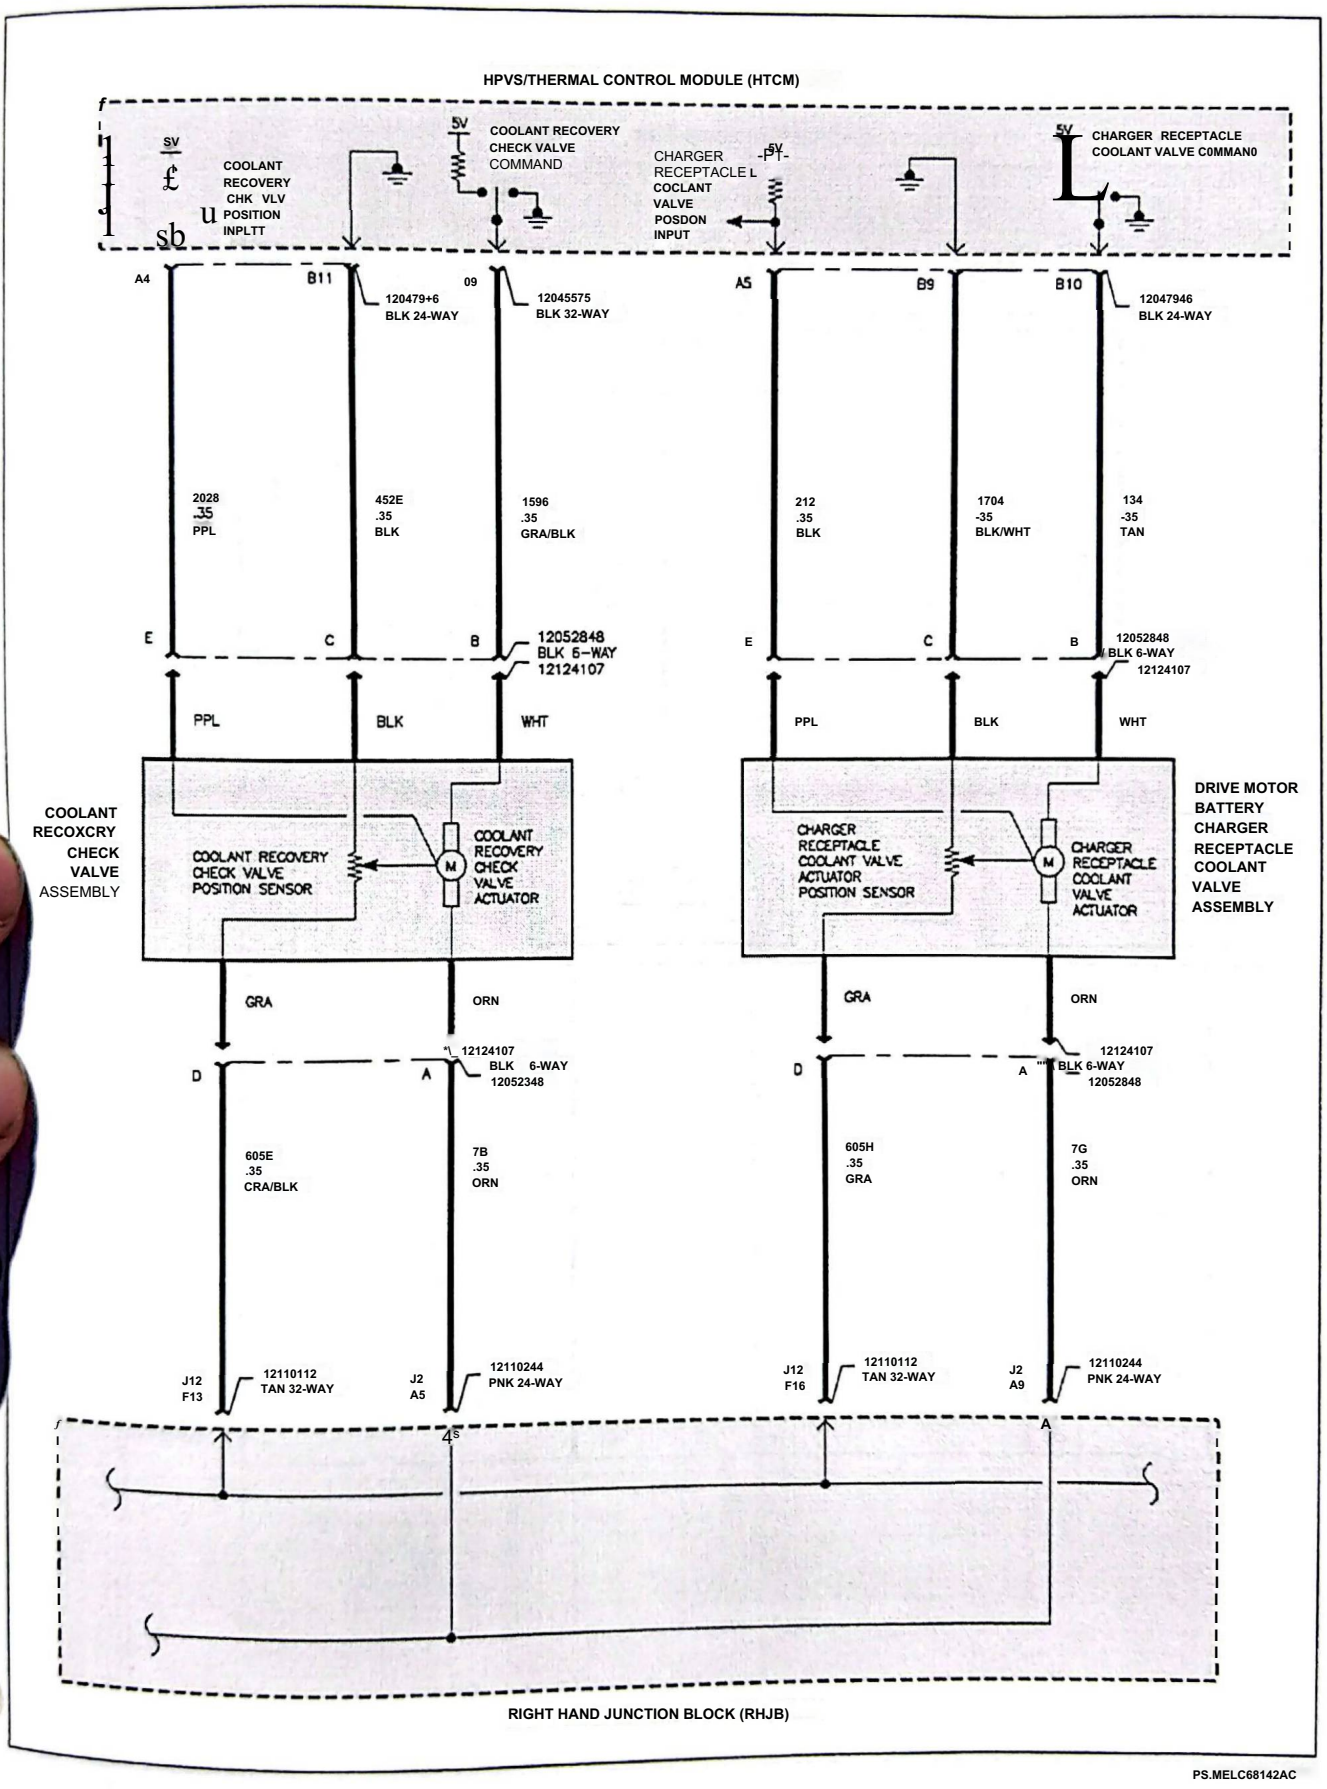
HPVS/THERMAL CONTROL MODULE (HTCM)
COOLANT RECOVERY CHK VLV POSITION INPLTT
COOLANT RECOVERY CHECK VALVE COMMAND
CHARGER RECEPTACLE COCLANT VALVE POSDON INPUT
CHARGER RECEPTACLE COOLANT VALVE COMMAN0
A4
B11
120479+6 BLK 24-WAY
09
12045575 BLK 32-WAY
A5
B9
B10
12047946 BLK 24-WAY
2028 .35 PPL
452E .35 BLK
1596 .35 GRA/BLK
212 .35 BLK
1704 -35 BLK/WHT
134 -35 TAN
E
C
B
12052848 BLK 5-WAY 12124107
12052848 BLK 6-WAY 12124107
PPL
BLK
WHT
COOLANT RECOXCRY CHECK VALVE ASSEMBLY
COOLANT RECOVERY CHECK VALVE POSITION SENSOR
COOLANT RECOVERY CHECK VALVE ACTUATOR
CHARGER RECEPTACLE COOLANT VALVE ACTUATOR POSITION SENSOR
CHARGER RECEPTACLE COOLANT VALVE ACTUATOR
DRIVE MOTOR BATTERY CHARGER RECEPTACLE COOLANT VALVE ASSEMBLY
GRA
ORN
12124107 BLK 6-WAY 12052348
12052848
D
A
605E .35 CRA/BLK
7B .35 ORN
605H .35 GRA
7G .35 ORN
J12 F13
12110112 TAN 32-WAY
J2 A5
12110244 PNK 24-WAY
J12 F16
J2 A9
RIGHT HAND JUNCTION BLOCK (RHJB)
PS.MELC68142AC

CamScanner

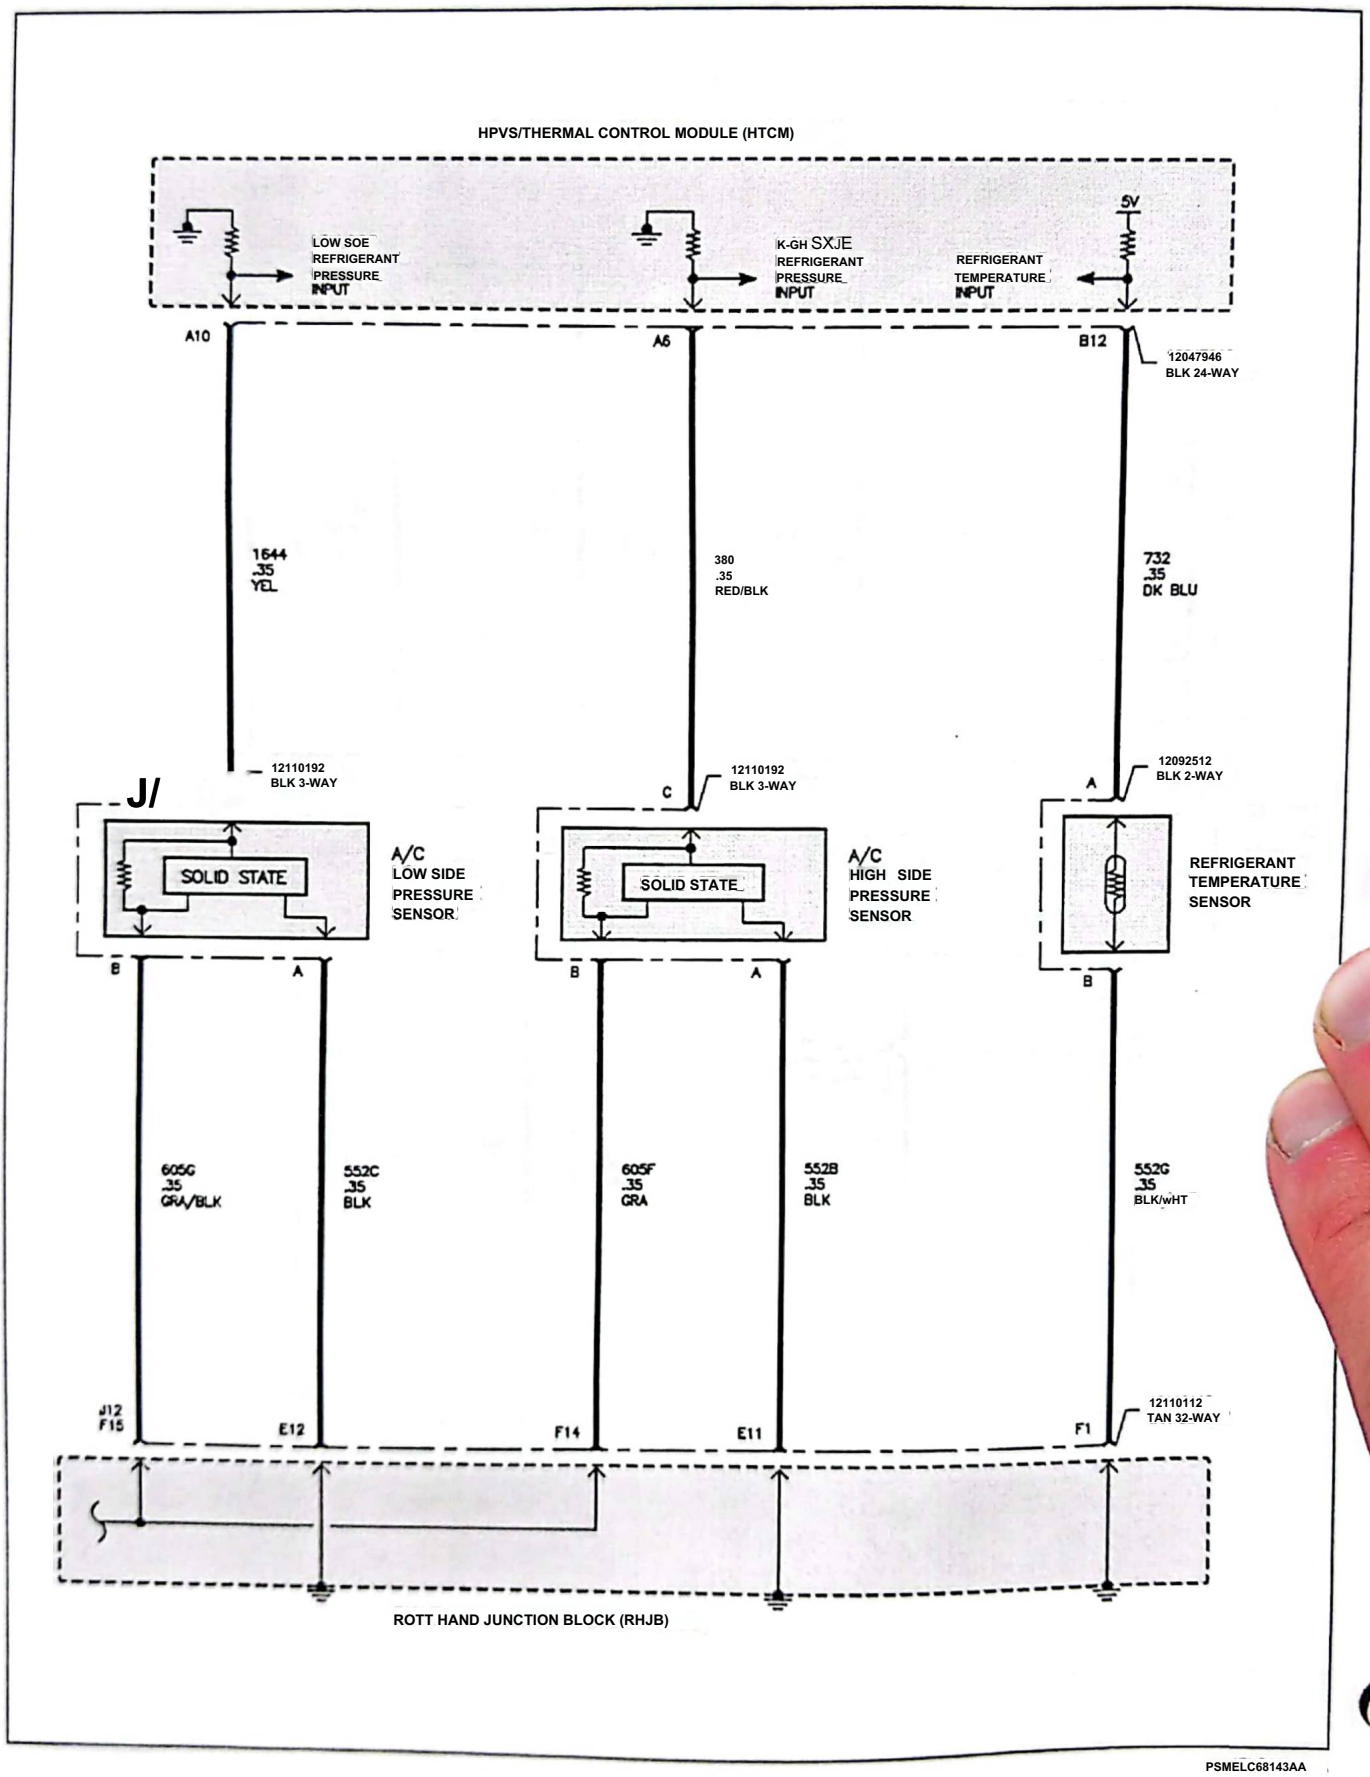
HPVS/THERMAL CONTROL MODULE (HTCM)
LOW SOE REFRIGERANT PRESSURE INPUT
K-GH SXJE REFRIGERANT PRESSURE INPUT
REFRIGERANT TEMPERATURE INPUT
5V
A10
A6
B12
12047946 BLK 24-WAY
1644 .35 YEL
380 .35 RED/BLK
732 .35 DK BLU
12110192 BLK 3-WAY
12110192 BLK 3-WAY
12092512 BLK 2-WAY
J/
SOLID STATE
A/C LOW SIDE PRESSURE SENSOR
SOLID STATE
A/C HIGH SIDE PRESSURE SENSOR
REFRIGERANT TEMPERATURE SENSOR
605G .35 GRA/BLK
552C .35 BLK
605F .35 GRA
552B .35 BLK
552G .35 BLK/wHT
J12 F15
E12
F14
E11
F1
12110112 TAN 32-WAY
ROTT HAND JUNCTION BLOCK (RHJB)
PSMELC68143AA

CamScanner

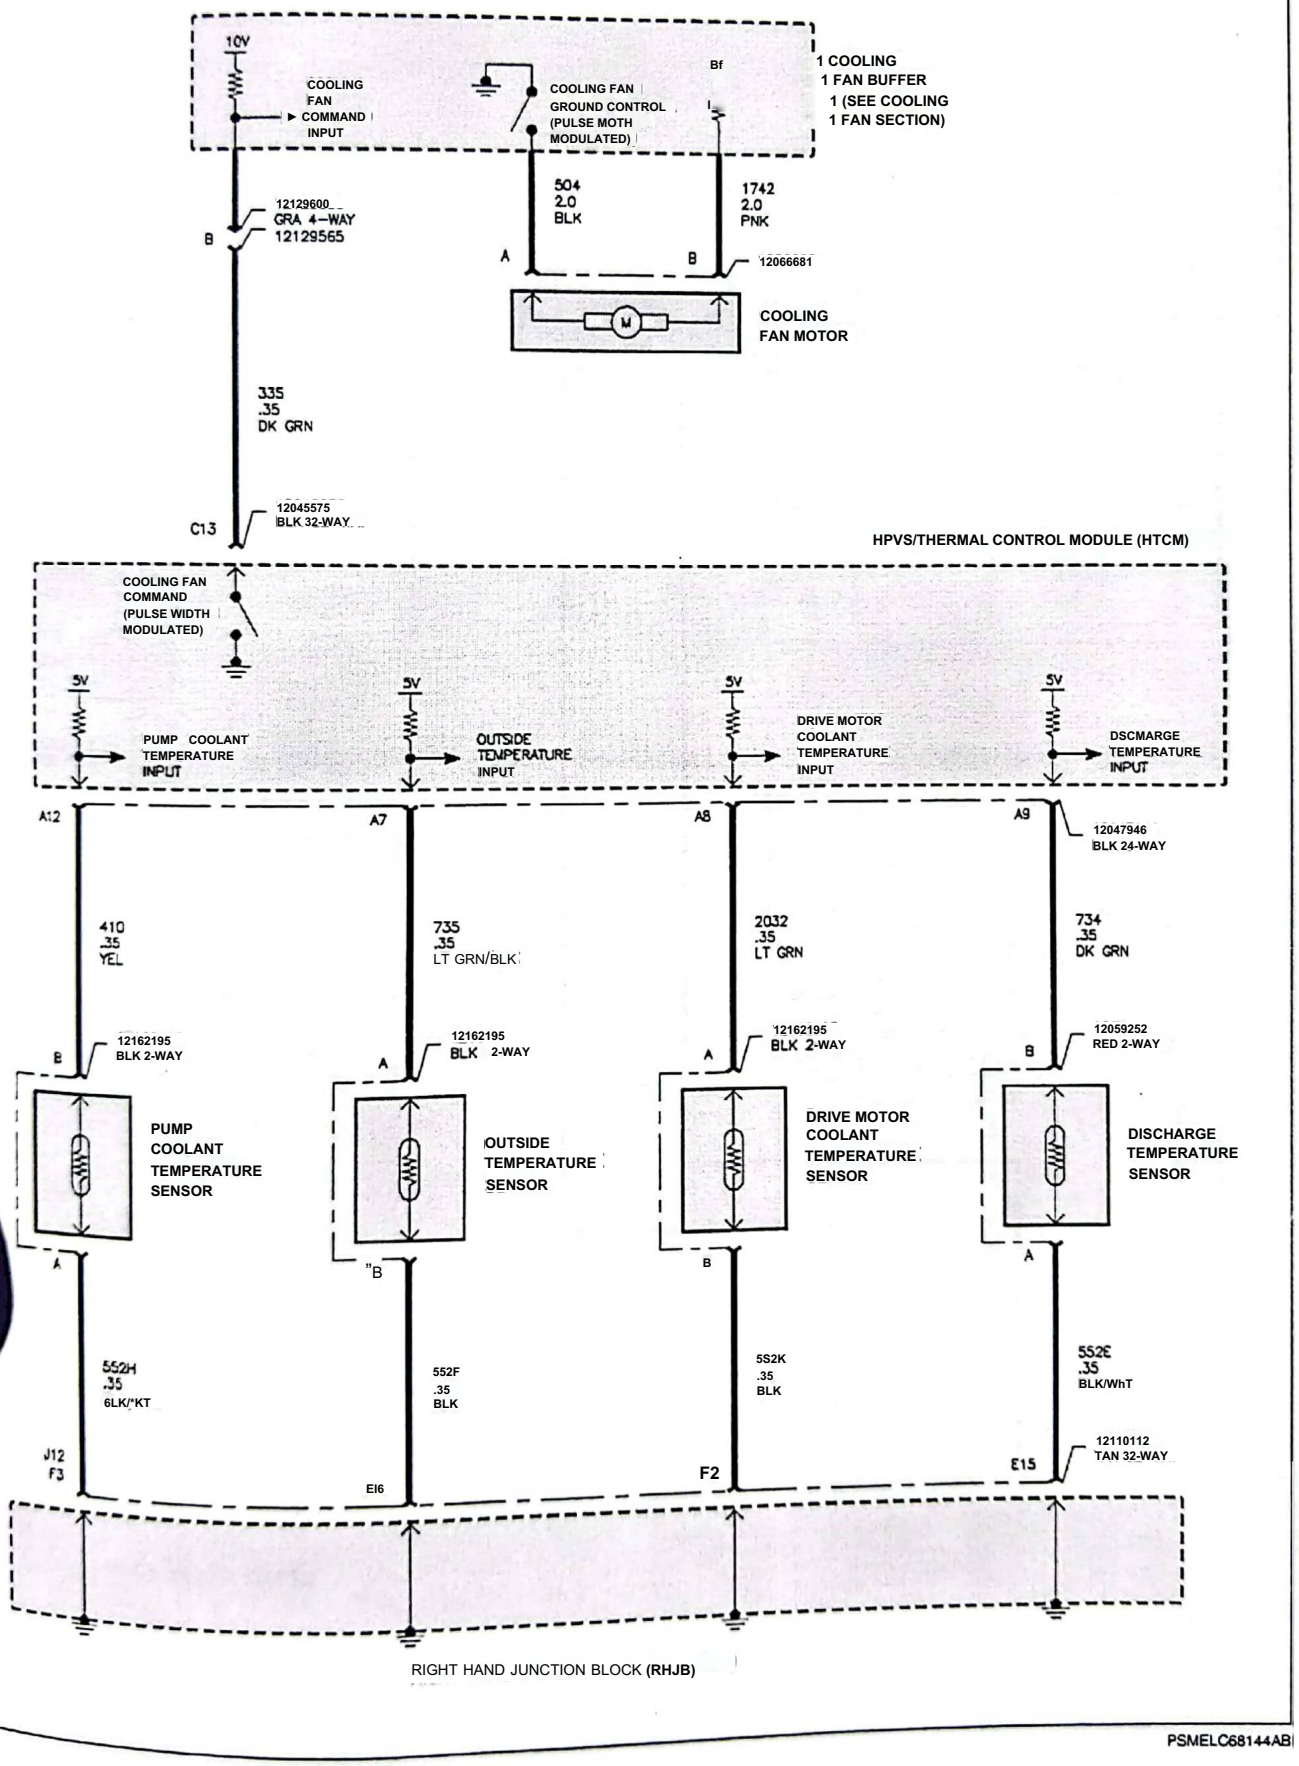

PSMELC68144AB

CamScanner

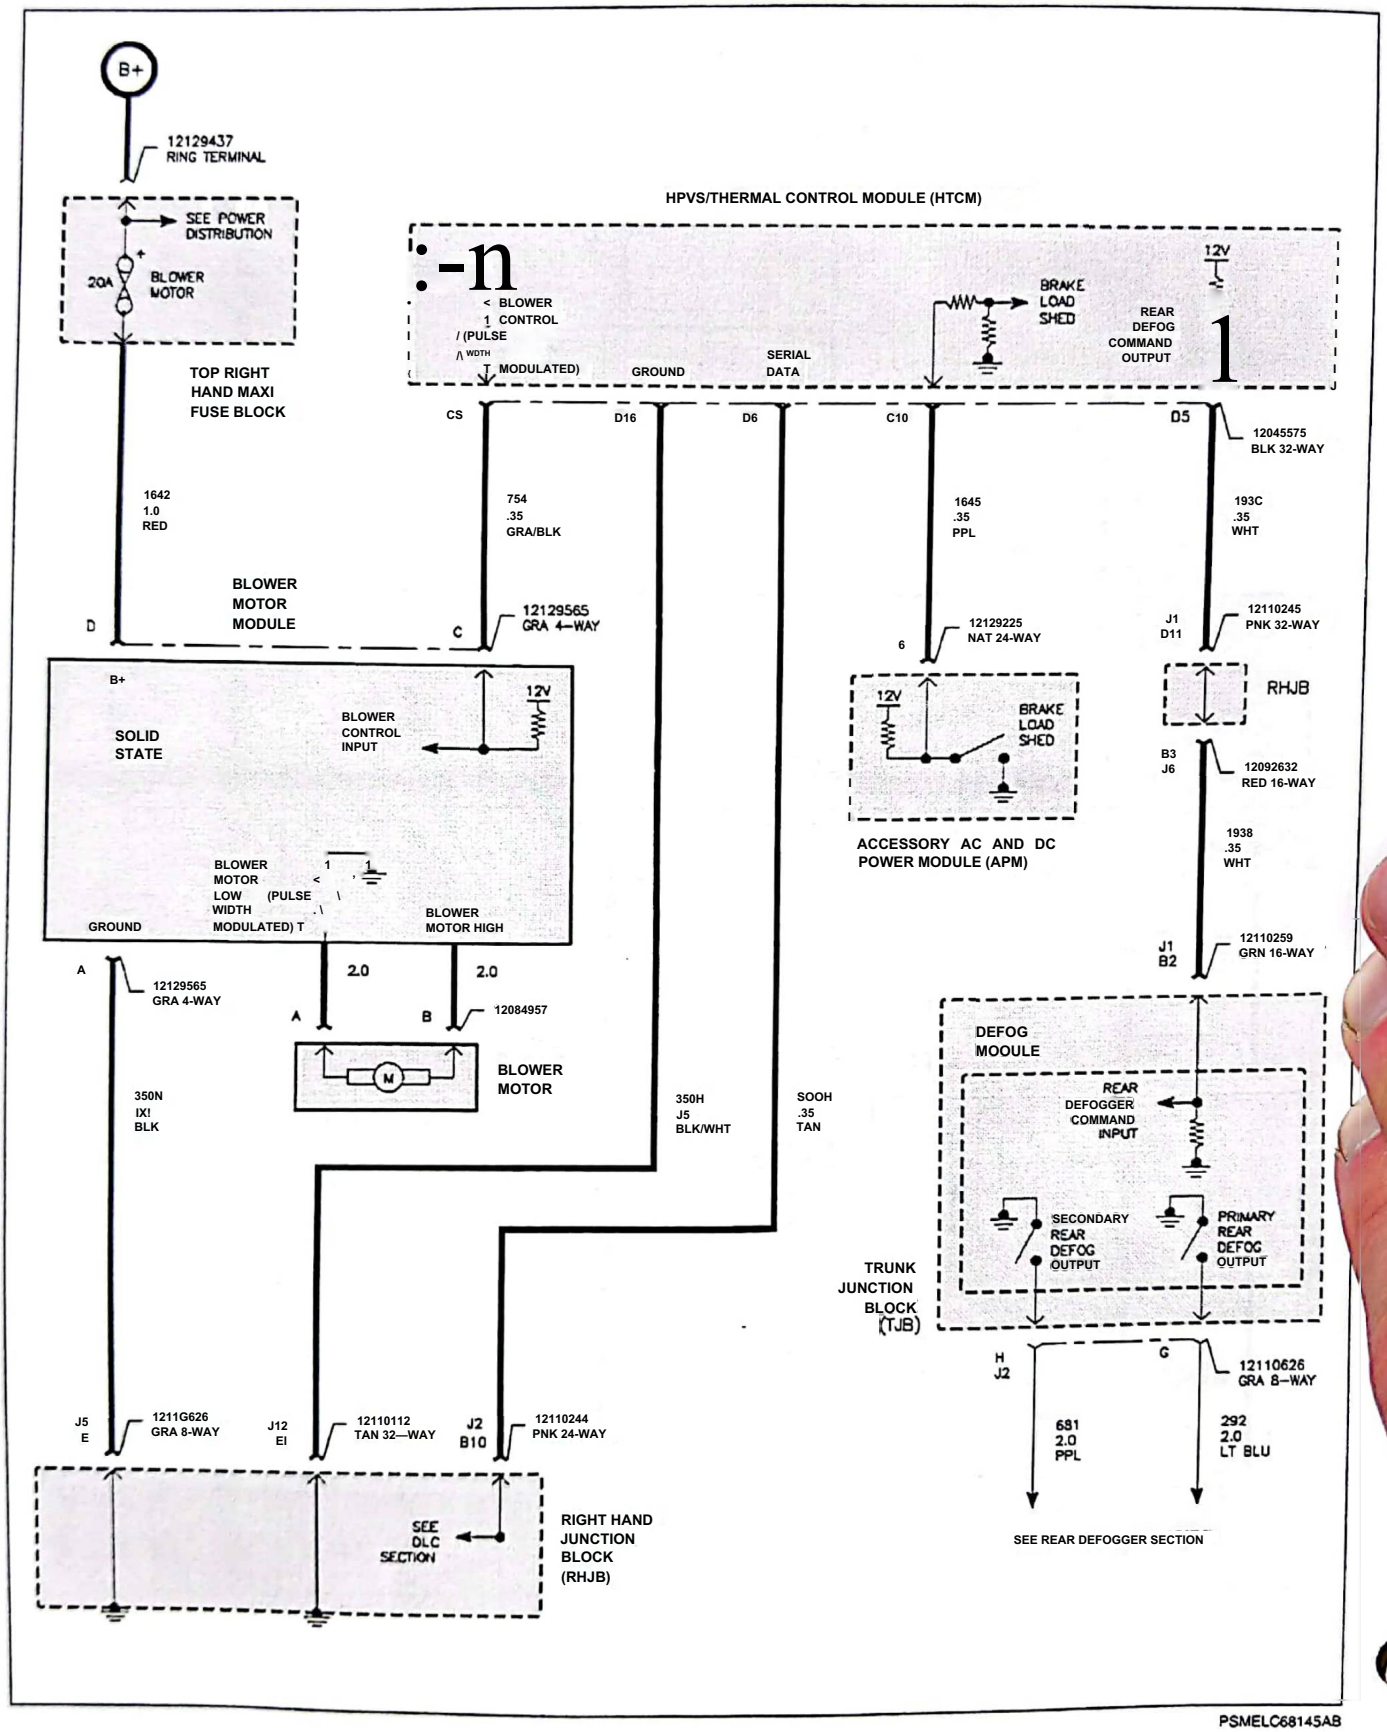
B+
12129437
RING TERMINAL
SEE POWER DISTRIBUTION
20A
BLOWER MOTOR
TOP RIGHT HAND MAXI FUSE BLOCK
1642
1.0
RED
D
BLOWER MOTOR MODULE
C
12129565
GRA 4-WAY
HPVS/THERMAL CONTROL MODULE (HTCM)
BLOWER CONTROL (PULSE WIDTH MODULATED)
GROUND
SERIAL DATA
BRAKE LOAD SHED
12V
REAR DEFOG COMMAND OUTPUT
1
CS
D16
D6
C10
D5
754
.35
GRA/BLK
1645
.35
PPL
193C
.35
WHT
12045575
BLK 32-WAY
6
12129225
NAT 24-WAY
J1
D11
12110245
PNK 32-WAY
RHJB
B3
J6
12092632
RED 16-WAY
1938
.35
WHT
J1
B2
12110259
GRN 16-WAY
ACCESSORY AC AND DC POWER MODULE (APM)
B+
SOLID STATE
BLOWER CONTROL INPUT
12V
BLOWER MOTOR LOW (PULSE WIDTH MODULATED)
BLOWER MOTOR HIGH
GROUND
A
12129565
GRA 4-WAY
2.0
2.0
A
B
12084957
M
BLOWER MOTOR
350N
IX!
BLK
350H
J5
BLK/WHT
SOOH
.35
TAN
DEFOG MOOULE
REAR DEFOGGER COMMAND INPUT
SECONDARY REAR DEFOG OUTPUT
PRIMARY REAR DEFOG OUTPUT
TRUNK JUNCTION BLOCK (TJB)
H
J2
G
12110626
GRA 8-WAY
681
2.0
PPL
292
2.0
LT BLU
SEE REAR DEFOGGER SECTION
J5
E
1211G626
GRA 8-WAY
J12
EI
12110112
TAN 32—WAY
J2
B10
12110244
PNK 24-WAY
SEE DLC SECTION
RIGHT HAND JUNCTION BLOCK (RHJB)
PSMELC68145AB

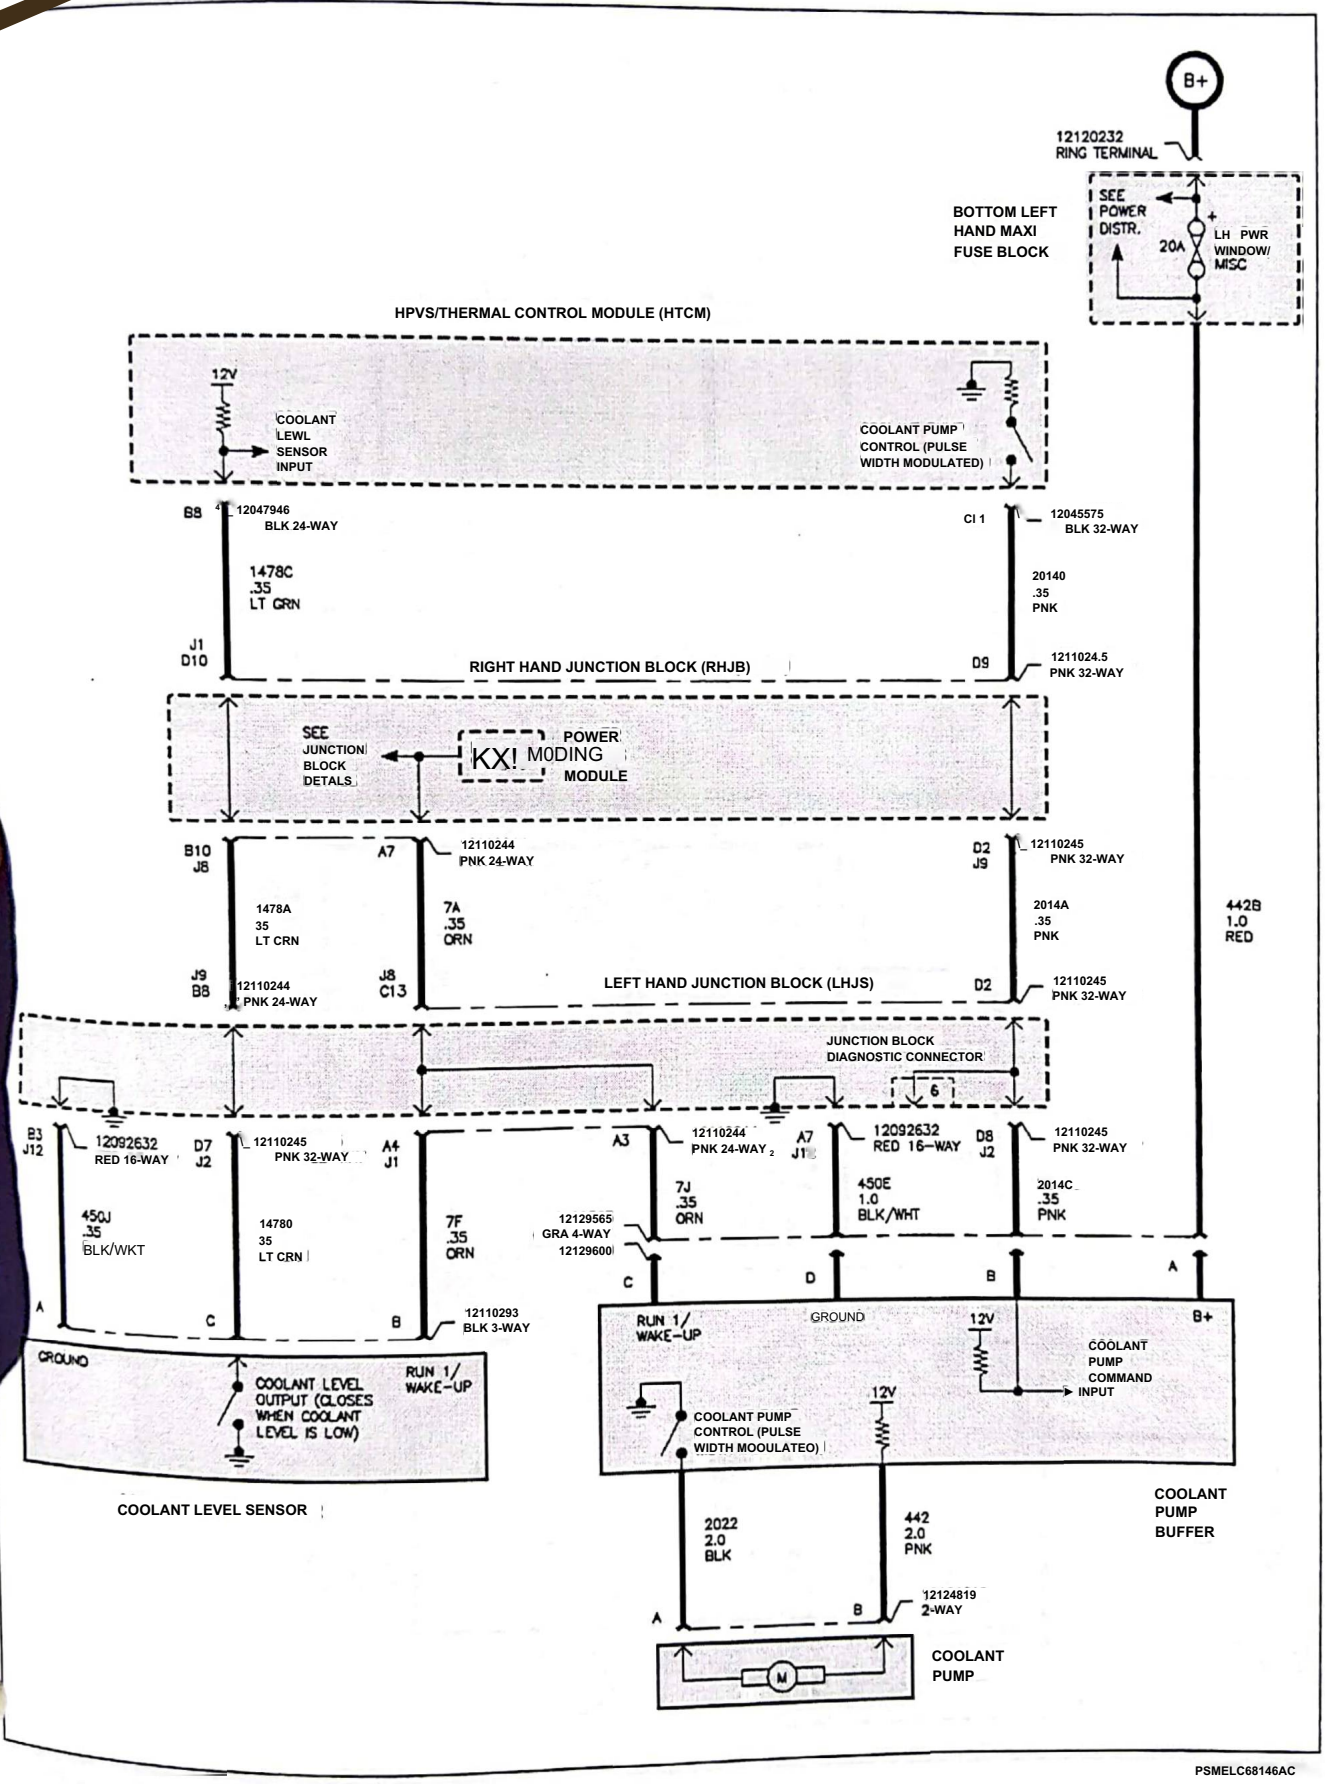

PSMELC68146AC

CamScanner

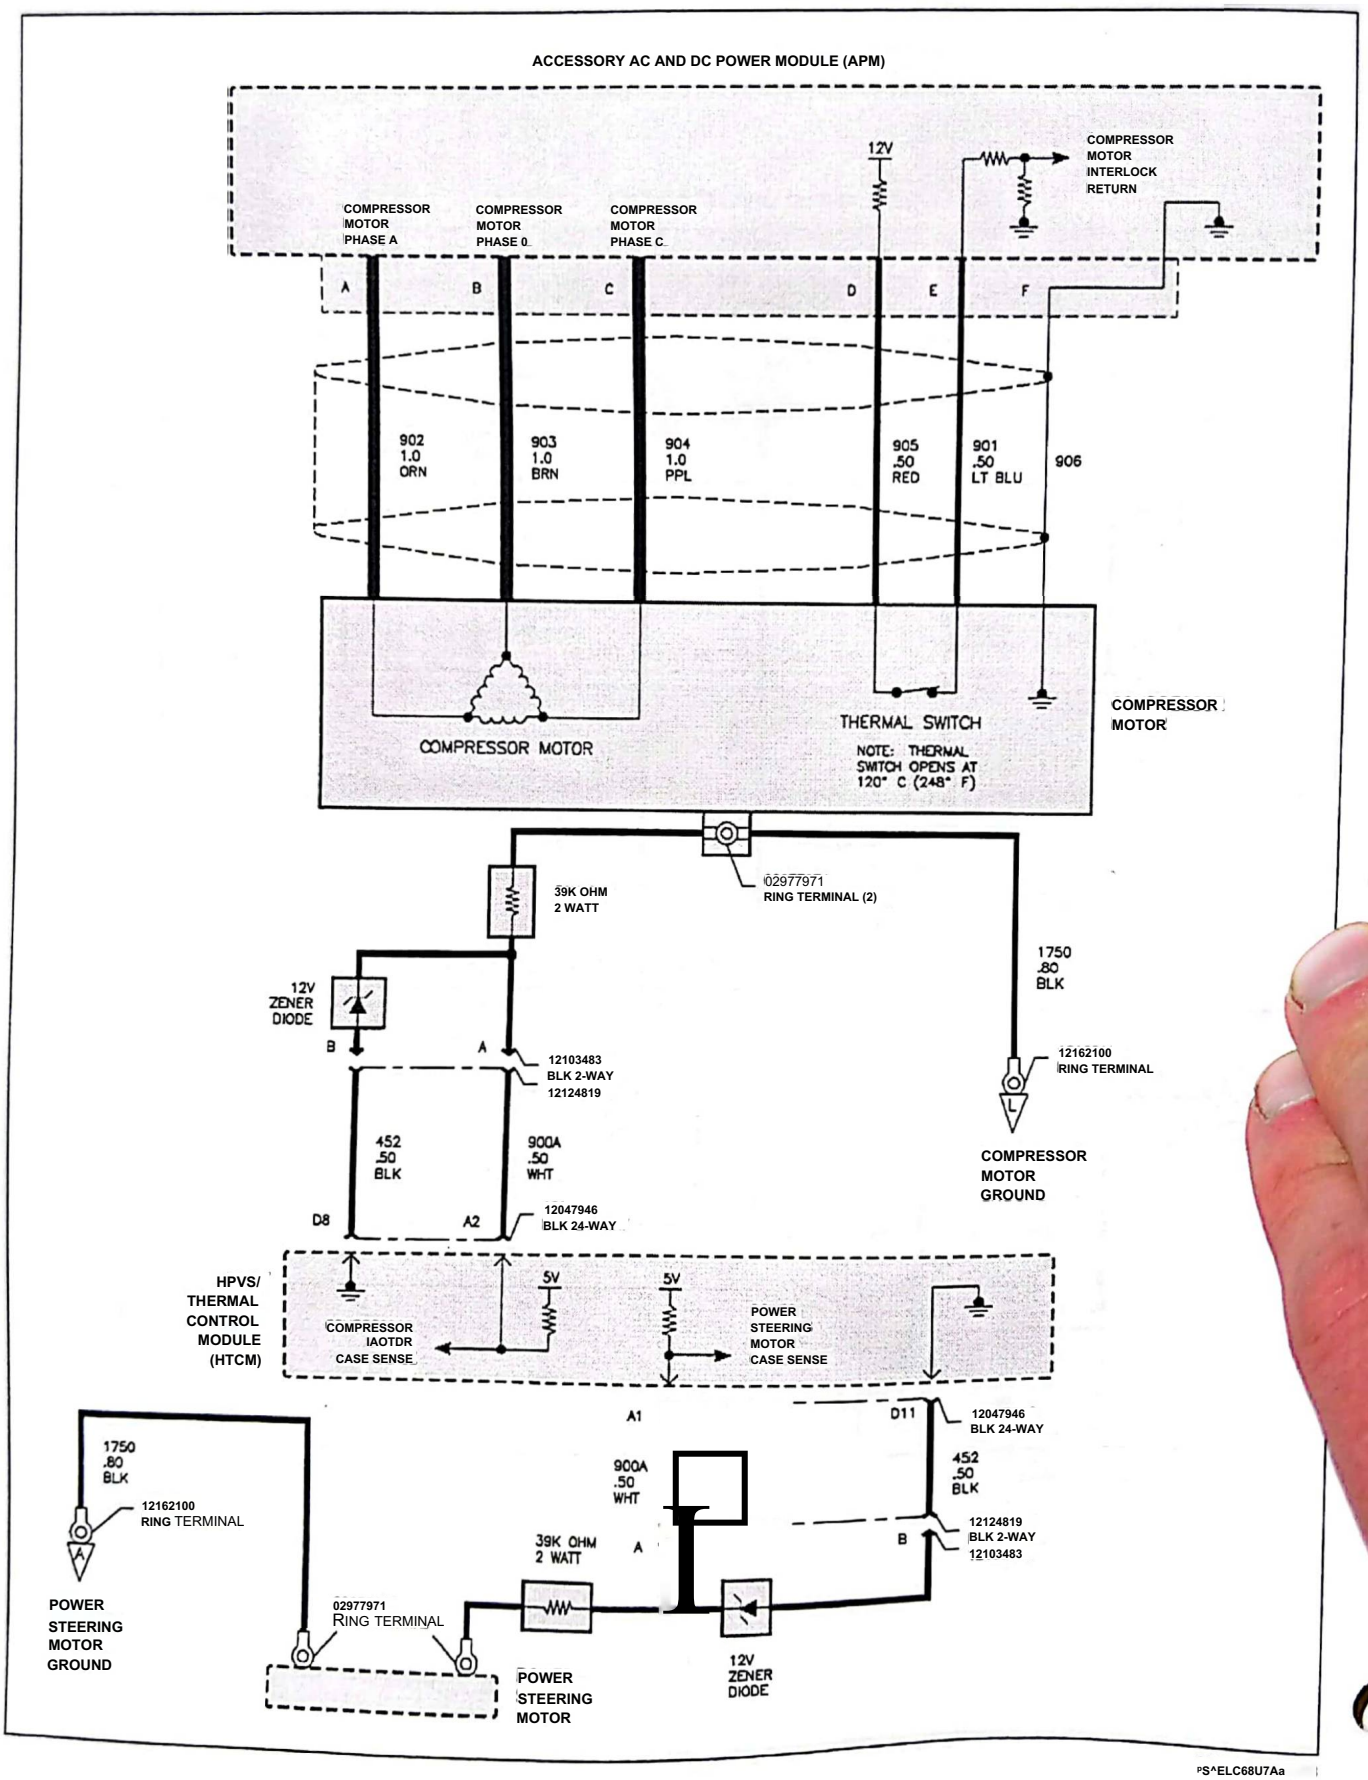
ACCESSORY AC AND DC POWER MODULE (APM)
12V
COMPRESSOR MOTOR INTERLOCK RETURN
COMPRESSOR MOTOR PHASE A
COMPRESSOR MOTOR PHASE B
COMPRESSOR MOTOR PHASE C
A
B
C
D
E
F
902 1.0 ORN
903 1.0 BRN
904 1.0 PPL
905 .50 RED
901 .50 LT BLU
906
COMPRESSOR MOTOR
THERMAL SWITCH
NOTE: THERMAL SWITCH OPENS AT 120° C (248° F)
COMPRESSOR MOTOR
02977971 RING TERMINAL (2)
39K OHM 2 WATT
1750 .80 BLK
12V ZENER DIODE
B
A
12103483 BLK 2-WAY 12124819
12162100 RING TERMINAL
452 .50 BLK
900A .50 WHT
D8
A2
12047946 BLK 24-WAY
COMPRESSOR MOTOR GROUND
HPVS/ THERMAL CONTROL MODULE (HTCM)
COMPRESSOR IAOTDR CASE SENSE
5V
5V
POWER STEERING MOTOR CASE SENSE
A1
D11
12047946 BLK 24-WAY
1750 .80 BLK
12162100 RING TERMINAL
900A .50 WHT
452 .50 BLK
39K OHM 2 WATT
A
B
12124819 BLK 2-WAY 12103483
POWER STEERING MOTOR GROUND
02977971 RING TERMINAL
12V ZENER DIODE
POWER STEERING MOTOR
PS^ELC68U7Aa

CamScanner

CLIMATE CONTROLS LOCATION VIEWS

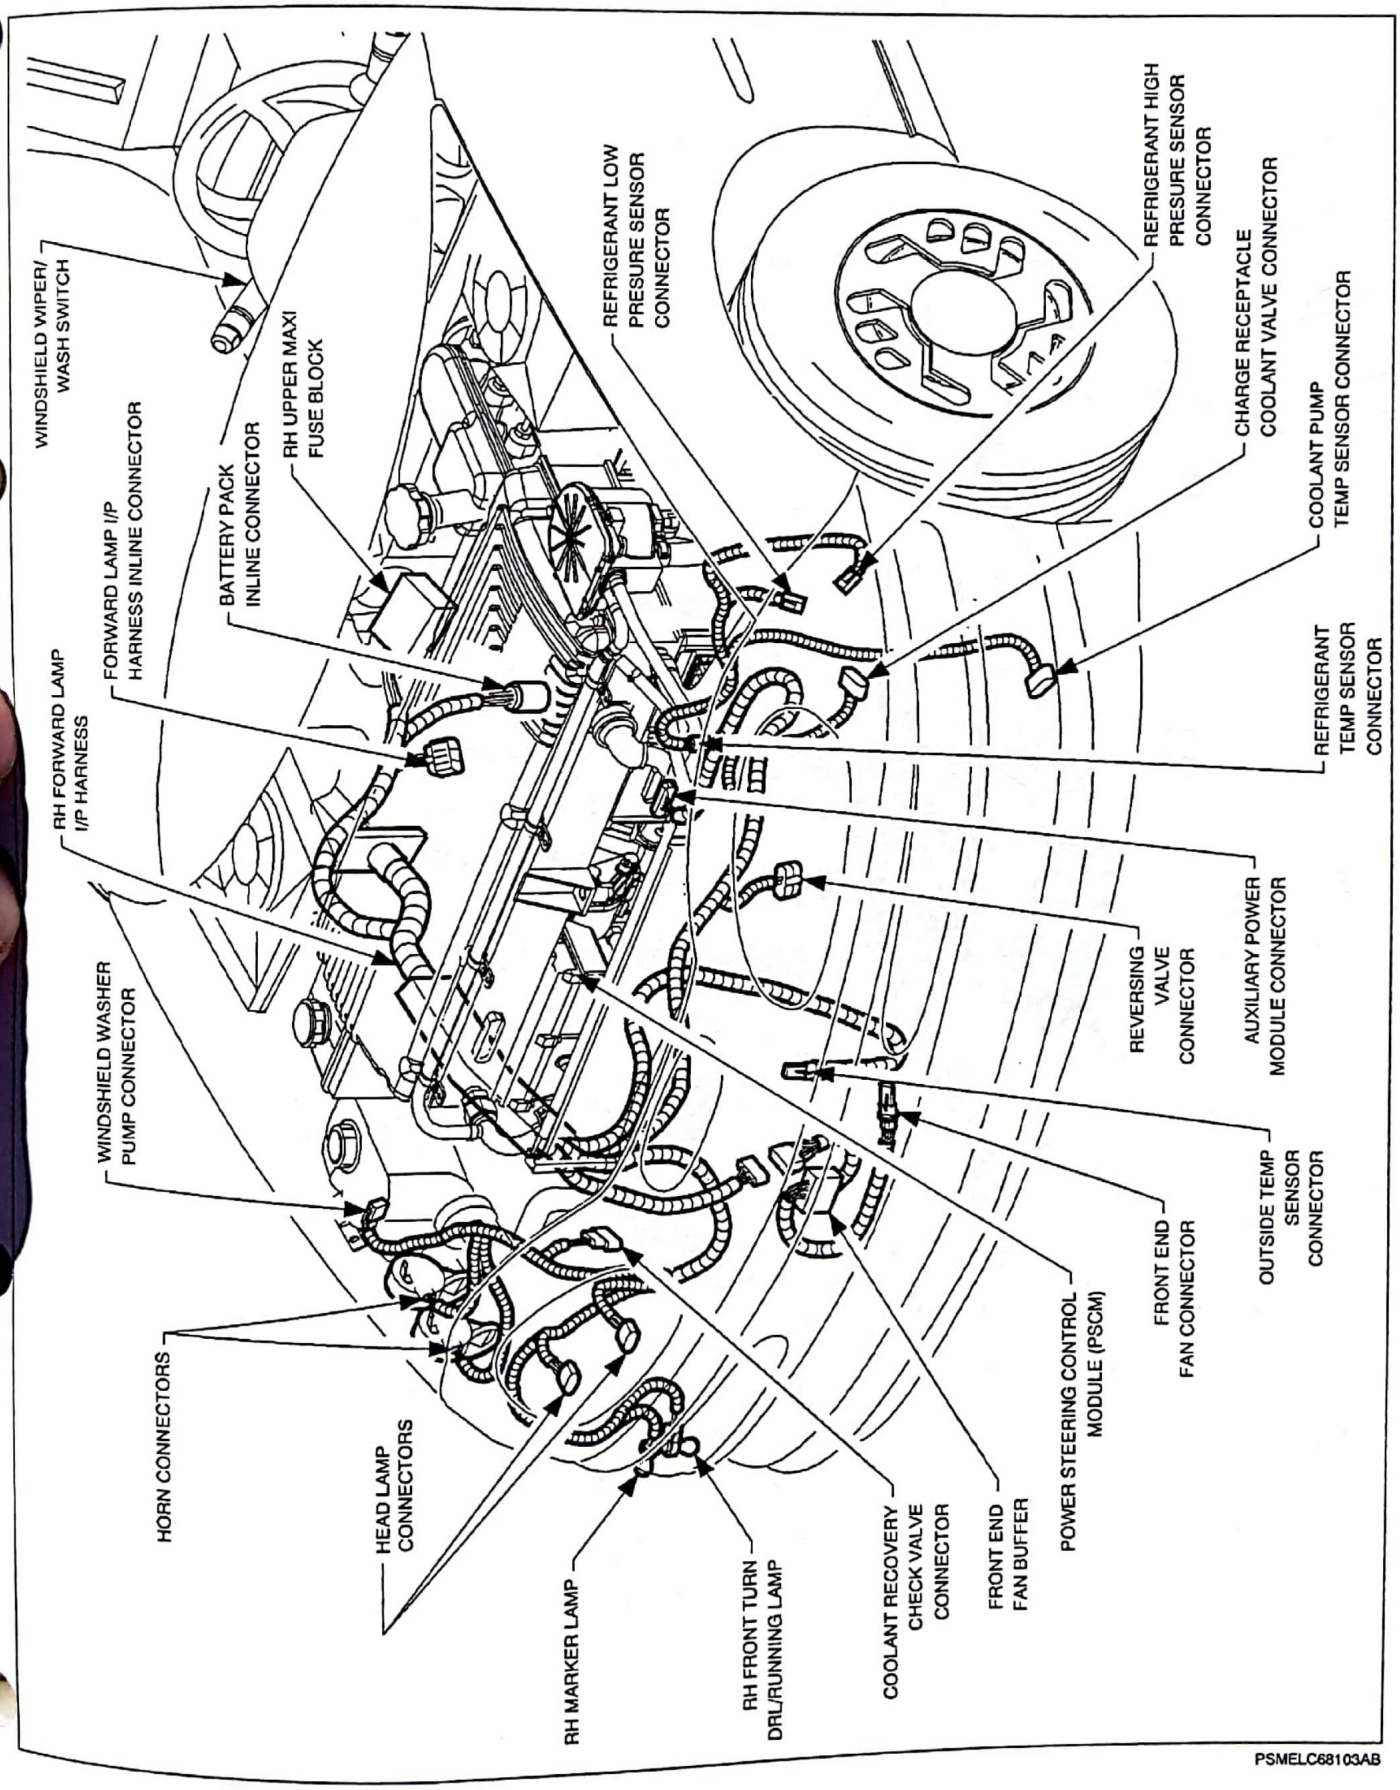
WINDSHIELD WIPER/ WASH SWITCH
FORWARD LAMP I/P HARNESS INLINE CONNECTOR
BATTERY PACK INLINE CONNECTOR
RH UPPER MAXI FUSE BLOCK
REFRIGERANT LOW PRESURE SENSOR CONNECTOR
REFRIGERANT HIGH PRESURE SENSOR CONNECTOR
CHARGE RECEPTACLE COOLANT VALVE CONNECTOR
COOLANT PUMP TEMP SENSOR CONNECTOR
REFRIGERANT TEMP SENSOR CONNECTOR
RH FORWARD LAMP I/P HARNESS
WINDSHIELD WASHER PUMP CONNECTOR
REVERSING VALVE CONNECTOR
AUXILIARY POWER MODULE CONNECTOR
HORN CONNECTORS
HEAD LAMP CONNECTORS
RH MARKER LAMP
RH FRONT TURN DRL/RUNNING LAMP
COOLANT RECOVERY CHECK VALVE CONNECTOR
FRONT END FAN BUFFER
POWER STEERING CONTROL MODULE (PSCM)
FRONT END FAN CONNECTOR
OUTSIDE TEMP SENSOR CONNECTOR
PSMELC68103AB

CLIMATE CONTROLS LOCATION VIEWS (CONTINUED)

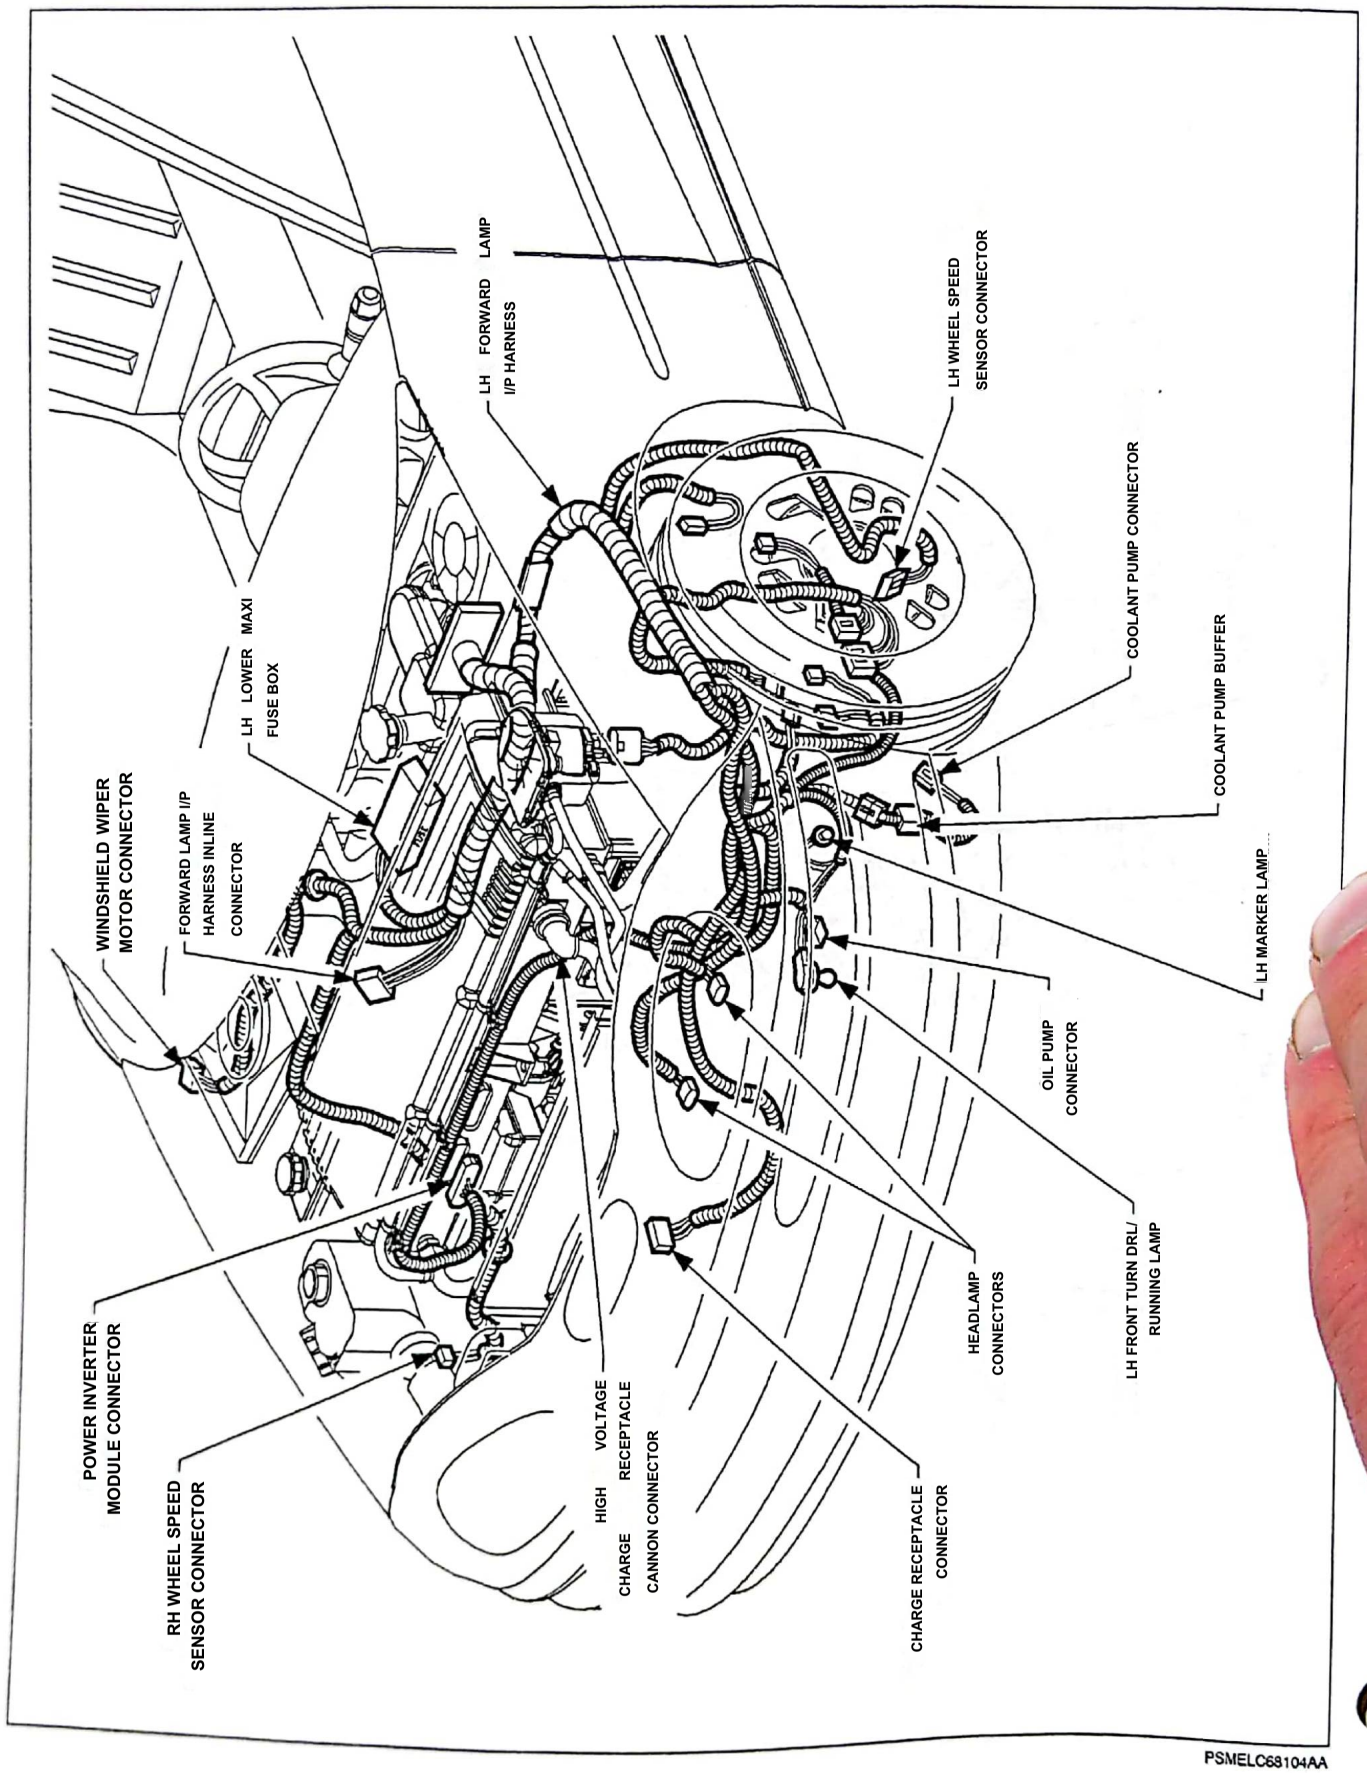
LH FORWARD LAMP I/P HARNESS
LH WHEEL SPEED SENSOR CONNECTOR
COOLANT PUMP CONNECTOR
COOLANT PUMP BUFFER
LH MARKER LAMP
OIL PUMP CONNECTOR
LH FRONT TURN DRL/ RUNNING LAMP
HEADLAMP CONNECTORS
CHARGE RECEPTACLE CONNECTOR
HIGH VOLTAGE CHARGE RECEPTACLE CANNON CONNECTOR
RH WHEEL SPEED SENSOR CONNECTOR
POWER INVERTER MODULE CONNECTOR
WINDSHIELD WIPER MOTOR CONNECTOR
FORWARD LAMP I/P HARNESS INLINE CONNECTOR
LH LOWER MAXI FUSE BOX
PSMELC68104AA

NOTES

CamScanner

COOLING FAN

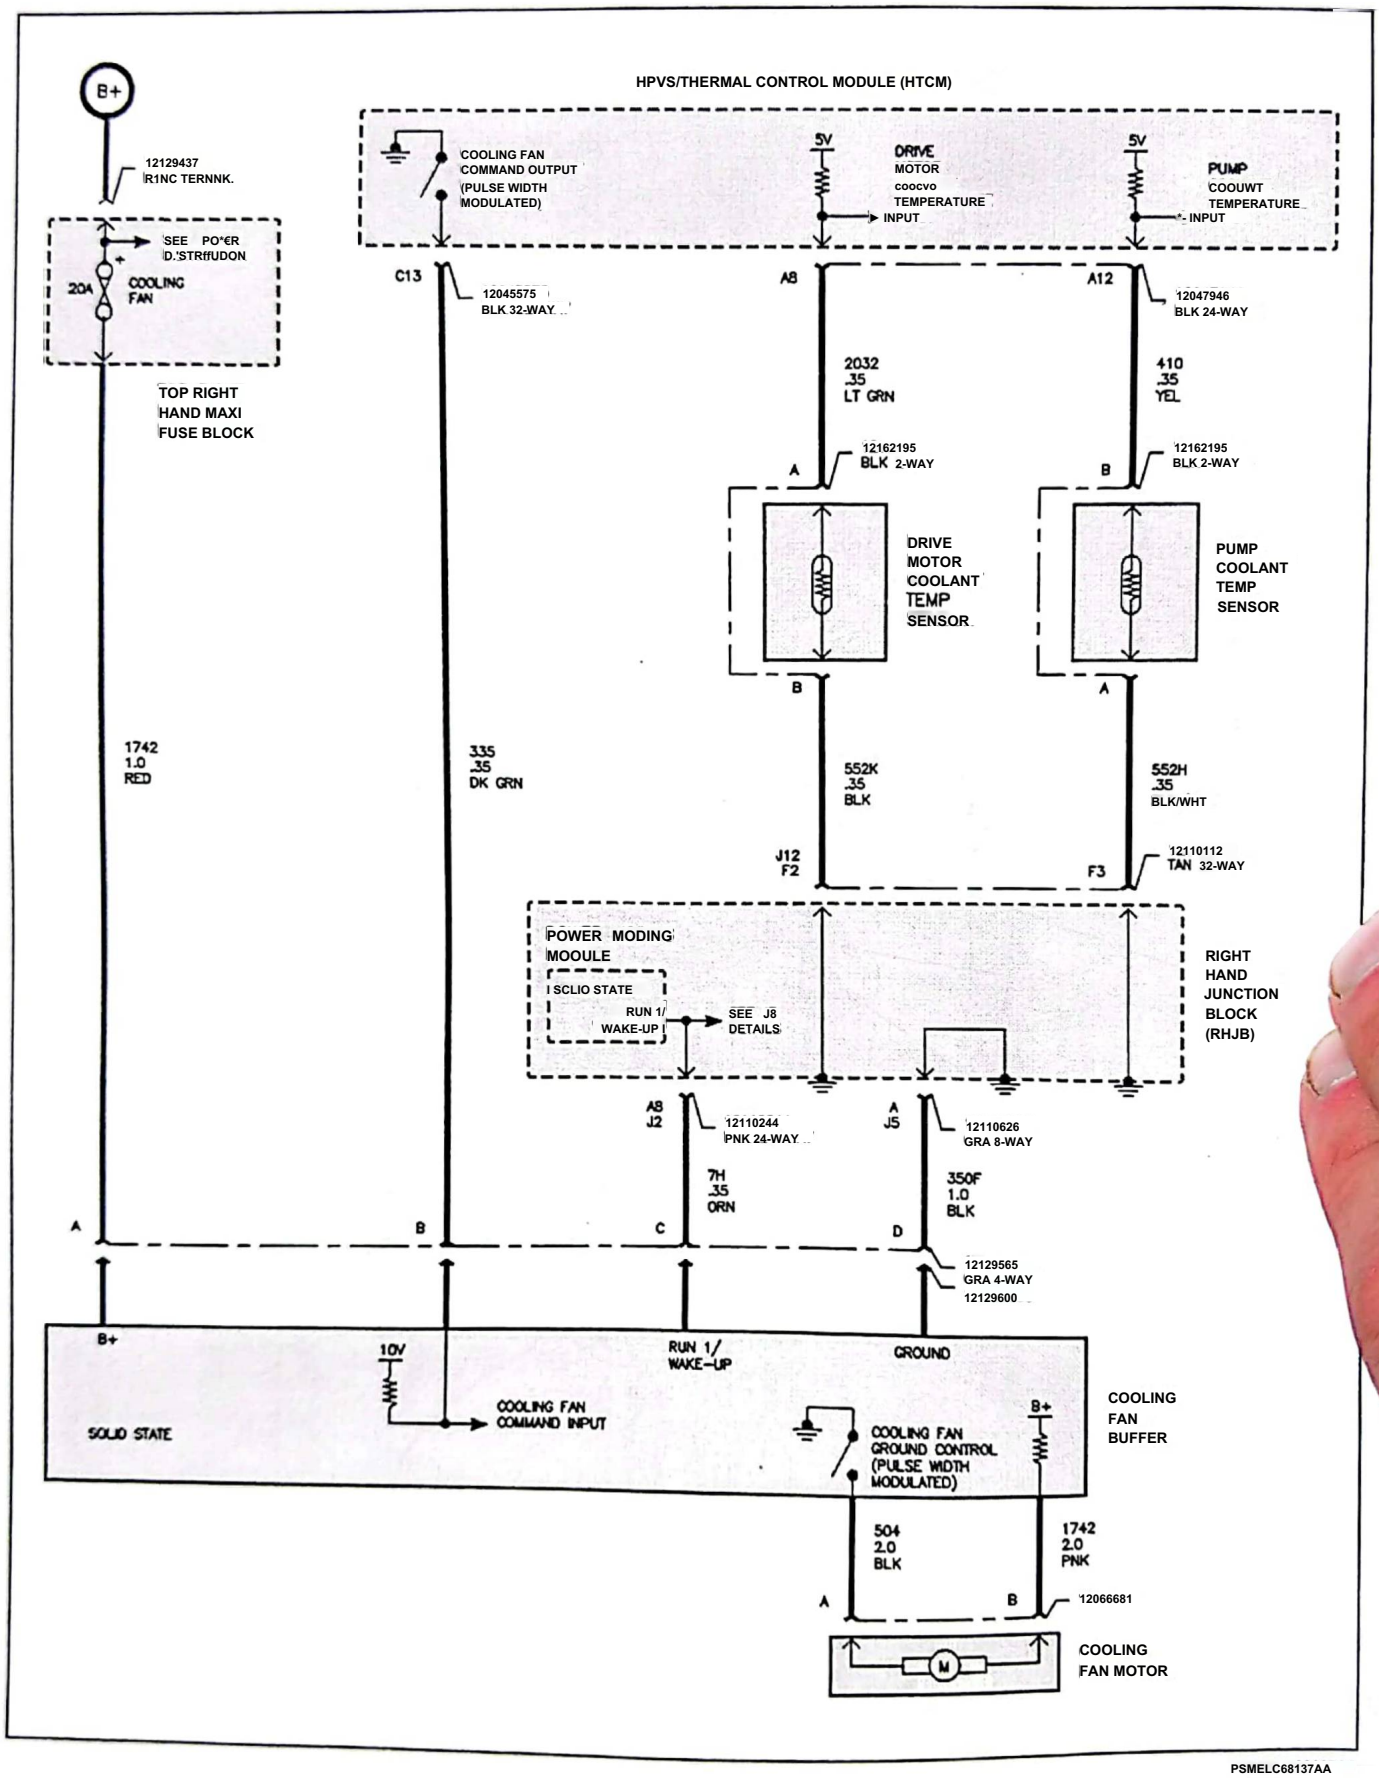

PSMELC68137AA

CamScanner

COOLING FAN COMPONENT LOCATION VIEW

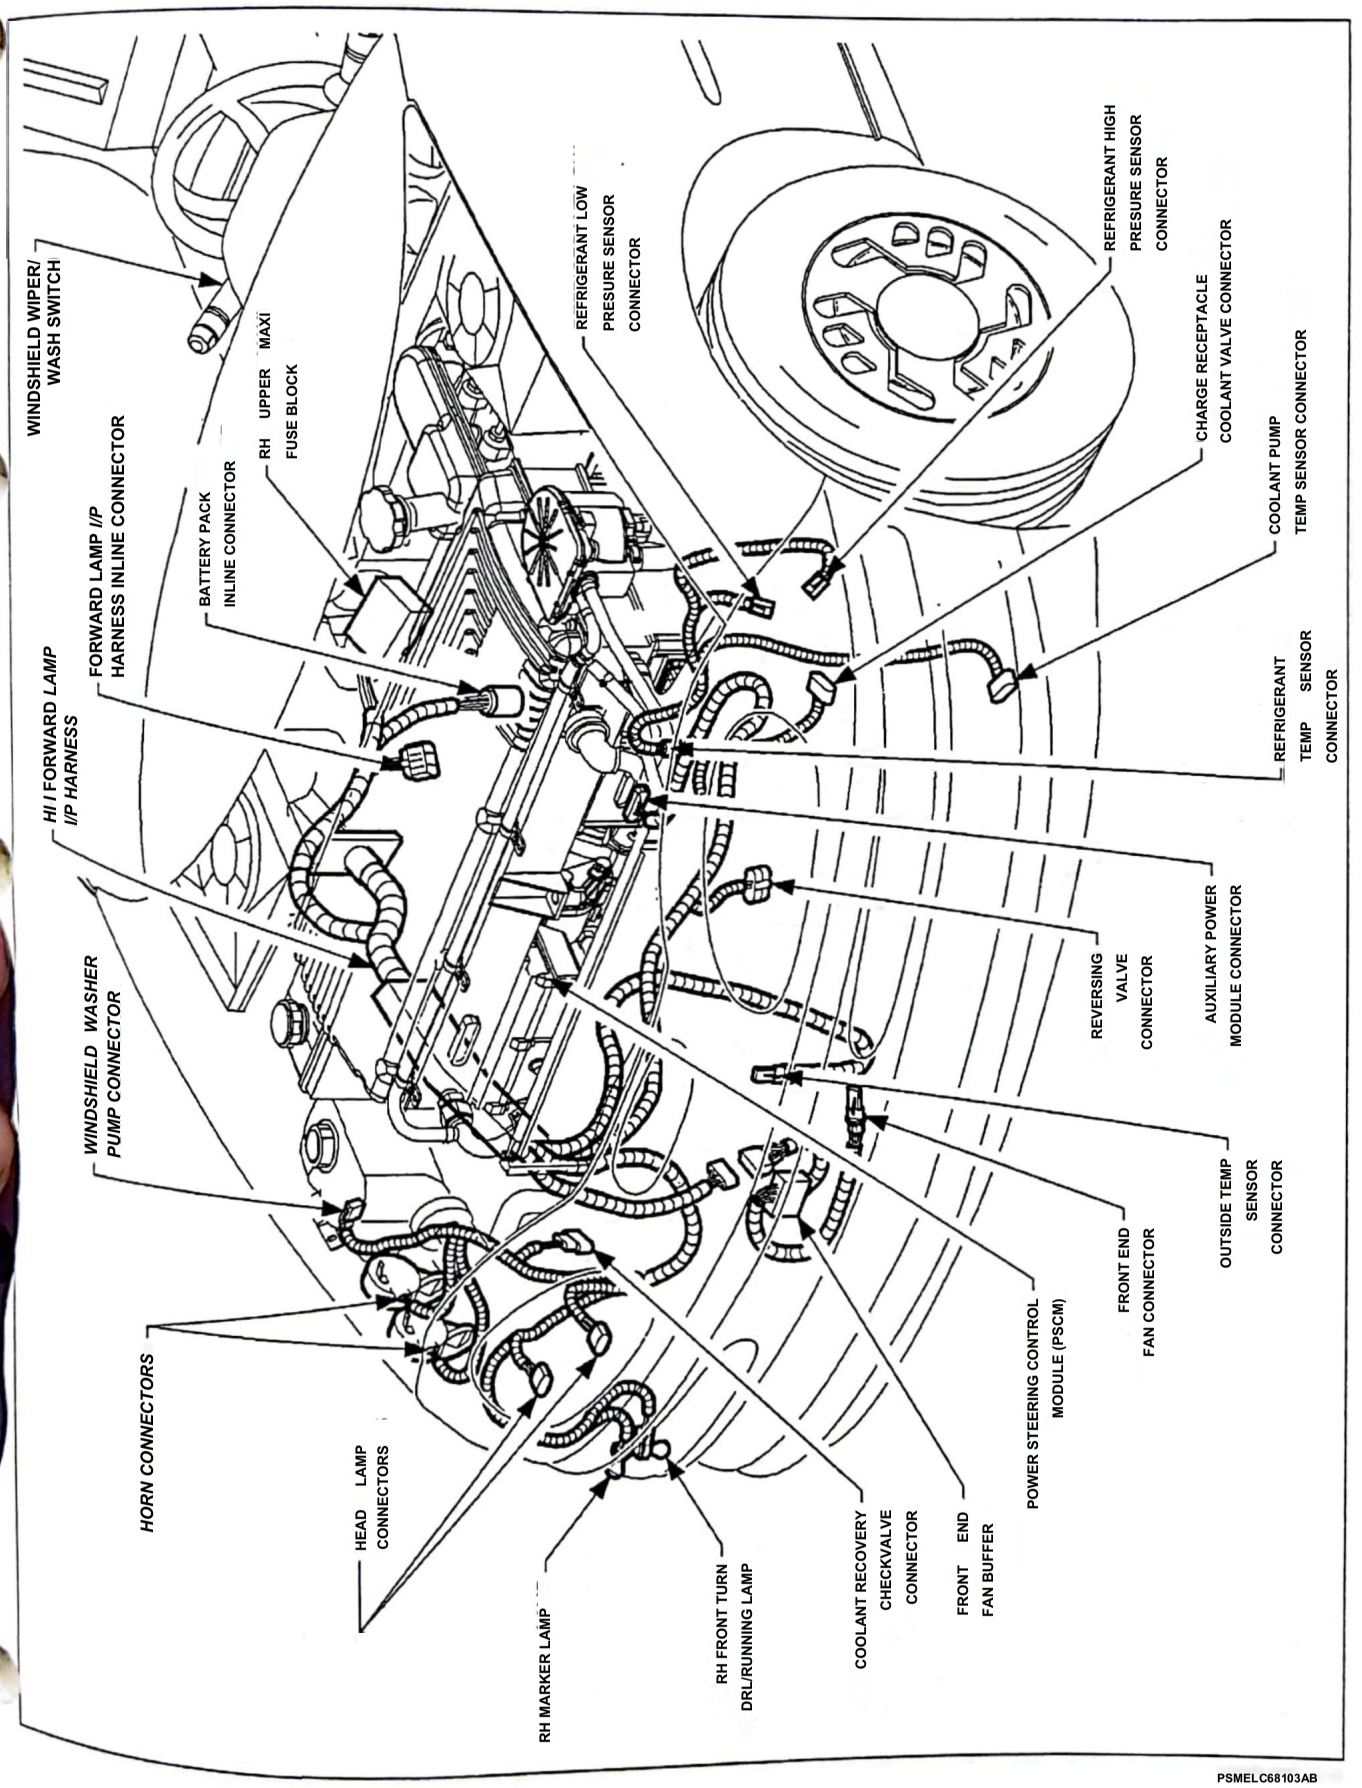
WINDSHIELD WIPER/ WASH SWITCH
FORWARD LAMP I/P HARNESS INLINE CONNECTOR
HI I FORWARD LAMP I/P HARNESS
WINDSHIELD WASHER PUMP CONNECTOR
HORN CONNECTORS
HEAD LAMP CONNECTORS
RH MARKER LAMP
RH FRONT TURN DRL/RUNNING LAMP
COOLANT RECOVERY CHECKVALVE CONNECTOR
FRONT END FAN BUFFER
POWER STEERING CONTROL MODULE (PSCM)
FRONT END FAN CONNECTOR
OUTSIDE TEMP SENSOR CONNECTOR
REVERSING VALVE CONNECTOR
AUXILIARY POWER MODULE CONNECTOR
REFRIGERANT TEMP SENSOR CONNECTOR
COOLANT PUMP TEMP SENSOR CONNECTOR
CHARGE RECEPTACLE COOLANT VALVE CONNECTOR
REFRIGERANT HIGH PRESURE SENSOR CONNECTOR
REFRIGERANT LOW PRESURE SENSOR CONNECTOR
BATTERY PACK INLINE CONNECTOR
RH UPPER MAXI FUSE BLOCK
PSMELC68103AB

CamScanner

CRUISE CONTROL

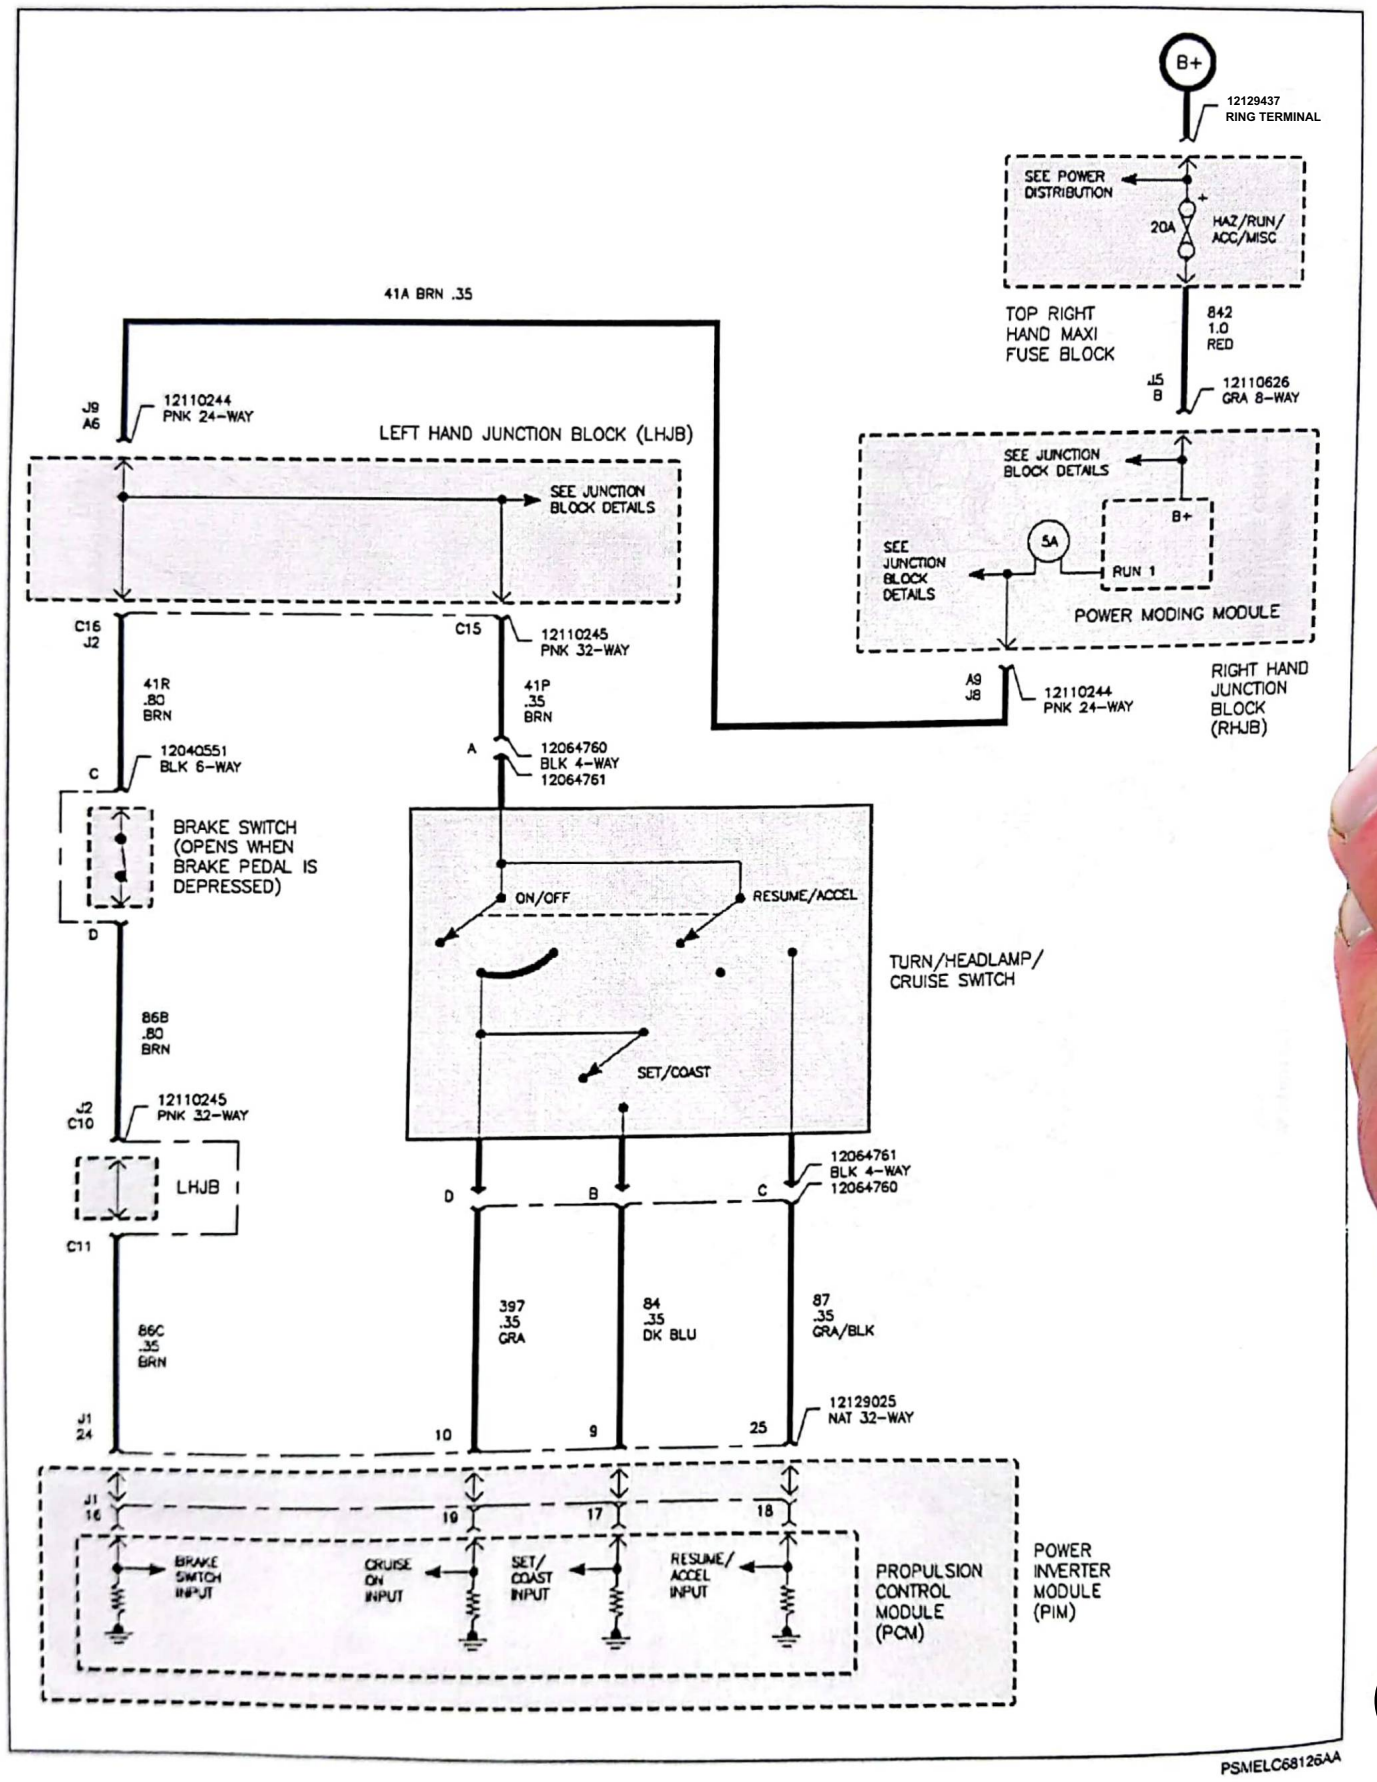

CamScanner

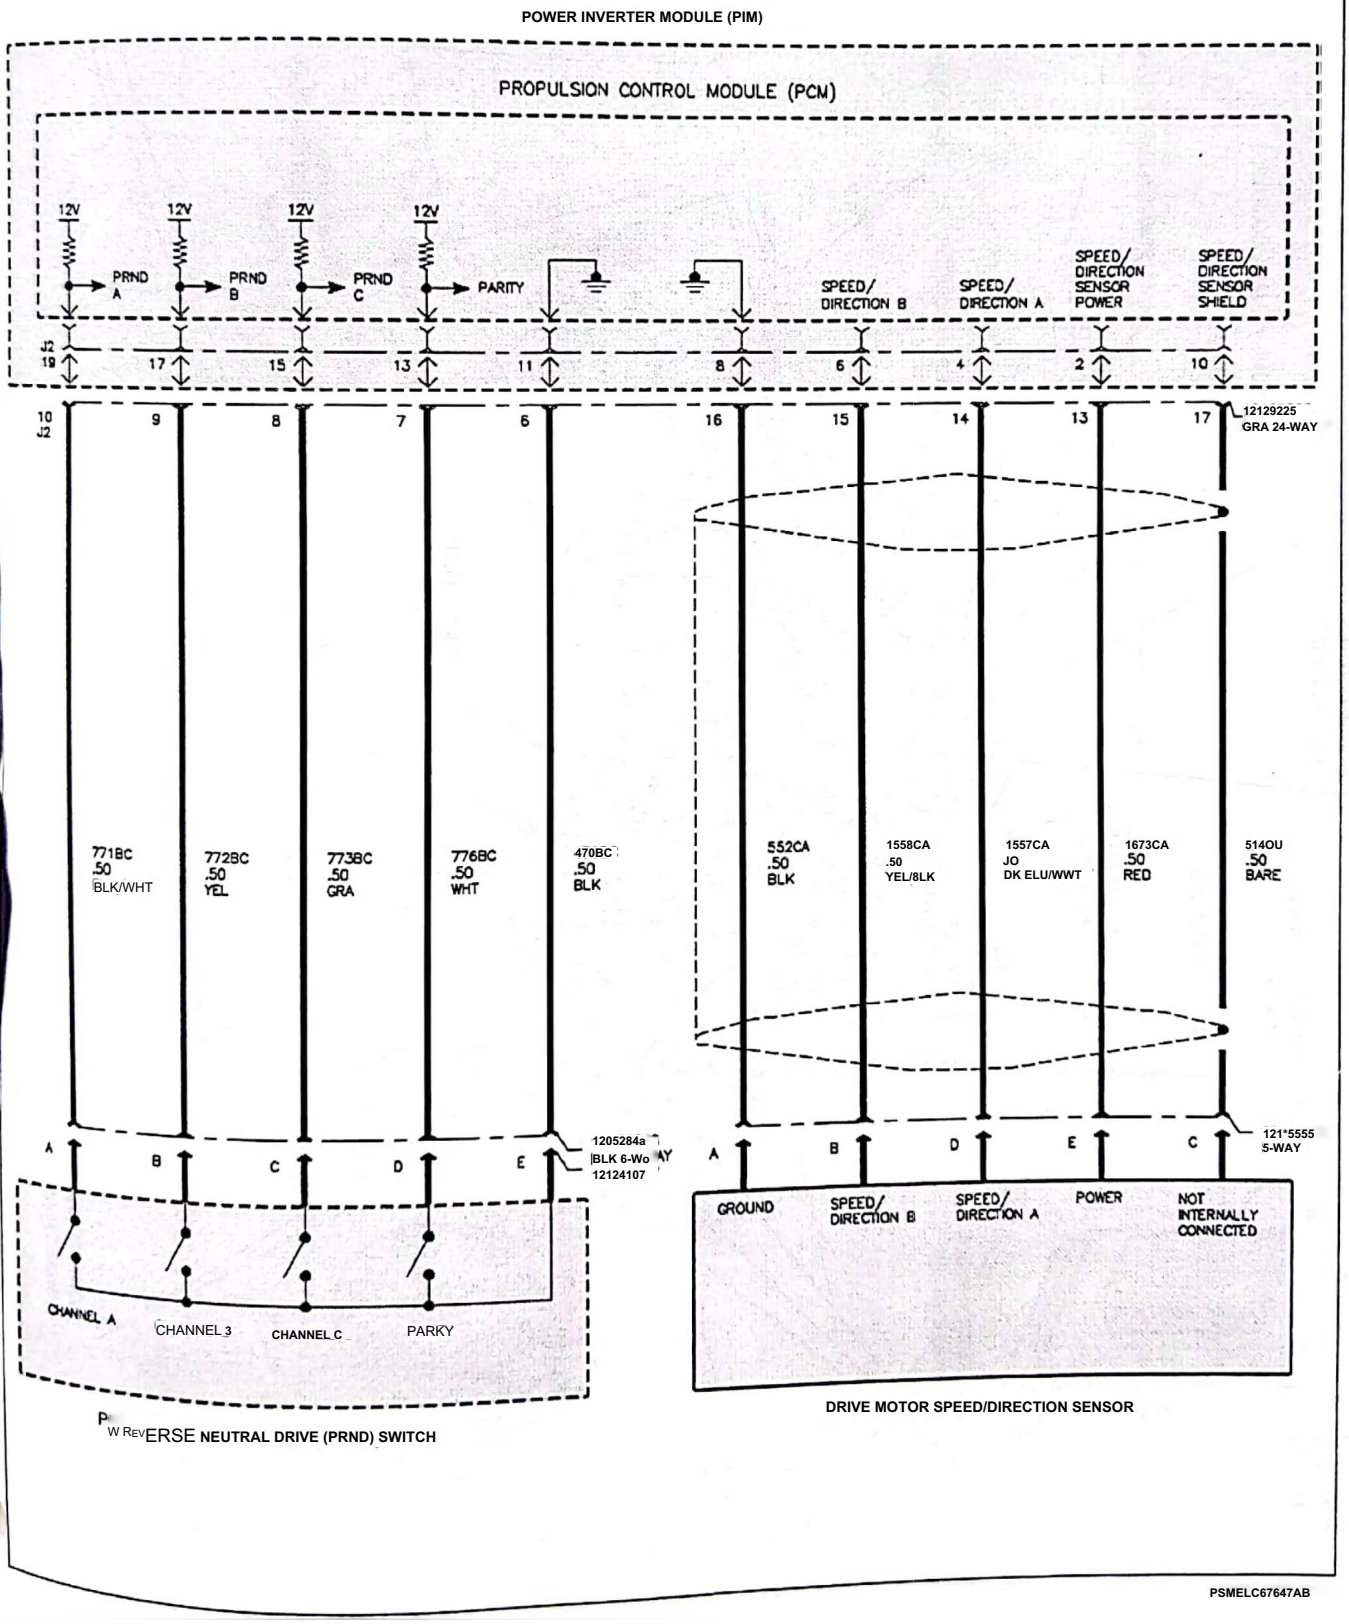
POWER INVERTER MODULE (PIM)
PROPULSION CONTROL MODULE (PCM)
12V
PRND A
PRND B
PRND C
PARITY
SPEED/ DIRECTION B
SPEED/ DIRECTION A
SPEED/ DIRECTION SENSOR POWER
SPEED/ DIRECTION SENSOR SHIELD
19
17
15
13
11
8
6
4
2
10
10
9
8
7
6
16
15
14
13
17
12129225
GRA 24-WAY
771BC .50 BLK/WHT
772BC .50 YEL
773BC .50 GRA
776BC .50 WHT
470BC .50 BLK
552CA .50 BLK
1558CA .50 YEL/8LK
1557CA JO DK ELU/WWT
1673CA .50 RED
514OU .50 BARE
1205284a
BLK 6-Wo
12124107
121*5555
5-WAY
A
B
C
D
E
A
B
D
E
C
CHANNEL A
CHANNEL 3
CHANNEL C
PARKY
GROUND
SPEED/ DIRECTION B
SPEED/ DIRECTION A
POWER
NOT INTERNALLY CONNECTED
W REVERSE NEUTRAL DRIVE (PRND) SWITCH
DRIVE MOTOR SPEED/DIRECTION SENSOR
PSMELC67647AB

CamScanner

CRUISE CONTROL COMPONENT LOCATION VIEW

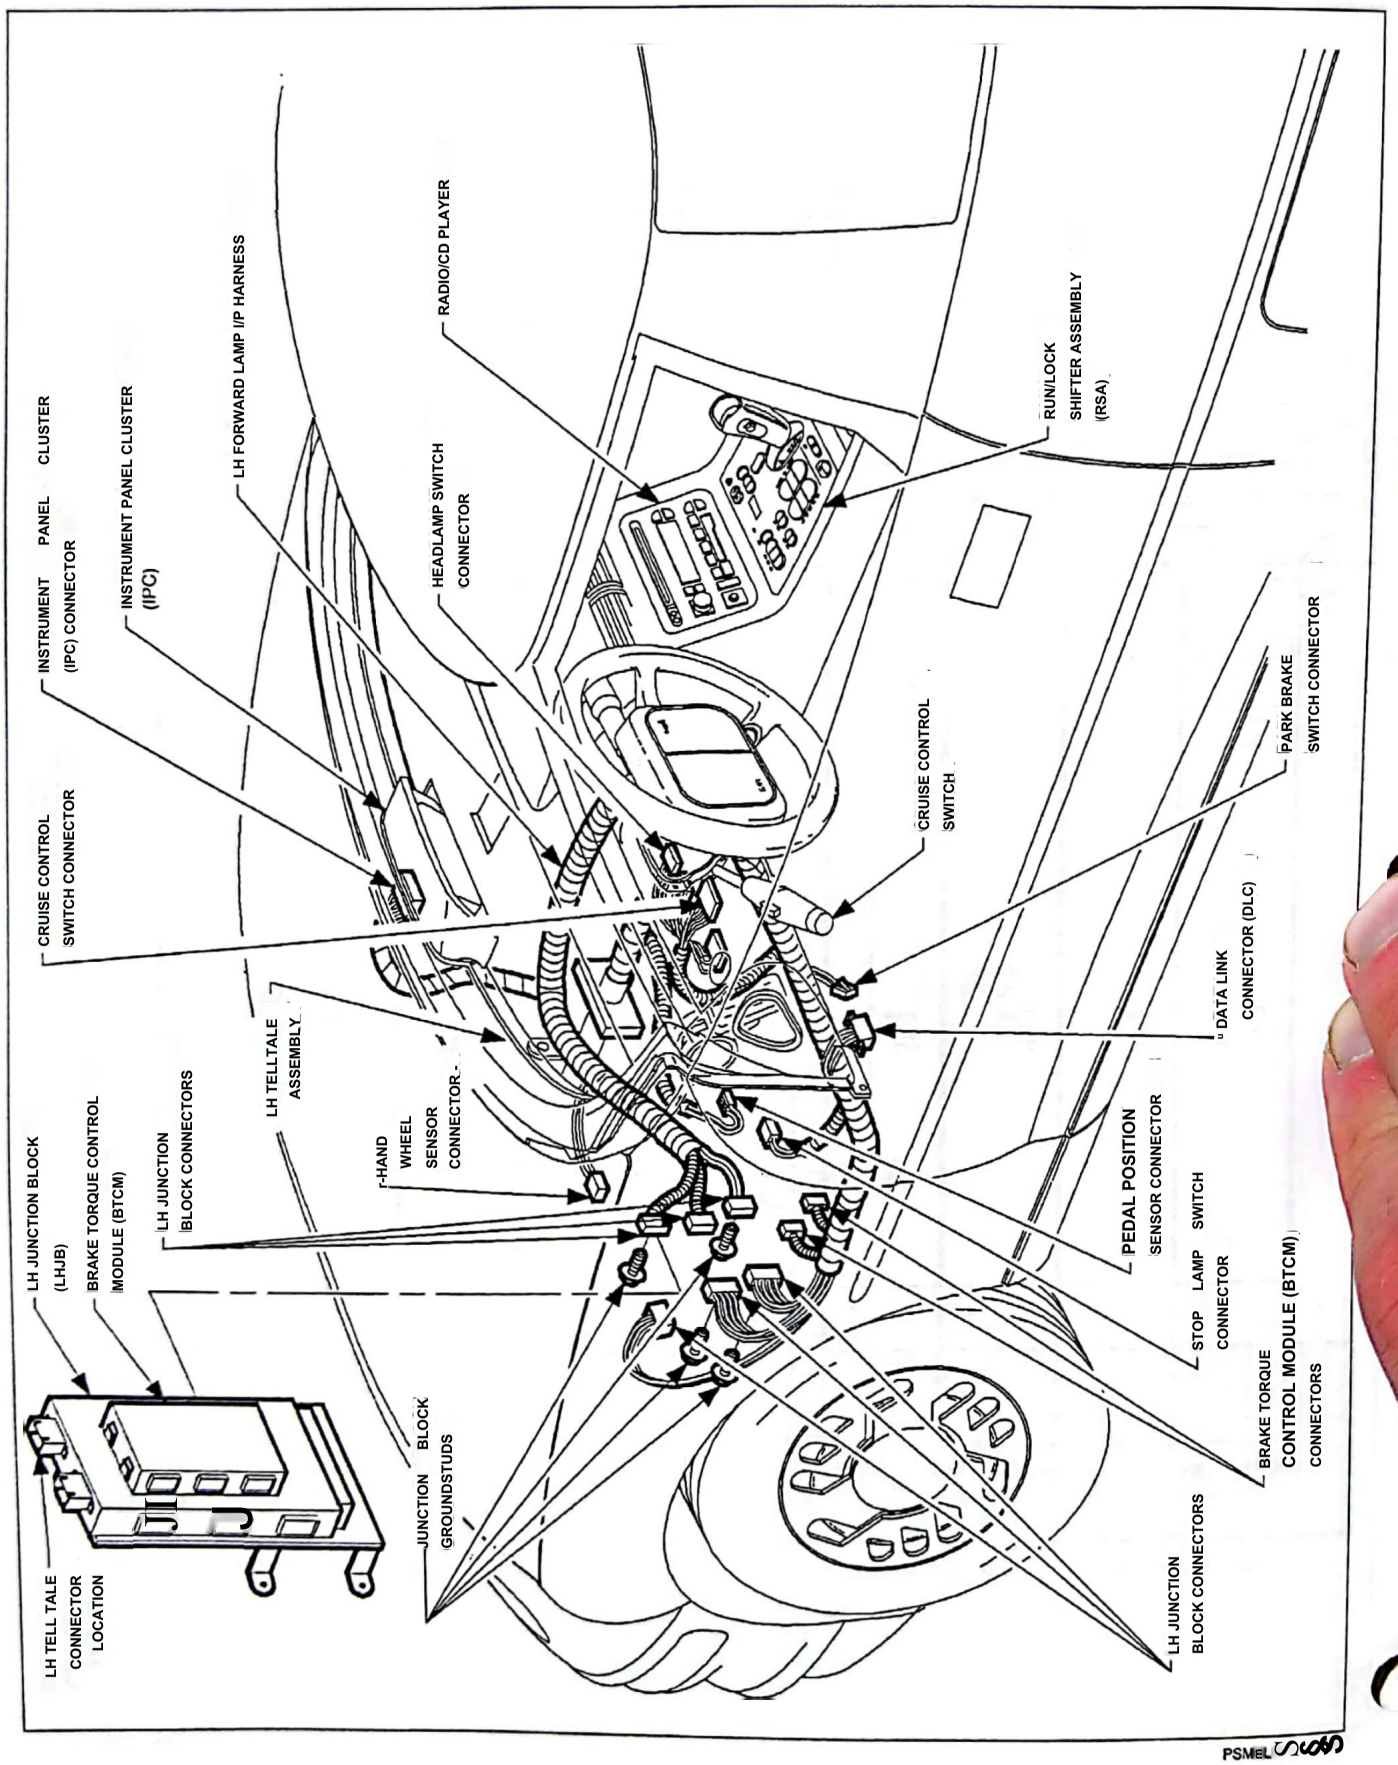

NOTES

R

CamScanner

DATA LINK CONNECTOR

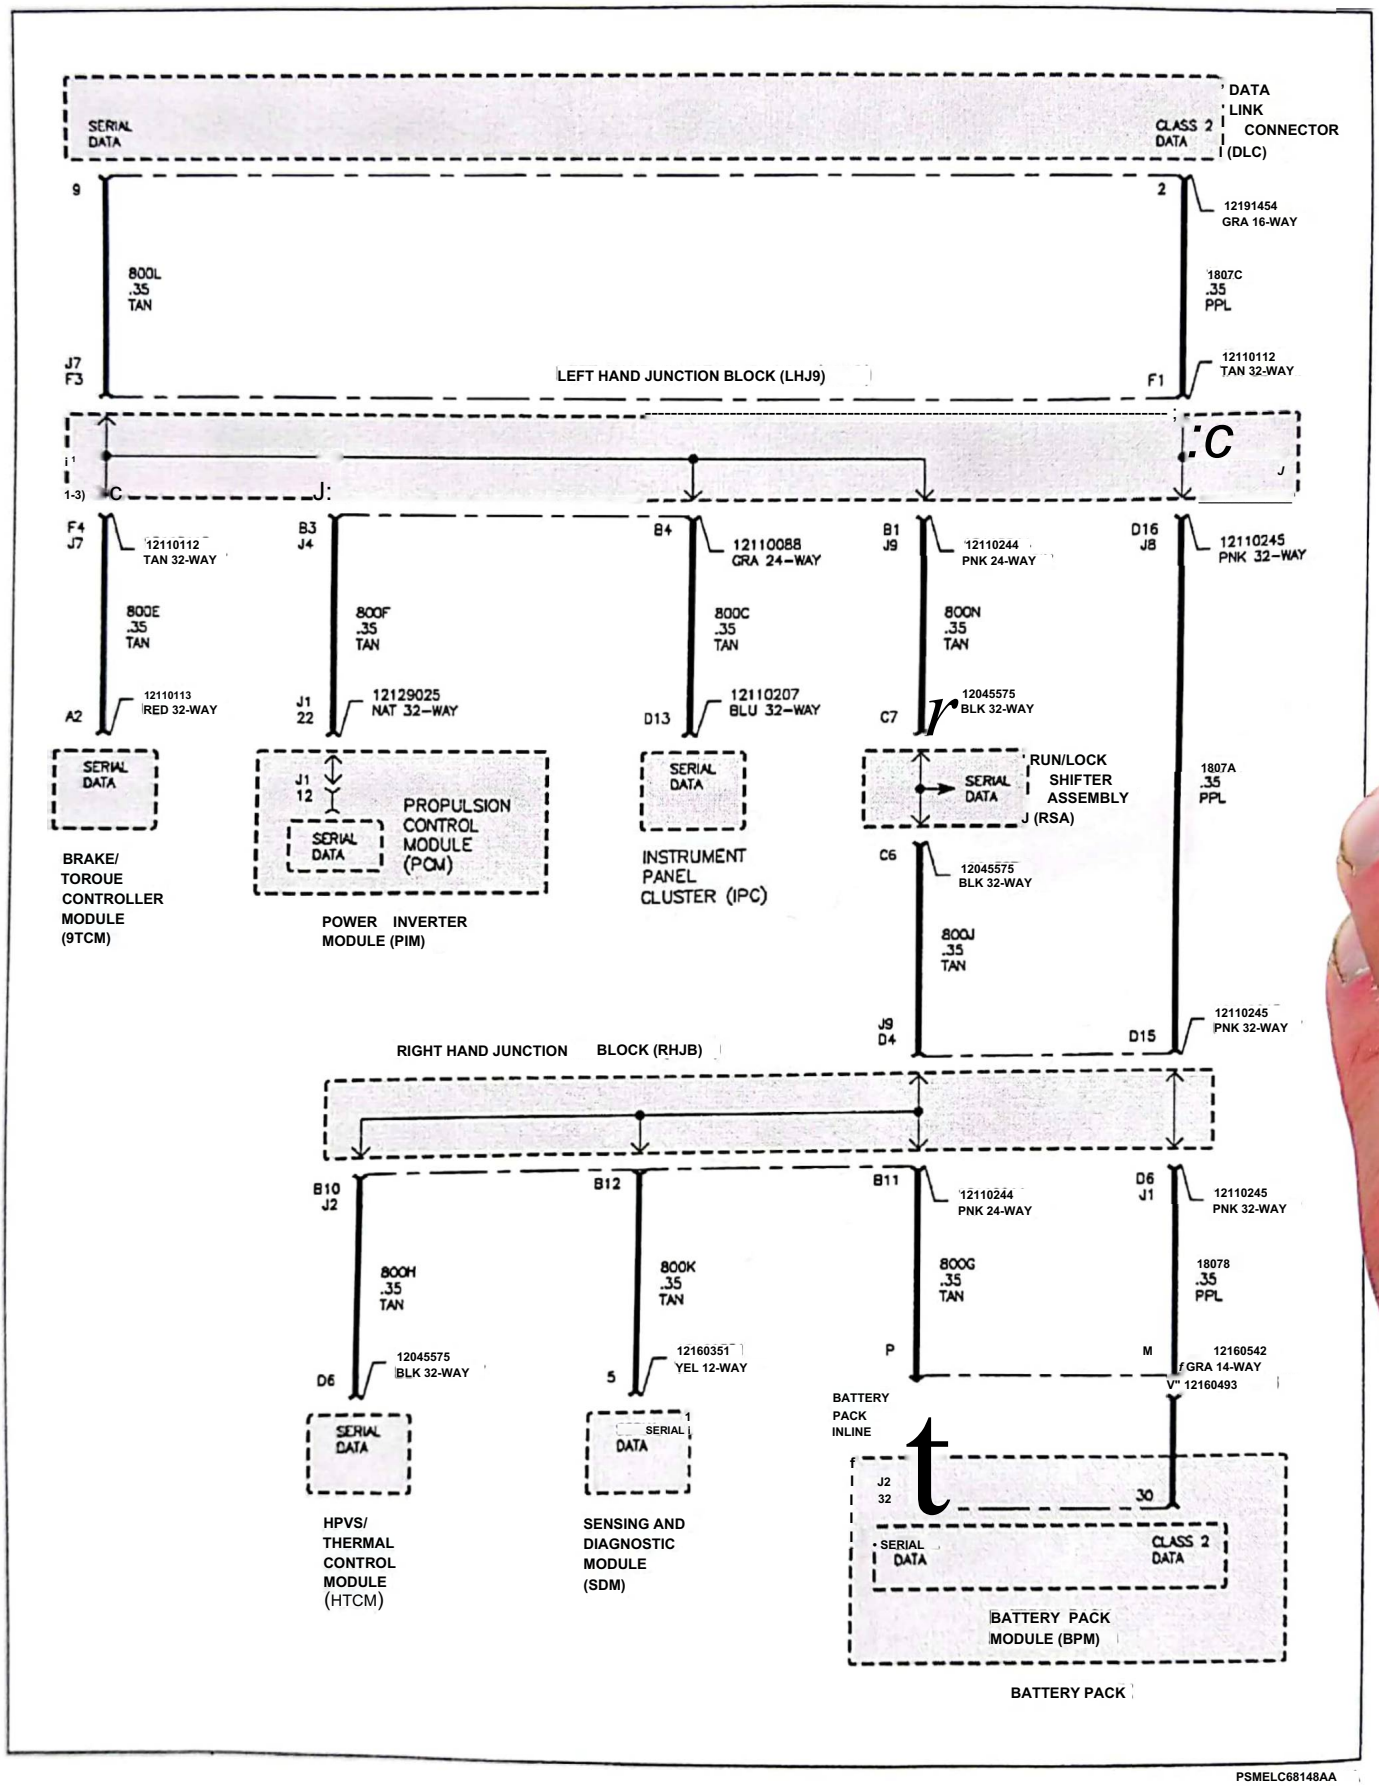

CamScanner

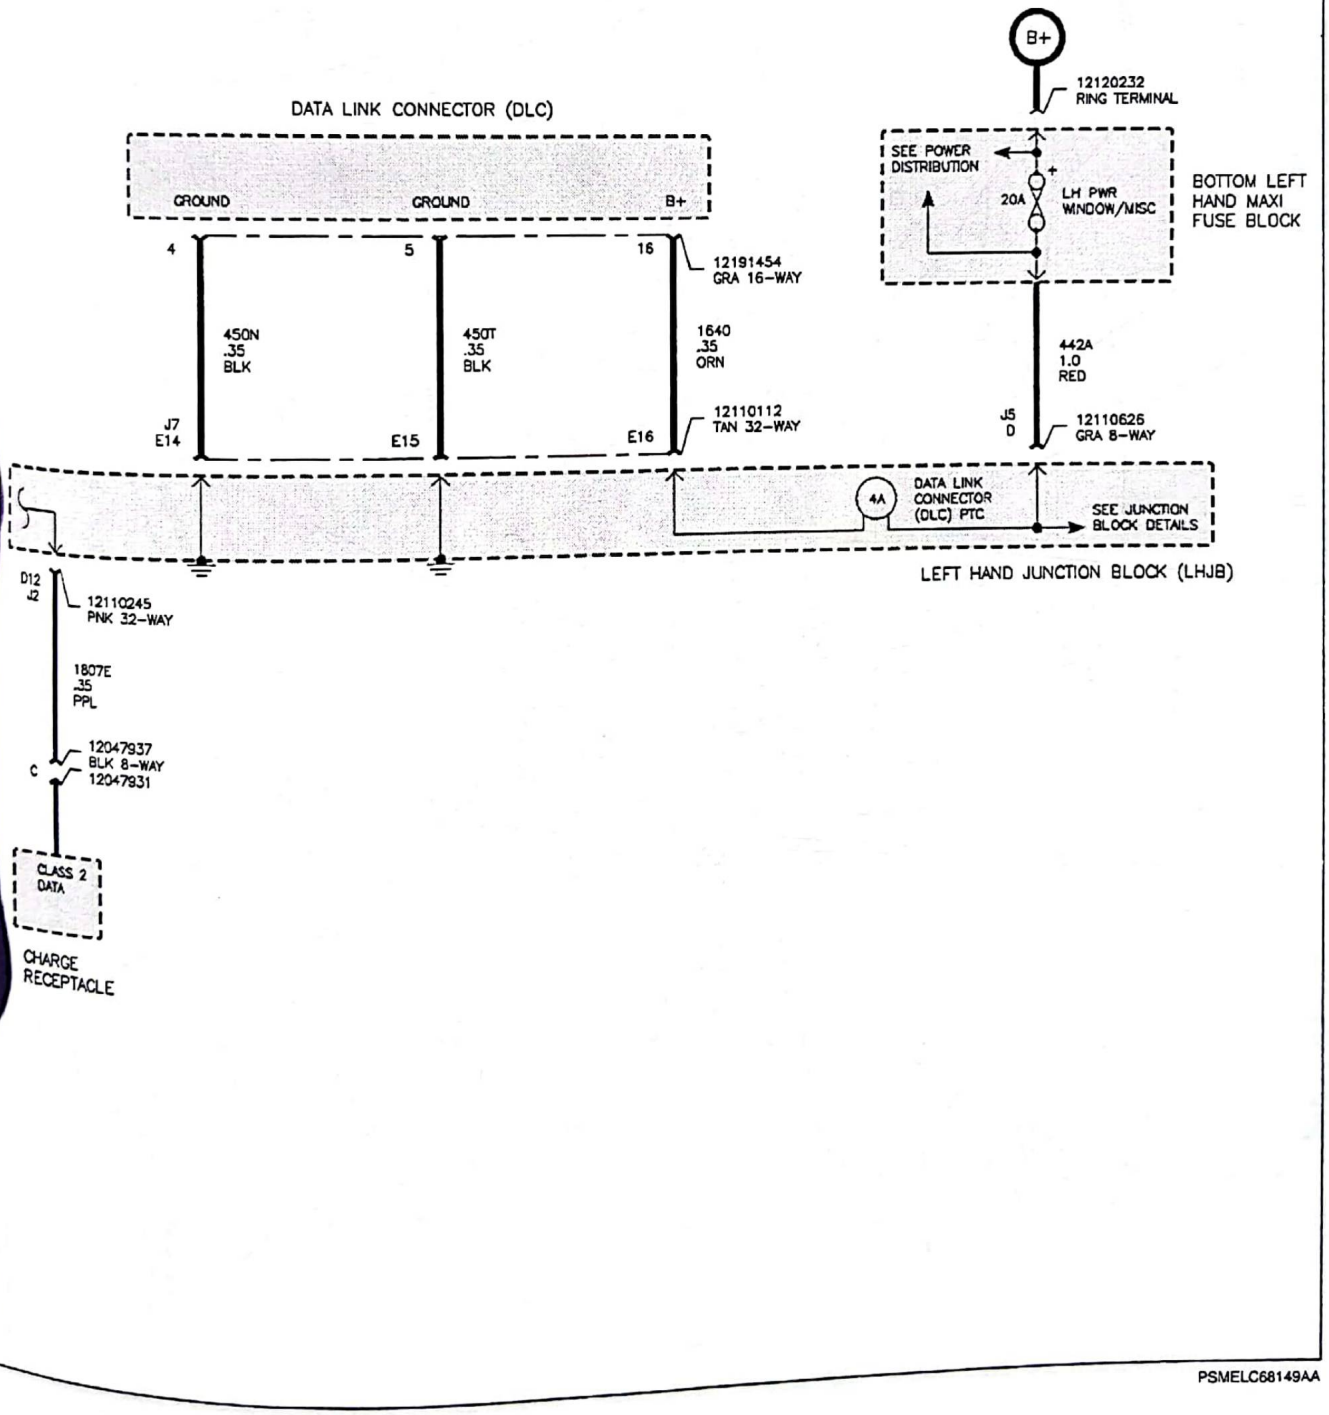
B+
12120232
RING TERMINAL
DATA LINK CONNECTOR (DLC)
SEE POWER
DISTRIBUTION
20A
LH PWR
WINDOW/MISC
BOTTOM LEFT
HAND MAXI
FUSE BLOCK
GROUND
GROUND
B+
4
5
16
12191454
GRA 16-WAY
450N
.35
BLK
450T
.35
BLK
1640
.35
ORN
442A
1.0
RED
J7
E14
E15
E16
12110112
TAN 32-WAY
J5
D
12110626
GRA 8-WAY
4A
DATA LINK
CONNECTOR
(DLC) PTC
SEE JUNCTION
BLOCK DETAILS
LEFT HAND JUNCTION BLOCK (LHJB)
D12
J2
12110245
PNK 32-WAY
1807E
.35
PPL
C
12047937
BLK 8-WAY
12047931
CLASS 2
DATA
CHARGE
RECEPTACLE
PSMELC68149AA

CamScanner

DATA LINK CONNECTOR COMPONENT LOCATION VIEW

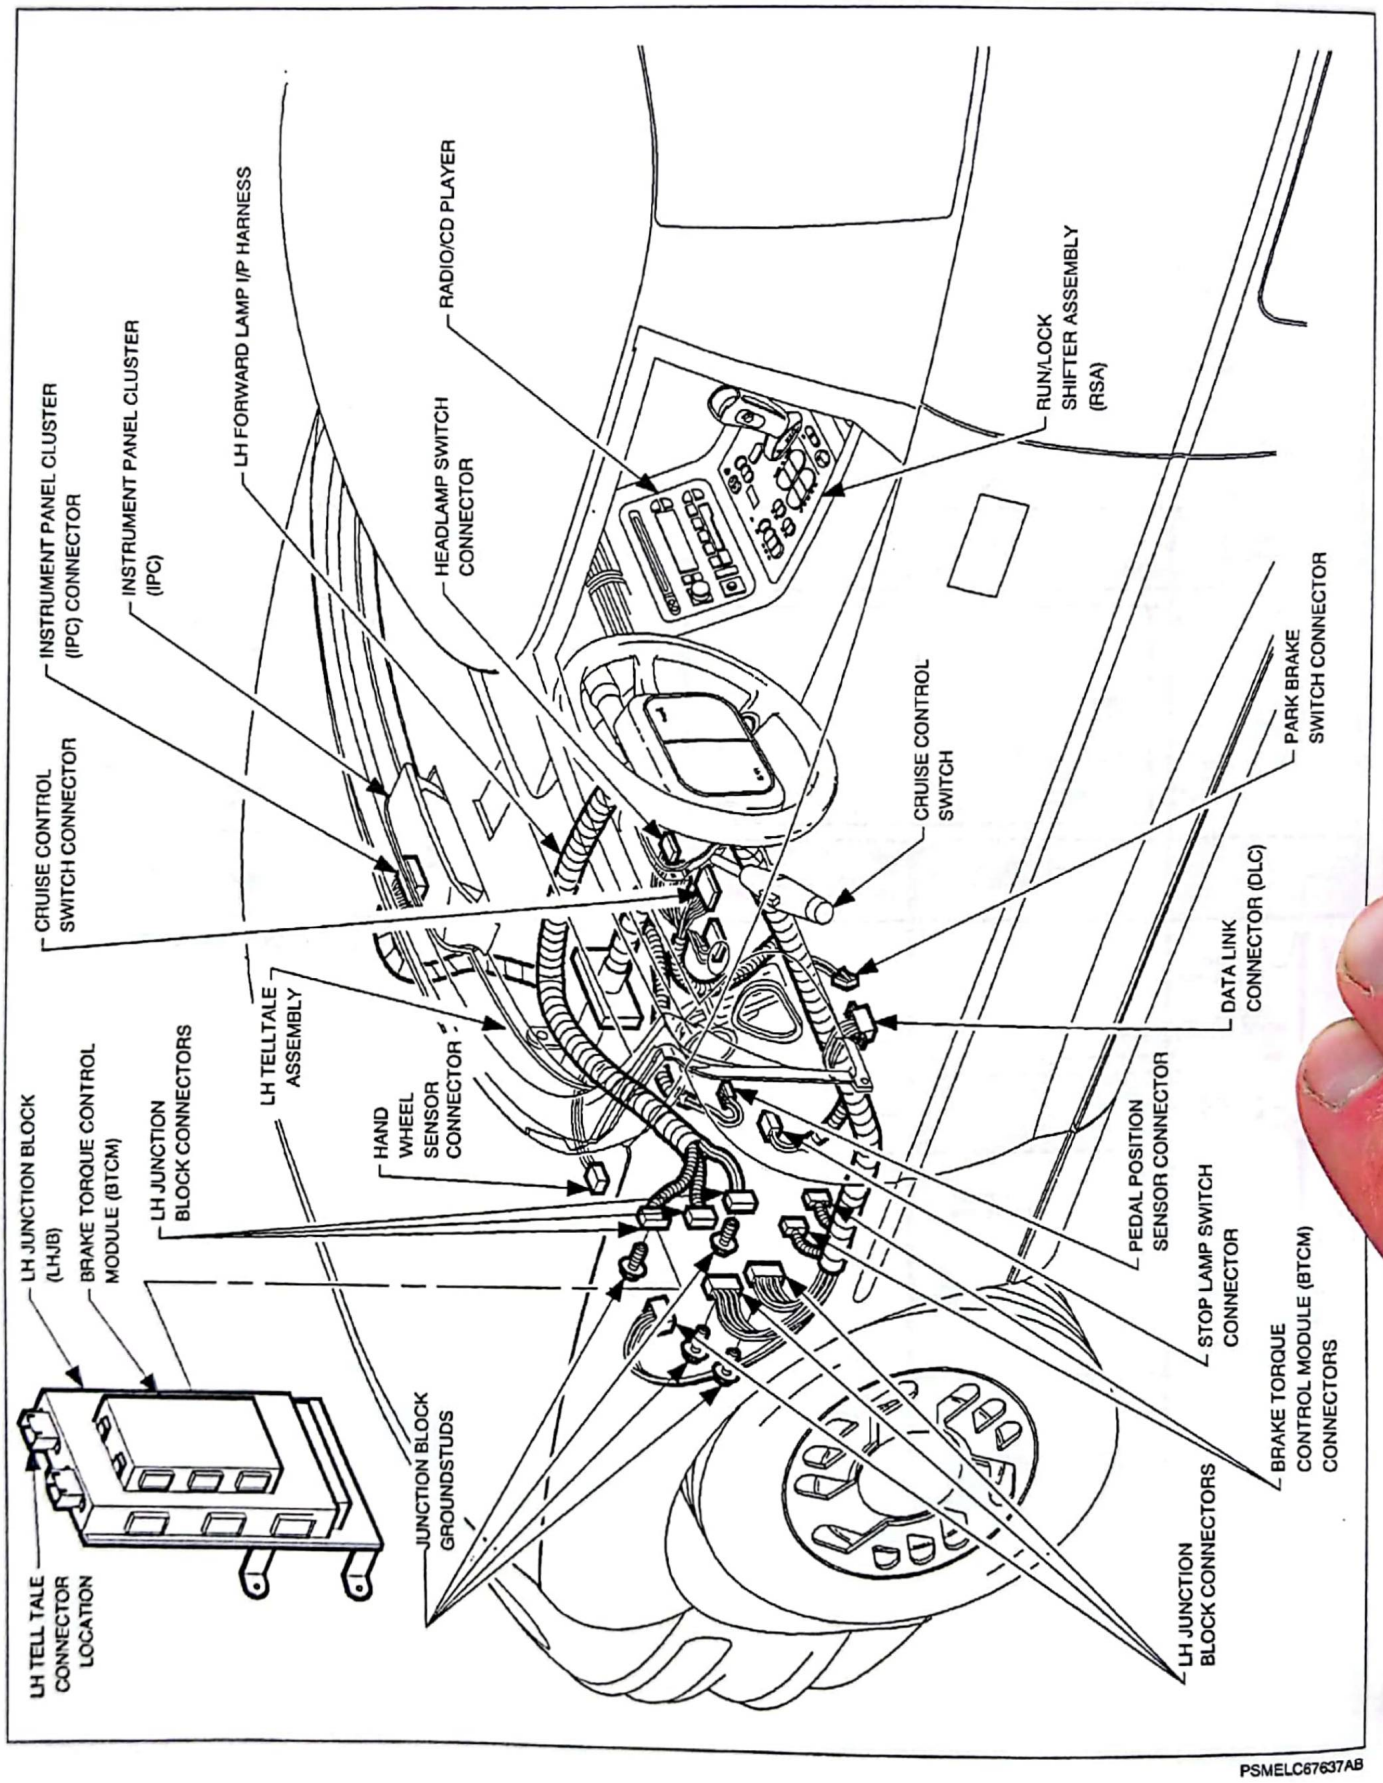

NOTES

CamScanner

DIM ILLUMINATION LAMPS

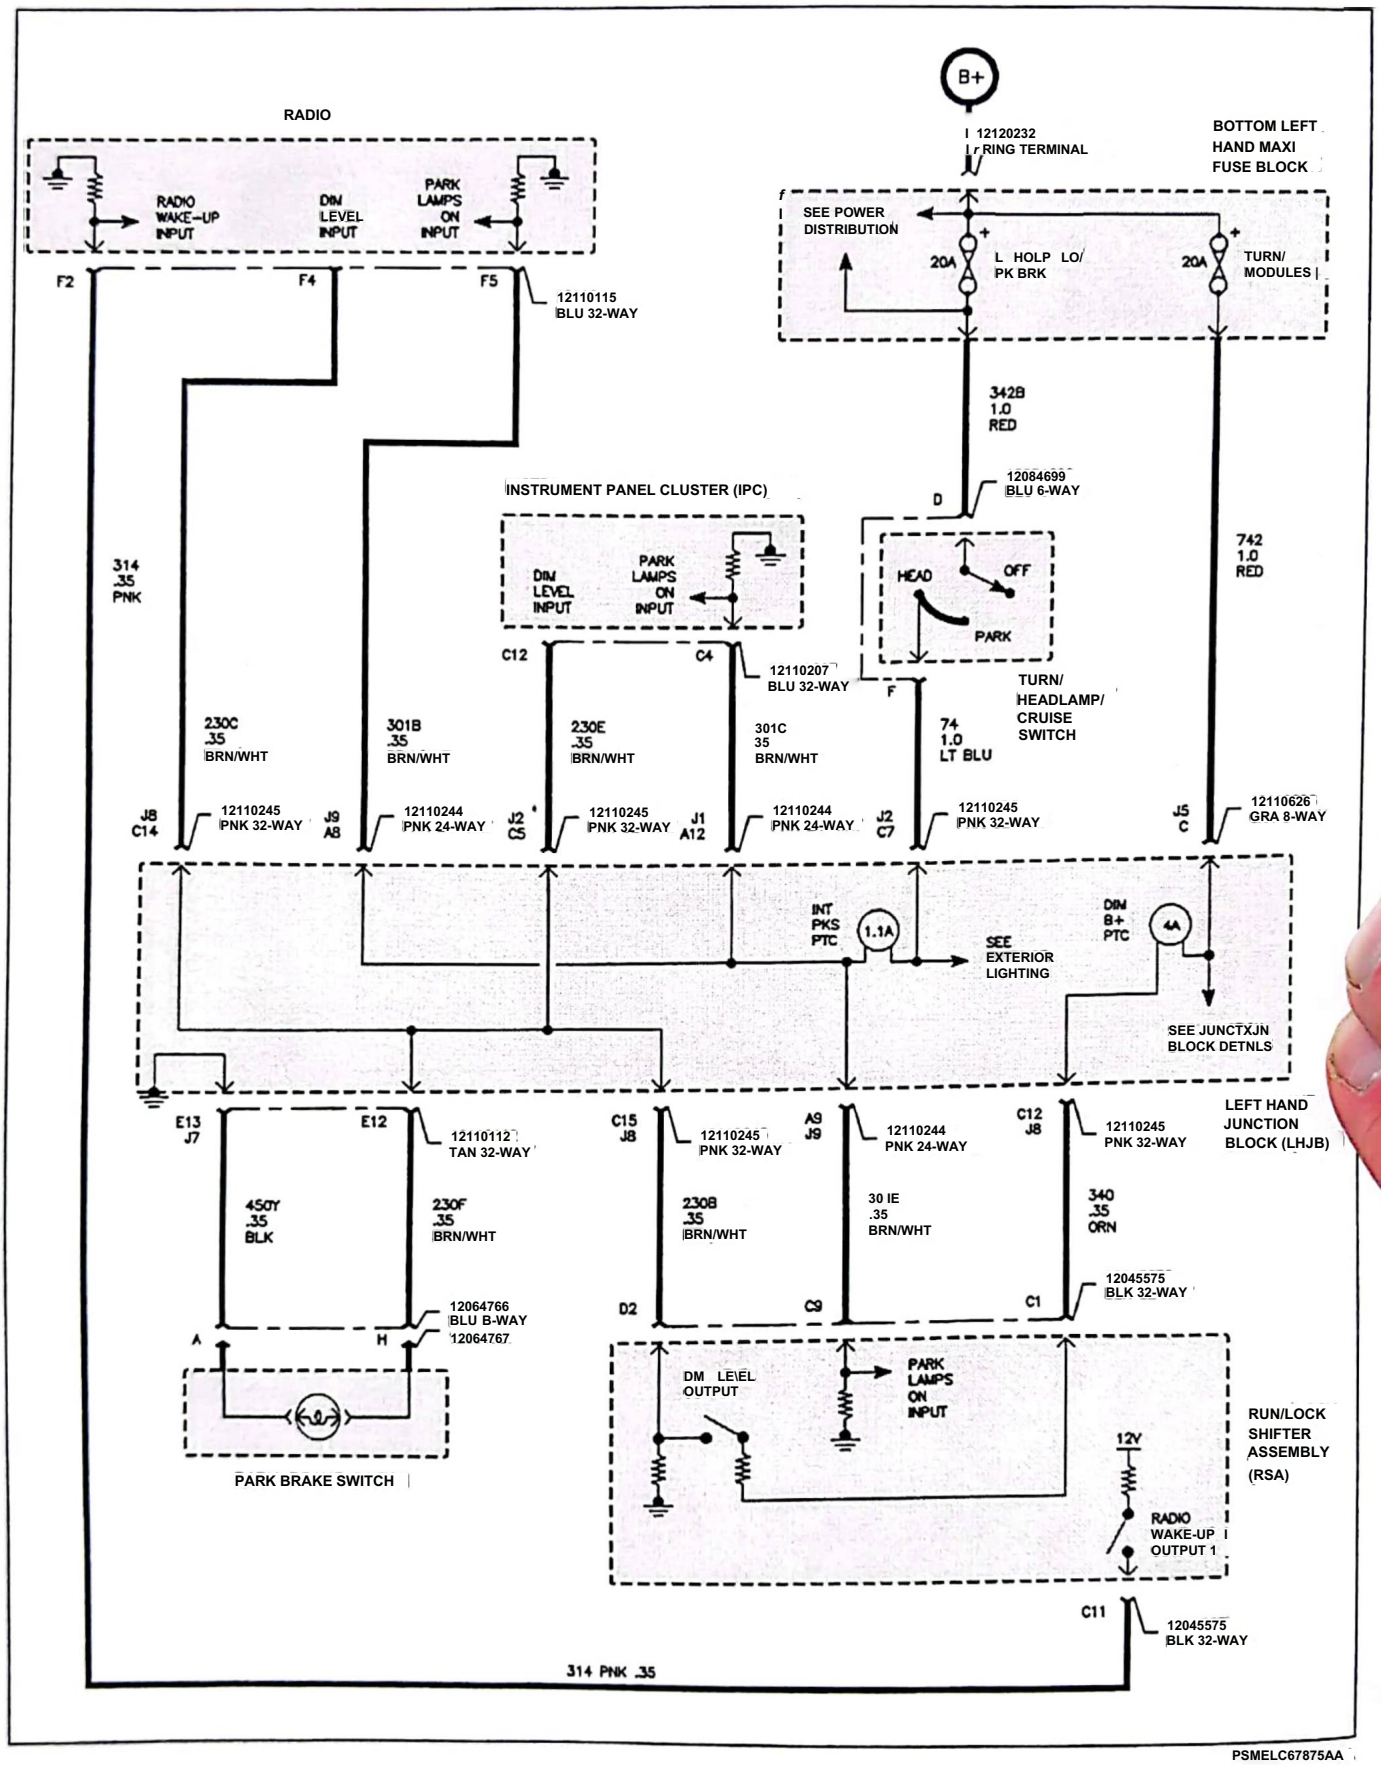

CamScanner

DIM ILLUMINATION LAMPS COMPONENT LOCATION

VIEW

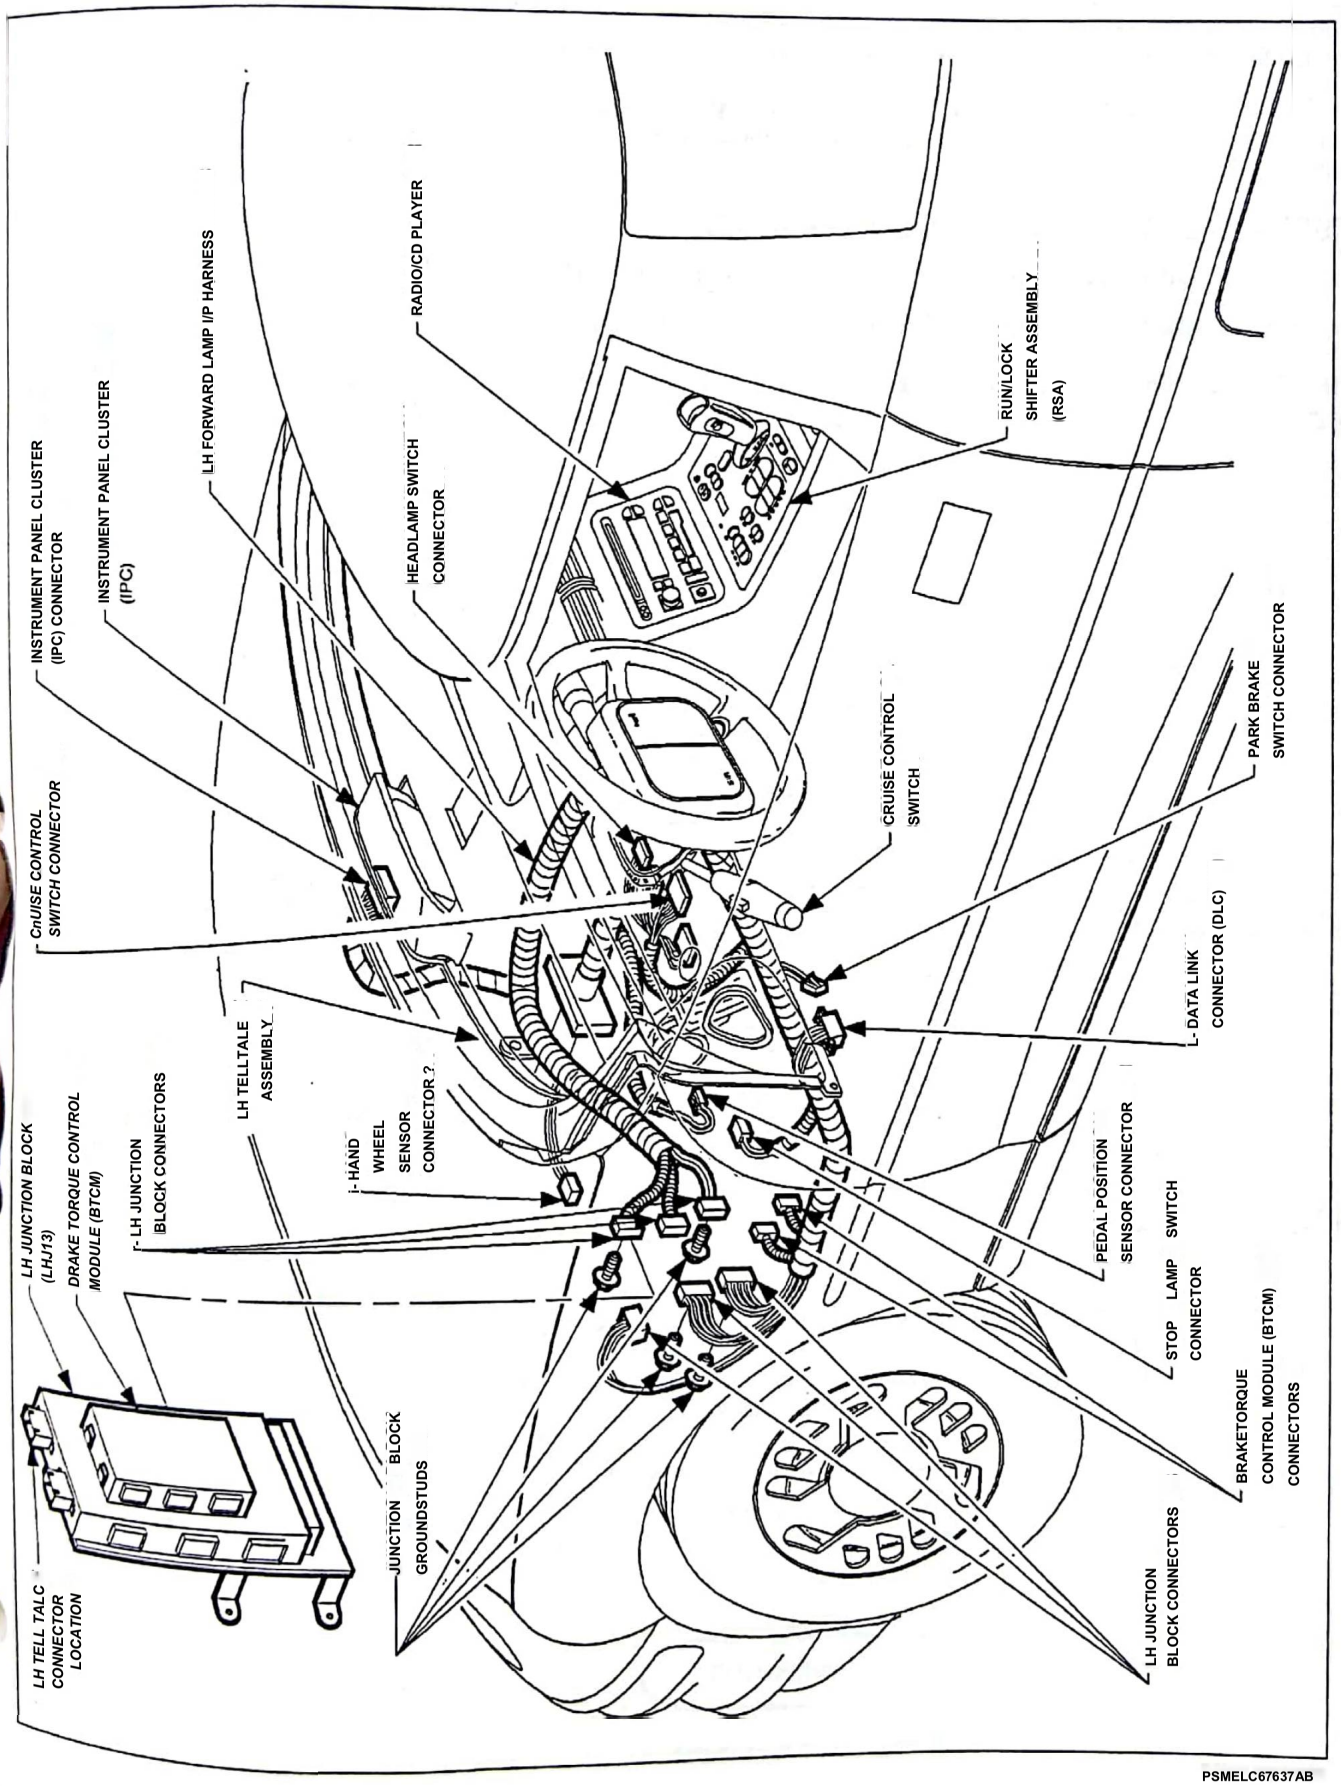
LH TELL TALC CONNECTOR LOCATION
LH JUNCTION BLOCK (LHJ13)
DRAKE TORQUE CONTROL MODULE (BTCM)
LH JUNCTION BLOCK CONNECTORS
LH TELLTALE ASSEMBLY
i- HAND WHEEL SENSOR CONNECTOR ?
JUNCTION BLOCK GROUNDSTUDS
CnUISE CONTROL SWITCH CONNECTOR
INSTRUMENT PANEL CLUSTER (IPC) CONNECTOR
INSTRUMENT PANEL CLUSTER (IPC)
LH FORWARD LAMP I/P HARNESS
HEADLAMP SWITCH CONNECTOR
RADIO/CD PLAYER
RUN/LOCK SHIFTER ASSEMBLY (RSA)
CRUISE CONTROL SWITCH
PARK BRAKE SWITCH CONNECTOR
L- DATA LINK CONNECTOR (DLC)
PEDAL POSITION SENSOR CONNECTOR
STOP LAMP SWITCH CONNECTOR
BRAKETORQUE CONTROL MODULE (BTCM) CONNECTORS
LH JUNCTION BLOCK CONNECTORS
PSMELC67637AB

DISPLAYS DIMMING

Display backlighting is controlled by the run/lock shifter assembly (RSA). The RSA, instrument panel cluster (IPC), and radio receive voltage over circuit 301 when the park lamps are turned On. When the parklamps are On, the RSA controls the voltage on circuit 230 to control dimming of the radio, IPC, and park brake switch. There is an isolated internal feed for RSA backlighting, fed by circuit 301, but not affected by grounds on circuit 230.

The IPC creates little load on circuit 230 as it uses this input as a reference only, and actually powers the backlighting from another power source. However, the radio and park brake switch apply the voltage directly to the backlighting bulbs, drawing more current.

DISPLAYS DIMMING TROUBLE TREE INDEX

- Chart 1 - Displays Dark With Parklamps On (VF Dimming and Backlighting Inoperative)
- Chart 2 - Vacuum Fluorescent (VF) On Full, Incandescents Out All the Time

IMPORTANT: For displays staying in dim mode with light switch Off (park lamps will be On) refer to Exterior Lamp Diagnosis.

CamScanner

DISPLAYS DARK WITH PARKLAMPS ON (VF DIMMING AND BACKLIGHTING INOPERATIVE)

CHART 1

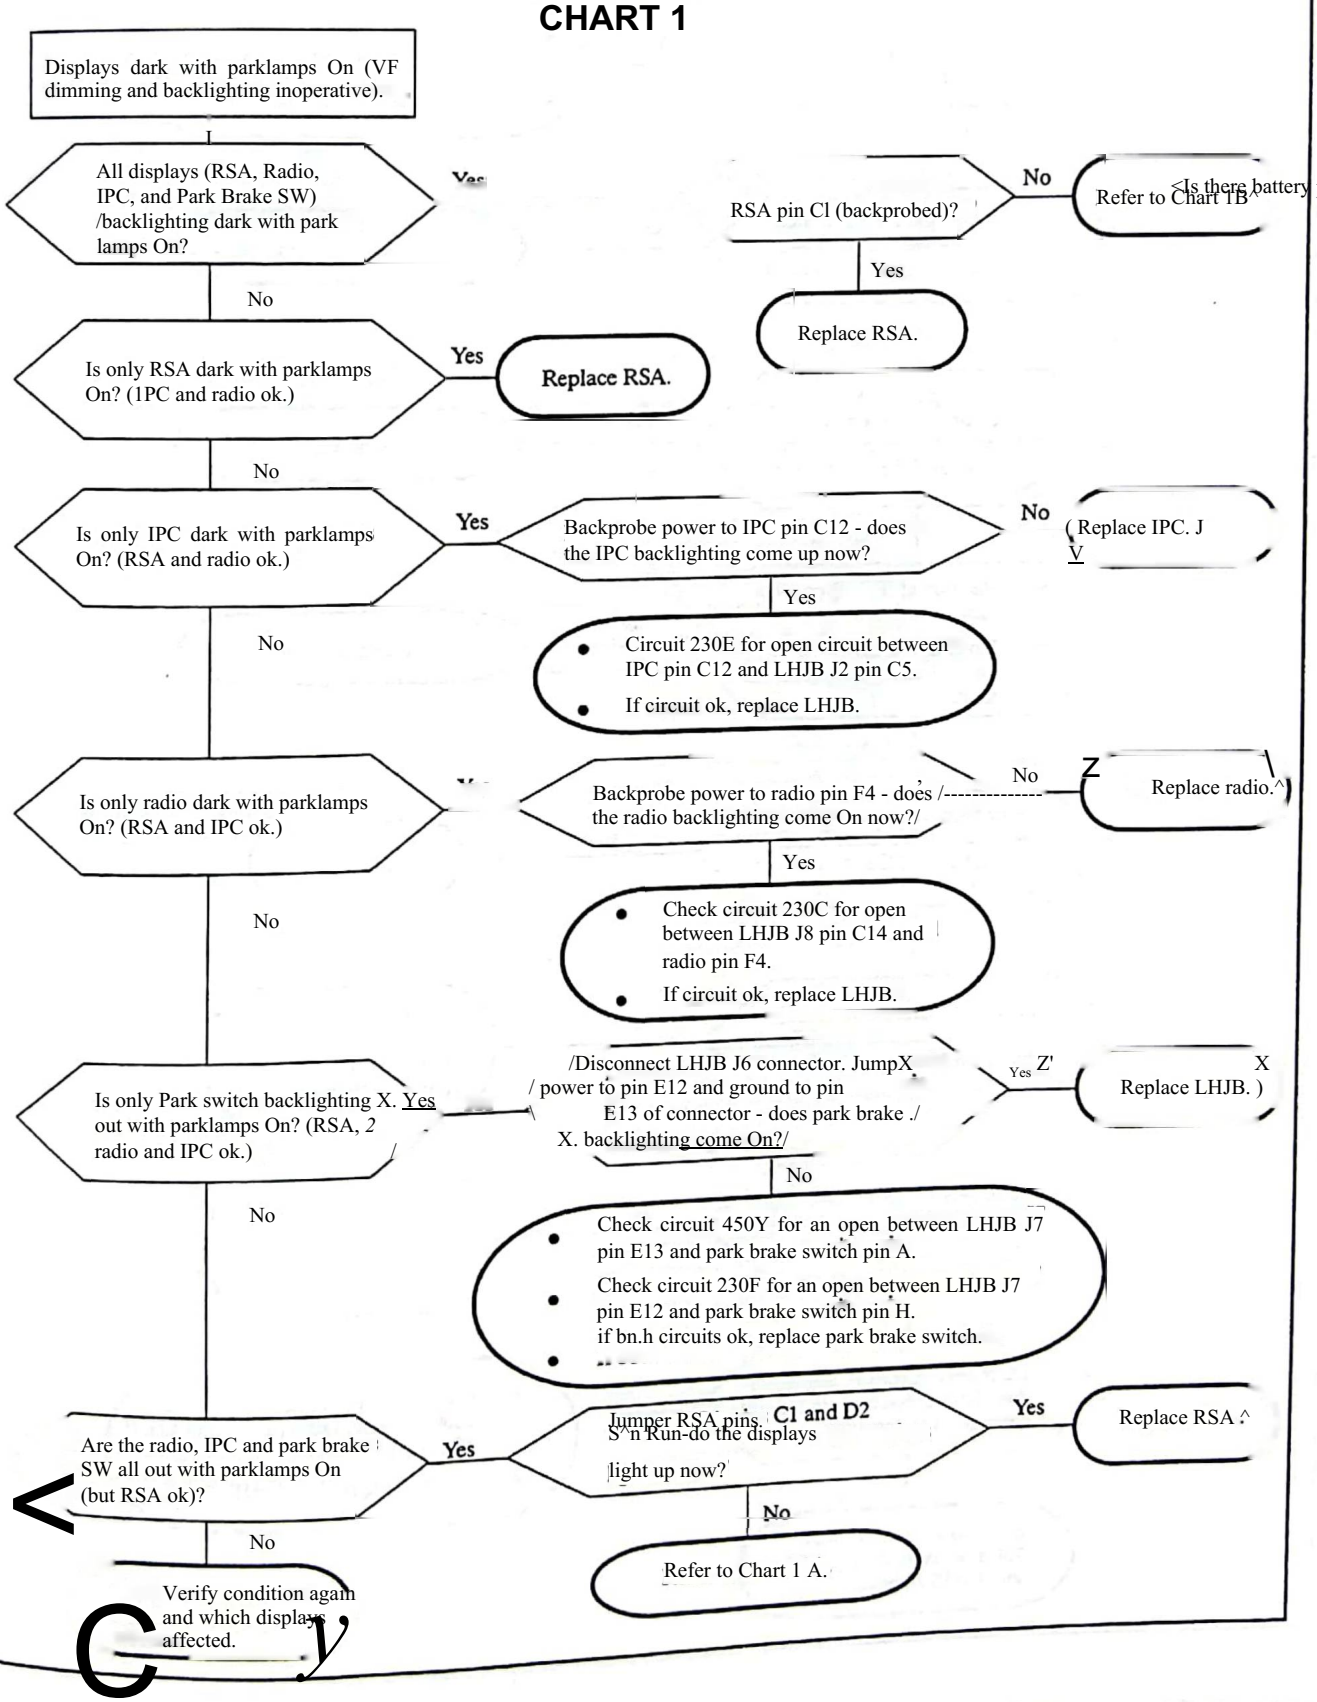
Displays dark with parklamps On (VF dimming and backlighting inoperative).
All displays (RSA, Radio, IPC, and Park Brake SW) /backlighting dark with park lamps On?
Yes
No
RSA pin Cl (backprobed)?
No
Refer to Chart 1B
<Is there battery power at
Yes
Replace RSA.
Is only RSA dark with parklamps On? (1PC and radio ok.)
Yes
Replace RSA.
No
Is only IPC dark with parklamps On? (RSA and radio ok.)
Yes
Backprobe power to IPC pin C12 - does the IPC backlighting come up now?
No
(Replace IPC. J
V
Yes
Circuit 230E for open circuit between IPC pin C12 and LHJB J2 pin C5.
If circuit ok, replace LHJB.
No
Is only radio dark with parklamps On? (RSA and IPC ok.)
Backprobe power to radio pin F4 - does /
the radio backlighting come On now?/
No
Z
Replace radio.^)
Yes
Check circuit 230C for open between LHJB J8 pin C14 and radio pin F4.
If circuit ok, replace LHJB.
No
Is only Park switch backlighting X. Yes out with parklamps On? (RSA, 2 radio and IPC ok.)
/Disconnect LHJB J6 connector. JumpX
/ power to pin E12 and ground to pin
E13 of connector - does park brake ./
X. backlighting come On?/
Yes Z'
X
Replace LHJB.)
No
Check circuit 450Y for an open between LHJB J7 pin E13 and park brake switch pin A.
Check circuit 230F for an open between LHJB J7 pin E12 and park brake switch pin H.
if bn.h circuits ok, replace park brake switch.
No
Are the radio, IPC and park brake SW all out with parklamps On (but RSA ok)?
Yes
Jumper RSA pins C1 and D2
S^n Run-do the displays
light up now?
Yes
Replace RSA ^
No
Refer to Chart 1 A.
No
Verify condition again and which displays affected.

CamScanner

CHART 1A

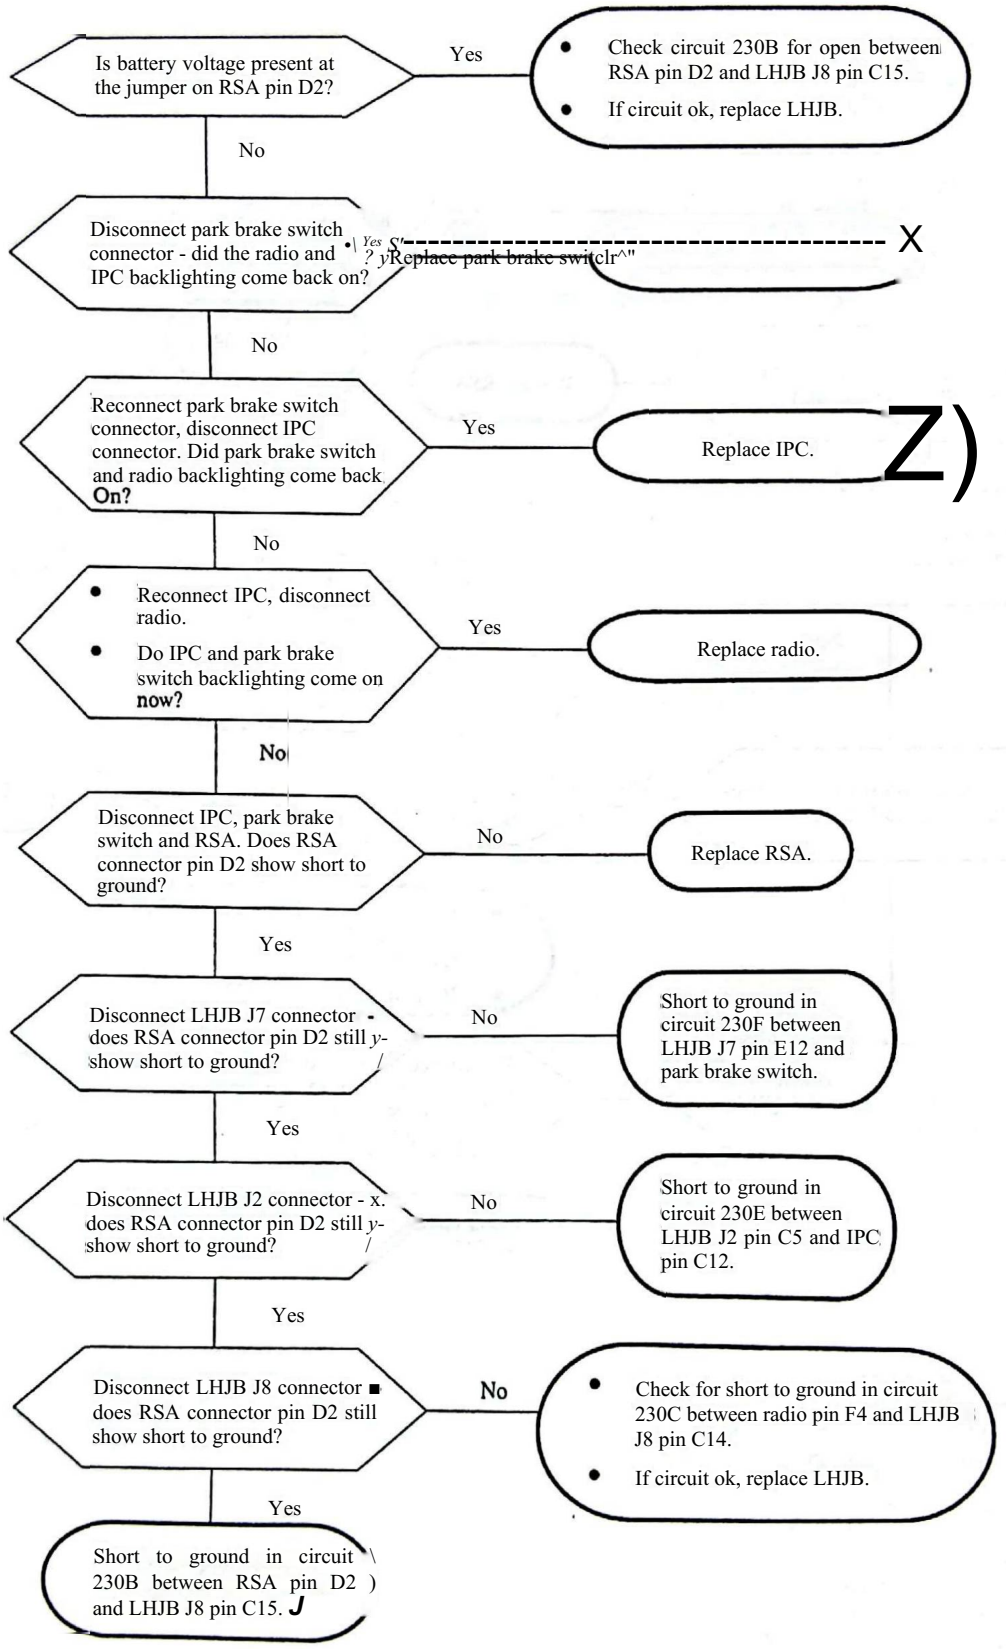
Is battery voltage present at the jumper on RSA pin D2?
Yes
Check circuit 230B for open between RSA pin D2 and LHJB J8 pin C15.
If circuit ok, replace LHJB.
No
Disconnect park brake switch connector - did the radio and IPC backlighting come back on?
Yes
Replace park brake switch
No
Reconnect park brake switch connector, disconnect IPC connector. Did park brake switch and radio backlighting come back On?
Yes
Replace IPC.
No
Reconnect IPC, disconnect radio.
Do IPC and park brake switch backlighting come on now?
Yes
Replace radio.
No
Disconnect IPC, park brake switch and RSA. Does RSA connector pin D2 show short to ground?
No
Replace RSA.
Yes
Disconnect LHJB J7 connector - does RSA connector pin D2 still show short to ground?
No
Short to ground in circuit 230F between LHJB J7 pin E12 and park brake switch.
Yes
Disconnect LHJB J2 connector - does RSA connector pin D2 still show short to ground?
No
Short to ground in circuit 230E between LHJB J2 pin C5 and IPC pin C12.
Yes
Disconnect LHJB J8 connector - does RSA connector pin D2 still show short to ground?
No
Check for short to ground in circuit 230C between radio pin F4 and LHJB J8 pin C14.
If circuit ok, replace LHJB.
Yes
Short to ground in circuit 230B between RSA pin D2 and LHJB J8 pin C15.

CamScanner

CHART1B

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

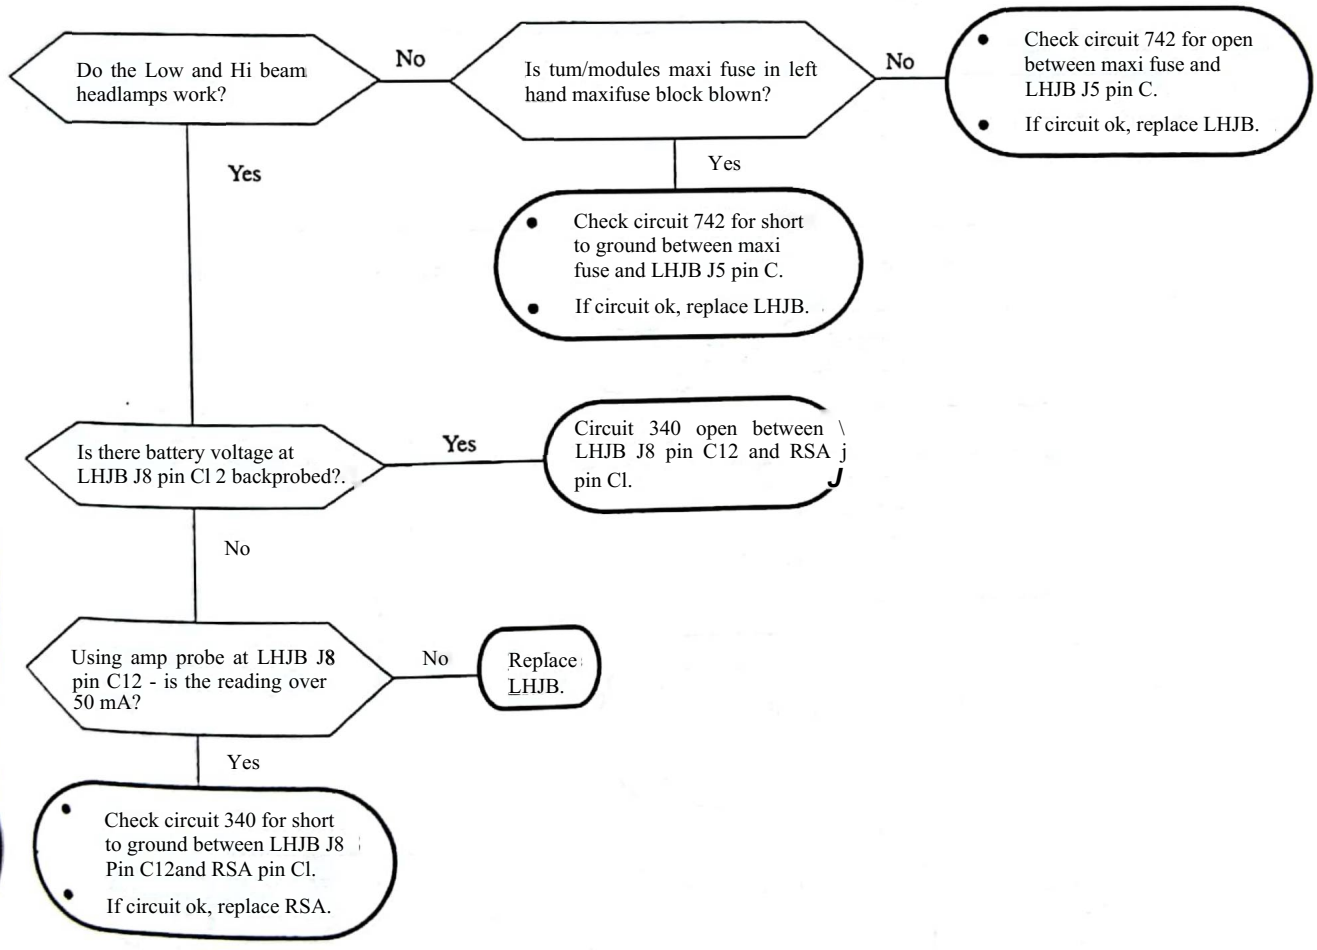
Do the Low and Hi beam headlamps work?
No
Is tum/modules maxi fuse in left hand maxifuse block blown?
No
• Check circuit 742 for open between maxi fuse and LHJB J5 pin C.
• If circuit ok, replace LHJB.
Yes
Yes
• Check circuit 742 for short to ground between maxi fuse and LHJB J5 pin C.
• If circuit ok, replace LHJB.
Is there battery voltage at LHJB J8 pin Cl 2 backprobed?.
Yes
Circuit 340 open between LHJB J8 pin C12 and RSA pin Cl.
No
Using amp probe at LHJB J8 pin C12 - is the reading over 50 mA?
No
Replace LHJB.
Yes
• Check circuit 340 for short to ground between LHJB J8 Pin C12and RSA pin Cl.
• If circuit ok, replace RSA.

CamScanner

VACUUM FLUORESCENT (VF) ON FULL, INCANDESCENTS OUT ALL THE TIME

CHART 2

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Vacuum fluorescent (VF) on full, incandescents out all the time.

Are parklamps inoperative?

Yes → Refer to Exterior Lights Chart 22 "All Park and Markers Out."

No

X. Which displays have this condition?

All

Using amp probe is current at LHJB J9 pin A8 over 20 mA?

Yes →
- Check circuit 301B for short to ground between radio pin F5 and LHJB J9 pin A8.
- If circuit ok, replace radio.

No

Using amp probe is current at LHJB JI pin Al2 over 20 mA?

Yes →
- Check circuit 301C for short to ground between IPC pin C4 and LHJB JI pin A12.
- If circuit ok, replace IPC.

No

Using amp probe is current at LHJB J9 pin A9 over 20 mA?

Yes →
- Check circuit 301E for short to ground between LHJB J9 pin A9 and RSA pin C9.
- If circuit ok, replace RSA.

No

^Replace LHJB^

RSA only

B ackprobe power to RS A pin C9 - does backlighting dim now?

No → Replace RSA.

Yes

- Check circuit 301E for open between RSA pin C9 and LHJB J9 pinA9.
- If circuit ok, replace LHJB.

IPC only

Backprobe power to IPC pin C4 - do displays dim ok now?

No → Replace IPC.

Yes

- Check circuit 301C for open between IPC pin C4 and LHJB JI pinA12.
- If circuit ok, replace LHJB.

Radio only

Backprobe power to radio pin F5 - does radio dim normally now?

No → Replace radio.

Yes

- Check c circuit 30[illegible] for an open circuit between radio pin F5 and LHJB J9pinA8.
- If circuit ok, replace LHJB.

CamScanner

NOTES

CamScanner

EXTERIOR LIGHTS

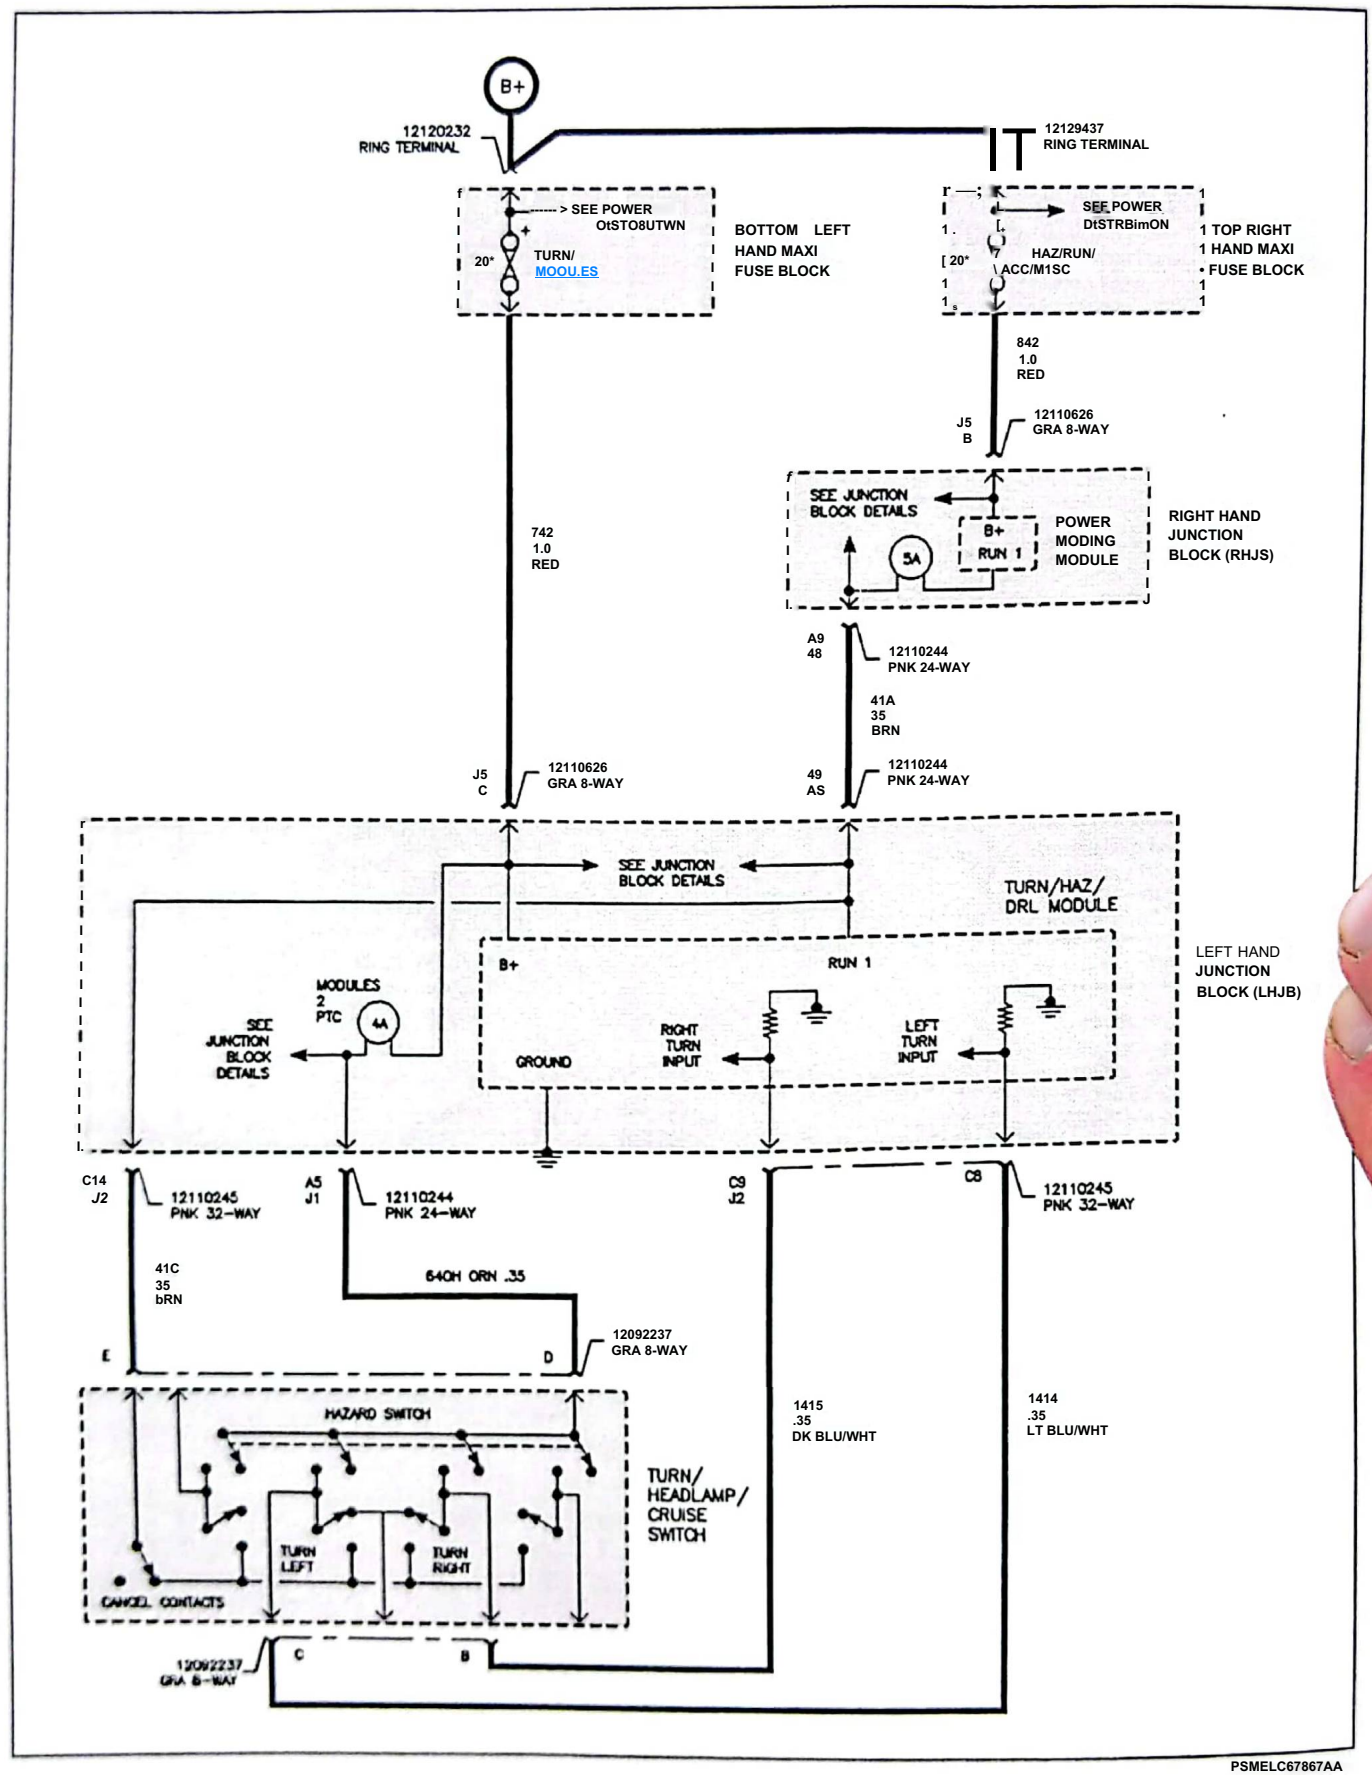

CamScanner

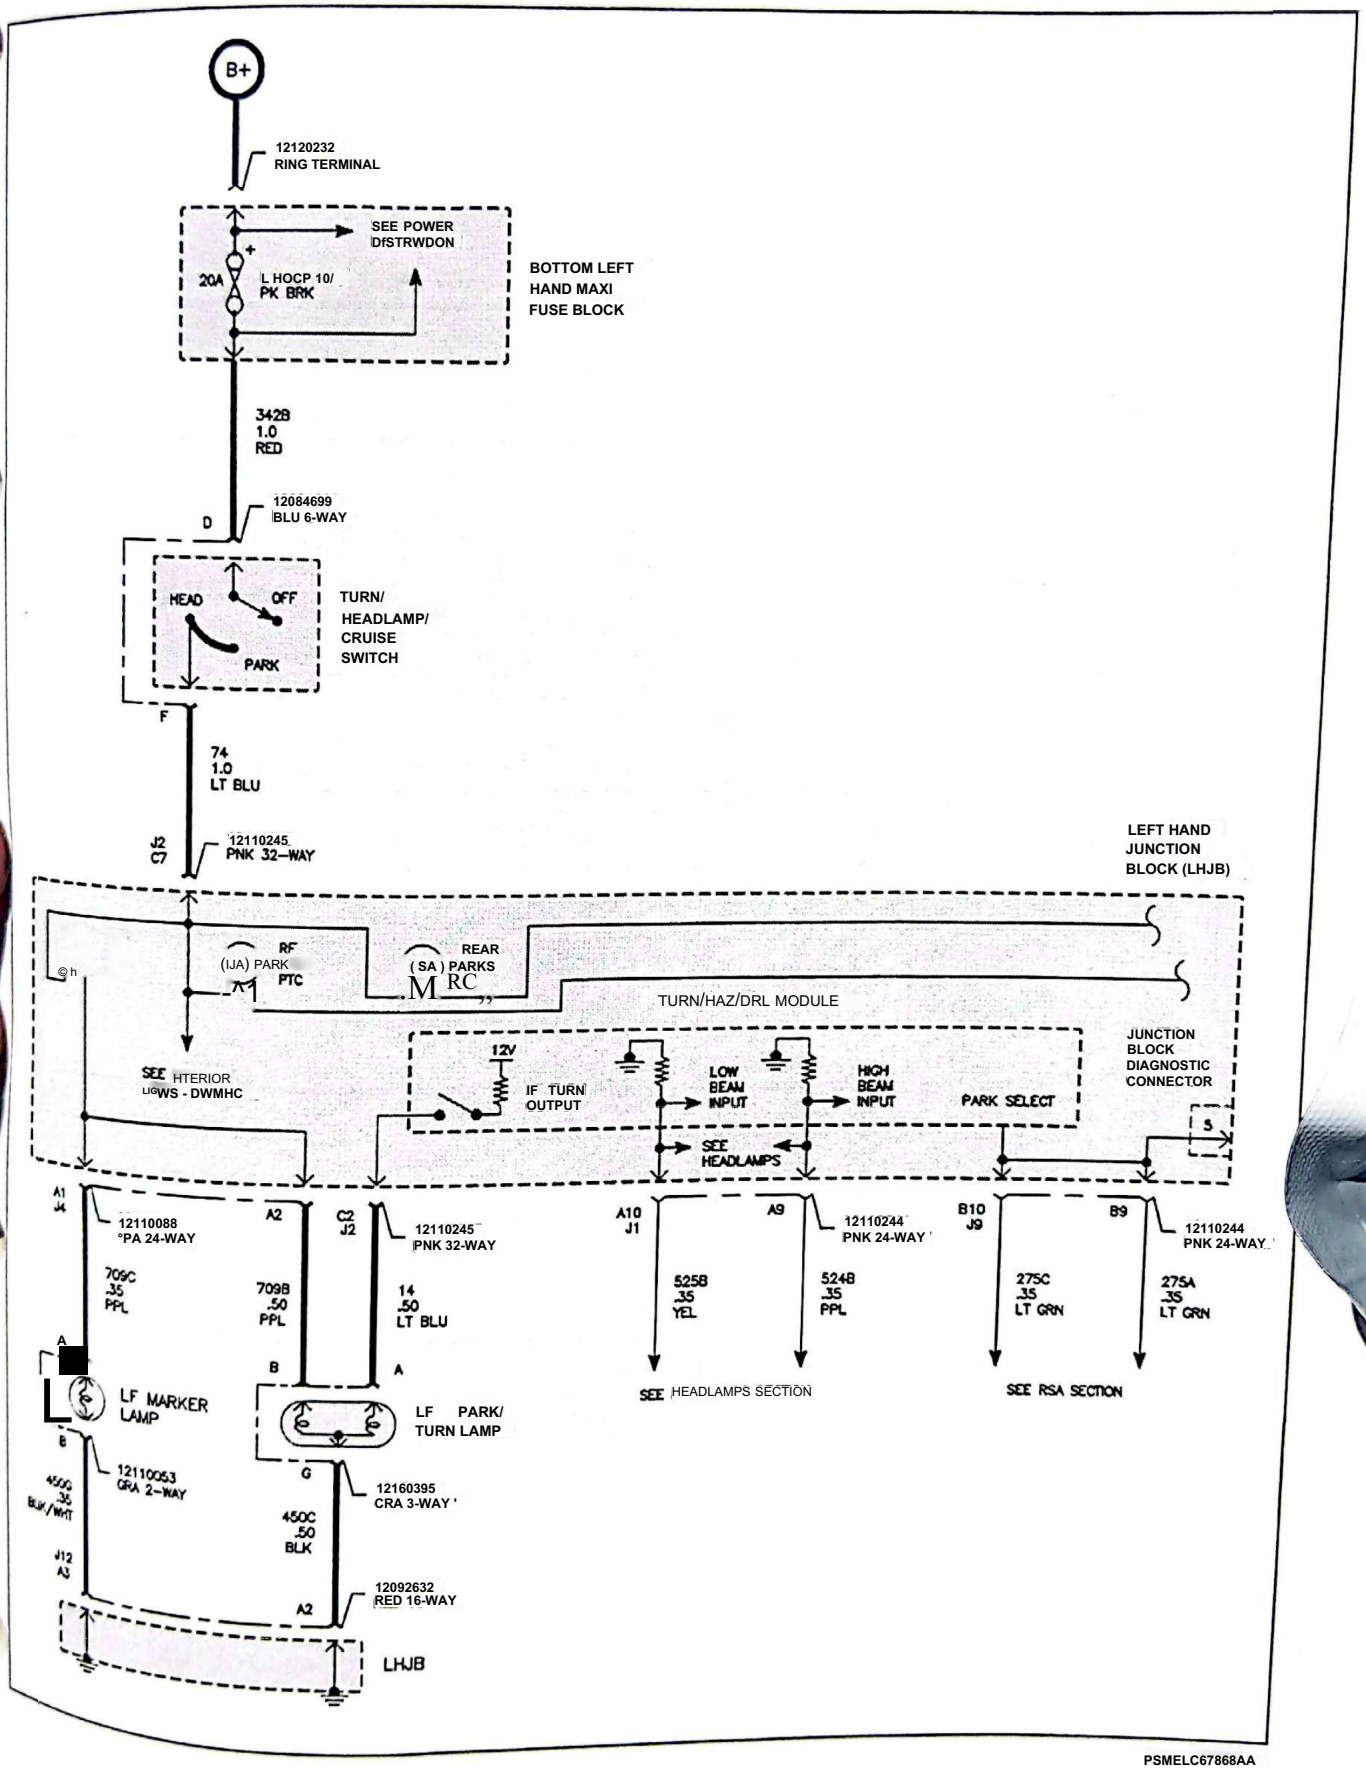
B+
12120232
RING TERMINAL
SEE POWER DISTRIBUTION
20A
L HOCP 10/
PK BRK
BOTTOM LEFT
HAND MAXI
FUSE BLOCK
342B
1.0
RED
D
12084699
BLU 6-WAY
HEAD
OFF
PARK
TURN/
HEADLAMP/
CRUISE
SWITCH
F
74
1.0
LT BLU
J2
C7
12110245
PNK 32-WAY
LEFT HAND
JUNCTION
BLOCK (LHJB)
RF
(IJA) PARK
PTC
REAR
(SA) PARKS
TURN/HAZ/DRL MODULE
12V
IF TURN
OUTPUT
LOW
BEAM
INPUT
HIGH
BEAM
INPUT
PARK SELECT
SEE HEADLAMPS
JUNCTION
BLOCK
DIAGNOSTIC
CONNECTOR
S
SEE INTERIOR LIGHTS - DWMHC
A1
J4
12110088
°PA 24-WAY
A2
C2
J2
12110245
PNK 32-WAY
709C
.35
PPL
709B
.50
PPL
14
.50
LT BLU
A10
J1
A9
12110244
PNK 24-WAY
5258
.35
YEL
5248
.35
PPL
B10
J9
B9
12110244
PNK 24-WAY
275C
.35
LT GRN
275A
.35
LT GRN
SEE HEADLAMPS SECTION
SEE RSA SECTION
A
B
LF MARKER
LAMP
B
A
LF PARK/
TURN LAMP
12110053
GRA 2-WAY
G
12160395
CRA 3-WAY
450C
.50
BLK
450C
.35
BLK/WHT
J12
A3
12092632
RED 16-WAY
A2
LHJB
PSMELC67868AA

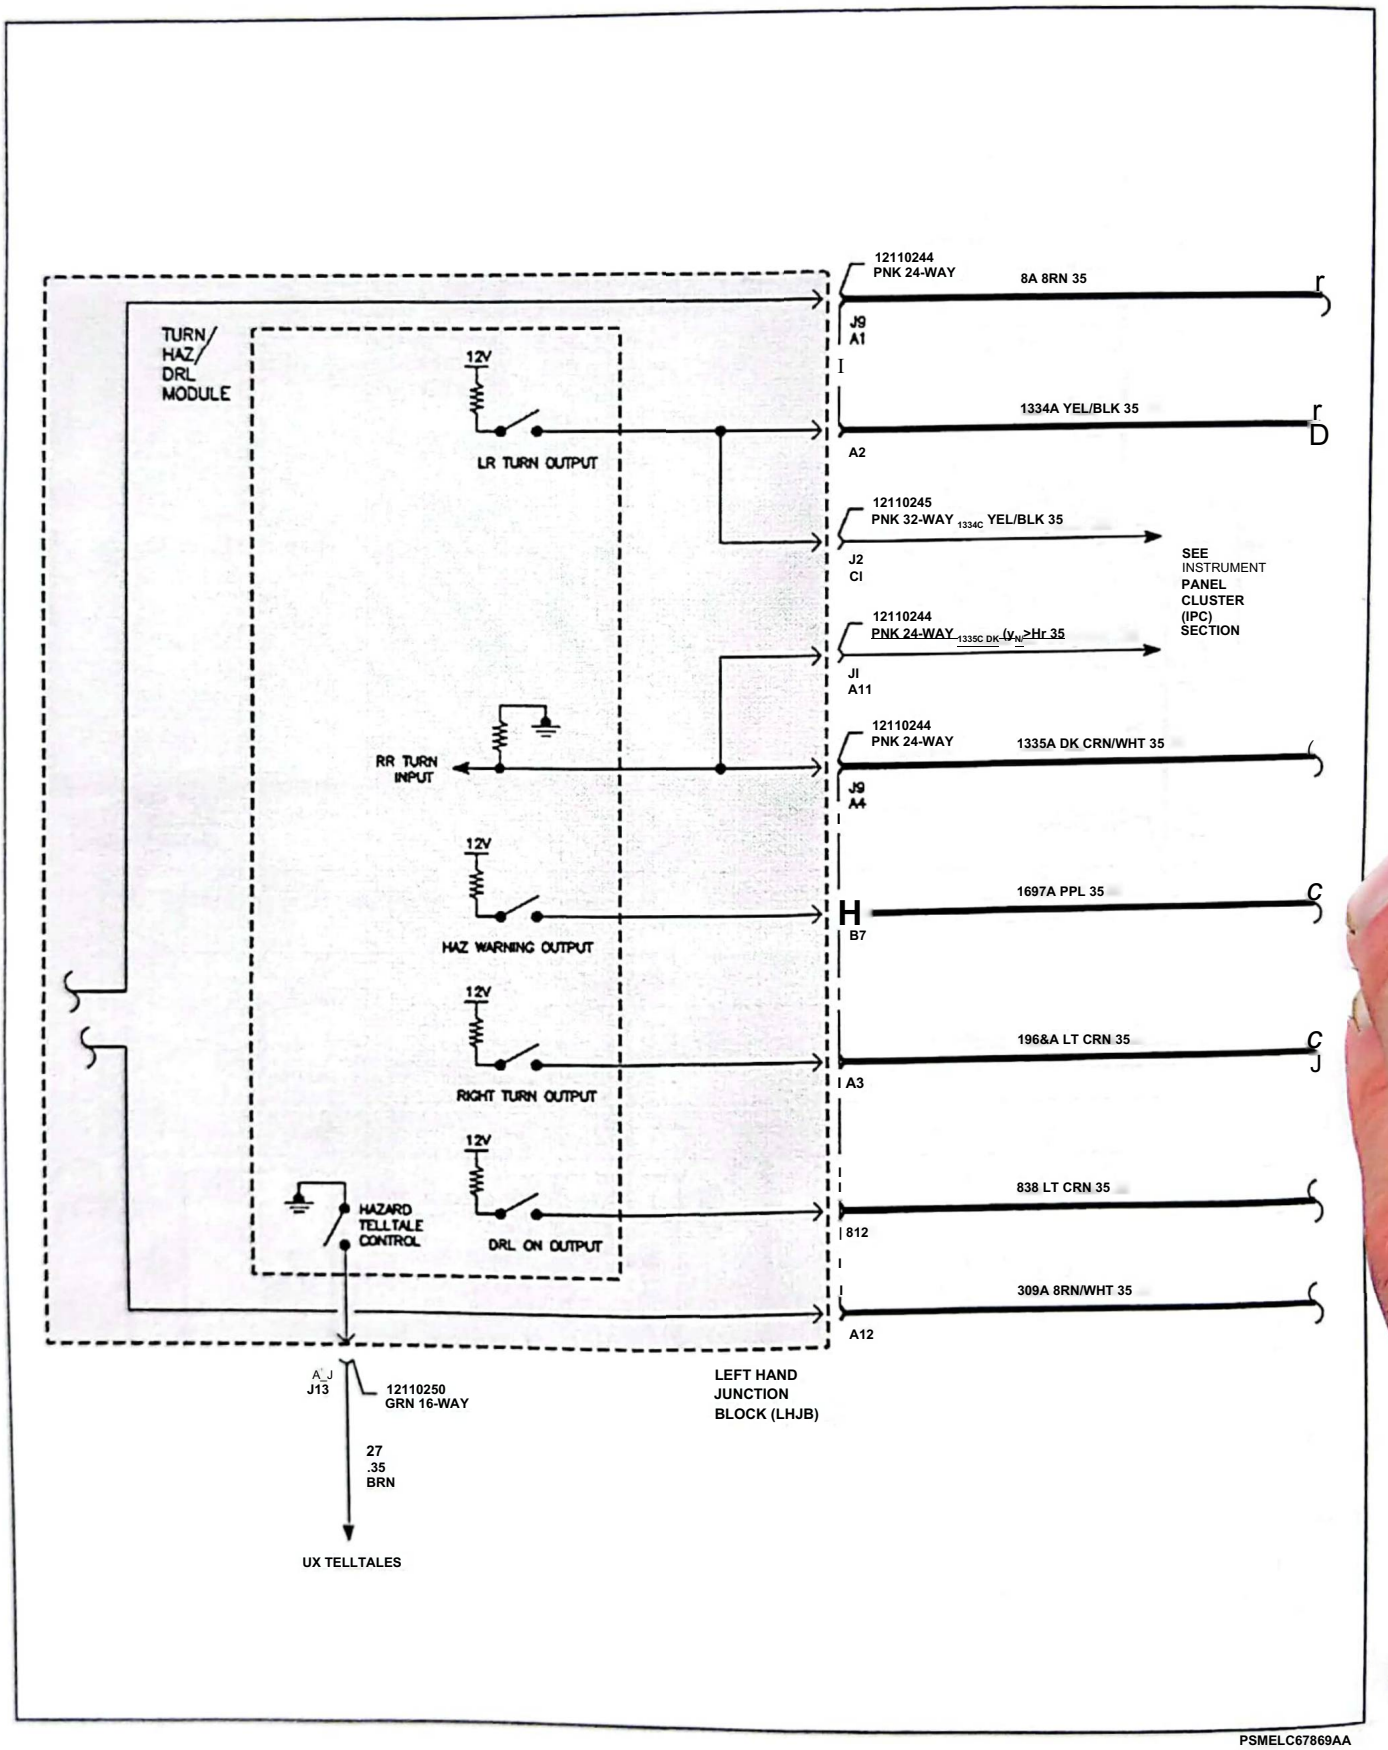
TURN/
HAZ/
DRL
MODULE
12V
LR TURN OUTPUT
RR TURN
INPUT
12V
HAZ WARNING OUTPUT
12V
RIGHT TURN OUTPUT
12V
DRL ON OUTPUT
HAZARD
TELLTALE
CONTROL
12110244
PNK 24-WAY
8A 8RN 35
J9
A1
1334A YEL/BLK 35
A2
12110245
PNK 32-WAY 1334C YEL/BLK 35
J2
CI
SEE
INSTRUMENT
PANEL
CLUSTER
(IPC)
SECTION
12110244
PNK 24-WAY 1335C DK GRN/WHT 35
JI
A11
12110244
PNK 24-WAY
1335A DK CRN/WHT 35
J9
A4
1697A PPL 35
B7
196&A LT CRN 35
A3
838 LT CRN 35
812
309A 8RN/WHT 35
A12
LEFT HAND
JUNCTION
BLOCK (LHJB)
J13
12110250
GRN 16-WAY
27
.35
BRN
UX TELLTALES
PSMELC67869AA

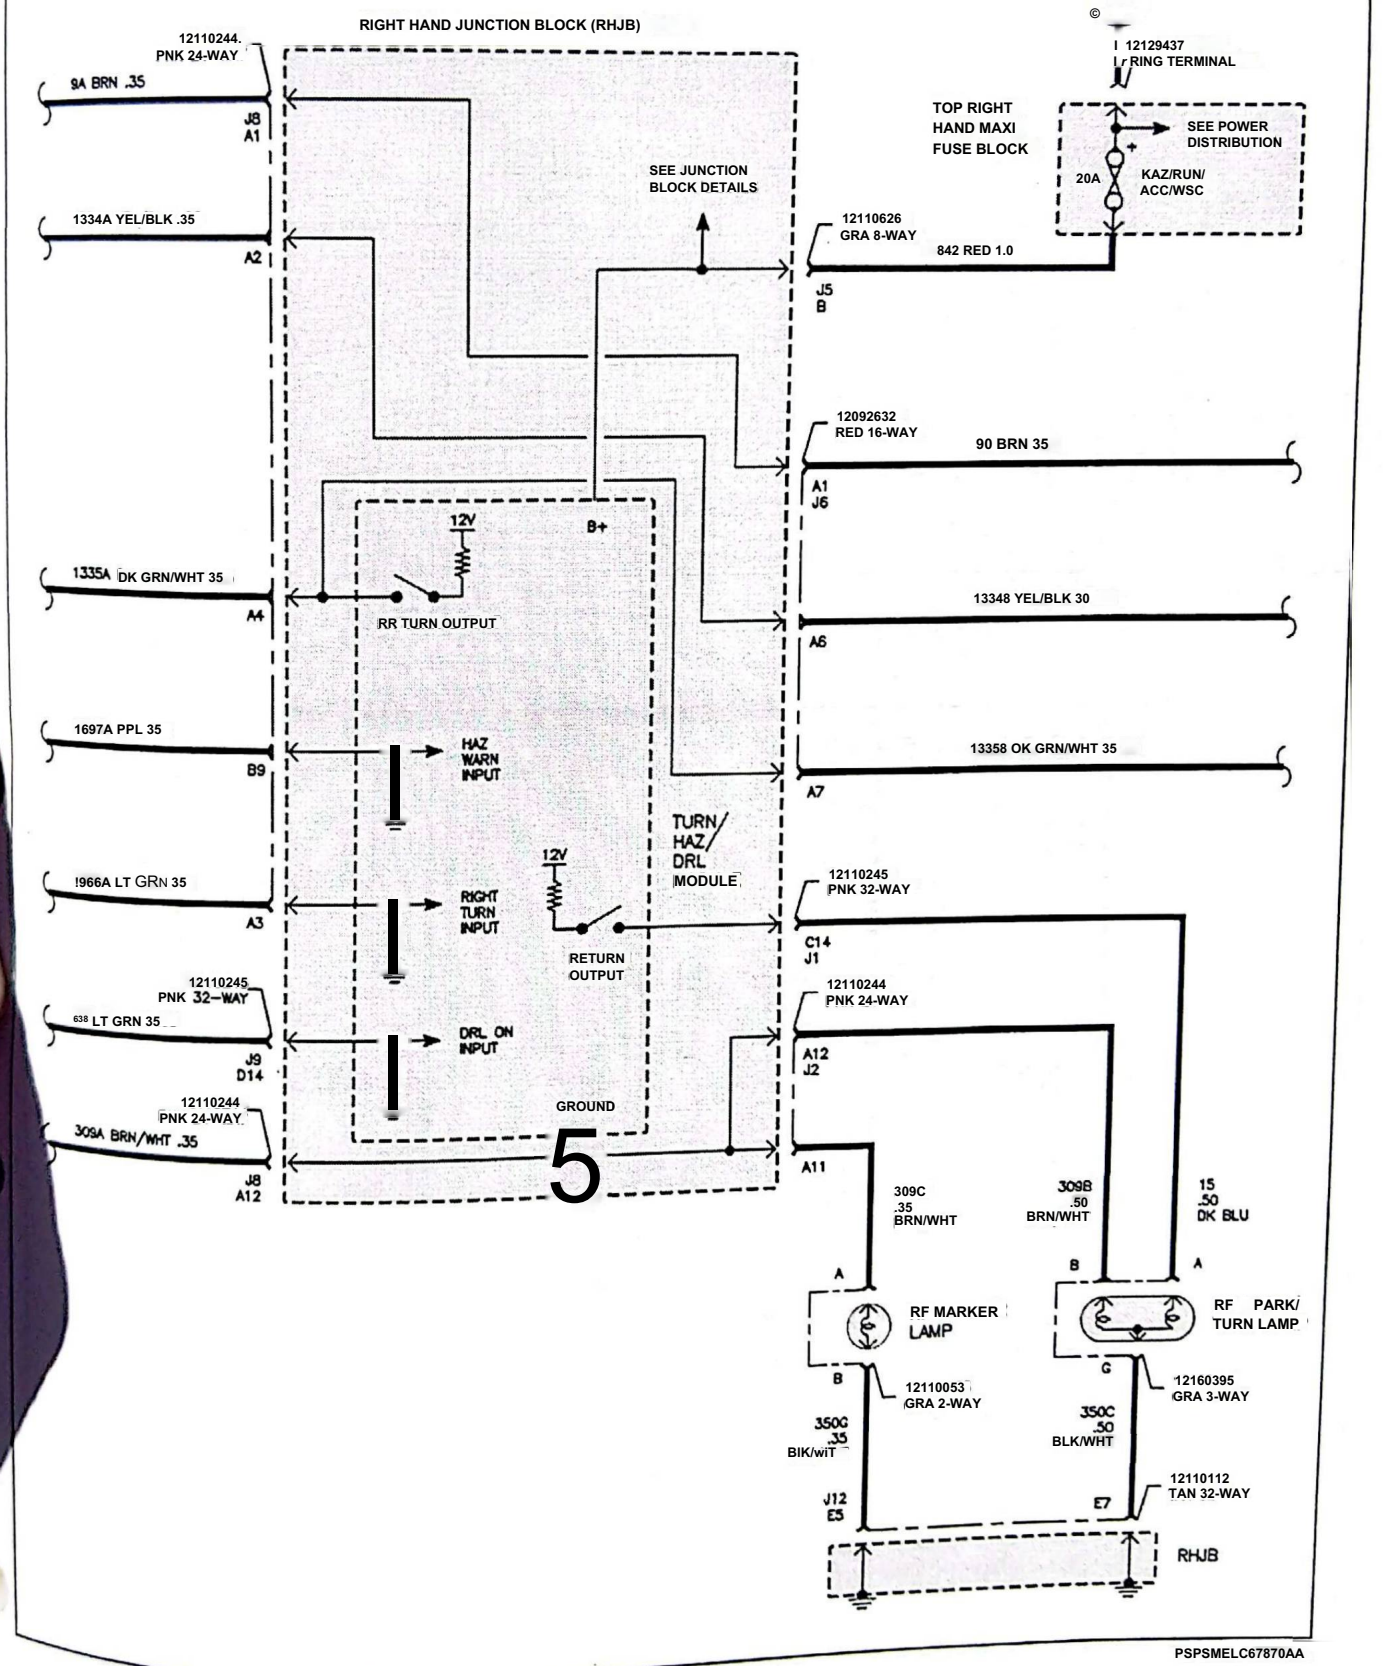
RIGHT HAND JUNCTION BLOCK (RHJB)
12110244.
PNK 24-WAY
9A BRN .35
J8
A1
1334A YEL/BLK .35
A2
1335A DK GRN/WHT 35
A4
1697A PPL 35
B9
1966A LT GRN 35
A3
12110245
PNK 32-WAY
638 LT GRN 35
J9
D14
12110244
PNK 24-WAY
309A BRN/WHT .35
J8
A12
SEE JUNCTION
BLOCK DETAILS
12V
B+
RR TURN OUTPUT
HAZ
WARN
INPUT
RIGHT
TURN
INPUT
DRL ON
INPUT
12V
RETURN
OUTPUT
TURN/
HAZ/
DRL
MODULE
GROUND
5
12129437
RING TERMINAL
TOP RIGHT
HAND MAXI
FUSE BLOCK
SEE POWER
DISTRIBUTION
20A
KAZ/RUN/
ACC/WSC
12110626
GRA 8-WAY
842 RED 1.0
J5
B
12092632
RED 16-WAY
90 BRN 35
A1
J6
13348 YEL/BLK 30
A6
13358 OK GRN/WHT 35
A7
12110245
PNK 32-WAY
C14
J1
12110244
PNK 24-WAY
A12
J2
A11
309C
.35
BRN/WHT
309B
.50
BRN/WHT
15
.50
DK BLU
A
B
A
RF MARKER
LAMP
RF PARK/
TURN LAMP
B
12110053
GRA 2-WAY
G
12160395
GRA 3-WAY
350G
.35
BLK/WHT
350C
.50
BLK/WHT
J12
E5
E7
12110112
TAN 32-WAY
RHJB
PSPSMELC67870AA

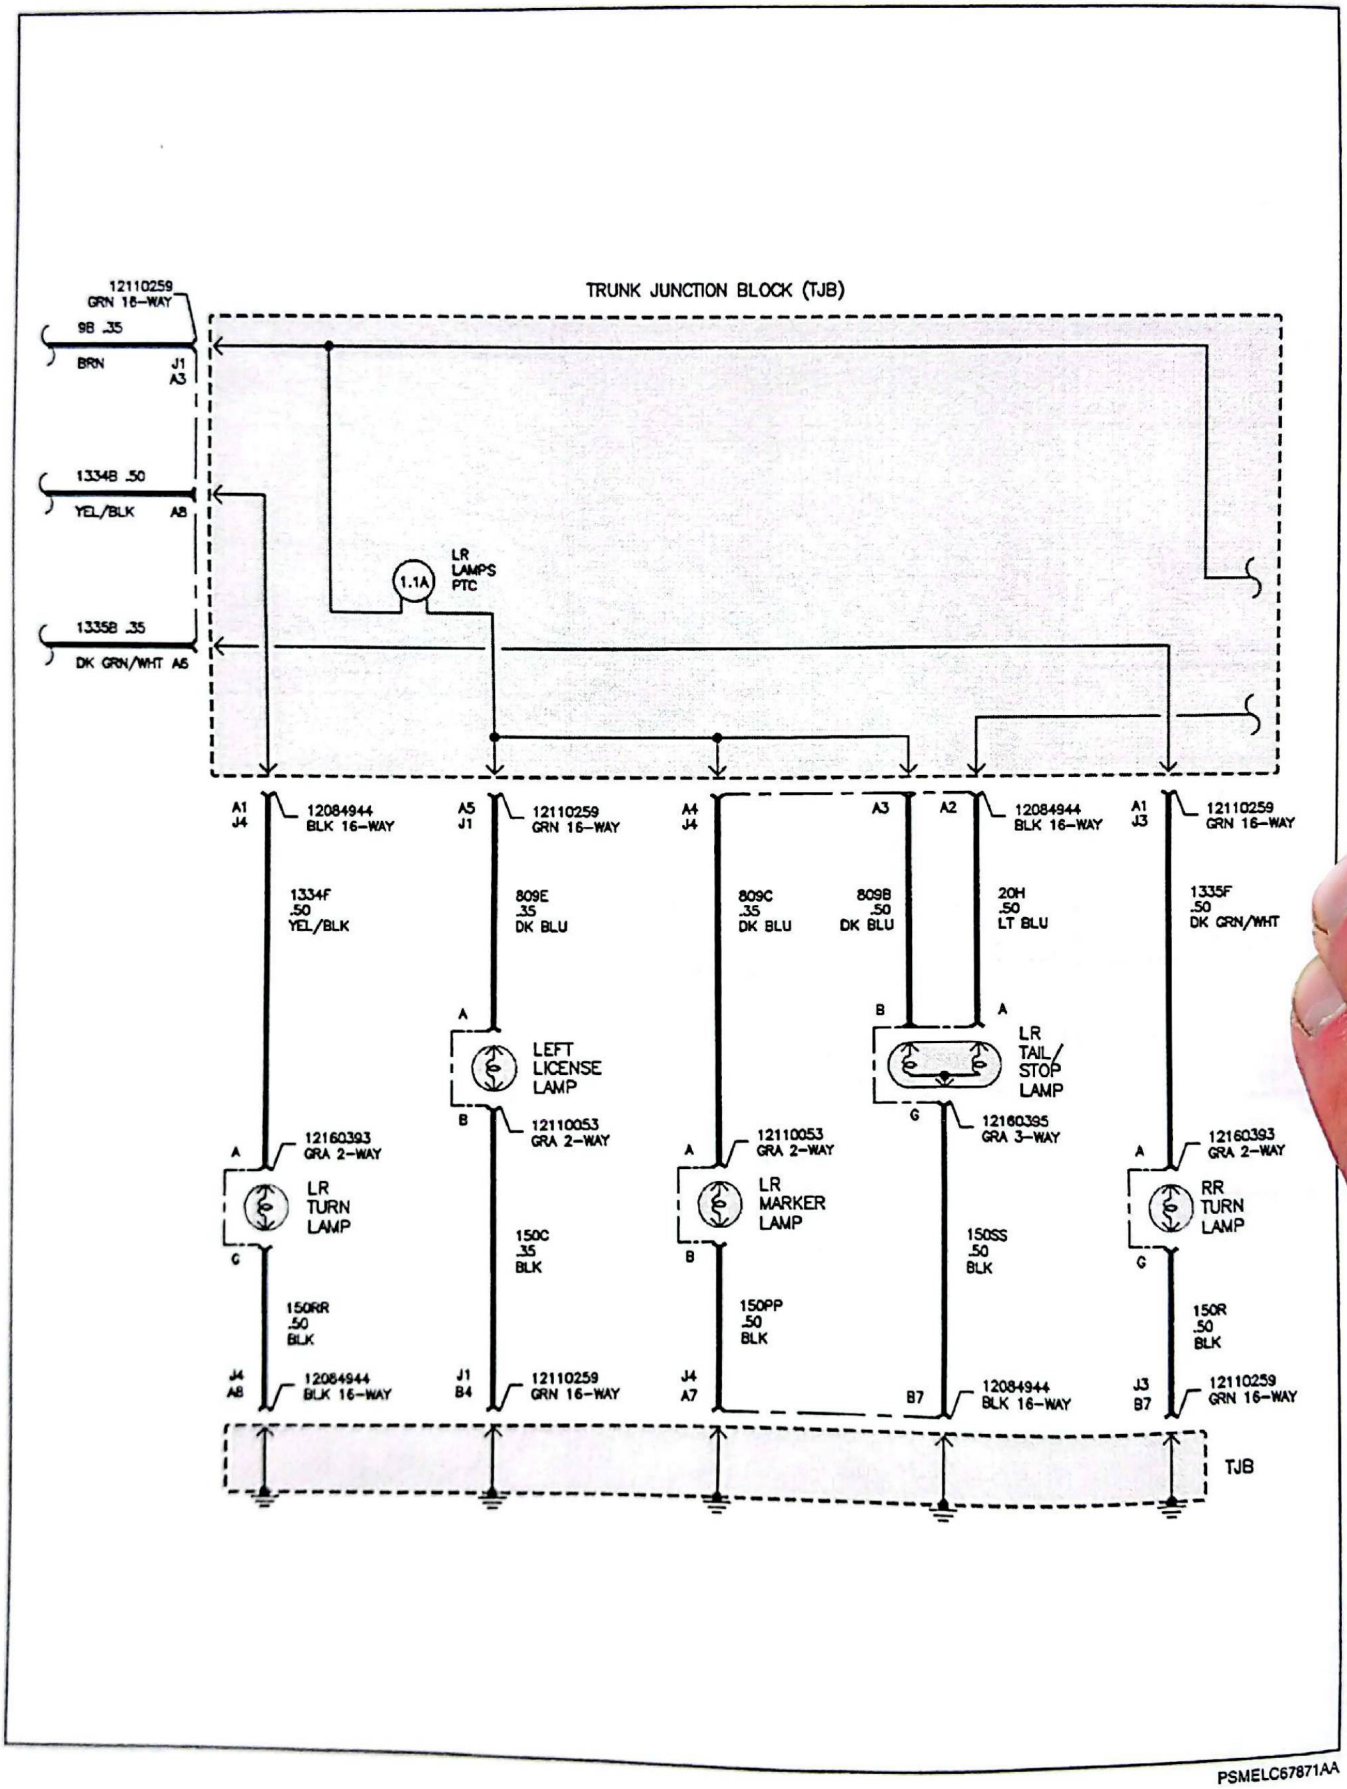
TRUNK JUNCTION BLOCK (TJB)
12110259
GRN 16-WAY
9B .35
BRN
J1
A3
1334B .50
YEL/BLK
A8
1335B .35
DK GRN/WHT A6
1.1A
LR
LAMPS
PTC
A1
J4
12084944
BLK 16-WAY
1334F
.50
YEL/BLK
A5
J1
12110259
GRN 16-WAY
809E
.35
DK BLU
A4
J4
809C
.35
DK BLU
A3
809B
.50
DK BLU
A2
12084944
BLK 16-WAY
20H
.50
LT BLU
A1
J3
12110259
GRN 16-WAY
1335F
.50
DK GRN/WHT
LEFT
LICENSE
LAMP
LR
TAIL/
STOP
LAMP
12160395
GRA 3-WAY
12160393
GRA 2-WAY
LR
TURN
LAMP
12110053
GRA 2-WAY
LR
MARKER
LAMP
RR
TURN
LAMP
150C
.35
BLK
150SS
.50
BLK
150RR
.50
BLK
150PP
.50
BLK
150R
.50
BLK
J4
A8
J1
B4
J4
A7
B7
J3
B7
TJB
PSMELC67871AA

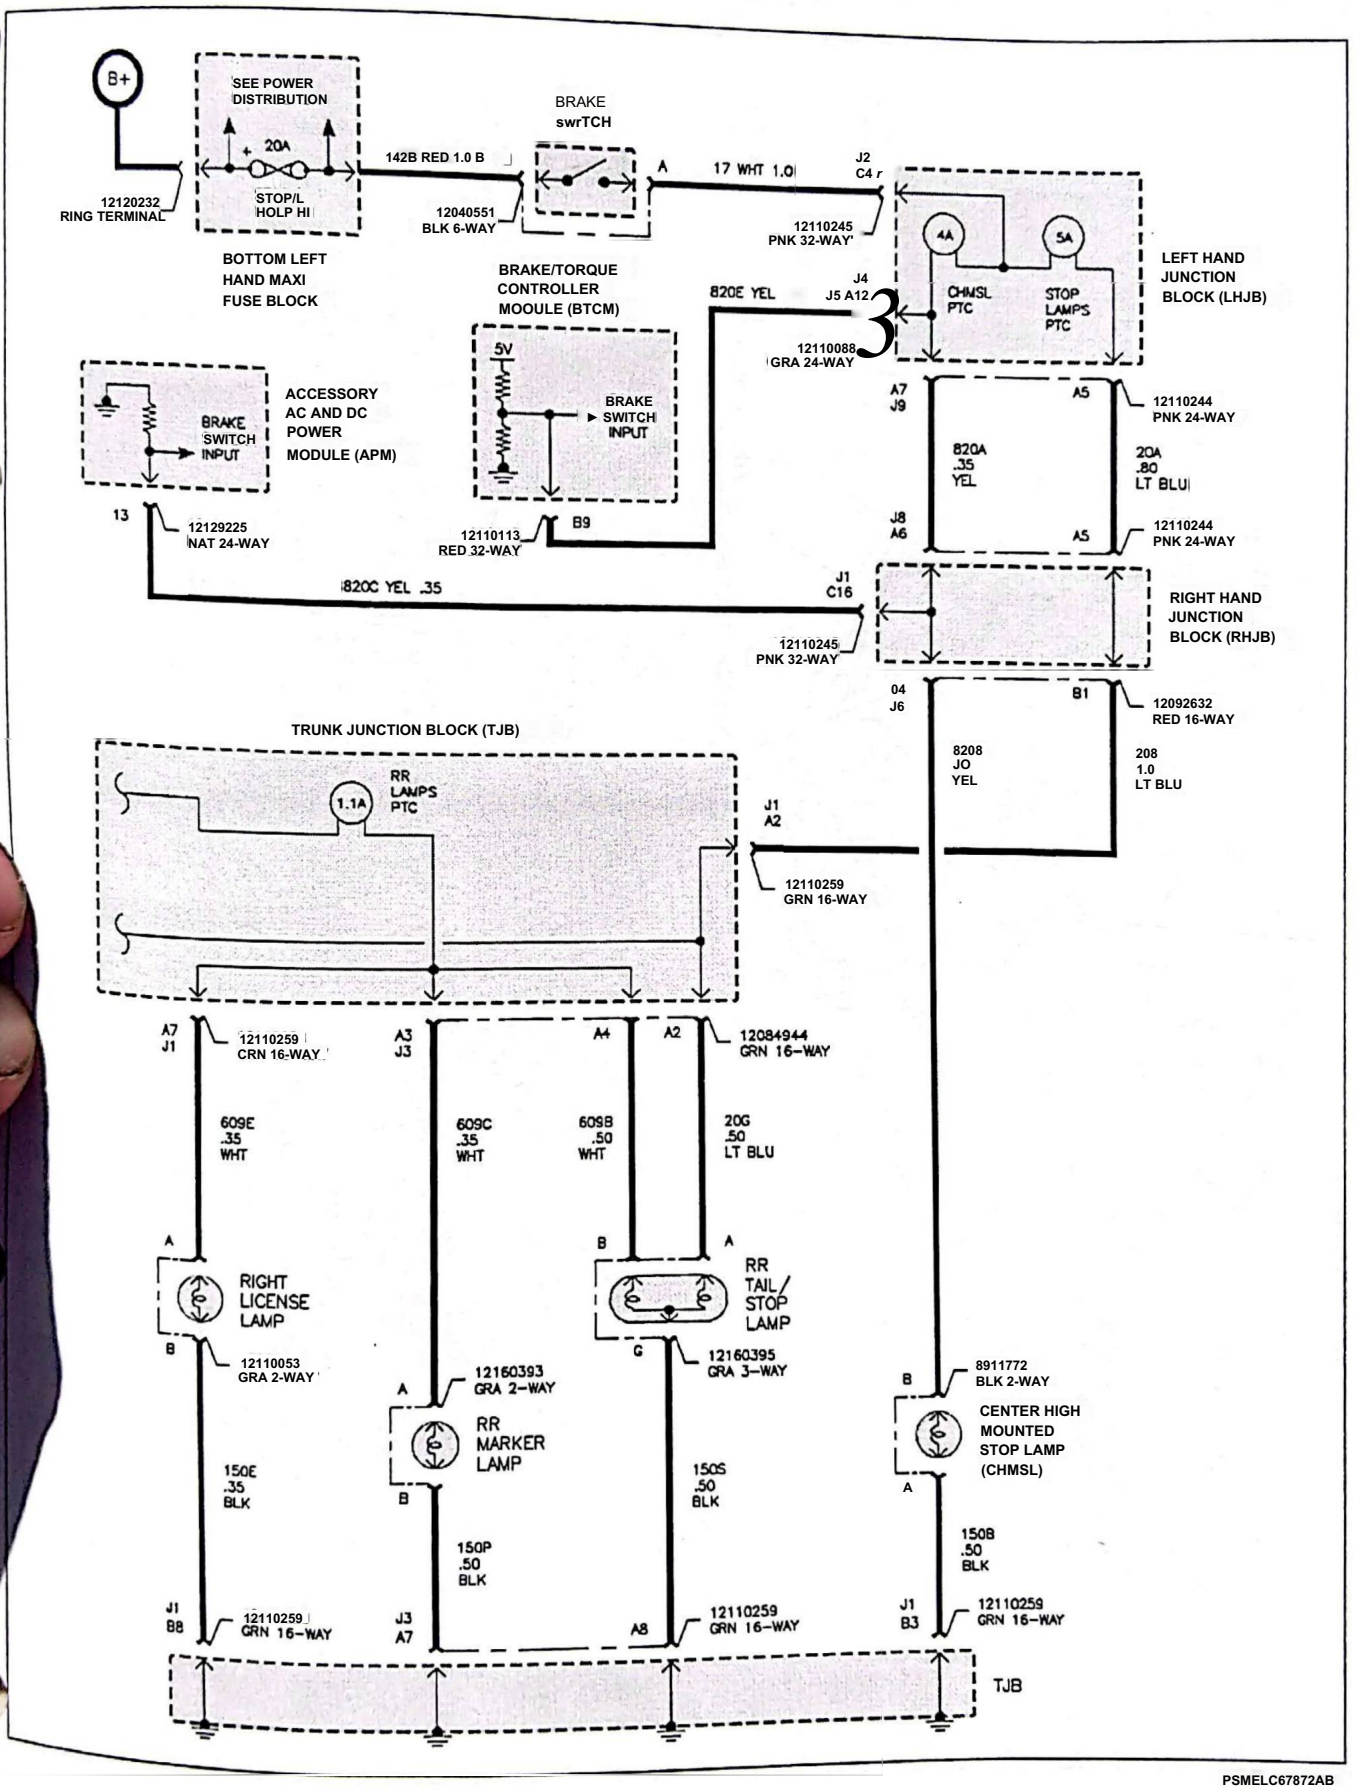

PSMELC67872AB

CamScanner

EXTERIOR LIGHTS COMPONENT LOCATION VIEWS

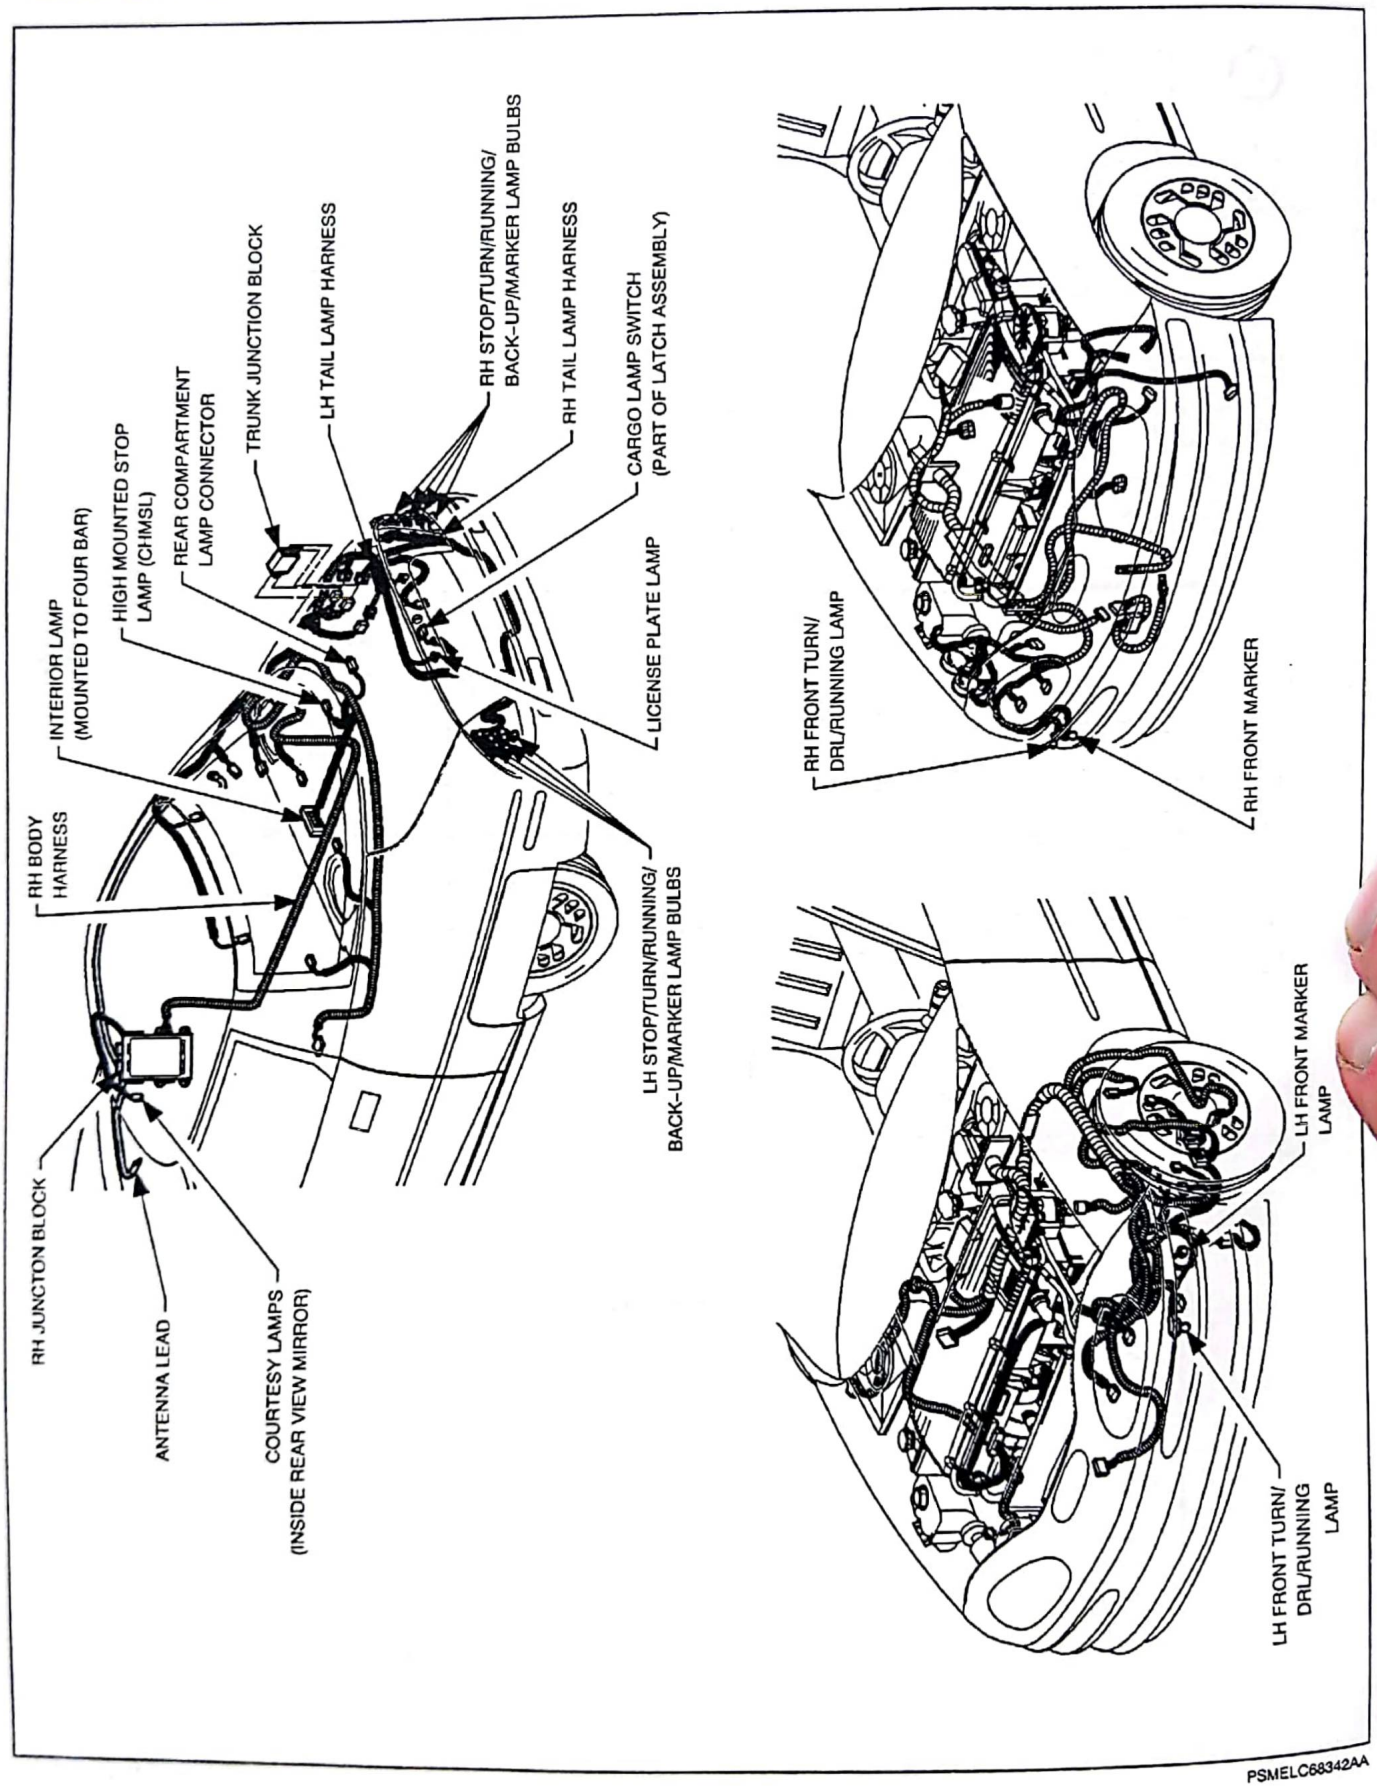
RH BODY HARNESS
INTERIOR LAMP (MOUNTED TO FOUR BAR)
HIGH MOUNTED STOP LAMP (CHMSL)
REAR COMPARTMENT LAMP CONNECTOR
TRUNK JUNCTION BLOCK
LH TAIL LAMP HARNESS
RH STOP/TURN/RUNNING/ BACK-UP/MARKER LAMP BULBS
RH TAIL LAMP HARNESS
CARGO LAMP SWITCH (PART OF LATCH ASSEMBLY)
LICENSE PLATE LAMP
LH STOP/TURN/RUNNING/ BACK-UP/MARKER LAMP BULBS
RH JUNCTON BLOCK
ANTENNA LEAD
COURTESY LAMPS (INSIDE REAR VIEW MIRROR)
RH FRONT TURN/ DRL/RUNNING LAMP
RH FRONT MARKER
LH FRONT MARKER LAMP
LH FRONT TURN/ DRL/RUNNING LAMP
PSMELC68342AA

F EXTERIOR LIGHTS

4^BRAKE LIGHTS

There are three brake lamps in the Electric Vehicle, the right and left side lamps and the center high mount stop lamp (CHMSL). All three are grounded directly through the trunk junction block (TJB). The power to all three originates at the maxi STOP/L HDLP HI fuse in the bottom left hand maxi fuse block. From this fuse power travels through circuit 142 to the brake switch. When the brake pedal is depressed, the switch closes and passes power through circuit 17 to the LHJB.

Inside the LHJB the power feeds two PTCs. One is a five amp PTC which feeds power to circuit 20 through the RHJB then through the TJB where it splits to feed the left and right rear stop lamps. The other PTC is four amp rated and feeds the CHMSL on circuit 820 through the RHJB. The BTCM monitors this circuit when ***** VHJV1V *«J41VL *1X AXU11 mode for two reasons:

1. If the brake is applied, the BTCM wakes up and applies the brakes.
2. The brake pedal must be applied in order to release the parking brake in LOCK or ACCY modes.

^The APM monitors this circuit to determine if the proper conditions are present to provide Load Shed. For more information on Load Shed refer to the Propulsion service manual.

PARK/MARKER LAMPS

The park and marker lamps are all grounded through the various junction blocks they are closest to. The left front park and marker lamps are grounded through the LHJB, the right front park and marker through the RHJB, and the rear lamps through the TJB.

The power for all the park and marker lamps originates from the L HDLP LO/PK BRK maxi fuse in the bottom left maxi fuse block. From the maxi fuse, power travels to the headlamp switch, and when the switch is turned to park lamps or headlamps, through the switch to the LHJB. Inside the LHJB the power feeds three PTCs - one for the left front park/markers, one for the right front park/markers, and one for all the rear parks, markers, and license lamps. The PTC feeding the rear lamps provides power to two PTCs in the TJB that feed the left and right side rear lamps respectively.

TURN/HAZARD LAMPS

The turn/hazard lamps are controlled by the tum/hazard modules. There are two such modules, one in the LHJB controlling the left turn signals and one in the RHJB controlling the right turn signals.

Power is provided from the LHJB over circuit 640 to the turn/hazard switch assembly. The turn hazard switch passes voltage with the tum/hazard module in the LHJB over two wires. One wire feeds voltage with left turn signal On, the other with the right turn signal On, and both are powered if hazards are selected. When the right turn signals are selected, the tum/hazard module in the LHJB provides a solid battery volt signal over circuit 1966 to the RHJB, signaling to turn On the right side turn signals.

With hazards On, the turn/hazard module in the LHJB grounds circuit 27 to turn On the hazard telltale. There is a dedicated line from the LHJB turn/hazard module to the RHJB turn/hazard module, circuit 1697, that cycles between 0 and 12 volts. This signal is used by the RHJB to control the right side hazards.

The IPC uses the left rear and right rear turn signal power feed signals to determine which turn indicators should be On and when they should be On. If either of these circuits short to ground, the IPC tone buzzes unnaturally and the front turn bulb stays On solid when turn selected.

DAYTIME RUNNING LAMPS (DRL)

The front turn lamps on the Electric Vehicle are used for daytime running lamps (DRL). DRL is turned on whenever the vehicle is in the Run mode and the PRND is not in Park. DRL is overridden if the park lamps or headlamps are turned On. If the turn signal is activated the front turn bulb on that side flashes. When the turn signal is cancelled the bulb remains On solid again. When DRL is On, the LHJB powers circuit 838 to the RHJB to command on the right front turn signal bulb.

EXTERIOR LIGHTS TROUBLE TREE INDEX

IMPORTANT: Verify the operation of all exterior lamps before choosing a troubletree; otherwise, misdiagnosis may occur. If more than one bulb is inoperative, and there is no chart that covers both together, diagnose them separately.

CamScanner

The following lamp should be checked for proper operation.

- Left and right front markers, left and right rear markers.
- Left and right front park lamps, left and right rear parklamps.
- Left and right front turn signals, left and right rear turn signals.
- Left and right license lamps (in rear), center high mounted stop lamp (CHMSL).
- Left and right rear stop lamps.

SINGLE LIGHTS OUT TROUBLETREES

- Chart 1 - Left Front Marker Out Only
- Chart 2 - Left Front Turn Signal Out Only
- Chart 3 - Left Front Park Lamp Out Only
- Chart 4 - Right Front Marker Out Only
- Chart 5 - Right Front Turn Signal Out Only
- Chart 6 - Right Front Park Lamp Out Only
- Chart 7 — Left Rear Marker Out Only
- Chart 8 - Right Rear Marker Out Only
- Chart 9 — Left Rear Park Lamp Out Only
- Chart 10 — Right Rear Park Lamp Out Only
- Chart 11 — Left Rear License Lamp Out Only
- Chart 12 — Right Rear License Lamp Out Only
- Chart 13 — Left Rear Stop Lamp Out Only
- Chart 14 - Right Rear Stop Lamp Out Only
- Chart 15 — Center High Mounted Stop Lamp (CHMSL) Inoperative (Left Rear and Right Rear Stop Lamps OK)
- Chart 16 — Left Rear Turn Signal Out Only
- Chart 17 - Right Rear Turn Signal Out Only

MULTIPLE LIGHTS OUT TROUBLETREES

- Chart 18 — Left Front Park and Turn Lamps Out Only
- Chart 19 - Right Front Park and Turn Lamps Out Only
- Chart 20 - Left Front Park and Marker Out
- Chart 21 — Right Front Park and Marker Out
- Chart 22 - All Park and Markers Out
- Chart 23 - Left Side Turn Signals Out With Left Turn Signals and/or Hazards Selected
- Chart 24 - Right Side Turn Signals Out With Right Turn Signals and/or Hazards Selected
- Chart 25 - Both Side Turn Signals Out
- Chart 26 - Left Rear Park and Stop Lamps Out Only
- Chart 27 - Right Rear Park and Stop Lamps Out Only
- Chan 28 - Left Rear and Right Rear Stop lamps Out (Center High Mounted Stop Lamp (CHMSL) Working)
- Chan 29 - All Slop Lamps Inoperative (Left Rear, Right Rear and Center High Mounted Stop lamp [CHMSL])
- Chart 30 Left Rear Park, Marker and License Lamps Out
- Chart 31 - Right Rear Park, Marker and License Lamps Out
- Chart 32 - All Rear Park Lamps Inoperative (Fronts are OK)
- Chart 33 - Hazards Inoperative (Turn Signals Both Work OK)
- Chart 34 Daytime Running Lights (DRL) On in Park

CamScanner

LEFT FRONT MARKER OUT ONLY

CHART 1

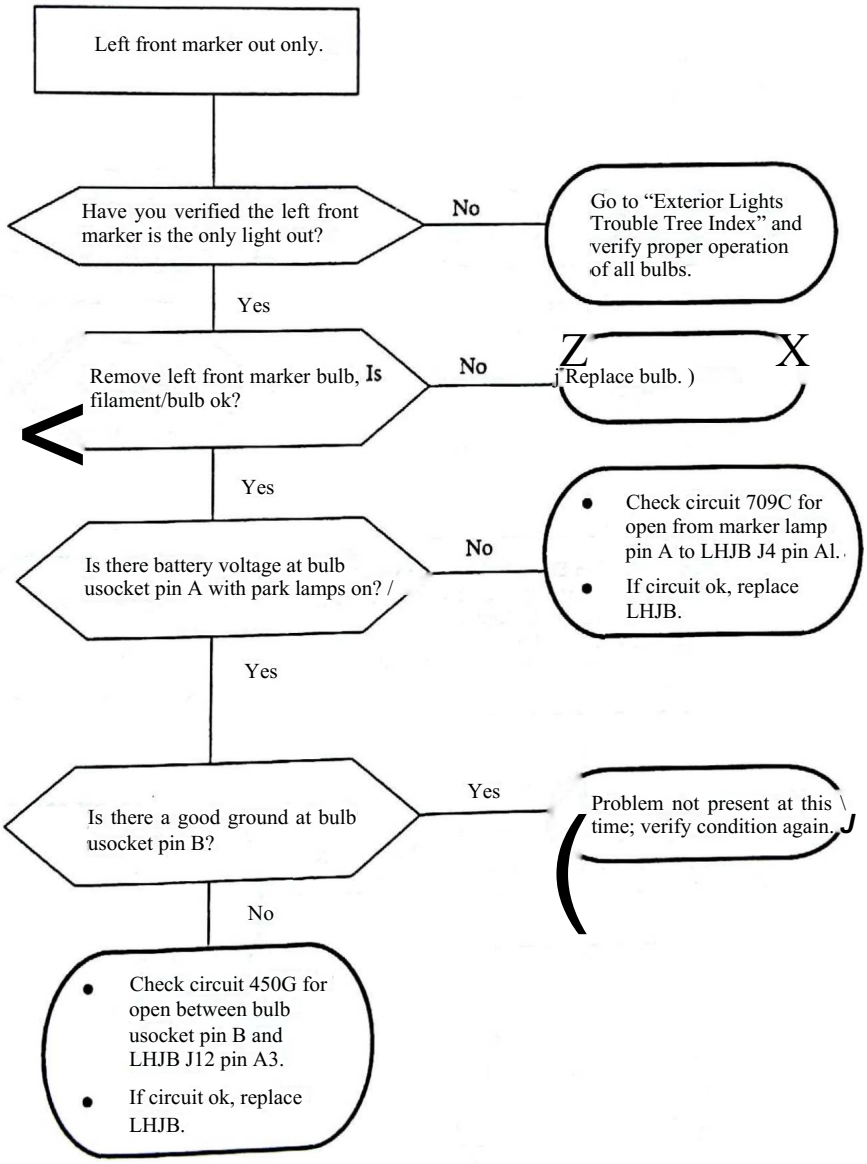
Left front marker out only.
Have you verified the left front marker is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove left front marker bulb, Is filament/bulb ok?
No
Replace bulb.
Yes
Is there battery voltage at bulb usocket pin A with park lamps on?
No
Check circuit 709C for open from marker lamp pin A to LHJB J4 pin A1.
If circuit ok, replace LHJB.
Yes
Is there a good ground at bulb usocket pin B?
Yes
Problem not present at this time; verify condition again.
No
Check circuit 450G for open between bulb usocket pin B and LHJB J12 pin A3.
If circuit ok, replace LHJB.

LEFT FRONT TURN SIGNAL OUT ONLY

CHART 2

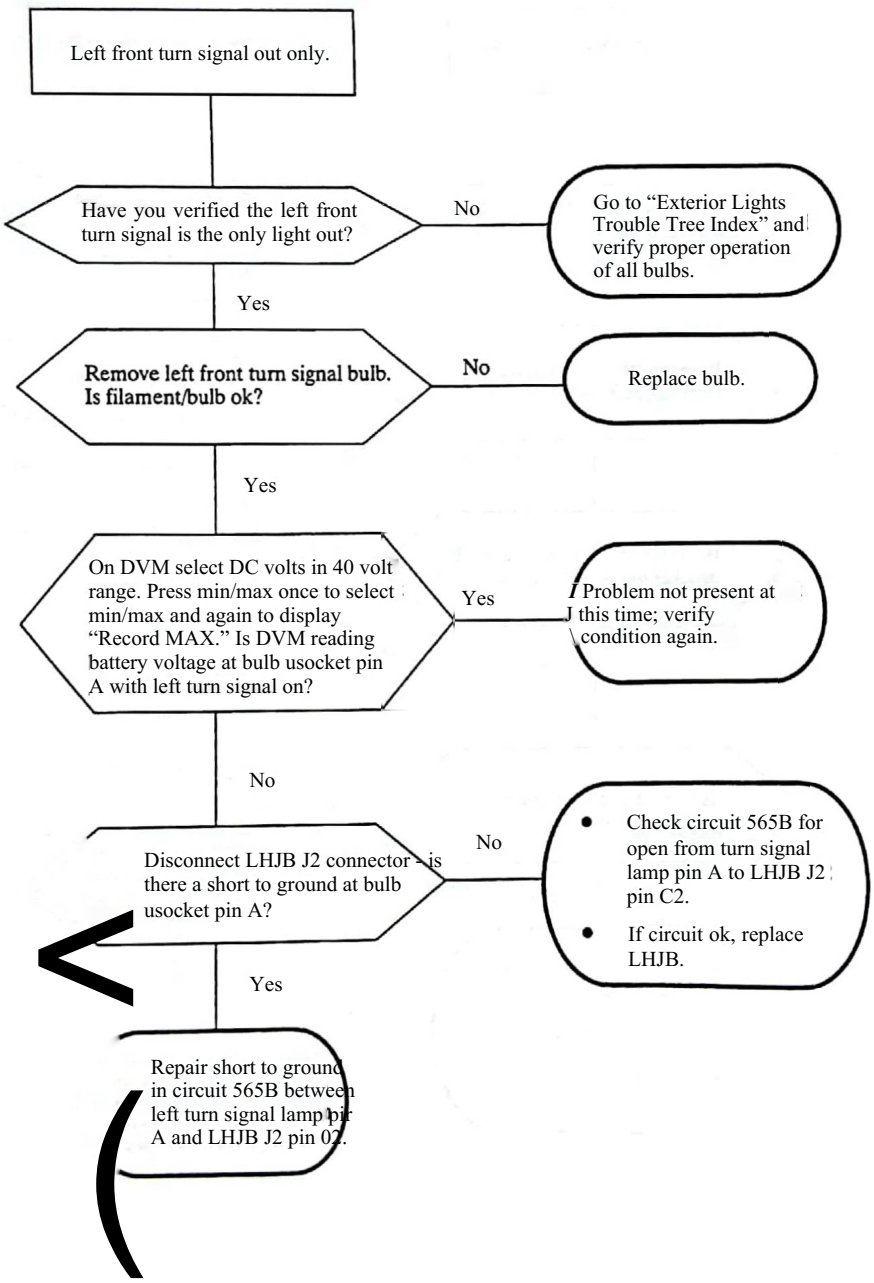
Left front turn signal out only.
Have you verified the left front turn signal is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove left front turn signal bulb. Is filament/bulb ok?
No
Replace bulb.
Yes
On DVM select DC volts in 40 volt range. Press min/max once to select min/max and again to display "Record MAX." Is DVM reading battery voltage at bulb usocket pin A with left turn signal on?
Yes
Problem not present at this time; verify condition again.
No
Disconnect LHJB J2 connector - is there a short to ground at bulb usocket pin A?
No
Check circuit 565B for open from turn signal lamp pin A to LHJB J2 pin C2.
If circuit ok, replace LHJB.
Yes
Repair short to ground in circuit 565B between left turn signal lamp pin A and LHJB J2 pin 02.

CamScanner

LEFT FRONT PARK LAMP OUT ONLY

CHART 3

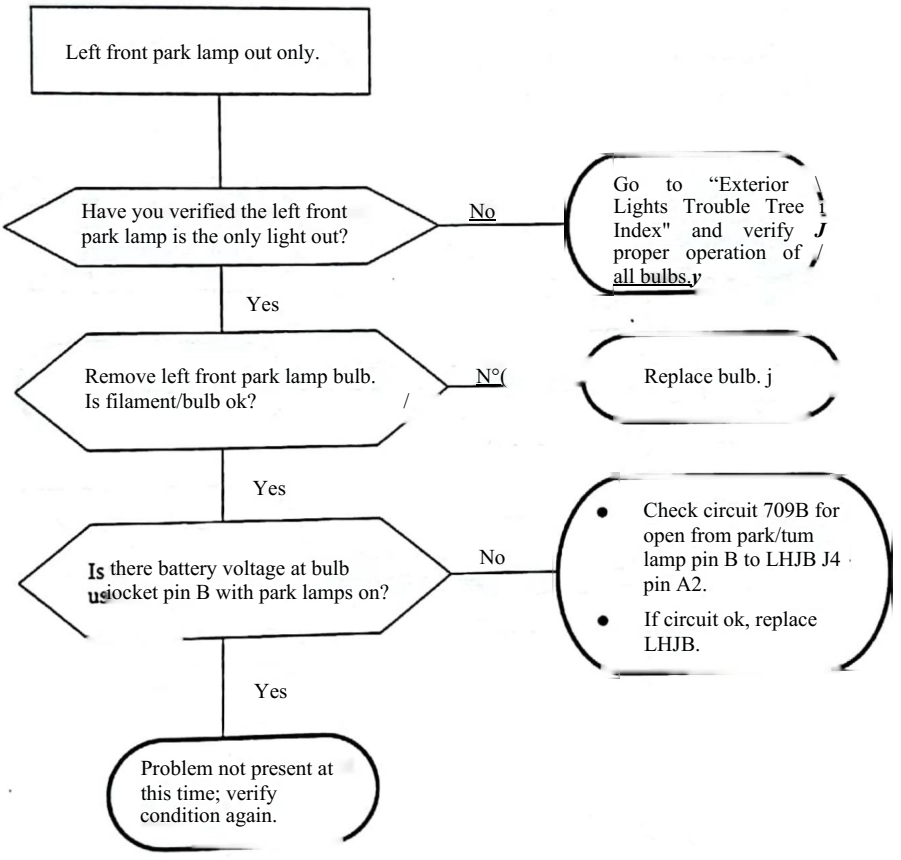
Left front park lamp out only.
Have you verified the left front park lamp is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove left front park lamp bulb. Is filament/bulb ok?
N°(
Replace bulb.
Yes
Is there battery voltage at bulb socket pin B with park lamps on?
No
Check circuit 709B for open from park/tum lamp pin B to LHJB J4 pin A2.
If circuit ok, replace LHJB.
Yes
Problem not present at this time; verify condition again.

CamScanner

RIGHT FRONT MARKER OUT ONLY

CHART 4

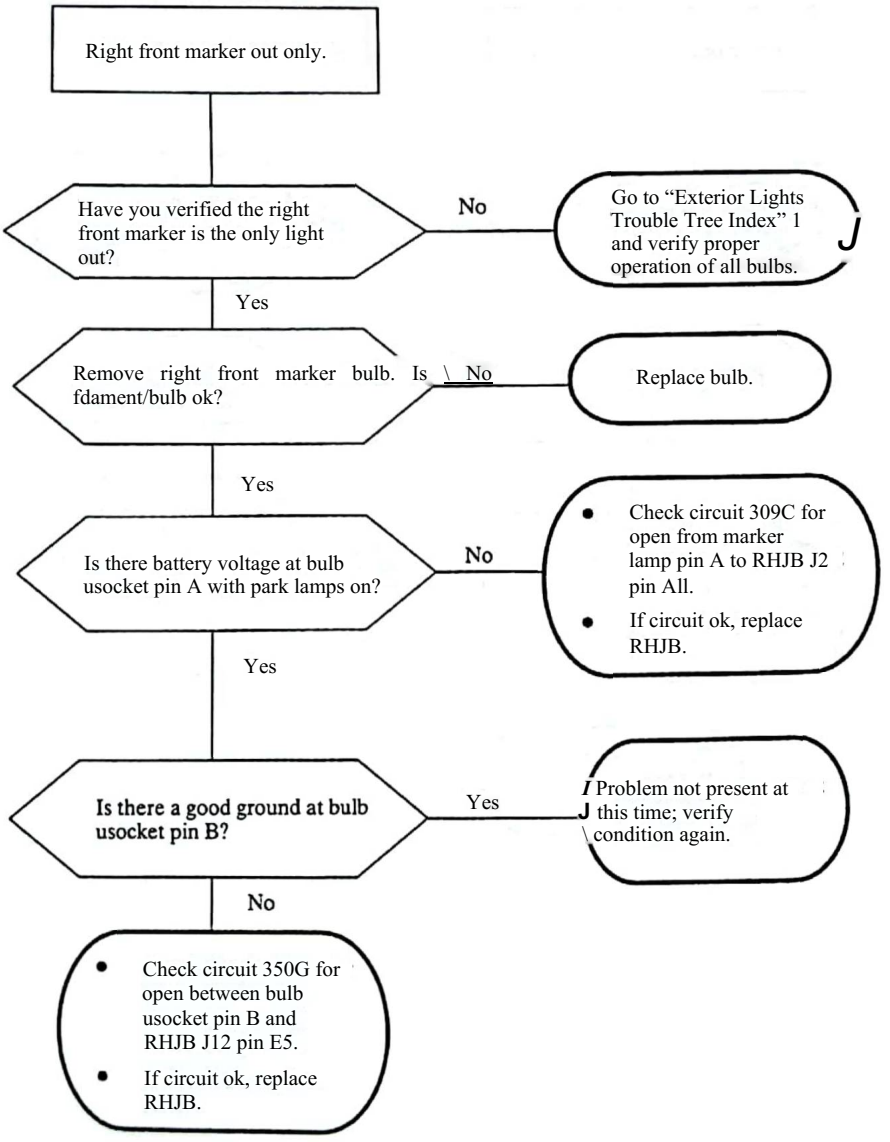
Right front marker out only.
Have you verified the right front marker is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" 1 and verify proper operation of all bulbs.
Yes
Remove right front marker bulb. Is fdament/bulb ok?
No
Replace bulb.
Yes
Is there battery voltage at bulb usocket pin A with park lamps on?
No
Check circuit 309C for open from marker lamp pin A to RHJB J2 pin All.
If circuit ok, replace RHJB.
Yes
Is there a good ground at bulb usocket pin B?
Yes
Problem not present at this time; verify condition again.
No
Check circuit 350G for open between bulb usocket pin B and RHJB J12 pin E5.
If circuit ok, replace RHJB.

CamScanner

RIGHT FRONT TURN SIGNALOUT ONLY

CHART 5

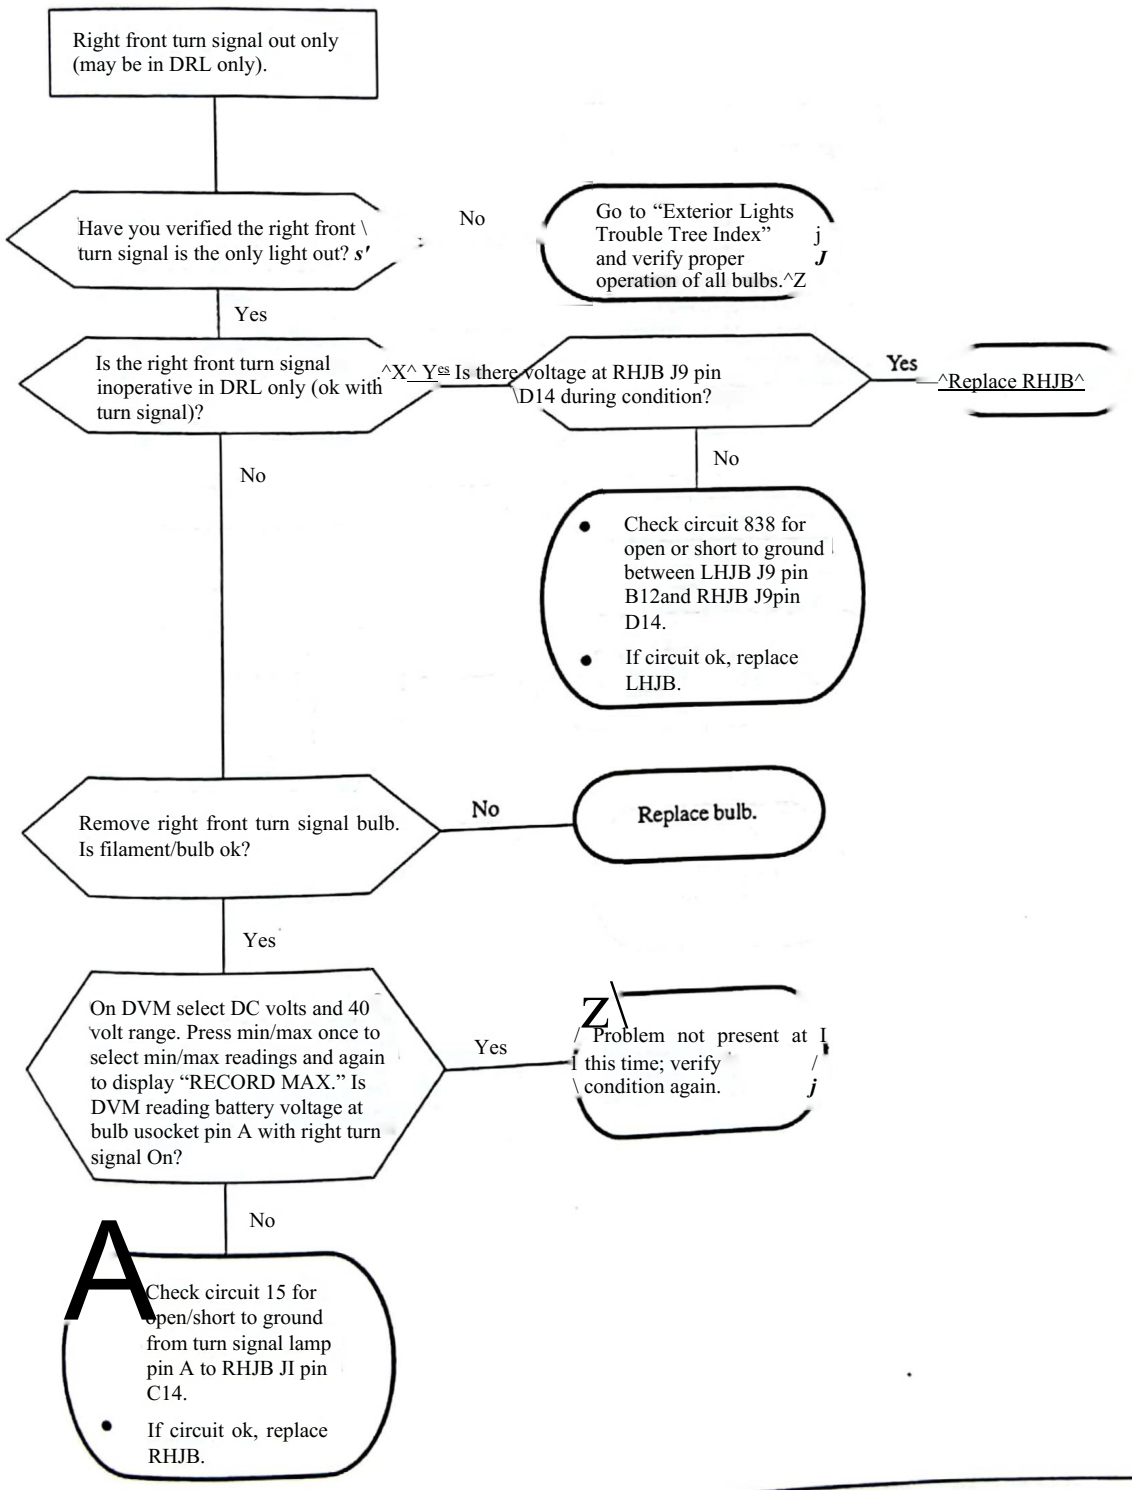
Right front turn signal out only (may be in DRL only).
Have you verified the right front \ turn signal is the only light out? s'
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.^Z
Yes
Is the right front turn signal inoperative in DRL only (ok with turn signal)?
^X^ Yes
Is there voltage at RHJB J9 pin \D14 during condition?
Yes
^Replace RHJB^
No
No
Check circuit 838 for open or short to ground between LHJB J9 pin B12and RHJB J9pin D14.
If circuit ok, replace LHJB.
Remove right front turn signal bulb. Is filament/bulb ok?
No
Replace bulb.
Yes
On DVM select DC volts and 40 volt range. Press min/max once to select min/max readings and again to display "RECORD MAX." Is DVM reading battery voltage at bulb usocket pin A with right turn signal On?
Yes
Problem not present at this time; verify condition again.
No
A
Check circuit 15 for open/short to ground from turn signal lamp pin A to RHJB JI pin C14.
If circuit ok, replace RHJB.

CamScanner

RIGHT FRONT PARK LAMP OUT ONLY

CHART 6

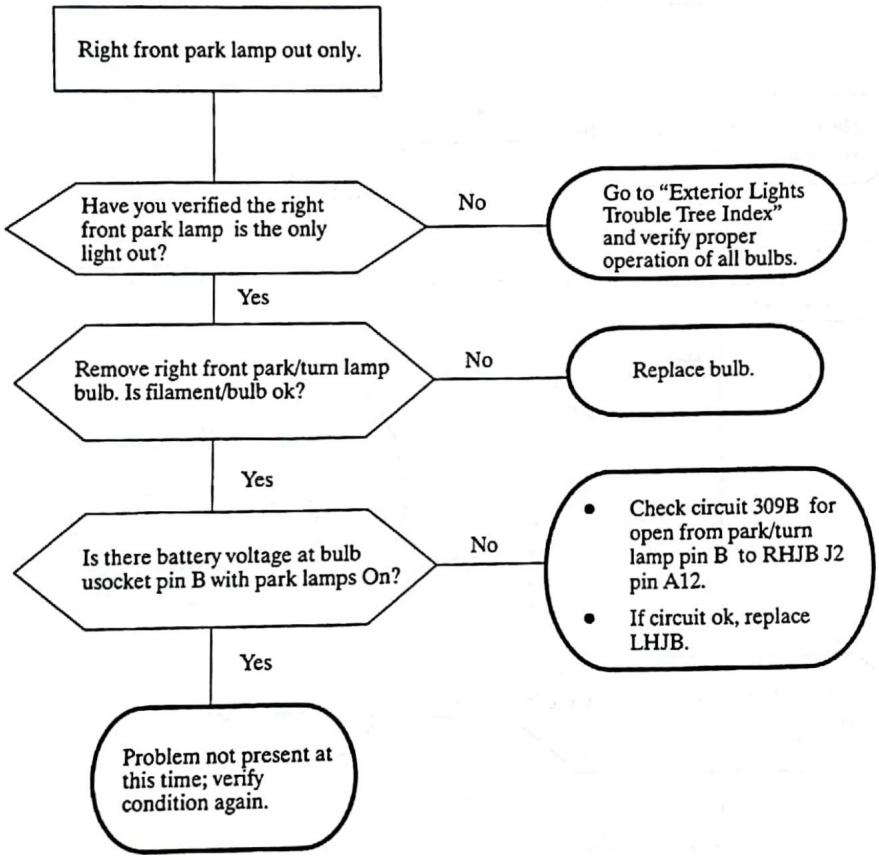
Right front park lamp out only.
Have you verified the right front park lamp is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove right front park/turn lamp bulb. Is filament/bulb ok?
No
Replace bulb.
Yes
Is there battery voltage at bulb usocket pin B with park lamps On?
No
• Check circuit 309B for open from park/turn lamp pin B to RHJB J2 pin A12.
• If circuit ok, replace LHJB.
Yes
Problem not present at this time; verify condition again.

CamScanner

LEFT REAR MARKER OUT ONLY

CHART 7

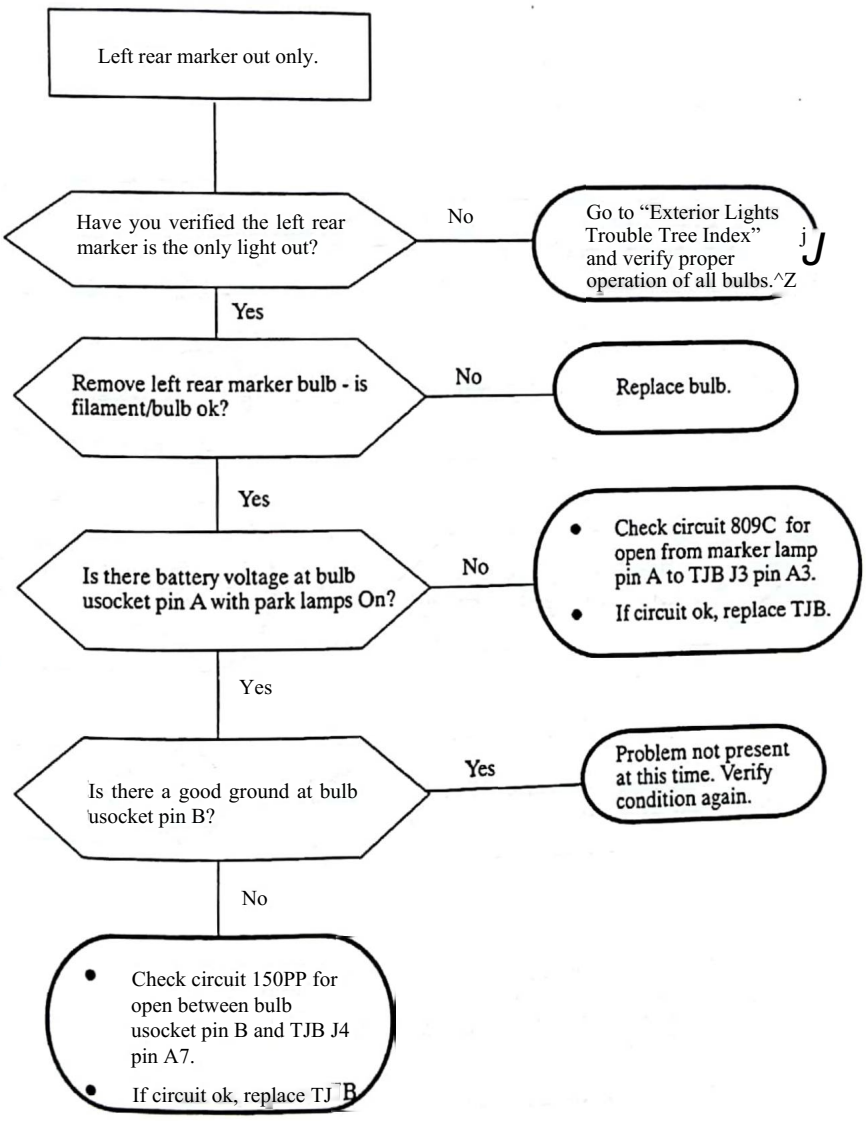
Left rear marker out only.
Have you verified the left rear marker is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove left rear marker bulb - is filament/bulb ok?
No
Replace bulb.
Yes
Is there battery voltage at bulb usocket pin A with park lamps On?
No
Check circuit 809C for open from marker lamp pin A to TJB J3 pin A3.
If circuit ok, replace TJB.
Yes
Is there a good ground at bulb usocket pin B?
Yes
Problem not present at this time. Verify condition again.
No
Check circuit 150PP for open between bulb usocket pin B and TJB J4 pin A7.
If circuit ok, replace TJB

CamScanner

RIGHTREAR MARKER OUTONLY

CHART 8

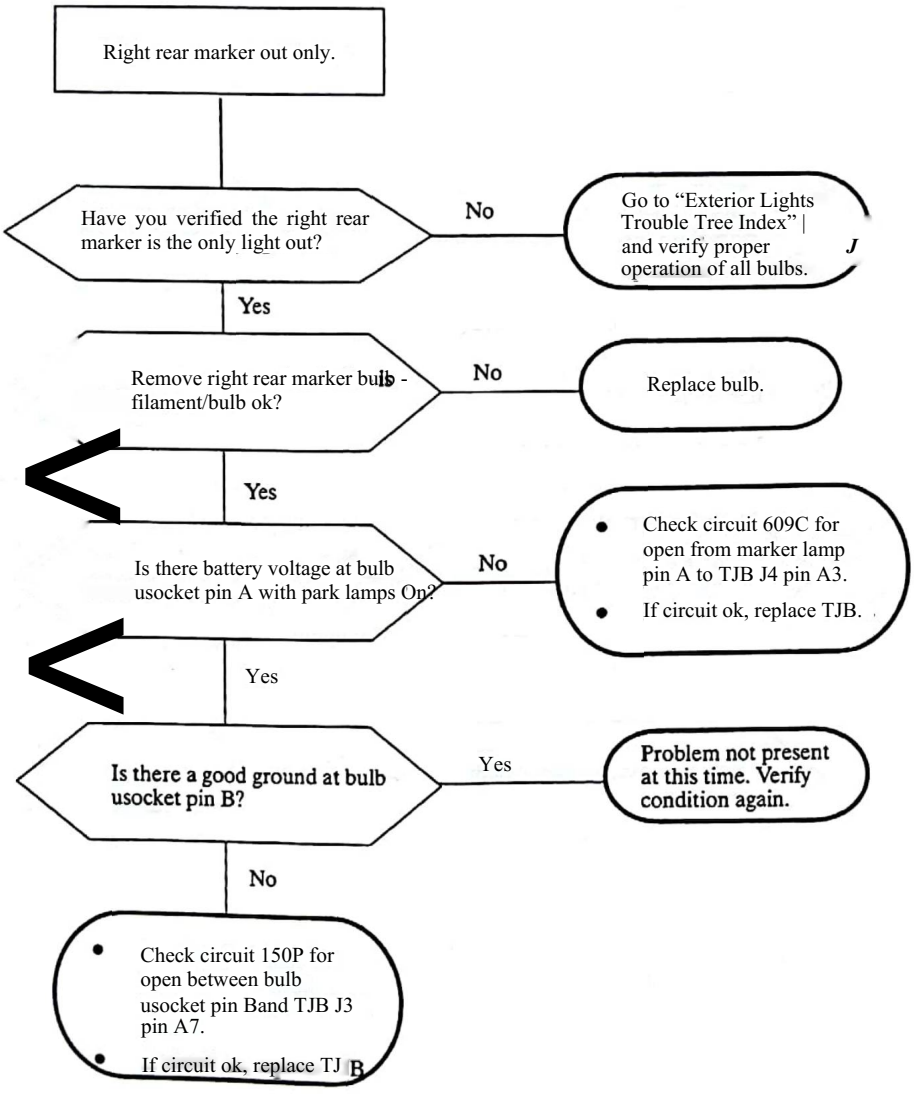
Right rear marker out only.
Have you verified the right rear marker is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove right rear marker bulb - filament/bulb ok?
No
Replace bulb.
Yes
Is there battery voltage at bulb usocket pin A with park lamps On?
No
Check circuit 609C for open from marker lamp pin A to TJB J4 pin A3.
If circuit ok, replace TJB.
Yes
Is there a good ground at bulb usocket pin B?
Yes
Problem not present at this time. Verify condition again.
No
Check circuit 150P for open between bulb usocket pin Band TJB J3 pin A7.
If circuit ok, replace TJ B

CamScanner

3

LEFT REAR PARK LAMP OUT ONLY

CHART 9

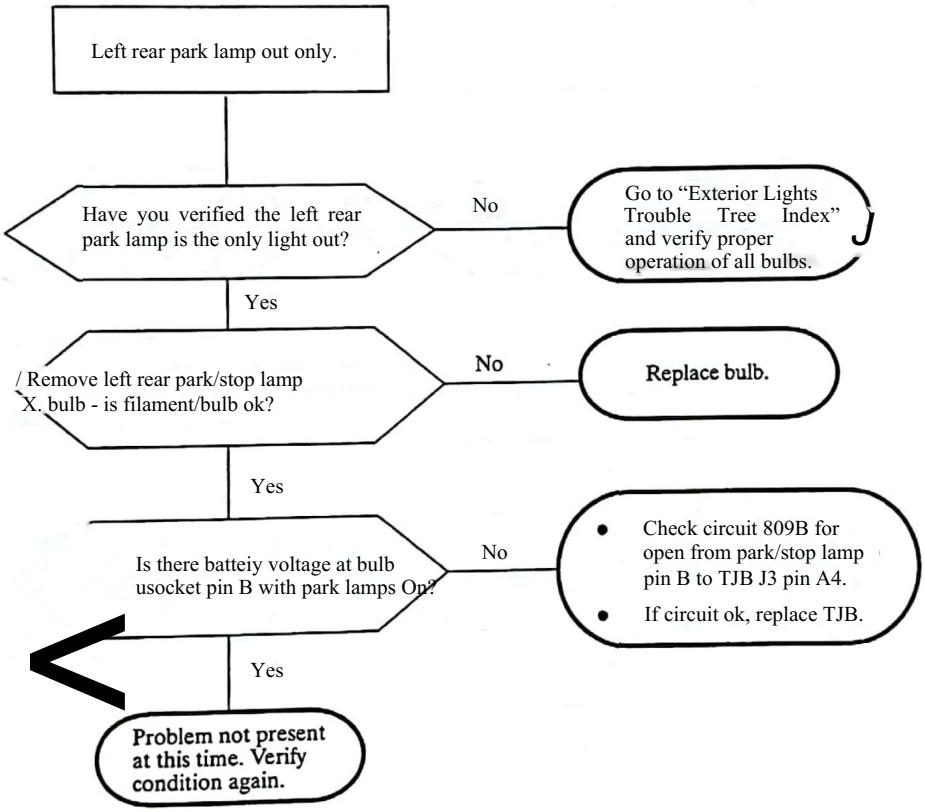
Left rear park lamp out only.
Have you verified the left rear park lamp is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
/ Remove left rear park/stop lamp X. bulb - is filament/bulb ok?
No
Replace bulb.
Yes
Is there batteiy voltage at bulb usocket pin B with park lamps On?
No
Check circuit 809B for open from park/stop lamp pin B to TJB J3 pin A4.
If circuit ok, replace TJB.
Yes
Problem not present at this time. Verify condition again.

CamScanner

RIGHT REAR PARK LAMP OUT ONLY

CHART 10

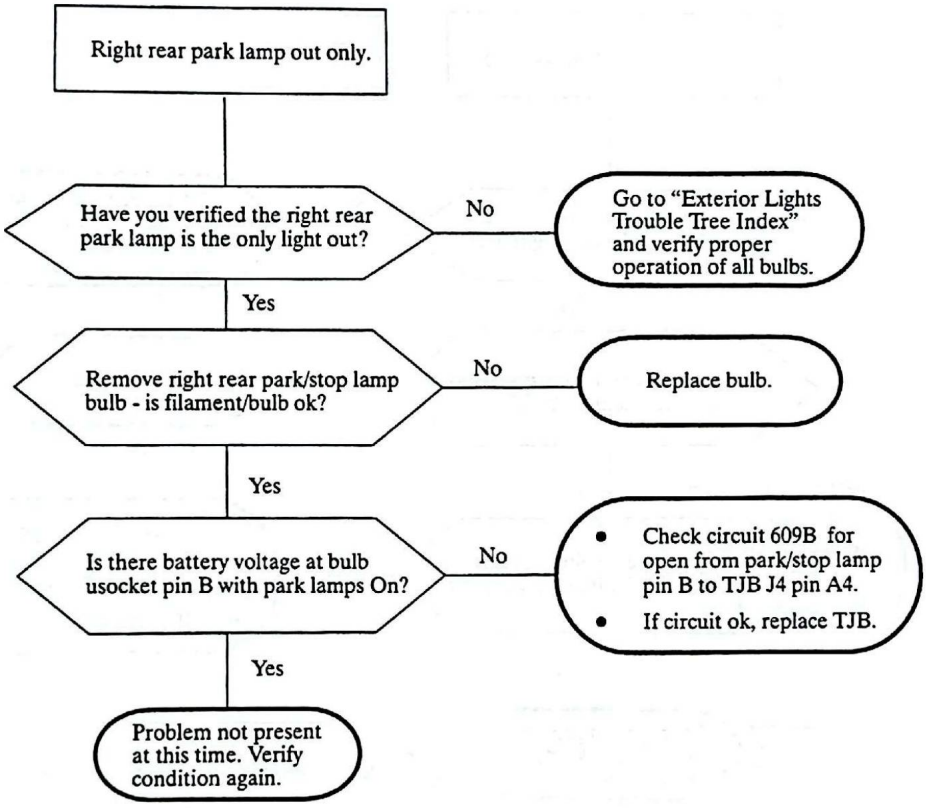
Right rear park lamp out only.
Have you verified the right rear park lamp is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove right rear park/stop lamp bulb - is filament/bulb ok?
No
Replace bulb.
Yes
Is there battery voltage at bulb usocket pin B with park lamps On?
No
• Check circuit 609B for open from park/stop lamp pin B to TJB J4 pin A4.
• If circuit ok, replace TJB.
Yes
Problem not present at this time. Verify condition again.

CamScanner

LEFT REAR LICENSE LAMP OUT ONLY

CHART 11

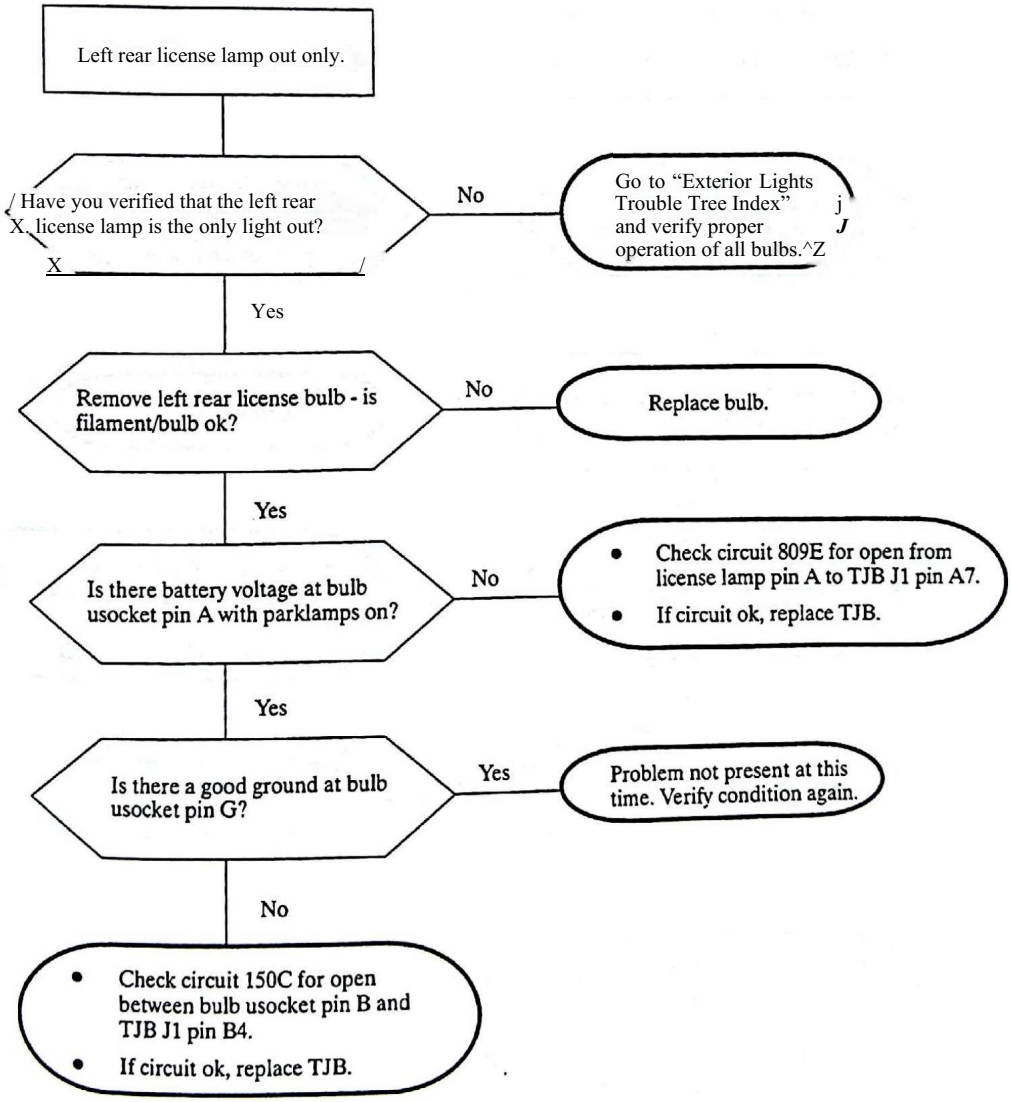
Left rear license lamp out only.
Have you verified that the left rear license lamp is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove left rear license bulb - is filament/bulb ok?
No
Replace bulb.
Yes
Is there battery voltage at bulb usocket pin A with parklamps on?
No
Check circuit 809E for open from license lamp pin A to TJB J1 pin A7.
If circuit ok, replace TJB.
Yes
Is there a good ground at bulb usocket pin G?
Yes
Problem not present at this time. Verify condition again.
No
Check circuit 150C for open between bulb usocket pin B and TJB J1 pin B4.
If circuit ok, replace TJB.

CamScanner

RIGHT REAR LICENSE LAMP OUT ONLY

CHART 12

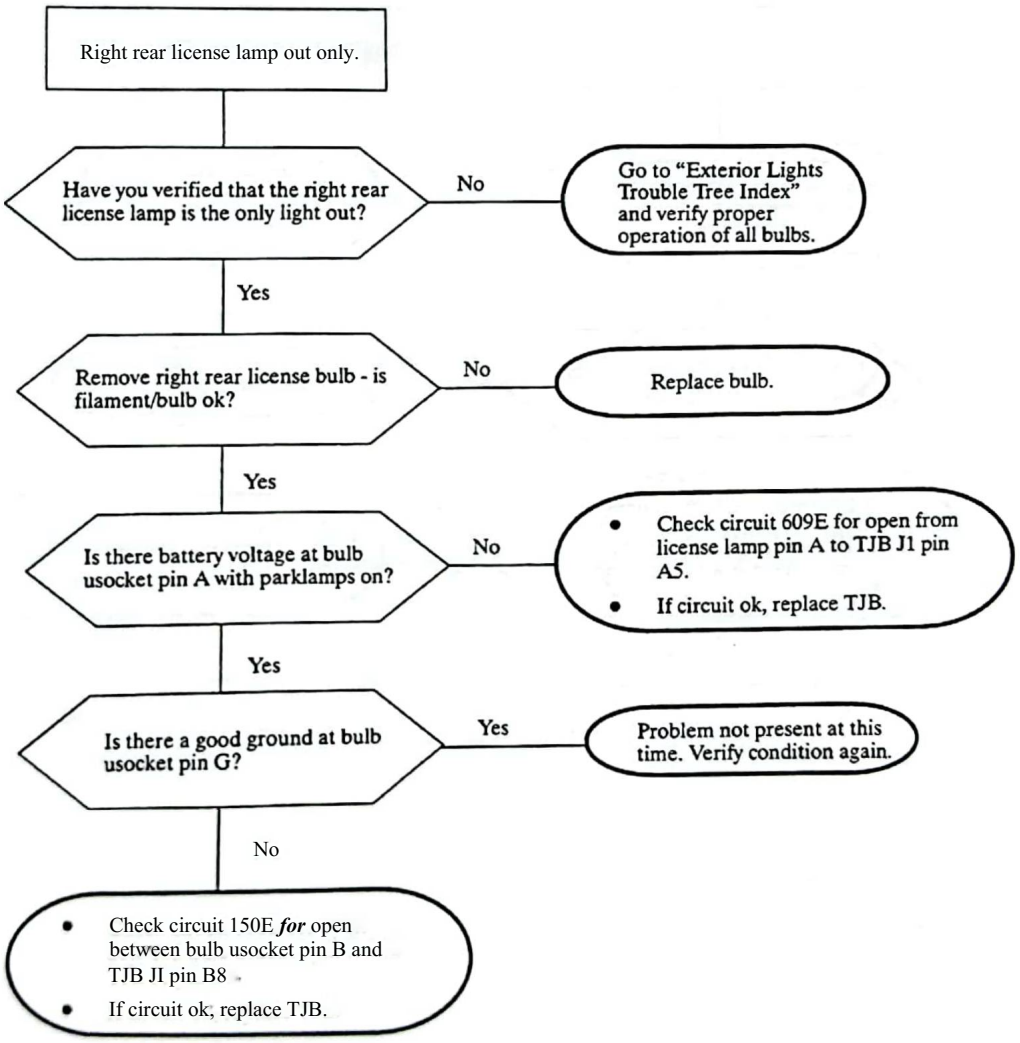
Right rear license lamp out only.
Have you verified that the right rear license lamp is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove right rear license bulb - is filament/bulb ok?
No
Replace bulb.
Yes
Is there battery voltage at bulb usocket pin A with parklamps on?
No
• Check circuit 609E for open from license lamp pin A to TJB J1 pin A5.
• If circuit ok, replace TJB.
Yes
Is there a good ground at bulb usocket pin G?
Yes
Problem not present at this time. Verify condition again.
No
• Check circuit 150E *for* open between bulb usocket pin B and TJB JI pin B8
• If circuit ok, replace TJB.

CamScanner

LEFT REAR STOP LAMP OUT ONLY

CHART 13

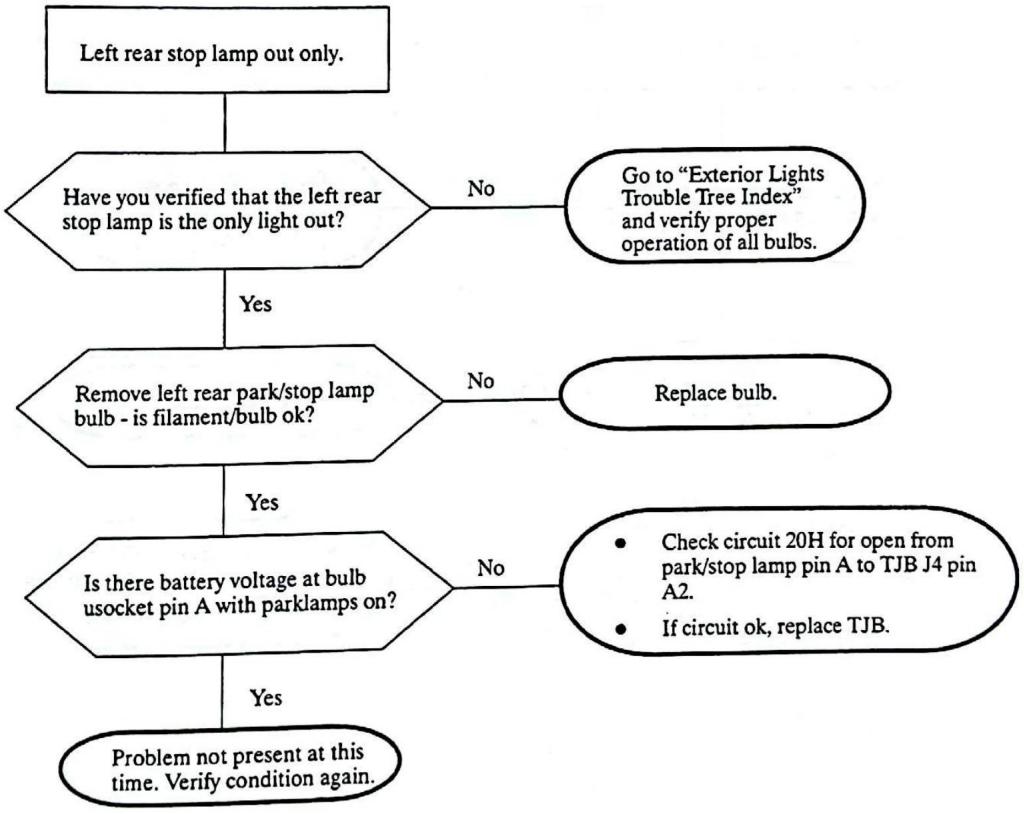
Left rear stop lamp out only.
Have you verified that the left rear stop lamp is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove left rear park/stop lamp bulb - is filament/bulb ok?
No
Replace bulb.
Yes
Is there battery voltage at bulb usocket pin A with parklamps on?
No
• Check circuit 20H for open from park/stop lamp pin A to TJB J4 pin A2.
• If circuit ok, replace TJB.
Yes
Problem not present at this time. Verify condition again.

CamScanner

RIGHT REAR STOP LAMP OUT ONLY

CHART 14

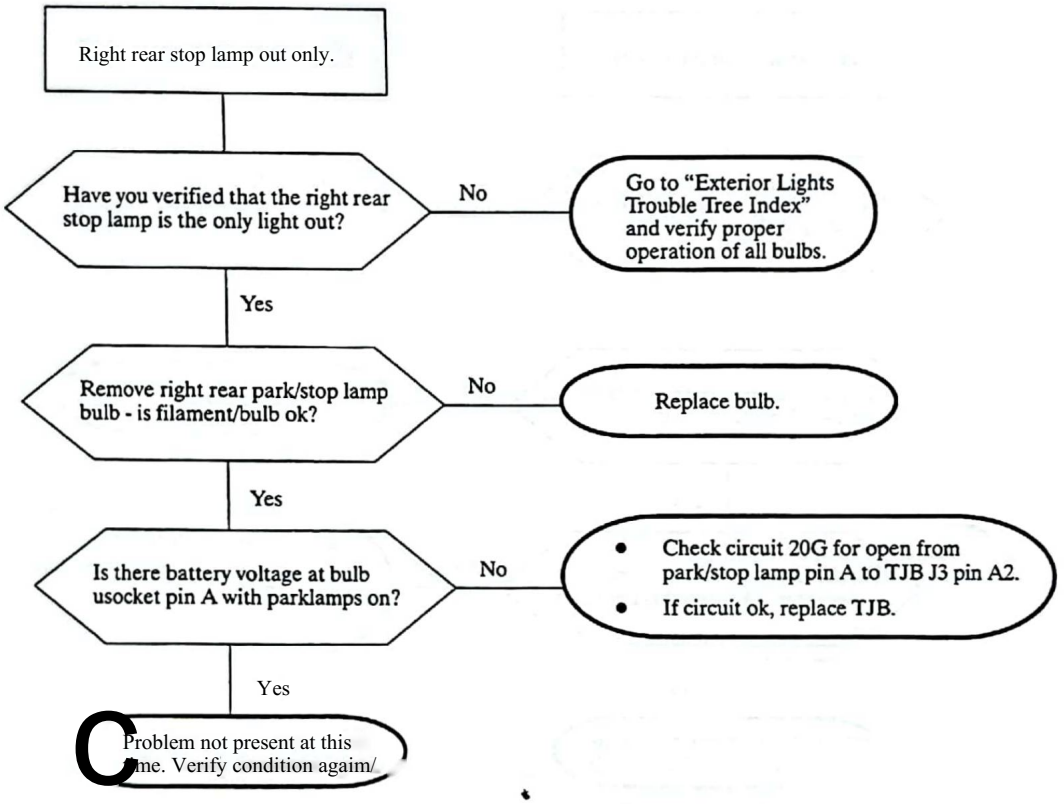
Right rear stop lamp out only.
Have you verified that the right rear stop lamp is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove right rear park/stop lamp bulb - is filament/bulb ok?
No
Replace bulb.
Yes
Is there battery voltage at bulb usocket pin A with parklamps on?
No
• Check circuit 20G for open from park/stop lamp pin A to TJB J3 pin A2.
• If circuit ok, replace TJB.
Yes
Problem not present at this me. Verify condition again/

CamScanner

H CENTER HIGH MOUNTED STOP LAMP (CHMSL) INOPERATIVE (LEFT REAR AND RIGHT REAR STOP LAMPS OK)

CHART 15

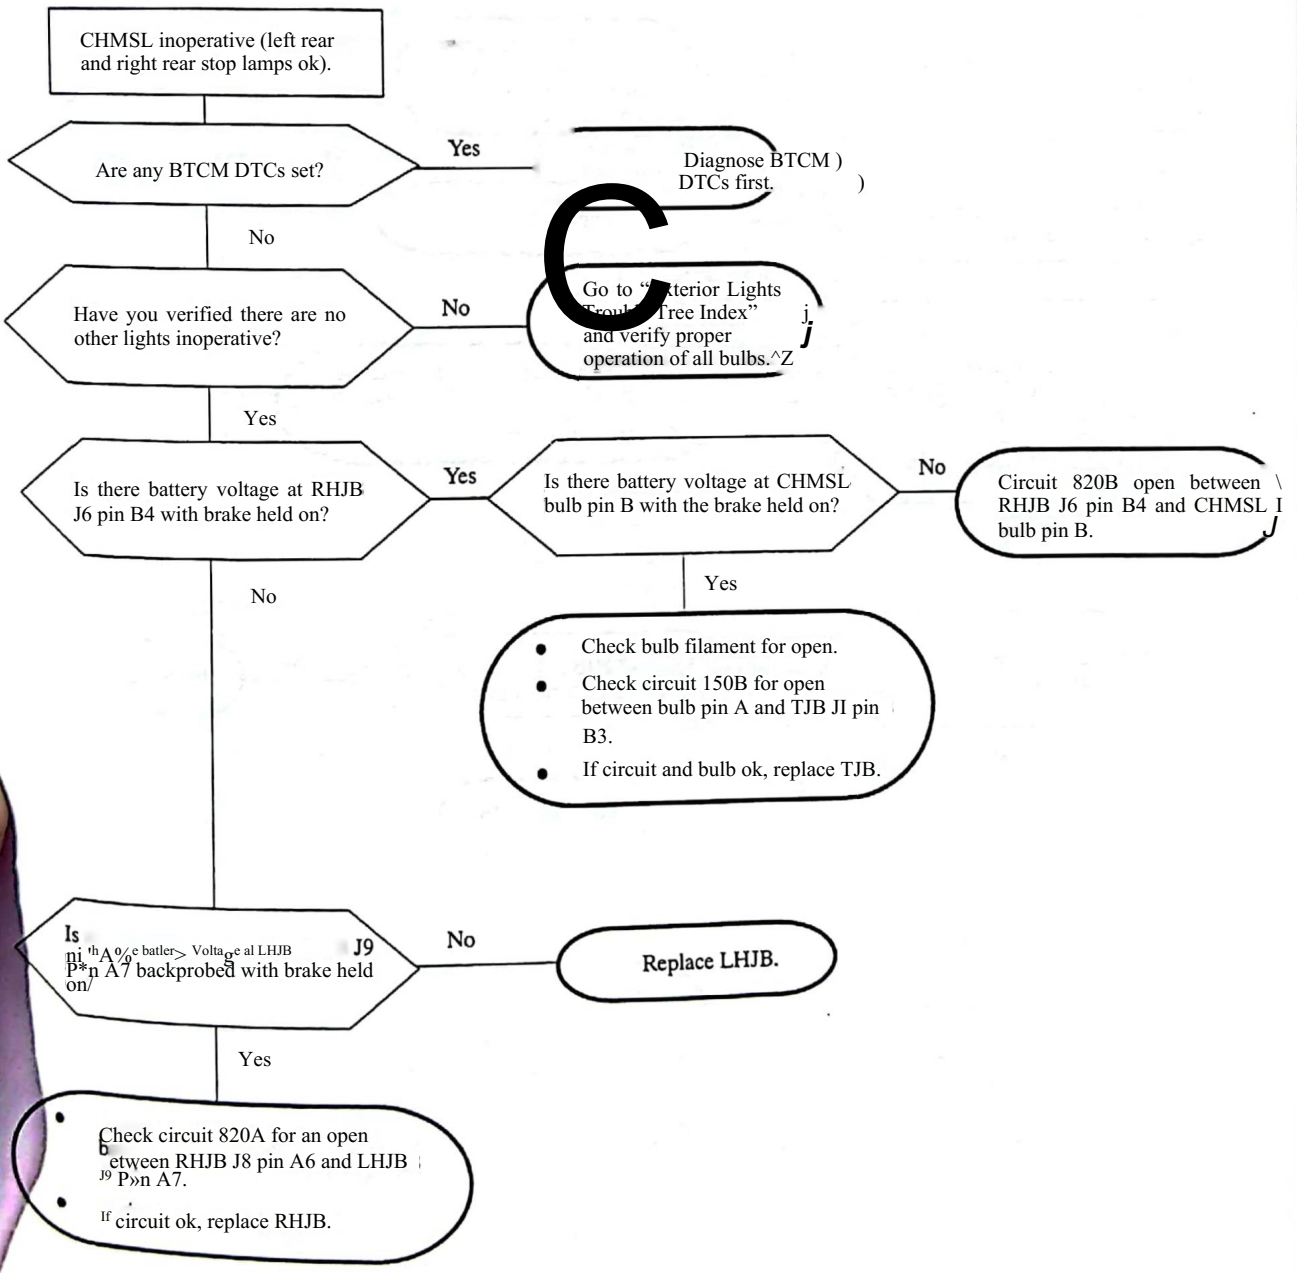
CHMSL inoperative (left rear and right rear stop lamps ok).
Are any BTCM DTCs set?
Yes
Diagnose BTCM DTCs first.
No
Have you verified there are no other lights inoperative?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Is there battery voltage at RHJB J6 pin B4 with brake held on?
Yes
Is there battery voltage at CHMSL bulb pin B with the brake held on?
No
Circuit 820B open between RHJB J6 pin B4 and CHMSL bulb pin B.
Yes
Check bulb filament for open.
Check circuit 150B for open between bulb pin A and TJB JI pin B3.
If circuit and bulb ok, replace TJB.
No
Is battery voltage at LHJB J9 P*n A7 backprobed with brake held on/
No
Replace LHJB.
Yes
Check circuit 820A for an open between RHJB J8 pin A6 and LHJB J9 P»n A7.
If circuit ok, replace RHJB.

CamScanner

LEFT REAR TURN SIGNAL OUT ONLY

CHART 16

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap" installation in this manual.)

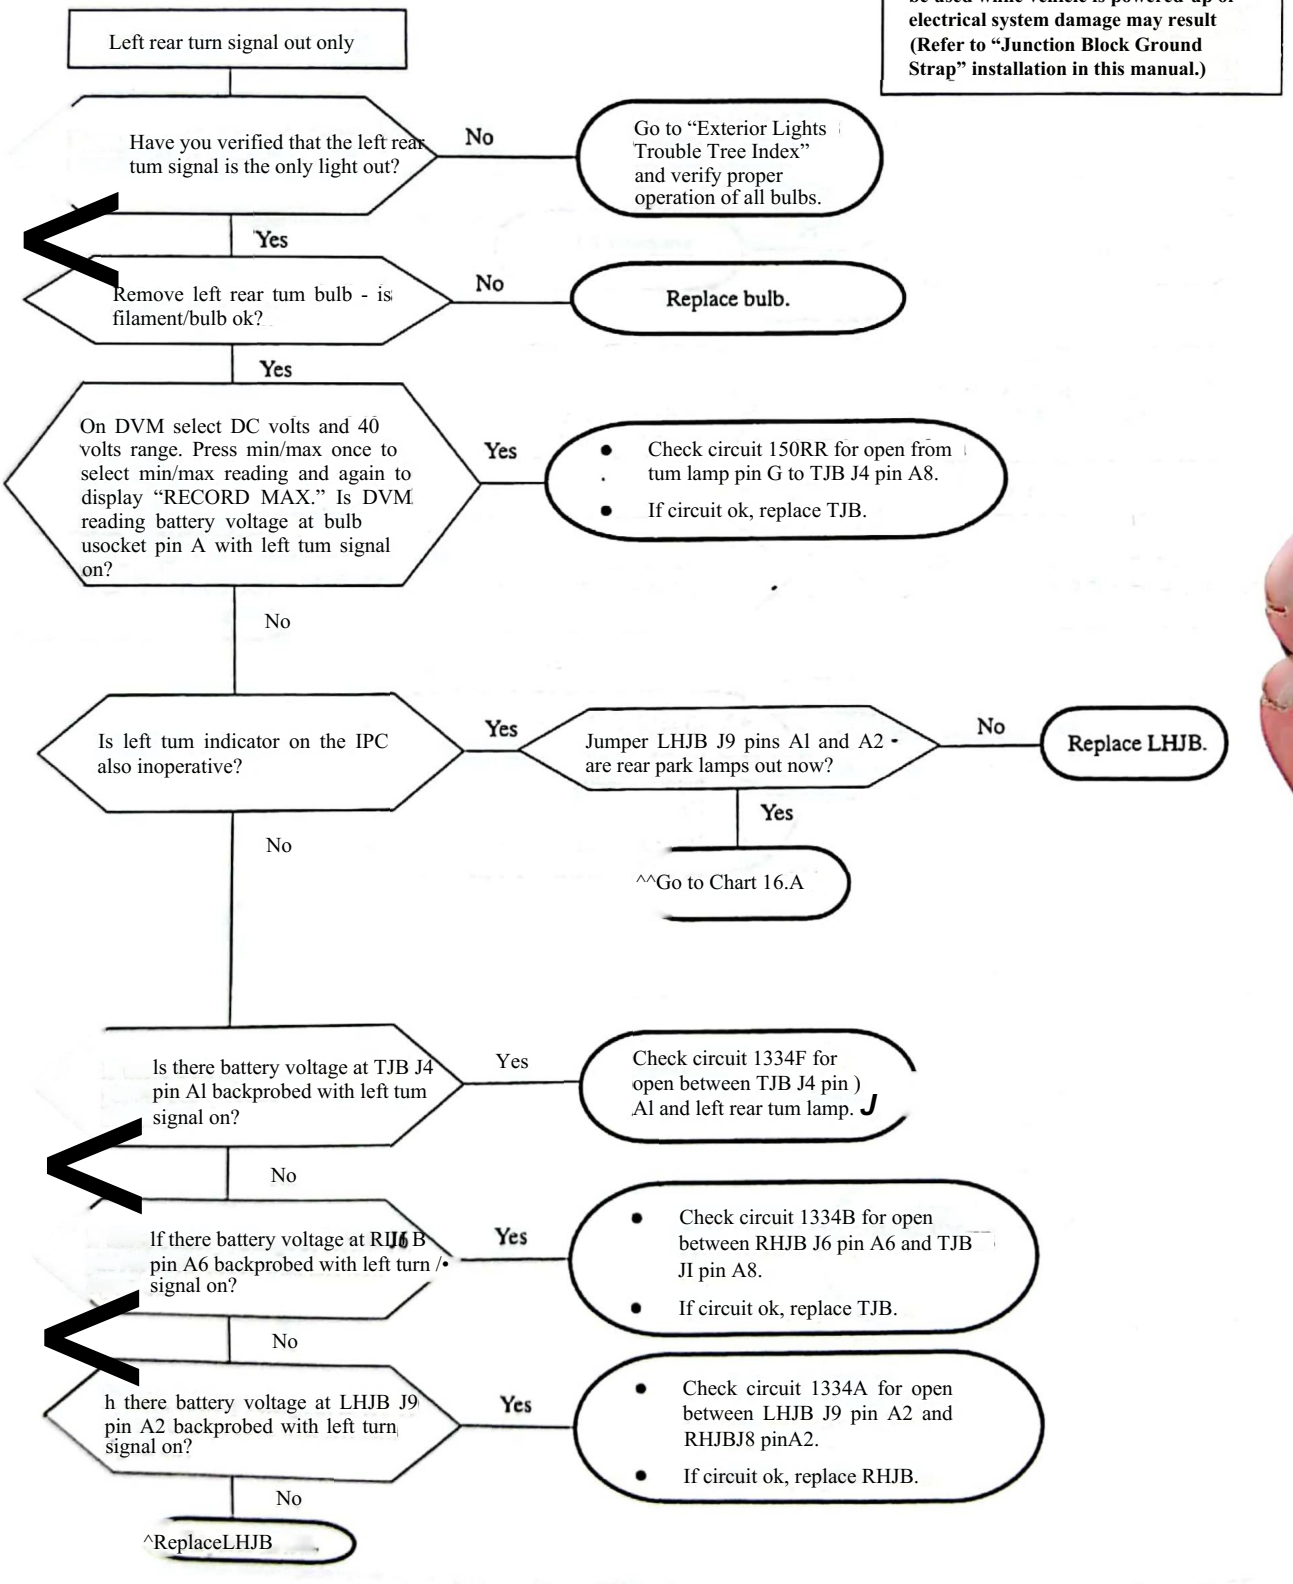
Left rear turn signal out only
Have you verified that the left rear tum signal is the only light out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Remove left rear tum bulb - is filament/bulb ok?
No
Replace bulb.
Yes
On DVM select DC volts and 40 volts range. Press min/max once to select min/max reading and again to display "RECORD MAX." Is DVM reading battery voltage at bulb usocket pin A with left tum signal on?
Yes
Check circuit 150RR for open from tum lamp pin G to TJB J4 pin A8.
If circuit ok, replace TJB.
No
Is left tum indicator on the IPC also inoperative?
Yes
Jumper LHJB J9 pins Al and A2 - are rear park lamps out now?
No
Replace LHJB.
Yes
^^Go to Chart 16.A
No
ls there battery voltage at TJB J4 pin Al backprobed with left tum signal on?
Yes
Check circuit 1334F for open between TJB J4 pin) Al and left rear tum lamp.
No
lf there battery voltage at RHJB pin A6 backprobed with left turn signal on?
Yes
Check circuit 1334B for open between RHJB J6 pin A6 and TJB JI pin A8.
If circuit ok, replace TJB.
No
h there battery voltage at LHJB J9 pin A2 backprobed with left turn signal on?
Yes
Check circuit 1334A for open between LHJB J9 pin A2 and RHJBJ8 pinA2.
If circuit ok, replace RHJB.
No
^ReplaceLHJB

CamScanner

CHART 16A

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

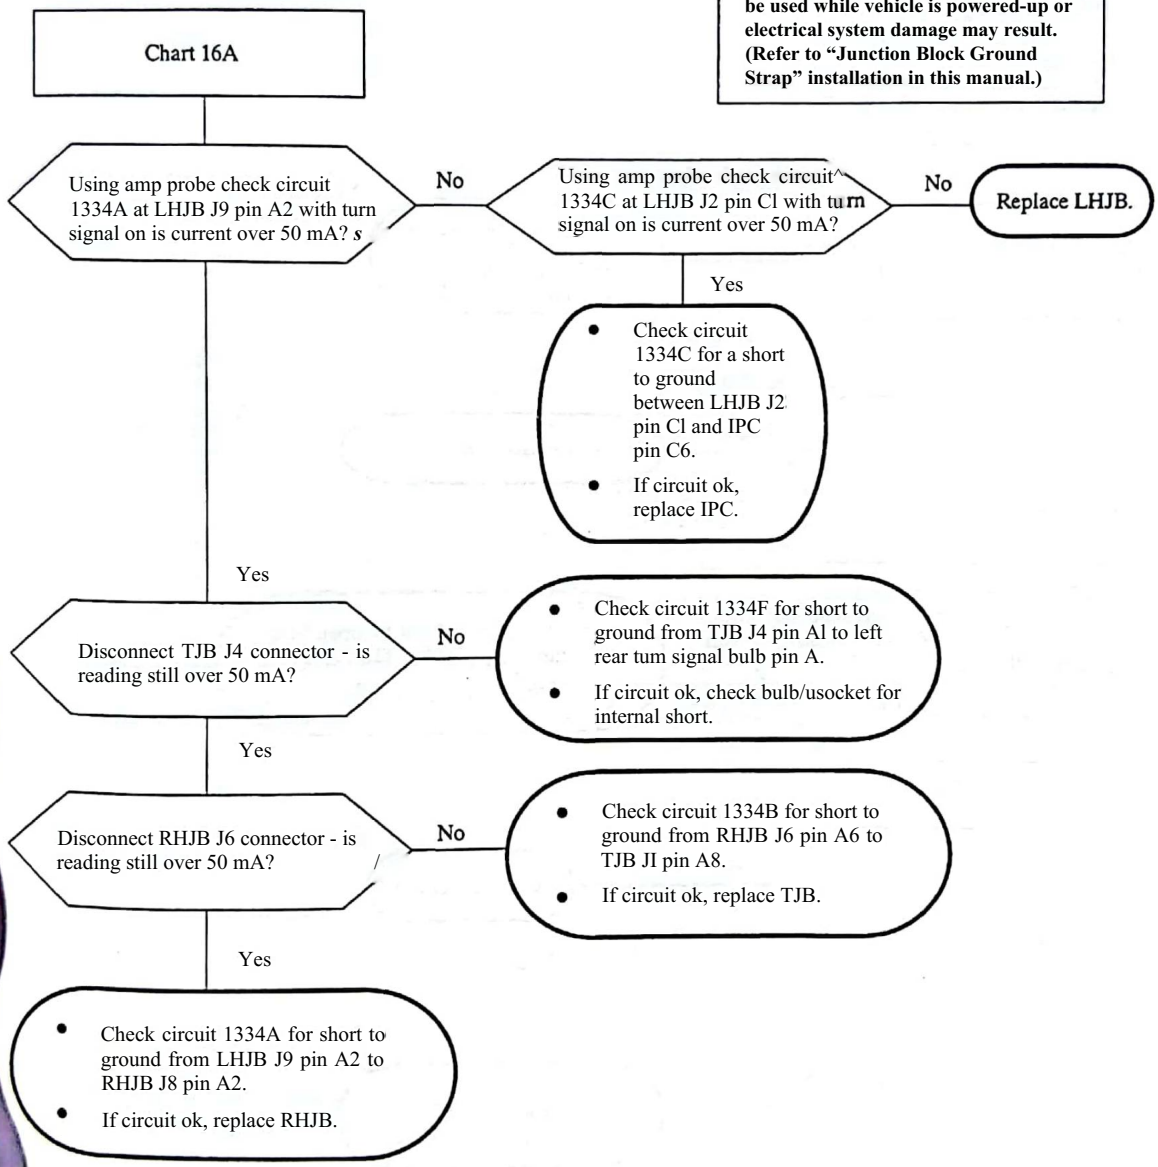
Chart 16A
Using amp probe check circuit 1334A at LHJB J9 pin A2 with turn signal on is current over 50 mA?
No
Using amp probe check circuit 1334C at LHJB J2 pin Cl with turn signal on is current over 50 mA?
No
Replace LHJB.
Yes
Check circuit 1334C for a short to ground between LHJB J2 pin Cl and IPC pin C6.
If circuit ok, replace IPC.
Yes
Disconnect TJB J4 connector - is reading still over 50 mA?
No
Check circuit 1334F for short to ground from TJB J4 pin Al to left rear tum signal bulb pin A.
If circuit ok, check bulb/usocket for internal short.
Yes
Disconnect RHJB J6 connector - is reading still over 50 mA?
No
Check circuit 1334B for short to ground from RHJB J6 pin A6 to TJB JI pin A8.
If circuit ok, replace TJB.
Yes
Check circuit 1334A for short to ground from LHJB J9 pin A2 to RHJB J8 pin A2.
If circuit ok, replace RHJB.

CamScanner

RIGHT REAR TURN SIGNAL OUT ONLY

CHART 17

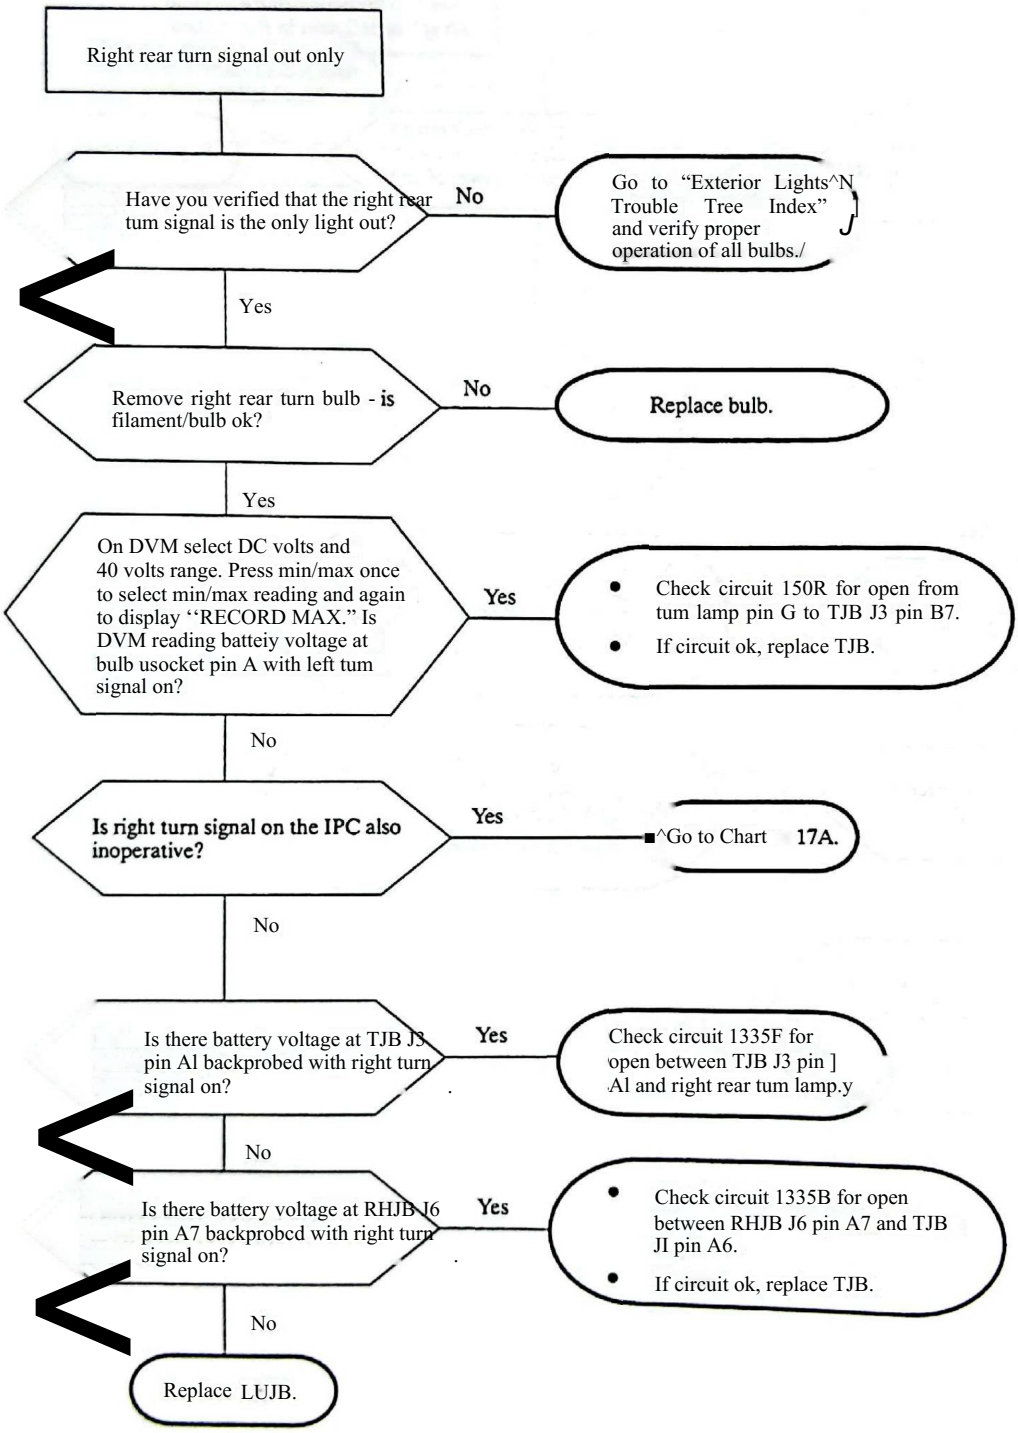
Right rear turn signal out only
Have you verified that the right rear tum signal is the only light out?
No
Go to "Exterior Lights^N Trouble Tree Index" and verify proper operation of all bulbs./
Yes
Remove right rear turn bulb - is filament/bulb ok?
No
Replace bulb.
Yes
On DVM select DC volts and 40 volts range. Press min/max once to select min/max reading and again to display ''RECORD MAX." Is DVM reading batteiy voltage at bulb usocket pin A with left tum signal on?
Yes
Check circuit 150R for open from tum lamp pin G to TJB J3 pin B7.
If circuit ok, replace TJB.
No
Is right turn signal on the IPC also inoperative?
Yes
^Go to Chart 17A.
No
Is there battery voltage at TJB J3 pin Al backprobed with right turn signal on?
Yes
Check circuit 1335F for open between TJB J3 pin] Al and right rear tum lamp.y
No
Is there battery voltage at RHJB J6 pin A7 backprobcd with right turn signal on?
Yes
Check circuit 1335B for open between RHJB J6 pin A7 and TJB JI pin A6.
If circuit ok, replace TJB.
No
Replace LUJB.

CamScanner

CHART17A

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Chart 17A

Jumper LHJB J9 pins A1 and A4 - are rear park lamps inop now?

No → C Replace LHJB.

Yes

Using the amp probe check ' circuit 1335A at RHJB J8 pin A4 with right turn signal on, is the cunent over 50 mA?

Yes → Disconnect LHJB JI connector - is reading still over 50 mA?

Yes →
- Check circuit 1335C for short to ground from LHJB JI pin All to IPC pin C8.
- If circuit ok, replace IPC.

No →
- Check circuit 1335A for short to ground from RHJB J8 pin A4 to LHJBJ9 pinA4.
- If circuit ok, replace LHJB.

No

Is the reading on circuit 1335B at RHJB J6 pin A7 with the turn signal on over 50 mA?

No → Replace RHJB.

Yes

Disconnect TJB J3 connector - is reading still over 50 mA?

Yes →
- Check circuit 1335B for short to ground from RHJB J6 pin A7 to TJB JI pin A6.
- If circuit ok, replace TJB.

No

- Check circuit 1335F for short to ground from TJB J3 pin Al to right rear turn signal bulb pin A.
- If circuit ok, check bulb/usocket for internal short.

CamScanner

LEFT FRONT PARK AND TURN LAMPS OUT ONLY

CHART 18

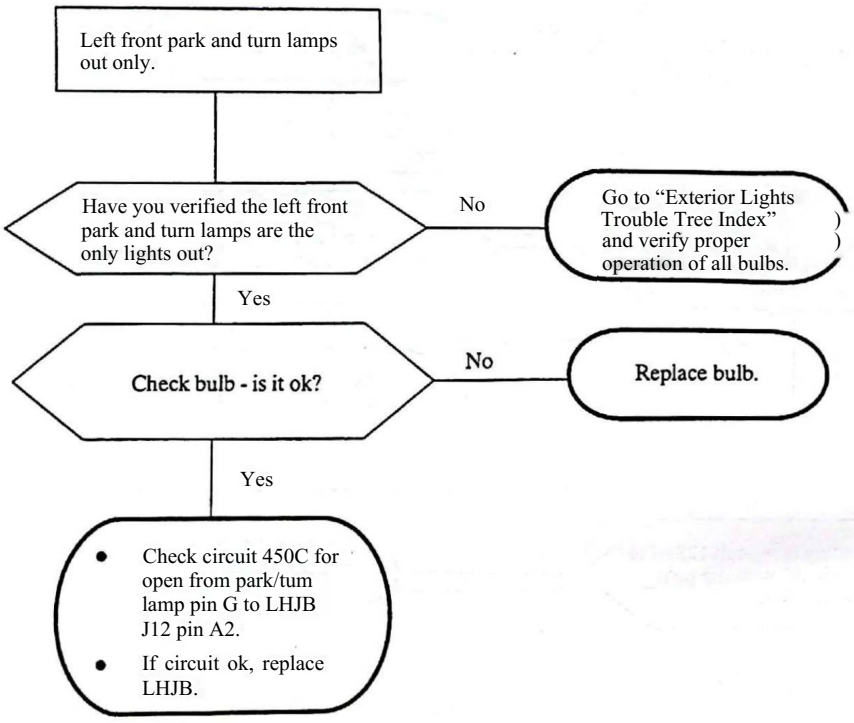
Left front park and turn lamps out only.
Have you verified the left front park and turn lamps are the only lights out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Check bulb - is it ok?
No
Replace bulb.
Yes
Check circuit 450C for open from park/tum lamp pin G to LHJB J12 pin A2.
If circuit ok, replace LHJB.

CamScanner

RIGHT FRONT PARK AND TURN LAMPS OUT ONLY

CHART 19

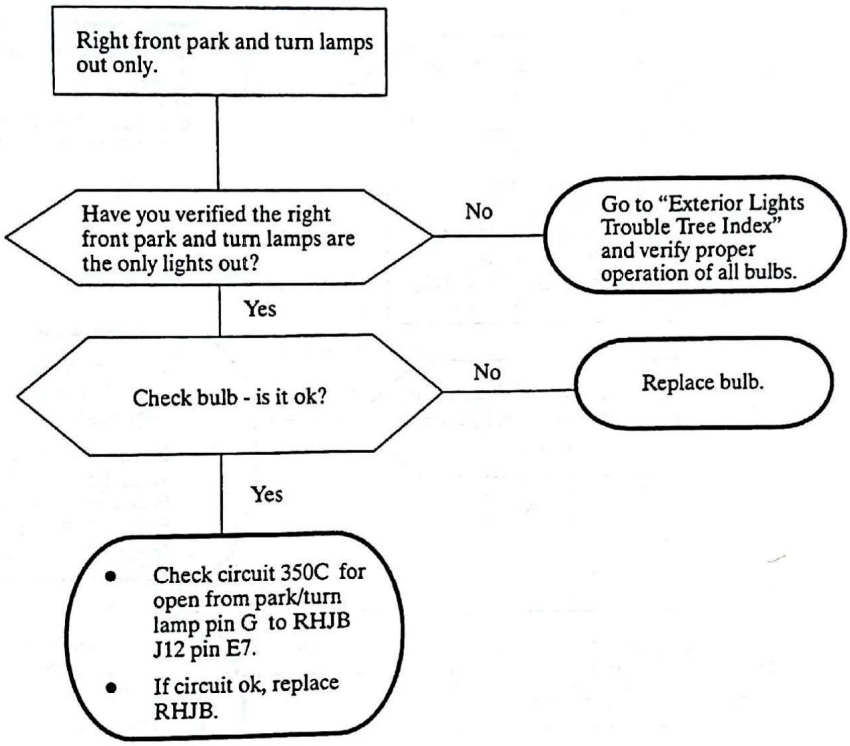
Right front park and turn lamps out only.
Have you verified the right front park and turn lamps are the only lights out?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Check bulb - is it ok?
No
Replace bulb.
Yes
Check circuit 350C for open from park/turn lamp pin G to RHJB J12 pin E7.
If circuit ok, replace RHJB.

CamScanner

LEFT FRONT PARK AND MARKER OUT

CHART 20

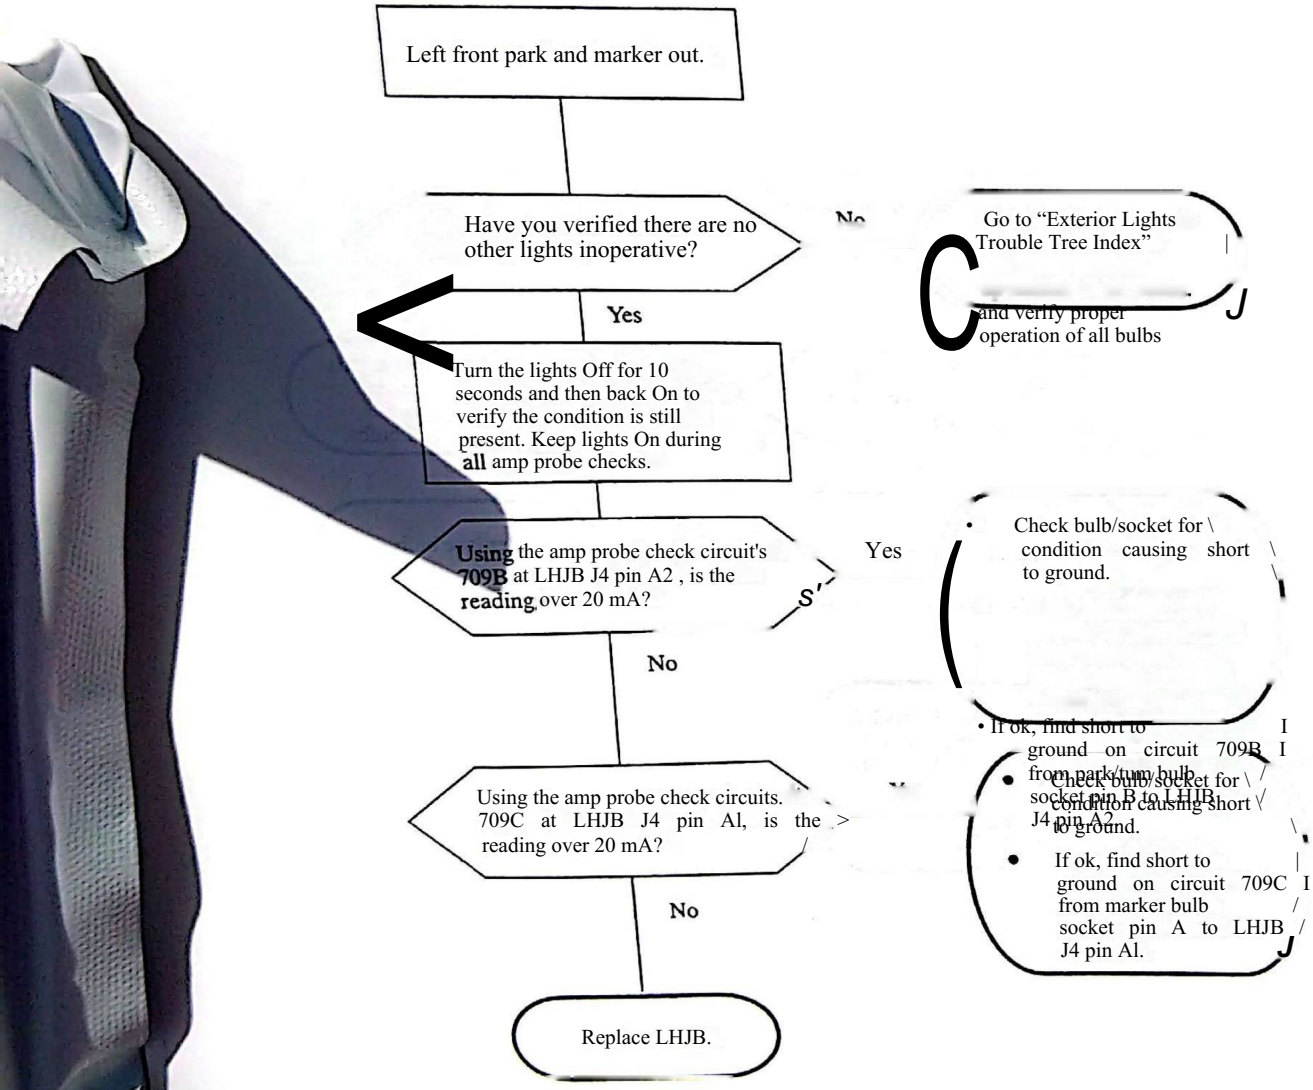
Left front park and marker out.
Have you verified there are no other lights inoperative?
No
Go to "Exterior Lights Trouble Tree Index"
and verify proper operation of all bulbs
Yes
Turn the lights Off for 10 seconds and then back On to verify the condition is still present. Keep lights On during all amp probe checks.
Using the amp probe check circuit's 709B at LHJB J4 pin A2 , is the reading over 20 mA?
Yes
Check bulb/socket for condition causing short to ground.
No
Using the amp probe check circuits. 709C at LHJB J4 pin Al, is the reading over 20 mA?
If ok, find short to ground on circuit 709B from park/turn bulb socket pin B to LHJB J4 pin A2.
If ok, find short to ground on circuit 709C from marker bulb socket pin A to LHJB J4 pin Al.
No
Replace LHJB.

RIGHT FRONT PARK AND MARKER OUT

CHART 21

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap" installation in this manual.)

Right front park and marker out.

Have you verified there are no other lights inoperative?

No → Go to "Exterior Lights Trouble Tree Index") and verify proper operation of all bulbs. ^Z J

Yes

Turn the lights Off for 10 seconds and then back on to verify the condition is still present. Keep the lights On during all amp probe checks.

Using the amp probe on circuit 309 x. at RHJB J2 pin Al 1 is the reading *y*-over 20 mA?

Yes →
- Check bulb/socket for condition causing short to ground.
- If ok, find short to ground on circuit 309C from marker bulb socket pin A to RHJB J2 pin All.

No

Using the amp probe check on circuit 309 at RHJB J2 pin A12 is the reading over 20 mA?

Yes → A
- Check bulb/socket for condition causing short to ground.
- If ok, find short to ground on circuit 309B from park/tum bulb socket pin B to RHJB J2 pin A12.

No

Using the amp probe check on circuit 309A at LHJB J9 pin A12 is the reading over 20 mA?

Yes →
- Check circuit 309Afor short to ground from LHJB J9 pin Al 2 to RHJB J8 pin A12.
- If circuit ok, replace RHJB.

No

Back probe LHJB J9 pin A12 with parklamps On is there Run 1 voltage?

Yes →
- Check circuit 309A for open between LHJB J9 pin A12 to RHJB J8 pin A12.
- If circuit ok, replace RHJB.

No

C Replace LHJB.

CamScanner

ALL PARK AND MARKERS OUT

CHART 22

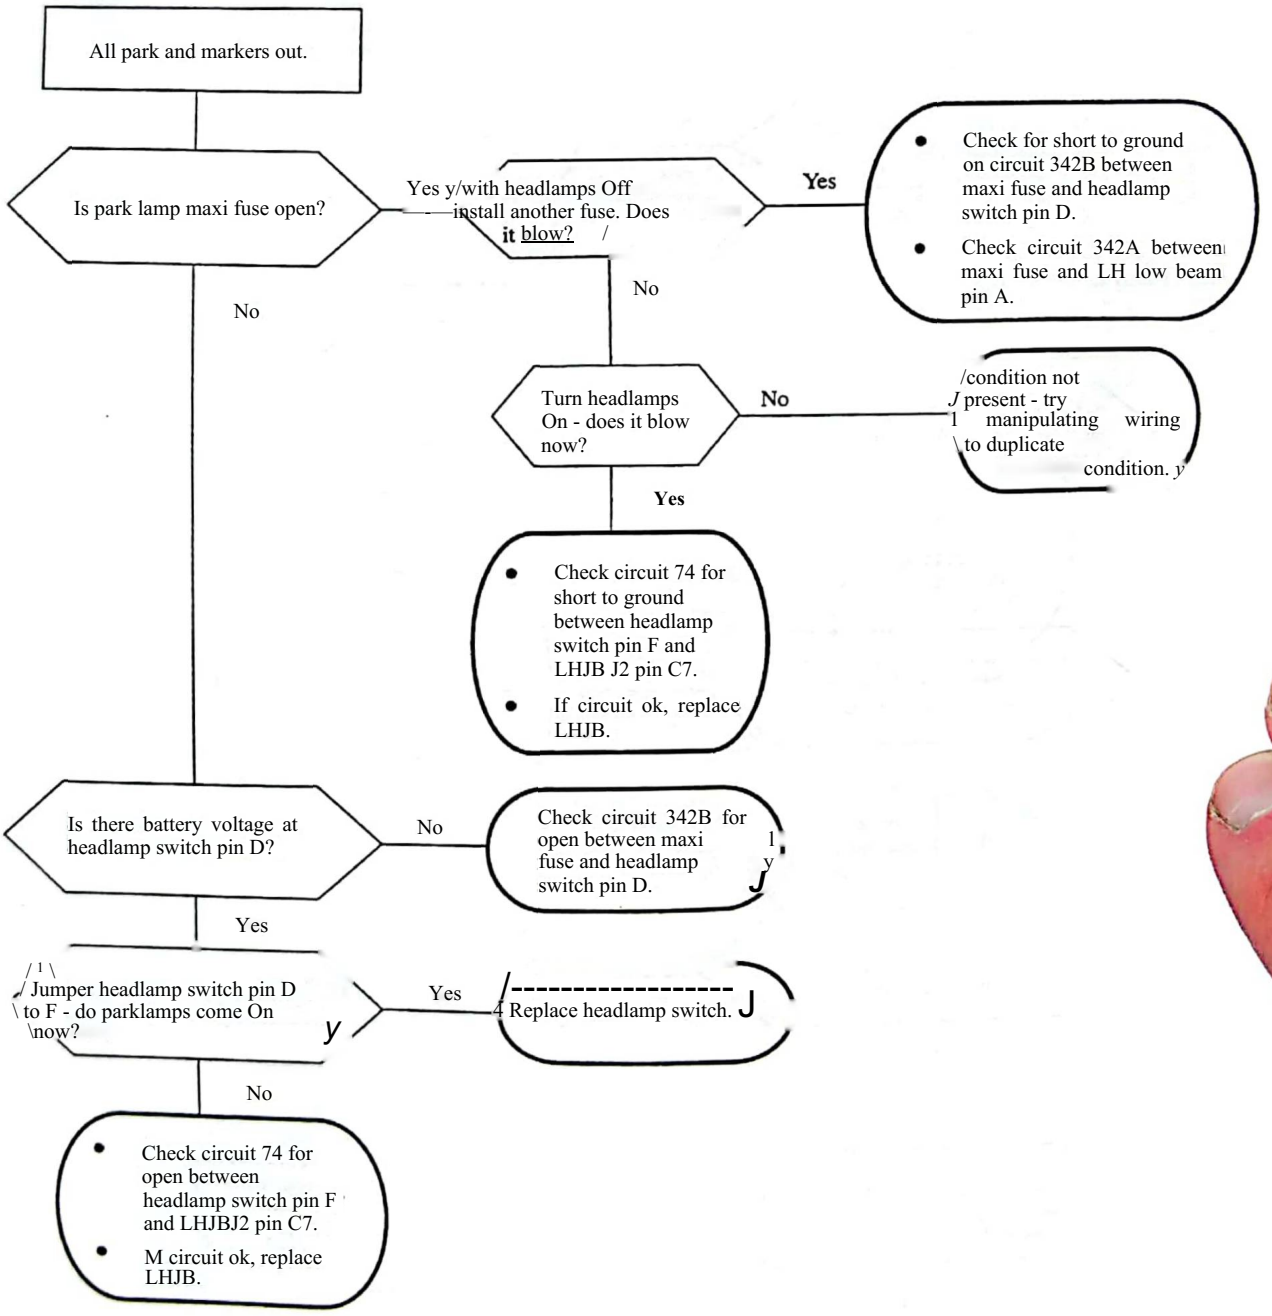
All park and markers out.
Is park lamp maxi fuse open?
Yes y/with headlamps Off install another fuse. Does it blow?
Yes
Check for short to ground on circuit 342B between maxi fuse and headlamp switch pin D.
Check circuit 342A between maxi fuse and LH low beam pin A.
No
No
Turn headlamps On - does it blow now?
No
/condition not present - try manipulating wiring to duplicate condition.
Yes
Check circuit 74 for short to ground between headlamp switch pin F and LHJB J2 pin C7.
If circuit ok, replace LHJB.
Is there battery voltage at headlamp switch pin D?
No
Check circuit 342B for open between maxi fuse and headlamp switch pin D.
Yes
Jumper headlamp switch pin D to F - do parklamps come On now?
Yes
Replace headlamp switch.
No
Check circuit 74 for open between headlamp switch pin F and LHJBJ2 pin C7.
M circuit ok, replace LHJB.

CamScanner

LEFT SIDE TURN SIGNALS OUT WITH LEFT TURN SIGNALS AND/OR HAZARDS SELECTED

CHART 23

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

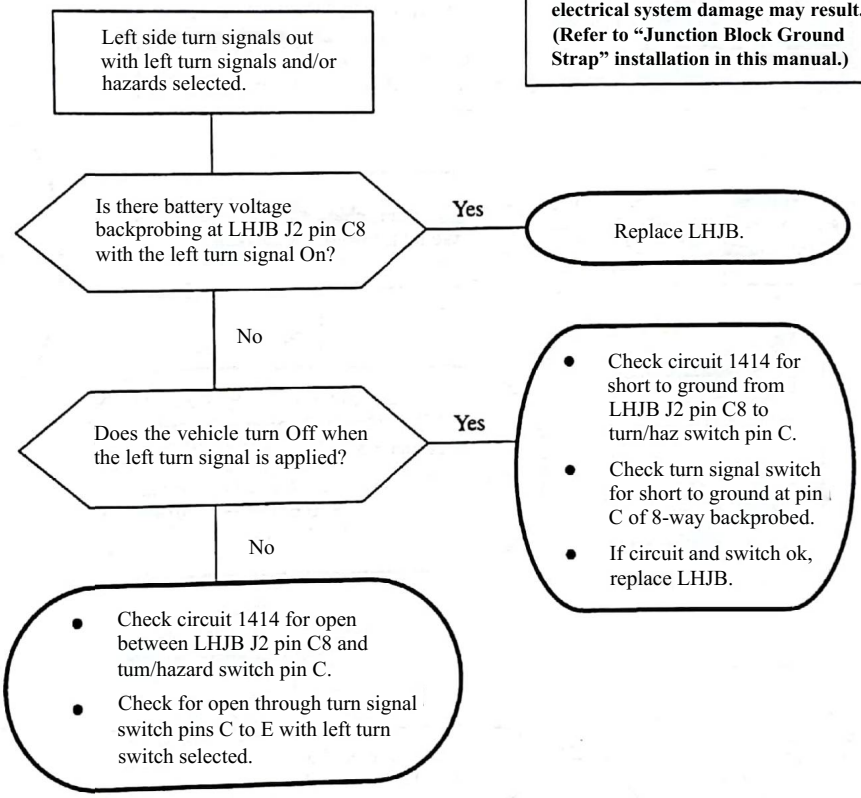
Left side turn signals out with left turn signals and/or hazards selected.
Is there battery voltage backprobing at LHJB J2 pin C8 with the left turn signal On?
Yes
Replace LHJB.
No
Does the vehicle turn Off when the left turn signal is applied?
Yes
Check circuit 1414 for short to ground from LHJB J2 pin C8 to turn/haz switch pin C.
Check turn signal switch for short to ground at pin C of 8-way backprobed.
If circuit and switch ok, replace LHJB.
No
Check circuit 1414 for open between LHJB J2 pin C8 and tum/hazard switch pin C.
Check for open through turn signal switch pins C to E with left turn switch selected.

CamScanner

RIGHT SIDE TURN SIGNALS OUT WITH RIGHT TURN SIGNALS AND/OR HAZARDS SELECTED

CHART 24

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Right side tum signals out with right tum signals and/or hazards selected.

Is there batteTy voltage backprobing at LHJB J2 pin C9 with the right tum signal On?

No

Does the vehicle turn off when the right tum signal is applied?

Yes

- Check circuit 1415 for short to ground from LHJB J2 pin C9 to tum/hazard switch pin B
- Check turn/hazard switch for short to ground at pin C of 8-way backprobed.
- If circuits and switch ok, replace LHJB.

No

- Check circuit 1415 for open between LHJB J2 pin C9 and tum/hazard switch pin B.
- Check for open through tum signal switch pins B to E with right tum signal switch selected.

Yes

Disconnect LHJB J9 connector and RHJB J8 connector - check for open between LHJB J9 pin A3 and RHJB J8 pin A3. Check for short to ground on circuit. Is circuit ok?

No

Repair open or short to ground in circuit 1966A.

Yes

Reconnect RHJB J8 connector jumper battery power to LHJB J9 harness connector pin A3. Do the tum signals come On?

No

Replace RHJB.

Yes

Replace LHJB

CamScanner

BOTH SIDE TURN SIGNALS OUT

CHART 25

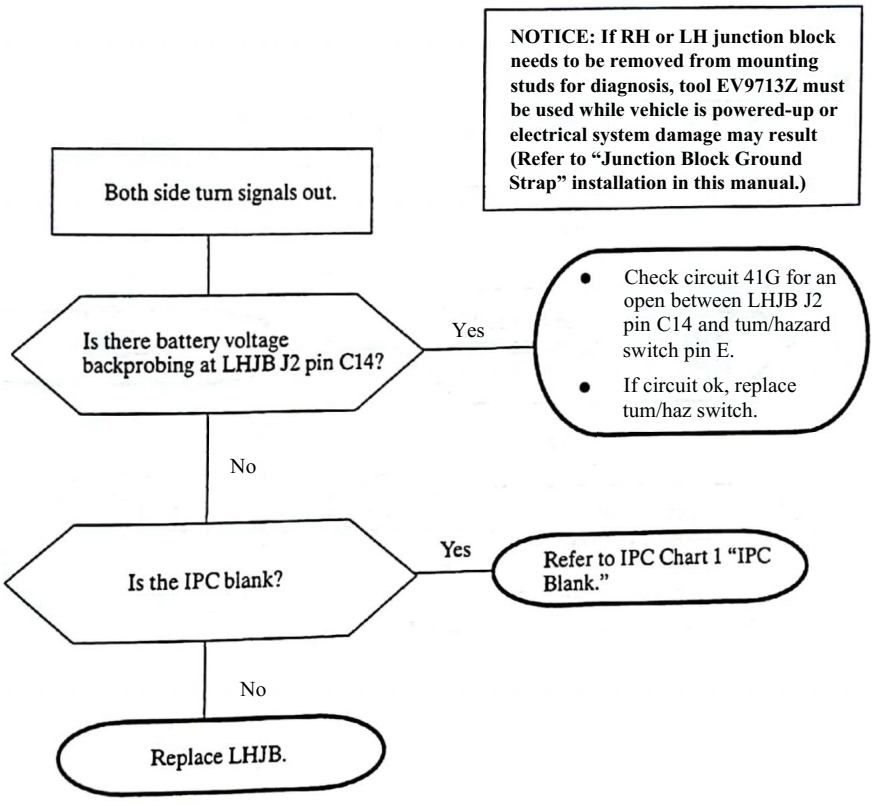
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap" installation in this manual.)
Both side turn signals out.
Is there battery voltage backprobing at LHJB J2 pin C14?
Yes
Check circuit 41G for an open between LHJB J2 pin C14 and tum/hazard switch pin E.
If circuit ok, replace tum/haz switch.
No
Is the IPC blank?
Yes
Refer to IPC Chart 1 "IPC Blank."
No
Replace LHJB.

CamScanner

LEFT REAR PARK AND STOP LAMPS OUT ONLY

CHART 26

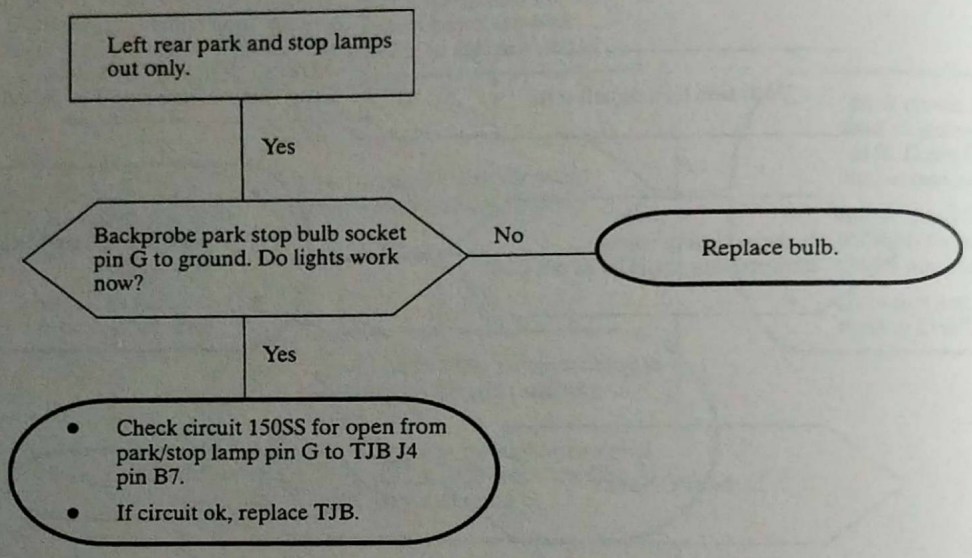
Left rear park and stop lamps out only.
Yes
Backprobe park stop bulb socket pin G to ground. Do lights work now?
No
Replace bulb.
Yes
• Check circuit 150SS for open from park/stop lamp pin G to TJB J4 pin B7.
• If circuit ok, replace TJB.

CamScanner

RIGHT REAR PARK AND STOP LAMPS OUT ONLY

CHART 27

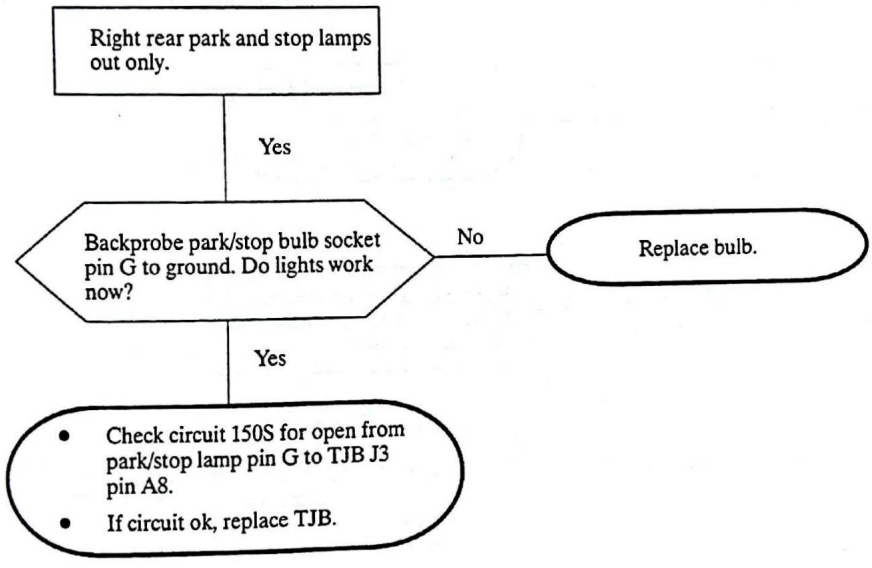
Right rear park and stop lamps out only.
Yes
Backprobe park/stop bulb socket pin G to ground. Do lights work now?
No
Replace bulb.
Yes
• Check circuit 150S for open from park/stop lamp pin G to TJB J3 pin A8.
• If circuit ok, replace TJB.

CamScanner

LEFT REAR AND RIGHT REAR STOP LAMPS OUT (CENTER HIGH MOUNTED STOP LAMP [CHMSL] WORKING)

CHART 28

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Left rear and right rear stop lamps out (CHMSL working)

Have you verified there are no other lights inoperative?

No → Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.

Yes

Is there battery voltage at LHJB J9 pin A5 backprobed?

No → Backprobe a jumper across brake switch pins A and B for the rest of the trouble tree.

Yes

Using amp probe, check circuit 20A at LHJB J9 pin A5 - is the reading over 120 mA?

Yes → Go to Chart 28A.

No

Replace LHJB

Is there battery voltage at RHJB J6 pin B1?

No

- Check circuit 20A for voltage at RHJB J8 pin A5.
- If circuit ok, replace RHJB

Yes

- Check circuit 20B for open between RHJB J6 pin B1 and TJB J1 pin A2.
- If circuit ok, replace TJB

CamScanner

CHART 28A

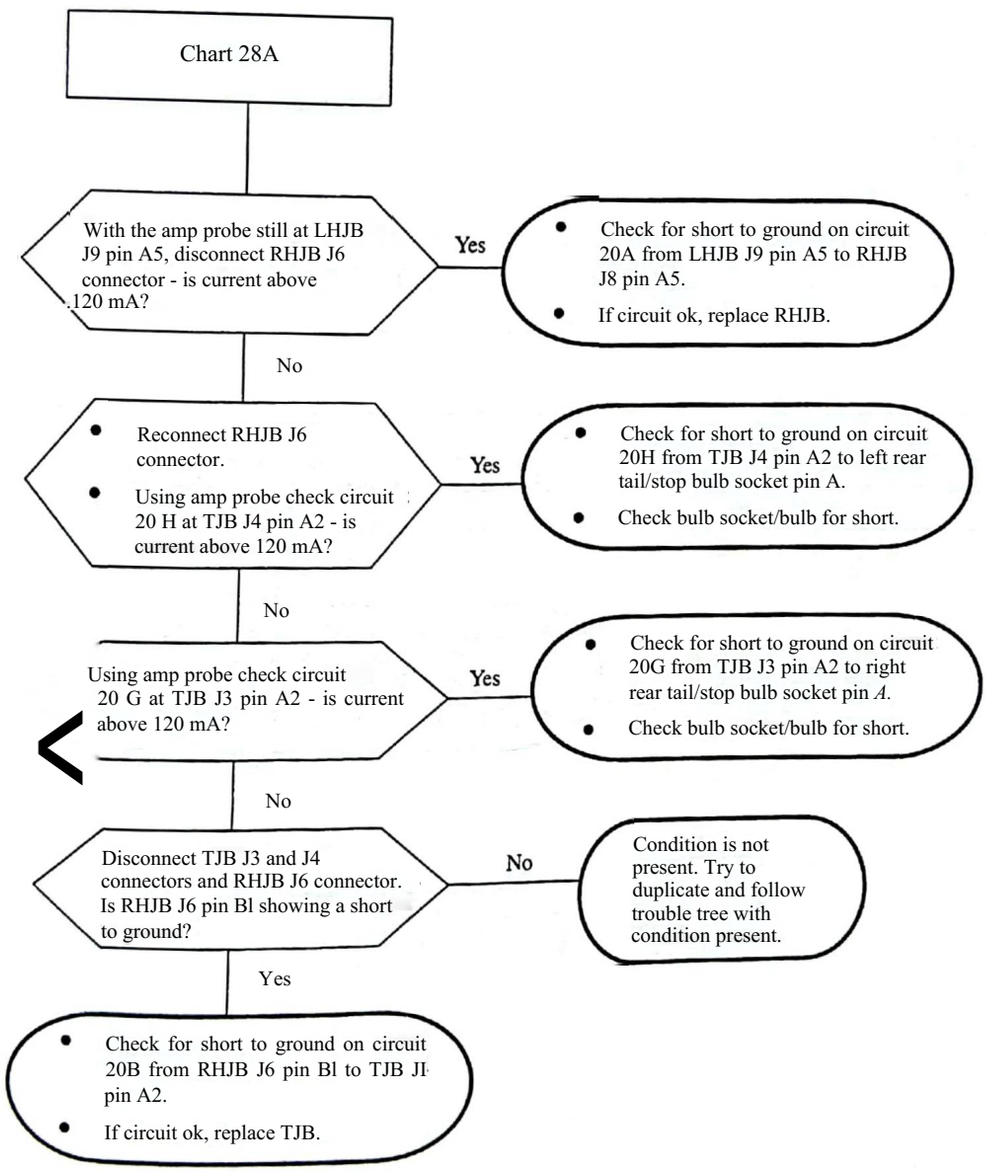
Chart 28A
With the amp probe still at LHJB J9 pin A5, disconnect RHJB J6 connector - is current above 120 mA?
Yes
Check for short to ground on circuit 20A from LHJB J9 pin A5 to RHJB J8 pin A5.
If circuit ok, replace RHJB.
No
Reconnect RHJB J6 connector.
Using amp probe check circuit 20 H at TJB J4 pin A2 - is current above 120 mA?
Yes
Check for short to ground on circuit 20H from TJB J4 pin A2 to left rear tail/stop bulb socket pin A.
Check bulb socket/bulb for short.
No
Using amp probe check circuit 20 G at TJB J3 pin A2 - is current above 120 mA?
Yes
Check for short to ground on circuit 20G from TJB J3 pin A2 to right rear tail/stop bulb socket pin A.
Check bulb socket/bulb for short.
No
Disconnect TJB J3 and J4 connectors and RHJB J6 connector. Is RHJB J6 pin Bl showing a short to ground?
No
Condition is not present. Try to duplicate and follow trouble tree with condition present.
Yes
Check for short to ground on circuit 20B from RHJB J6 pin Bl to TJB JI pin A2.
If circuit ok, replace TJB.

CamScanner

ALL STOP LAMPS INOPERATIVE (LEFT REAR, RIGHT REAR AND CENTER HIGH MOUNTED STOP LAMP [CHMSL])

CHART 29

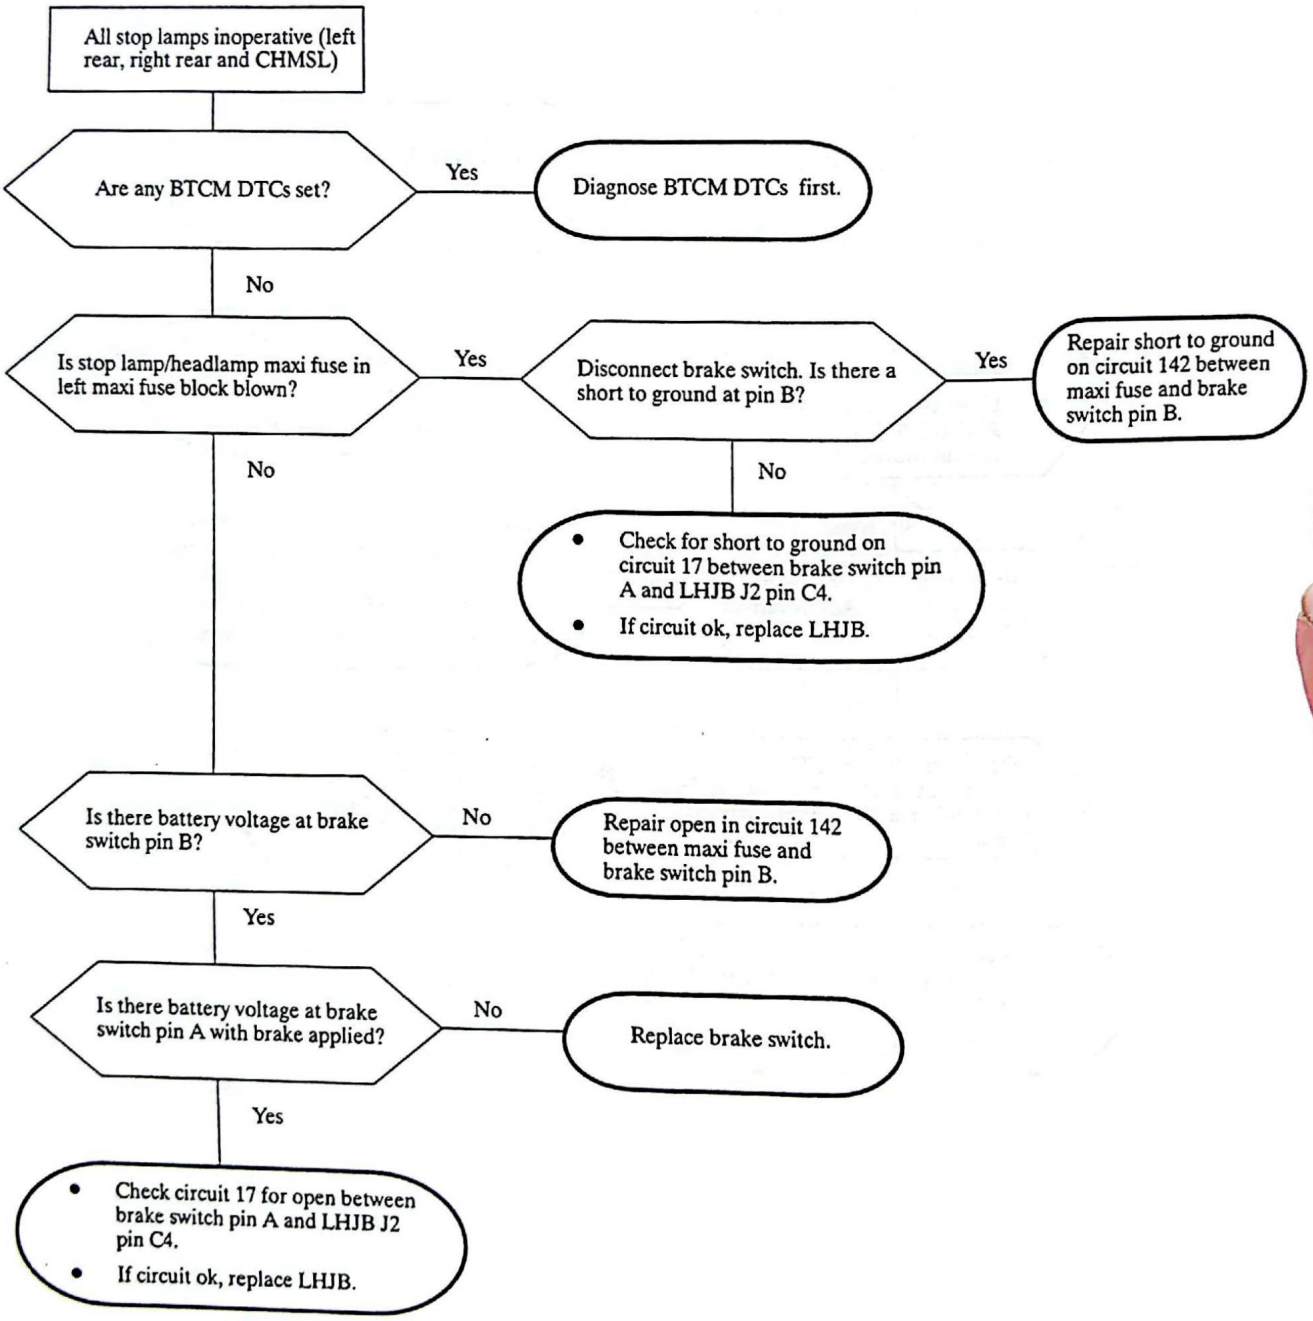
All stop lamps inoperative (left rear, right rear and CHMSL)
Are any BTCM DTCs set?
Yes
Diagnose BTCM DTCs first.
No
Is stop lamp/headlamp maxi fuse in left maxi fuse block blown?
Yes
Disconnect brake switch. Is there a short to ground at pin B?
Yes
Repair short to ground on circuit 142 between maxi fuse and brake switch pin B.
No
No
• Check for short to ground on circuit 17 between brake switch pin A and LHJB J2 pin C4.
• If circuit ok, replace LHJB.
Is there battery voltage at brake switch pin B?
No
Repair open in circuit 142 between maxi fuse and brake switch pin B.
Yes
Is there battery voltage at brake switch pin A with brake applied?
No
Replace brake switch.
Yes
• Check circuit 17 for open between brake switch pin A and LHJB J2 pin C4.
• If circuit ok, replace LHJB.

CamScanner

D

LEFT REAR PARK, MARKER AND LICENSE LAMPS OUT

CHART 30

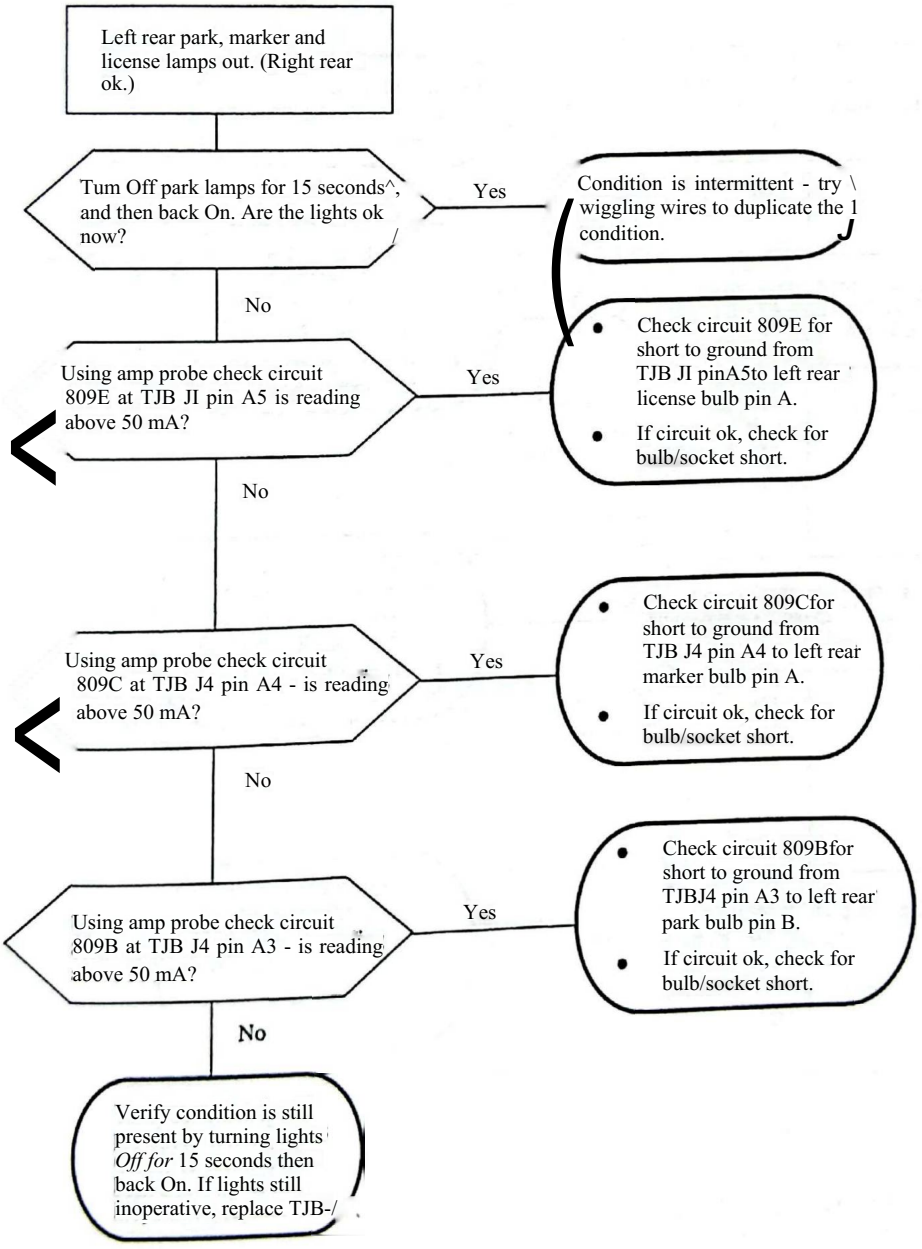
Left rear park, marker and license lamps out. (Right rear ok.)
Tum Off park lamps for 15 seconds^, and then back On. Are the lights ok now?
Yes
Condition is intermittent - try \ wiggling wires to duplicate the 1 condition.
No
Using amp probe check circuit 809E at TJB JI pin A5 is reading above 50 mA?
Yes
Check circuit 809E for short to ground from TJB JI pinA5to left rear license bulb pin A.
If circuit ok, check for bulb/socket short.
No
Using amp probe check circuit 809C at TJB J4 pin A4 - is reading above 50 mA?
Yes
Check circuit 809Cfor short to ground from TJB J4 pin A4 to left rear marker bulb pin A.
If circuit ok, check for bulb/socket short.
No
Using amp probe check circuit 809B at TJB J4 pin A3 - is reading above 50 mA?
Yes
Check circuit 809Bfor short to ground from TJBJ4 pin A3 to left rear park bulb pin B.
If circuit ok, check for bulb/socket short.
No
Verify condition is still present by turning lights *Off for* 15 seconds then back On. If lights still inoperative, replace TJB-/

CamScanner

RIGHT REAR PARK, MARKER AND LICENSE LAMPS OUT

CHART 31

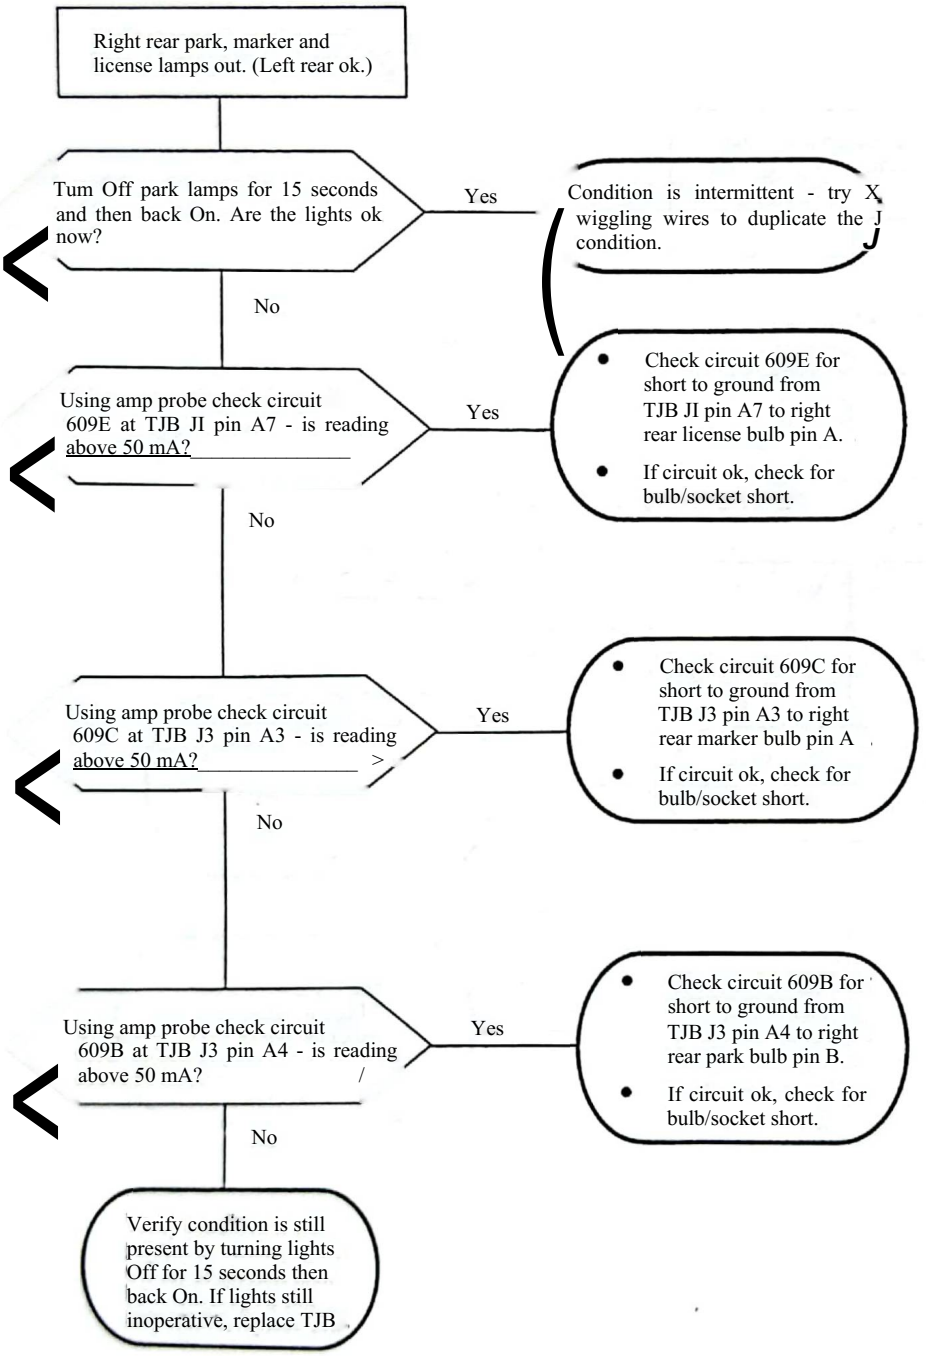
Right rear park, marker and license lamps out. (Left rear ok.)
Tum Off park lamps for 15 seconds and then back On. Are the lights ok now?
Yes
Condition is intermittent - try X wiggling wires to duplicate the J condition.
No
Using amp probe check circuit 609E at TJB JI pin A7 - is reading above 50 mA?
Yes
Check circuit 609E for short to ground from TJB JI pin A7 to right rear license bulb pin A.
If circuit ok, check for bulb/socket short.
No
Using amp probe check circuit 609C at TJB J3 pin A3 - is reading above 50 mA?
Yes
Check circuit 609C for short to ground from TJB J3 pin A3 to right rear marker bulb pin A
If circuit ok, check for bulb/socket short.
No
Using amp probe check circuit 609B at TJB J3 pin A4 - is reading above 50 mA?
Yes
Check circuit 609B for short to ground from TJB J3 pin A4 to right rear park bulb pin B.
If circuit ok, check for bulb/socket short.
No
Verify condition is still present by turning lights Off for 15 seconds then back On. If lights still inoperative, replace TJB

CamScanner

ALL REAR PARK LAMPS INOPERATIVE (FRONTS ARE OK)

CHART 32

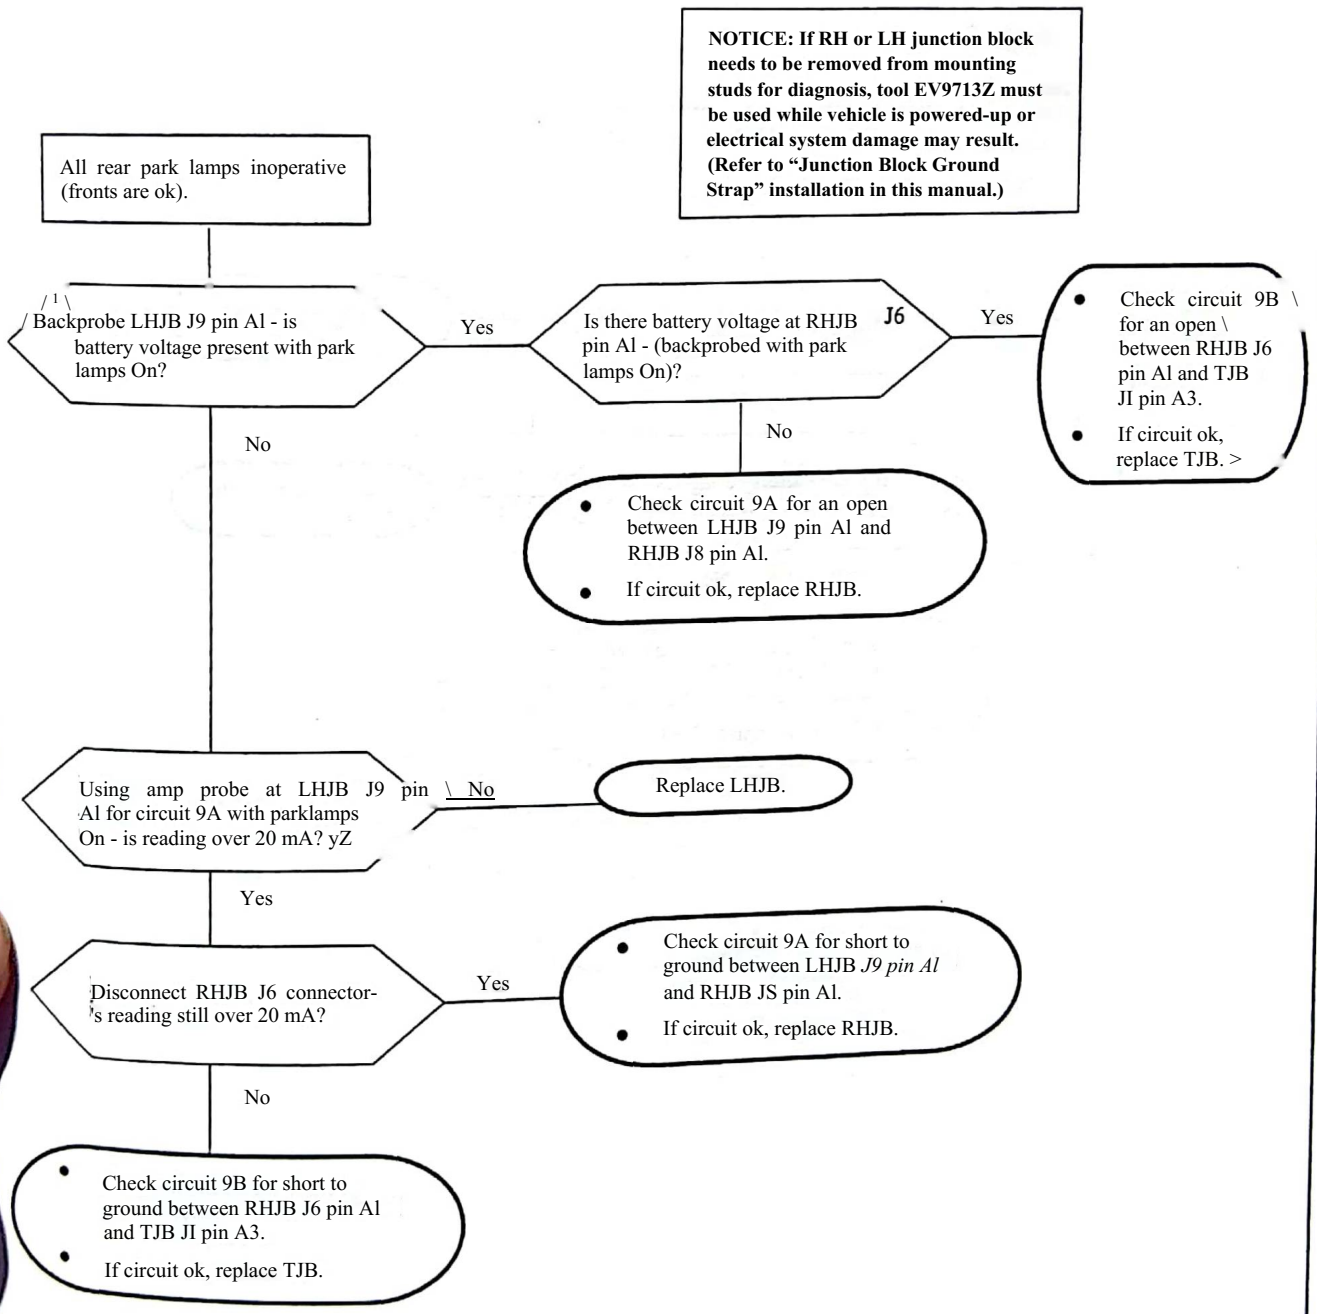
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)
All rear park lamps inoperative (fronts are ok).
Backprobe LHJB J9 pin A1 - is battery voltage present with park lamps On?
Yes
Is there battery voltage at RHJB pin A1 - (backprobed with park lamps On)?
J6
Yes
Check circuit 9B for an open between RHJB J6 pin A1 and TJB J1 pin A3.
If circuit ok, replace TJB.
No
Check circuit 9A for an open between LHJB J9 pin A1 and RHJB J8 pin A1.
If circuit ok, replace RHJB.
No
Using amp probe at LHJB J9 pin A1 for circuit 9A with parklamps On - is reading over 20 mA?
No
Replace LHJB.
Yes
Disconnect RHJB J6 connector- is reading still over 20 mA?
Yes
Check circuit 9A for short to ground between LHJB J9 pin A1 and RHJB J1 pin A1.
If circuit ok, replace RHJB.
No
Check circuit 9B for short to ground between RHJB J6 pin A1 and TJB J1 pin A3.
If circuit ok, replace TJB.

CamScanner

HAZARDS INOPERATIVE (TURN SIGNALS BOTH WORK OK)

CHART 33

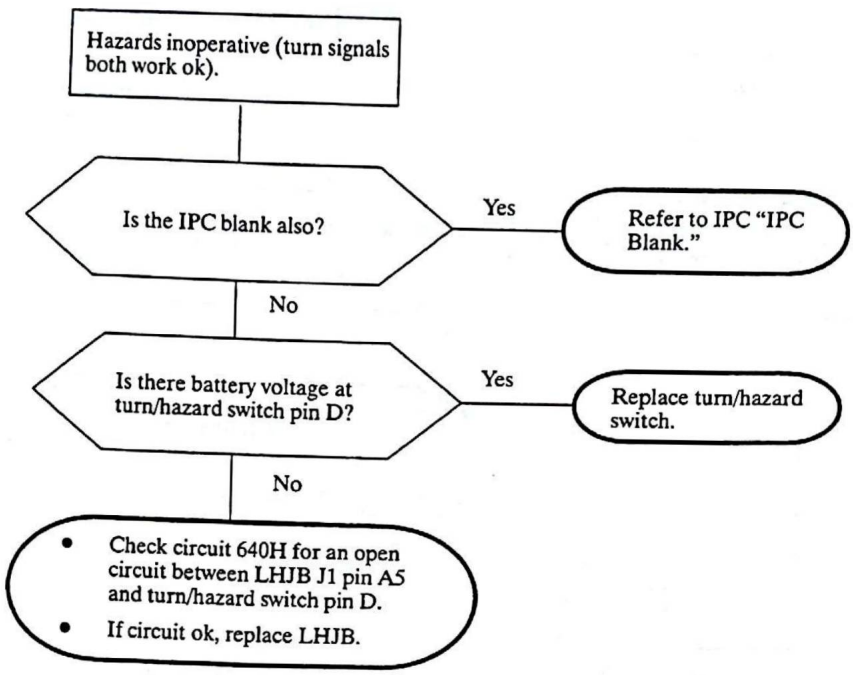
Hazards inoperative (turn signals both work ok).
Is the IPC blank also?
Yes
Refer to IPC "IPC Blank."
No
Is there battery voltage at turn/hazard switch pin D?
Yes
Replace turn/hazard switch.
No
• Check circuit 640H for an open circuit between LHJB J1 pin A5 and turn/hazard switch pin D.
• If circuit ok, replace LHJB.

CamScanner

DAYTIME RUNNING LAMPS (DRL) ON IN PARK

CHART 34

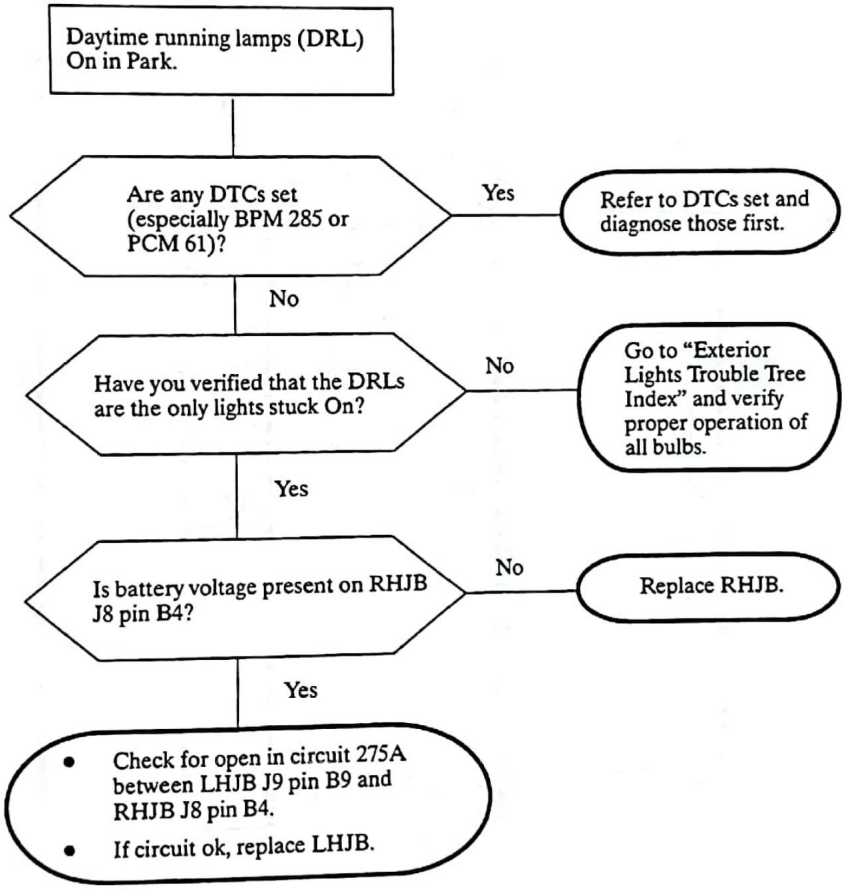
Daytime running lamps (DRL) On in Park.
Are any DTCs set (especially BPM 285 or PCM 61)?
Yes
Refer to DTCs set and diagnose those first.
No
Have you verified that the DRLs are the only lights stuck On?
No
Go to "Exterior Lights Trouble Tree Index" and verify proper operation of all bulbs.
Yes
Is battery voltage present on RHJB J8 pin B4?
No
Replace RHJB.
Yes
• Check for open in circuit 275A between LHJB J9 pin B9 and RHJB J8 pin B4.
• If circuit ok, replace LHJB.

CamScanner

GROUND DISTRIBUTION

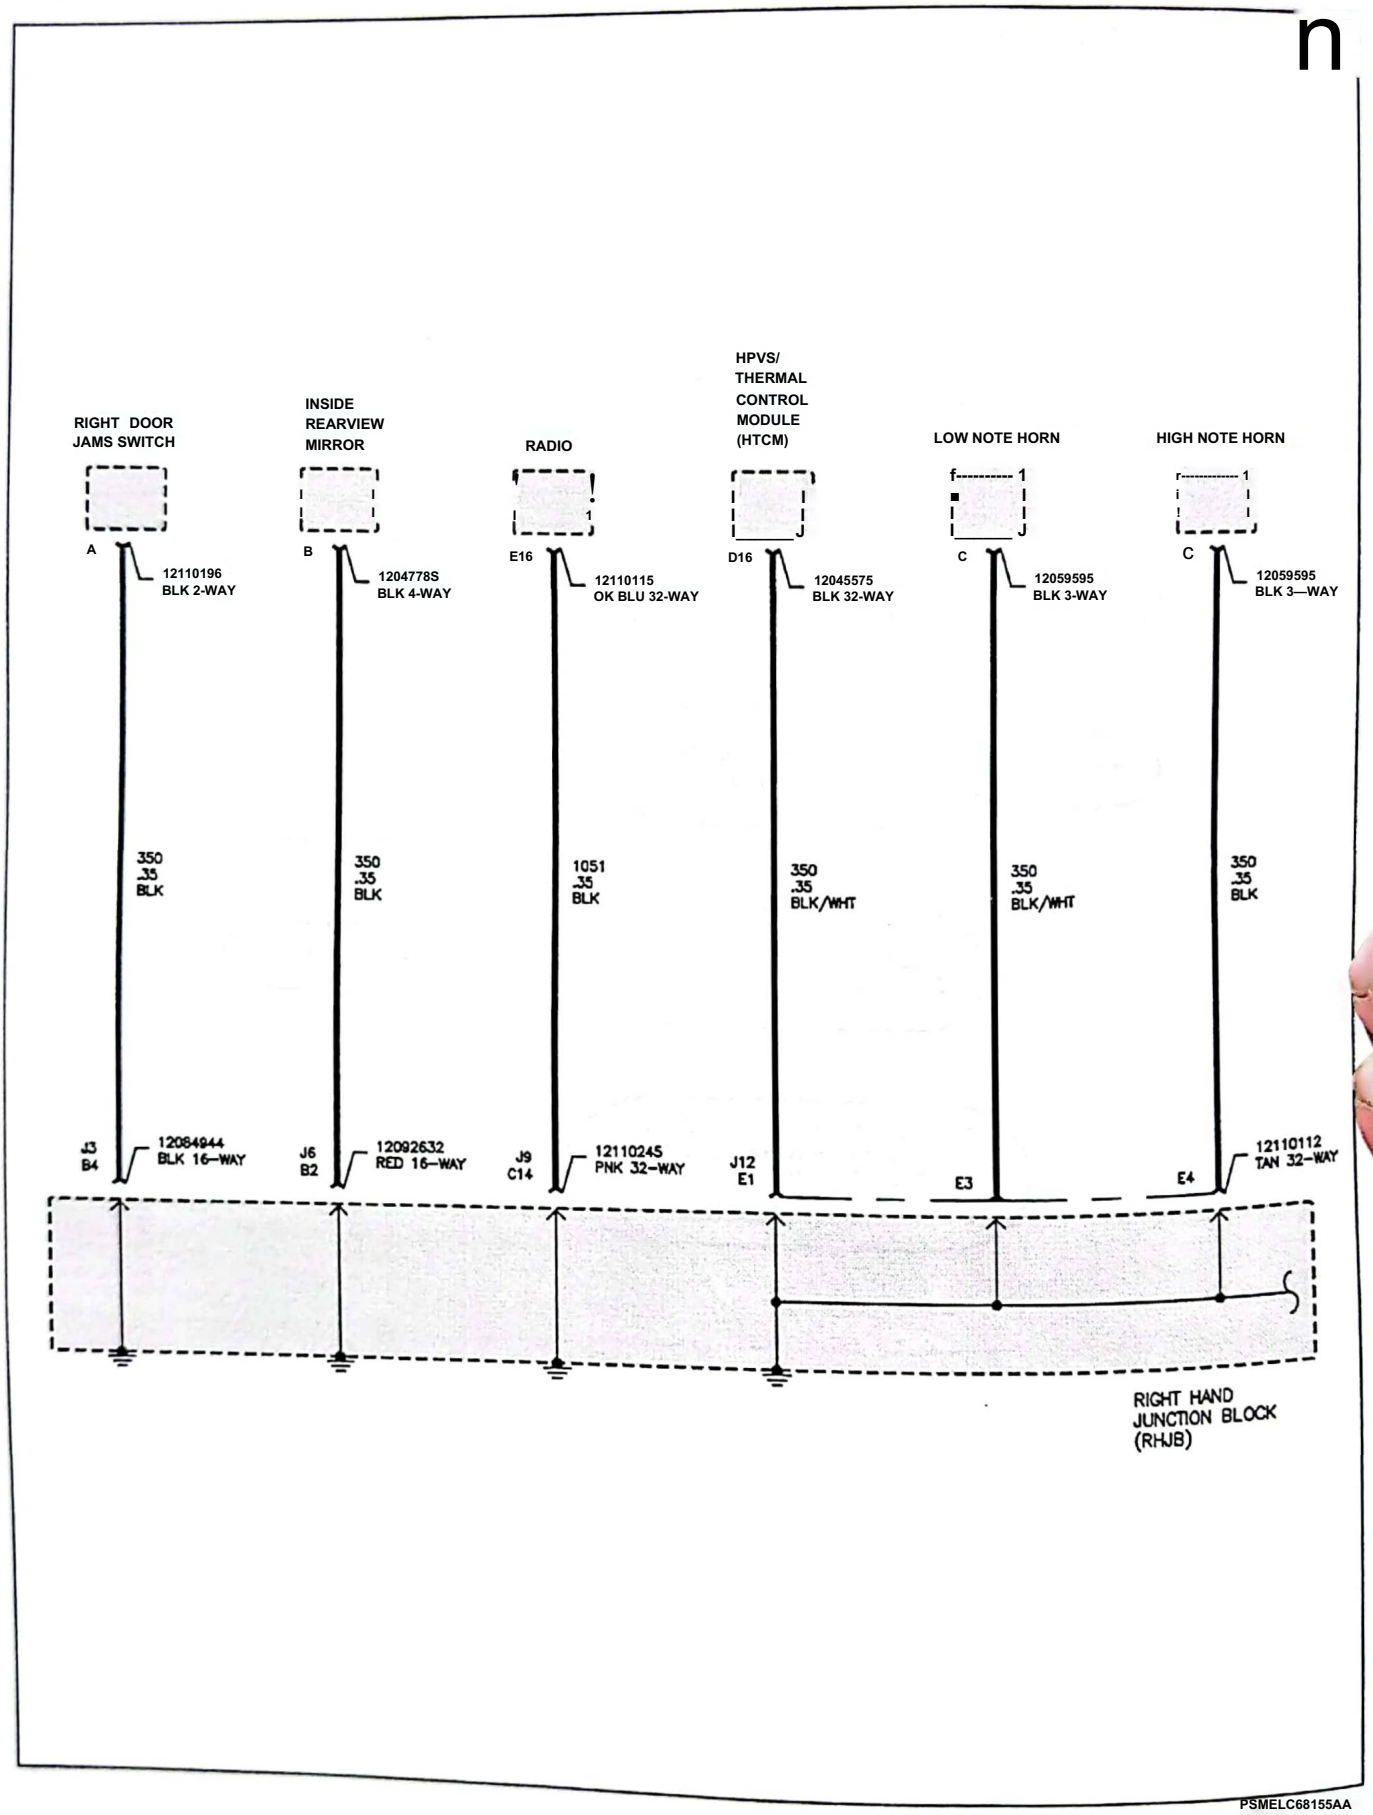

PSMELC68155AA

CamScanner

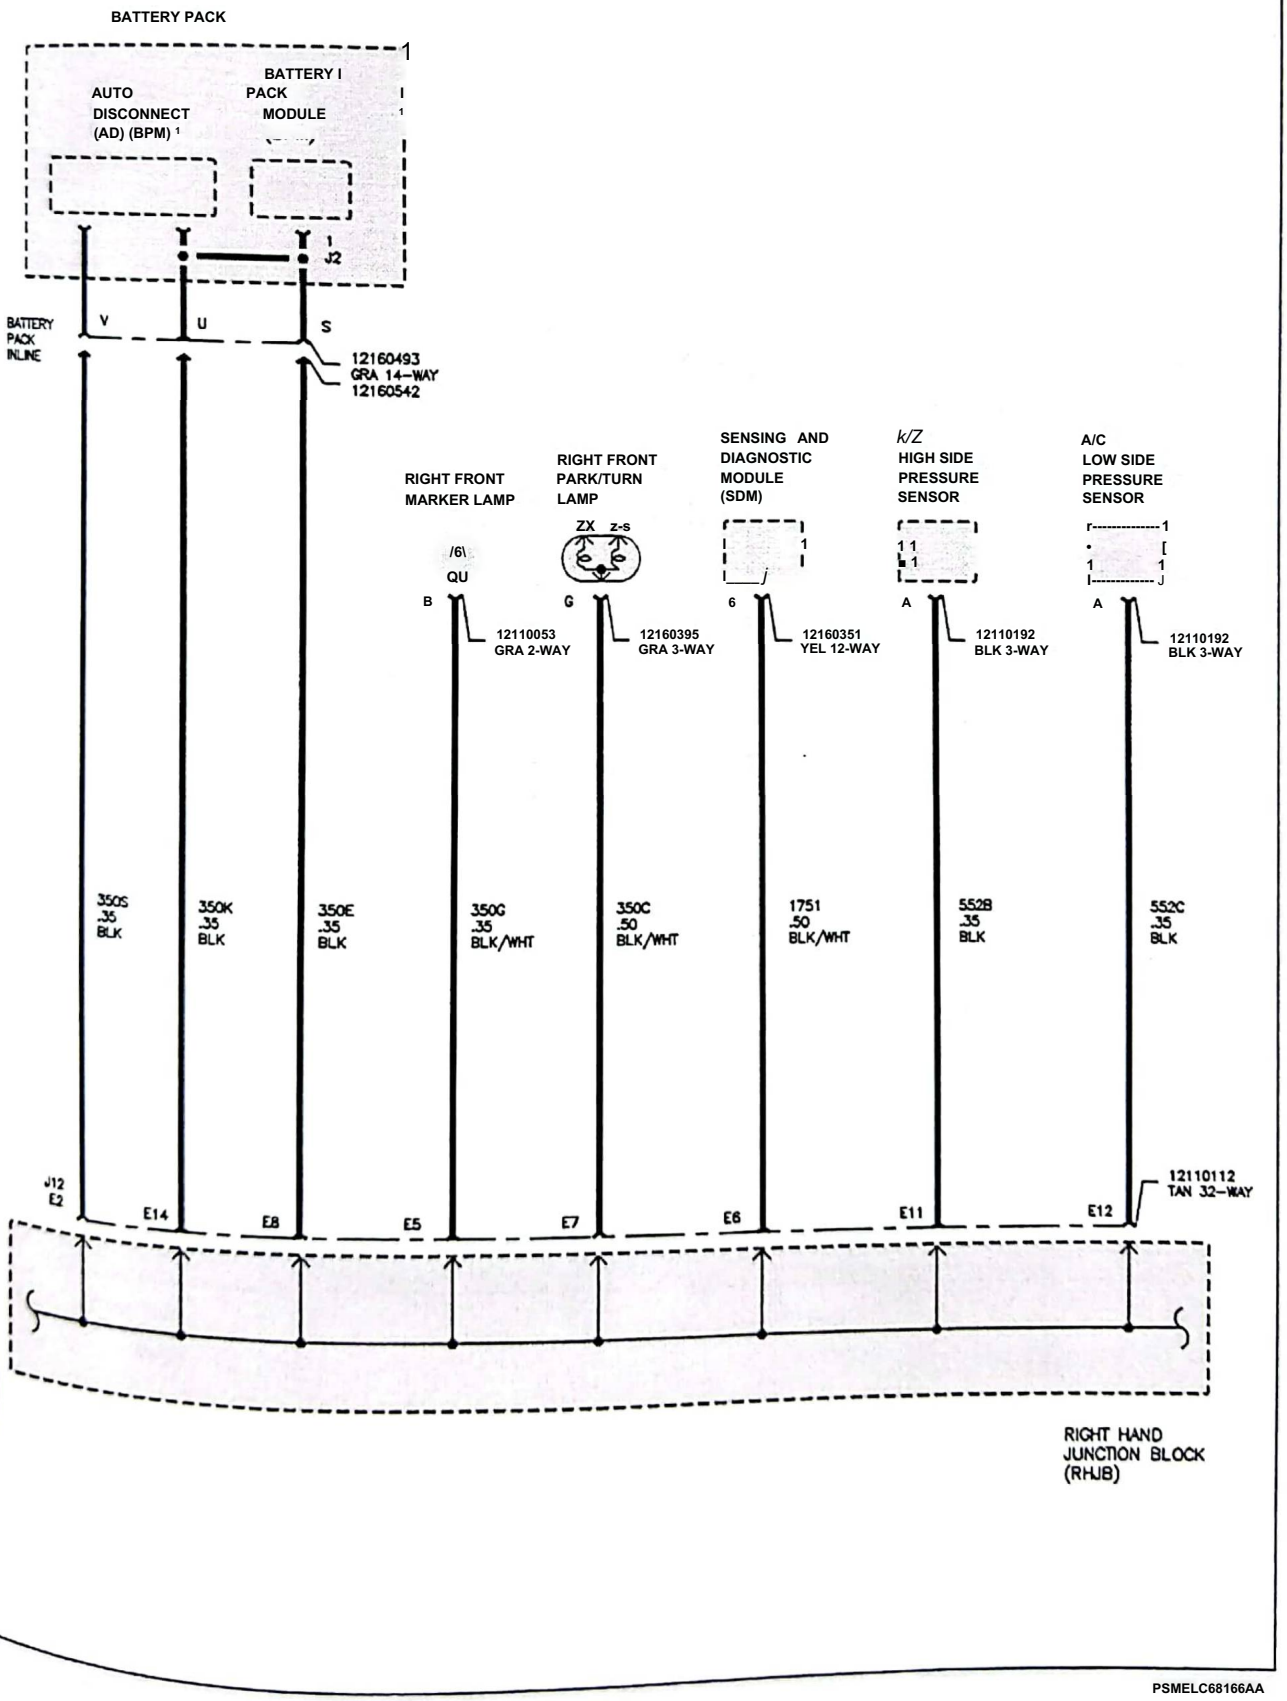

PSMELC68166AA

CamScanner

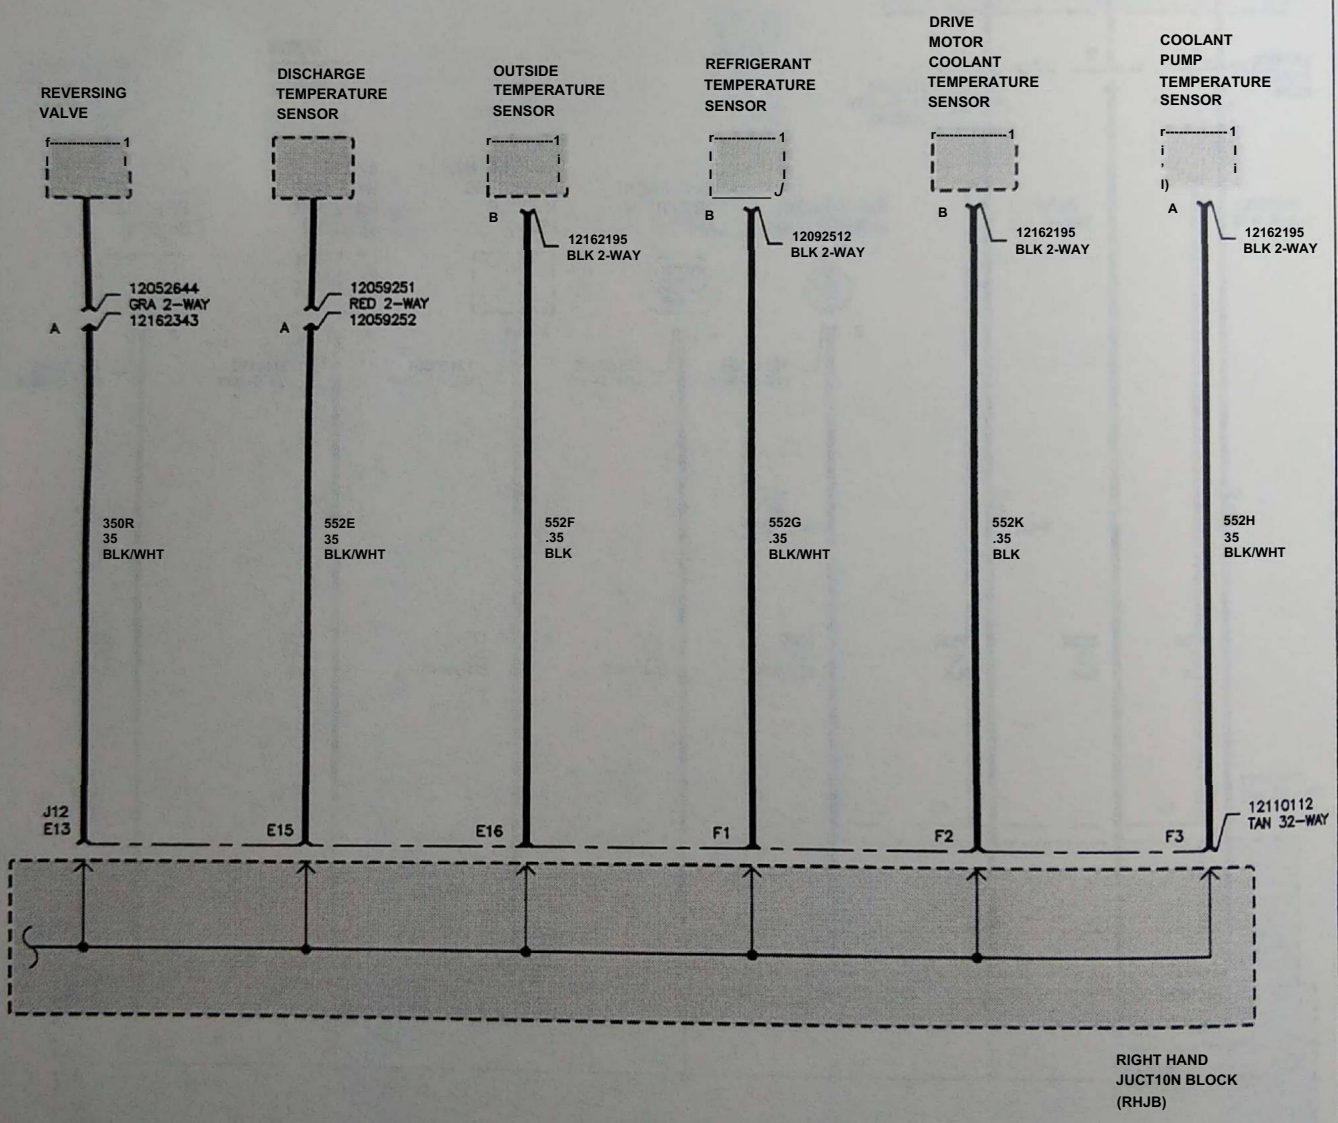

PSMELC68167AB

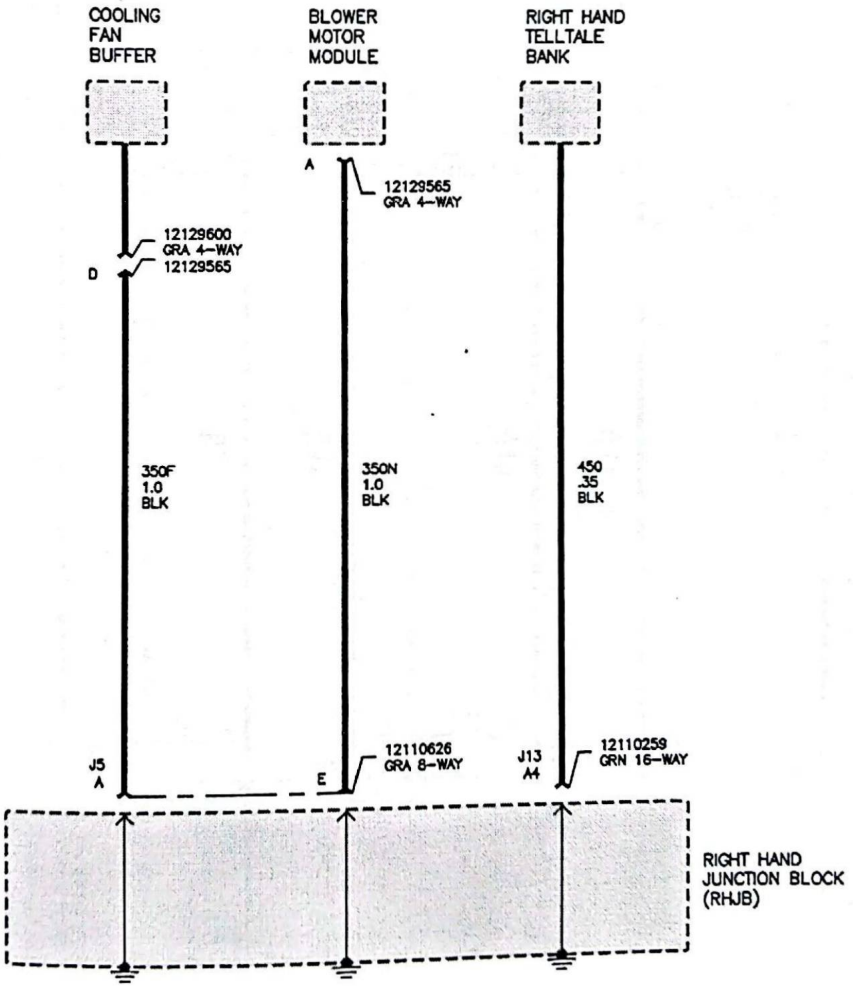

PSMELC68168AA

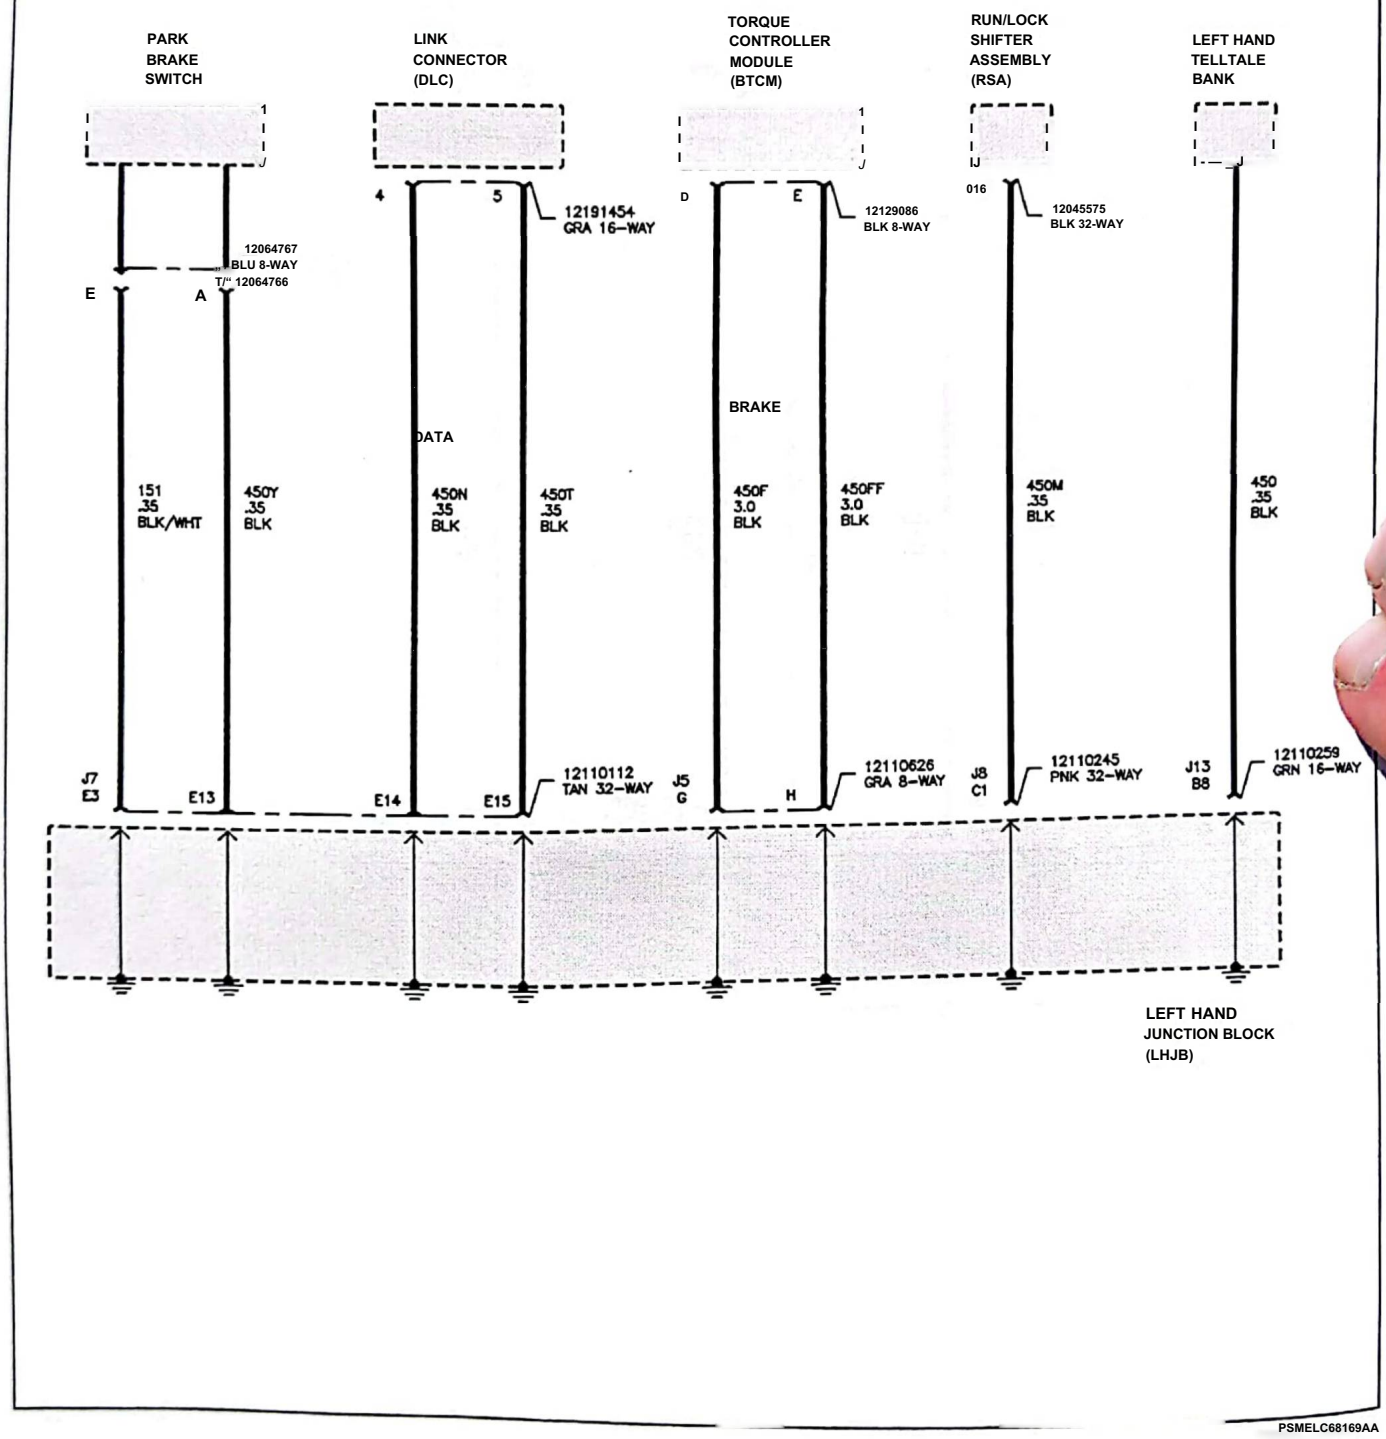
PARK BRAKE SWITCH
LINK CONNECTOR (DLC)
TORQUE CONTROLLER MODULE (BTCM)
RUN/LOCK SHIFTER ASSEMBLY (RSA)
LEFT HAND TELLTALE BANK
12064767 BLU 8-WAY
12064766
12191454 GRA 16-WAY
12129086 BLK 8-WAY
12045575 BLK 32-WAY
151 .35 BLK/WHT
450Y .35 BLK
DATA
450N .35 BLK
450T .35 BLK
BRAKE
450F 3.0 BLK
450FF 3.0 BLK
450M .35 BLK
450 .35 BLK
12110112 TAN 32-WAY
12110626 GRA 8-WAY
12110245 PNK 32-WAY
12110259 GRN 16-WAY
LEFT HAND JUNCTION BLOCK (LHJB)
PSMELC68169AA

CamScanner

A

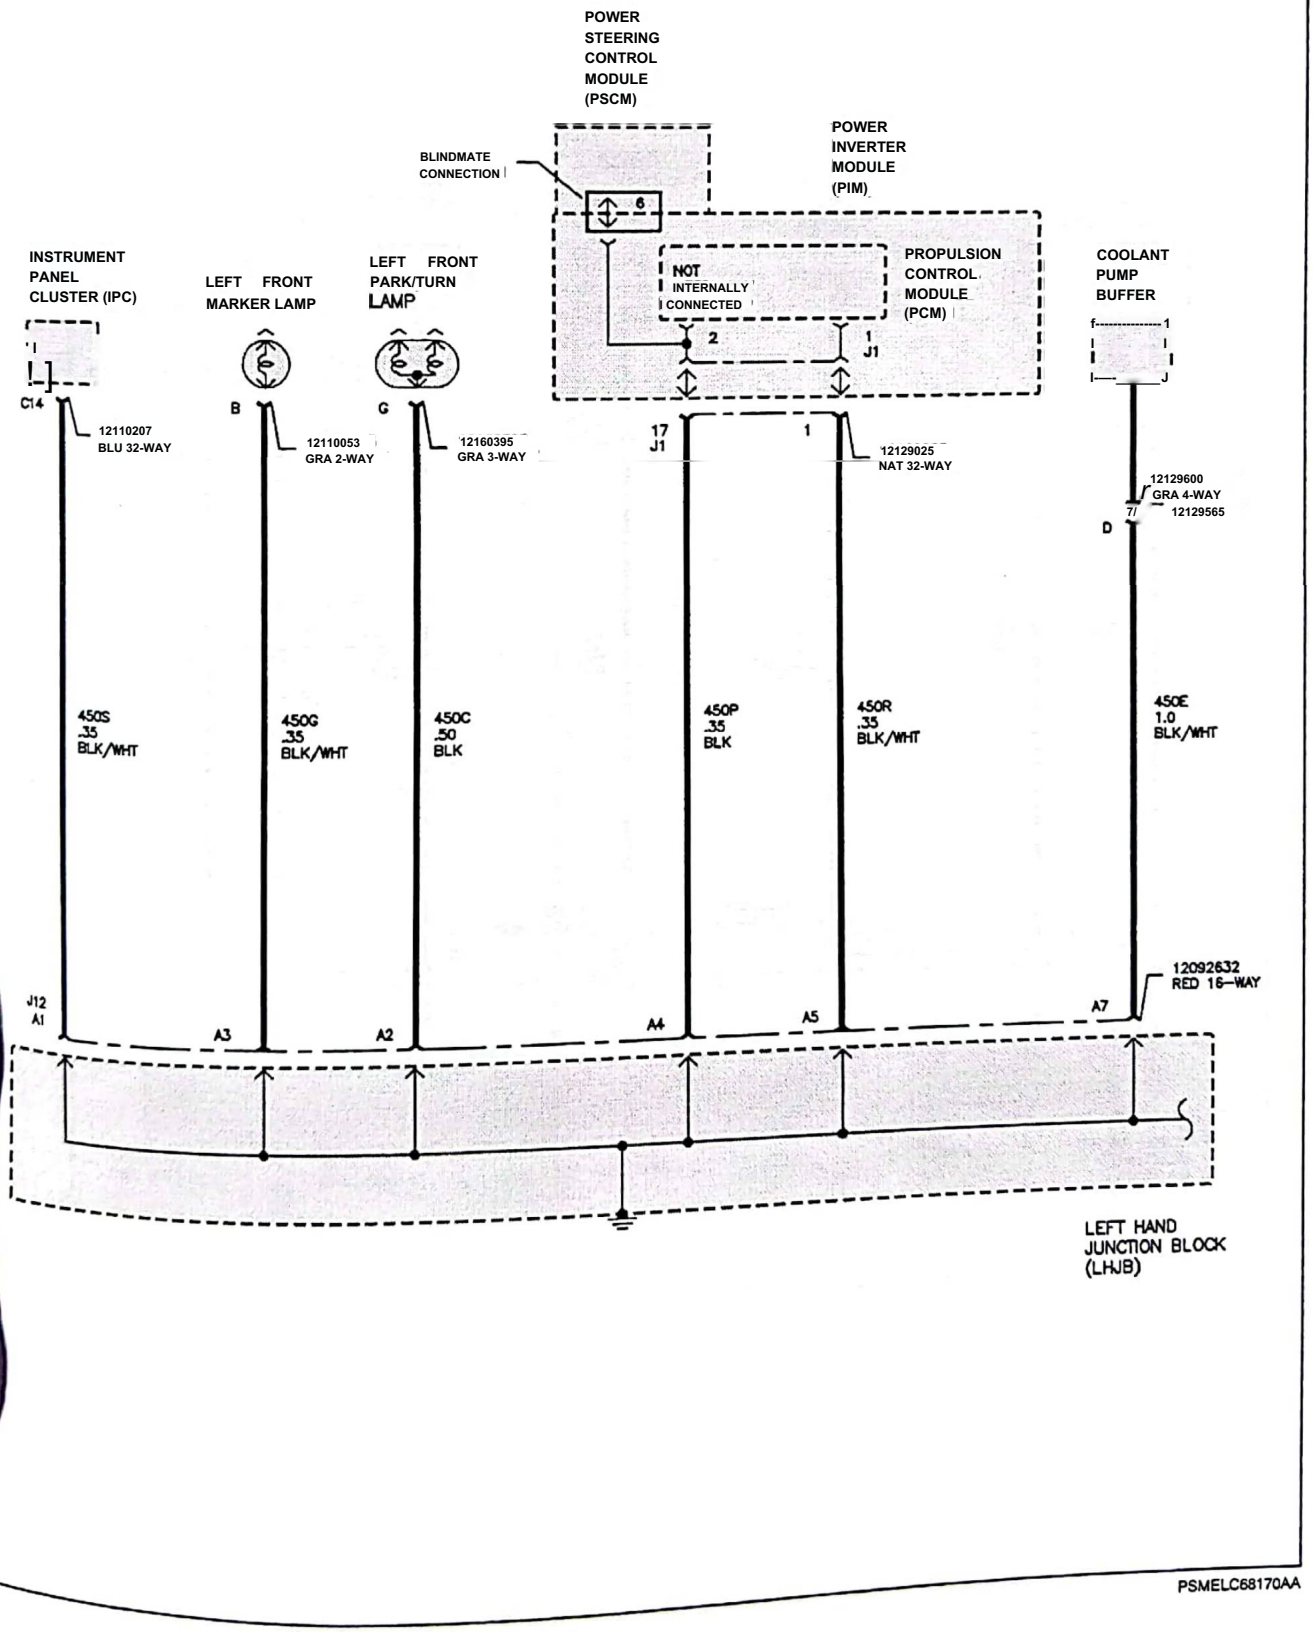

PSMELC68170AA

CamScanner

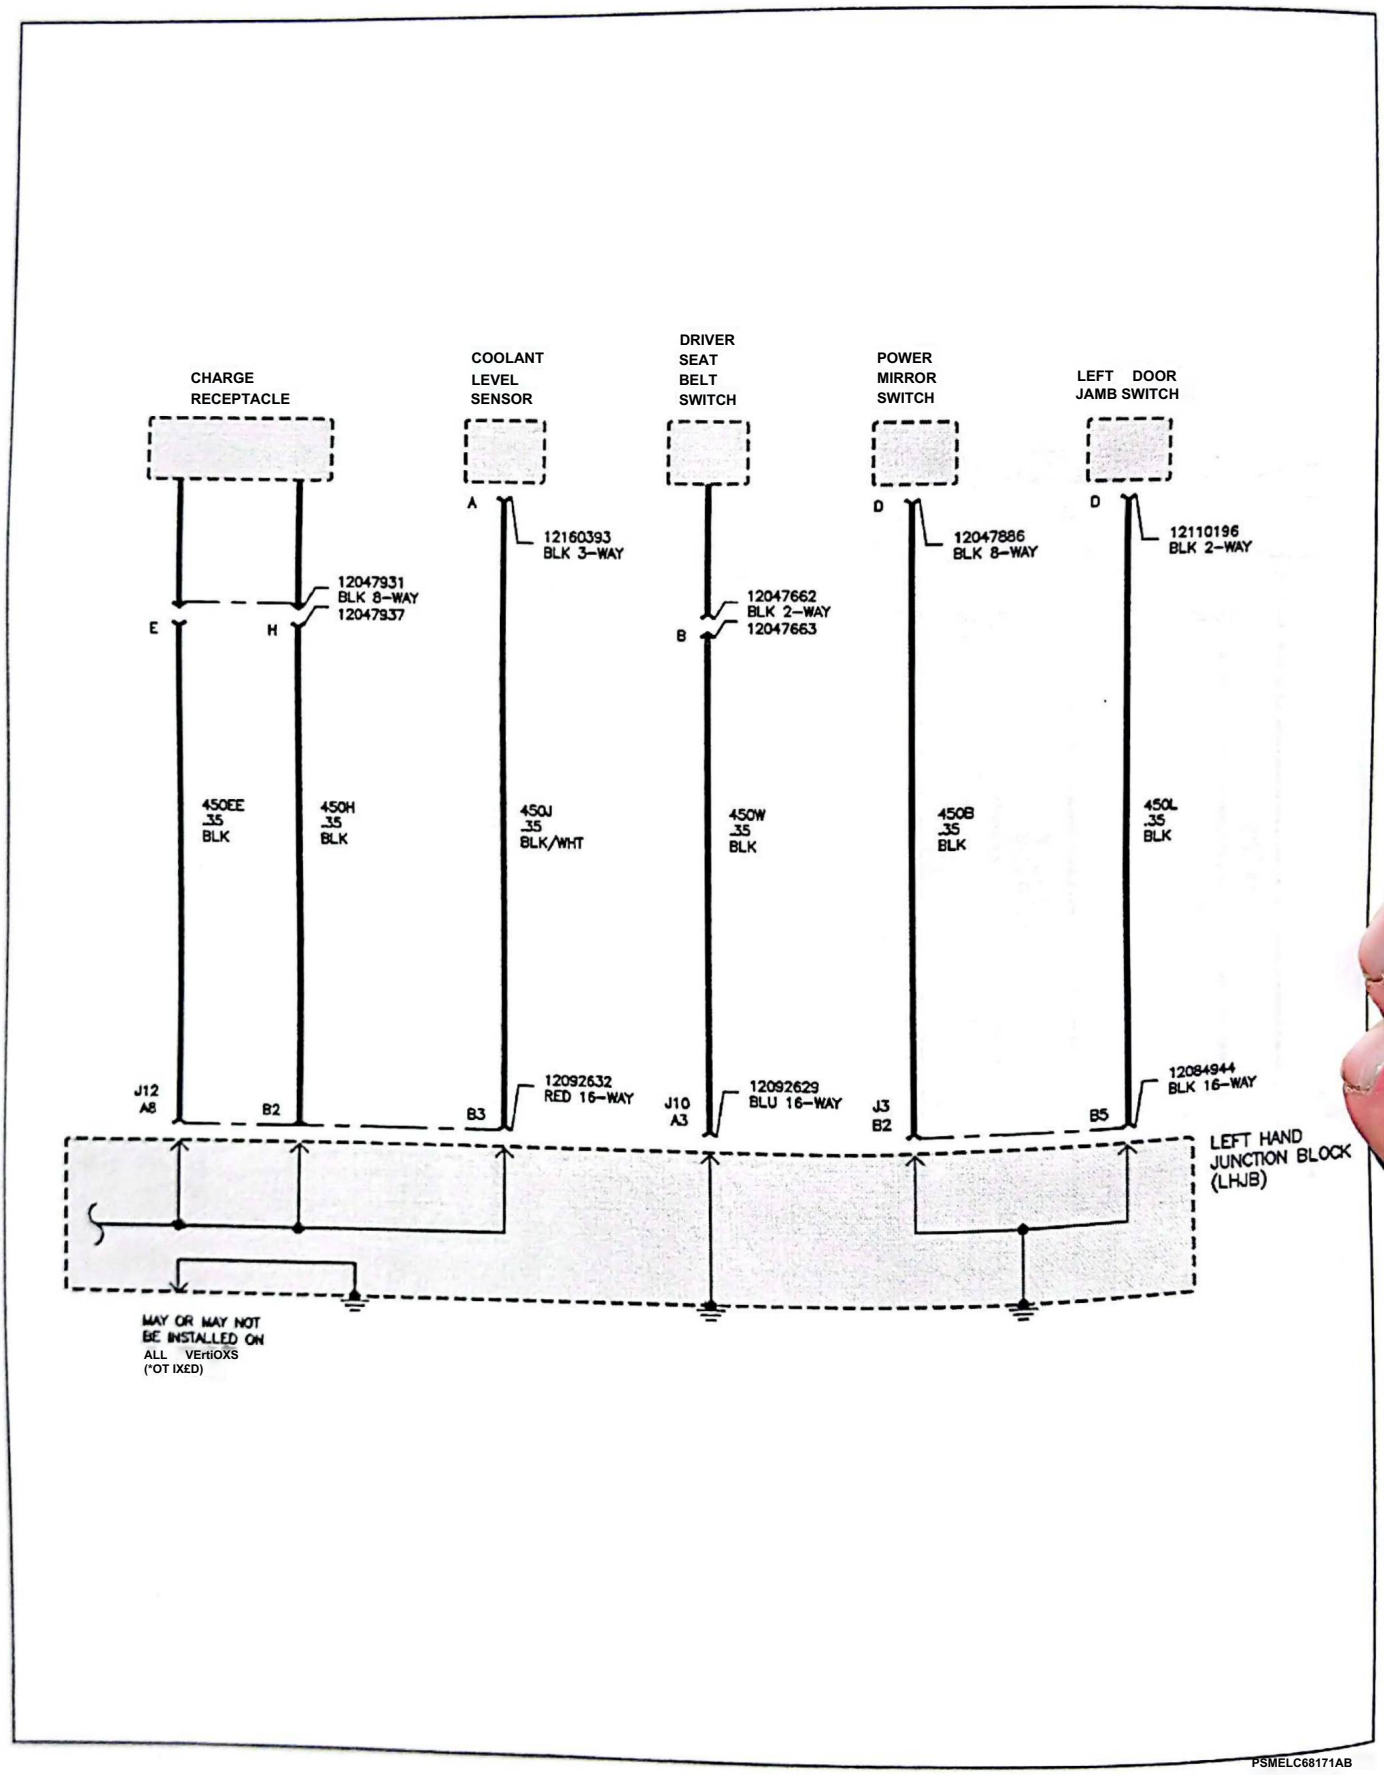
CHARGE RECEPTACLE
COOLANT LEVEL SENSOR
DRIVER SEAT BELT SWITCH
POWER MIRROR SWITCH
LEFT DOOR JAMB SWITCH
12047931 BLK 8-WAY
12047937
E
H
450EE .35 BLK
450H .35 BLK
A
12160393 BLK 3-WAY
450J .35 BLK/WHT
12092632 RED 16-WAY
B3
12047662 BLK 2-WAY
12047663
B
450W .35 BLK
12092629 BLU 16-WAY
J10 A3
D
12047886 BLK 8-WAY
450B .35 BLK
J3 B2
D
12110196 BLK 2-WAY
450L .35 BLK
12084944 BLK 16-WAY
B5
J12 A8
B2
LEFT HAND JUNCTION BLOCK (LHJB)
MAY OR MAY NOT BE INSTALLED ON ALL VEHICLES (NOT EXPORT)
PSMELC68171AB

CamScanner

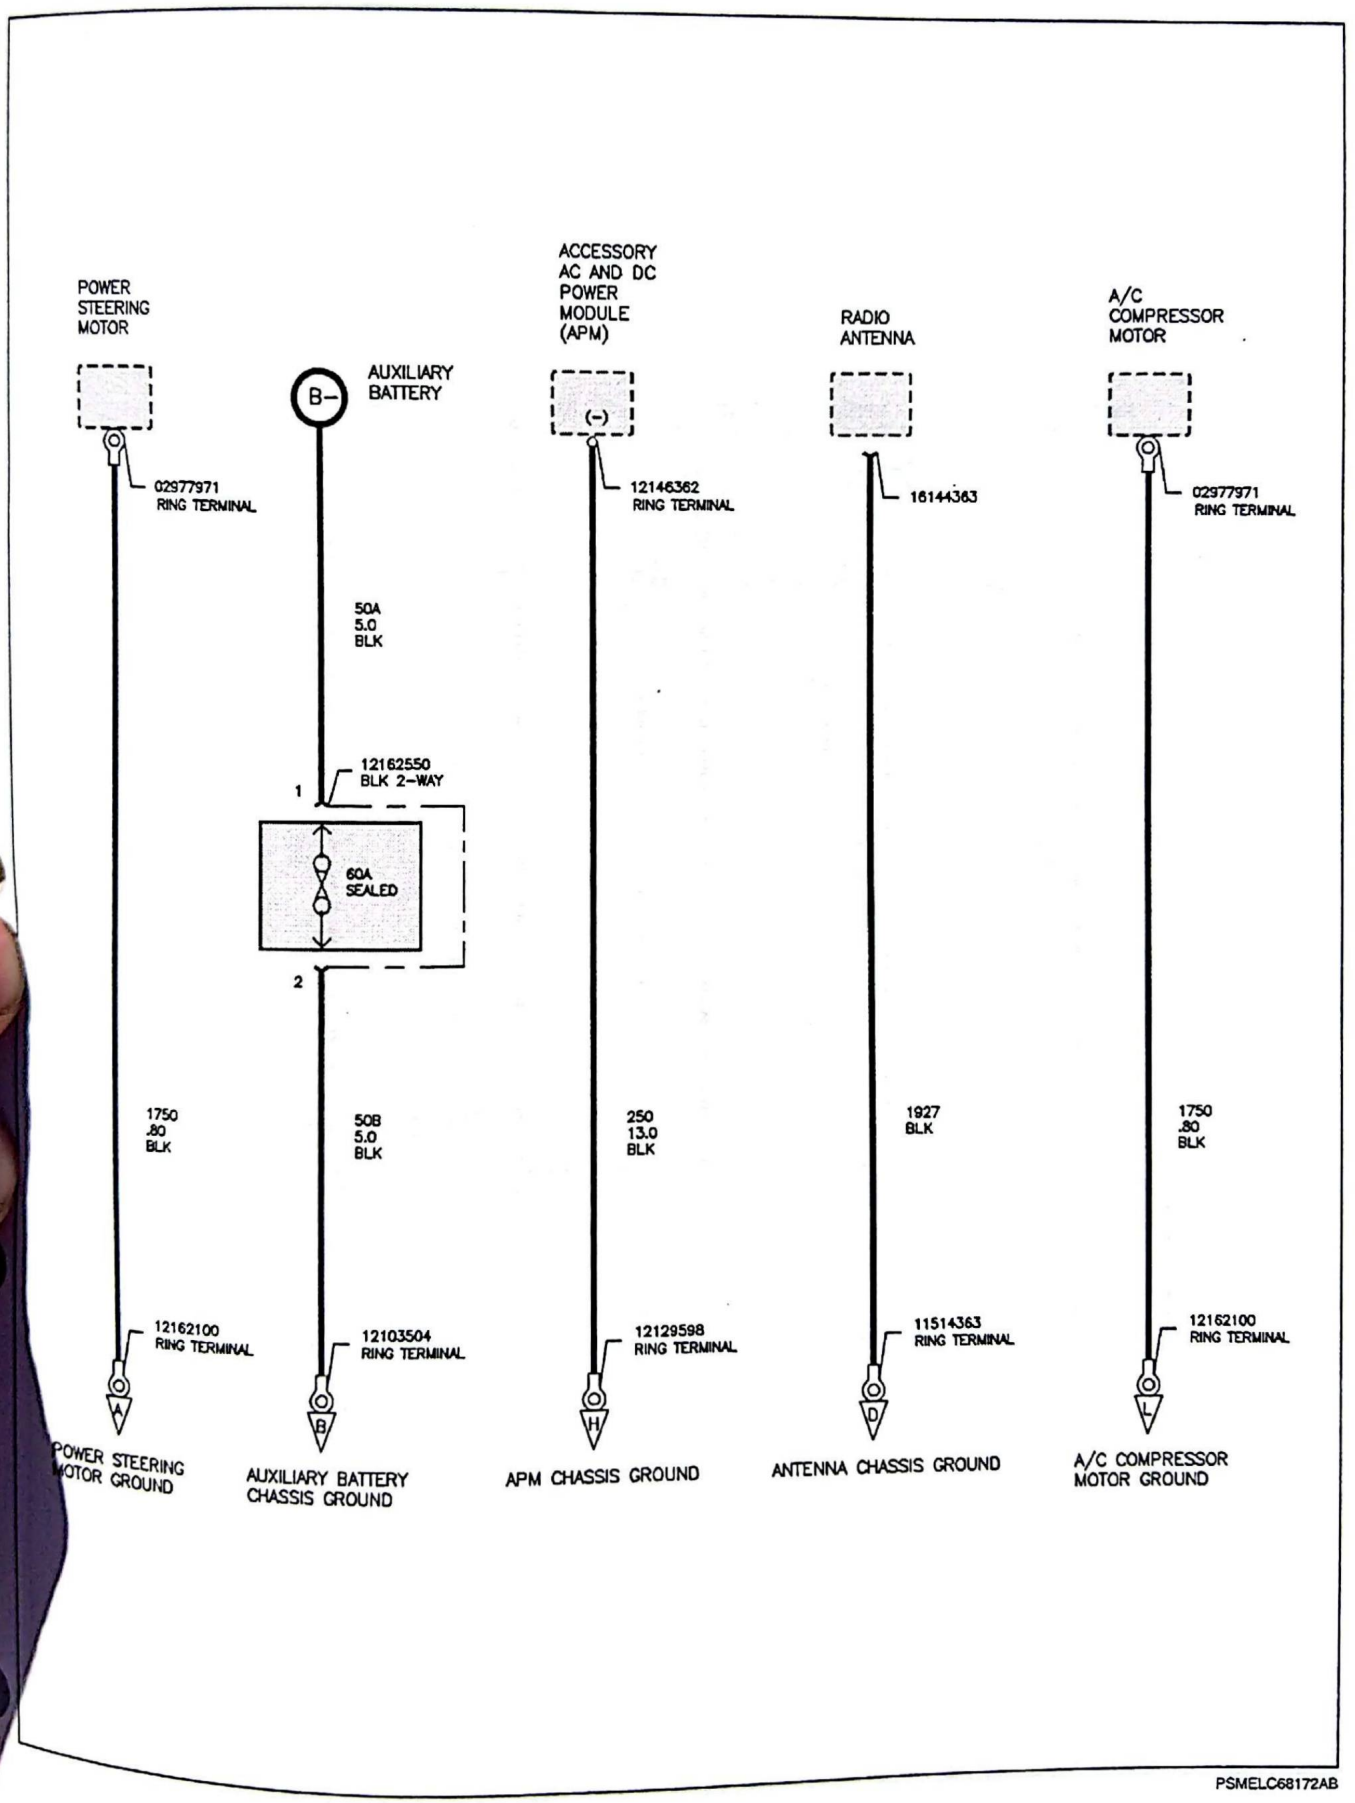
POWER STEERING MOTOR
02977971 RING TERMINAL
1750 .80 BLK
12162100 RING TERMINAL
A
POWER STEERING MOTOR GROUND
AUXILIARY BATTERY
B-
50A 5.0 BLK
12162550 BLK 2-WAY
1
60A SEALED
2
50B 5.0 BLK
12103504 RING TERMINAL
B
AUXILIARY BATTERY CHASSIS GROUND
ACCESSORY AC AND DC POWER MODULE (APM)
(-)
12146362 RING TERMINAL
250 13.0 BLK
12129598 RING TERMINAL
H
APM CHASSIS GROUND
RADIO ANTENNA
16144363
1927 BLK
11514363 RING TERMINAL
D
ANTENNA CHASSIS GROUND
A/C COMPRESSOR MOTOR
02977971 RING TERMINAL
1750 .80 BLK
12162100 RING TERMINAL
L
A/C COMPRESSOR MOTOR GROUND
PSMELC68172AB

CamScanner

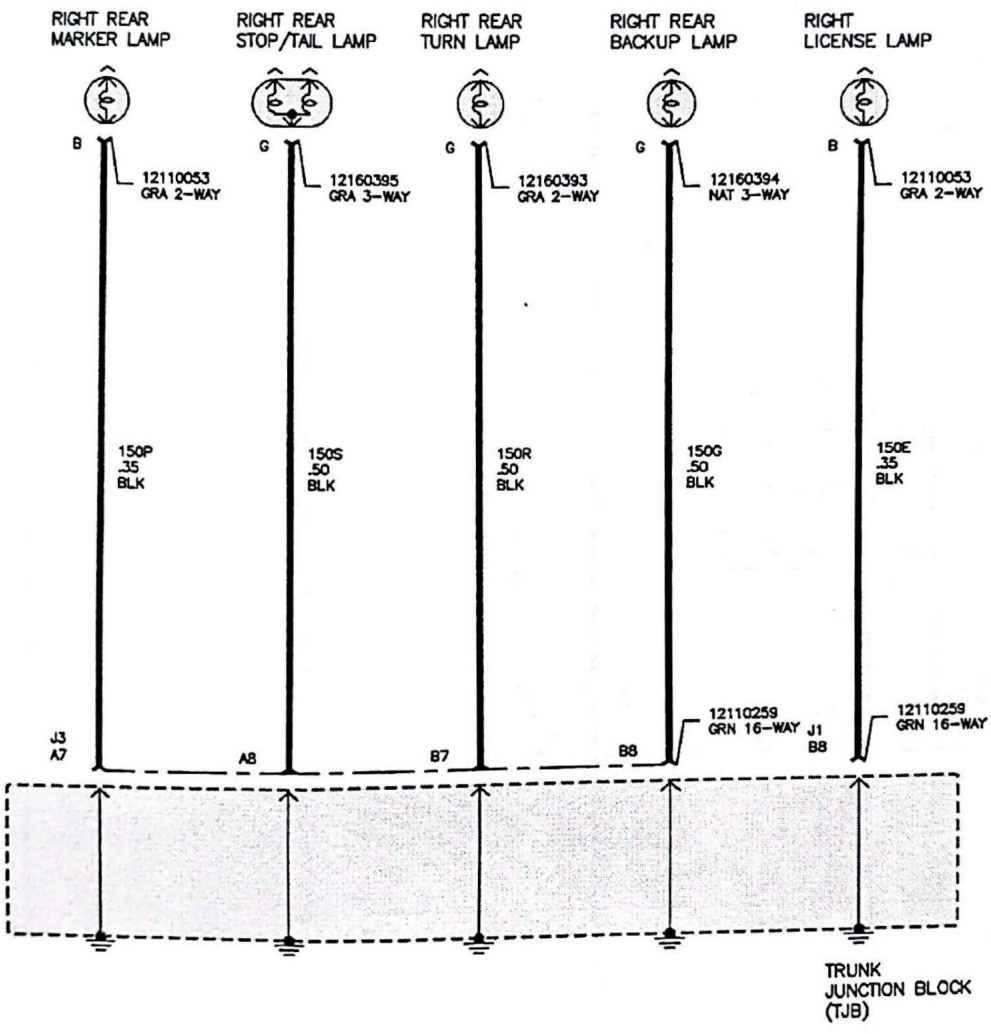

PSMELC68173AA

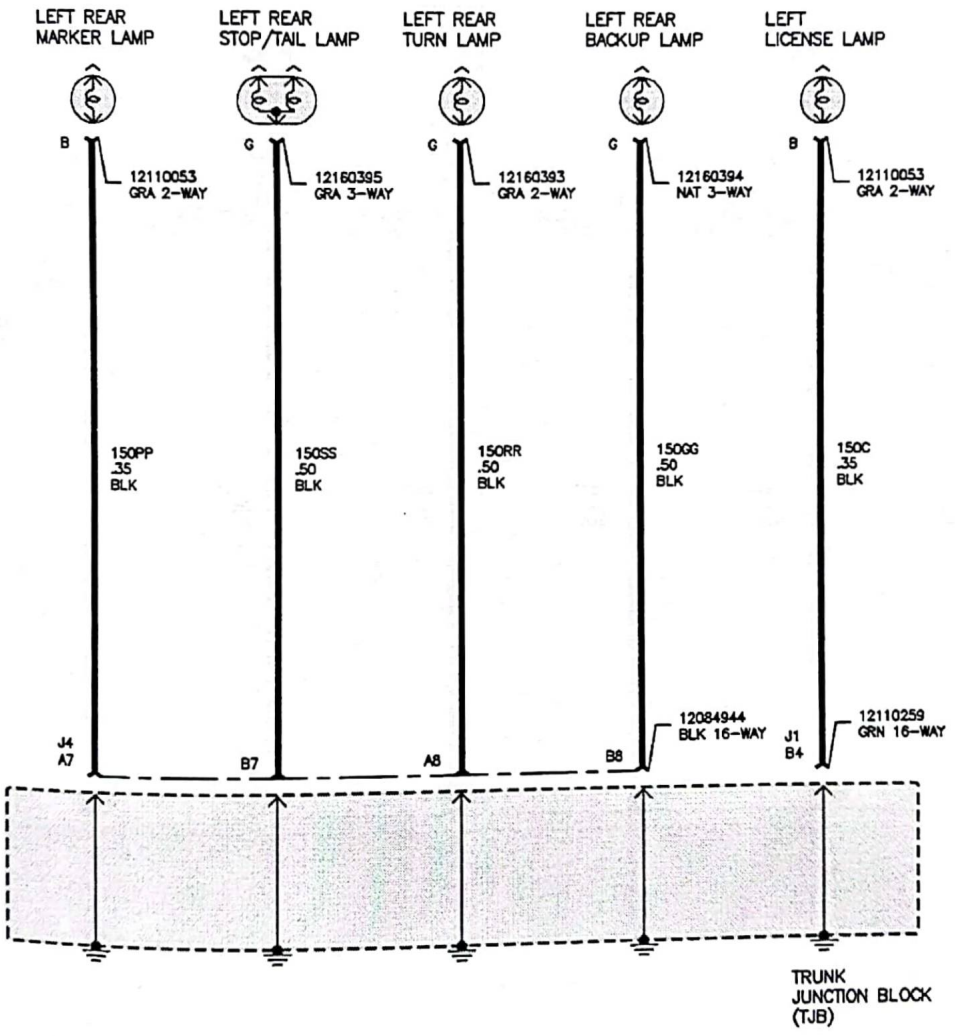

PSMELC68174AA

CamScanner

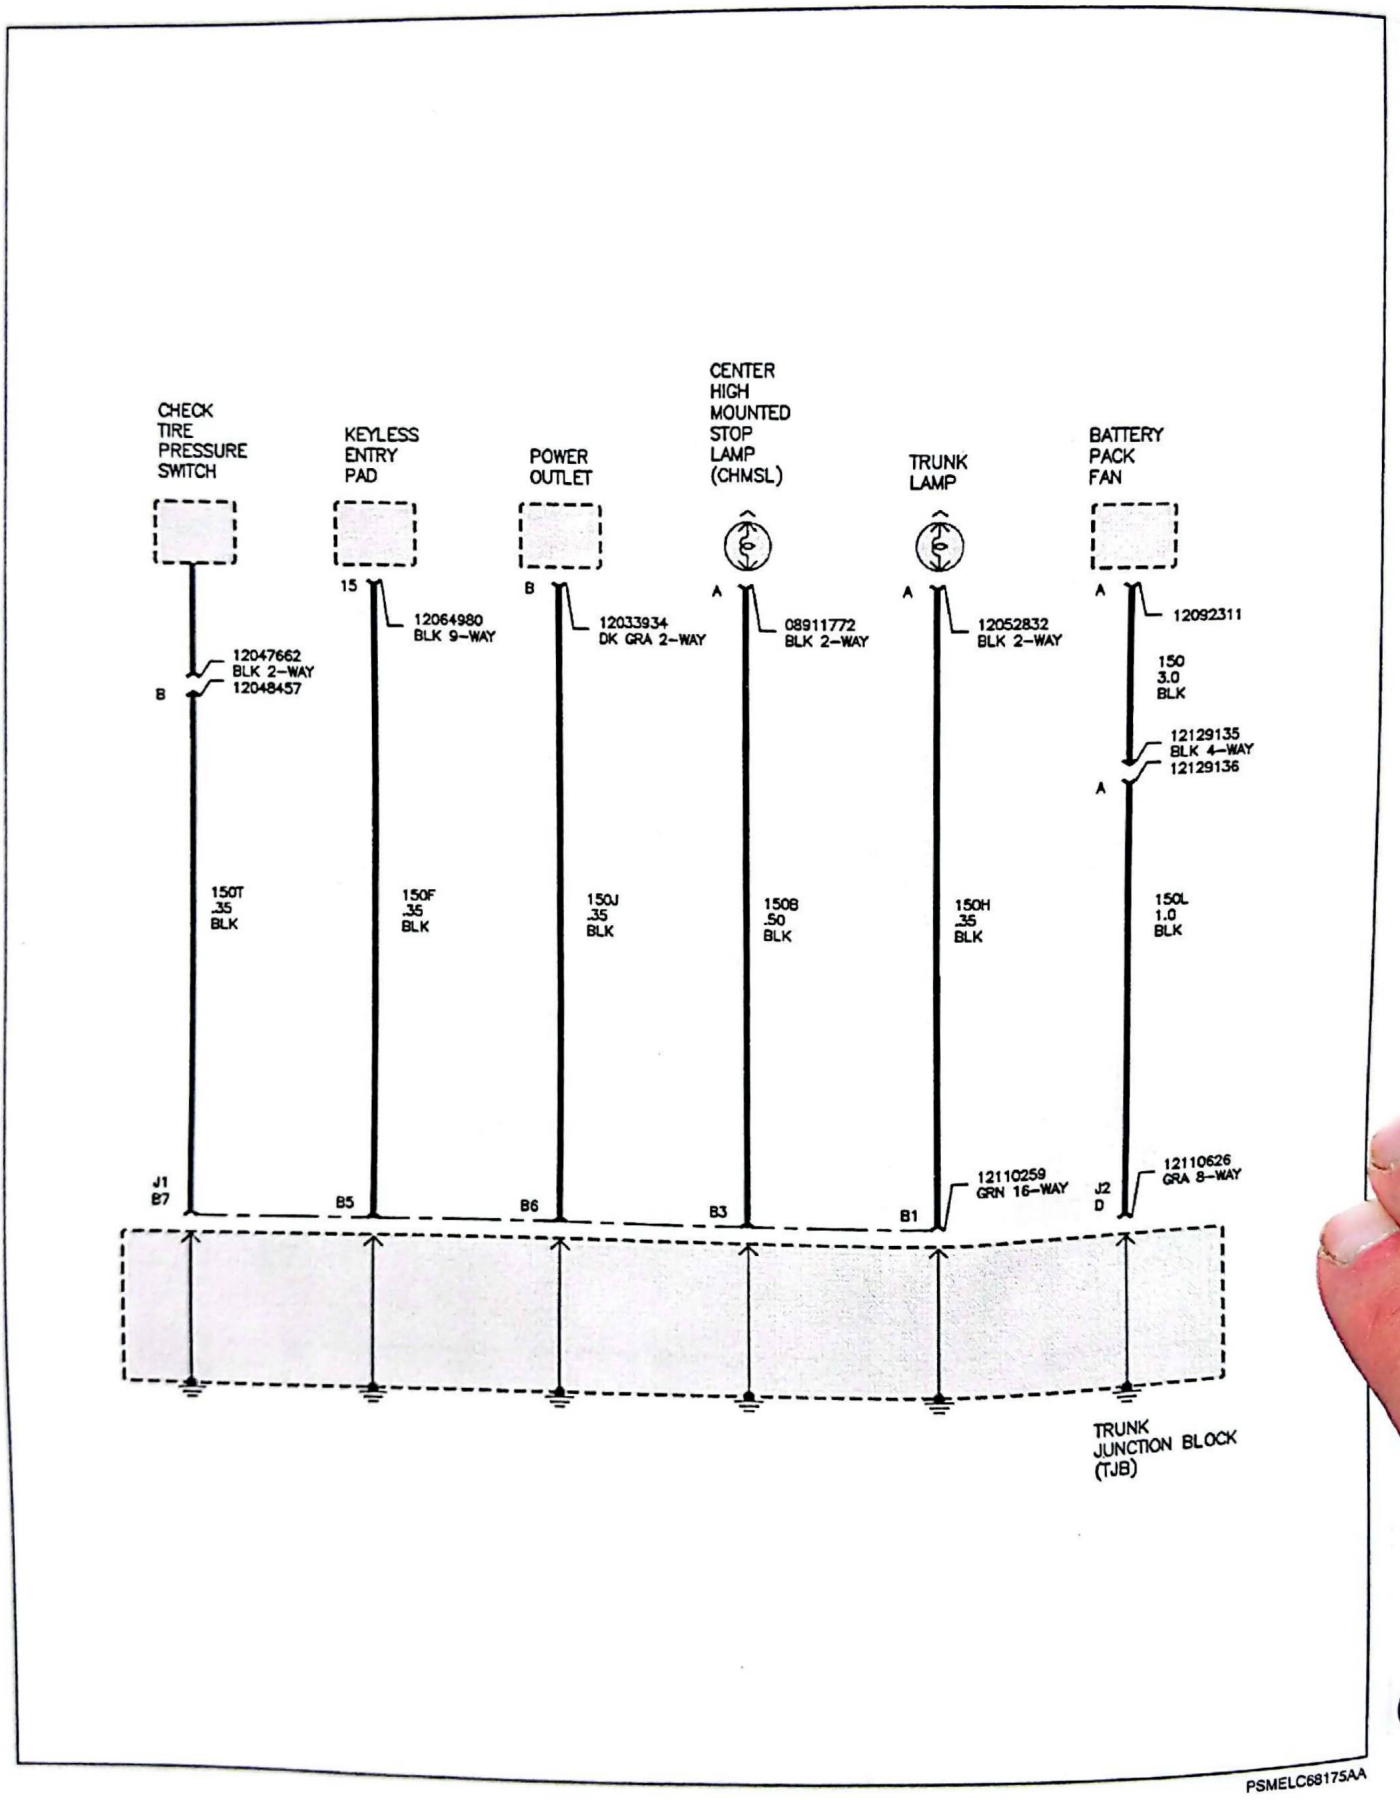
CHECK TIRE PRESSURE SWITCH
KEYLESS ENTRY PAD
POWER OUTLET
CENTER HIGH MOUNTED STOP LAMP (CHMSL)
TRUNK LAMP
BATTERY PACK FAN
12047662 BLK 2-WAY 12048457
12064980 BLK 9-WAY
12033934 DK GRA 2-WAY
08911772 BLK 2-WAY
12052832 BLK 2-WAY
12092311
150 3.0 BLK
12129135 BLK 4-WAY 12129136
150T .35 BLK
150F .35 BLK
150J .35 BLK
150B .50 BLK
150H .35 BLK
150L 1.0 BLK
12110259 GRN 16-WAY
12110626 GRA 8-WAY
J1 B7
B5
B6
B3
B1
J2 D
TRUNK JUNCTION BLOCK (TJB)
PSMELC68175AA

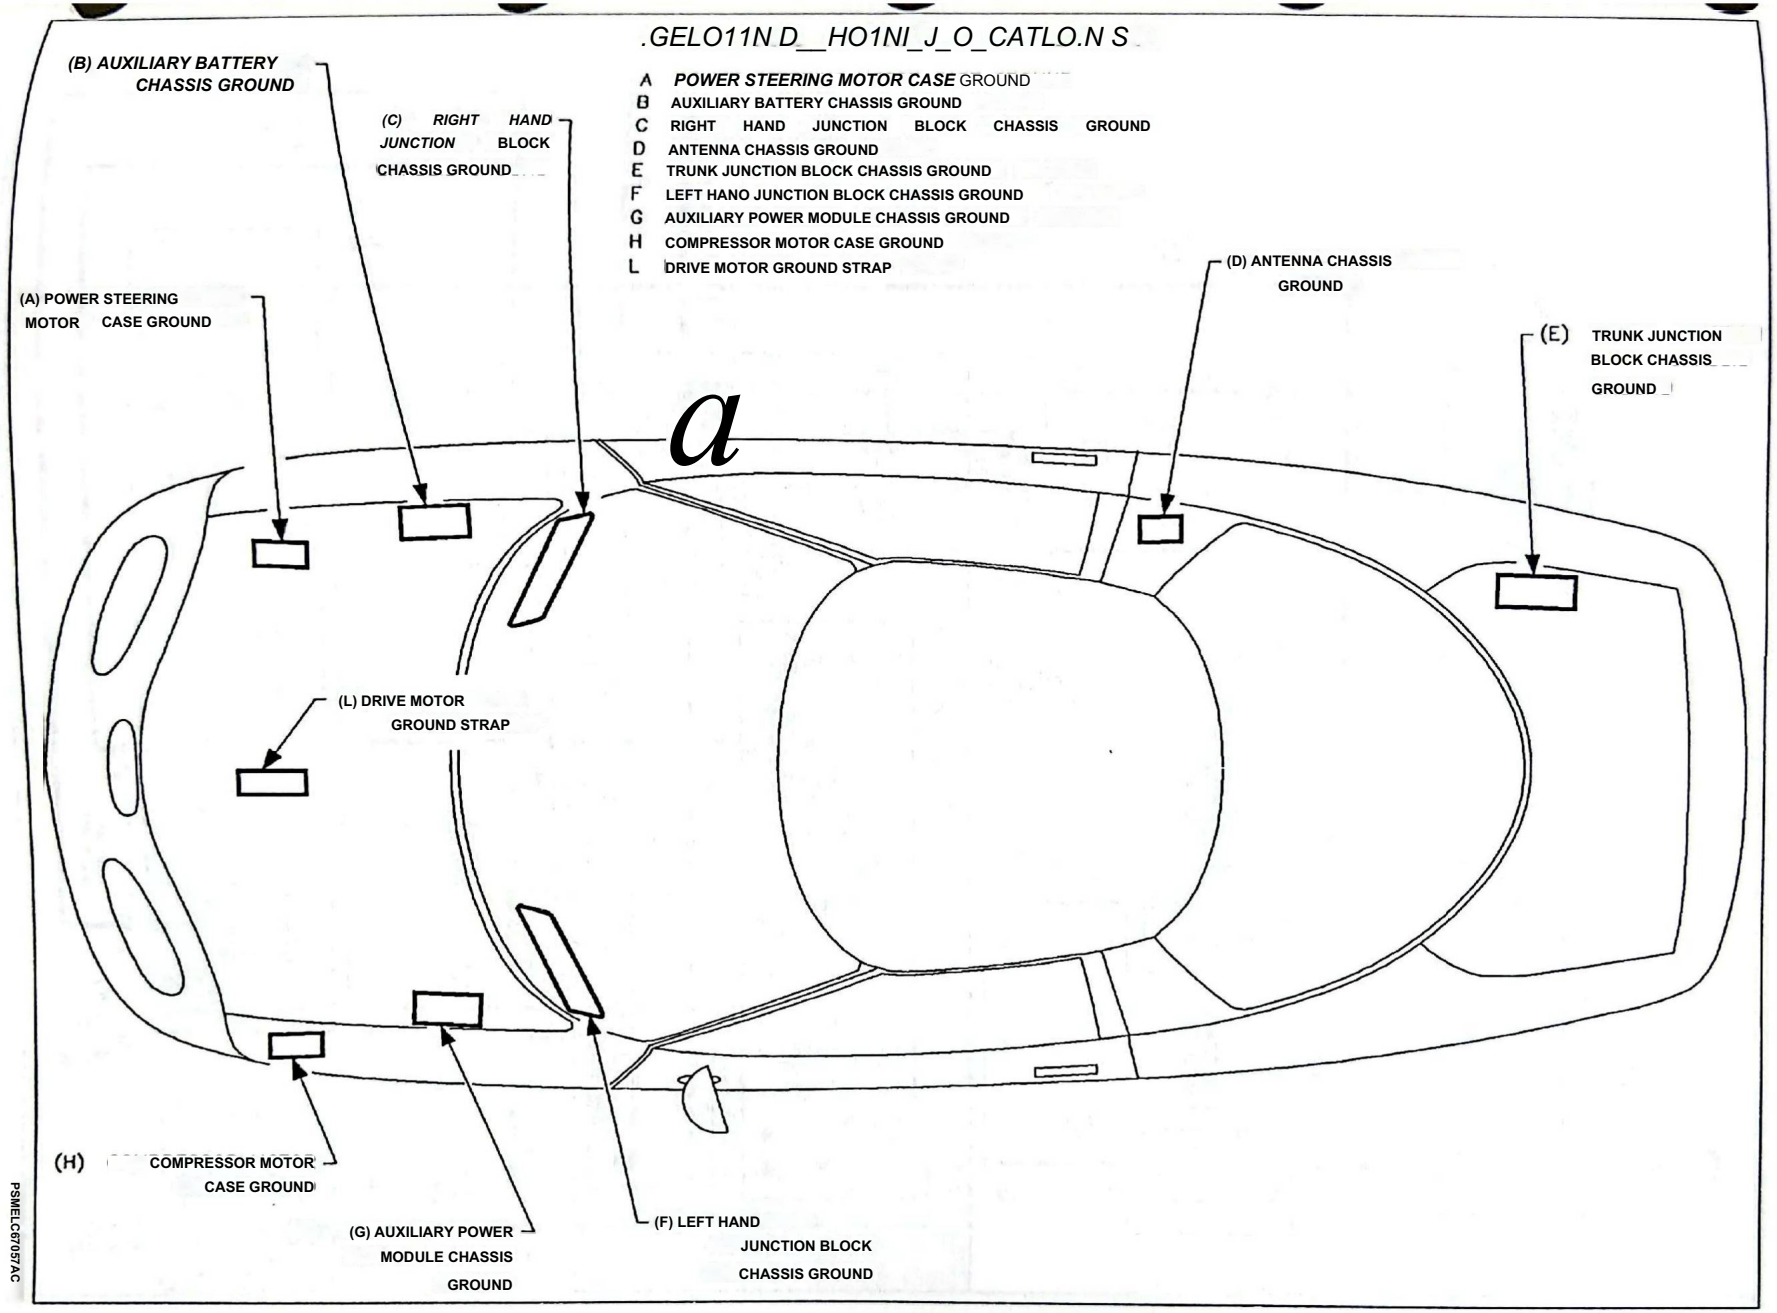
.GELO11N D__HO1NI_J_O_CATLO.N S
A POWER STEERING MOTOR CASE GROUND
B AUXILIARY BATTERY CHASSIS GROUND
C RIGHT HAND JUNCTION BLOCK CHASSIS GROUND
D ANTENNA CHASSIS GROUND
E TRUNK JUNCTION BLOCK CHASSIS GROUND
F LEFT HANO JUNCTION BLOCK CHASSIS GROUND
G AUXILIARY POWER MODULE CHASSIS GROUND
H COMPRESSOR MOTOR CASE GROUND
L DRIVE MOTOR GROUND STRAP
(B) AUXILIARY BATTERY CHASSIS GROUND
(C) RIGHT HAND JUNCTION BLOCK CHASSIS GROUND
(A) POWER STEERING MOTOR CASE GROUND
(D) ANTENNA CHASSIS GROUND
(E) TRUNK JUNCTION BLOCK CHASSIS GROUND
a
(L) DRIVE MOTOR GROUND STRAP
(H) COMPRESSOR MOTOR CASE GROUND
(G) AUXILIARY POWER MODULE CHASSIS GROUND
(F) LEFT HAND JUNCTION BLOCK CHASSIS GROUND
PSMELC67057AC

CamScanner

HEADLAMPS

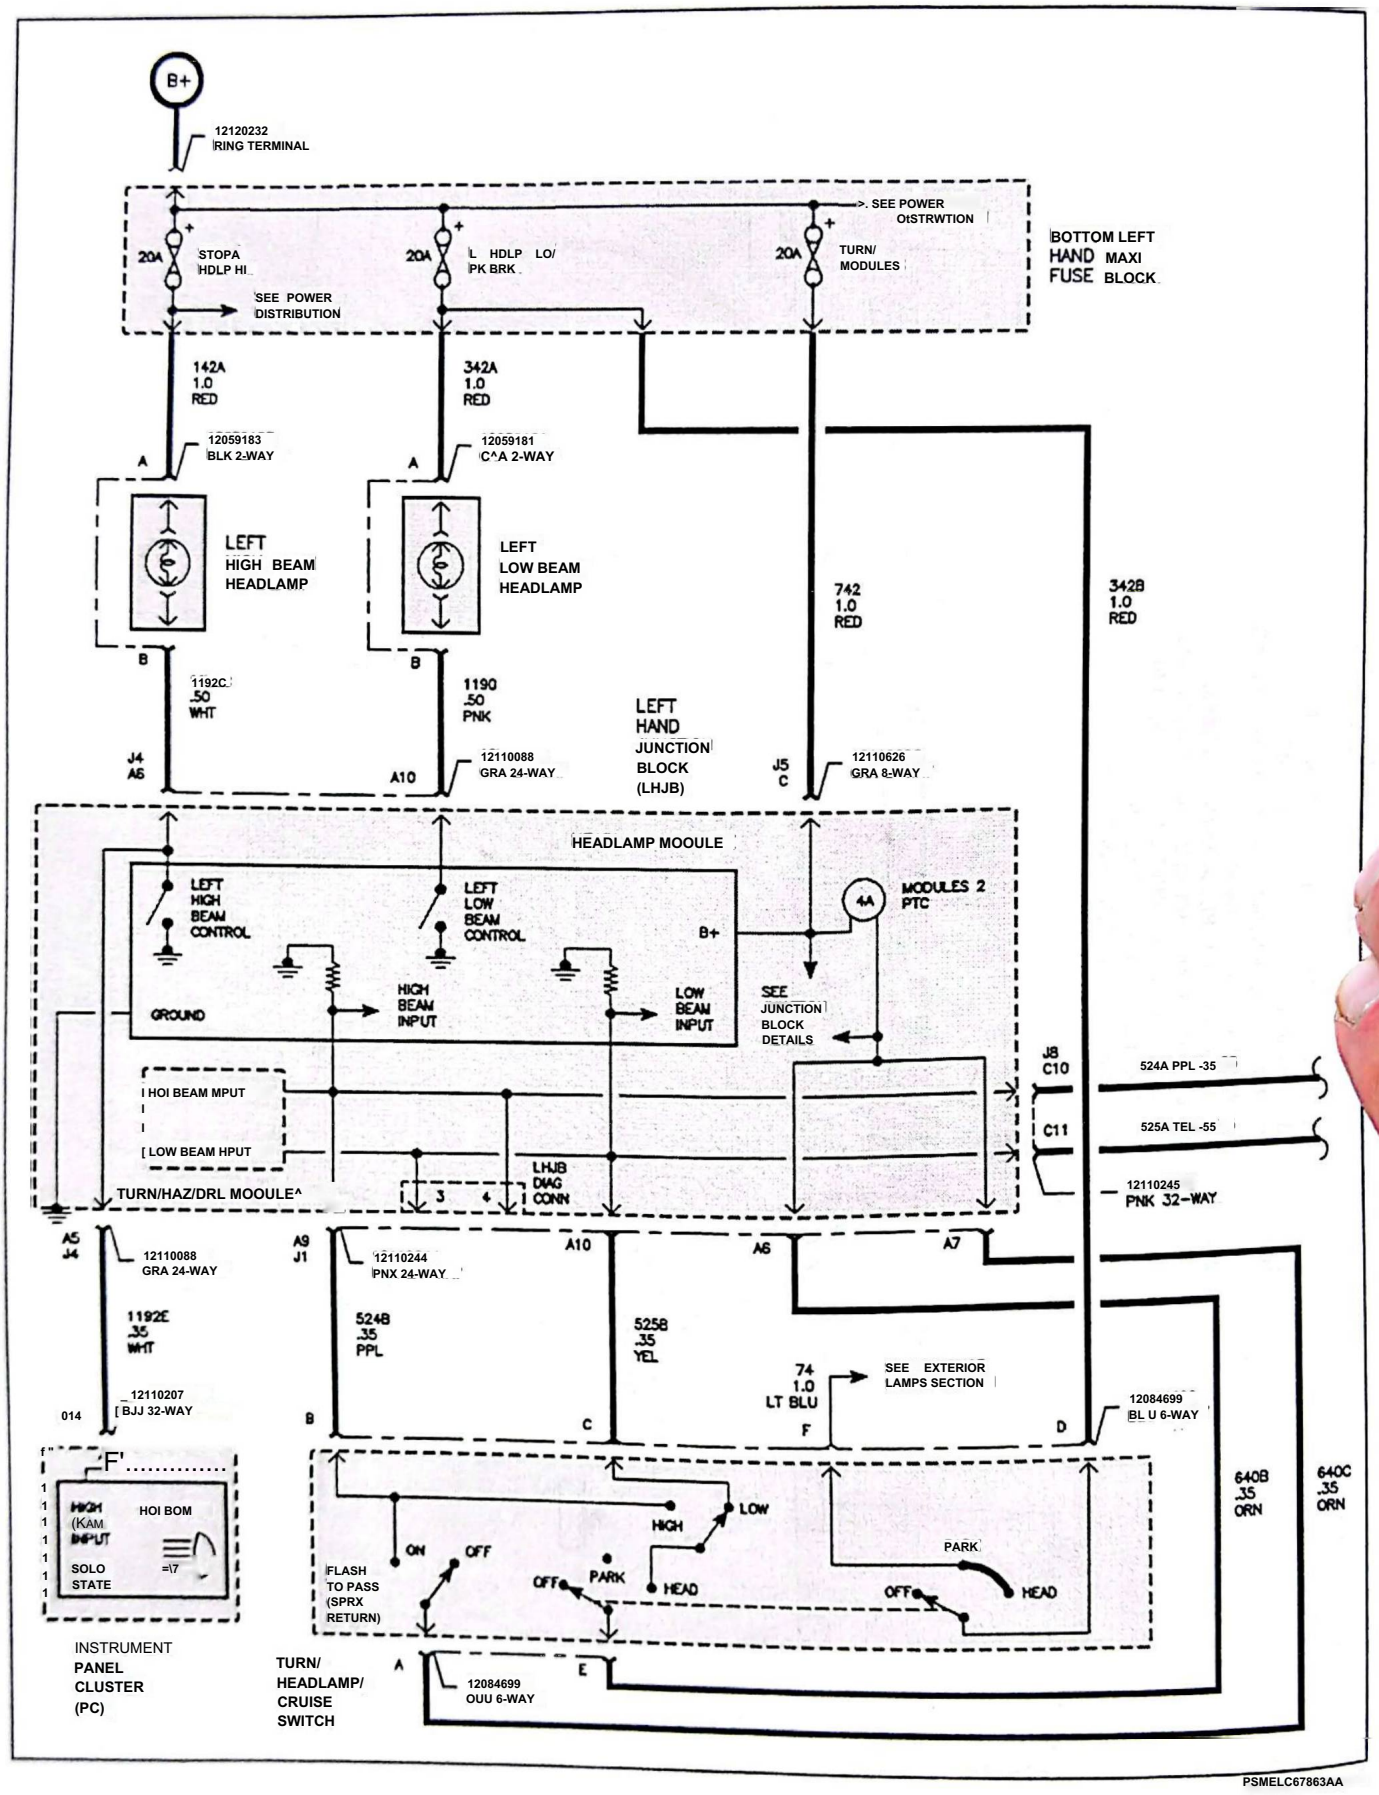

CamScanner

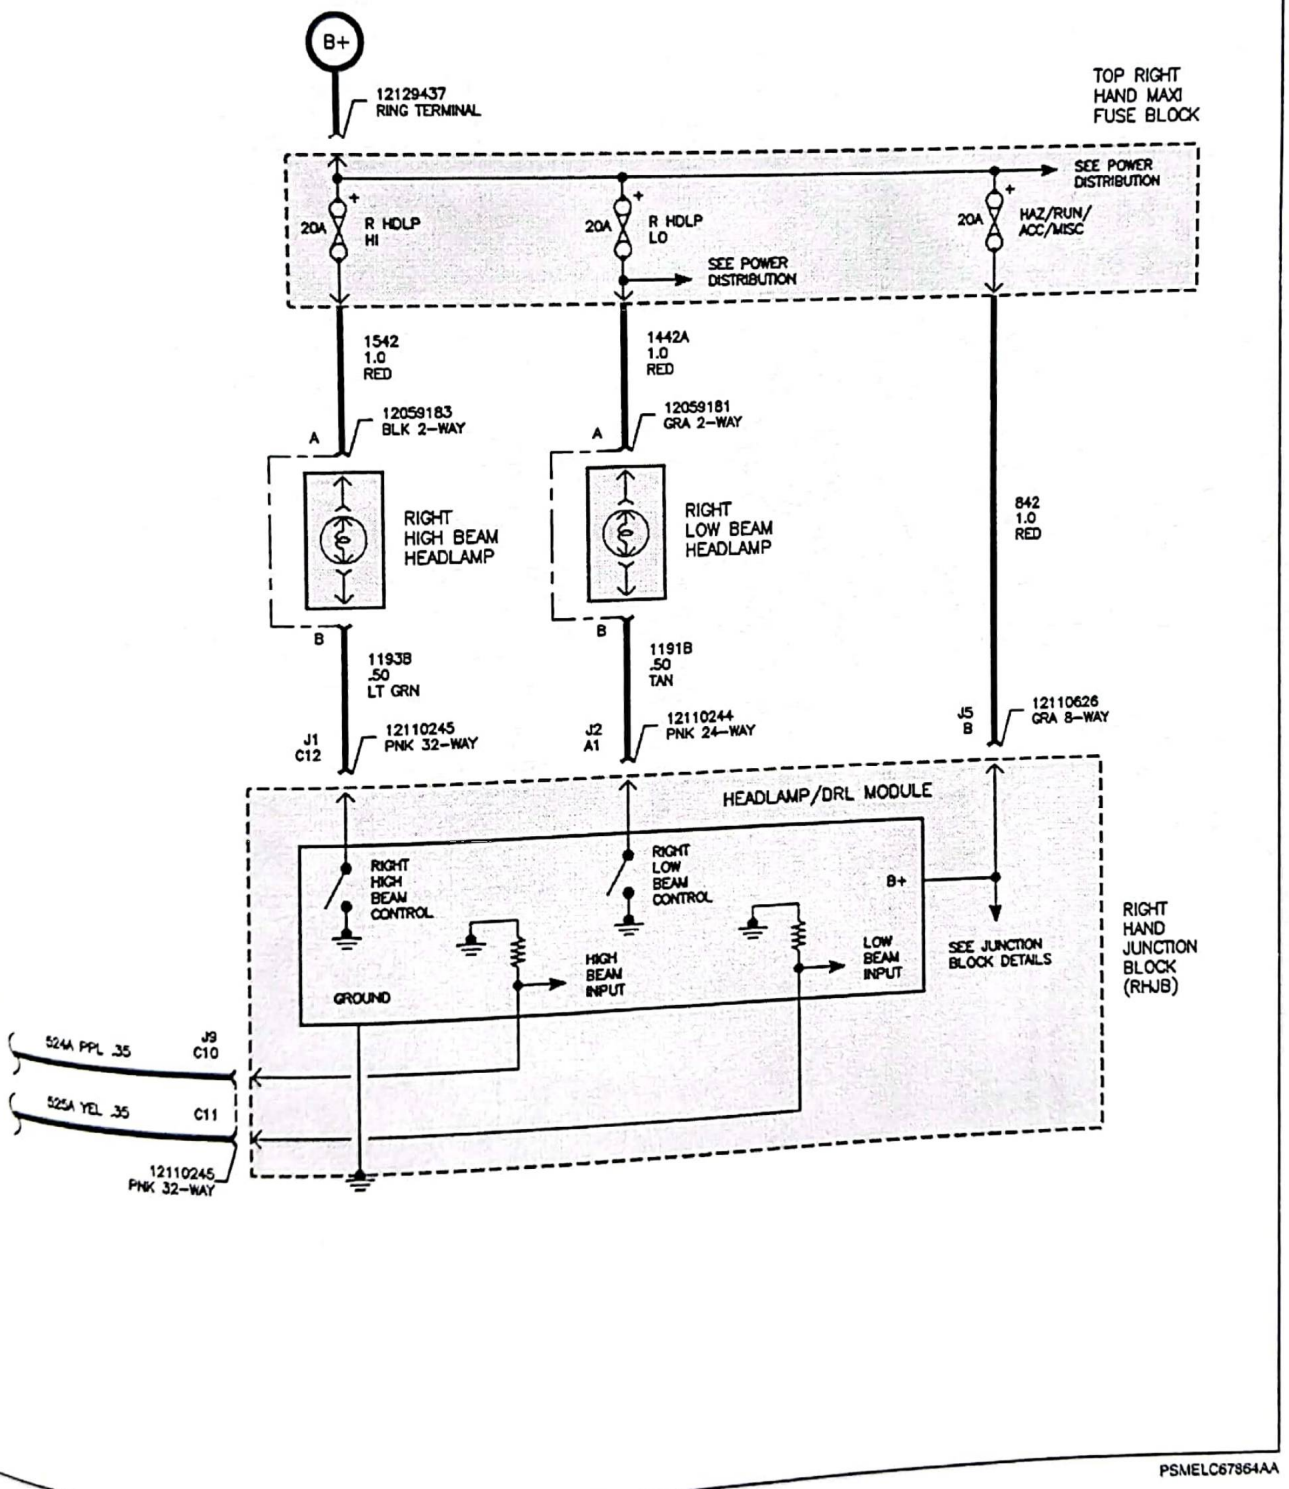

PSMELC67864AA

CamScanner

HEADLAMP COMPONENT LOCATION VIEWS

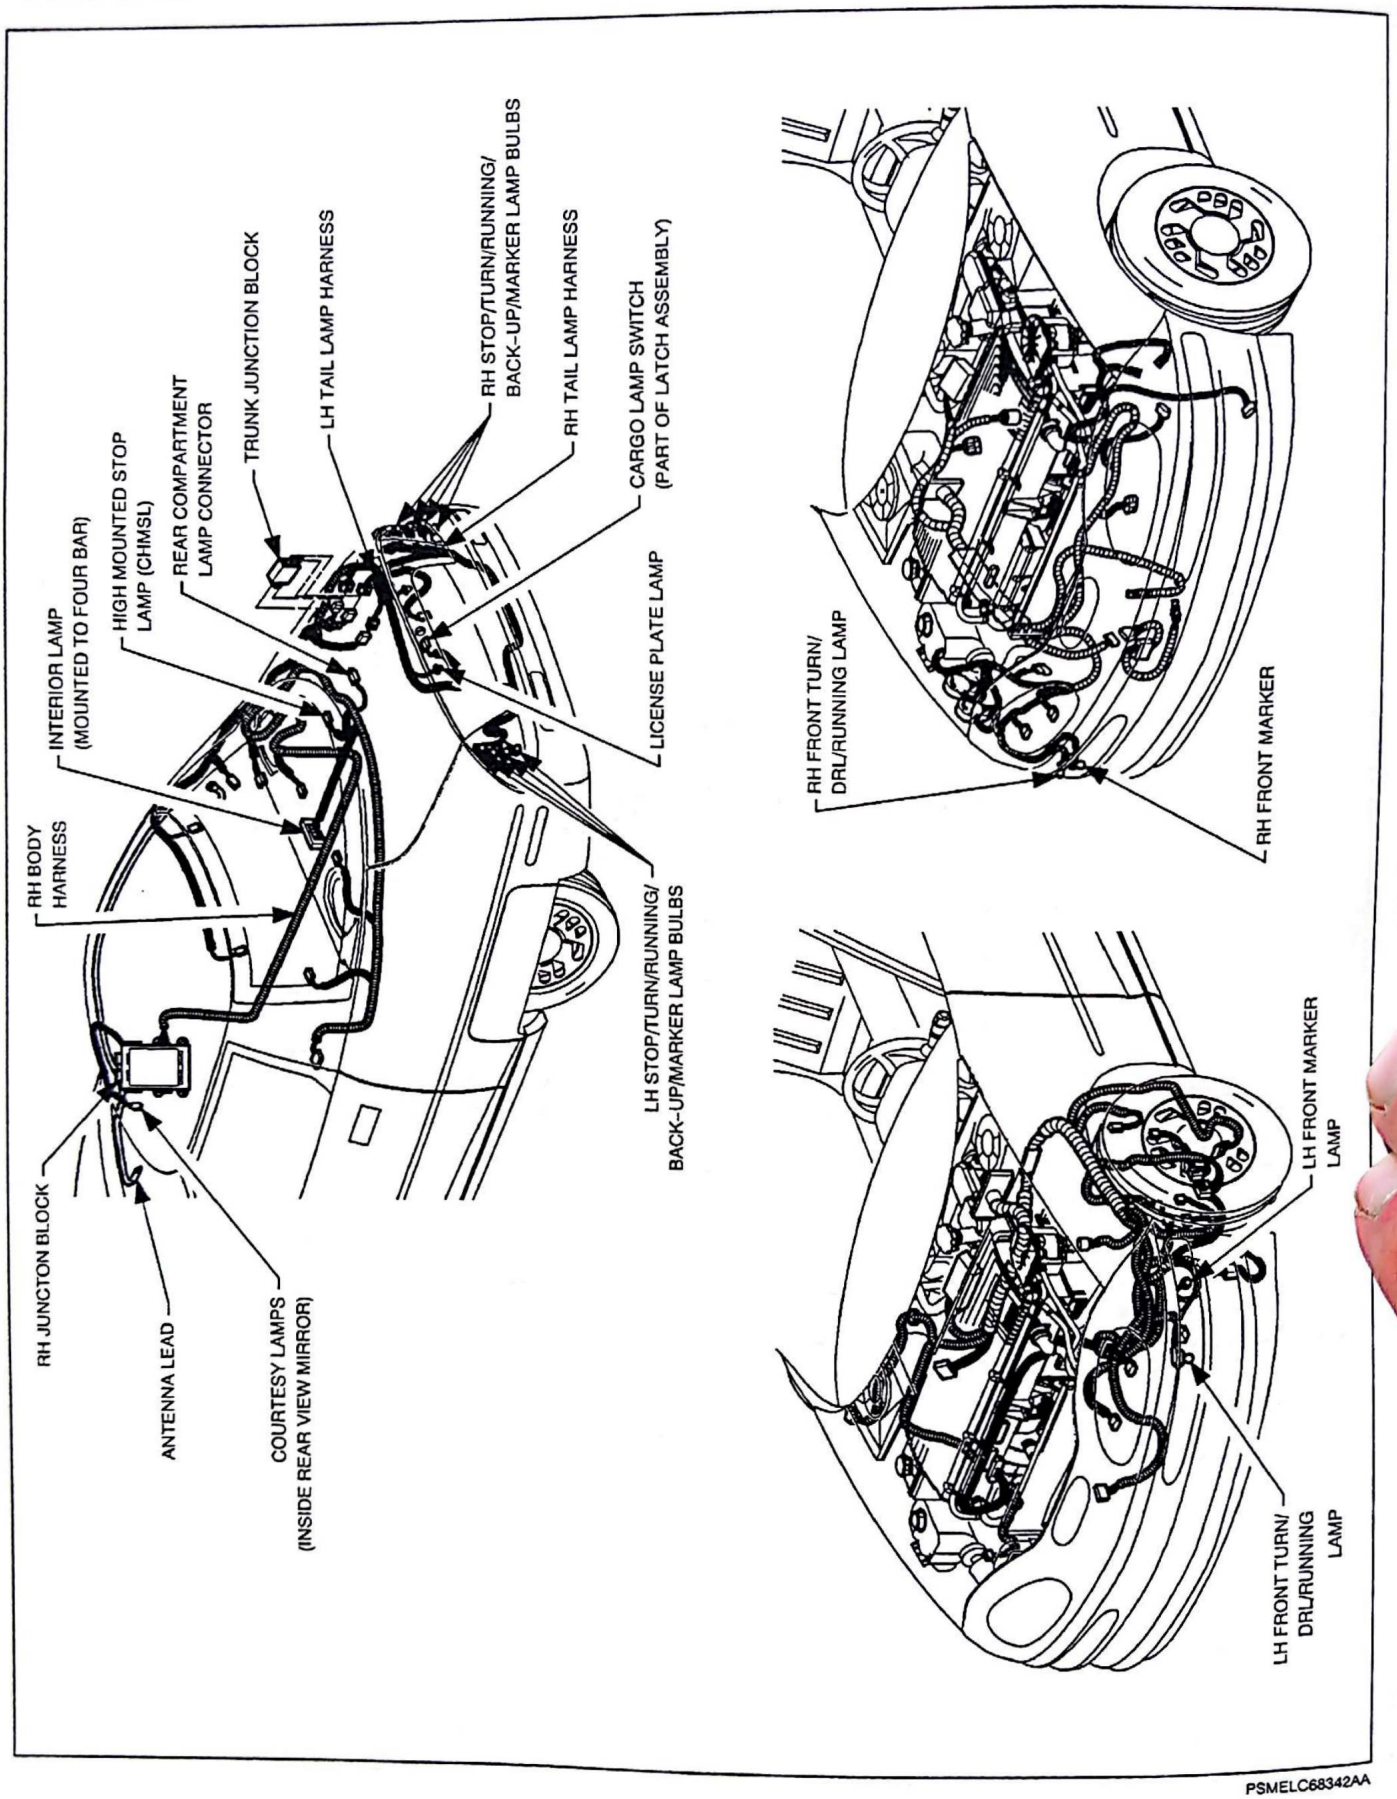
RH JUNCTON BLOCK
ANTENNA LEAD
COURTESY LAMPS (INSIDE REAR VIEW MIRROR)
RH BODY HARNESS
INTERIOR LAMP (MOUNTED TO FOUR BAR)
HIGH MOUNTED STOP LAMP (CHMSL)
REAR COMPARTMENT LAMP CONNECTOR
TRUNK JUNCTION BLOCK
LH TAIL LAMP HARNESS
RH STOP/TURN/RUNNING/ BACK-UP/MARKER LAMP BULBS
RH TAIL LAMP HARNESS
CARGO LAMP SWITCH (PART OF LATCH ASSEMBLY)
LICENSE PLATE LAMP
LH STOP/TURN/RUNNING/ BACK-UP/MARKER LAMP BULBS
RH FRONT TURN/ DRL/RUNNING LAMP
RH FRONT MARKER
LH FRONT MARKER LAMP
LH FRONT TURN/ DRL/RUNNING LAMP

PSMELC68342AA

HEADLAMPS

CIRCUIT OPERATION

Four dedicated maxi fuses supply battery power to the four headlamps at all times. The left side headlamps receive power from two dedicated fuses in the LH maxi fuse block, and the right side from the RH maxi fuse block. Each of the headlamps have a dedicated ground that is controlled by the headlamp module in the left hand junction block (LHJB) or right hand junction block (RHJB).

Battery' power flows through the LHJB to the headlamp switch. When the headlamp switch is turned On in low beams, power flows through circuit 525 back to the headlamp module in the LHJB and through the LHJB to the headlamp module in the RHJB. The respective headlamp modules then ground the low beam headlamps to turn them On.

If high beams are selected, power flows from the headlight switch through circuit 524 in the same way to the LHJB and through the LHJB to the RHJB to the headlamp modules. The headlamp modules then each ground the high beam headlamps on their respective sides.

The high beam indicator in the IPC is turned On when the IPC senses circuit 1192E drop below 1.5 volts.

FLASH TO PASS

The flash to pass feature allows high beams to be turned On momentarily while the headlamp switch is turned Off. If the headlamp switch is pulled (as if switching between low and high beams) with the headlamps Off, the high beam circuit 524 is powered to the headlamp modules. This power remains as long as the switch is held in the rearward position. This is the same circuit and signal to the headlamp modules as if normal high beam headlamps were selected, and the headlamp modules react by providing a ground to the high beam lamps as long as circuit 524 remains powered. If the vehicle speed is 40 km/h (25 mph) or less when flash to pass is activated the pedestrian alert is also sounded. For more information on the pedestrian alert, refer to the Horn section in this manual.

SYSTEM CHECK

IMPORTANT: Check the operation of all headlamp functions before selecting a trouble tree, otherwise misdiagnosis could occur. Verify proper operation of Hi beams, Lo beams, and flash to pass and note whether one or both bulbs in each of these case? is Xted Si pYcL the trouble tree that matches the symptom of the vehicle you are working on.

HEADLAMPS TROUBLE TREE INDEX

- Chart 1 - Left Headlamp High Beam Inoperative Only
- Chart 2 - Right Headlamp High Beam Inoperative Only
- Chart 3 - Left Headlamp Low Beam Inoperative Only
- Chart 4 - Right Headlamp Low Beam Inoperative On y
- Chart 5 - Left Headlamp High Beam On All the Time
- Chart 6 - Right Headlamp High Beam On All the Tim e
- Chart 7 - Left Headlamp Low Beam On All the Time
- Chart 8 - Right Headlamp Low Beam On All the Tim e
- Chart 9 - Only High Beams Inoperative
- Chart 10 - Only Low Beams Inoperative
- Chart 11 - Roth High Beams On All the Time
- Chart 12-Both Low Beams On All the Time nnera tive
- Chart 13 - Flash to Pass Inoperative/Lo and Hi Beam s In

CamScanner

LEFT HEADLAMP HIGH BEAM INOPERATIVE ONLY

CHART 1

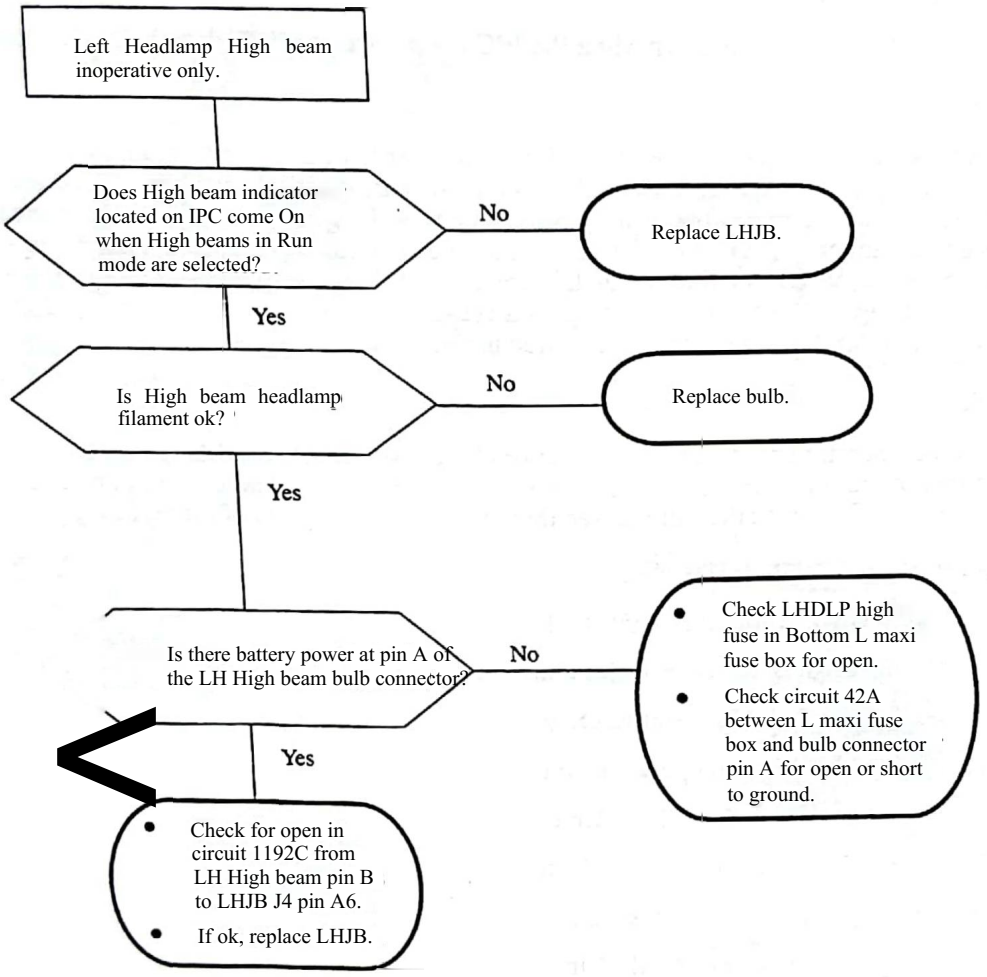
Left Headlamp High beam inoperative only.
Does High beam indicator located on IPC come On when High beams in Run mode are selected?
No
Replace LHJB.
Yes
Is High beam headlamp filament ok?
No
Replace bulb.
Yes
Is there battery power at pin A of the LH High beam bulb connector?
No
Check LHDLP high fuse in Bottom L maxi fuse box for open.
Check circuit 42A between L maxi fuse box and bulb connector pin A for open or short to ground.
Yes
Check for open in circuit 1192C from LH High beam pin B to LHJB J4 pin A6.
If ok, replace LHJB.

CamScanner

RIGHT HEADLAMP HIGH BEAM INOPERATIVE ONLY

CHART 2

IMPORTANT Make sure to perform System Check before going through this trouble tree.

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

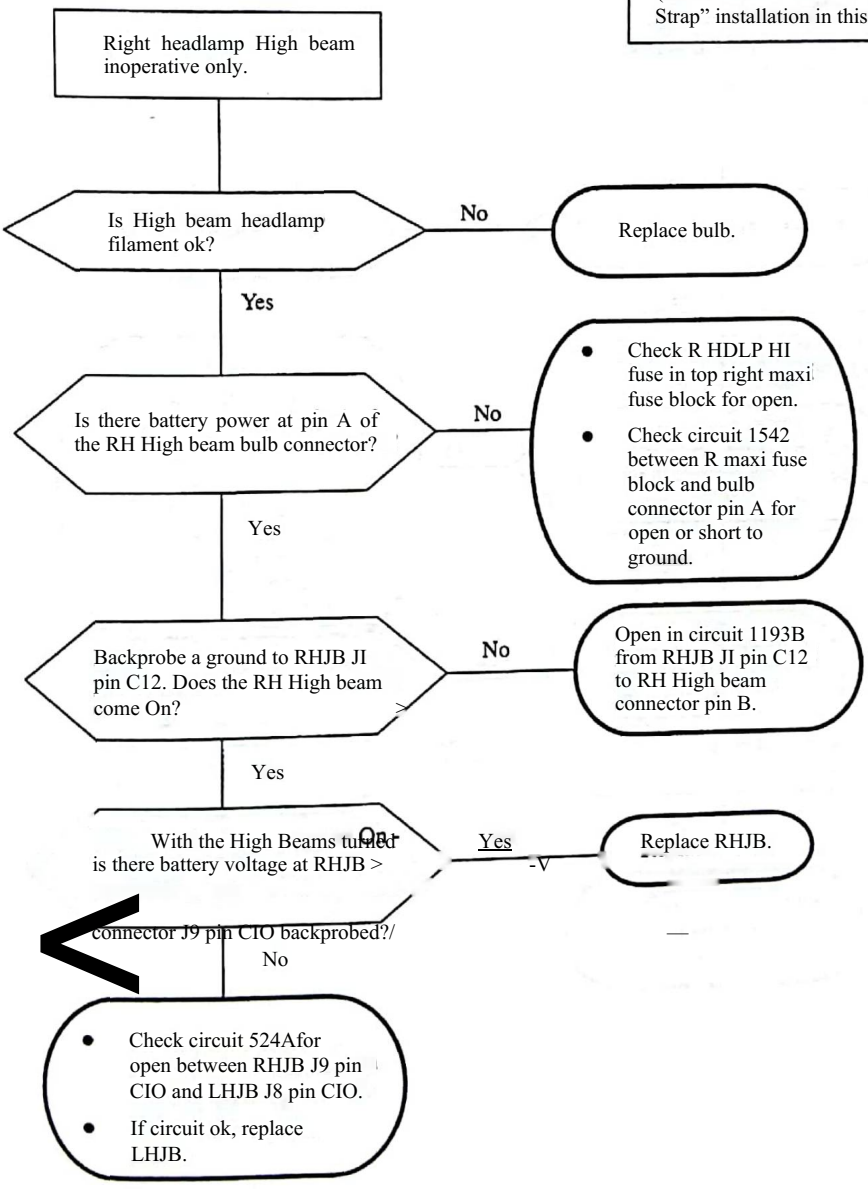
Right headlamp High beam inoperative only.
Is High beam headlamp filament ok?
No
Replace bulb.
Yes
Is there battery power at pin A of the RH High beam bulb connector?
No
• Check R HDLP HI fuse in top right maxi fuse block for open.
• Check circuit 1542 between R maxi fuse block and bulb connector pin A for open or short to ground.
Yes
Backprobe a ground to RHJB JI pin C12. Does the RH High beam come On?
No
Open in circuit 1193B from RHJB JI pin C12 to RH High beam connector pin B.
Yes
With the High Beams turned On, is there battery voltage at RHJB > connector J9 pin CIO backprobed?/
Yes
-V
Replace RHJB.
No
• Check circuit 524Afor open between RHJB J9 pin CIO and LHJB J8 pin CIO.
• If circuit ok, replace LHJB.

CamScanner

LEFT HEADLAMP LOW BEAM INOPERATIVE ONLY

CHART 3

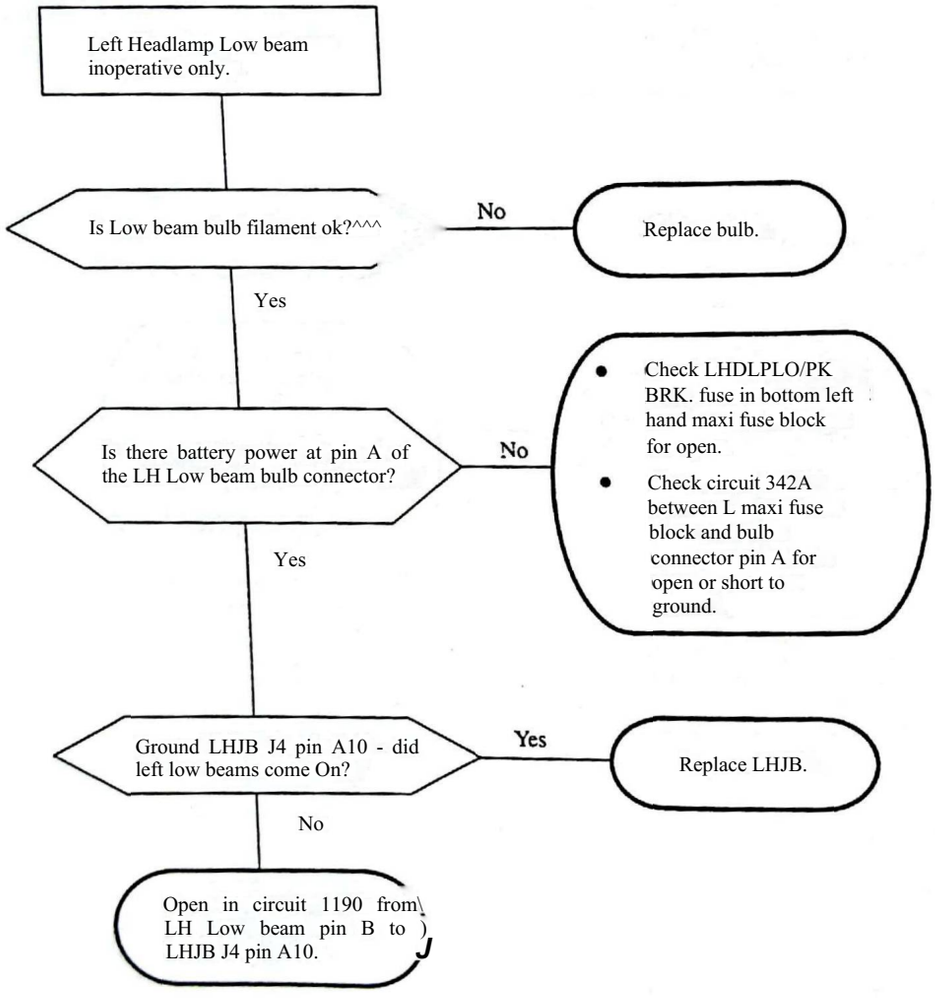
Left Headlamp Low beam inoperative only.
Is Low beam bulb filament ok?^^^
No
Replace bulb.
Yes
Is there battery power at pin A of the LH Low beam bulb connector?
No
Check LHDLPLO/PK BRK. fuse in bottom left hand maxi fuse block for open.
Check circuit 342A between L maxi fuse block and bulb connector pin A for open or short to ground.
Yes
Ground LHJB J4 pin A10 - did left low beams come On?
Yes
Replace LHJB.
No
Open in circuit 1190 from LH Low beam pin B to LHJB J4 pin A10.

CamScanner

RIGHT HEADLAMP LOW BEAM INOPERATIVE ONLY

CHART 4

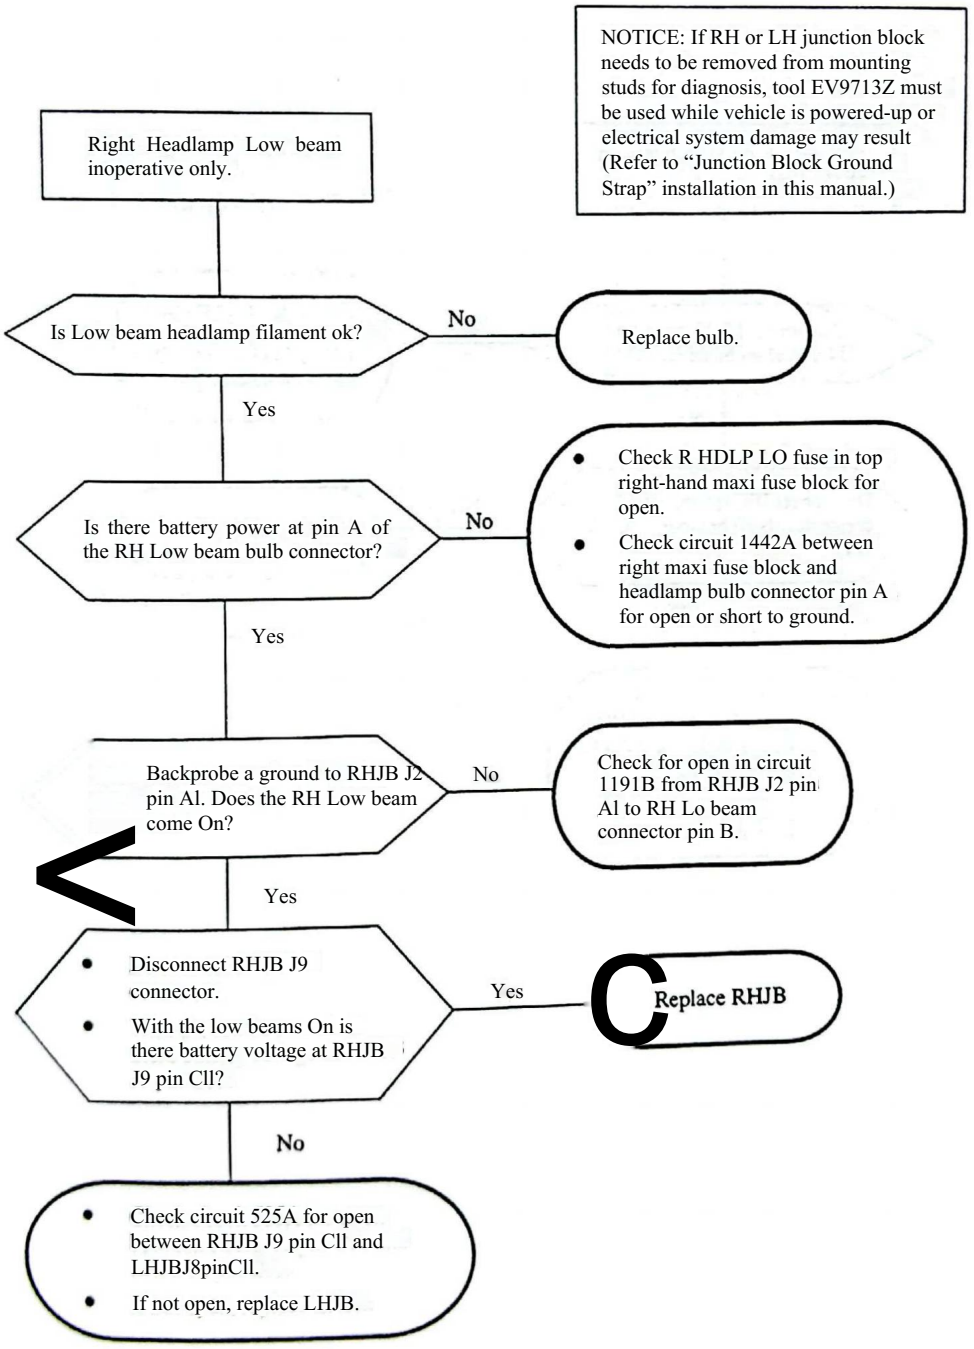
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap" installation in this manual.)
Right Headlamp Low beam inoperative only.
Is Low beam headlamp filament ok?
No
Replace bulb.
Yes
Is there battery power at pin A of the RH Low beam bulb connector?
No
• Check R HDLP LO fuse in top right-hand maxi fuse block for open.
• Check circuit 1442A between right maxi fuse block and headlamp bulb connector pin A for open or short to ground.
Yes
Backprobe a ground to RHJB J2 pin Al. Does the RH Low beam come On?
No
Check for open in circuit 1191B from RHJB J2 pin Al to RH Lo beam connector pin B.
Yes
• Disconnect RHJB J9 connector.
• With the low beams On is there battery voltage at RHJB J9 pin Cll?
Yes
Replace RHJB
No
• Check circuit 525A for open between RHJB J9 pin Cll and LHJBJ8pinCll.
• If not open, replace LHJB.

CamScanner

LEFT HEADLAMP HIGH BEAM ON ALLTHE TIME

CHART 5

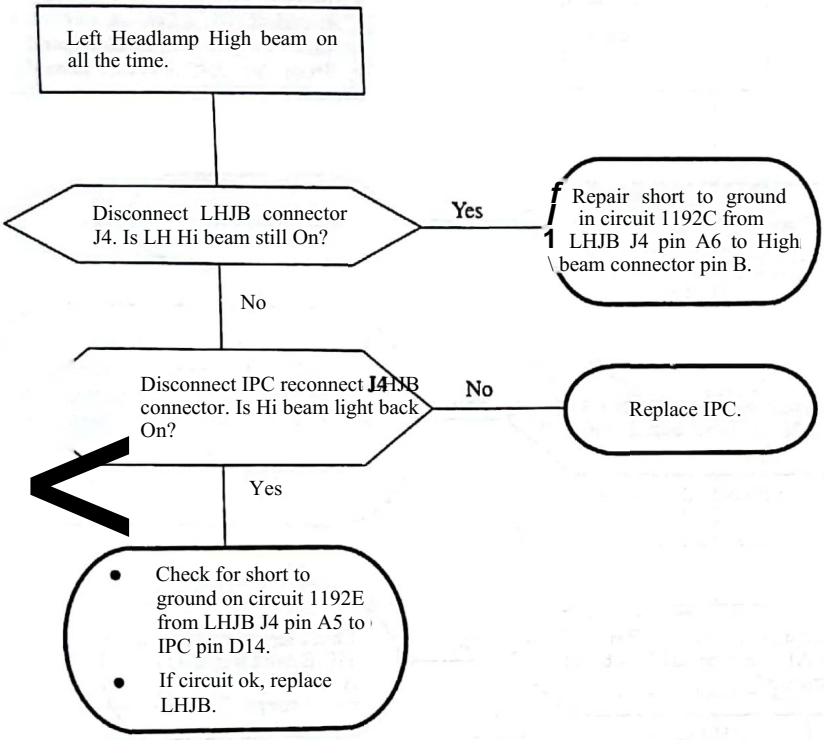
Left Headlamp High beam on all the time.
Disconnect LHJB connector J4. Is LH Hi beam still On?
Yes
Repair short to ground in circuit 1192C from LHJB J4 pin A6 to High beam connector pin B.
No
Disconnect IPC reconnect J4 LHJB connector. Is Hi beam light back On?
No
Replace IPC.
Yes
Check for short to ground on circuit 1192E from LHJB J4 pin A5 to IPC pin D14.
If circuit ok, replace LHJB.

CamScanner

RIGHT HEADLAMP HIGH BEAM ON ALL THE TIME

CHART 6

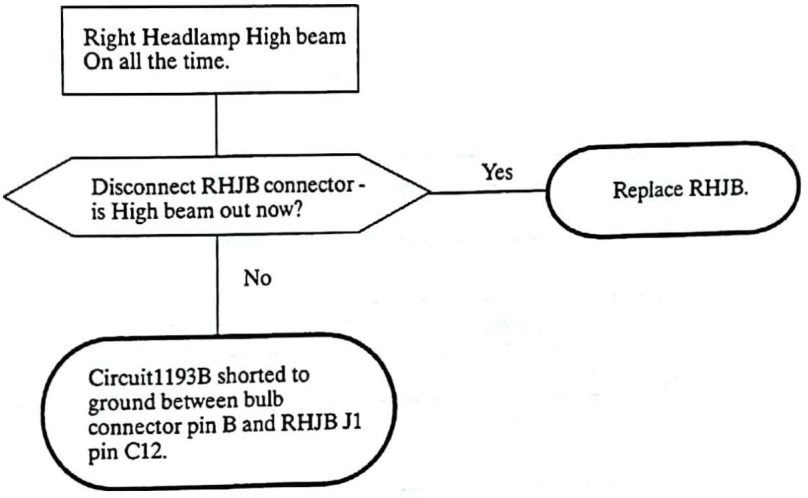
Right Headlamp High beam On all the time.
Disconnect RHJB connector - is High beam out now?
Yes
Replace RHJB.
No
Circuit1193B shorted to ground between bulb connector pin B and RHJB J1 pin C12.

CamScanner

LEFT HEADLAMP LOW BEAM ON ALL THE TIME

CHART 7

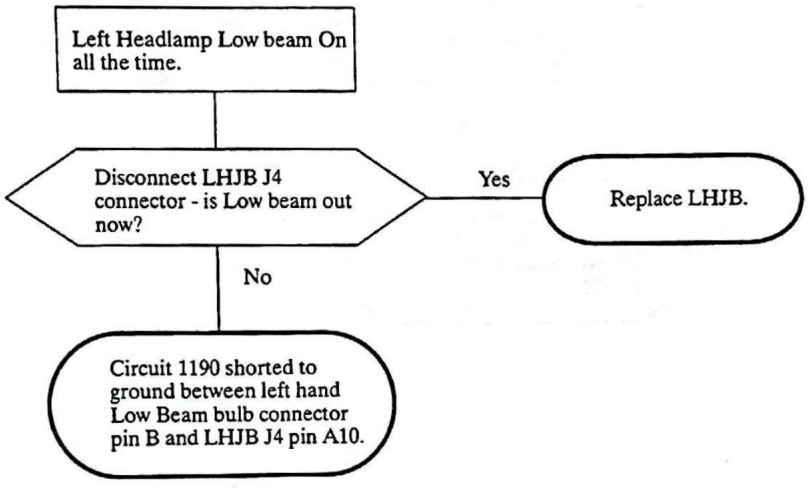
Left Headlamp Low beam On all the time.
Disconnect LHJB J4 connector - is Low beam out now?
Yes
Replace LHJB.
No
Circuit 1190 shorted to ground between left hand Low Beam bulb connector pin B and LHJB J4 pin A10.

CamScanner

RIGHT HEADLAMP LOW BEAM ON ALL THE TIME

CHART 8

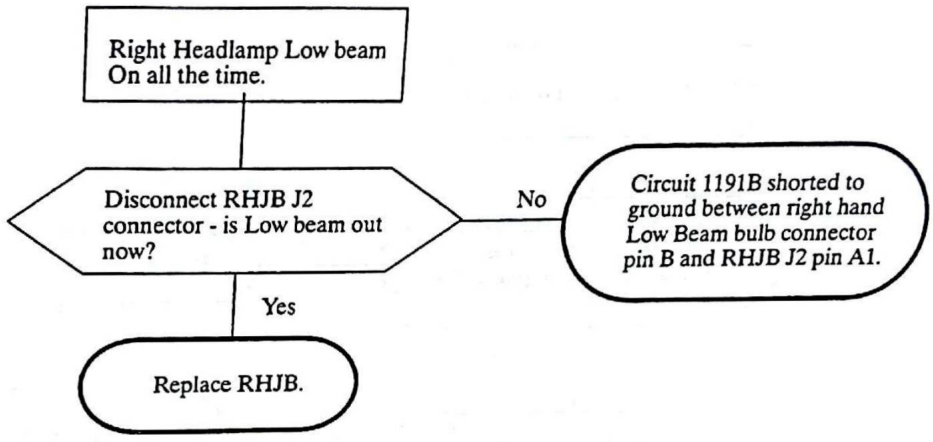
Right Headlamp Low beam On all the time.
Disconnect RHJB J2 connector - is Low beam out now?
No
Circuit 1191B shorted to ground between right hand Low Beam bulb connector pin B and RHJB J2 pin A1.
Yes
Replace RHJB.

ONLY HIGH BEAMS INOPERATIVE

CHART 9

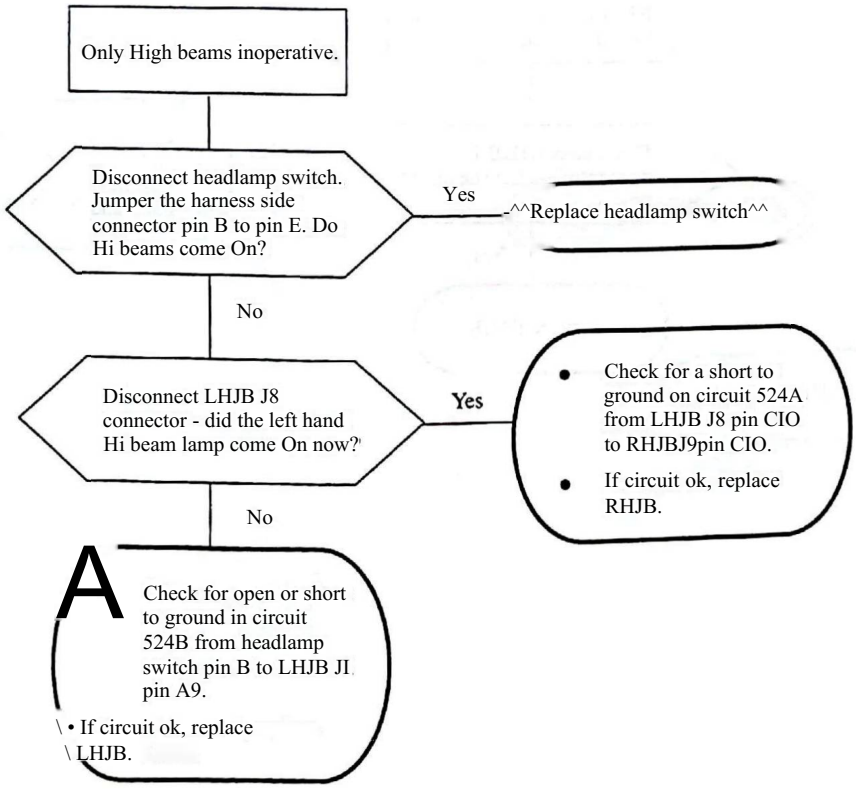
Only High beams inoperative.
Disconnect headlamp switch. Jumper the harness side connector pin B to pin E. Do Hi beams come On?
Yes
-^^Replace headlamp switch^^
No
Disconnect LHJB J8 connector - did the left hand Hi beam lamp come On now?
Yes
• Check for a short to ground on circuit 524A from LHJB J8 pin CIO to RHJBJ9pin CIO.
• If circuit ok, replace RHJB.
No
A
Check for open or short to ground in circuit 524B from headlamp switch pin B to LHJB JI pin A9.
\ • If circuit ok, replace
\ LHJB.

CamScanner

ONLY LOW BEAMS INOPERATIVE

CHART 10

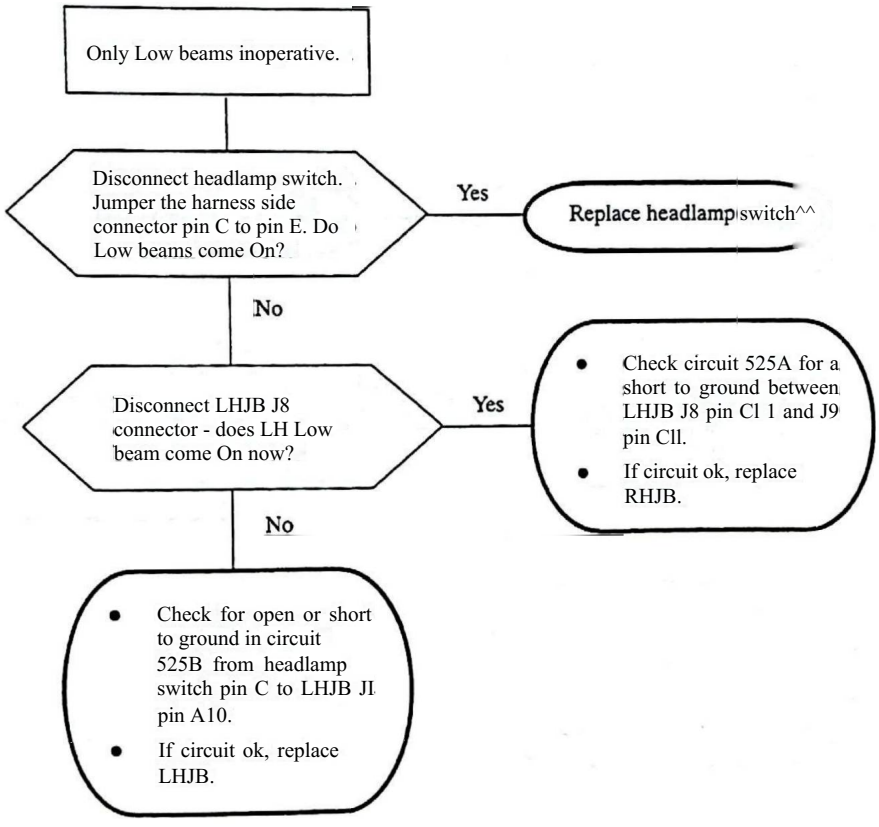
Only Low beams inoperative.
Disconnect headlamp switch. Jumper the harness side connector pin C to pin E. Do Low beams come On?
Yes
Replace headlamp switch^^
No
Disconnect LHJB J8 connector - does LH Low beam come On now?
Yes
Check circuit 525A for a short to ground between LHJB J8 pin Cl 1 and J9 pin Cll.
If circuit ok, replace RHJB.
No
Check for open or short to ground in circuit 525B from headlamp switch pin C to LHJB JI pin A10.
If circuit ok, replace LHJB.

CamScanner

BOTH HIGH BEAMS ON ALL THE TIME

CHART 11

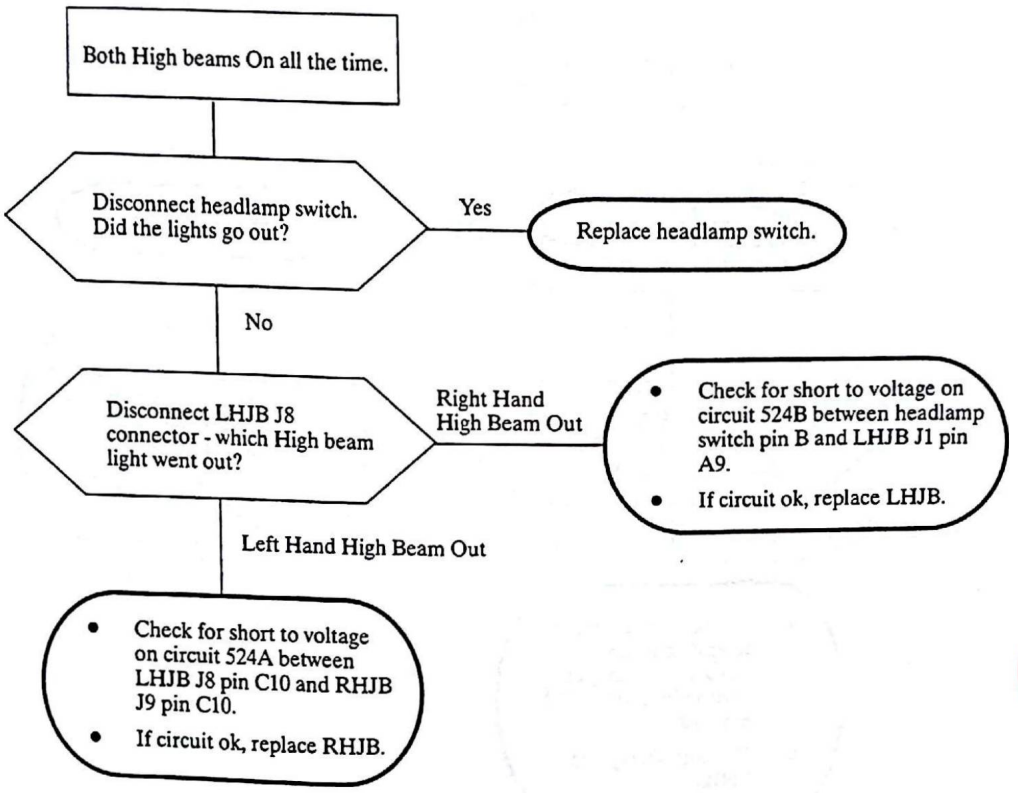
Both High beams On all the time.
Disconnect headlamp switch. Did the lights go out?
Yes
Replace headlamp switch.
No
Disconnect LHJB J8 connector - which High beam light went out?
Right Hand High Beam Out
• Check for short to voltage on circuit 524B between headlamp switch pin B and LHJB J1 pin A9.
• If circuit ok, replace LHJB.
Left Hand High Beam Out
• Check for short to voltage on circuit 524A between LHJB J8 pin C10 and RHJB J9 pin C10.
• If circuit ok, replace RHJB.

CamScanner

BOTH LOW BEAMS ON ALL THE TIME

CHART 12

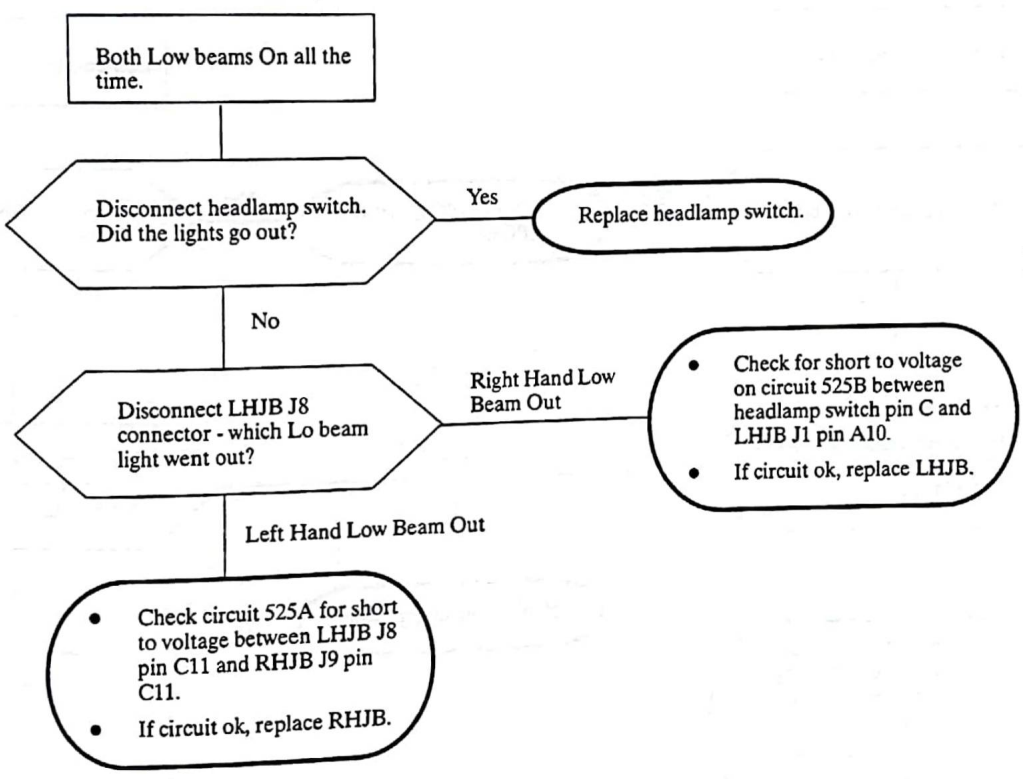
Both Low beams On all the time.
Disconnect headlamp switch. Did the lights go out?
Yes
Replace headlamp switch.
No
Disconnect LHJB J8 connector - which Lo beam light went out?
Right Hand Low Beam Out
• Check for short to voltage on circuit 525B between headlamp switch pin C and LHJB J1 pin A10.
• If circuit ok, replace LHJB.
Left Hand Low Beam Out
• Check circuit 525A for short to voltage between LHJB J8 pin C11 and RHJB J9 pin C11.
• If circuit ok, replace RHJB.

CamScanner

FLASH TO PASS INOPERATIVE/LO AND HIGH BEAMS INOPERATIVE

CHART 13

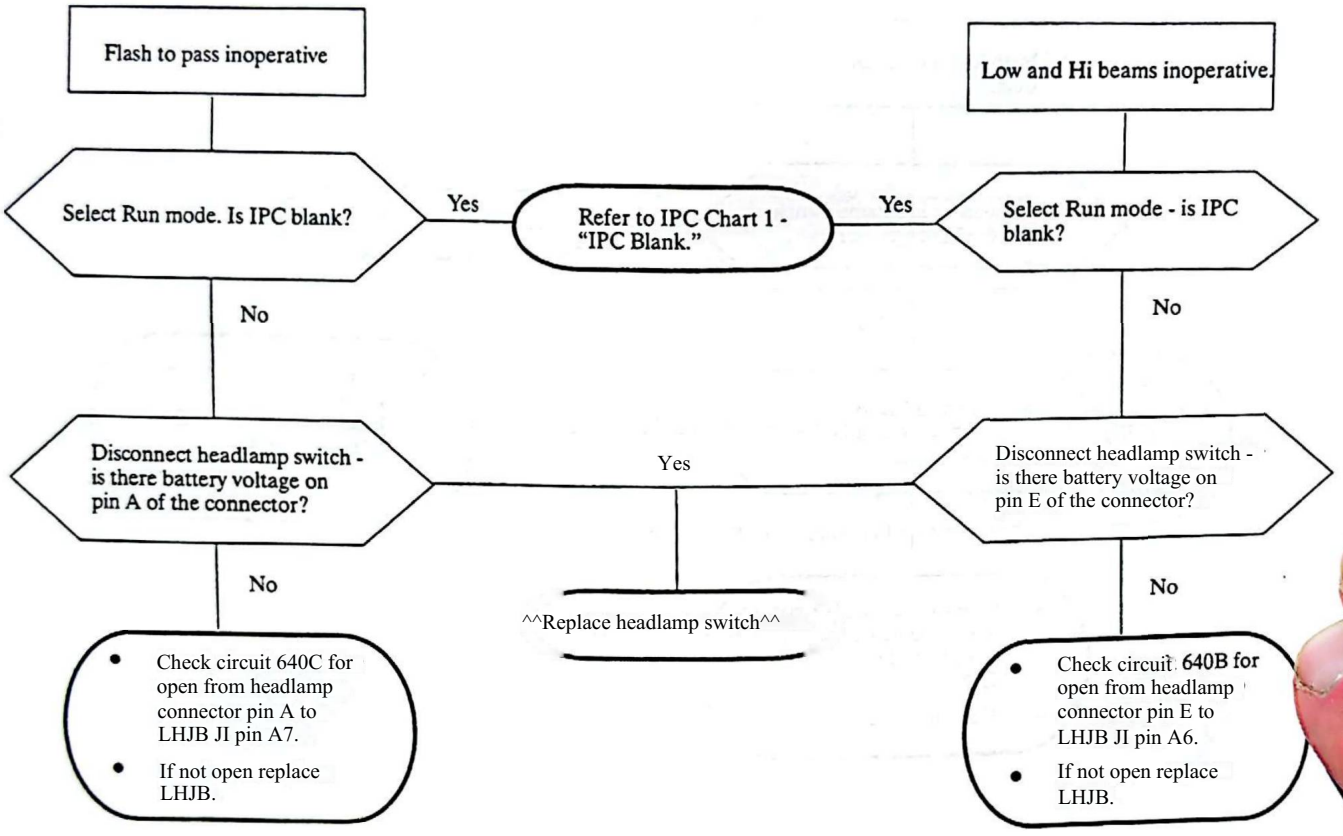
Flash to pass inoperative
Low and Hi beams inoperative.
Select Run mode. Is IPC blank?
Yes
Refer to IPC Chart 1 - "IPC Blank."
Yes
Select Run mode - is IPC blank?
No
No
Disconnect headlamp switch - is there battery voltage on pin A of the connector?
Yes
Disconnect headlamp switch - is there battery voltage on pin E of the connector?
No
No
^^Replace headlamp switch^^
• Check circuit 640C for open from headlamp connector pin A to LHJB JI pin A7.
• If not open replace LHJB.
• Check circuit 640B for open from headlamp connector pin E to LHJB JI pin A6.
• If not open replace LHJB.

CamScanner

NOTES

CamScanner

HORNS

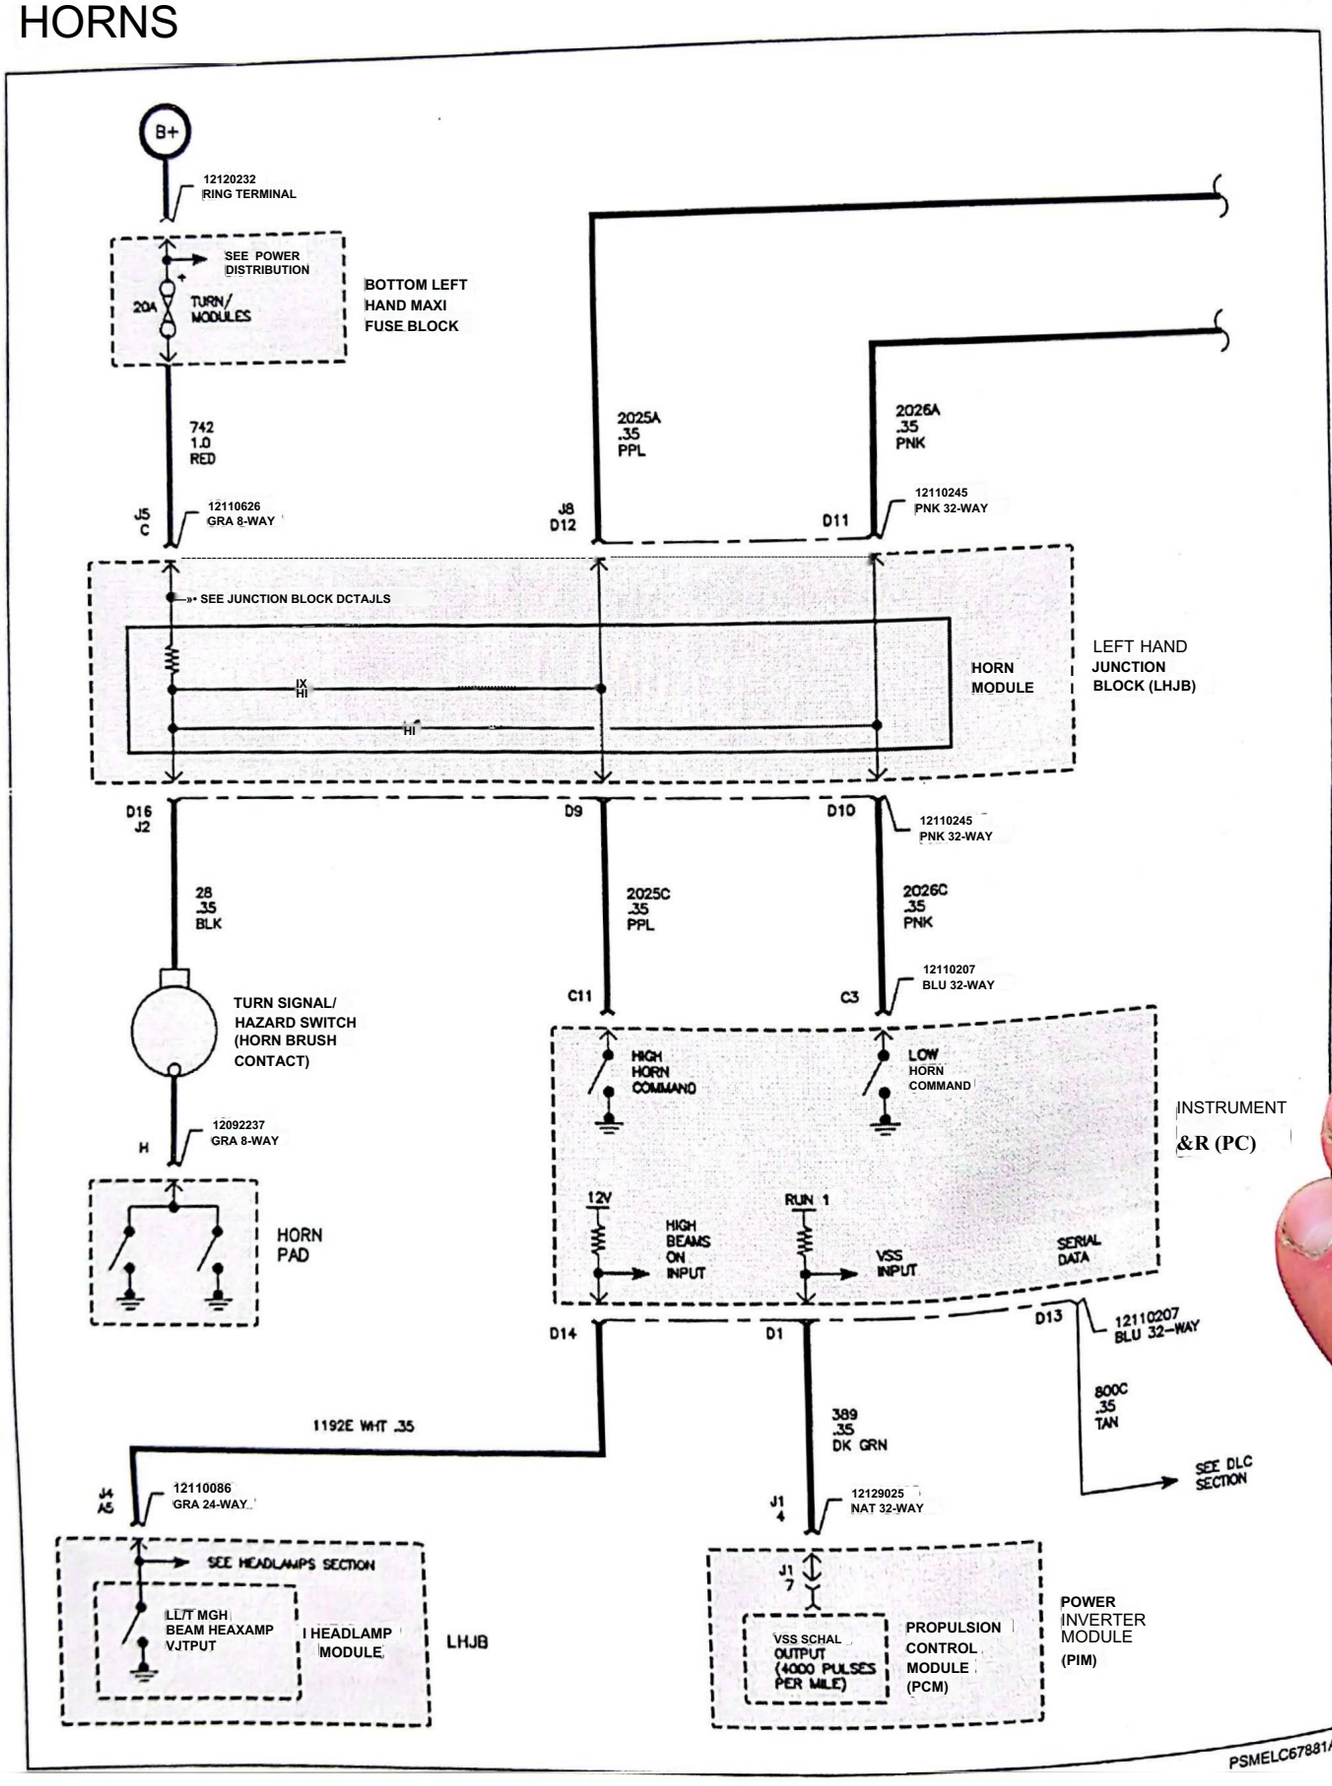

CamScanner

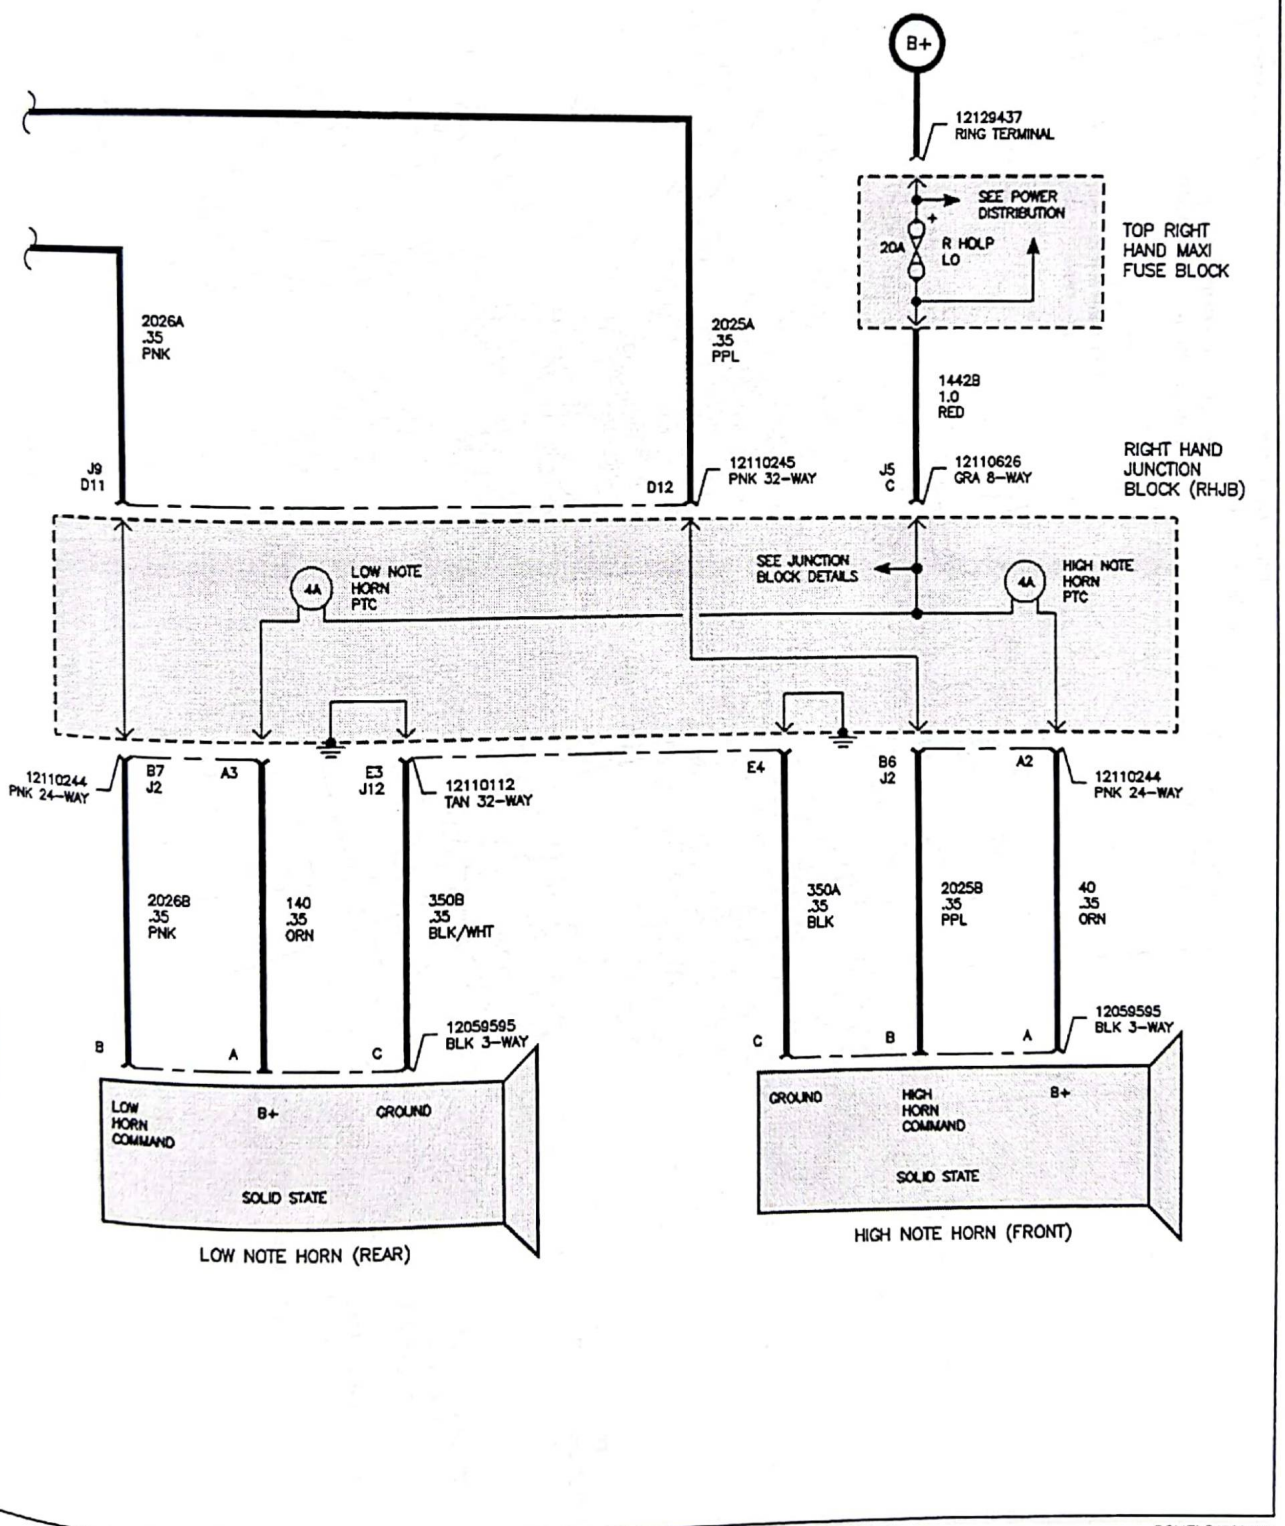

PSMELC67882AA

CamScanner

HORNS COMPONENT LOCATION VIEW

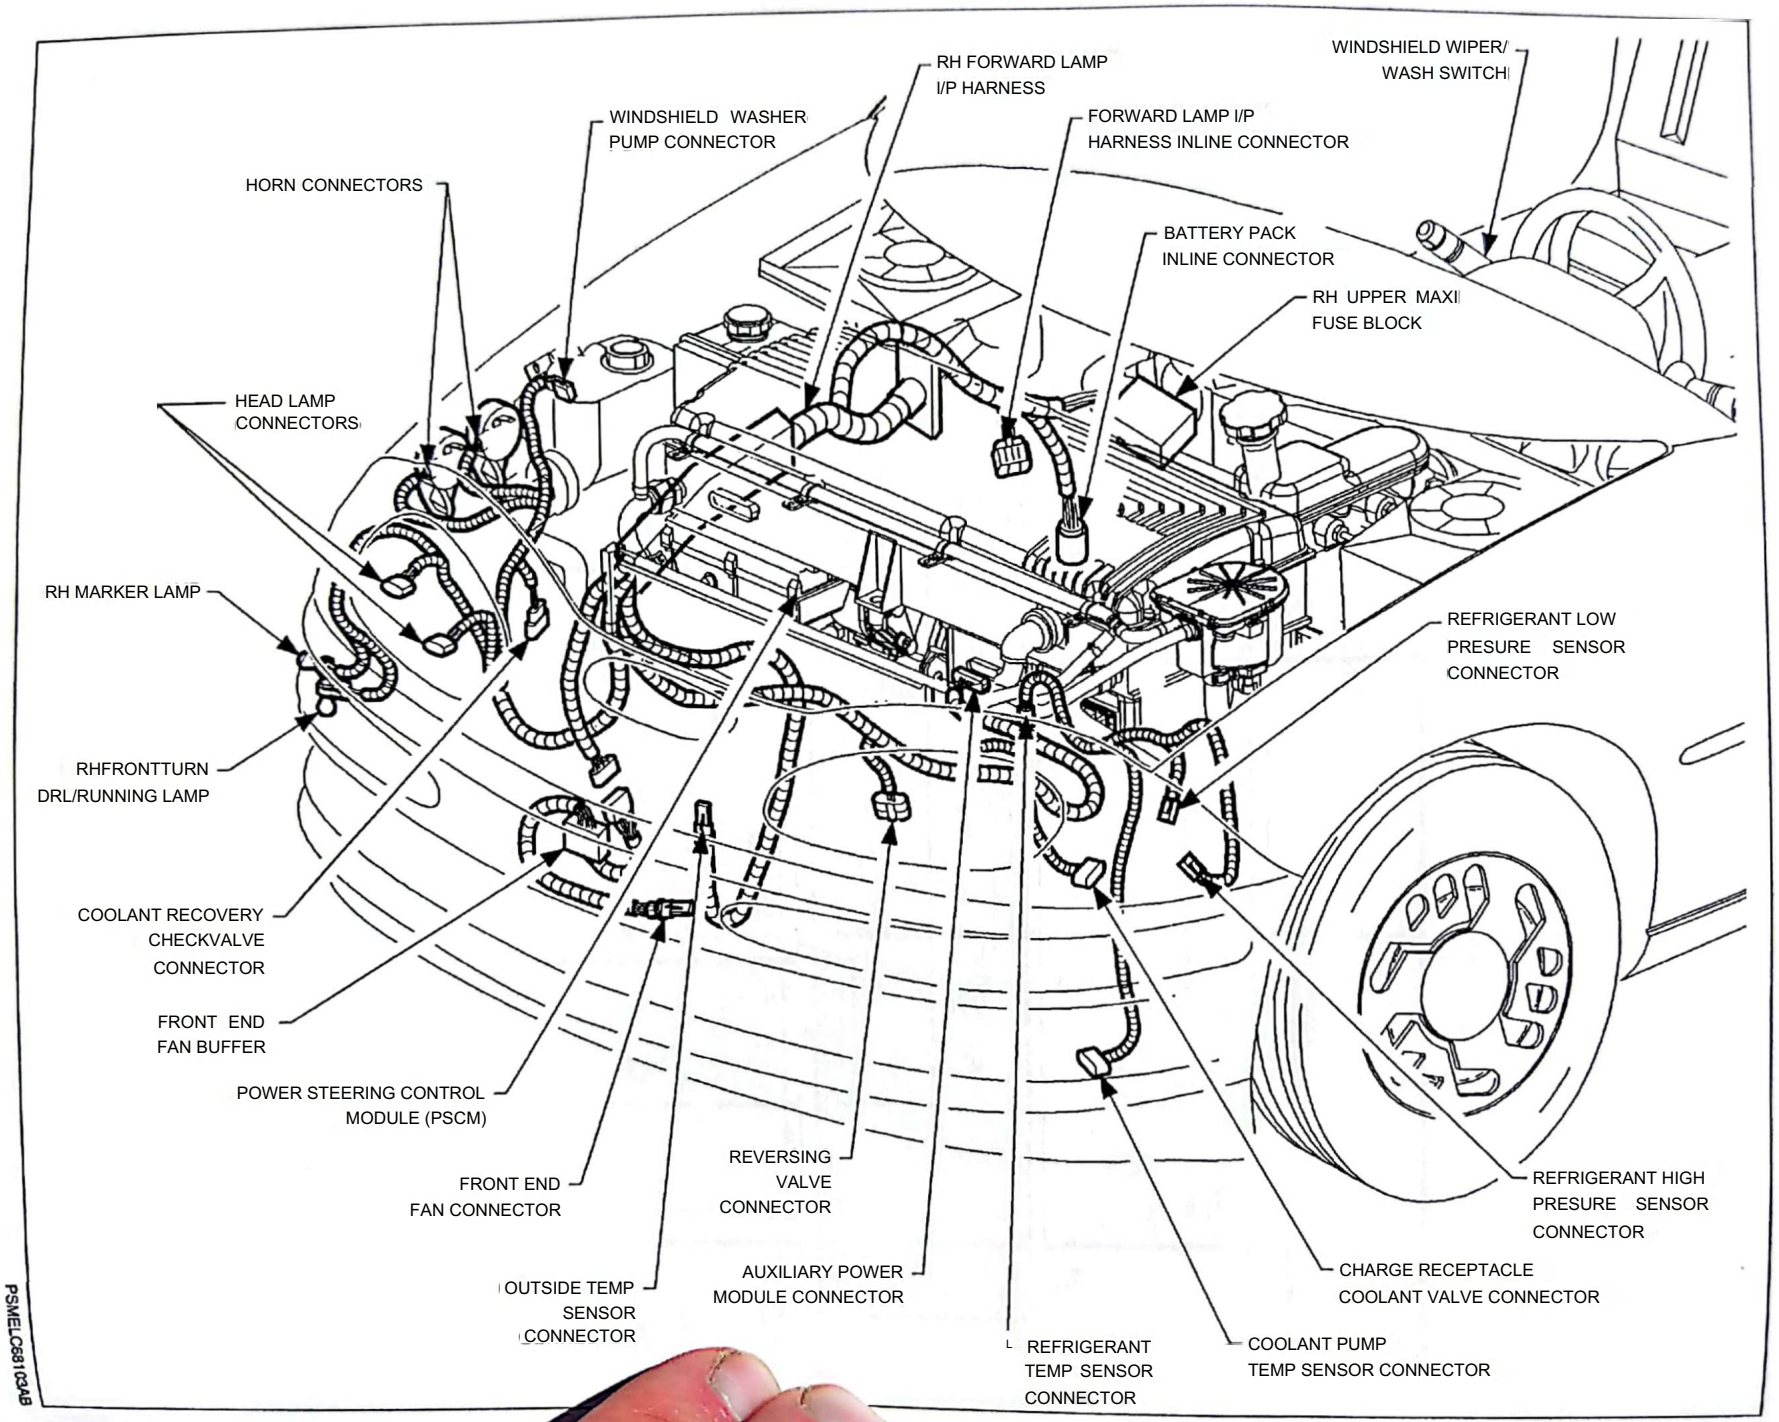

CamScanner

HORNS

Hie EVI has two electronic horns, a 400 Hz (Io note) and a 500 P zt-z power and ground. Each horn turns On when it receives a p»nH ■! n°te" Each horn has its own dedicated grounded whenever the horn pad is pressed. 3 gF0Und On lts ,nPut ^e. The lines to both horns are

PEDESTRIAN ALERT MODE

The pedestrian alert allows the driver to politelv warn nedperiQnetk in the may soon move. The same switch action is used as "flash to oass ". If the T path of a vehlcle that is moving or speeds of 25 mph or below, the Hi beams come on and the pedestrian alert S1gnal Swltch is Pulled rearward a beam signal and if the speed is conect^enX bXf s3 ground tc\STded, The IPC receives the Hi inputs (total signal less than 1/4 of a second). The brief "chirp" that' results is milder *than a nor^omXd01"*

REVERSE WARNING

When the vehicle is shifted into reverse, the IPC sounds the horns in a special pattern to alert pedestrians behind the vehicle that the vehicle is backing up or may soon back up. The horns are pulsed on for 0.007 seconds alternating between the low and high note horns. Each horn is pulsed 36 times a minute. This warning is at a lower volume than normal horn operation, yet very apparent to pedestrians.

HORN TROUBLE TREE INDEX

- Chart 1 - Horns Inoperative
- Chart 2 - Pedestrian Alert Mode Only Inoperative
- Chart 3 — Reverse Warning Mode Only Inoperative
- Chart 4 - Horns On All the Time (One or Both)

CamScanner

HORNS INOPERATIVE - CHART 1

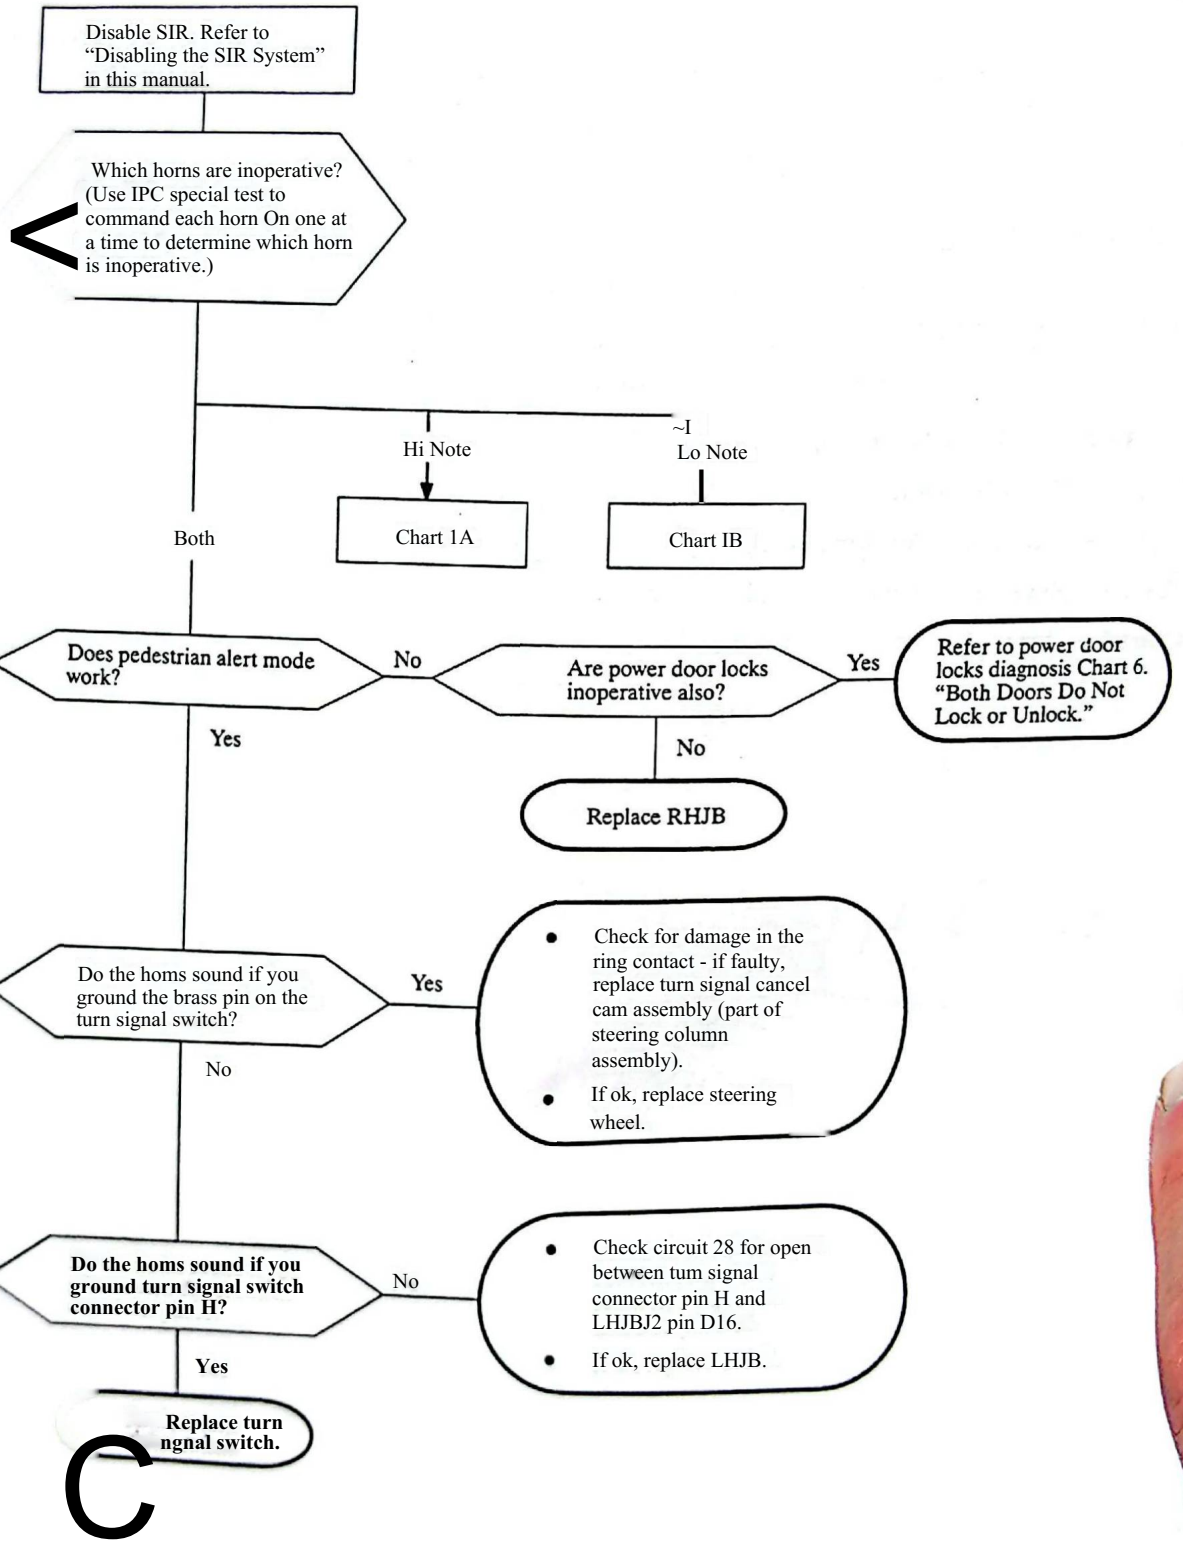
Disable SIR. Refer to "Disabling the SIR System" in this manual.
Which horns are inoperative? (Use IPC special test to command each horn On one at a time to determine which horn is inoperative.)
Hi Note
Lo Note
Both
Chart 1A
Chart IB
Does pedestrian alert mode work?
No
Are power door locks inoperative also?
Yes
Refer to power door locks diagnosis Chart 6. "Both Doors Do Not Lock or Unlock."
No
Replace RHJB
Yes
Do the homs sound if you ground the brass pin on the turn signal switch?
Yes
Check for damage in the ring contact - if faulty, replace turn signal cancel cam assembly (part of steering column assembly).
If ok, replace steering wheel.
No
Do the homs sound if you ground turn signal switch connector pin H?
No
Check circuit 28 for open between tum signal connector pin H and LHJBJ2 pin D16.
If ok, replace LHJB.
Yes
Replace turn ngnal switch.

CamScanner

HORNS INOPERATIVE - CHART 1A

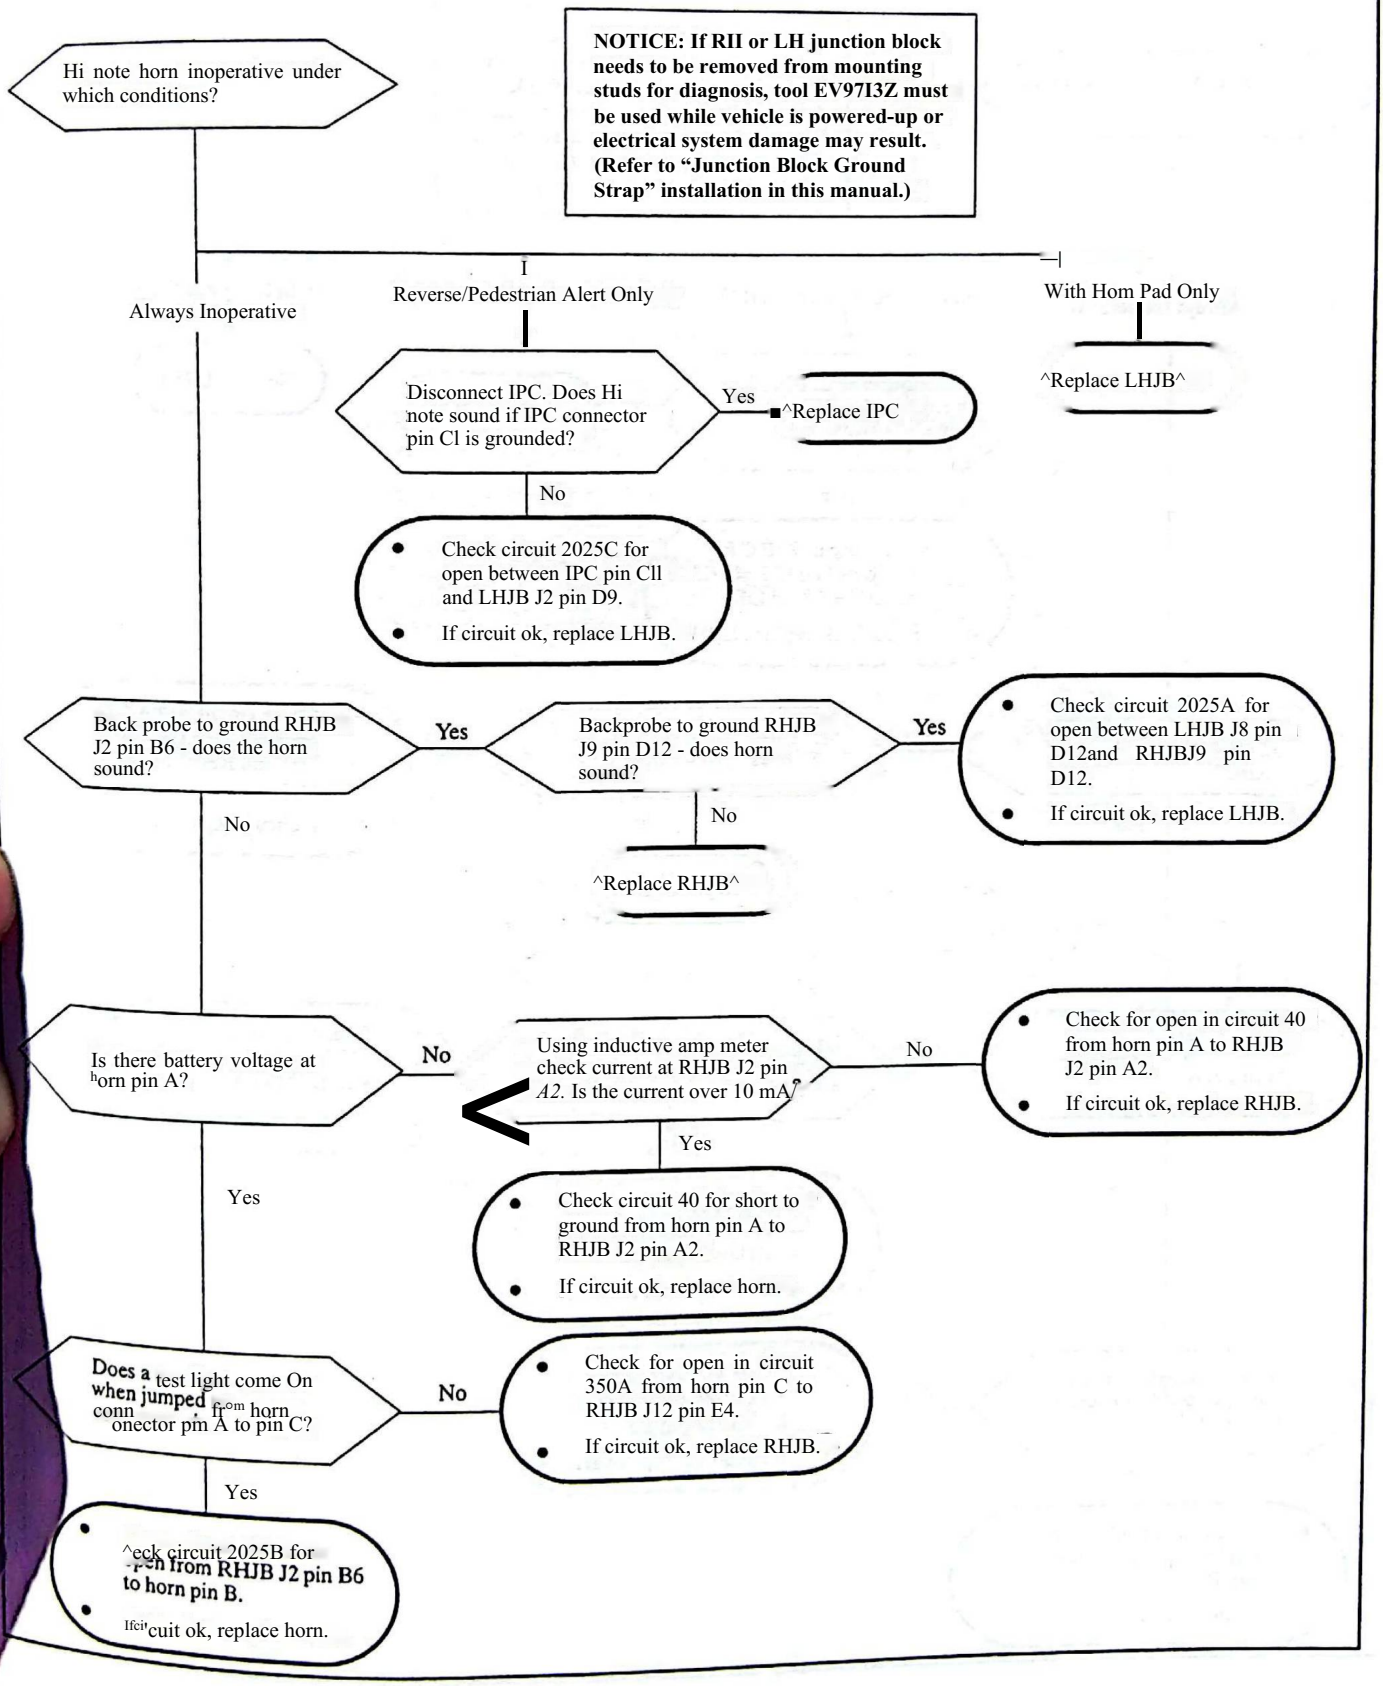
Hi note horn inoperative under which conditions?
NOTICE: If RII or LH junction block needs to be removed from mounting studs for diagnosis, tool EV97I3Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)
Always Inoperative
Reverse/Pedestrian Alert Only
With Hom Pad Only
^Replace LHJB^
Disconnect IPC. Does Hi note sound if IPC connector pin Cl is grounded?
Yes
^Replace IPC
No
Check circuit 2025C for open between IPC pin Cll and LHJB J2 pin D9.
If circuit ok, replace LHJB.
Back probe to ground RHJB J2 pin B6 - does the horn sound?
Yes
Backprobe to ground RHJB J9 pin D12 - does horn sound?
Yes
Check circuit 2025A for open between LHJB J8 pin D12and RHJBJ9 pin D12.
If circuit ok, replace LHJB.
No
No
^Replace RHJB^
Is there battery voltage at horn pin A?
No
Using inductive amp meter check current at RHJB J2 pin A2. Is the current over 10 mA?
No
Check for open in circuit 40 from horn pin A to RHJB J2 pin A2.
If circuit ok, replace RHJB.
Yes
Yes
Check circuit 40 for short to ground from horn pin A to RHJB J2 pin A2.
If circuit ok, replace horn.
Does a test light come On when jumped from horn connector pin A to pin C?
No
Check for open in circuit 350A from horn pin C to RHJB J12 pin E4.
If circuit ok, replace RHJB.
Yes
^eck circuit 2025B for open from RHJB J2 pin B6 to horn pin B.
Ifcircuit ok, replace horn.

CamScanner

HORNS INOPERATIVE - CHART 1B

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered*up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Lo note hom inoperative under which conditions?

- Always Inoperative
- Reverse/Pede^trian Alert Only
- With Hom Pad Only → Replace LHJB^

Disconnect IPC. Does Lo note sound if IPC connector pin C3 is grounded?

- Yes → Replace IPC.
- No →
  - Check circuit 2026C for open between IPC pin C3 and LHJB J2 pin DIO.
  - If circuit ok, replace LHJB.

Backprobe to ground RHJB J2 pin B7 - does the hom sound?

- Yes → Ground RHJB J9 pin Dll - does hom sound?
  - Yes →
    - Check circuit 2026A for open between LHJB J8 pin Dll and RHJB J9 pin Dll.
    - If circuit ok, replace LHJB.
  - No → ^Replace RHJB^
- No →

Is there battery voltage at horn pin A?

- No → Using inductive amp meter check current at RHJB J2 pin A3. Is the cunent over 10 mA?
  - No →
    - Check for open in circuit 140 from hom pin A to RHJBJ2pinA3.
    - If circuit ok, replace RHJB.
  - Yes →
    - Check circuit 140 for short to ground from hom pin A to RHJBJ2 pin A3.
    - If circuit ok, replace horn.
- Yes →

Docs a test light come On whc j a A lo^p Un(?<^hOrn hOrn Pin

- No →
  - Check for open in circuit 350B from hom pin C to RHJBJ12 pinE3.
  - If circuit ok, replace RHJB.
- Yes →
  - Check circuit 2O26B from RHJB J2 pin B7 to horn pin B.
  - U circuit ok. replace horn

CamScanner

PEDESTRIAN ALERT MODE ONLY INOPERATIVE-CHART2

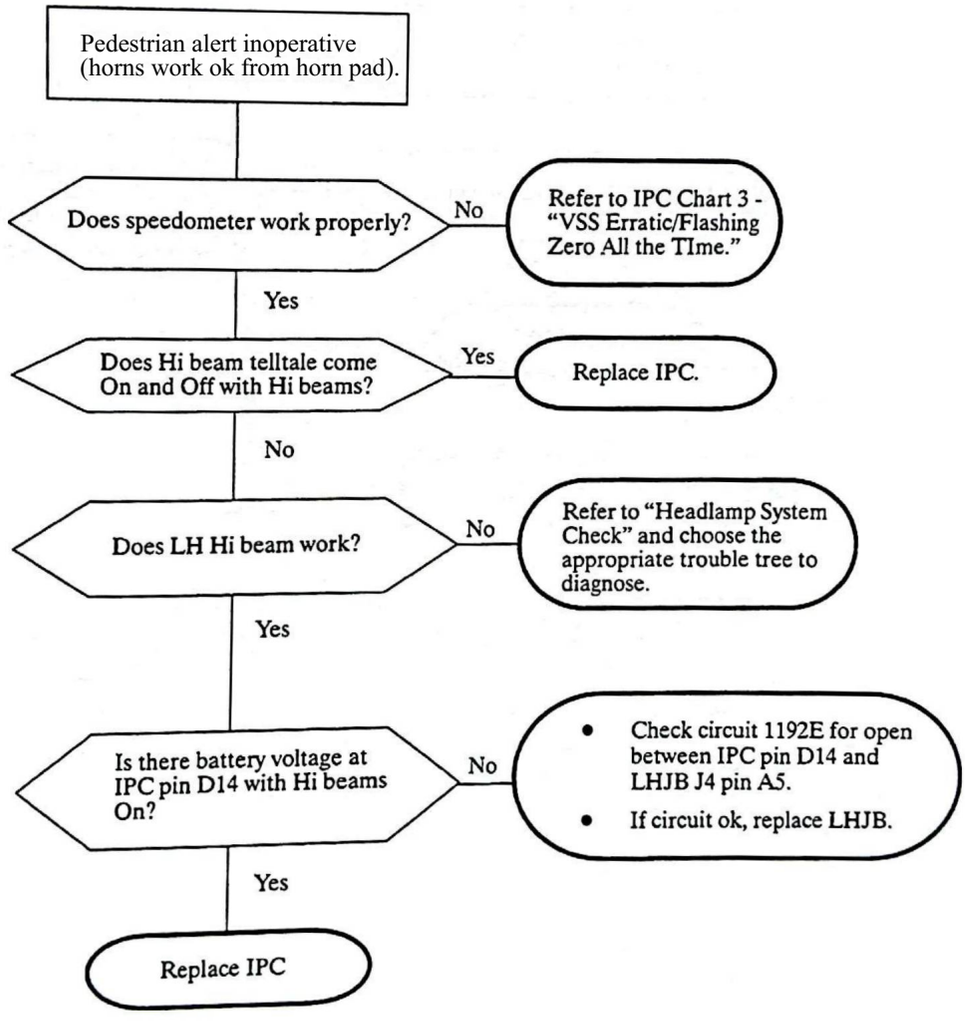
Pedestrian alert inoperative (horns work ok from horn pad).
Does speedometer work properly?
No
Refer to IPC Chart 3 - "VSS Erratic/Flashing Zero All the TIme."
Yes
Does Hi beam telltale come On and Off with Hi beams?
Yes
Replace IPC.
No
Does LH Hi beam work?
No
Refer to "Headlamp System Check" and choose the appropriate trouble tree to diagnose.
Yes
Is there battery voltage at IPC pin D14 with Hi beams On?
No
• Check circuit 1192E for open between IPC pin D14 and LHJB J4 pin A5.
• If circuit ok, replace LHJB.
Yes
Replace IPC

CamScanner

REVERSE WARNING MODE ONLY INOPERATIVE – CHART 3

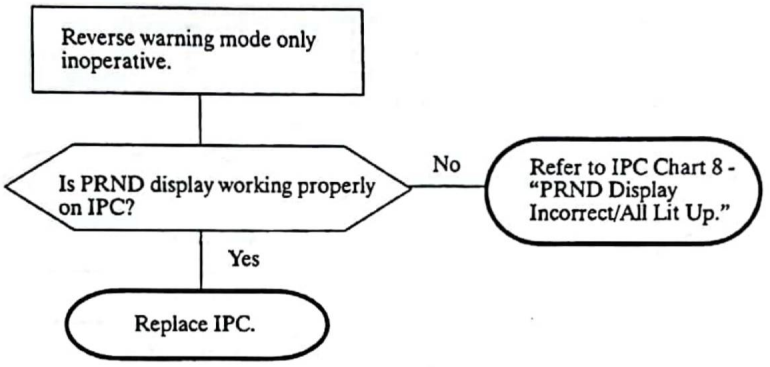
Reverse warning mode only inoperative.
Is PRND display working properly on IPC?
No
Refer to IPC Chart 8 - "PRND Display Incorrect/All Lit Up."
Yes
Replace IPC.

CamScanner

HORNSONALLTHETIME(ONEORBOTH)-CHART4

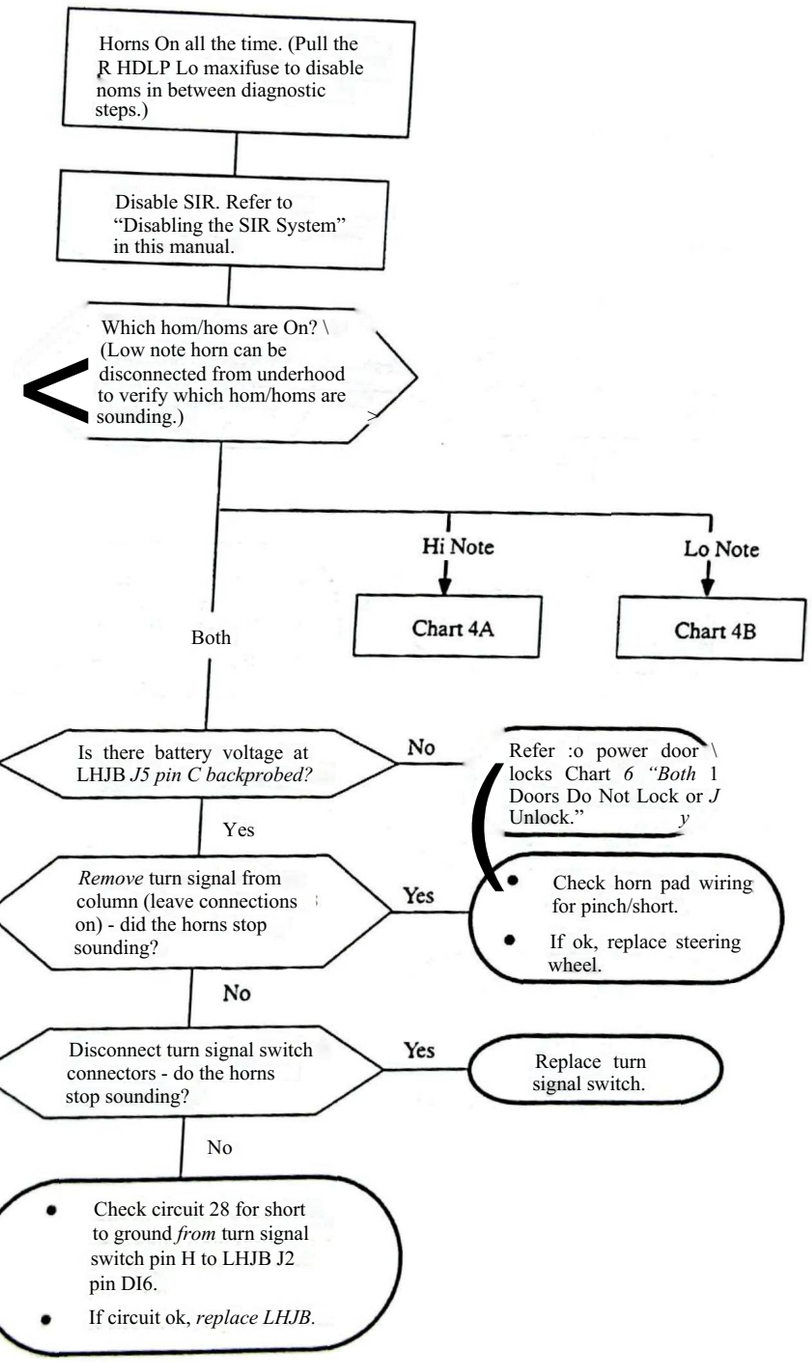
Horns On all the time. (Pull the R HDLP Lo maxifuse to disable noms in between diagnostic steps.)
Disable SIR. Refer to "Disabling the SIR System" in this manual.
Which hom/homs are On? (Low note horn can be disconnected from underhood to verify which hom/homs are sounding.)
Hi Note
Lo Note
Chart 4A
Chart 4B
Both
Is there battery voltage at LHJB J5 pin C backprobed?
No
Refer to power door locks Chart 6 "Both Doors Do Not Lock or Unlock."
Yes
Remove turn signal from column (leave connections on) - did the horns stop sounding?
Yes
Check horn pad wiring for pinch/short.
If ok, replace steering wheel.
No
Disconnect turn signal switch connectors - do the horns stop sounding?
Yes
Replace turn signal switch.
No
Check circuit 28 for short to ground from turn signal switch pin H to LHJB J2 pin DI6.
If circuit ok, replace LHJB.

CamScanner

HORNS ON ALL THE TIME - CHART 4A

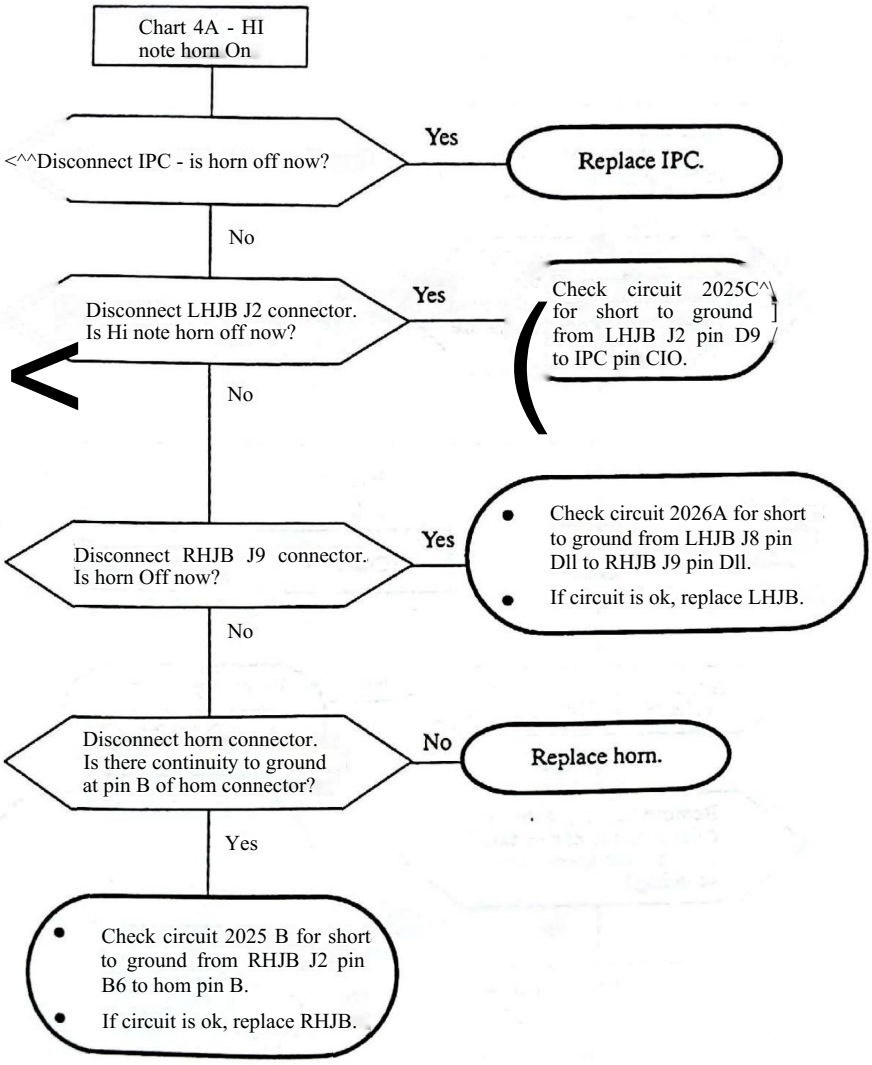
Chart 4A - HI note horn On
<^^Disconnect IPC - is horn off now?
Yes
Replace IPC.
No
Disconnect LHJB J2 connector. Is Hi note horn off now?
Yes
Check circuit 2025C^ for short to ground from LHJB J2 pin D9 to IPC pin CIO.
No
Disconnect RHJB J9 connector. Is horn Off now?
Yes
Check circuit 2026A for short to ground from LHJB J8 pin Dll to RHJB J9 pin Dll.
If circuit is ok, replace LHJB.
No
Disconnect horn connector. Is there continuity to ground at pin B of hom connector?
No
Replace horn.
Yes
Check circuit 2025 B for short to ground from RHJB J2 pin B6 to hom pin B.
If circuit is ok, replace RHJB.

CamScanner

HORN ON ALL THE TIME - CHART 4B

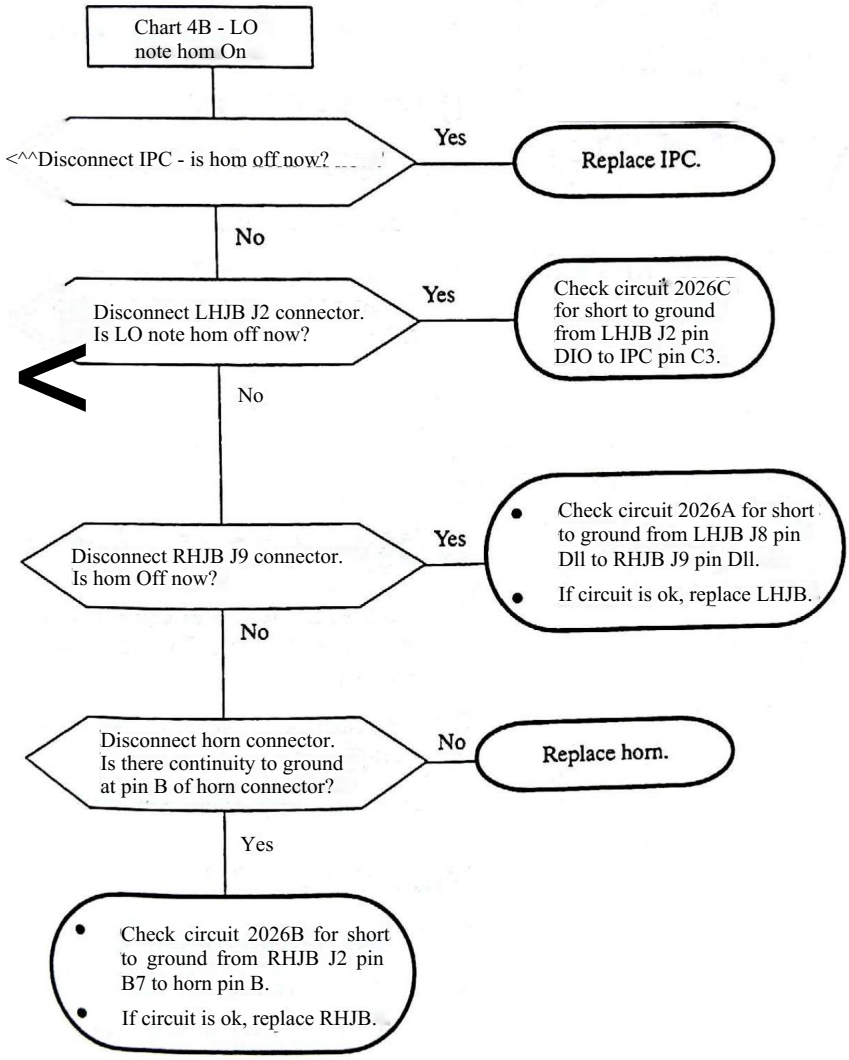
Chart 4B - LO note hom On
<^^Disconnect IPC - is hom off now?
Yes
Replace IPC.
No
Disconnect LHJB J2 connector. Is LO note hom off now?
Yes
Check circuit 2026C for short to ground from LHJB J2 pin DIO to IPC pin C3.
No
Disconnect RHJB J9 connector. Is hom Off now?
Yes
Check circuit 2026A for short to ground from LHJB J8 pin Dll to RHJB J9 pin Dll.
If circuit is ok, replace LHJB.
No
Disconnect horn connector. Is there continuity to ground at pin B of horn connector?
No
Replace horn.
Yes
Check circuit 2026B for short to ground from RHJB J2 pin B7 to horn pin B.
If circuit is ok, replace RHJB.

CamScanner

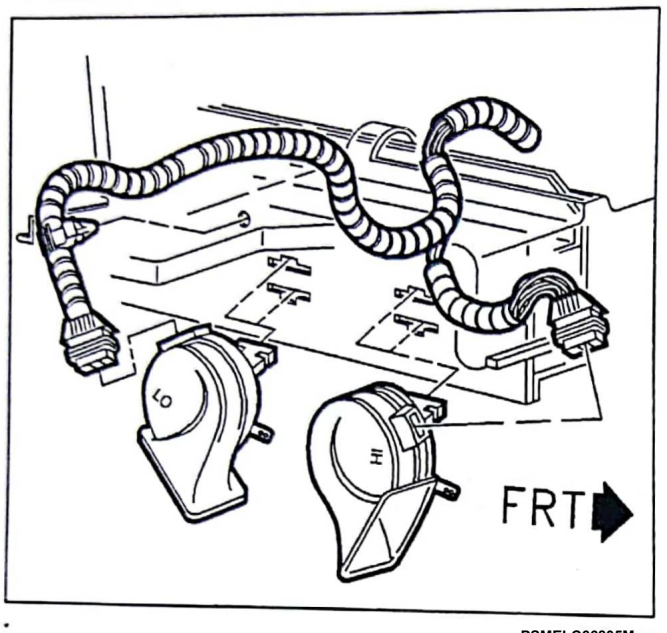

PSMELC66805M

HORN 500 HZ (HI NOTE)

REMOVAL

1. Remove front air deflector. (Refer to "Underbody Front Air Deflector" removal procedure in this manual.)
2. Squeeze horn bracket of forward horn and remove from frame.
3. Disconnect electrical connector.

INSTALLATION

1. Connect electrical connector.
2. Squeeze horn bracket and install to frame.
3. Install front air deflector. (Refer to "Underbody Front Air Deflector" installation procedure in this manual.)

HORN 400 HZ (LO NOTE)

1. Remove front air deflector. (Refer to "Underbody Front Air Deflector" removal procedure in this manual.)
2. Squeeze horn bracket of rearward horn and remove from frame.
3. Disconnect electrical connector.

INSTALLATION

1. Connect electrical connector.
2. Squeeze horn bracket and install to frame.
3. Install front air deflector. (Refer to "Underbody Front Air Deflector" installation procedure in this manual.)

CamScanner

NOTES

CamScanner

INSTRUMENT PANEL CLUSTER

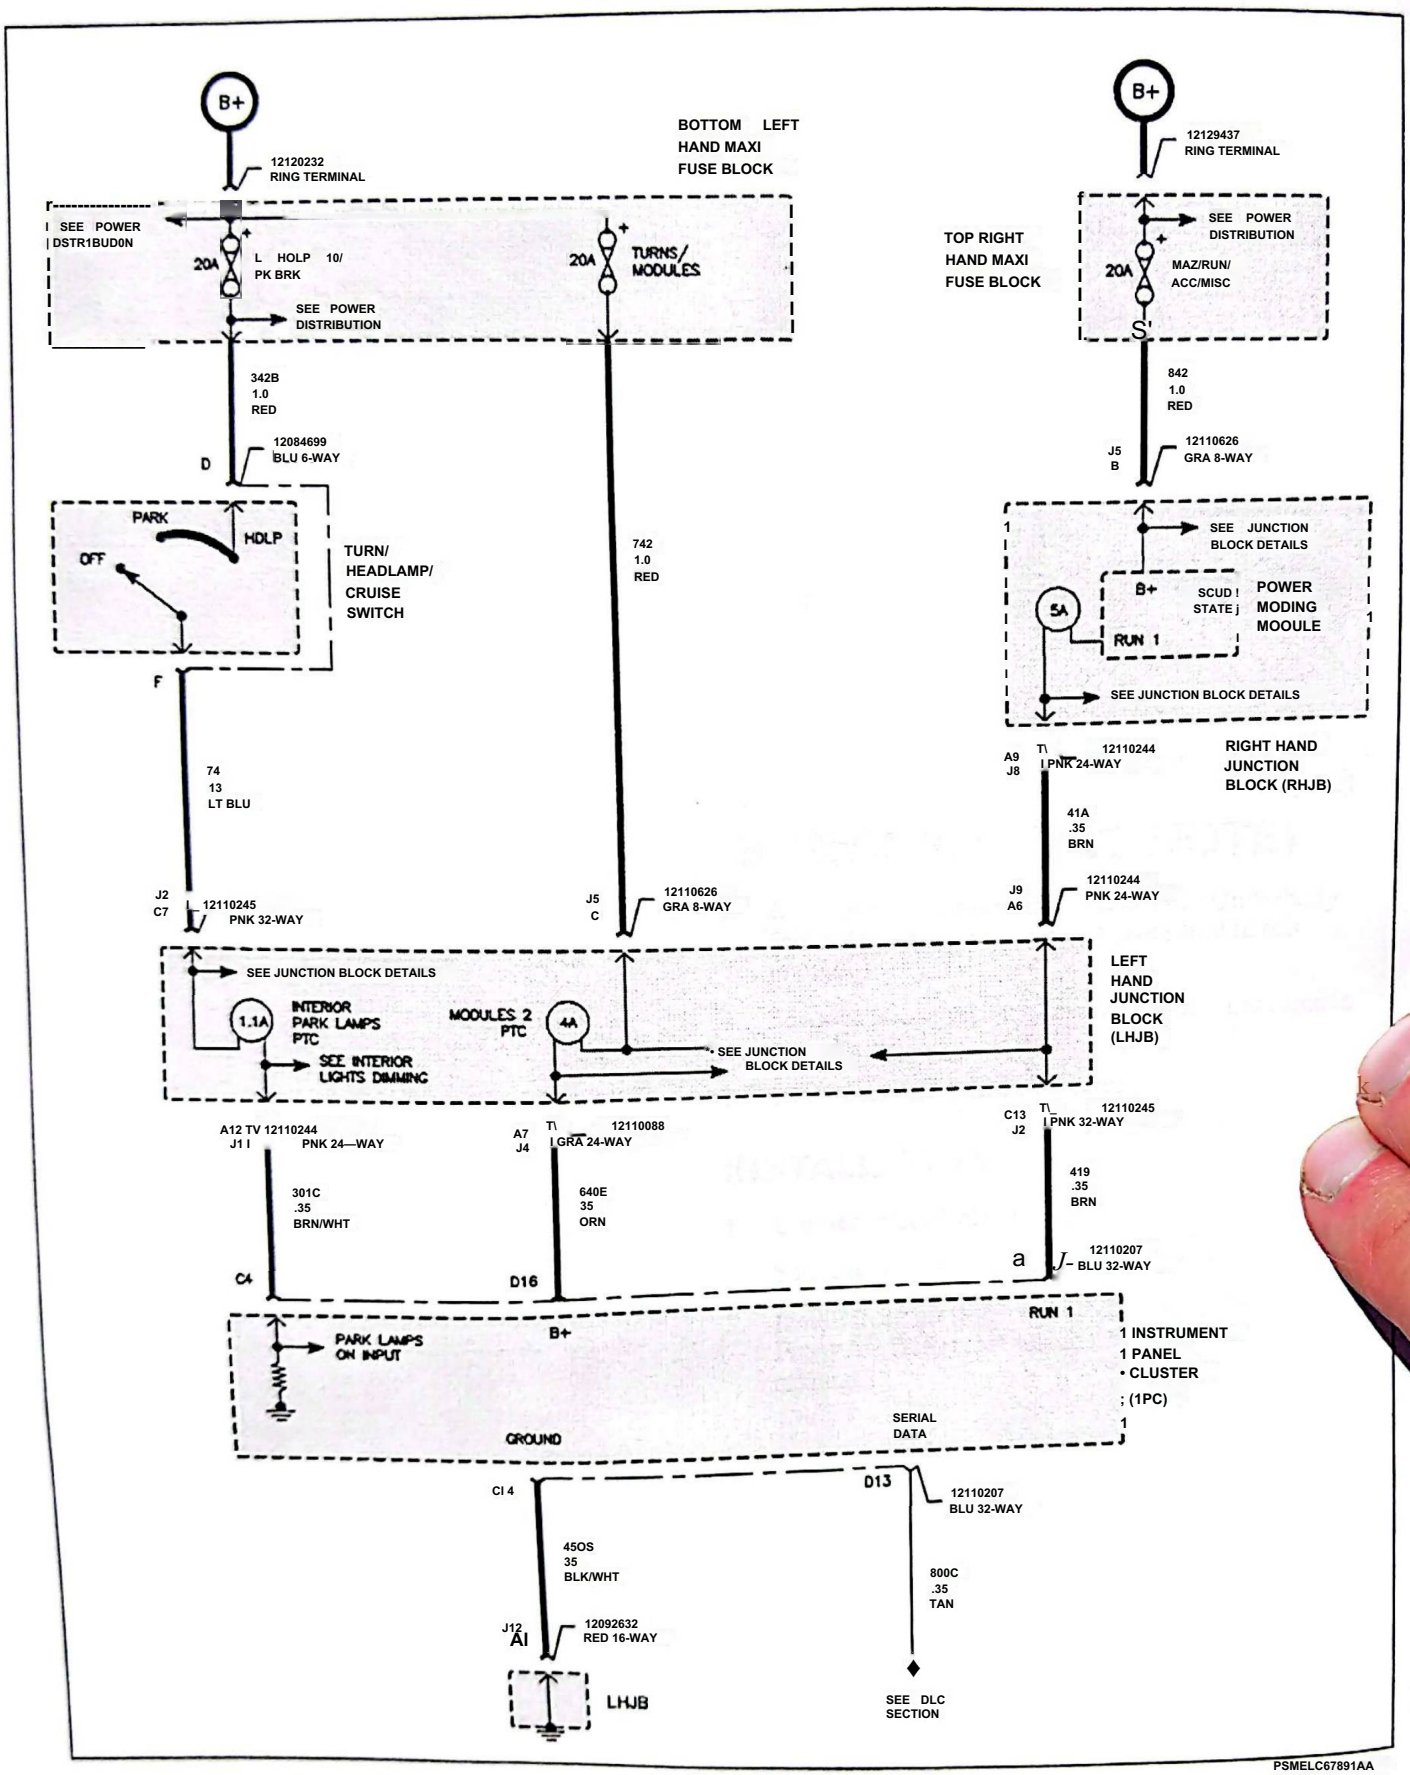

CamScanner

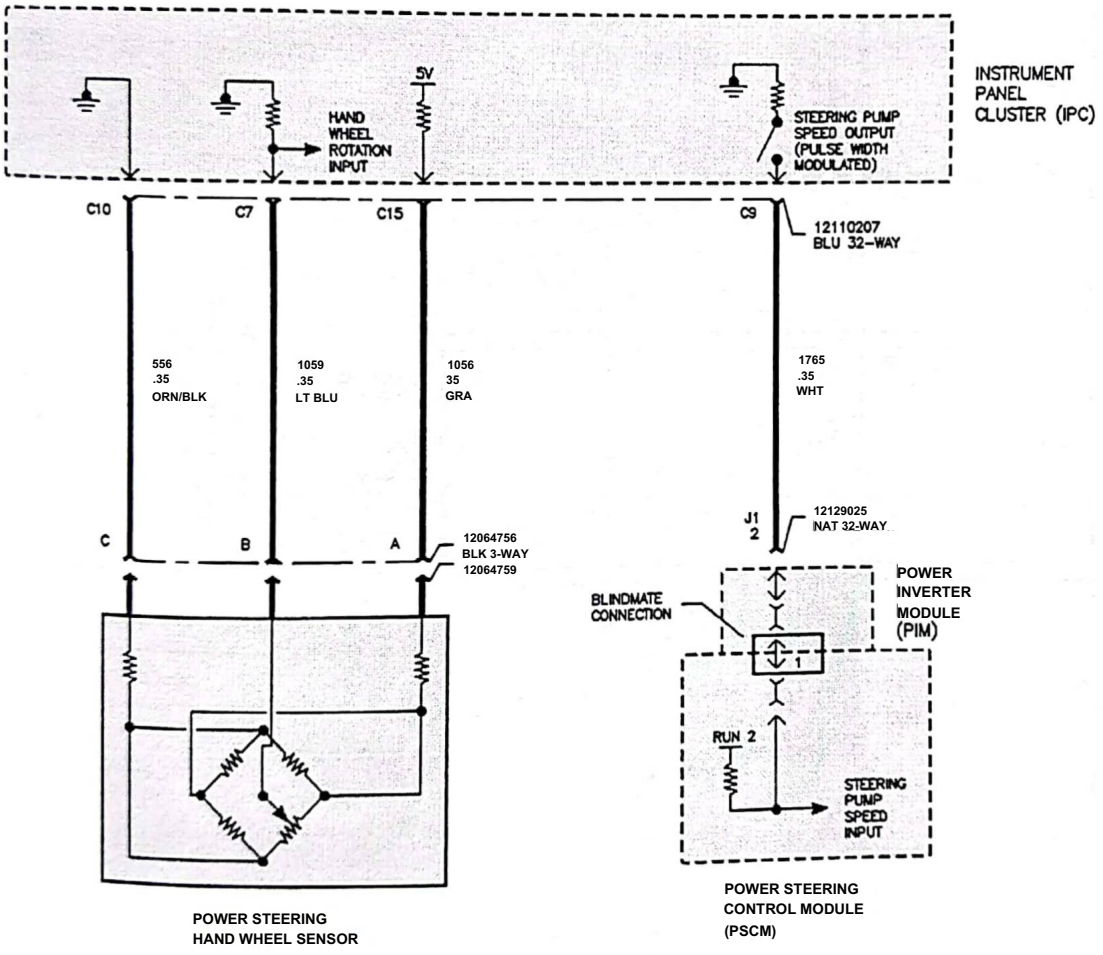

PSMELC67441AA

CamScanner

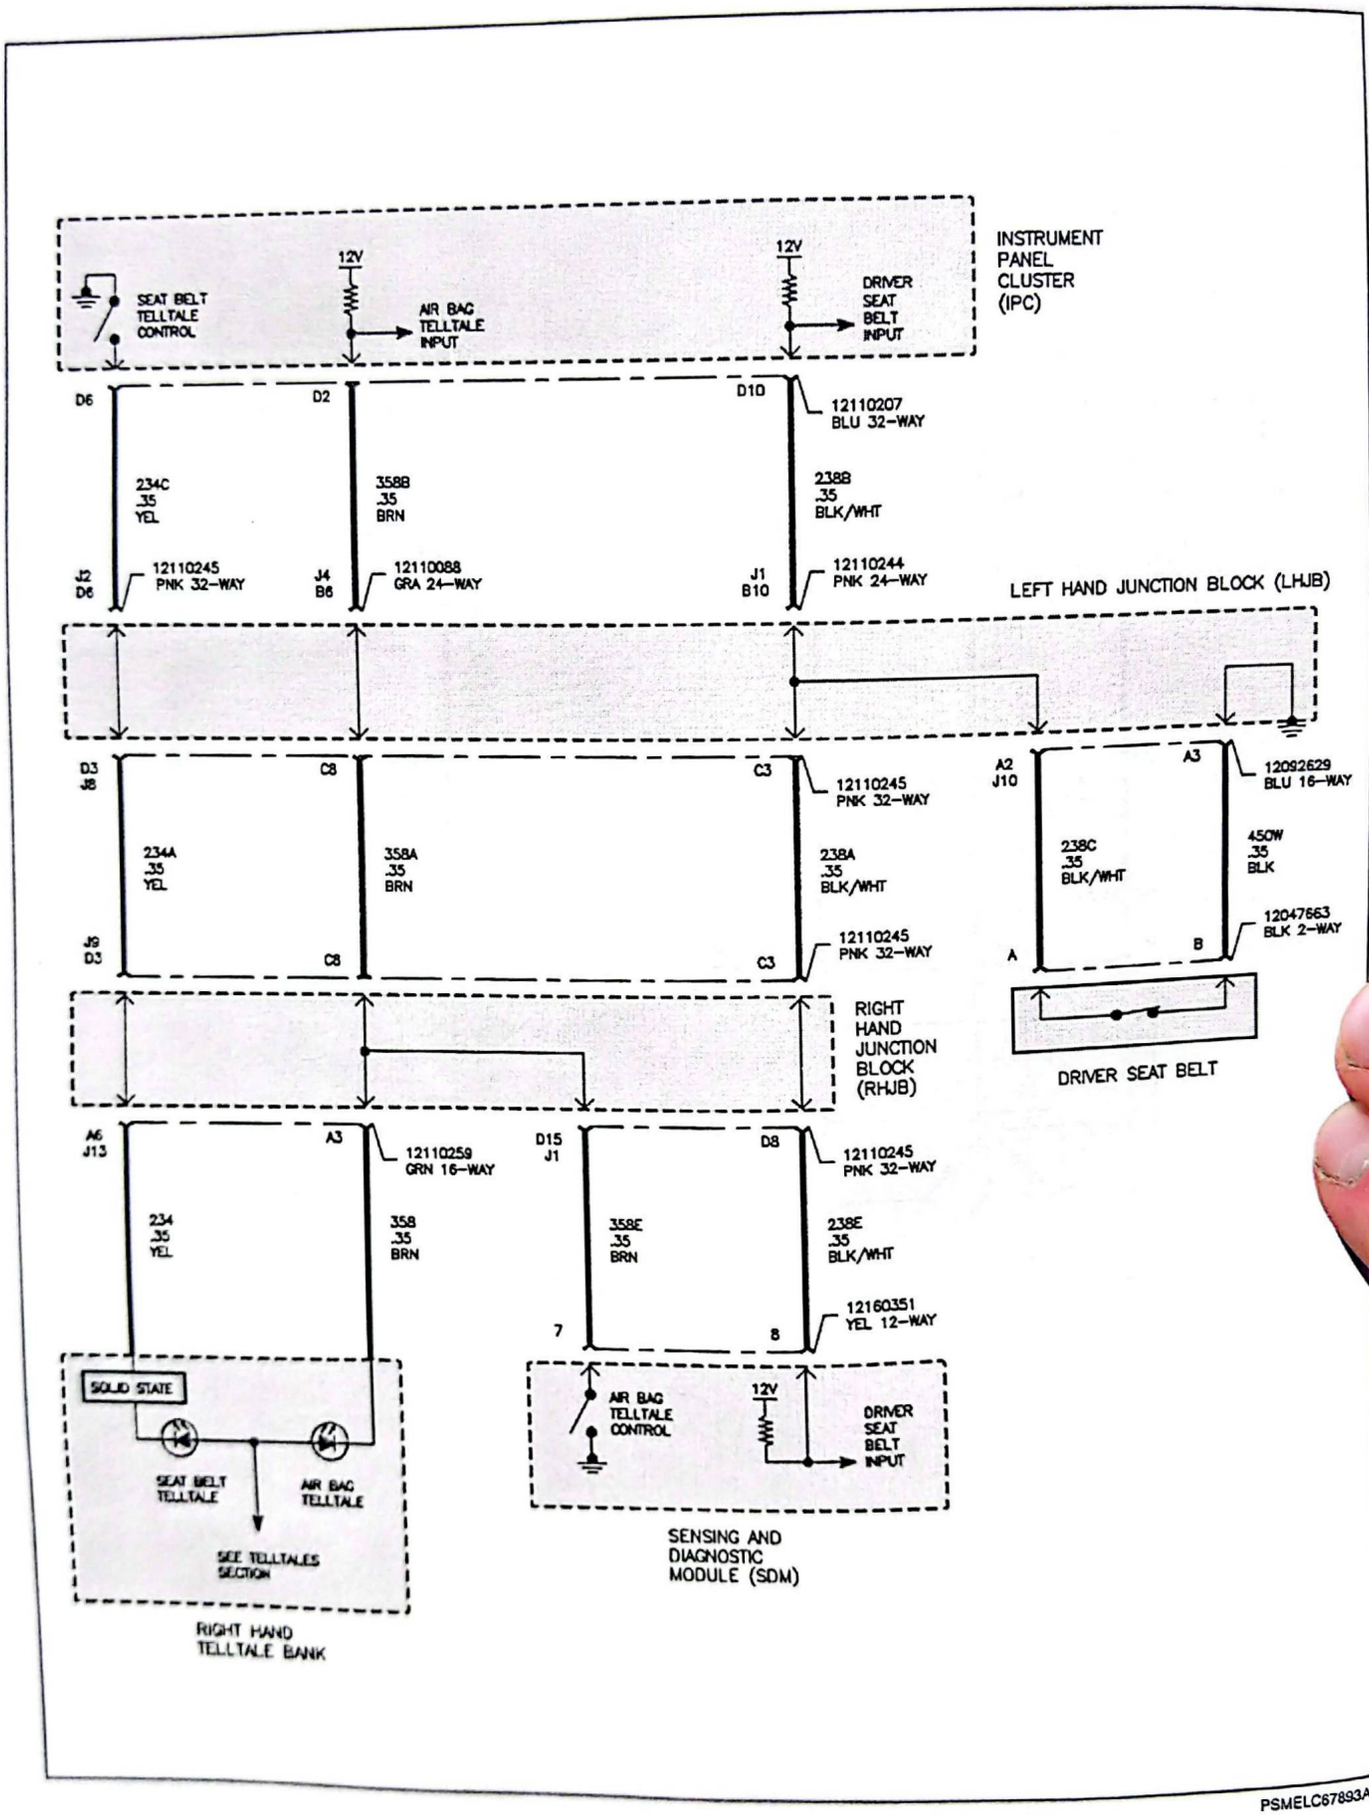
INSTRUMENT PANEL CLUSTER (IPC)
SEAT BELT TELLTALE CONTROL
12V
AIR BAG TELLTALE INPUT
12V
DRIVER SEAT BELT INPUT
D6
D2
D10
12110207 BLU 32-WAY
234C .35 YEL
358B .35 BRN
238B .35 BLK/WHT
J2 D6
12110245 PNK 32-WAY
J4 B6
12110088 GRA 24-WAY
J1 B10
12110244 PNK 24-WAY
LEFT HAND JUNCTION BLOCK (LHJB)
D3 J8
C8
C3
12110245 PNK 32-WAY
234A .35 YEL
358A .35 BRN
238A .35 BLK/WHT
J9 D3
C8
C3
12110245 PNK 32-WAY
A2 J10
A3
12092629 BLU 16-WAY
238C .35 BLK/WHT
450W .35 BLK
A
B
12047663 BLK 2-WAY
DRIVER SEAT BELT
RIGHT HAND JUNCTION BLOCK (RHJB)
A6 J13
A3
12110259 GRN 16-WAY
234 .35 YEL
358 .35 BRN
D15 J1
D8
12110245 PNK 32-WAY
358E .35 BRN
238E .35 BLK/WHT
7
8
12160351 YEL 12-WAY
SOLID STATE
SEAT BELT TELLTALE
AIR BAG TELLTALE
SEE TELLTALES SECTION
RIGHT HAND TELLTALE BANK
AIR BAG TELLTALE CONTROL
12V
DRIVER SEAT BELT INPUT
SENSING AND DIAGNOSTIC MODULE (SDM)
PSMELC67893AA

CamScanner

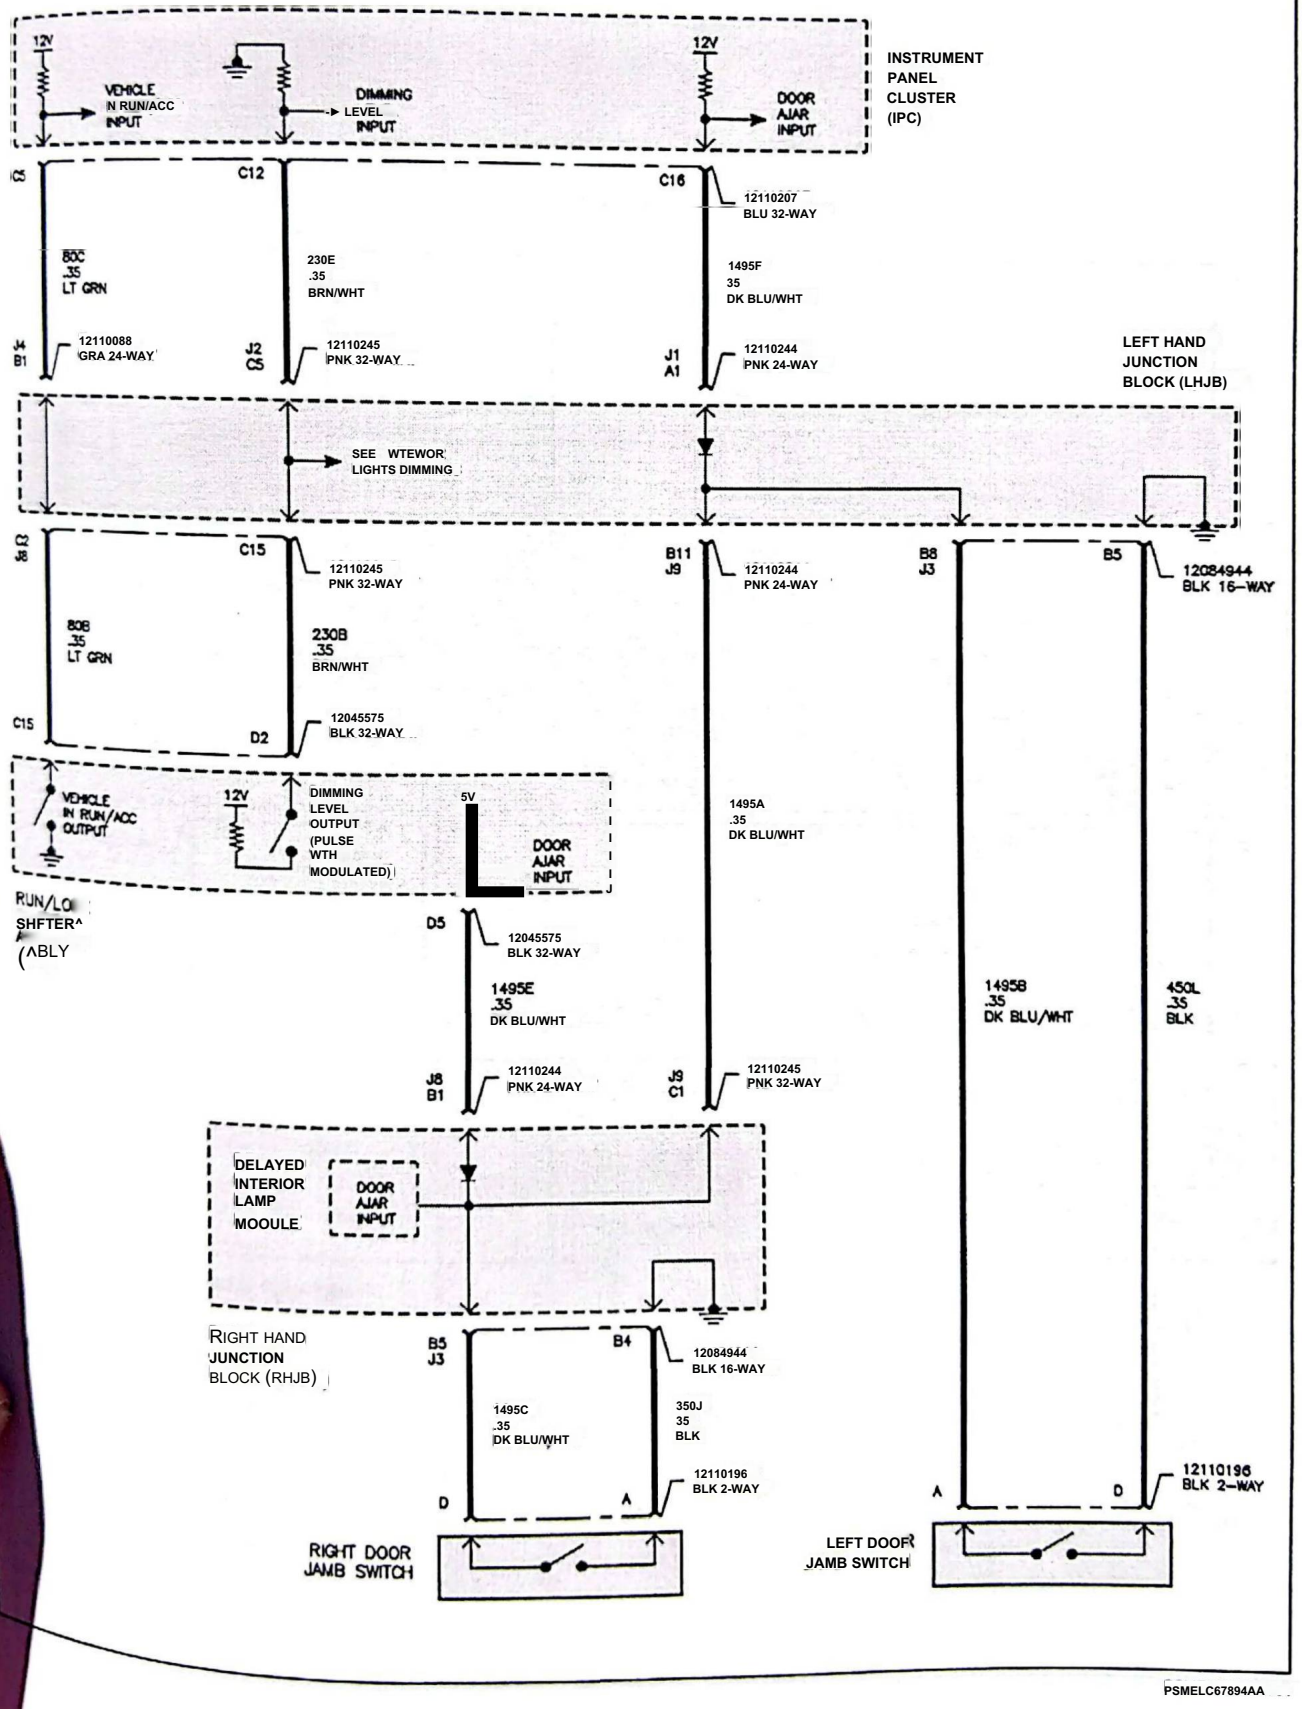
12V
VEHICLE IN RUN/ACC INPUT
DIMMING LEVEL INPUT
12V
DOOR AJAR INPUT
INSTRUMENT PANEL CLUSTER (IPC)
C5
C12
C16
12110207 BLU 32-WAY
80C .35 LT GRN
230E .35 BRN/WHT
1495F 35 DK BLU/WHT
J4 B1
12110088 GRA 24-WAY
J2 C5
12110245 PNK 32-WAY
J1 A1
12110244 PNK 24-WAY
LEFT HAND JUNCTION BLOCK (LHJB)
SEE WTEWOR LIGHTS DIMMING
C15
12110245 PNK 32-WAY
B11 J9
12110244 PNK 24-WAY
B8 J3
B5
12084944 BLK 16-WAY
80B .35 LT GRN
230B .35 BRN/WHT
C15
D2
12045575 BLK 32-WAY
VEHICLE IN RUN/ACC OUTPUT
12V
DIMMING LEVEL OUTPUT (PULSE WTH MODULATED)
5V
DOOR AJAR INPUT
1495A .35 DK BLU/WHT
RUN/LO SHFTER^ (^BLY
D5
12045575 BLK 32-WAY
1495E .35 DK BLU/WHT
1495B .35 DK BLU/WHT
450L .35 BLK
J8 B1
12110244 PNK 24-WAY
J9 C1
12110245 PNK 32-WAY
DELAYED INTERIOR LAMP MOOULE
DOOR AJAR INPUT
RIGHT HAND JUNCTION BLOCK (RHJB)
B5 J3
B4
12084944 BLK 16-WAY
1495C .35 DK BLU/WHT
350J 35 BLK
D
A
12110196 BLK 2-WAY
A
D
12110196 BLK 2-WAY
RIGHT DOOR JAMB SWITCH
LEFT DOOR JAMB SWITCH
PSMELC67894AA

CamScanner

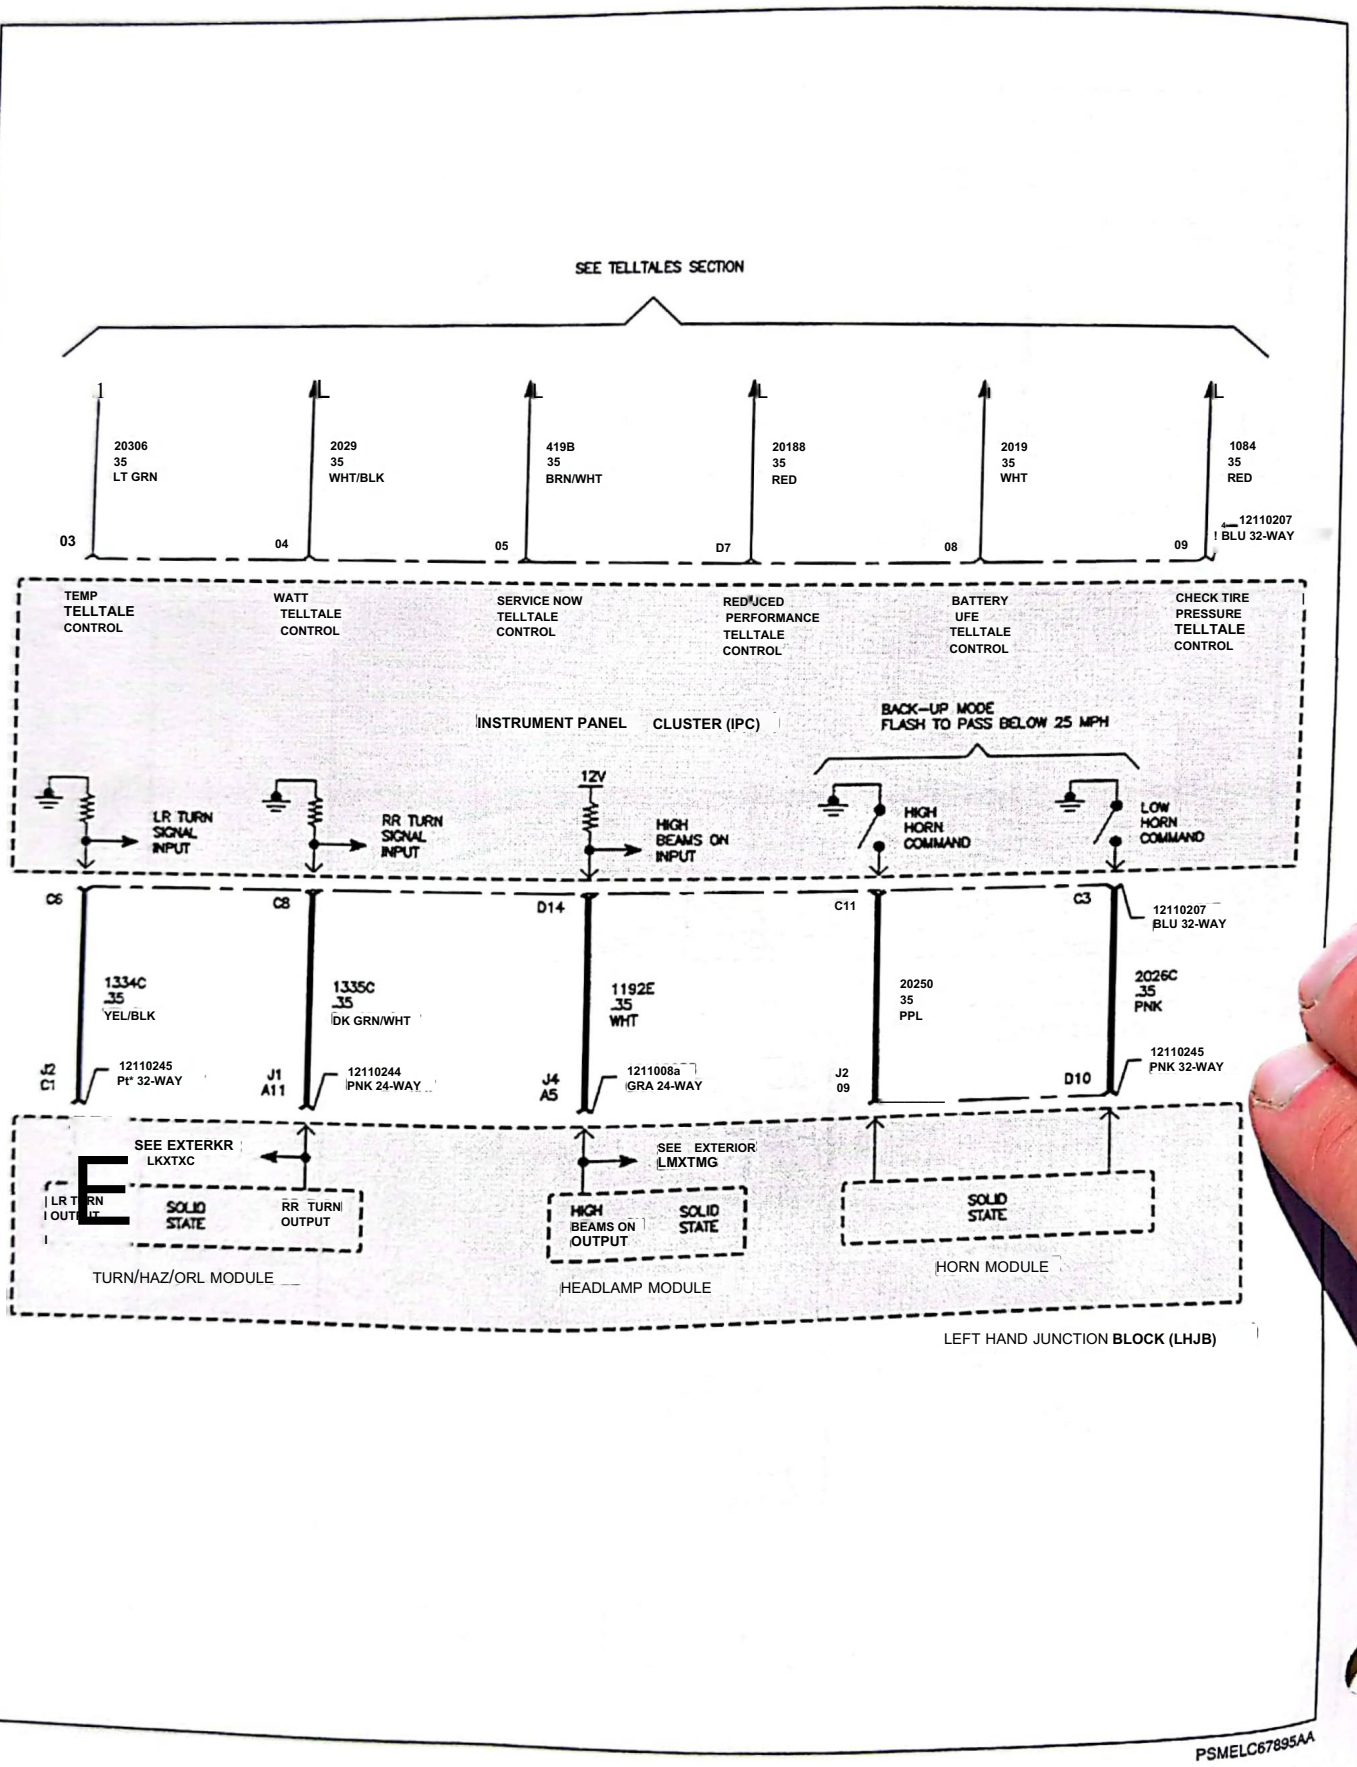
SEE TELLTALES SECTION
20306
35
LT GRN
2029
35
WHT/BLK
419B
35
BRN/WHT
20188
35
RED
2019
35
WHT
1084
35
RED
12110207
BLU 32-WAY
03
04
05
D7
08
09
TEMP
TELLTALE
CONTROL
WATT
TELLTALE
CONTROL
SERVICE NOW
TELLTALE
CONTROL
REDUCED
PERFORMANCE
TELLTALE
CONTROL
BATTERY
UFE
TELLTALE
CONTROL
CHECK TIRE
PRESSURE
TELLTALE
CONTROL
INSTRUMENT PANEL CLUSTER (IPC)
BACK-UP MODE
FLASH TO PASS BELOW 25 MPH
LR TURN
SIGNAL
INPUT
RR TURN
SIGNAL
INPUT
12V
HIGH
BEAMS ON
INPUT
HIGH
HORN
COMMAND
LOW
HORN
COMMAND
C6
C8
D14
C11
C3
1334C
.35
YEL/BLK
1335C
.35
DK GRN/WHT
1192E
.35
WHT
20250
35
PPL
2026C
.35
PNK
12110207
BLU 32-WAY
12110245
Pt* 32-WAY
12110244
PNK 24-WAY
1211008a
GRA 24-WAY
12110245
PNK 32-WAY
C1
J1
A11
J4
A5
J2
09
D10
SEE EXTERKR
LKXTXC
SEE EXTERIOR
LMXTMG
LR TURN
OUTPUT
SOLID
STATE
RR TURN
OUTPUT
HIGH
BEAMS ON
OUTPUT
SOLID
STATE
SOLID
STATE
TURN/HAZ/ORL MODULE
HEADLAMP MODULE
HORN MODULE
LEFT HAND JUNCTION BLOCK (LHJB)
PSMELC67895AA

CamScanner

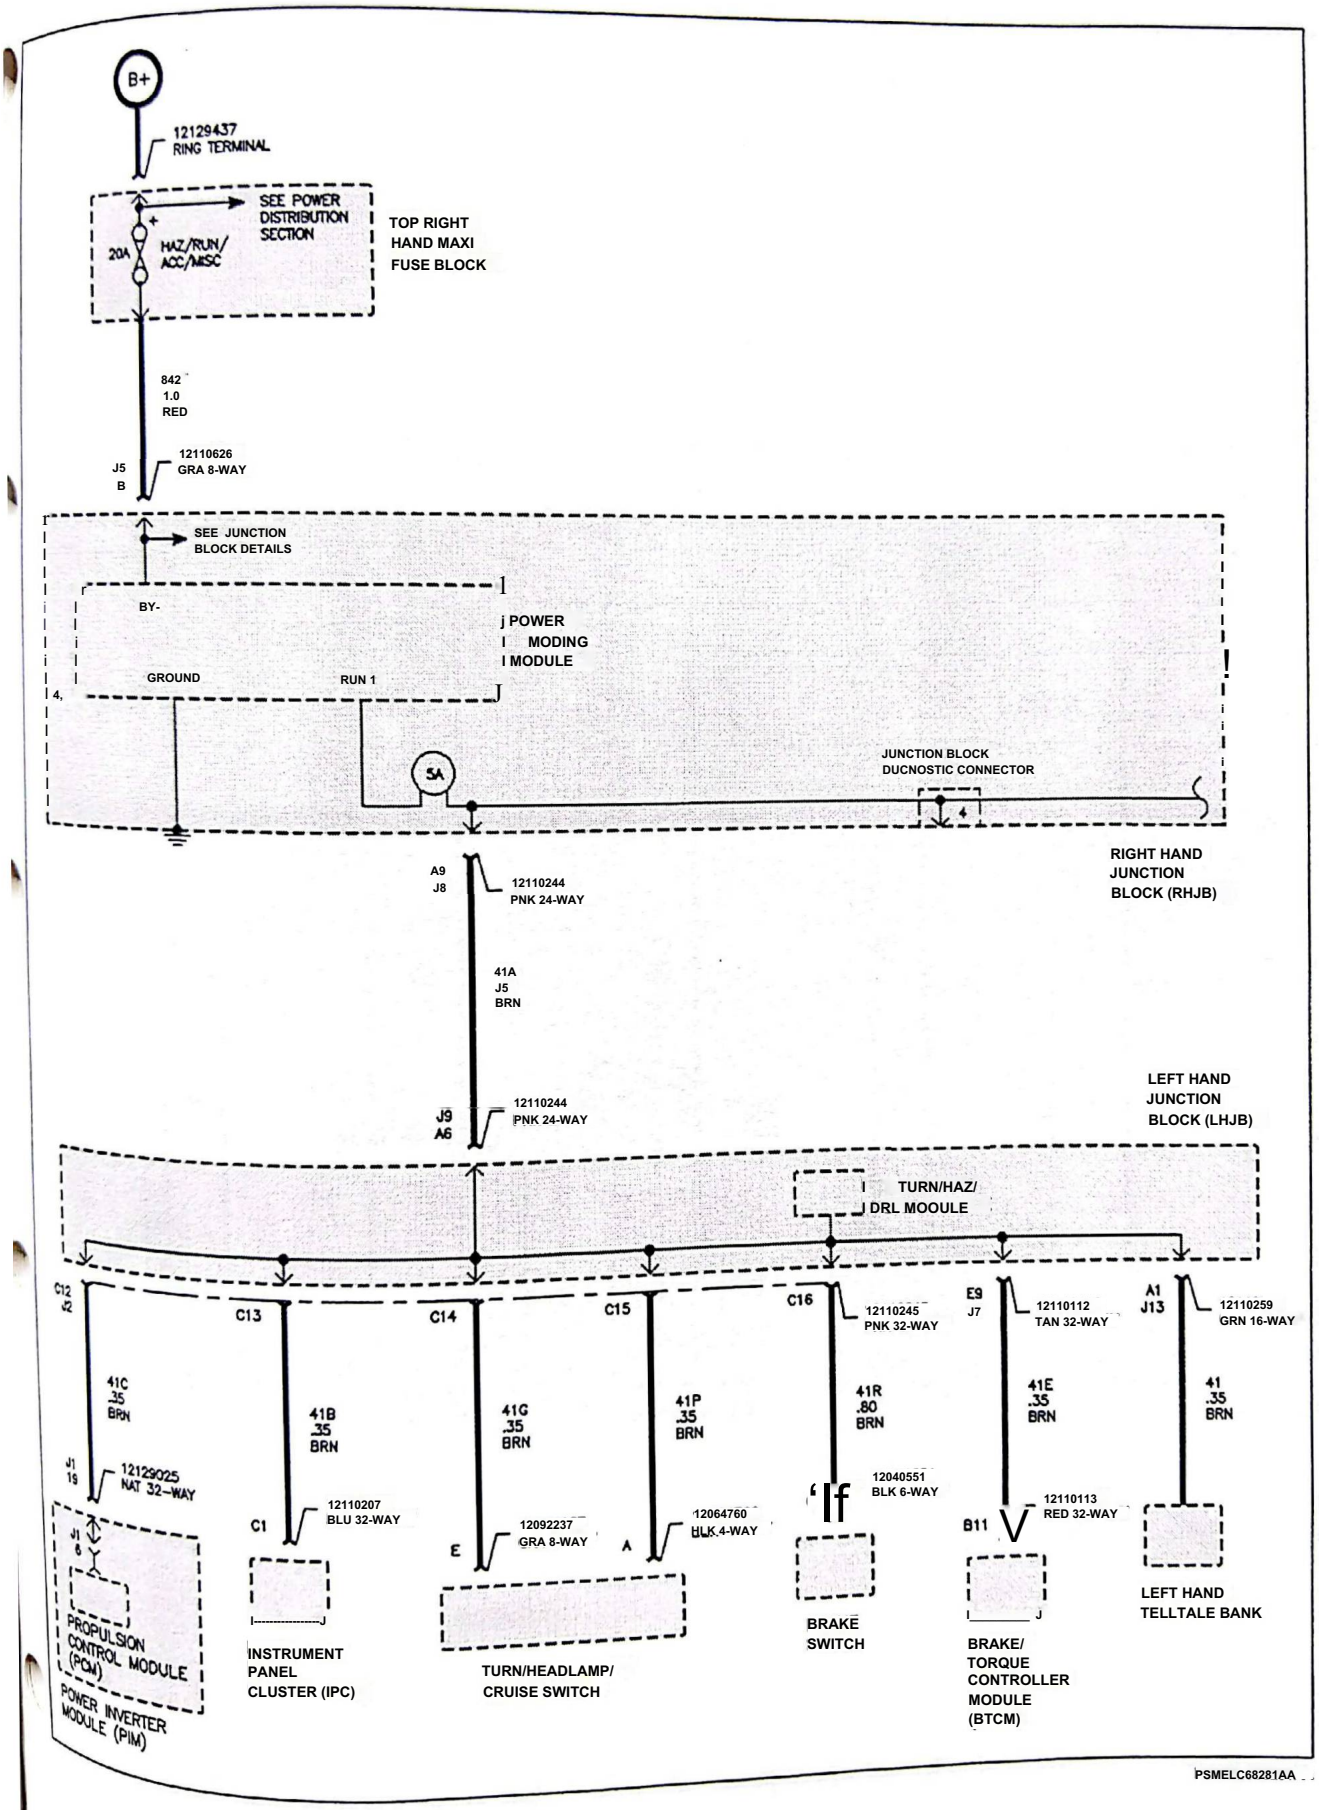
B+
12129437
RING TERMINAL
SEE POWER DISTRIBUTION SECTION
20A
HAZ/RUN/ ACC/MISC
TOP RIGHT HAND MAXI FUSE BLOCK
842
1.0
RED
J5
B
12110626
GRA 8-WAY
SEE JUNCTION BLOCK DETAILS
BY-
POWER MODING MODULE
GROUND
RUN 1
5A
JUNCTION BLOCK DUCNOSTIC CONNECTOR
RIGHT HAND JUNCTION BLOCK (RHJB)
A9
J8
12110244
PNK 24-WAY
41A
J5
BRN
J9
A6
12110244
PNK 24-WAY
LEFT HAND JUNCTION BLOCK (LHJB)
TURN/HAZ/ DRL MOOULE
C12
C13
C14
C15
C16
E9
J7
12110112
TAN 32-WAY
A1
J13
12110259
GRN 16-WAY
41C
.35
BRN
41B
.35
BRN
41G
.35
BRN
41P
.35
BRN
41R
.80
BRN
41E
.35
BRN
41
.35
BRN
J1
19
12129025
NAT 32-WAY
C1
12110207
BLU 32-WAY
E
12092237
GRA 8-WAY
A
12064760
BLK 4-WAY
12040551
BLK 6-WAY
B11
12110113
RED 32-WAY
PROPULSION CONTROL MODULE (PCM)
POWER INVERTER MODULE (PIM)
INSTRUMENT PANEL CLUSTER (IPC)
TURN/HEADLAMP/ CRUISE SWITCH
BRAKE SWITCH
BRAKE/ TORQUE CONTROLLER MODULE (BTCM)
LEFT HAND TELLTALE BANK
PSMELC68281AA

CamScanner

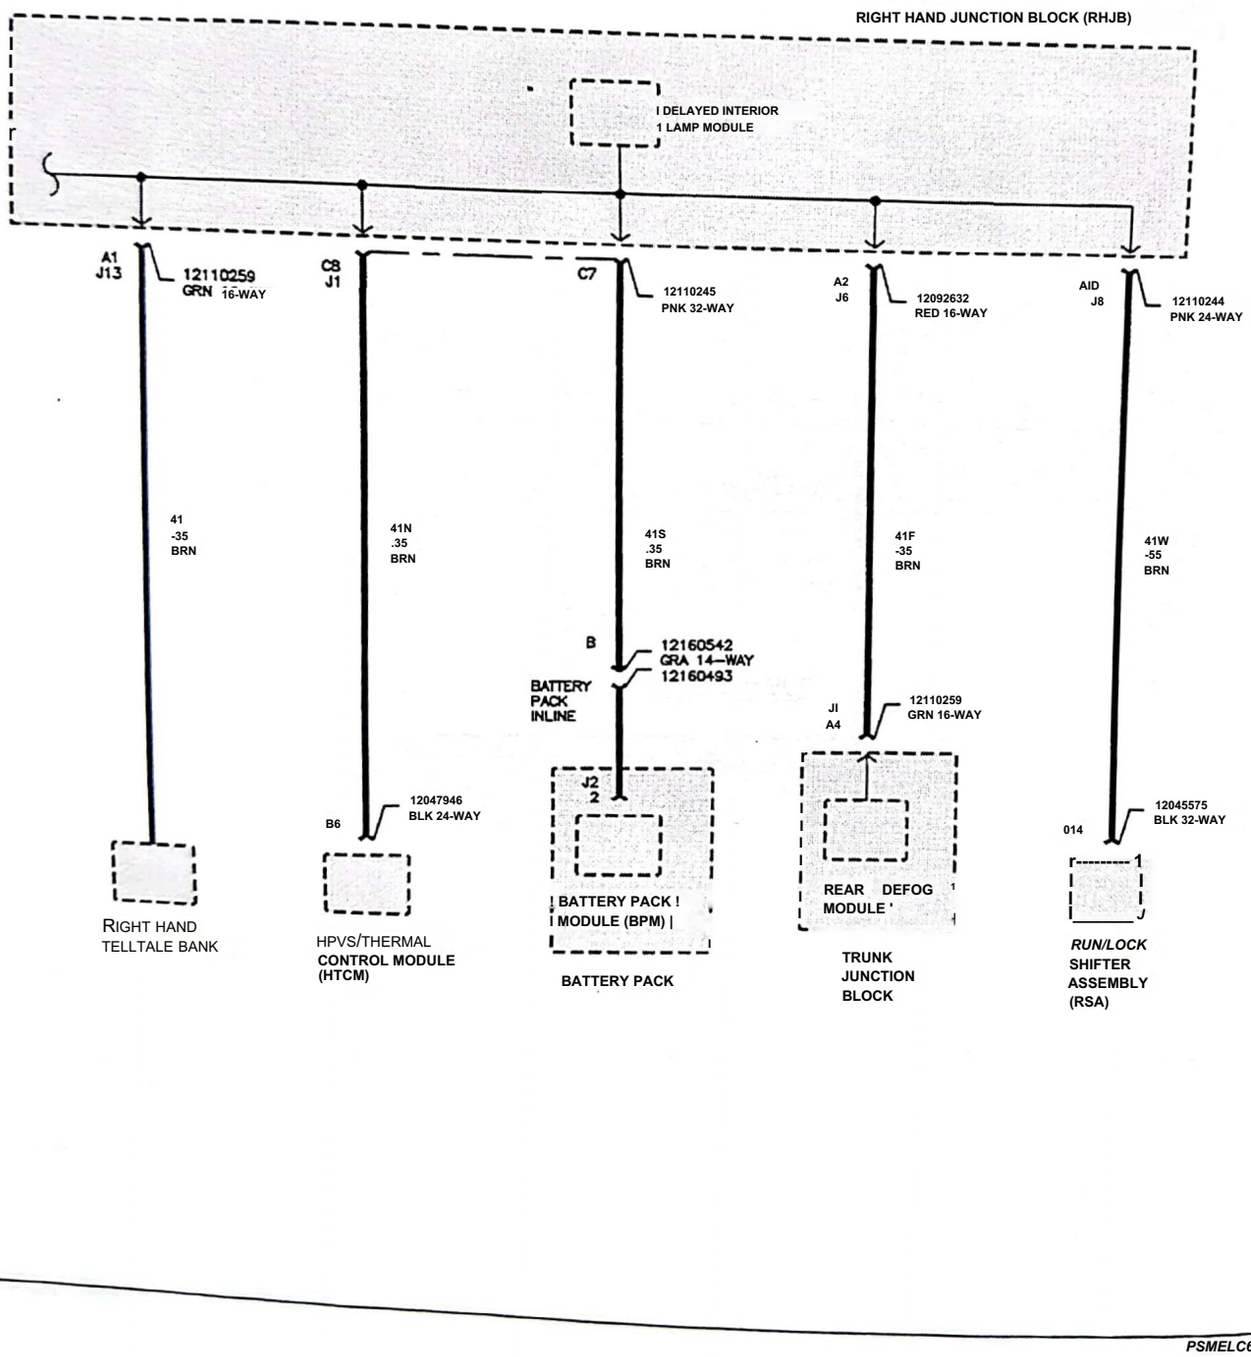

PSMELC63282M

CamScanner

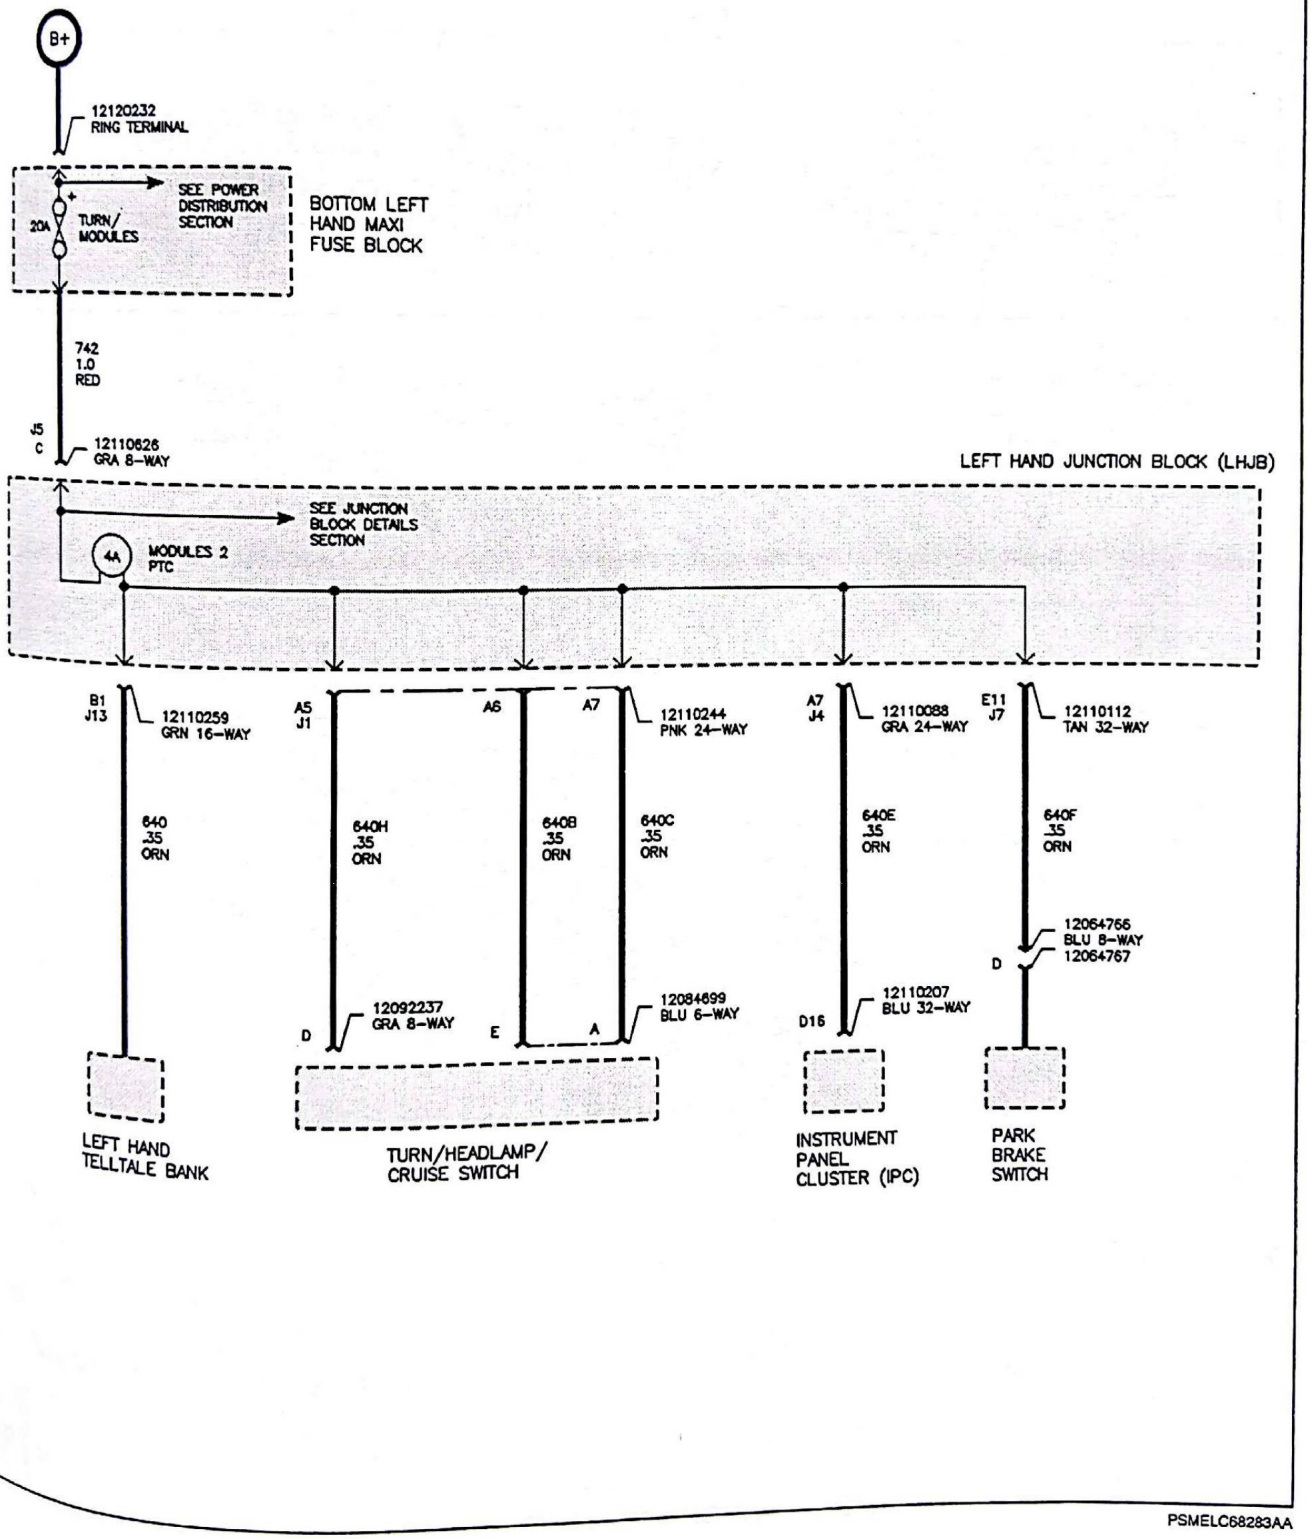

PSMELC68283AA

CamScanner

INSTRUMENT PANEL CLUSTER (IPC)

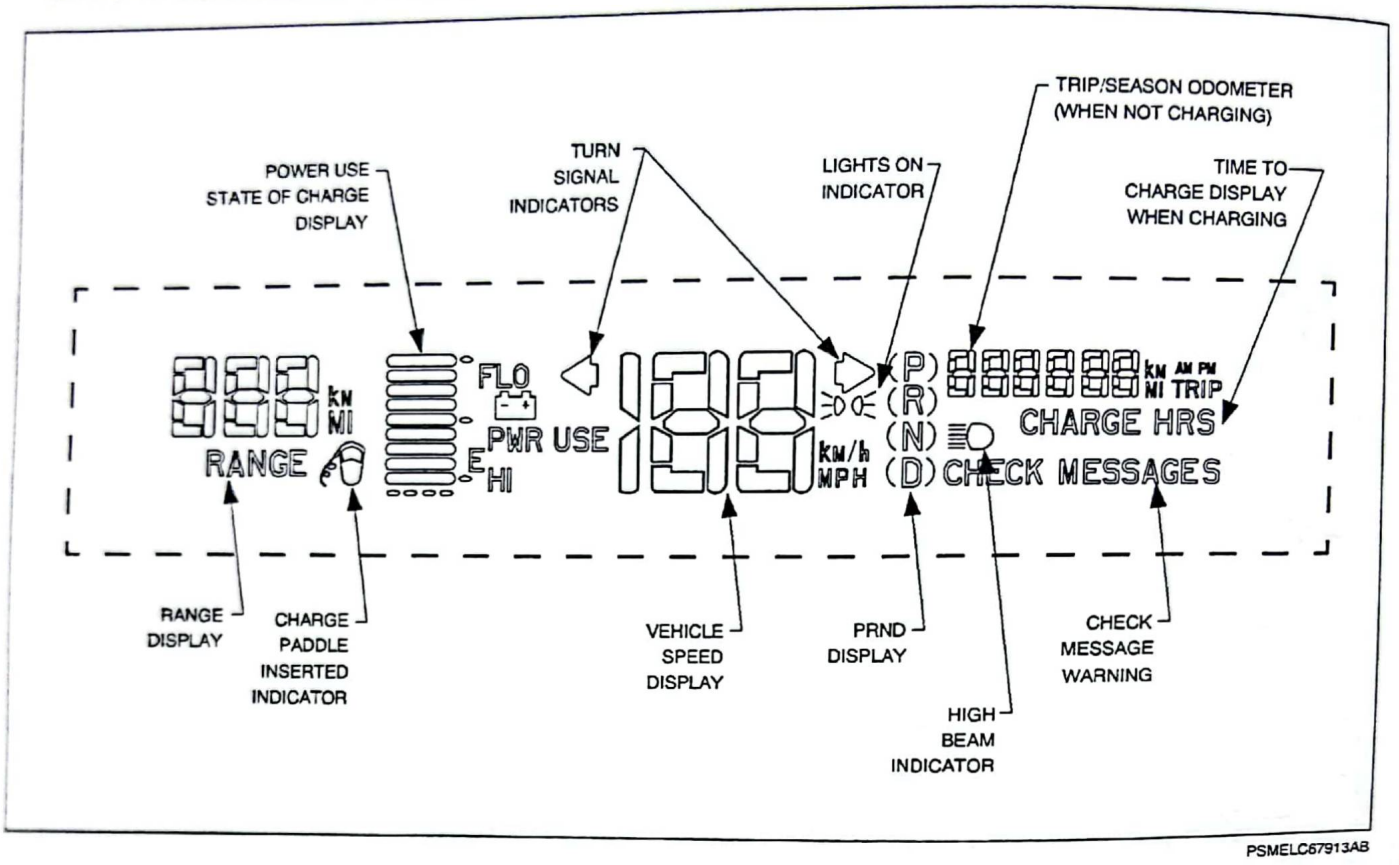

PSMELC67913AB

CamScanner

INSTRUMENT PANEL CLUSTER (IPC) COMPONENT LOCATION VIEW

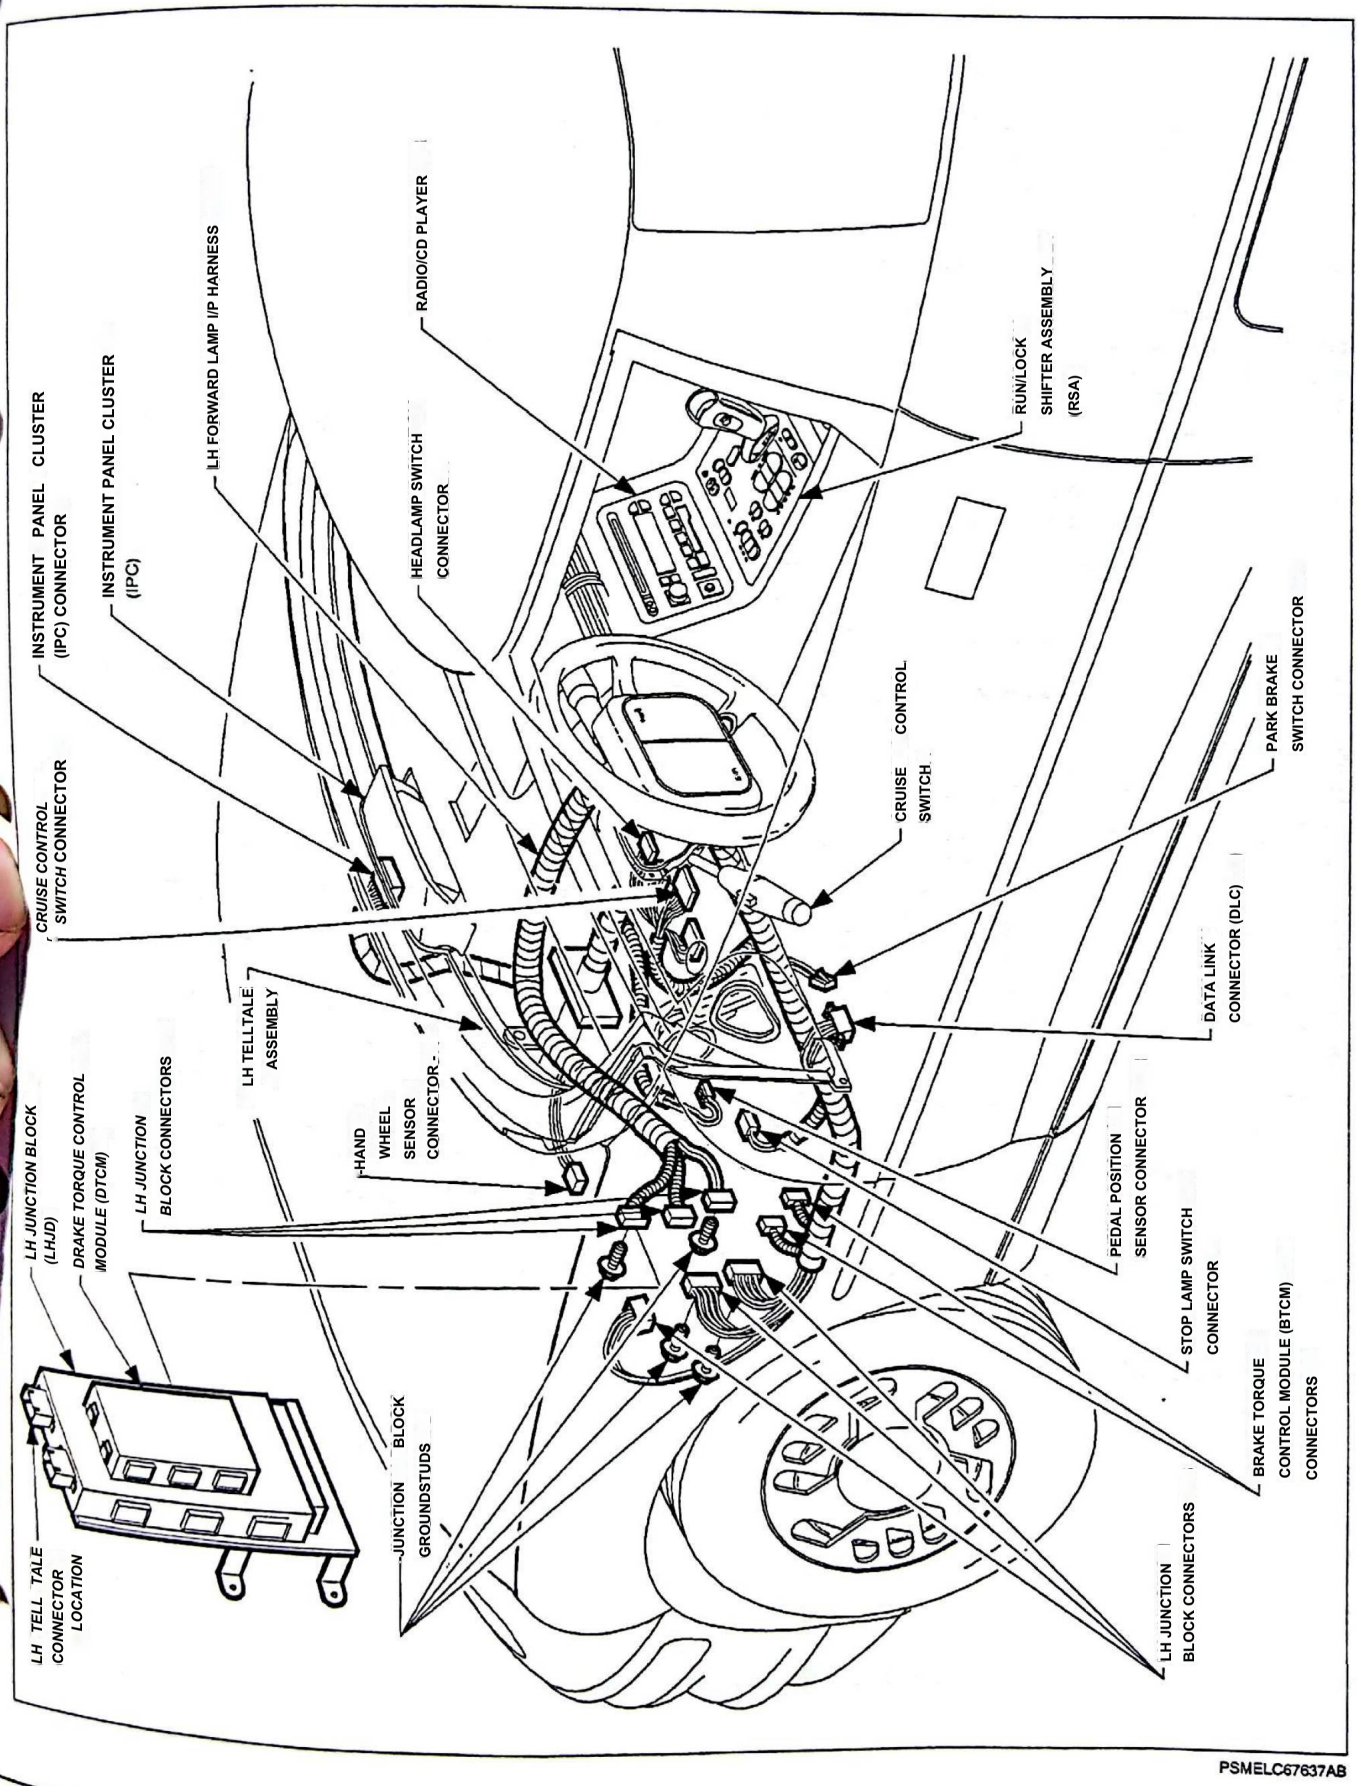
INSTRUMENT PANEL CLUSTER (IPC) CONNECTOR
INSTRUMENT PANEL CLUSTER (IPC)
LH FORWARD LAMP I/P HARNESS
RADIO/CD PLAYER
HEADLAMP SWITCH CONNECTOR
RUN/LOCK SHIFTER ASSEMBLY (RSA)
CRUISE CONTROL SWITCH CONNECTOR
CRUISE CONTROL SWITCH
PARK BRAKE SWITCH CONNECTOR
LH TELLTALE ASSEMBLY
DATA LINK CONNECTOR (DLC)
LH JUNCTION BLOCK (LHJD)
DRAKE TORQUE CONTROL MODULE (DTCM)
LH JUNCTION BLOCK CONNECTORS
HAND WHEEL SENSOR CONNECTOR
PEDAL POSITION SENSOR CONNECTOR
STOP LAMP SWITCH CONNECTOR
BRAKE TORQUE CONTROL MODULE (BTCM) CONNECTORS
LH JUNCTION BLOCK CONNECTORS
JUNCTION BLOCK GROUNDSTUDS
LH TELL TALE CONNECTOR LOCATION

PSMELC67637AB

INSTRUMENT PANEL CLUSTER (IPC)

GENERAL DESCRIPTION

POWER STEERING CONTROL

POWER STEERING HAND WHEEL SENSOR

The instrument panel cluster (IPC) monitors the handwheel sensor feedback voltage whenever in Run mode. A five volt reference is fed to the sensor and a sensor return circuit acts as the sensor ground. The sensor feedback voltage varies between about 0.25v and 4.75v during normal steering maneuvers. The voltage will ramp up and down several times during a full steering maneuver.

COMMANDED STEERING PUMP SPEED

The IPC uses a combination of the handwheel sensor input and vehicle speed input to calculate the steering pump speed signal, which is sent over a discreet line to the power steering control module (PSCM). A PSCM supplied reference voltage is duty cycled between about 20% and 83 % by the IPC. Because of resistors in the PSCM and IPC, the voltage only varies between about 11.0 and 12.8 volts over the entire duty cycle range. The charts below show the relationships between vehicle speed and duty cycle and steering wheel turning rpm and duty cycle. Whichever input results in a larger duty cycle at a given time is used to determine the actual duty cycle. The IPC output drops to 48% when in park after four seconds of nonactivity from the steering wheel sensor. The output drops and remains at 20% whenever the charge paddle is inserted.

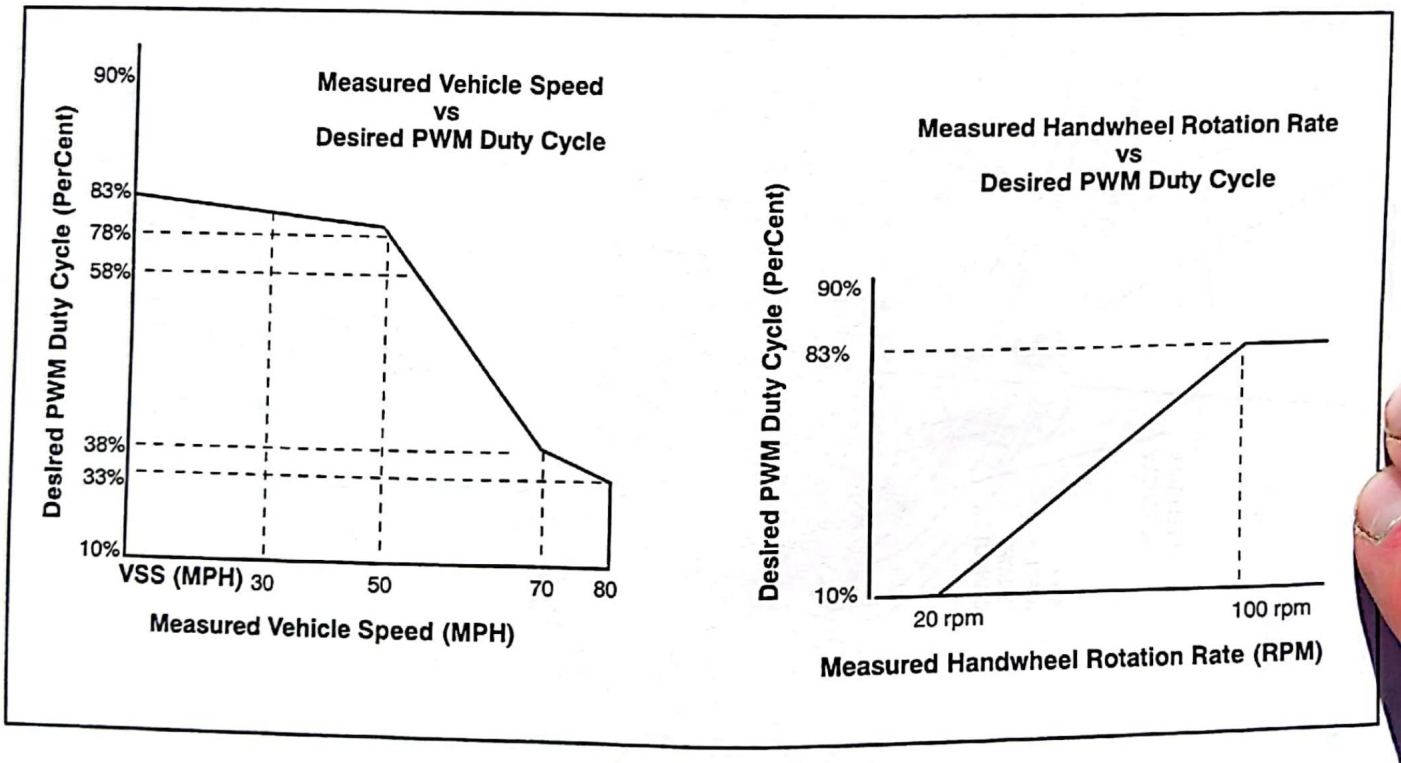

TELLTALE CONTROL

The IPC is responsible for turning on seven telltales. Six of the telltales, — Service Now, Battery Life, Wait, and Check Tire Pressure are turned on when the IPC receives a [re]Qu, [seat] belt [st]atus message from the an[ivers]. The seatbelt telltale is turned on directly by the IPC in response to a discreet input from the an[1] [SDM]) to determine if the SIR telltale is commanded On.

The IPC monitors the SIR telltale control circuit (grounded by the sensing and diagnostic modu e[A] vp System and ANTILOCK telltales).

The IPC also receives serial data messages letting it know if certain telltales are being turned on (□ zcpcURITY' BRAKL

For more information on the operation of these telltales refer to "Telltales."

Reduced Performance, Temp, [0]^[er] modules. The

CamScanner

SEAT BELT SWITCH INPUT

The IPC monitors the seat belt switch circuit 238 to see if the driver's seat belt is buckled. If it is not buckled, circuit 238 is pulled low by the switch and the IPC grounds circuit 234 to turn on the fasten seat belt telltale. While the seat belt remains unbuckled the IPC will turn On the CHECK MESSAGES warning for seven seconds, once every five minutes. Whenever the CHECK MESSAGES warning comes On, the IPC sounds a single chime.

VEHICLE SPEED INPUT

The IPC receives a 4000 pulse per mile speed input from the PCM over a dedicated circuit 389.

TURN SIGNAL INDICATORS

The turn signal inputs provide battery voltage to the IPC from the same circuits that feed the left and right turn signal bulbs. The IPC uses these inputs to determine when to turn on the turn signal indicators on its display. If both inputs go high at the same time, both signals are flashed together to indicate hazard flashers

RANGE DISPLAY

The RANGE display gives an approximate range that the vehicle can travel on the remaining charge. This range is calculated based on the state of charge of the battery pack and on recent driving/idling of the vehicle. The range can therefore change considerably as driving conditions and habits are altered during a given charge.

ENERGY REMAINING (STATE OF CHARGE)

The state of charge indicator is similar to the fuel gage in an internal combustion vehicle. It shows the amount of useable charge left on the battery pack. There are 11 bars that make up this indicator, each one representing about 9% of total charge. The GAGE button on the run/lock/shifter assembly (RSA) toggles the display between the power remaining and power use displays.

POWER USE DISPLAY

The power use (PWR USE) display is a gauge showing how quickly power is being used. This display provides instant feedback to the driver so they can be aware of how driving habits and features enabled on the car affect power use. By referring to this gage drivers can modify their driving to maximize the range they can travel on one charge. The bars are not equal in value. Refer to the table below for the power use represented by each bar. The table is laid out in the same manner as the display on the IPC. While charging, the power use display indicates how much energy is being put into the pack.

POWER USE DISPLAY		COMPONENT POWER USE		
2^01 or more Watts	BAR #11	Radio	Watts	BAR #11
30001 to 50000 Watts	BAR #10	Braking	50 Watts	BAR #10
aWOl to 30000 Watts	BAR #9	On Board Controllers	70 Watts	All seven controllers.
12001 to 20000 Watts	BAR #8	Headlights	200 Watts	Low beam, includes tail and marker lamps.
8001 to 1200 Watts	BAR #7	LowA/C	400 Watts	Steady state operation, includes blower and front fan.
^08000^	BAR #6	Rear Defogger	450 Watts	
^°W)Wa^	BAR #5	Heated Windshield	700 Watts	
1001 to 2000 Watts	BAR #4	MaxA/C	1.700 Watts	Steady state operation, includes blower and front fan.
501 to 1000 Watts	BAR #3	Motor® 55 MPH	7,000 Watts	Steady speed, level road, 70°F ambient.
101 to 500 Watts	BAR #2	Motor @ WOT	118,000 Watts	Wide Open Accelerator, level road, 70°F ambient.
EHfSjg---	BAR#1			

CamScanner

HI BEAM INDICATOR

The IPC turns on the high beam indicator whenever it sees power on the left high beam circuit 1192E.

CHECK MESSAGES WARNING

The CHECK MESSAGES indicator warm g n serves as an indicator/reminder to the driver. It lights up to indicate that a telltale has been turned On or is still On. If any of the telltales (exc p (except hazard, parking brake, or low traction) stay On, the CHECK MESSAGES indicator warning is turned On for seven seconds once every five minutes. wheneyer tfae Ipc turns on the CHECK MESSAGES indicator warning, it also sounds a single chime to call attention to the warning.

CHARGE HOURS AND CHARGE INDICATOR

When the charge paddle is fully inserted into the charge port, the paddle indicator shows up on the IPC, the PRND display goes away, and the trip/season odometer is replaced with charge hours. The charge hours (CHARGE HO URS) display shows how long the vehicle calculates it will require to bring the battery pack to a full state ot charge, xne f display shows hours and minutes just like a digital clock. This time will vary significantly based on current state o ff of charge (USOC), battery temperatures, and which charger is being used. There is a wall mounted charger that runs o a 240 volt 30 amp. supply and a portable charger that requires a 120 volt outlet with a 12 amp. capability. For more information, refer to the Battery and Charging service manual.

TRIP/SEASON ODOMETER

The trip odometer shows how many miles/km the vehicle has traveled since the last time it was reset. The trip odometer rolls over to zero at 32186.8 km (19,999.9 miles). If battery power to the IPC is lost, the trip odometer resets to zero. Pressing the trip button on the RSA toggles this display between trip odometer and season odometer. The season odometer value is stored in non volatile memory (loss of battery power does erase this data). The season odometer reads up to a maximum value of 499,999 miles, then remains at that reading.

PRND (PARK, REVERSE, NEUTRAL, DRIVE)

Tne Park, Reverse, Neutral, Drive (PRND) indicator shows what shifter position the vehicle is in. These positions correspond to the gear positions on internal combustion vehicles.

IPC CHIMES

There are a number of different chime signals sounded by the IPC. They are: seat belt unbuckled, key reminder, park lamps left On, turn signal On for extended time, and CHECK MESSAGES indicator.

The seat belt unbuckled warning sounds at 50 chimes/minute for four to eight seconds after entering the RUN mode or until the driver's seat belt is buckled.

The key reminder warning sounds at 120 chimes/minute whenever the car is in OFF/ACC or RUN mode and the driver or passenger door is open.

The park lamp warning sounds at 180 chimes/minute whenever the park lamps are On the car is not in RUN mode, an the drivers or passenger's door is open.

e e ded t si in sync if been operating

SemSeDthM lTkm^nXy3™"8 SoUndS W‘th the tUm Signal flasher either turn sigoal h&S

The check messages warning sounds one time each time the CHECK MESSAGES indicator warning is turned On.

AIR BAG TELLTALE

he IPC onitors the air bag telltale CiFCUit 358 t0 determine if k is JiHPCsSs a hist ory DTC 40 and initiates a single chime and the CHECK MESSAGES indicator warning- grounded by the SDM. If circuit 358is grounded,

KEYMINDER

The RSA ls th P n open^the feriest! n5 Wh?u eVer the iS in car e RUN or ACC mode over the keyminder circuit. Whenever ai dvpulls is thekeyminderc rcuh % ou. battery Y0',aee over the keyminder circuit. If the RSA is in RUN or ACCY mode y circuit down to about 1.5 - 2.0 volts. This tells IPC to turn on the keyminder warning.

CamScanner

DISPLAY STEERING CHIME MODULE (IPC) TROUBLE TREE INDEX

- Chart 1 - Instrument Panel Cluster (IPC) Blank
- , chart 2 - IPC Flashing/Erratic
- , Chart 3 - VSS Erratic/Flashing/Zero All the Time
- Chart 4 - Power Steering - Lack of Assist/Erratic Assist
- t Chart 5 - Chime Problems
- Chart 6 - Seat Belt Telltale Inoperative
- Chart 7 - Seat Belt Telltale On All the Time
- i Chart 8 - PRND Display Incorrect/All Lit Up
- IPC DTC11 - Loss of BPM Poll
- IPC DTC 12 - Loss of PCM Eavesdrop
- IPC DTC 13 - Loss of HTCM Eavesdrop
- IPC DTC 14 - Loss of RSA Eavesdrop
- IPC DTC 15 - Loss of BTCM Eavesdrop
- IPC DTC 16 - Handwheel Sensor Fault
- IPC DTC 31 - HTCM Service Now Telltale
- IPC DTC 32 - HTCM Temperature Telltale
- IPC DTC 33 - PCM Service Now Telltale
- IPC DTC 34 - PCM Temperature Telltale
- IPC DTC 35 - BPM Service Now Telltale
- IPC DTC 36 - BPM Temperature Telltale
- IPC DTC 37 — Reduce Performance Telltale
- IPC DTC 38 - Battery Life Telltale
- IPC DTC 39 — Check Tire Pressure Telltale
- IPC DTC 40 - Air Bag (SIR) Telltale
- IPC DTC 41 - Security Telltale
- IPC DTC 42 - Brake Telltale
- !PC DTC 43 - Anti-Lock Telltale
- IPC DTC 44 - Seatbelt Telltale
- IPC DTC 45 — PCM Service Soon Telltale

CamScanner

INSTRUMENT **PANEL CLUSTER (IPC)** BLANK
CHART 1

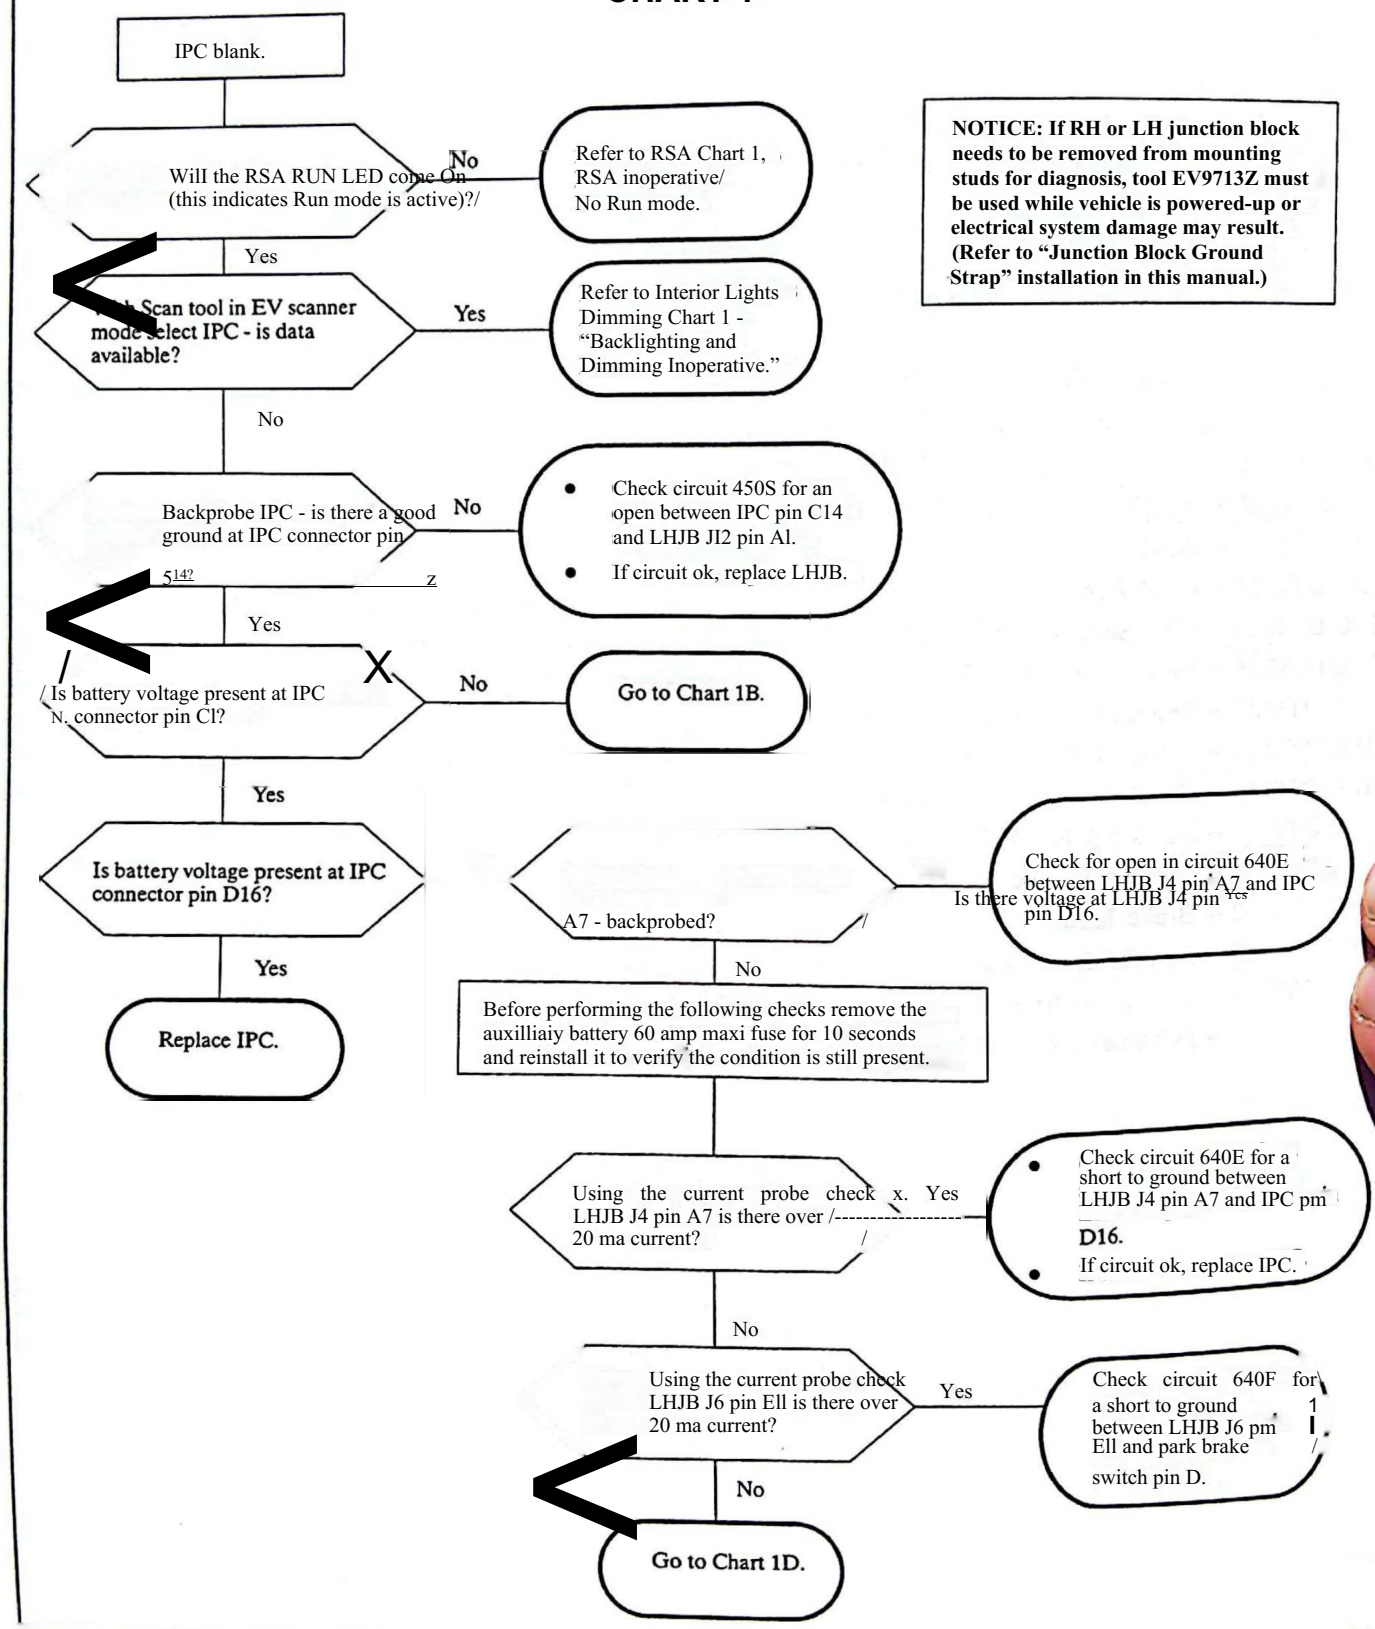
IPC blank.
WilI the RSA RUN LED come On (this indicates Run mode is active)?/
No
Refer to RSA Chart 1, RSA inoperative/ No Run mode.
Yes
Scan tool in EV scanner mode select IPC - is data available?
Yes
Refer to Interior Lights Dimming Chart 1 - "Backlighting and Dimming Inoperative."
No
Backprobe IPC - is there a good ground at IPC connector pin
No
Check circuit 450S for an open between IPC pin C14 and LHJB JI2 pin Al.
If circuit ok, replace LHJB.
Yes
Is battery voltage present at IPC connector pin Cl?
No
Go to Chart 1B.
Yes
Is battery voltage present at IPC connector pin D16?
Yes
Replace IPC.
A7 - backprobed?
Is there voltage at LHJB J4 pin
Yes
Check for open in circuit 640E between LHJB J4 pin A7 and IPC pin D16.
No
Before performing the following checks remove the auxilliaiy battery 60 amp maxi fuse for 10 seconds and reinstall it to verify the condition is still present.
Using the current probe check x. Yes LHJB J4 pin A7 is there over 20 ma current?
Check circuit 640E for a short to ground between LHJB J4 pin A7 and IPC pm D16.
If circuit ok, replace IPC.
No
Using the current probe check LHJB J6 pin Ell is there over 20 ma current?
Yes
Check circuit 640F for a short to ground between LHJB J6 pm Ell and park brake switch pin D.
No
Go to Chart 1D.

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

CamScanner

INSTRUMENT PANEL CLUSTER (IPC) BLANK

CHART 1B

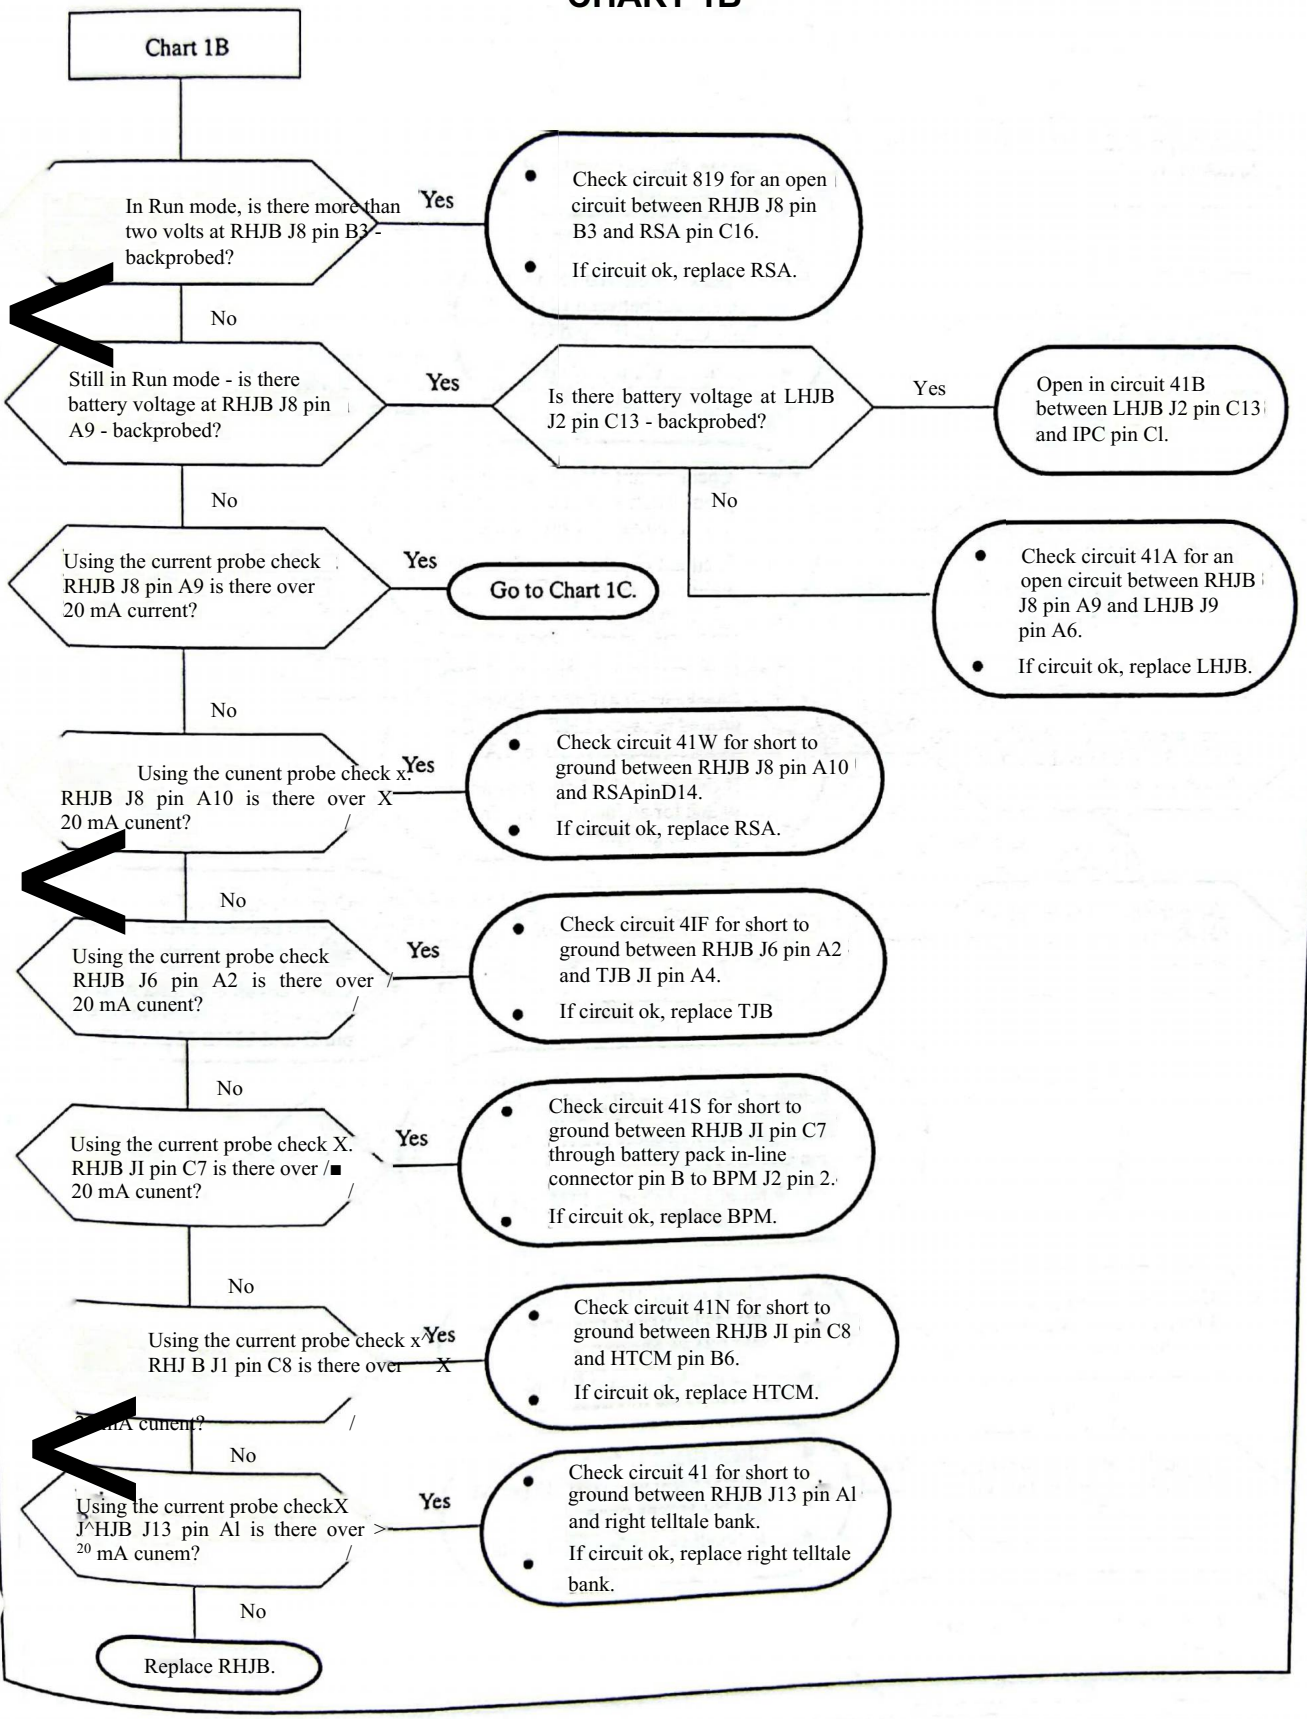
Chart 1B
In Run mode, is there more than two volts at RHJB J8 pin B3 - backprobed?
Yes
Check circuit 819 for an open circuit between RHJB J8 pin B3 and RSA pin C16.
If circuit ok, replace RSA.
No
Still in Run mode - is there battery voltage at RHJB J8 pin A9 - backprobed?
Yes
Is there battery voltage at LHJB J2 pin C13 - backprobed?
Yes
Open in circuit 41B between LHJB J2 pin C13 and IPC pin Cl.
No
No
Using the current probe check RHJB J8 pin A9 is there over 20 mA current?
Yes
Go to Chart 1C.
Check circuit 41A for an open circuit between RHJB J8 pin A9 and LHJB J9 pin A6.
If circuit ok, replace LHJB.
No
Using the cunent probe check x. RHJB J8 pin A10 is there over X 20 mA cunent?
Yes
Check circuit 41W for short to ground between RHJB J8 pin A10 and RSApinD14.
If circuit ok, replace RSA.
No
Using the current probe check RHJB J6 pin A2 is there over 20 mA cunent?
Yes
Check circuit 4IF for short to ground between RHJB J6 pin A2 and TJB JI pin A4.
If circuit ok, replace TJB
No
Using the current probe check X. RHJB JI pin C7 is there over 20 mA cunent?
Yes
Check circuit 41S for short to ground between RHJB JI pin C7 through battery pack in-line connector pin B to BPM J2 pin 2.
If circuit ok, replace BPM.
No
Using the current probe check x. RHJ B J1 pin C8 is there over X
Yes
Check circuit 41N for short to ground between RHJB JI pin C8 and HTCM pin B6.
If circuit ok, replace HTCM.
No
Using the current probe checkX J^HJB J13 pin Al is there over 20 mA cunem?
Yes
Check circuit 41 for short to ground between RHJB J13 pin Al and right telltale bank.
If circuit ok, replace right telltale bank.
No
Replace RHJB.

CamScanner

INSTRUMENT PANEL CLUSTER (IPC) BLANK
CHART1C

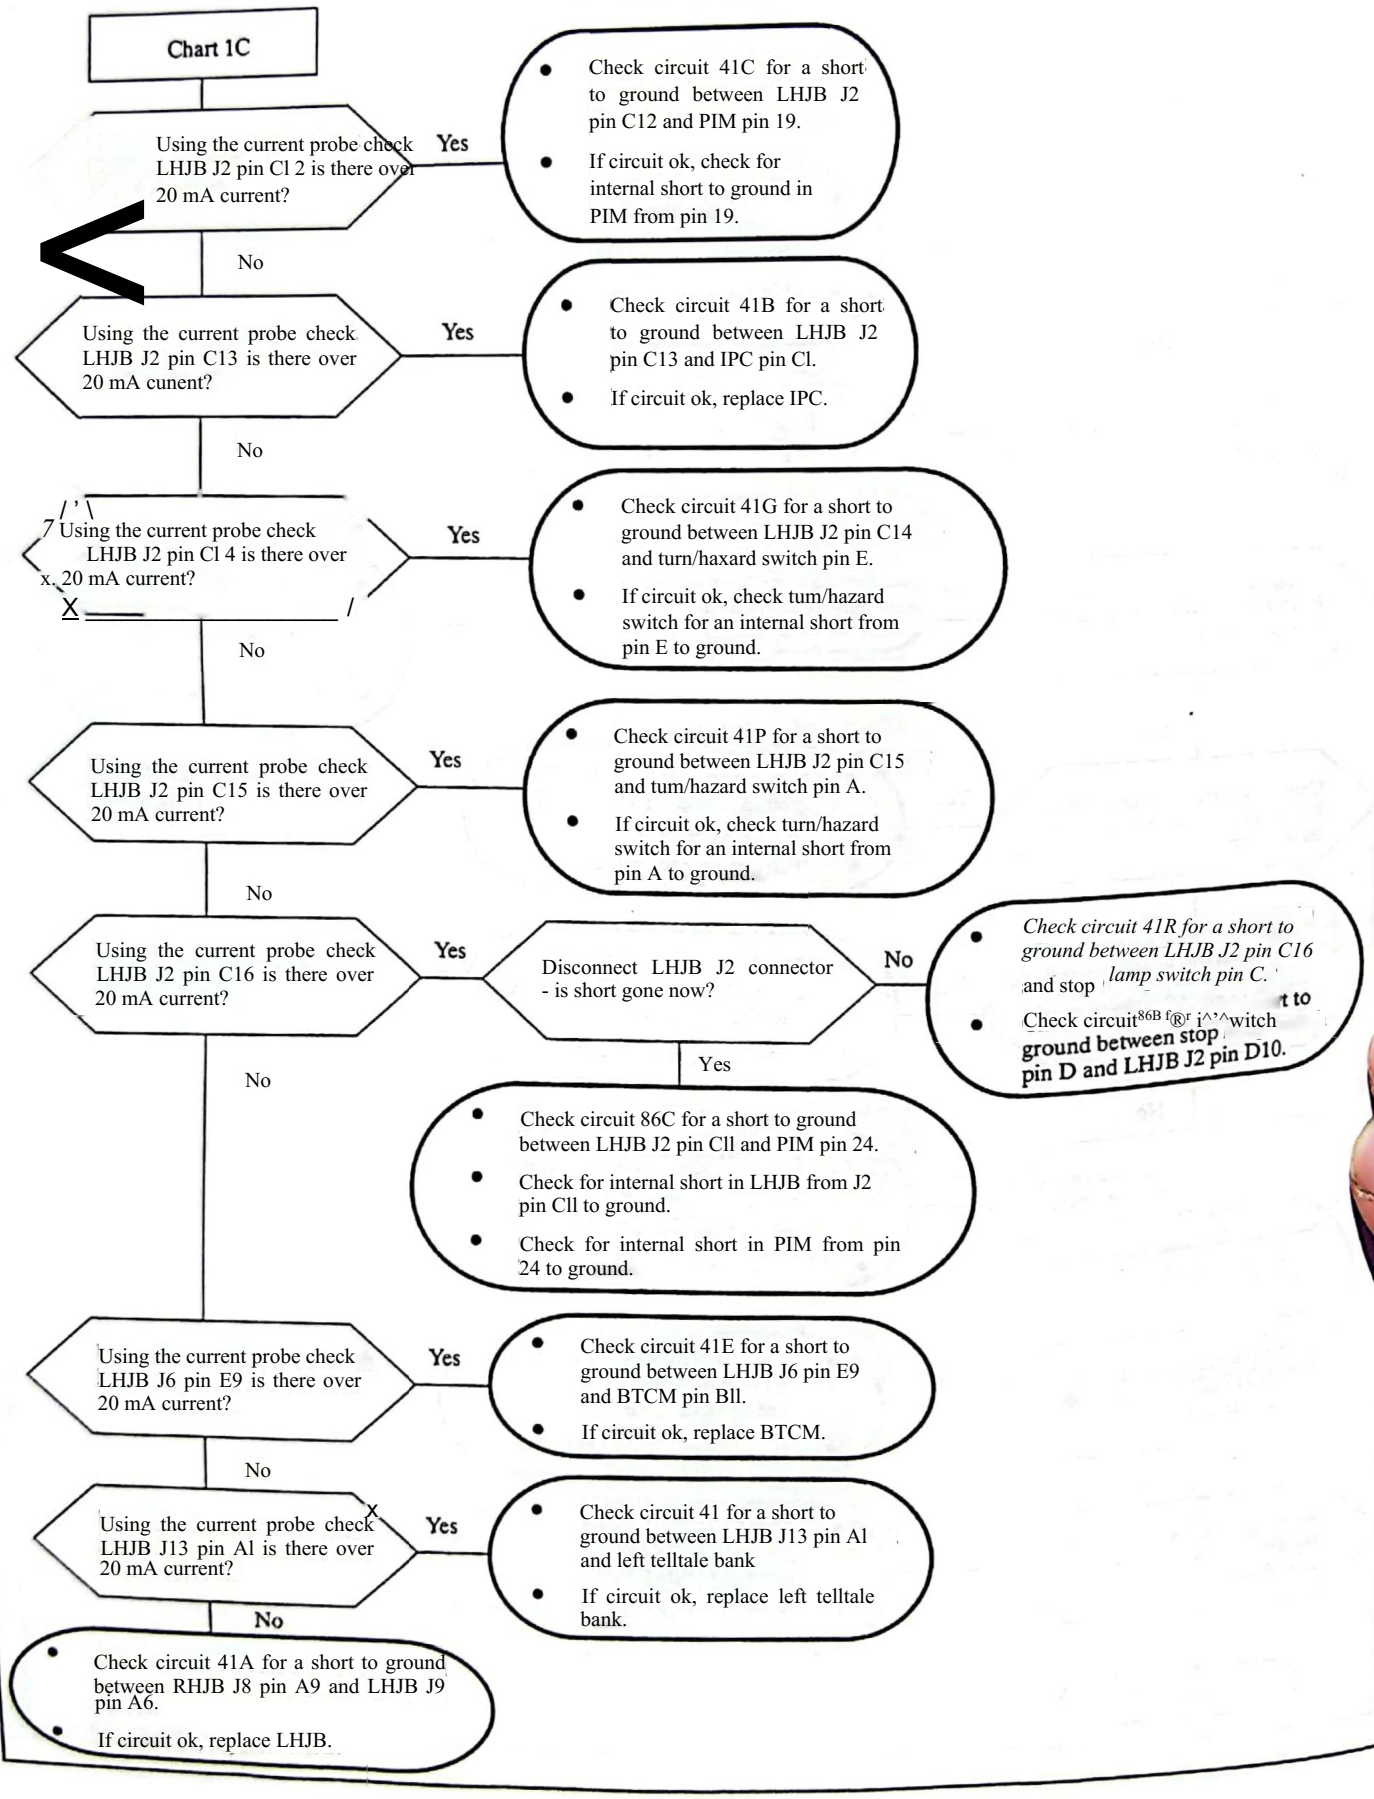
Chart 1C
Using the current probe check LHJB J2 pin Cl 2 is there over 20 mA current?
Yes
Check circuit 41C for a short to ground between LHJB J2 pin C12 and PIM pin 19.
If circuit ok, check for internal short to ground in PIM from pin 19.
No
Using the current probe check LHJB J2 pin C13 is there over 20 mA cunent?
Yes
Check circuit 41B for a short to ground between LHJB J2 pin C13 and IPC pin Cl.
If circuit ok, replace IPC.
No
Using the current probe check LHJB J2 pin Cl 4 is there over 20 mA current?
Yes
Check circuit 41G for a short to ground between LHJB J2 pin C14 and turn/haxard switch pin E.
If circuit ok, check tum/hazard switch for an internal short from pin E to ground.
No
Using the current probe check LHJB J2 pin C15 is there over 20 mA current?
Yes
Check circuit 41P for a short to ground between LHJB J2 pin C15 and tum/hazard switch pin A.
If circuit ok, check turn/hazard switch for an internal short from pin A to ground.
No
Using the current probe check LHJB J2 pin C16 is there over 20 mA current?
Yes
Disconnect LHJB J2 connector - is short gone now?
No
Check circuit 41R for a short to ground between LHJB J2 pin C16 and stop lamp switch pin C.
Check circuit 86B for a short to ground between stop switch pin D and LHJB J2 pin D10.
Yes
Check circuit 86C for a short to ground between LHJB J2 pin Cll and PIM pin 24.
Check for internal short in LHJB from J2 pin Cll to ground.
Check for internal short in PIM from pin 24 to ground.
No
Using the current probe check LHJB J6 pin E9 is there over 20 mA current?
Yes
Check circuit 41E for a short to ground between LHJB J6 pin E9 and BTCM pin Bll.
If circuit ok, replace BTCM.
No
Using the current probe check LHJB J13 pin Al is there over 20 mA current?
Yes
Check circuit 41 for a short to ground between LHJB J13 pin Al and left telltale bank
If circuit ok, replace left telltale bank.
No
Check circuit 41A for a short to ground between RHJB J8 pin A9 and LHJB J9 pin A6.
If circuit ok, replace LHJB.

INSTRUMENT PANEL CLUSTER (IPC) BLANK

CHART1D

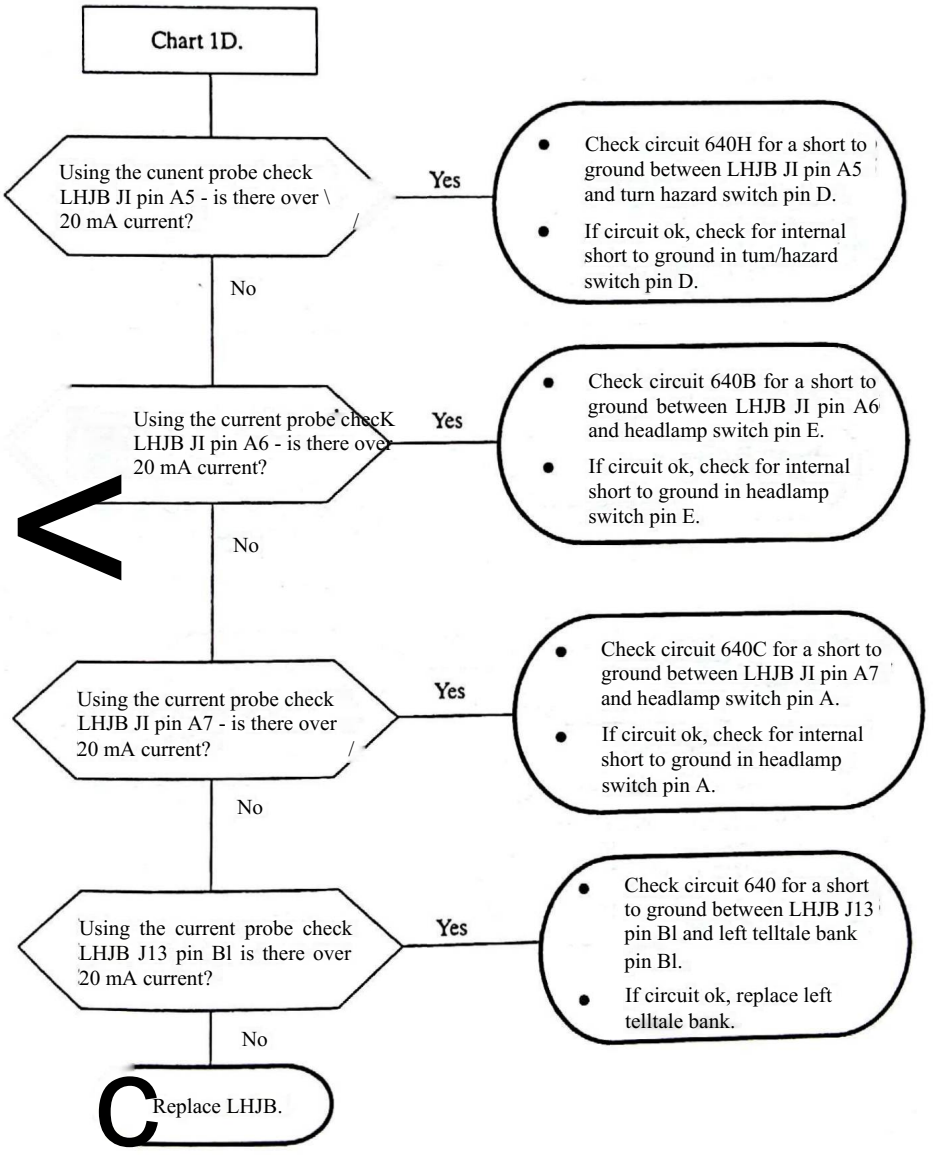
Chart 1D.
Using the cunent probe check LHJB JI pin A5 - is there over 20 mA current?
Yes
Check circuit 640H for a short to ground between LHJB JI pin A5 and turn hazard switch pin D.
If circuit ok, check for internal short to ground in tum/hazard switch pin D.
No
Using the current probe checK LHJB JI pin A6 - is there over 20 mA current?
Yes
Check circuit 640B for a short to ground between LHJB JI pin A6 and headlamp switch pin E.
If circuit ok, check for internal short to ground in headlamp switch pin E.
No
Using the current probe check LHJB JI pin A7 - is there over 20 mA current?
Yes
Check circuit 640C for a short to ground between LHJB JI pin A7 and headlamp switch pin A.
If circuit ok, check for internal short to ground in headlamp switch pin A.
No
Using the current probe check LHJB J13 pin Bl is there over 20 mA current?
Yes
Check circuit 640 for a short to ground between LHJB J13 pin Bl and left telltale bank pin Bl.
If circuit ok, replace left telltale bank.
No
Replace LHJB.

CamScanner

IPC FLASHING/ERRATIC

CHART 2

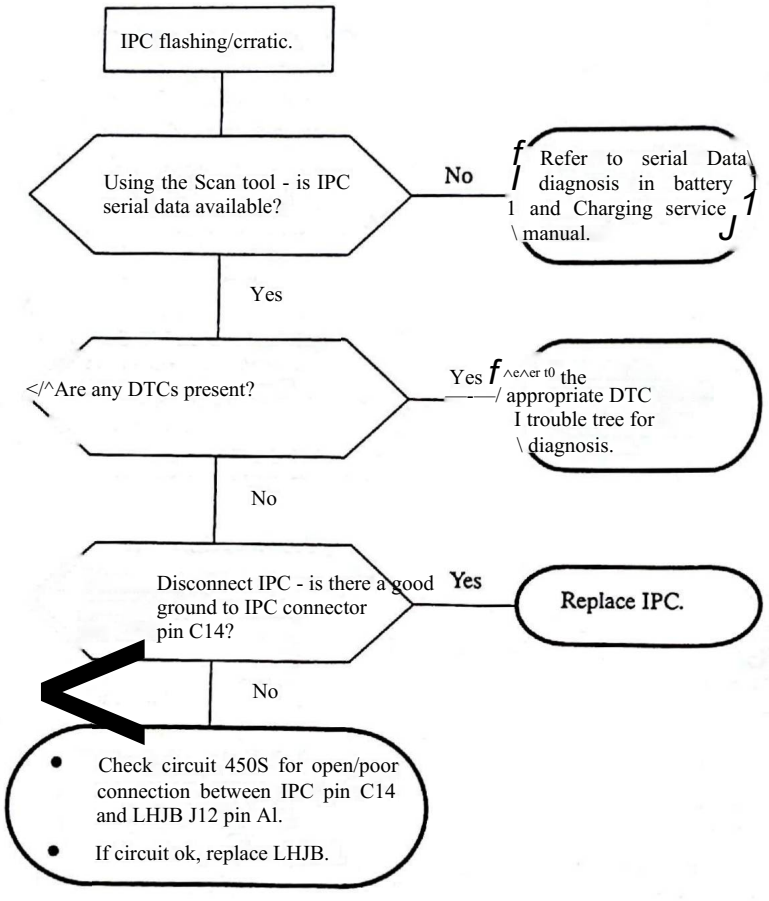
IPC flashing/crratic.
Using the Scan tool - is IPC serial data available?
No
Refer to serial Data diagnosis in battery and Charging service manual.
Yes
Are any DTCs present?
Yes
Refer to the appropriate DTC trouble tree for diagnosis.
No
Disconnect IPC - is there a good ground to IPC connector pin C14?
Yes
Replace IPC.
No
Check circuit 450S for open/poor connection between IPC pin C14 and LHJB J12 pin Al.
If circuit ok, replace LHJB.

CamScanner

VSS ERRATIC/FLASHING/ZERO ALL THE TIME

CHART 3

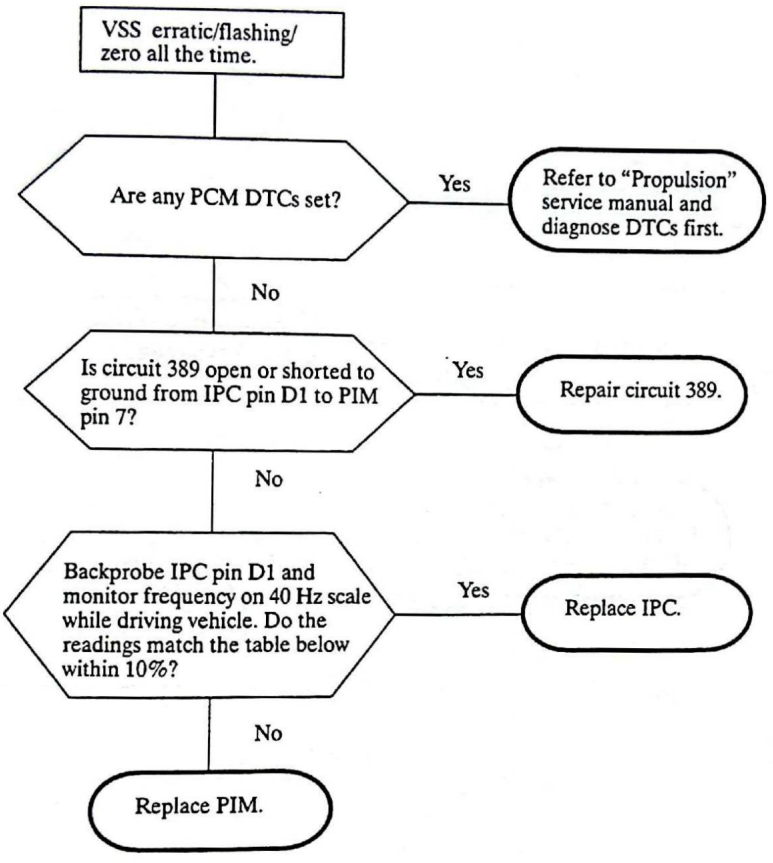
VSS erratic/flashing/ zero all the time.
Are any PCM DTCs set?
Yes
Refer to "Propulsion" service manual and diagnose DTCs first.
No
Is circuit 389 open or shorted to ground from IPC pin D1 to PIM pin 7?
Yes
Repair circuit 389.
No
Backprobe IPC pin D1 and monitor frequency on 40 Hz scale while driving vehicle. Do the readings match the table below within 10%?
Yes
Replace IPC.
No
Replace PIM.

Vehicle Speed	IPC Pin D1 Hz 40 Hz Scale (+/-10%)
0	.00
10	11.5
20	22.5
30	33.5
40	44.5
50	55.5
60	67.5
70	77.5
80	88.5

CamScanner

POWER STEERING – LACK OF ASSIST/ERRATIC ASSIST

CHART 4

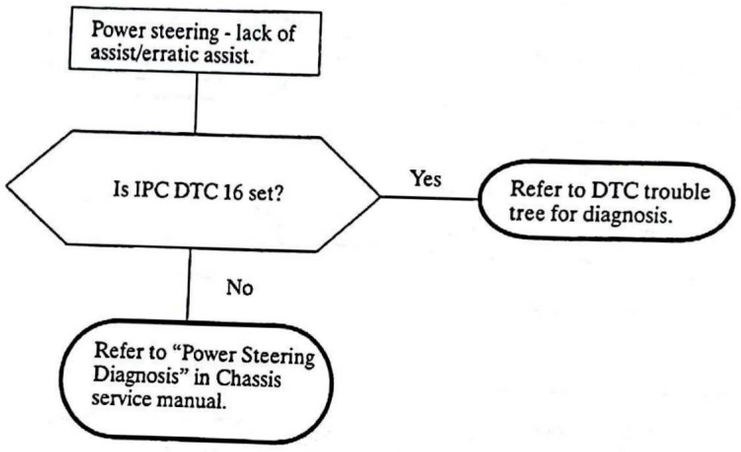
Power steering - lack of assist/erratic assist.
Is IPC DTC 16 set?
Yes
Refer to DTC trouble tree for diagnosis.
No
Refer to "Power Steering Diagnosis" in Chassis service manual.

CamScanner

CHIME PROBLEMS

CHART 5

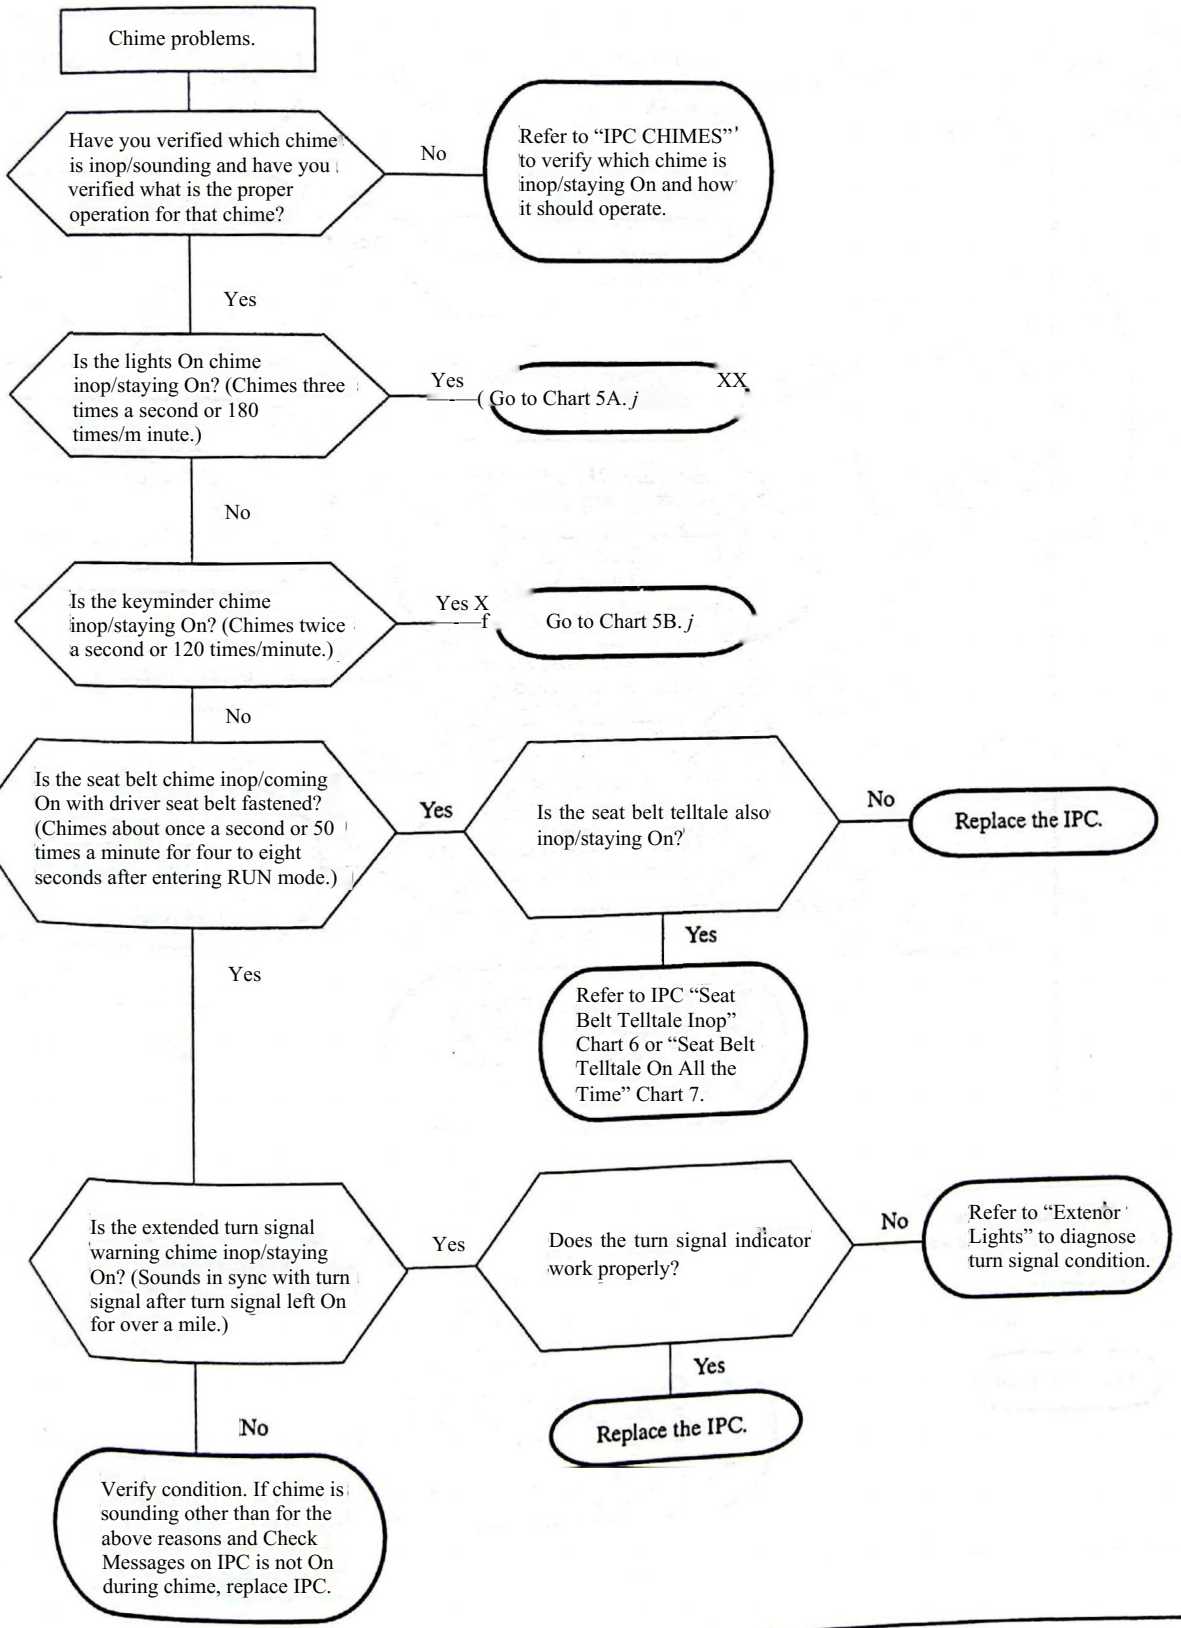
Chime problems.
Have you verified which chime is inop/sounding and have you verified what is the proper operation for that chime?
No
Refer to "IPC CHIMES" to verify which chime is inop/staying On and how it should operate.
Yes
Is the lights On chime inop/staying On? (Chimes three times a second or 180 times/m inute.)
Yes
Go to Chart 5A. j
XX
No
Is the keyminder chime inop/staying On? (Chimes twice a second or 120 times/minute.)
Yes X
f
Go to Chart 5B. j
No
Is the seat belt chime inop/coming On with driver seat belt fastened? (Chimes about once a second or 50 times a minute for four to eight seconds after entering RUN mode.)
Yes
Is the seat belt telltale also inop/staying On?
No
Replace the IPC.
Yes
Refer to IPC "Seat Belt Telltale Inop" Chart 6 or "Seat Belt Telltale On All the Time" Chart 7.
Yes
Is the extended turn signal warning chime inop/staying On? (Sounds in sync with turn signal after turn signal left On for over a mile.)
Yes
Does the turn signal indicator work properly?
No
Refer to "Extenor Lights" to diagnose turn signal condition.
Yes
Replace the IPC.
No
Verify condition. If chime is sounding other than for the above reasons and Check Messages on IPC is not On during chime, replace IPC.

CamScanner

LIGHTS ON CHIME INOPERATIVE/STAYING ON

CHART 5A (PAGE 1 OF 2)

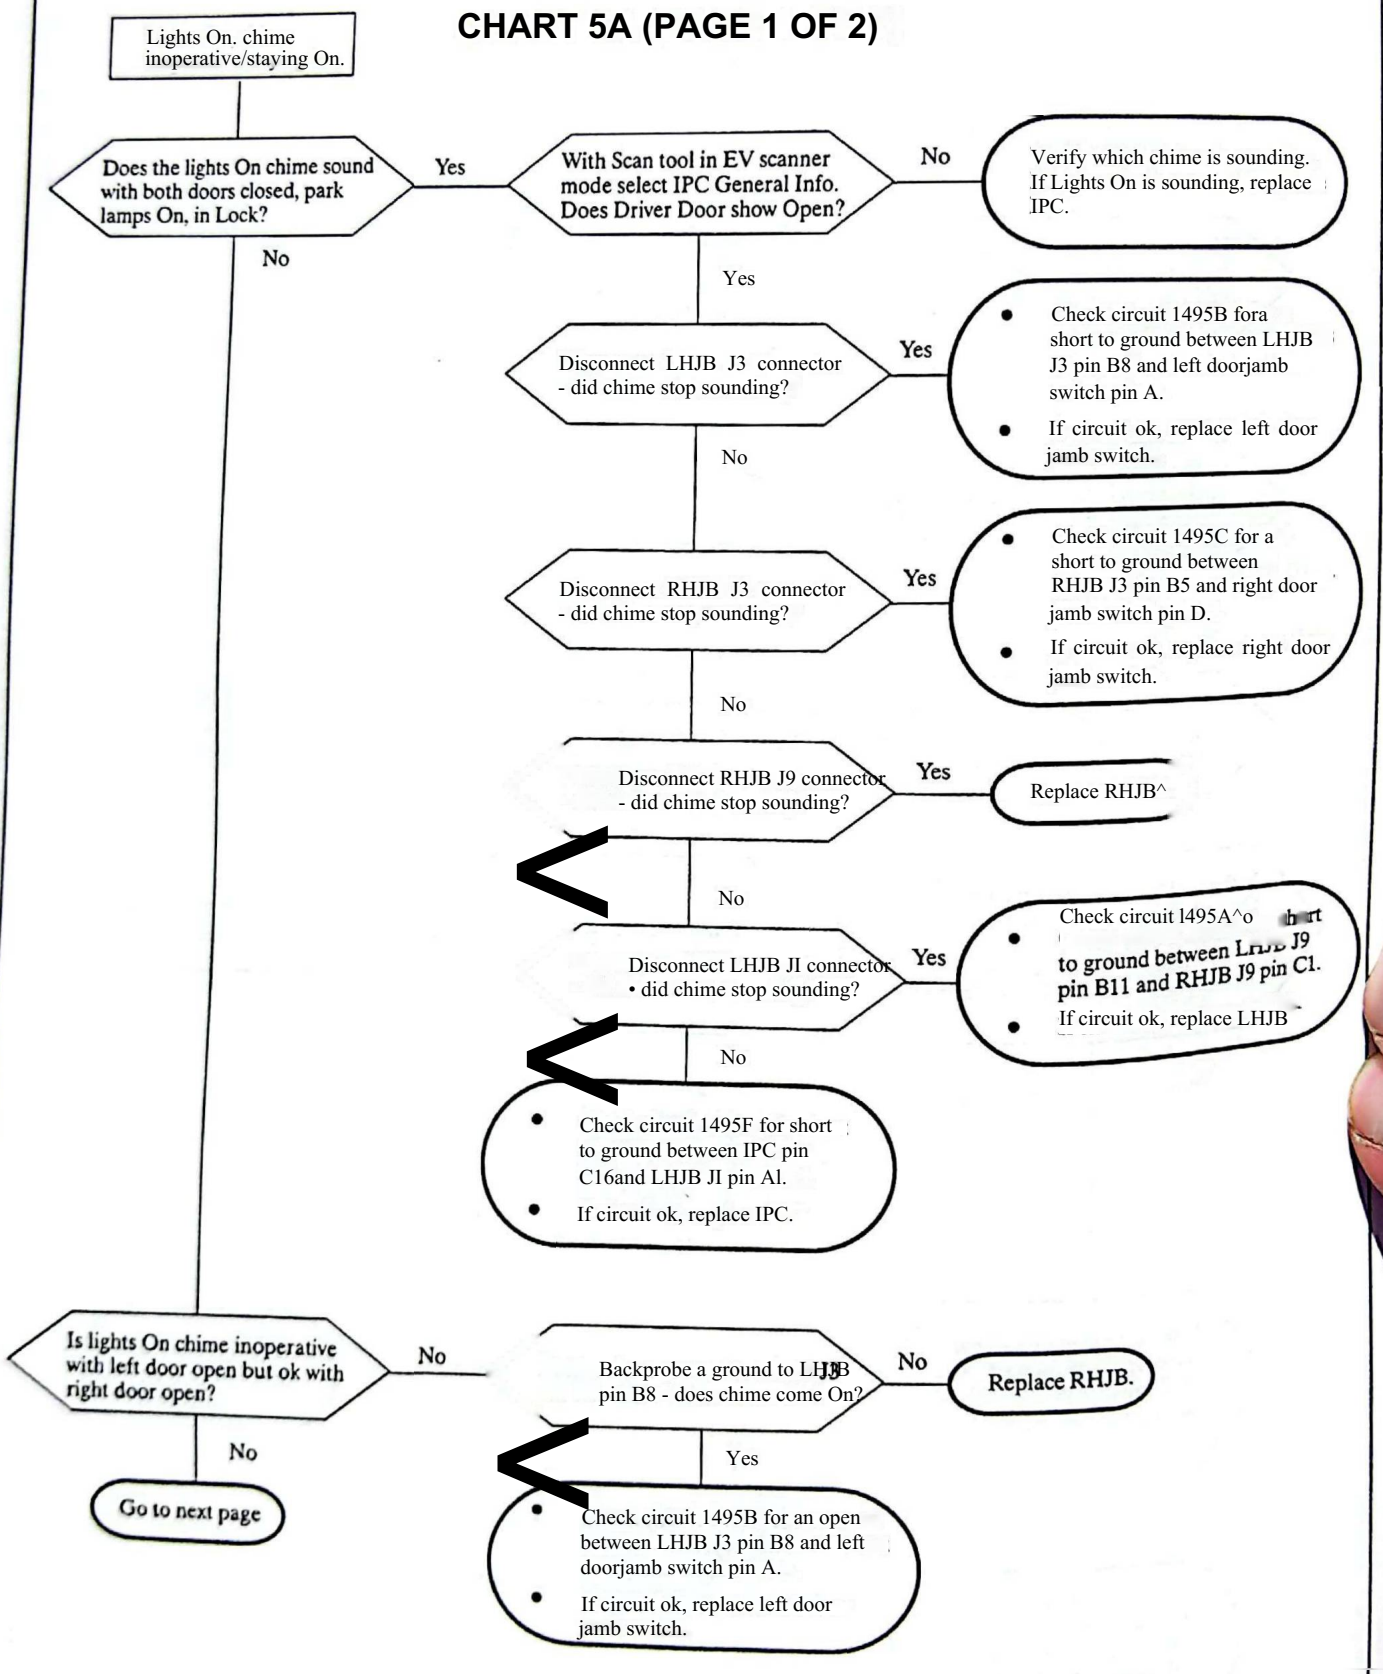
Lights On. chime inoperative/staying On.
Does the lights On chime sound with both doors closed, park lamps On, in Lock?
Yes
With Scan tool in EV scanner mode select IPC General Info. Does Driver Door show Open?
No
Verify which chime is sounding. If Lights On is sounding, replace IPC.
No
Yes
Disconnect LHJB J3 connector - did chime stop sounding?
Yes
Check circuit 1495B fora short to ground between LHJB J3 pin B8 and left doorjamb switch pin A.
If circuit ok, replace left door jamb switch.
No
Disconnect RHJB J3 connector - did chime stop sounding?
Yes
Check circuit 1495C for a short to ground between RHJB J3 pin B5 and right door jamb switch pin D.
If circuit ok, replace right door jamb switch.
No
Disconnect RHJB J9 connector - did chime stop sounding?
Yes
Replace RHJB^
No
Disconnect LHJB JI connector • did chime stop sounding?
Yes
Check circuit l495A^o
to ground between LHJB J9 pin B11 and RHJB J9 pin C1.
If circuit ok, replace LHJB
No
Check circuit 1495F for short to ground between IPC pin C16and LHJB JI pin Al.
If circuit ok, replace IPC.
Is lights On chime inoperative with left door open but ok with right door open?
No
Backprobe a ground to LHJB pin B8 - does chime come On?
No
Replace RHJB.
No
Yes
Go to next page
Check circuit 1495B for an open between LHJB J3 pin B8 and left doorjamb switch pin A.
If circuit ok, replace left door jamb switch.

CamScanner

LIGHTS ON CHIME INOPERATIVE/STAYING ON

CHART 5A - (PAGE 2 OF 2)

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap" installation in this manual.)

Continued from previous page

Is lights On chime inoperative with right door open but ok with left door open?

Yes

Backprobe a ground to LHJB J9 pin Bll - does chime come On?

No

^Replace LHJB^

Yes

Backprobe a ground to RHJB J3 pin B5 - does chime come on?

Yes

- Check circuit 1495C for an open between RHJB J3 pin B5 and right doorjamb switch pin D.
- If circuit ok, replace right doorjamb switch.

No

- Check circuit 1495A for an open between LHJB J9 pin Bll and RHJB J9 pin Cl.
- If circuit ok, replace RHJB.

No

Is lights On chime inoperative with both doors open?

No

Verify symptoms, with chime going Off. If it is verified this chime goes off under other conditions, replace IPC.

Yes

With Scan tool in EV scanner in IPC General Info, does left door show Open with left and right door open?

No

Backprobe a ground to LHJB JI pin Al-does left door show Open now?

Yes

Replace LHJB.

No

- Check circuit 1495F for open between IPC pin C16 and LHJB JI pin Al.
- If circuit ok, replace IPC.

Yes

Does the lights on indicator on the IPC come on when the parklamps are turned On?

Yes

Replace IPC.

No

Refer to Display dimming Chart 1 "Backlighting/Dimming Inoperative."

CamScanner

KEYMINDER CHIME - INOPERATIVE/STAYS ON

CHART 5B (1 OF 3)

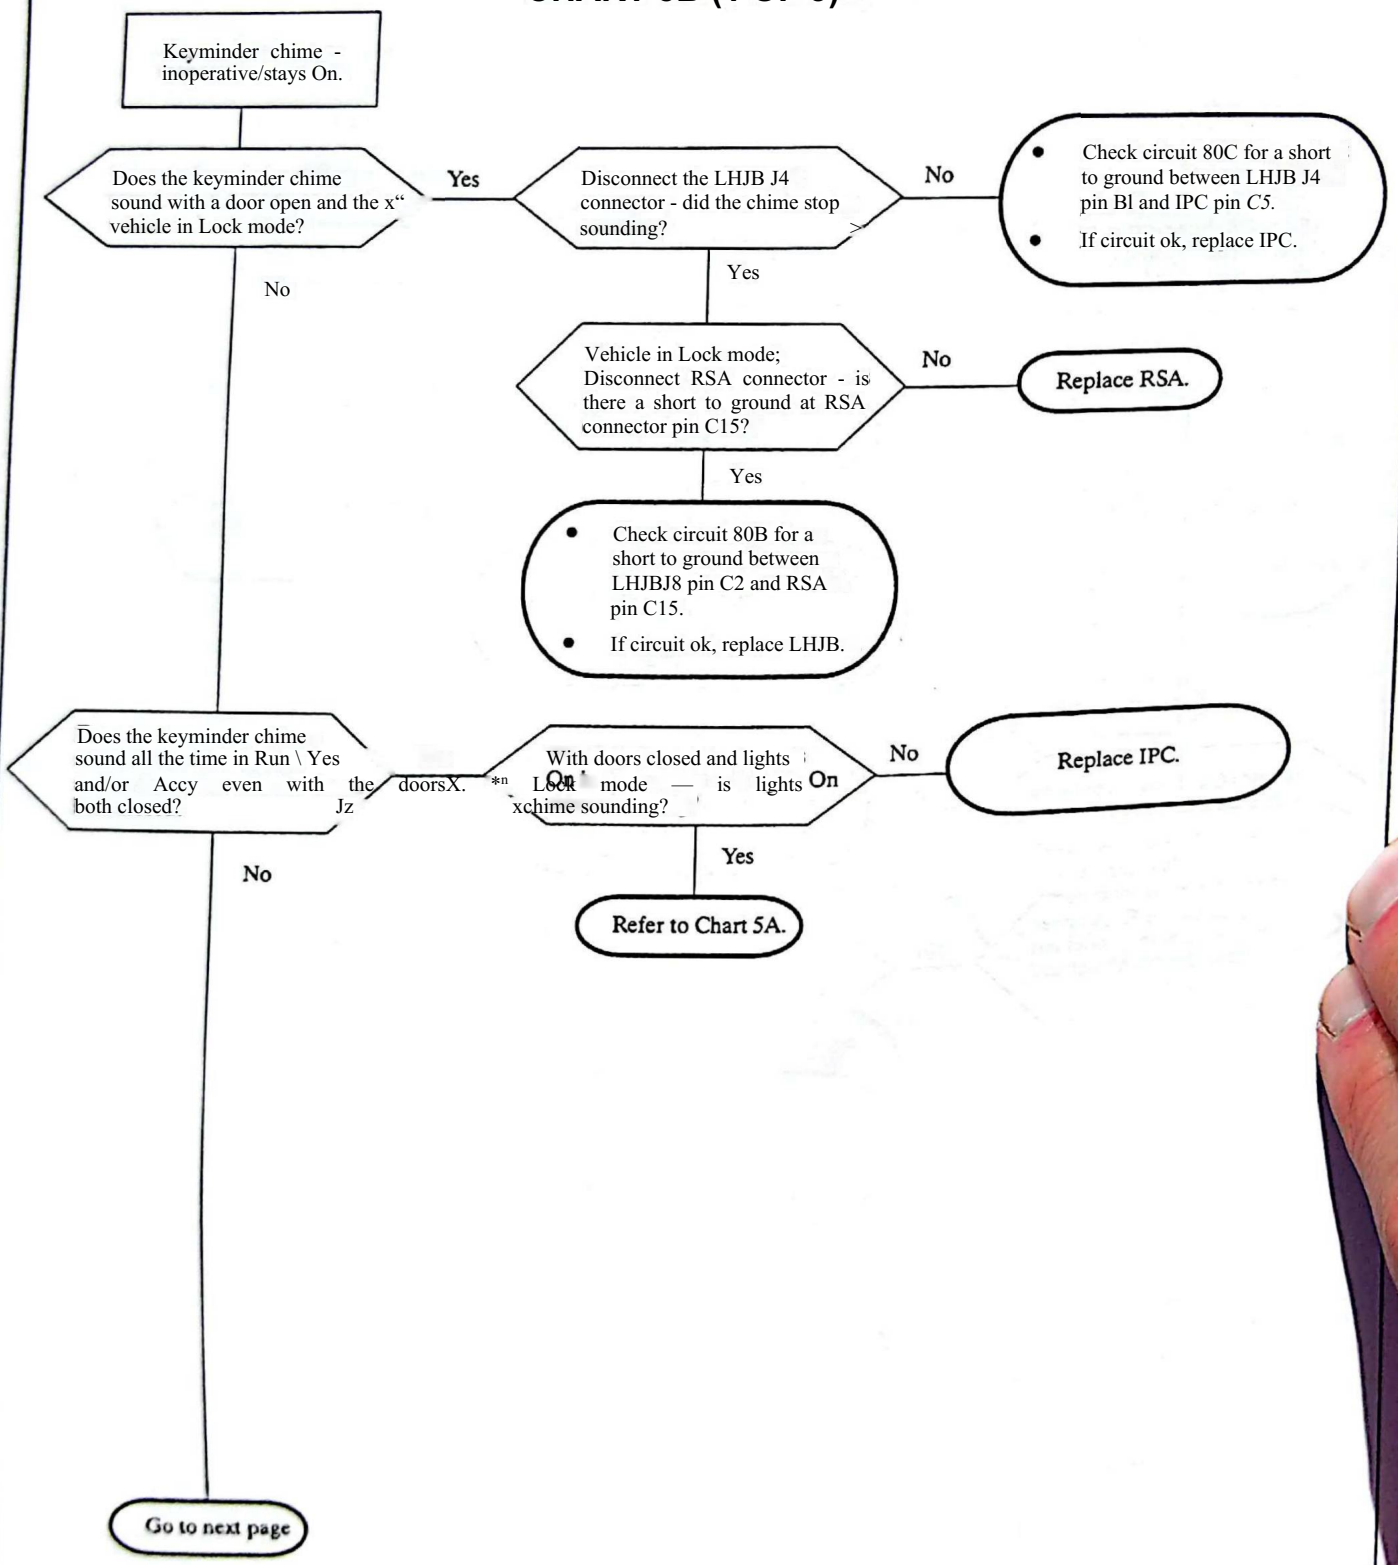
Keyminder chime - inoperative/stays On.
Does the keyminder chime sound with a door open and the x" vehicle in Lock mode?
Yes
Disconnect the LHJB J4 connector - did the chime stop sounding?
No
Check circuit 80C for a short to ground between LHJB J4 pin Bl and IPC pin C5.
If circuit ok, replace IPC.
Yes
No
Vehicle in Lock mode; Disconnect RSA connector - is there a short to ground at RSA connector pin C15?
No
Replace RSA.
Yes
Check circuit 80B for a short to ground between LHJBJ8 pin C2 and RSA pin C15.
If circuit ok, replace LHJB.
Does the keyminder chime sound all the time in Run \ Yes and/or Accy even with the doorsX. both closed?
With doors closed and lights On ' Lock mode — is lights On xchime sounding?
No
Replace IPC.
Yes
No
Refer to Chart 5A.
Go to next page

CamScanner

KEYMINDER CHIME-INOPERATIVE/STAYS ON

CHART 5B - (PAGE 2 OF 3)

Continued from previous page

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

No

/ Is keyminder inoperative with*" < left door open but ok with right x. door open?

No

J3 pin B8 - does keyminder come On?

No — Backprobe a ground to LHJB ^Replace LHJB^

Yes

- Check circuit 1495B for an open between LHJB J3 pin B8 and left doorjamb switch pin A.
- If circuit ok, replace left door jamb switch.

Is keyminder inoperative withx< Yes nght door open but ok with left > door open?

No

Backprobe a ground to LHJB x. No X' <f J9 pin Bll - does keyminder > X^comeOn?

1 Replace *LHJB.I*

Yes

Backprobe a ground to RHJB J3 pin B5 - does keyminder come On?

Yes

- Check circuit 1495C for an open between RHJB J3 pin B5 and right door jamb switch pin D.
- If circuit ok, replace right door jamb switch.

No

- Check circuit 1495A for an open between LHJB J9 pin Bll and RHJB J9 pin Cl.
- If circuit ok, replace RHJB.

I* toe keyminder chime in operative with both doors open in Run?

No

Verify symptoms, with chime going Off. If it is verified this chime goes Off under other conditions, replace IPC.

Yes

Go to next page

CamScanner

KEYMINDER CHIME - INOPERATIVE/STAYS ON

CHART 5B - (PAGE 3 OF 3)

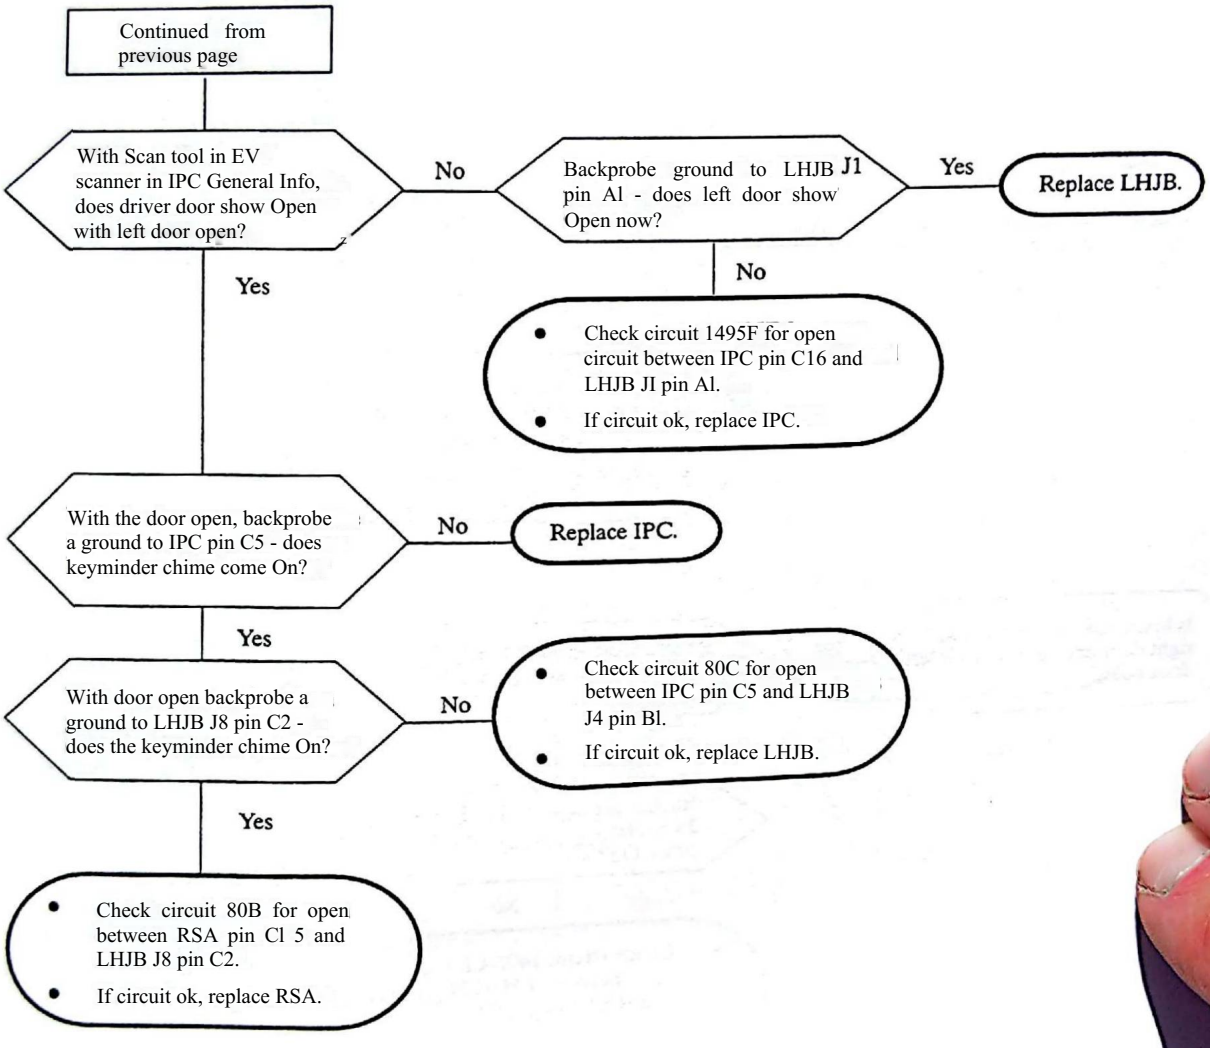
Continued from previous page
With Scan tool in EV scanner in IPC General Info, does driver door show Open with left door open?
No
Backprobe ground to LHJB J1 pin Al - does left door show Open now?
Yes
Replace LHJB.
No
Check circuit 1495F for open circuit between IPC pin C16 and LHJB JI pin Al.
If circuit ok, replace IPC.
Yes
With the door open, backprobe a ground to IPC pin C5 - does keyminder chime come On?
No
Replace IPC.
Yes
With door open backprobe a ground to LHJB J8 pin C2 - does the keyminder chime On?
No
Check circuit 80C for open between IPC pin C5 and LHJB J4 pin Bl.
If circuit ok, replace LHJB.
Yes
Check circuit 80B for open between RSA pin Cl 5 and LHJB J8 pin C2.
If circuit ok, replace RSA.

CamScanner

SEAT BELT TELLTALE INOPERATIVE

CHART 6

seat belt telltale inoperative.

Do the other telltales in the right telltale bank come On during bulb check?

N° (Refer to Telltale section A I diagnosis - Chart 17 or 18. *J*

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Yes

Does the seat belt telltale come On during bulb check?

No

Does the seat belt telltale come On with IPC pin D6 grounded in Run mode?

Yes

Replace IPC. *y*

No

Does the seat belt telltale come On with LHJB J8 pin D3 grounded in Run mode?

Yes

- Check circuit 234C for an^X open between IPC pin D6 and LHJB J2 pin D6.
- If circuit ok, replace LHJB. *y*

No

Does the seat belt telltale come On with RHJB J13 pin A6 backprobed to ground in Run mode?

Yes

- Check circuit 234A for an X open between LHJB J8 pin D3 and RHJB J9 pin D3.
- If circuit ok, replace RHJ B.

No

With the driver's seat belt unbuckled, on the Scan tool select EV scanner mode I PC General Info - does the driver seatbelt switch input show off?

Yes

Replace IPC.

No

- Check circuit 234 for an open between telltale bank and RHJB J13 pin A3.
- If circuit ok, replace right telltale bank.

Driver's seat belt still unbuckled- Scan tool in EV scanner mode SDM General Info - does the driver seatbelt switch input show OFF?

Yes

Backprobe IPC pin DIO in Run mode - is battery voltage present?

Yes

Replace IPC.

No

- Check for open in circuit 238B from LHJB JI pm BIO to IPC pin DIO.
- If circuit ok, replace LHJB.

No

Jumper LHJB J10 pins A2 to A3 - does telltale come On now?

No

Replace LHJB.

Yes

- Check for open in circuit 238C from LHJB J10 pin A2 to seat belt buckle pin A.
- Check ^or °pcn *n'c*rcu*1 450W from LHJB J10 pin A3 to scat belt buckle pin B.
- If circuits ok, replace left seat belt buckle.

PC GENERAL INFORMATION

SEATBELT STATUS	SEATBELT SWITCH STATUS	TELLTALE STATUS	PDT DISPLAY (SEATBELT TT)	PDT DISPLAY (DRIVER SEATBELT)
Unbucled	Closed	ON	ON	OFF
Buckled	Open	OFF	OFF	ON

onM GENERAL INFORMATION

SEATBELT STATUS	-q SEATBELT SWITCH STATUS	TELLTALE STATUS	PDT DISPLAY (DRIVER SEATBELT)
Unbucled	Closed	ON	OFF
Buckled	Open	OFF	ON ~

CamScanner

SEAT BELT TELLTALE ON ALL THE TIME

CHART 7

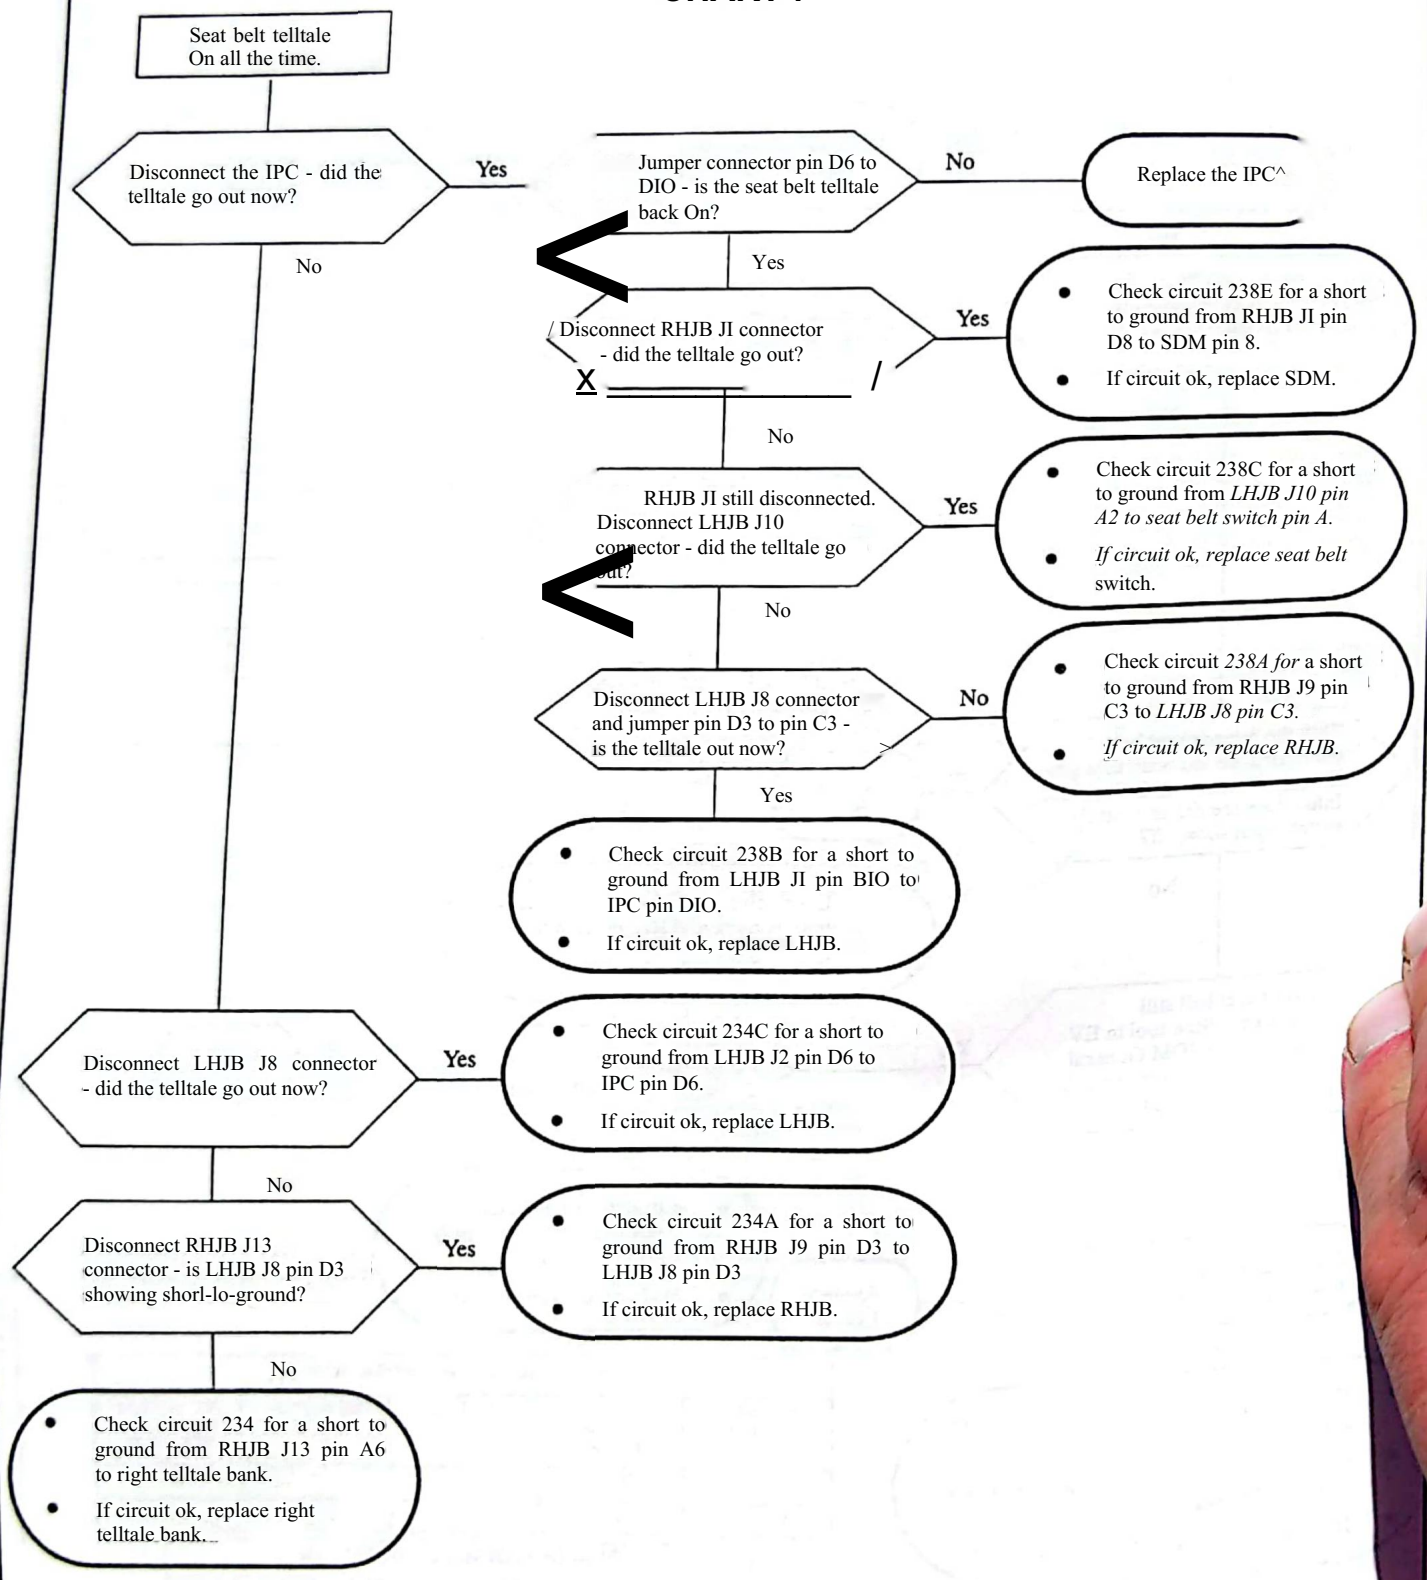
Seat belt telltale On all the time.
Disconnect the IPC - did the telltale go out now?
Yes
No
Jumper connector pin D6 to DIO - is the seat belt telltale back On?
No
Replace the IPC^
Yes
Disconnect RHJB JI connector - did the telltale go out?
Yes
Check circuit 238E for a short to ground from RHJB JI pin D8 to SDM pin 8.
If circuit ok, replace SDM.
No
RHJB JI still disconnected. Disconnect LHJB J10 connector - did the telltale go out?
Yes
Check circuit 238C for a short to ground from LHJB J10 pin A2 to seat belt switch pin A.
If circuit ok, replace seat belt switch.
No
Disconnect LHJB J8 connector and jumper pin D3 to pin C3 - is the telltale out now?
No
Check circuit 238A for a short to ground from RHJB J9 pin C3 to LHJB J8 pin C3.
If circuit ok, replace RHJB.
Yes
Check circuit 238B for a short to ground from LHJB JI pin BIO to IPC pin DIO.
If circuit ok, replace LHJB.
Disconnect LHJB J8 connector - did the telltale go out now?
Yes
Check circuit 234C for a short to ground from LHJB J2 pin D6 to IPC pin D6.
If circuit ok, replace LHJB.
No
Disconnect RHJB J13 connector - is LHJB J8 pin D3 showing shorl-lo-ground?
Yes
Check circuit 234A for a short to ground from RHJB J9 pin D3 to LHJB J8 pin D3
If circuit ok, replace RHJB.
No
Check circuit 234 for a short to ground from RHJB J13 pin A6 to right telltale bank.
If circuit ok, replace right telltale bank.

CamScanner

PRND DISPLAY INCORRECT/ALL LIT UP

CHART 8

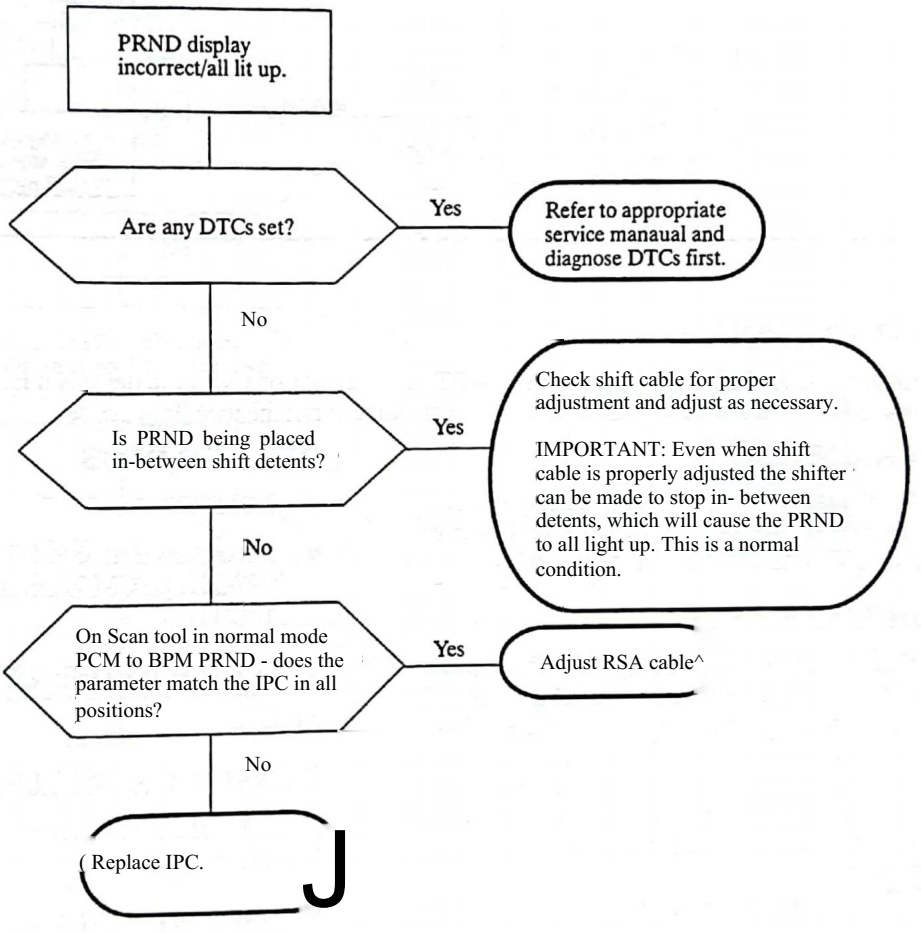
PRND display incorrect/all lit up.
Are any DTCs set?
Yes
Refer to appropriate service manaual and diagnose DTCs first.
No
Is PRND being placed in-between shift detents?
Yes
Check shift cable for proper adjustment and adjust as necessary.
IMPORTANT: Even when shift cable is properly adjusted the shifter can be made to stop in- between detents, which will cause the PRND to all light up. This is a normal condition.
No
On Scan tool in normal mode PCM to BPM PRND - does the parameter match the IPC in all positions?
Yes
Adjust RSA cable^
No
Replace IPC.
J

CamScanner

DTC 011 - LOSS OF BPM POLL

IPC^

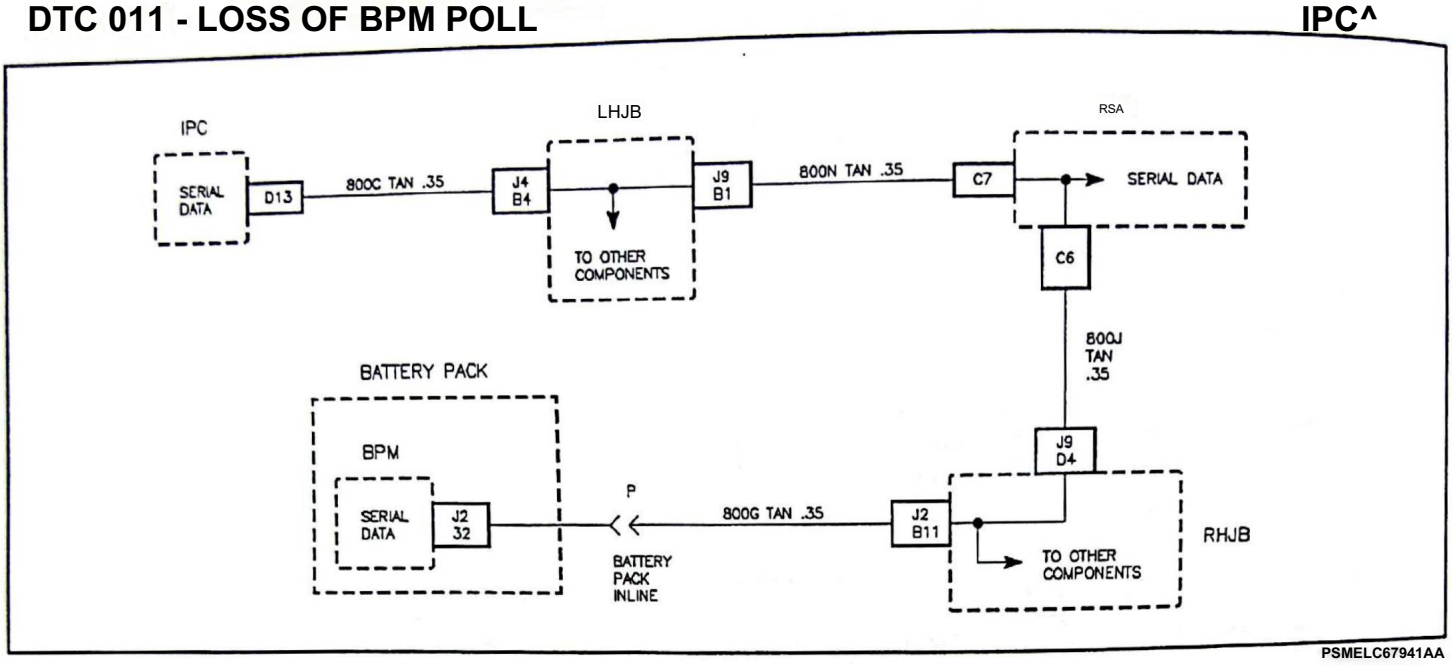

LOSS OF BPM POLL

The instrument panel cluster (IPC) monitors UART communications with the devices it normally responds to, listens to, or eavesdrops on. If such communications are lost, current and history flags are set.

DTC PARAMETERS

This DTC will set if the IPC loses the battery pack module (BPM) poll message for three seconds and no Scan tool or SSS communication is taking place.

ACTION TAKEN BY IPC

State of Charge display blank, Range ISO flashes at two Hz rate, Range display blank, CHARGE HRS ISO flashes at 2 Hz rate. If the charger is connected, then 99:99 will be displayed in the odometer section of the VF display. If the Gage toggle request button is depressed, then the alternate gage function will be displayed with the last received value and the corresponding symbol
(BATTERY or POWER USE) will flash at a two Hz rate.

RELATED DTCS

- BPM 299
- * Other serial data DTCs - PCM 26-29, BPM TD^01, BTCM 72> *HTCM 34-36, RSA 11-13, IPC 11-15.*

TELLTALE ILLUMINATED

None

OTHER CONTROLLER INTERFACES

BPM, LHJB, RHJB, RSA, SDM, HTCM, B PIM.

^AGNOSTIC AIDS

- *If DTC 11 is the only DTC set the IPC and BPM are not communicating properly with each other, but BPM cannot communicate with other modules. If the IPC cannot communicate with the BPM DTC 299 should also be set.*
- If only IPC DTC 11 is set it is most likely due to internal IPC fault.

CamScanner

LOSS OF BPM POLL

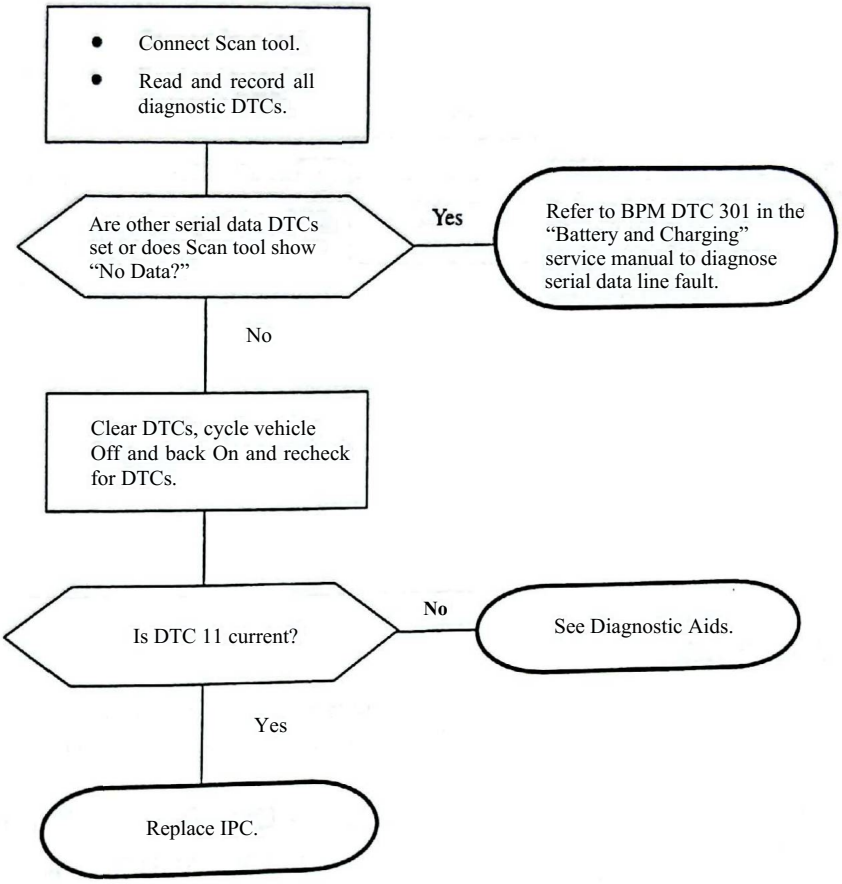
Connect Scan tool.
Read and record all diagnostic DTCs.
Are other serial data DTCs set or does Scan tool show "No Data?"
Yes
Refer to BPM DTC 301 in the "Battery and Charging" service manual to diagnose serial data line fault.
No
Clear DTCs, cycle vehicle Off and back On and recheck for DTCs.
Is DTC 11 current?
No
See Diagnostic Aids.
Yes
Replace IPC.

CamScanner

DTC 012 - LOSS OF PCM EAVESDROP

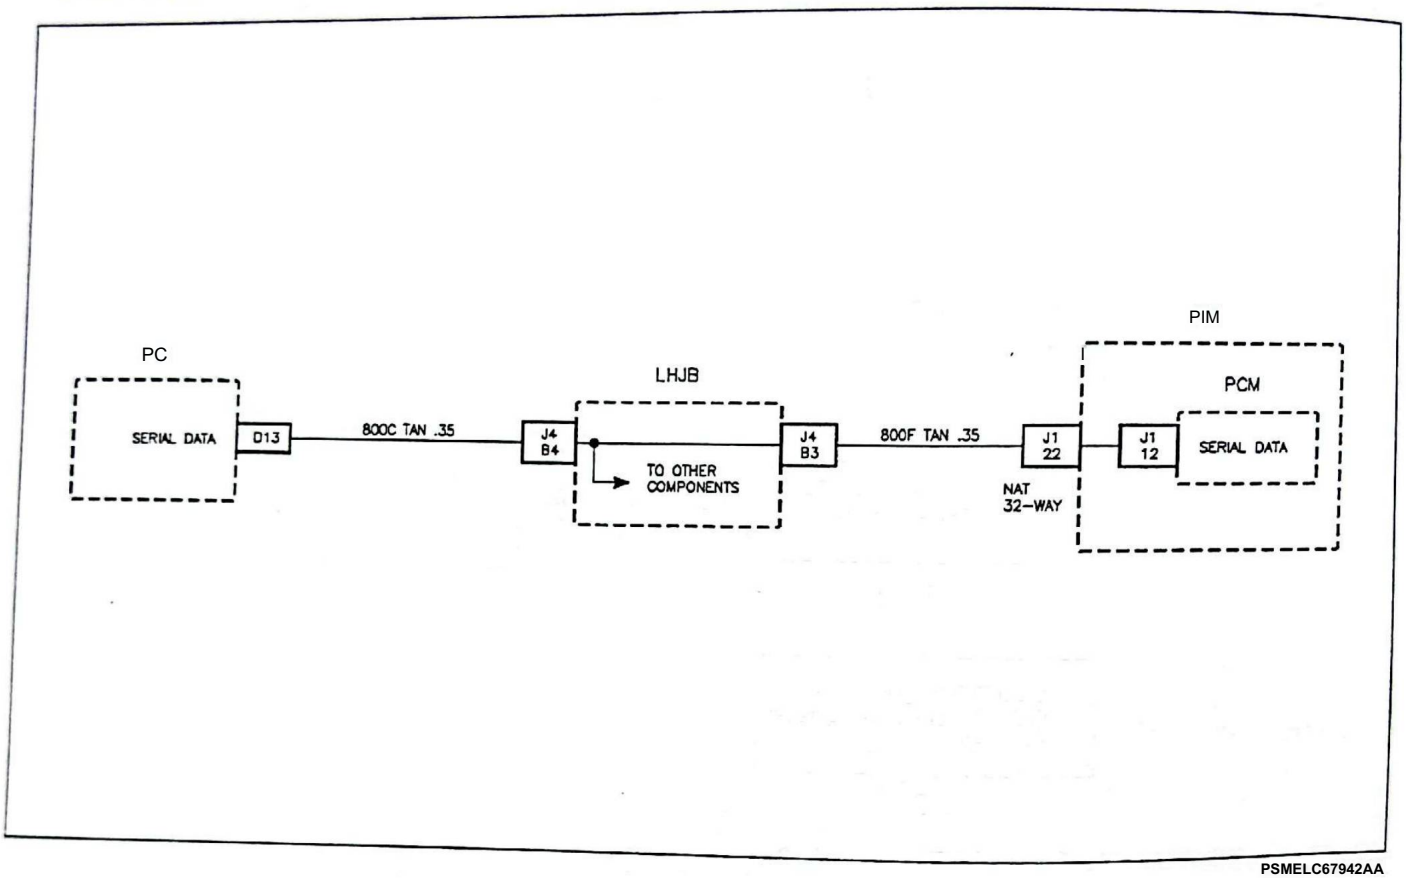

LOSS OF PCM EAVESDROP

The instrument panel cluster (IPC) monitors universal asynchronous receiver - transmitter (UART) communications with the devices it normally responds to, listens to, < or eavesdrops on. If such communications are lost, current and history flags are set.

DTC PARAMETERS

This DTC will set if the IPC loses the propulsion control module (PCM) eavesdrop message for three seconds and no Scan tool or SSS communication is taking place.

ACTION TAKEN BY THE IPC

The PRND and CHARGE HRS indicators will flash at a two Hz rate.

RELATED DTCS

All serial data line DTCs: PCM 26-29, BPM 297-301, BTCM 72, HTCM 34-36, RSA 11-13, IPC 11-15.

TELLTALE ILLUMINATED

None

OJHER *CONTROLLER INTERFACES*

PCM, BPM, BTCM, HTCM, RSA.

DIAGNOSTIC AIDS

- Jt is unlikely for IPC DTC 12 to set by itself.
- If DTC 12 is the only DTC set the IPC is not receiving the PCM messages. If the PCM were not communicating, DTCs BPM 301, HTCM 35, BTCM 72, and RSA DTC 13 should also be set.
- If these DTCs are not set, the condition is most likely due to an internal IPC fault.

LOSS OF PCM EAVESDROP

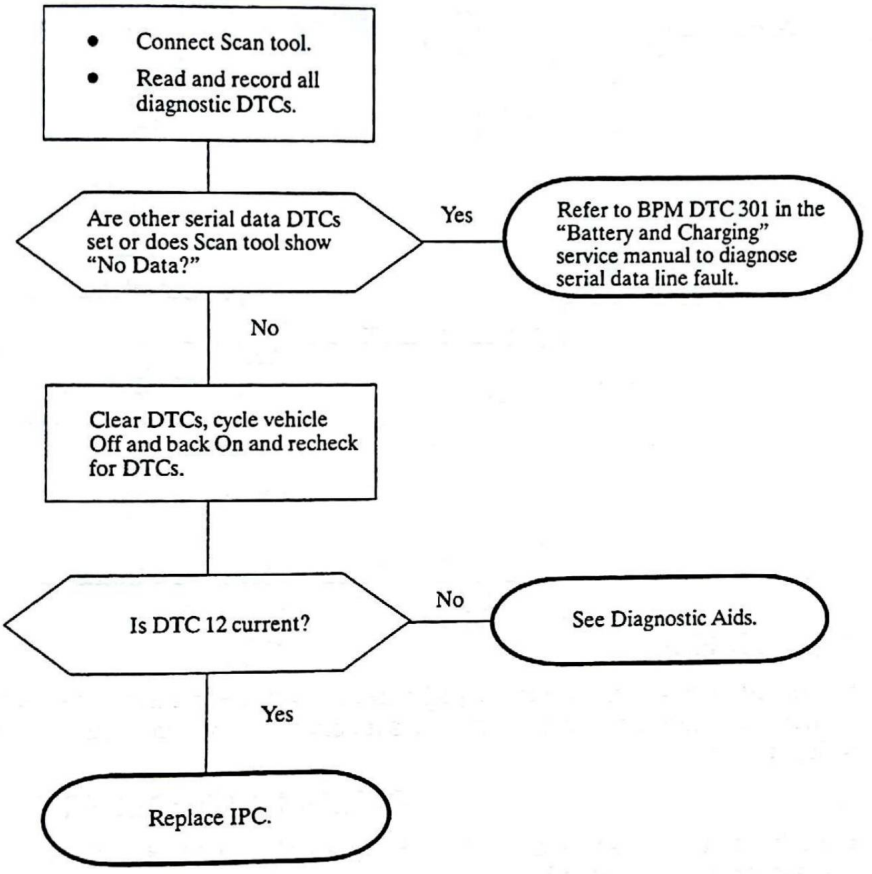
Connect Scan tool.
Read and record all diagnostic DTCs.
Are other serial data DTCs set or does Scan tool show "No Data?"
Yes
Refer to BPM DTC 301 in the "Battery and Charging" service manual to diagnose serial data line fault.
No
Clear DTCs, cycle vehicle Off and back On and recheck for DTCs.
Is DTC 12 current?
No
See Diagnostic Aids.
Yes
Replace IPC.

CamScanner

DTC 013 - LOSS OF HTCM EAVESDROP

IPC

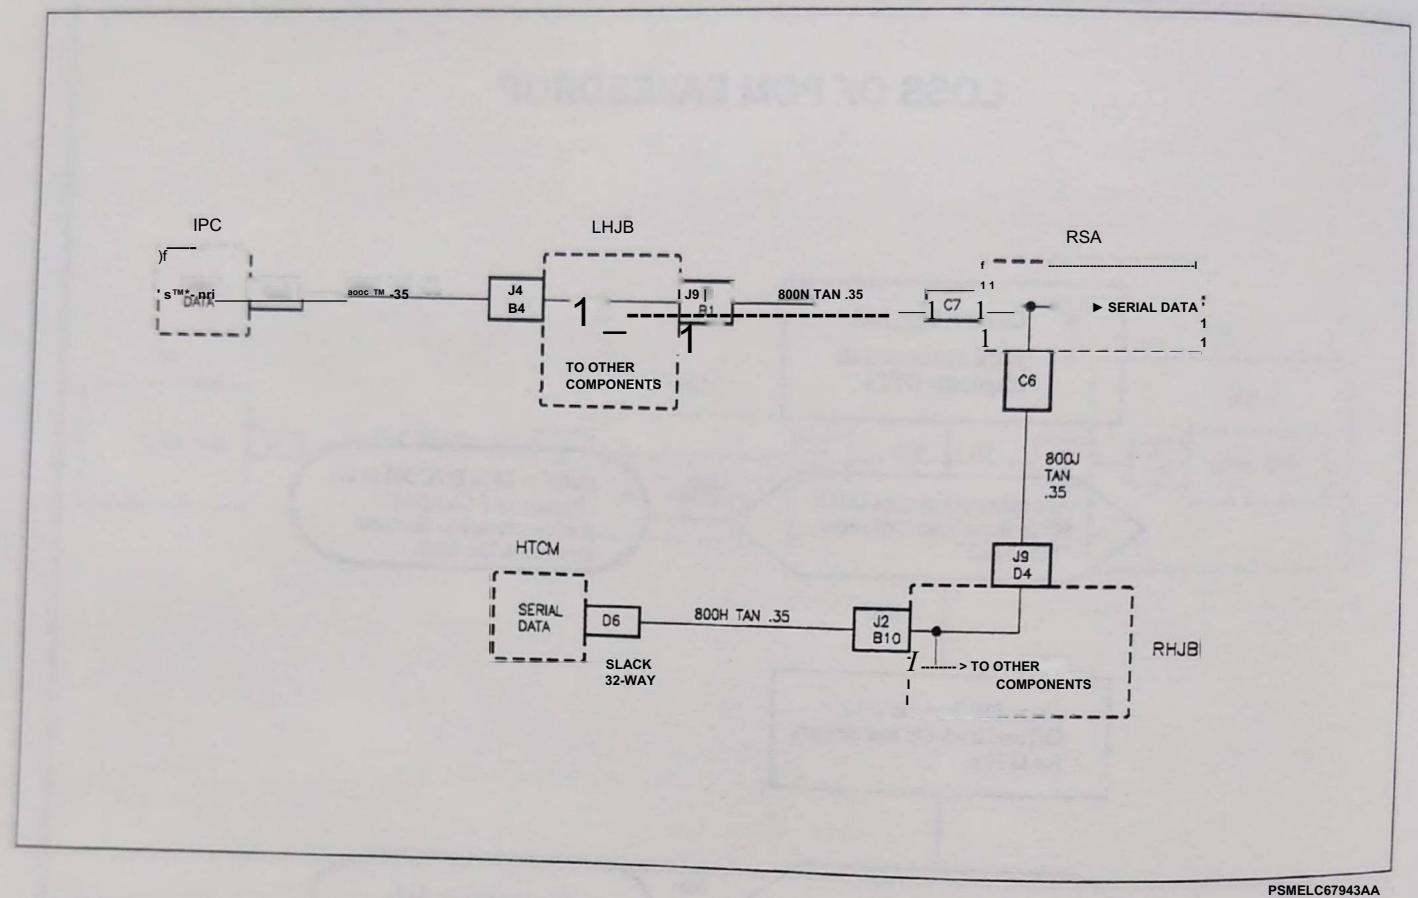

PSMELC67943AA

LOSS OF HTCM EAVESDROP

Tne instrument panel cluster (IPC) monitors universal asynchronous communications with the devices it normally responds to, listens to, lost, current and history flags are set.

receiver - transmitter (UART) or eavesdrops on. If such communications are

DTC PARAMETERS

I his DTC will set if the IPC loses the HPVS/thermal control module (HTCM) eavesdrop message for 3 seconds and no Scan tool or SSS communication is taking place.

ACTION TAKEN BY THE IPC

None

RELATED DTCS

All serial data line DTCs: PCM 26-29, BPM 297-301, BTCM 72. HTCM 34-36, RSA 11-13, IPC 11-15.

TELLTALE ILLUMINATED

None

OTHER CONTROLLER INTERFACES

PCM. BPM, BTCM, HTCM, RSA.

DIAGNOSTIC AIDS

- *if ^nhkely for ipc dtc 13 to set by itseif-*
- *receivL! H'S* St$^{On.-V}$ DTC set the IPC is not not comm • HTCM me«sages. *If the HTCM were and RSA DTP ??* 12 should also be set.
- these DT are n○•Set> the condition is m○St ^ely dim m? • *ue t0 an internal IPC fault.*

CamScanner

LOSS OF HTCM EAVESDROP

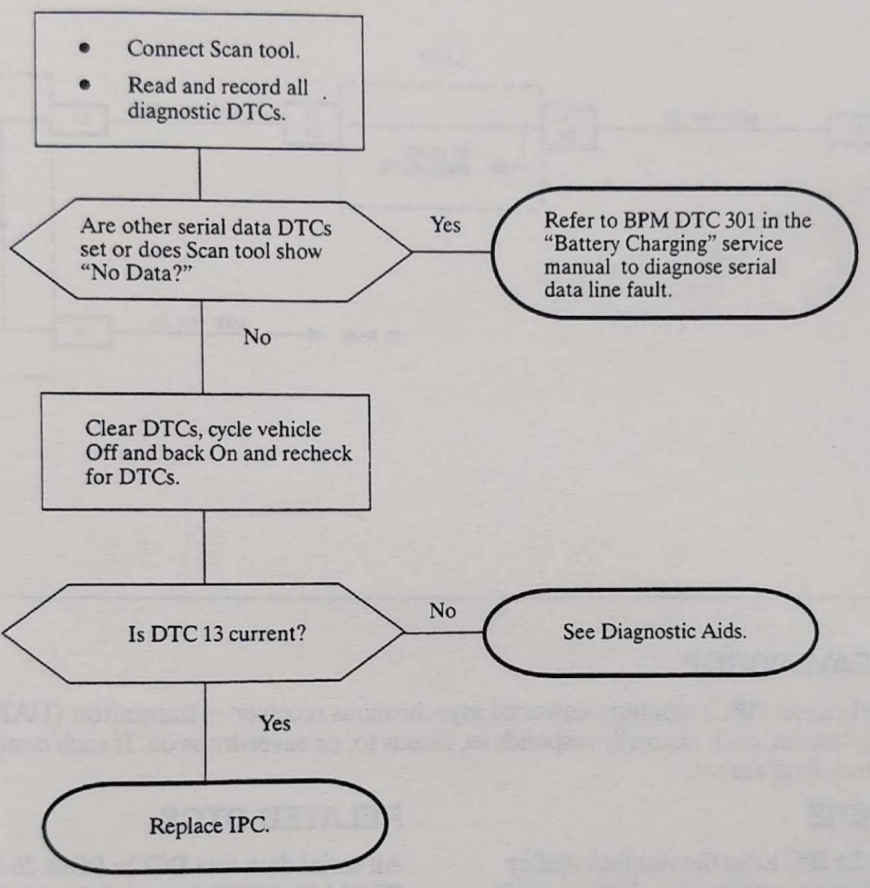
Connect Scan tool.
Read and record all diagnostic DTCs.
Are other serial data DTCs set or does Scan tool show "No Data?"
Yes
Refer to BPM DTC 301 in the "Battery Charging" service manual to diagnose serial data line fault.
No
Clear DTCs, cycle vehicle Off and back On and recheck for DTCs.
Is DTC 13 current?
No
See Diagnostic Aids.
Yes
Replace IPC.

CamScanner

DTC 014 – LOSS OF RSA EAVESDROP

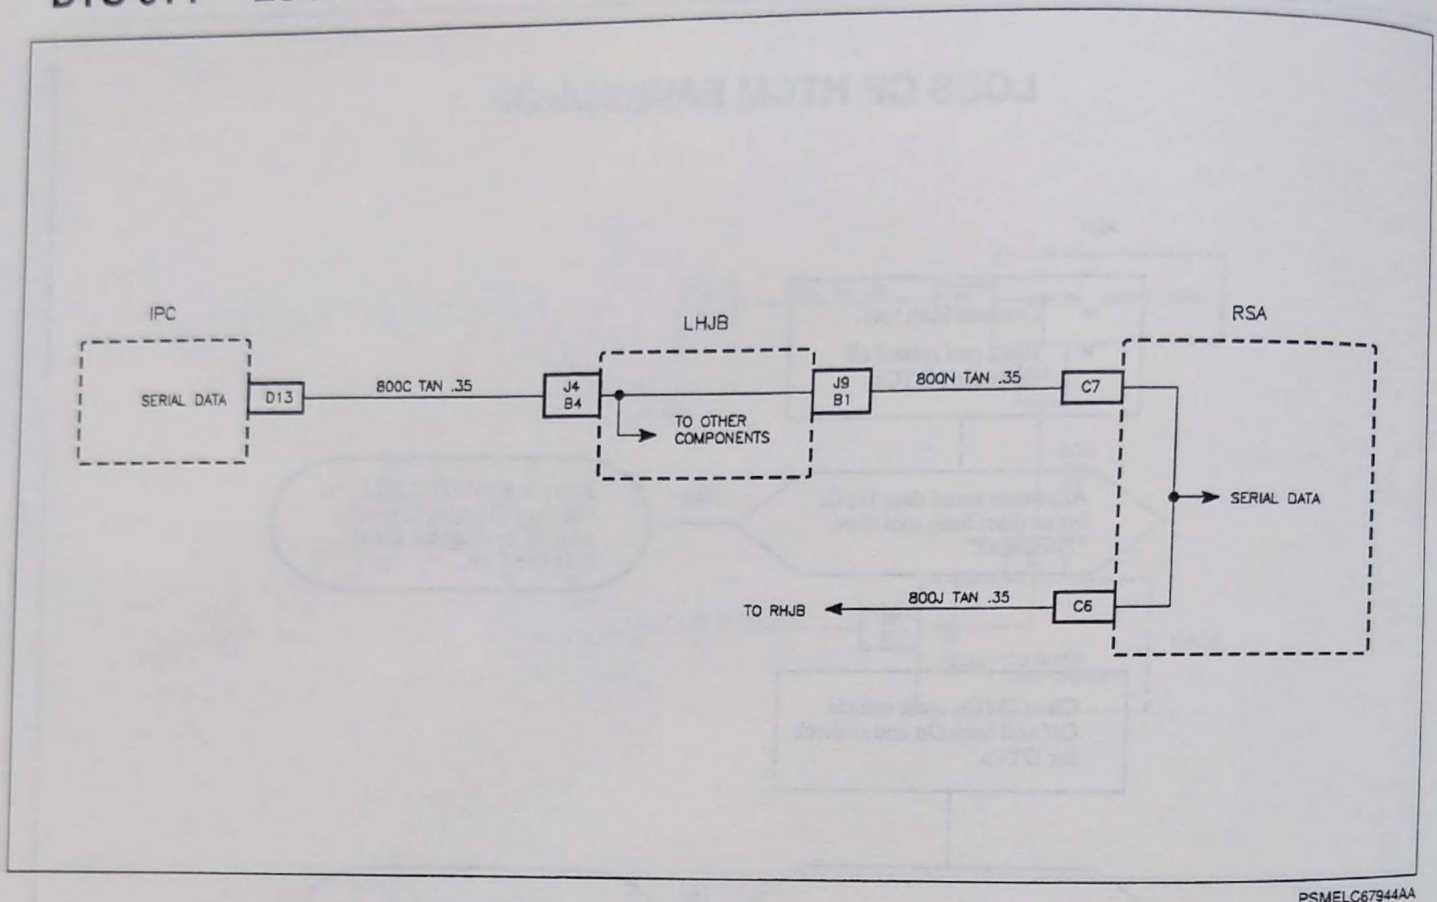

LOSS OF RSA EAVESDROP

The instrument panel cluster (IPC) monitors universal asynchronous receiver - transmitter (UART) communications with the devices it normally responds to, listens to, or eavesdrops on If such communications are lost, current and history flags are set.

DTC PARAMETERS

This DTC will set if the IPC loses the run/lock shifter assembly (RSA) eavesdrop message for three seconds and no Scan tool or SSS communication is taking place.

ACTION TAKEN BY THE IPC

The AM and PM symbols in the odometer section of the display will flash at a rate of two Hz.

RELATED DTCS

AU serial data line DTCs: PCM 26-29, BPM 297-301, BTCM 72, HTCM 34-36, RSA 11-13, IPC 11-15.

TELLTALE ILLUMINATED

None

OTHER CONTROLLER INTERFACES

PCM, BPM, BTCM, HTCM, RSA.

DIAGNOSTIC AIDS

- It is unlikely for IPC DTC 14 to set by itself.
- If DTC 14 is the only DTC set the IPC is not receiving the RSA messages. If the RSA were no communicating, BPM DTC 298, PCM DTC 28, and HTCM DTC 34 should also be set.
- If these other DTCs are not set, the condition is most likely due to an internal IPC fault.

CamScanner

LOSS OF RSA EAVESDROP

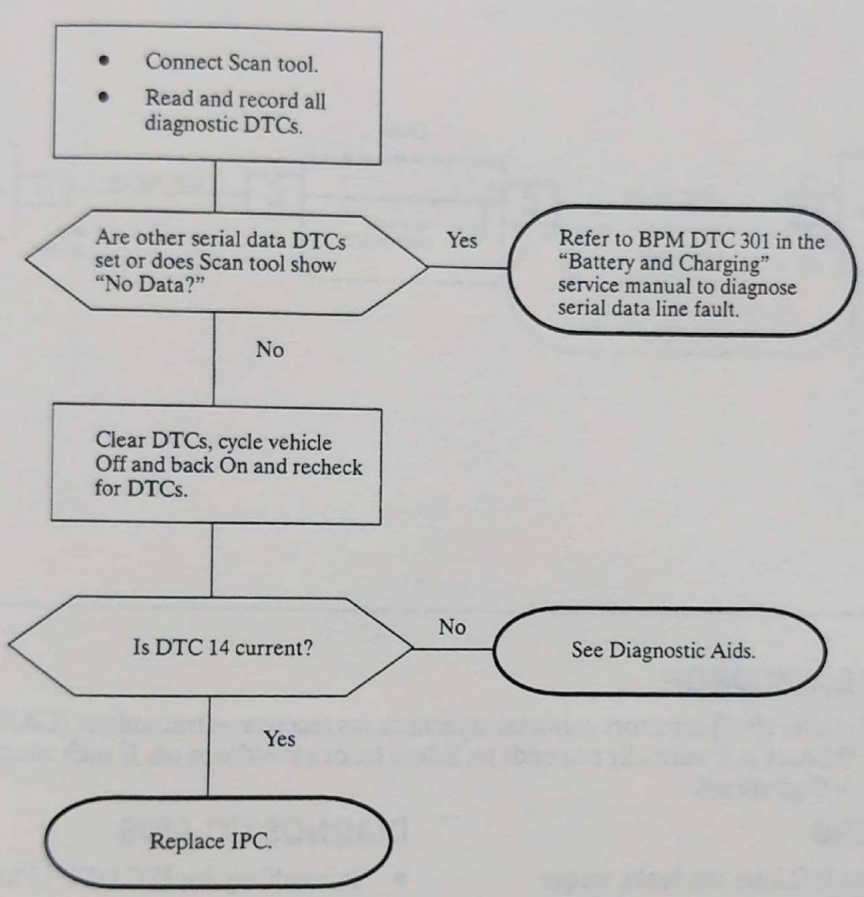
Connect Scan tool.
Read and record all diagnostic DTCs.
Are other serial data DTCs set or does Scan tool show "No Data?"
Yes
Refer to BPM DTC 301 in the "Battery and Charging" service manual to diagnose serial data line fault.
No
Clear DTCs, cycle vehicle Off and back On and recheck for DTCs.
Is DTC 14 current?
No
See Diagnostic Aids.
Yes
Replace IPC.

CamScanner

DTC 015 - LOSS OF BTCM EAVESDROP

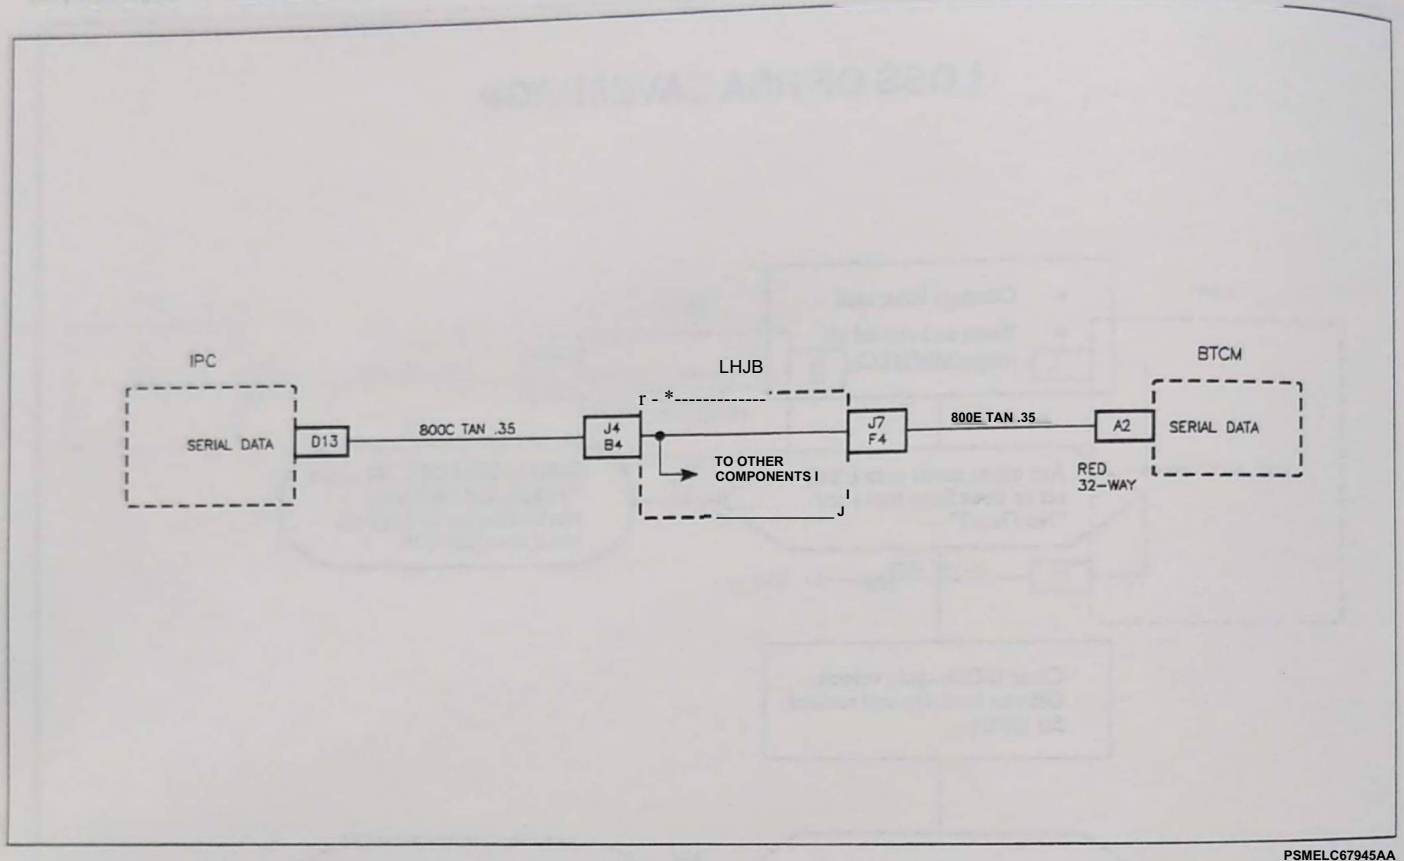

PSMELC67945AA

LOSS OF BTCM EAVESDROP

The instrument panel cluster (IPC) monitors universal asynchronous receiver - transmitter (UART) communications with the devices it normally responds to, listens to, or eavesdrops on. If such communications are lost, current and history flags are set.

DTC PARAMETERS

This DTC will set if the IPC loses the brake torque control module (BTCM) eavesdrop message for three seconds and no Scan tool or SSS communication is taking place.

ACTION TAKEN BY THE IPC

None

RELATED DTCS

All serial data line DTCs: PCM 26-29, BPM 297-301, BTCM 72, HTCM 34-36, RSA 11-13, IPC 11-15.

TELLTALE ILLUMINATED

None

OTHER CONTROLLER INTERFACES

PCM, BPM, BTCM, HTCM, RSA.

DIAGNOSTIC AIDS

- It is unlikely for IPC DTC 15 to set by itself.
- If DTC 15 is the only DTC set the IPC is not receiving the BTCM messages. If the BTCM were not communicating, BPM DTC 297 and PCM DTC 27 should also be set.
- If these other DTCs are not set, the condition is most likely due to an internal IPC fault.

CamScanner

LOSS OF BTCM EAVESDROP

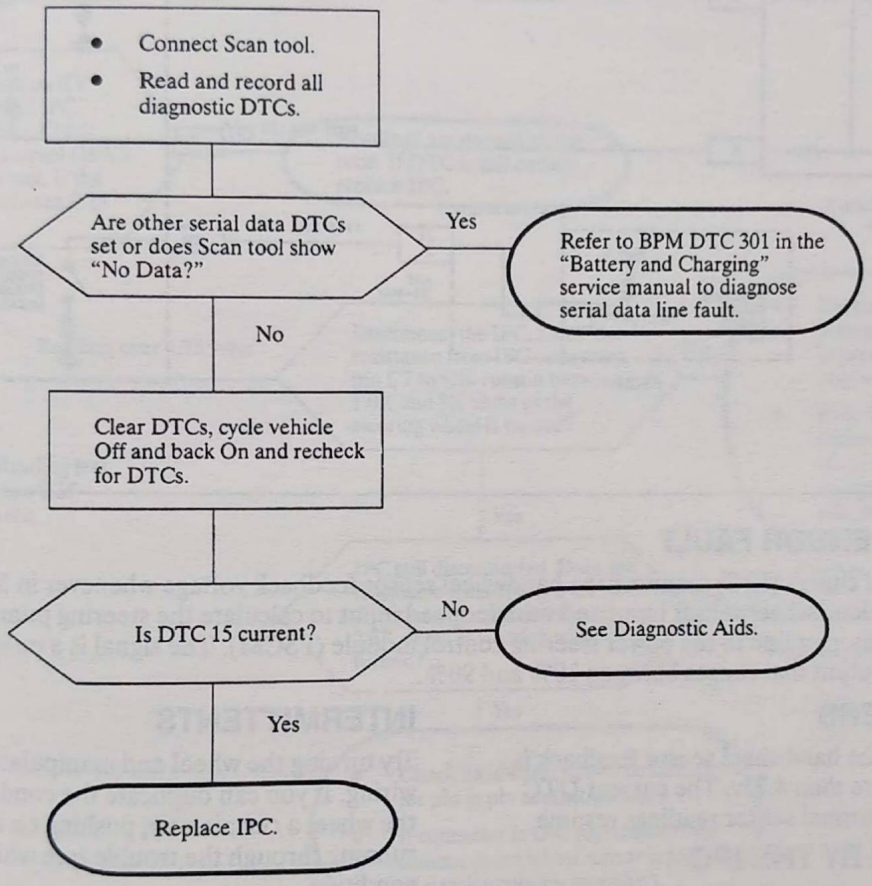
Connect Scan tool.
Read and record all diagnostic DTCs.
Are other serial data DTCs set or does Scan tool show "No Data?"
Yes
Refer to BPM DTC 301 in the "Battery and Charging" service manual to diagnose serial data line fault.
No
Clear DTCs, cycle vehicle Off and back On and recheck for DTCs.
Is DTC 15 current?
No
See Diagnostic Aids.
Yes
Replace IPC.

CamScanner

DTC 016 - HANDWHEEL SENSOR FAULT

IPC

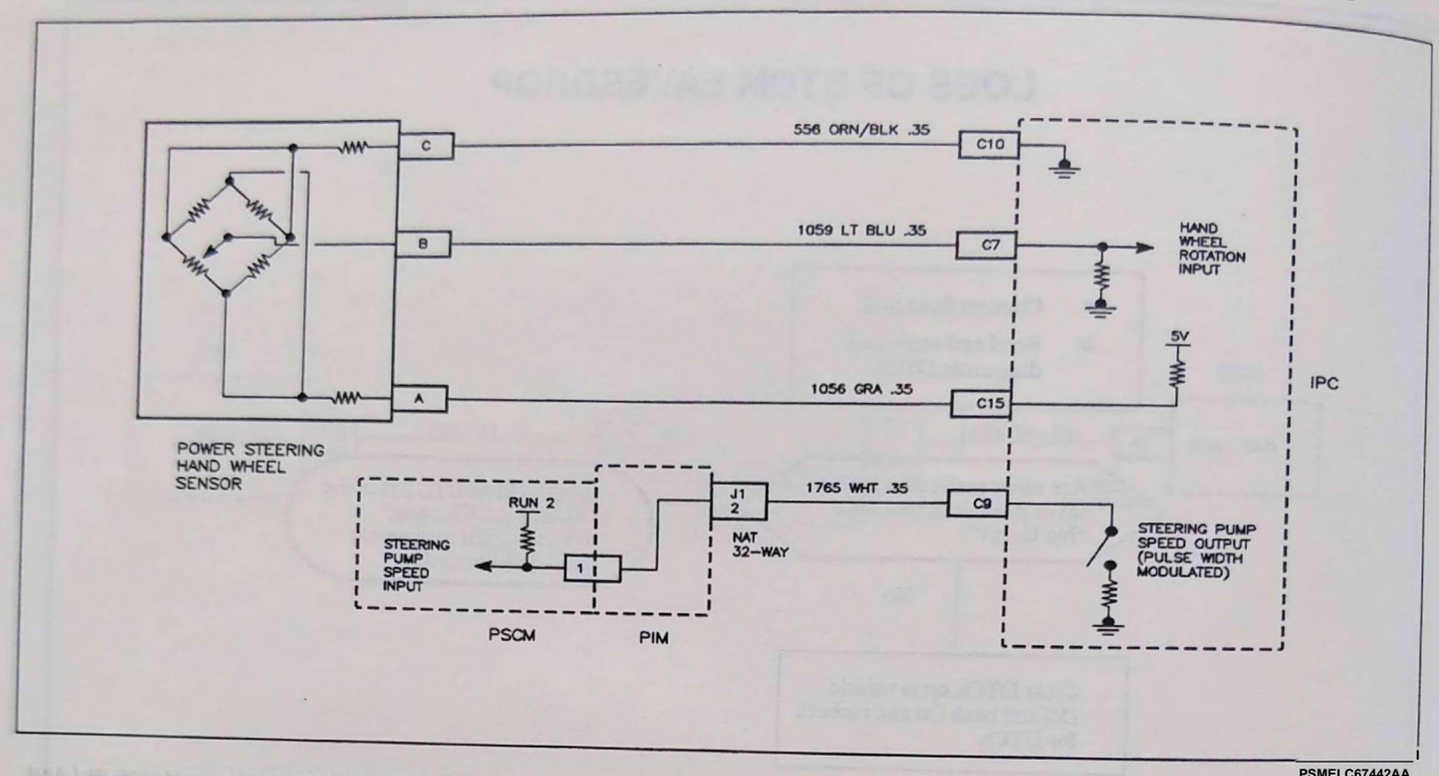

PSMELC67442AA

HANDWHEEL SENSOR FAULT

The instrument panel cluster (IPC) a combination of the monitors the handwheel sensor feedback voltage whenever in Run mode. It uses ZS" "XeeX ovs"?" "?d VehK‹e SpMd "P" " calcula>e *the* steering pump speed signal. L modulated (PWM) output that ranges between !o% So'S "‹e <PSCM) "gnal is a pulSe width .

DTC PARAMETERS

This ?TCA Wm Set if the handwheel sensor feedback is less than 0.25v or more than 4.75v. The current DTC will be cleared after normal sensor readings resume .

V ACTION TAKEN BY THE IPC

The IPC will shift from NORMAL MODE steering operation tO FaU 1 Mode °Peration- Fault Mode the steering pump control is based on vehicle speed without considering the handwheel sensor inputs per die chart below. The IPC will return to NORMAL MODE when normal handwheel sensor readings resume. Refer to IPC commanded steering pump speed for normal operation.

RELATED DTCS

None

TELLTALE ILLUMINATED

None

OTHER CONTROLLER INTERFACES

PSCM

DIAGNOSTIC AIDS

If n four 0^"^11^1 feedback changes are detected for *48% umh* tht SiCering command PWM is set to in the ch n *nput 15 det ected. If the charge paddle is 10% and Senha^on^ " fault level?and the PSCM'H f17 fr°m the IPC are the FSCM defaults to 48% output.

INTERMITTENTS

Try turning the wheel and manipulating connectors and wiring. If you can duplicate the condition by turning the wheel a certain way, pushing on a harness, etc., try running through the trouble tree while duplicating the condition.

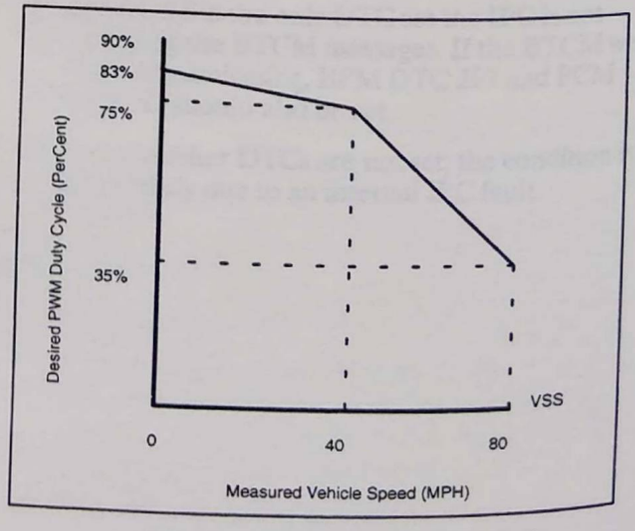

Measured Vehicle Speed (MPH) vs Desired PWM Duty Cycle in Fault Mode.

CamScanner

HANDWHEEL SENSOR FAULT
DTC 16

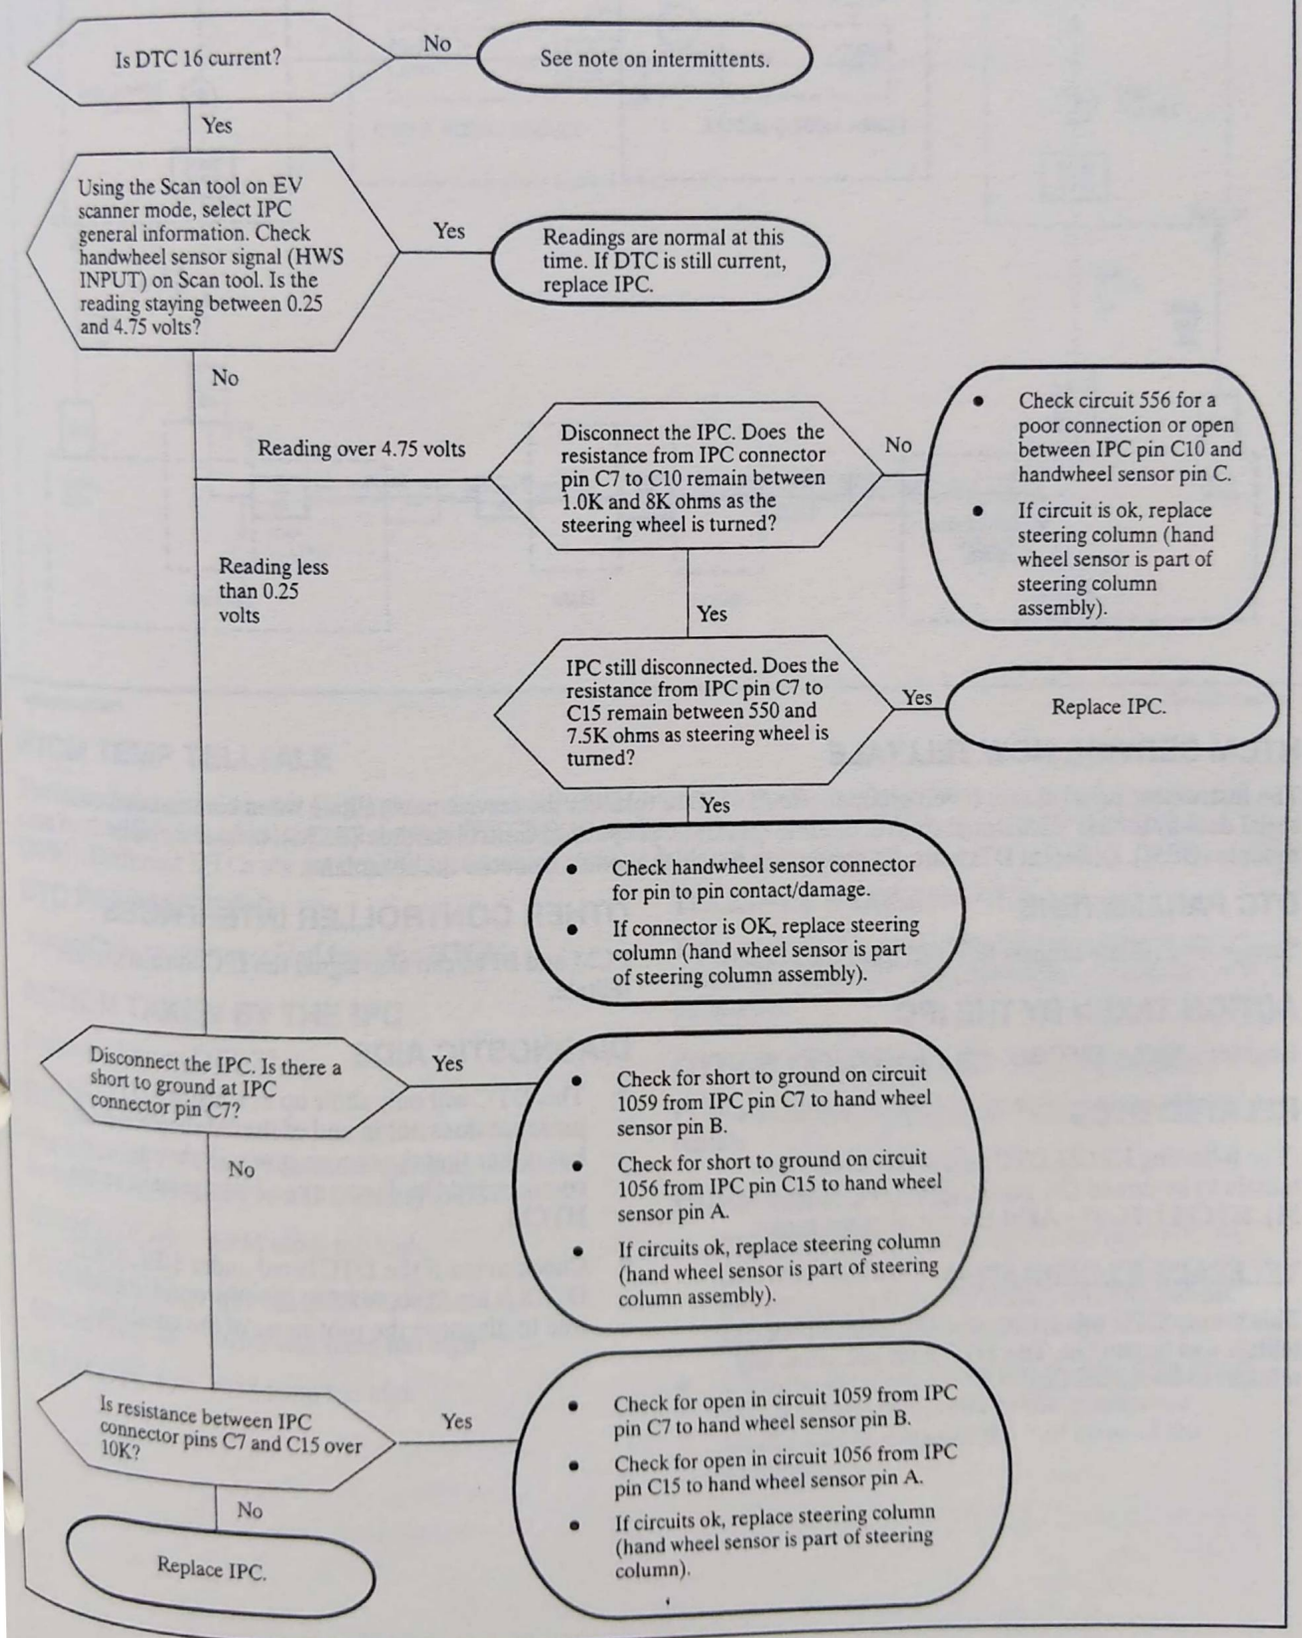
Is DTC 16 current?
No
See note on intermittents.
Yes
Using the Scan tool on EV scanner mode, select IPC general information. Check handwheel sensor signal (HWS INPUT) on Scan tool. Is the reading staying between 0.25 and 4.75 volts?
Yes
Readings are normal at this time. If DTC is still current, replace IPC.
No
Reading over 4.75 volts
Disconnect the IPC. Does the resistance from IPC connector pin C7 to C10 remain between 1.0K and 8K ohms as the steering wheel is turned?
No
• Check circuit 556 for a poor connection or open between IPC pin C10 and handwheel sensor pin C.
• If circuit is ok, replace steering column (hand wheel sensor is part of steering column assembly).
Reading less than 0.25 volts
Yes
IPC still disconnected. Does the resistance from IPC pin C7 to C15 remain between 550 and 7.5K ohms as steering wheel is turned?
Yes
Replace IPC.
Yes
• Check handwheel sensor connector for pin to pin contact/damage.
• If connector is OK, replace steering column (hand wheel sensor is part of steering column assembly).
Disconnect the IPC. Is there a short to ground at IPC connector pin C7?
Yes
• Check for short to ground on circuit 1059 from IPC pin C7 to hand wheel sensor pin B.
• Check for short to ground on circuit 1056 from IPC pin C15 to hand wheel sensor pin A.
• If circuits ok, replace steering column (hand wheel sensor is part of steering column assembly).
No
Is resistance between IPC connector pins C7 and C15 over 10K?
Yes
• Check for open in circuit 1059 from IPC pin C7 to hand wheel sensor pin B.
• Check for open in circuit 1056 from IPC pin C15 to hand wheel sensor pin A.
• If circuits ok, replace steering column (hand wheel sensor is part of steering column).
No
Replace IPC.

CamScanner

DTC 31 – HTCM SERVICE NOW TELLTALE

IPC

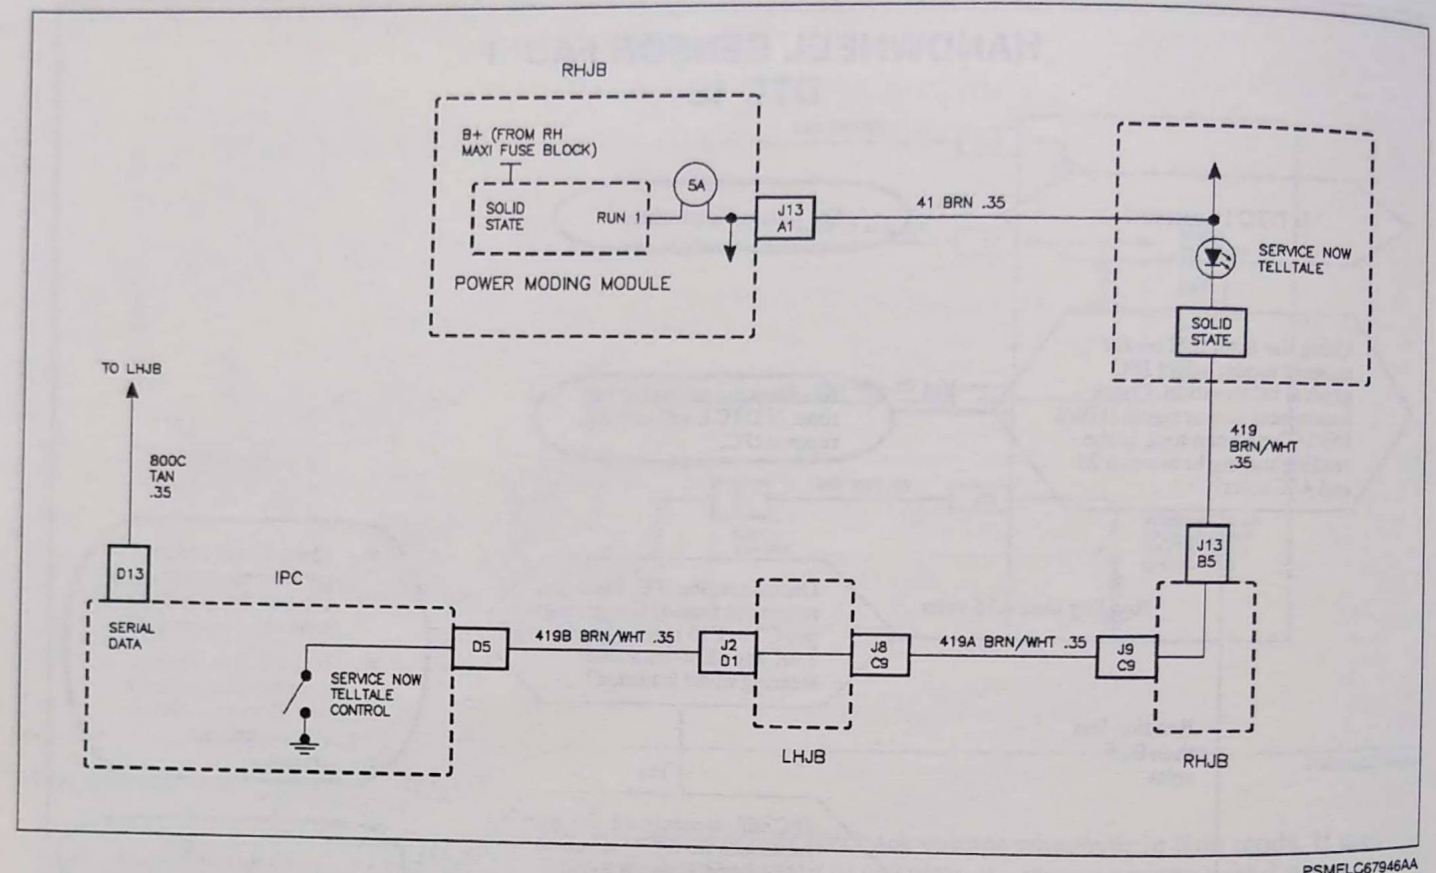

PSMELC67946AA

HTCM SERVICE NOW TELLTALE

The instrument panel cluster (IPC) grounds circuit 419B to turn On the service now telltale when commande o serial data by the HPVS/thermal control module (HTCM), propulsion control module (PCM), or battery pac module (BPM). Different DTCs are set depending on which module initiated the command.

DTC PARAMETERS

Service now telltale request received from the HTCM.

ACTION TAKEN BY THE IPC

Register a history DTC 31.

RELATED DTCS

(The following HTCM DTC causes the service now telltale to be turned On, resulting in a IPC history DTC 31). HTCM DTC 37 - APM 12v out of range major.

TELLTALE ILLUMINATED

This history DTC was set because the service now telltale was turned On. This DTC does not cause any telltales to be turned On.

OTHER CONTROLLER INTERFACES

PCM

DIAGNOSTIC AIDS

- This D... ill presen J'S"... as a history DTC. Its but rather^ ... and of *itself indicate* a fault, commanH ... the service telltale was now HTCM ... related to the
- Check to see if the DTC listed under *RELATED* DTCS ... is di... to the appropriate trouble *tree* ... gnose the root cause of the *condition.*

CamScanner

pTC 032 - HTCM TEMP TELLTALE

IPC

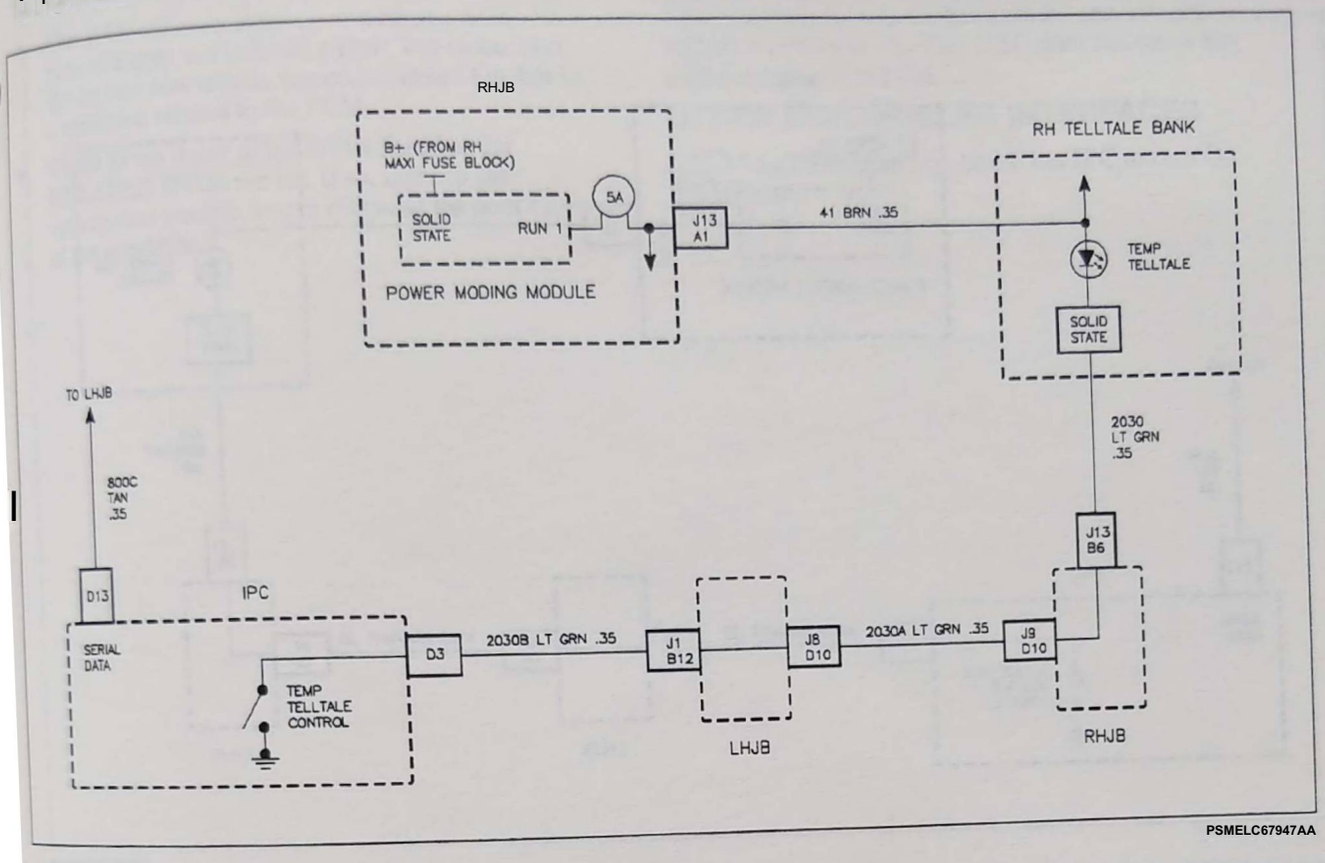

HTCM TEMP TELLTALE

Tae instrument panel cluster (IPC) ^^’“^“Ss'on“mXoX fpCM),“or battery pack module tal- lhe HPVS/thermal control module (HTCM), propuKm telltale when commanded over serial (BPM). Different DTCs are set depending on which module initiated

DTC PARAMETERS

-mp telltale request received from the HTCM.

ACTION TAKEN BY THE IPC

Agister a history DTC 32.

RELATED DTCS

The following HTCM DTCs cause the TEMP telltale to turned On, resulting in a IPC history DTC 32

RtCM DTC 46 - APM temp too high

RtCM DTC 47 - Coolant temp too high

RlCM DTC 48 - Drive unit temp too high

HTCM DTC 49 - PIM temp too high

TELLTALE ILLUMINATED

This history DTC was set because the temp telltale was turned On. This DTC does not cause any telltales to be turned On.

OTHER CONTROLLER INTERFACES

PCM and BPM can also signal the IPC to turn On this telltale

DIAGNOSTIC AIDS

- This DTC will only show up as a history' DTC. Its presence does not in and of itself indicate a fault, but rather that the temp telltale was commanded On due to a condition related to the HTCM.
- Check to see if any DTCs listed under RELATED DTCS are set. If so, refer to the appropriate trouble tree to diagnose the root cause of the condition.

csl CamScanner

DTC 033 – PCM SERVICE NOW TELLTALE

IPC

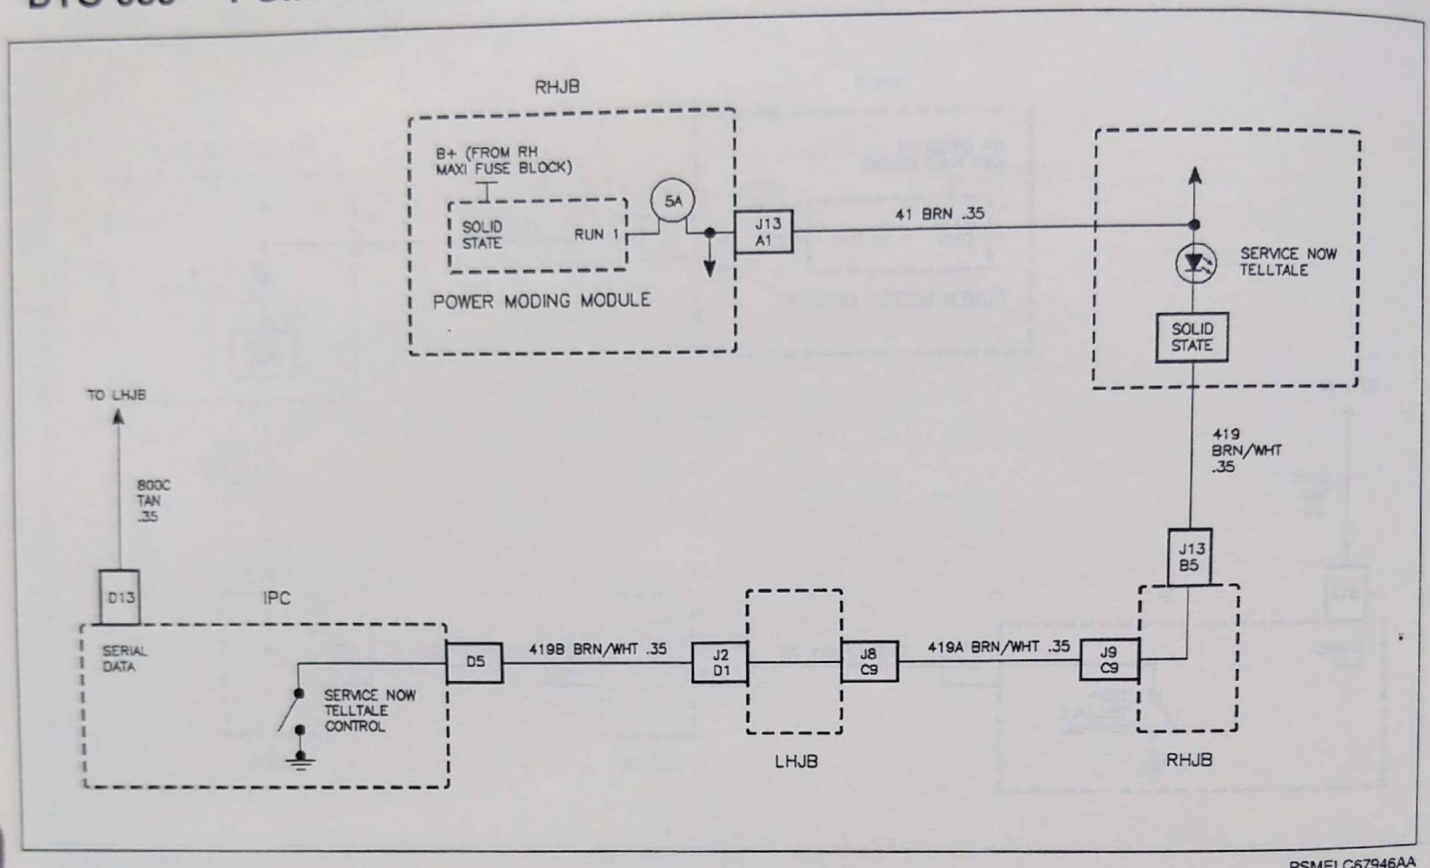

PSMELC67946AA

PCM SERVICE NOW TELLTALE

The instrument panel cluster (IPC) grounds circuit 419B to turn On the service now telltale when commanded over serial data by the HPVS/thermal control module (HTCM), propulsion control module (PCM), or battery pack module (BPM;. Different DTCs are set depending on which module initiated the command.

DTC PARAMETERS

Temp telltale request received from the HTCM.

ACTION TAKEN BY THE IPC

Register a history DTC 33

RELATED DTCS

The following PCM DTCs cause the service now telltale to be turned On, resulting in a IPC history DTC 33

PCM:

- Pack voltage sensed low (05) or high (06) in power inverter module (PIM).
- Input vehicle speed pulse rate too high (07).
- Invalid zero vehicle speed detected (09).
- No oil pressure sensed after oil pump commanded On (32).
- Bias control module (BCA) critical fault (43).
- BCA non-critical (speed and direction sensor) fault (44).
- BCA bias fault (45).
- Phase current exceeds command (52).
- Auxiliary battery voltage low (59) or high (60).
- PRND input * valid combination for 60 seconds (61).
- Phase current feedback failed powerup test (69).
- Pack voltage sensed low (71) or high (72) in PIM at powerup.
- Excessive shaft speed variation detected (74).
- BCA speed and direction sensor fault (76).
- PCM reads shaft speed = 0, but BTCM reads > 5 mph (78).
- Shaft direction input changed while vehicle was moving (79).
- Shaft speed was > 12 mph and then suddenly dropped to 0 (80).
- BCA fault: phase 1 (81), phase 2 (82), or phase 3 (83).
- BCA overvoltage (84) or undervoltage (85) fault.
- BCA slip diagnostic fault (87).
- BCA current command diagnostic fault (88).
- BCA failed fwd (89) or rev (90) Slip Direction test @ powerup.
- Aux battery not charging (104).

CamScanner

DIAGNOSTIC AIDS

, This DTC will only show up as a history DTC. Its A presence does not indicate a fault, but rather that the service now telltale was commanded On due to a condition related to the PCM.

- Check to see if any of the DTCs listed under RELATED DTCS are set. If so, refer to the appropriate trouble tree to diagnose the root cause of the condition.

TELLTALE ILLUMINATED

This history DTC was set because the service now telltale was turned On. This DTC does not cause any telltales to be turned On.

OTHER CONTROLLER INTERFACES

HTCM and BPM can also signal the IPC to turn On this telltale.

CamScanner

DTC 034 – PCM TEMP TELLTALE

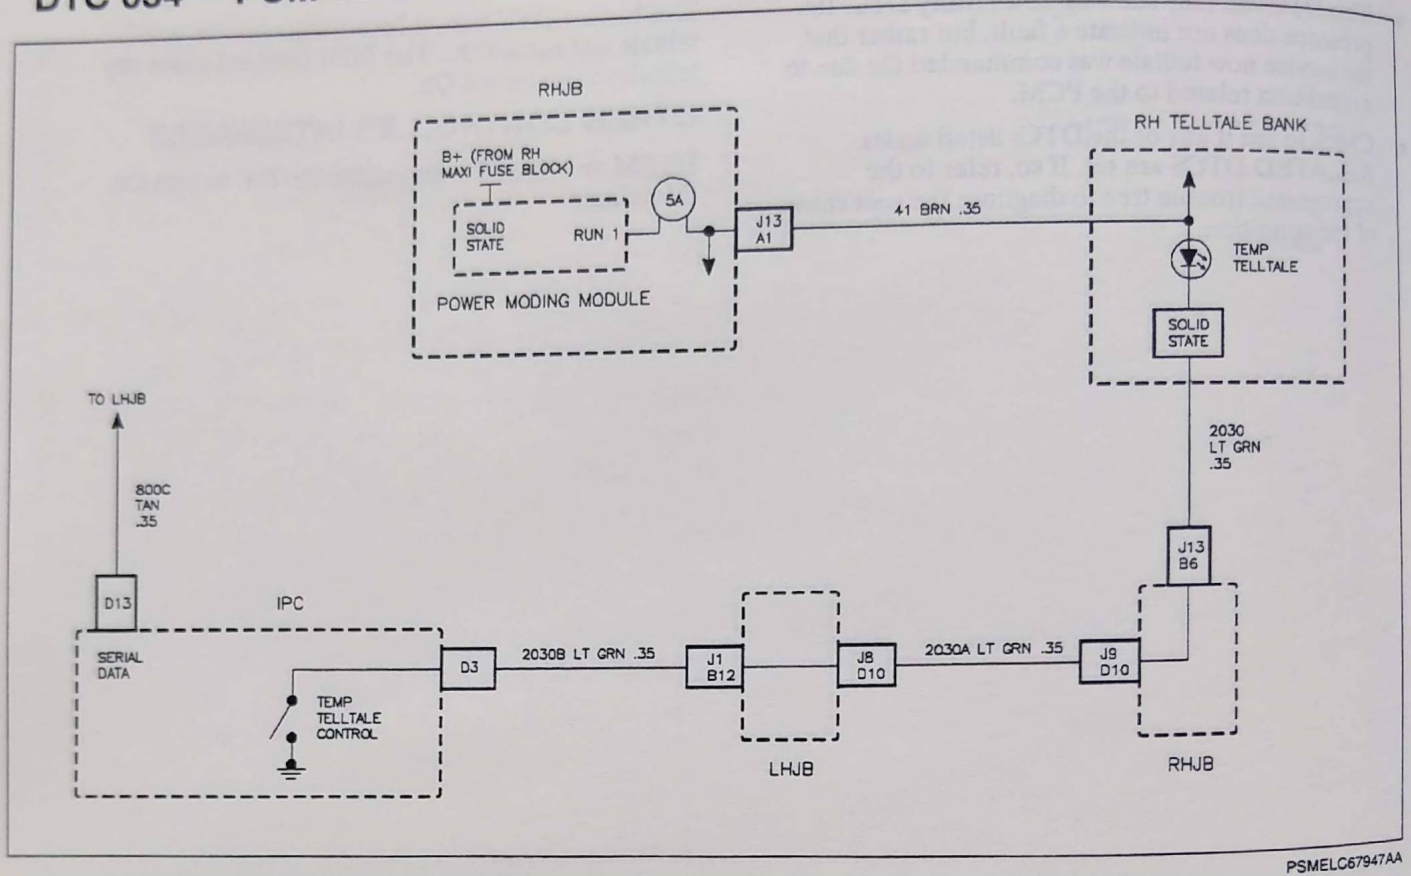

PCM TEMP TELLTALE

The instrument panel cluster (IPC) grounds circuit 2030B to turn On the temp telltale when commanded over serial data by the HPVS/thermal control module (HTCM), propulsion control module (PCM), or battery pack module (BPM). Different DTCs are set depending on which module initiated the command.

DTC PARAMETERS

Temp telltale request received from the PCM.

ACTION TAKEN BY THE IPC

Register a history DTC 34

RELATED DTCS

The following PCM DTCs cause the temp telltale to be turned On, resulting in a IPC history DTC 34:

- PCM DTC 34 - PEB overheat condition
- PCM DTC 36 - Motor temp exceeds 175°C or PEB temp exceeds 74°C.
- PCM DTC 37 - Propulsion motor winding overheat condition.

TELLTALE ILLUMINATED

This histor DTC was SCI because the temp telltale was *turnedOn*

This DTC does not cause any telltales to be turned On.

°THER CONTROLLER *INTERFACES*

HT M anc BPM this^elltale Can also signaJ the IPC t0 turn On

DIAGNOSTIC AIDS

- This TC will *preset* °n^ ^ndot UP as a history DTC. Its but nth ?es nOt *n a°d °I itself indicate a fault. On ..ner tnat the Temp telltale was *commanded* e ue to a condition related to the PCM-

Ch to e if a annrnnl °TCS 3re Set If so> refer t0 the cause roith ^0 trou^e tree to diagnose the root ause of the condition.

RESTESDTC 1? of the DTCs listed under h

CamScanner

DTC 035 - BPM SERVICE NOW TELLTALE IPC

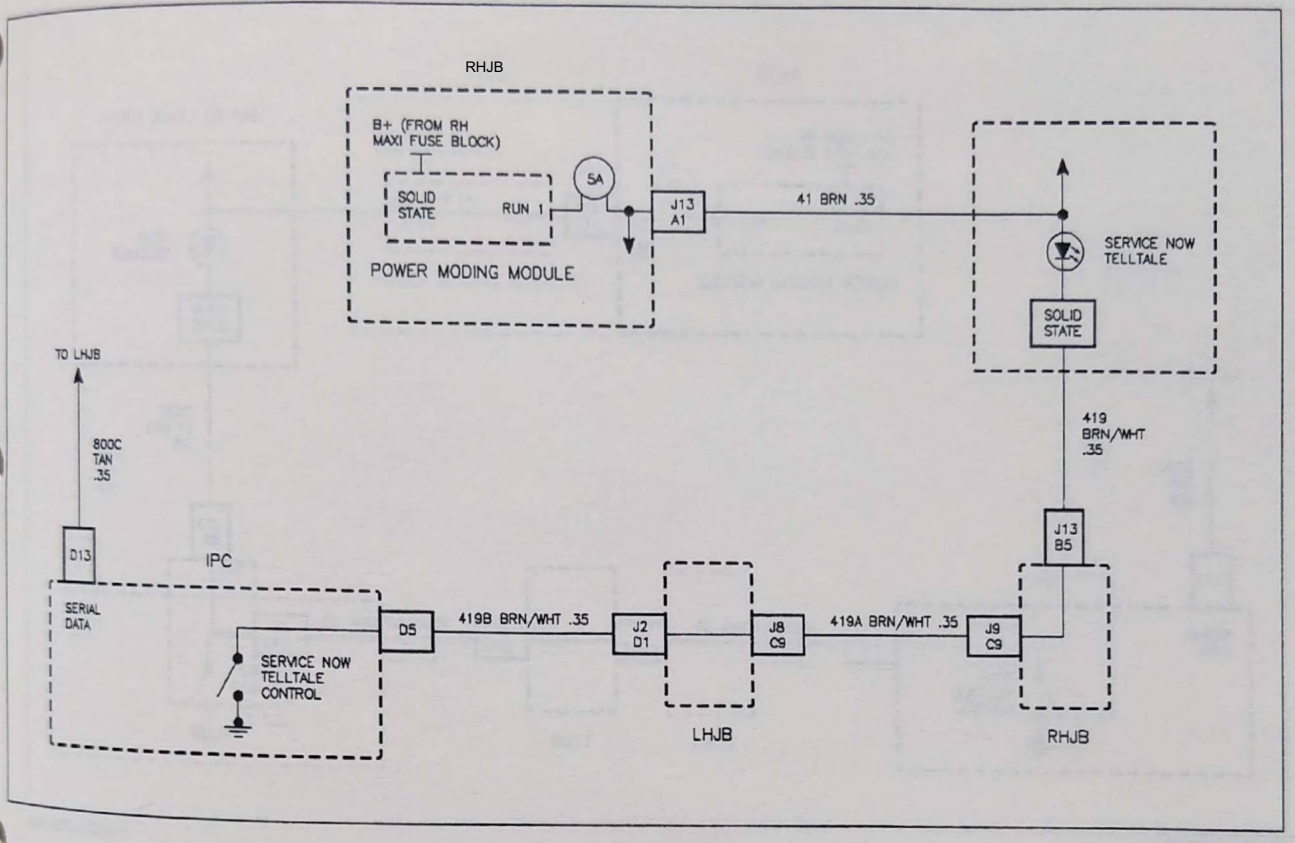

PSMELC67946AA

BPM SERVICE NOW TELLTALE

The instrument panel cluster (IPC) grounds circuit 419B to turn On the service now telltale when commanded over serial data by the body control module (BPM), hybrid vehicle control module (HTCM), propulsion control module (PCM), or battery pack control module (BPM). Different DTCs are set depending on which module initiated the command.

DTC PARAMETERS

Service now telltale request received from the BPM.

ACTION TAKEN BY THE IPC

Register a history DTC 35

RELATED DTCS

The following BPM DTCs cause the service now telltale to be turned On, resulting in a IPC history DTC 35:

- BPM DTC A22, 30, 38, and so on up to 214 - Severe undervoltage pack (one or more)
- BPM DTCs 7, 1, 2, 31, 39, and so on up to 215 - Severe overvoltage pack (one or more)
- BPM DTC 221 - Severe undervoltage pack detected
- BPM DTC 227 - Severe overvoltage pack detected
- BPM DTC 231 - Severe low USOC detected

TELLTALE ILLUMINATED

This history DTC was set because the service now telltale was turned On.

This DTC does not cause any telltales to be turned On.

OTHER CONTROLLER INTERFACES

HTCM and PCM can also signal the IPC to turn On this telltale.

DIAGNOSTIC AIDS

- This DTC will only show up as a history DTC. Its presence does not in and of itself indicate a fault, but rather that the service now telltale was commanded On due to a condition related to the BPM.
- Check to see if any of the DTCs listed under RELATED DTCS are set. If so, refer to the appropriate trouble tree to diagnose the root cause of the condition.

CamScanner

DTC 036 - BPM TEMP TELLTALE

IPC

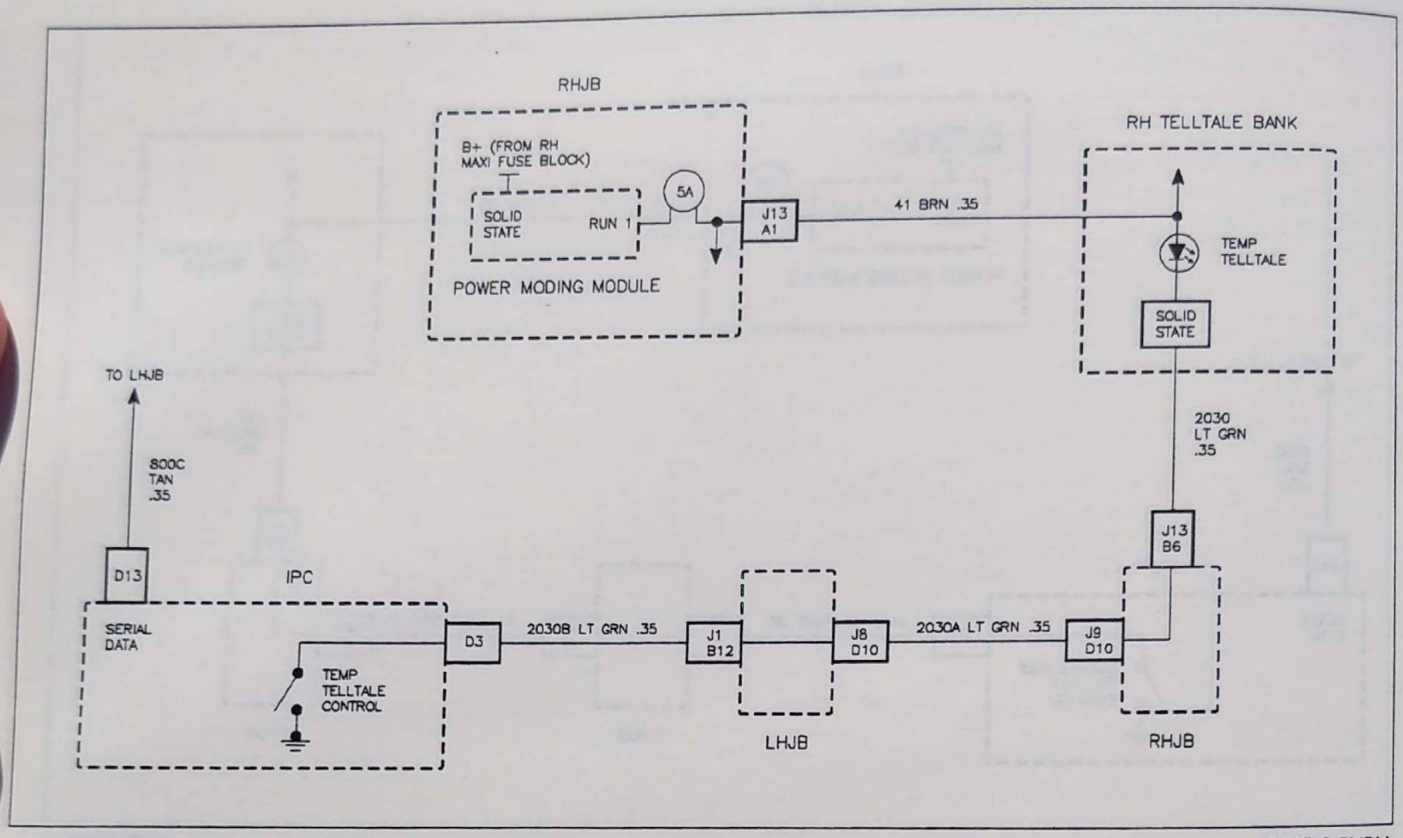

PSMELC67947AA

BPM TEMP TELLTALE

The instrument panel cluster (IPC) grounds circuit 2030B to turn On the temp telltale when commanded over serial data by the HPVS/thermal control module (HTCM), propulsion control module (PCM), or battery pack module (BPM). Different DTCs are set depending on which module initiated the command.

DTC PARAMETERS

Temp telltale request received from the BPM.

ACTION TAKEN BY THE IPC

Register a history DTC 36

RELATED DTCS

The following *BPM* DTCs cause the temp telltale to be turned On, resulting in a IPC history DTC 36:

- BPM DTC 269 — Propel overtemp fault
- BPM DTC 270 — Charge overtemp fault
- BPM DTC 288 — CP overtemp fault

TELLTALE ILLUMINATED

This history DTC was set because the temp telltale was turned On.

This DTC does not cause any telltales to be turned On.

OTHER CONTROLLER INTERFACES

HTCM and PCM can also signal the IPC to turn On this telltale.

DIAGNOSTIC AIDS

- This DTC will only show up as a history DTC. Its presence does not in and of itself indicate a fault, but rather that the temp telltale was commanded On due to a condition related to the BPM.
- Check to see if any of the DTCs listed under RELATED DTCS are set. If so, refer to the appropriate trouble tree to diagnose the root cause of the condition.

CamScanner

pTC 037 - REDUCED PERFORMANCE TELLTALE I PC

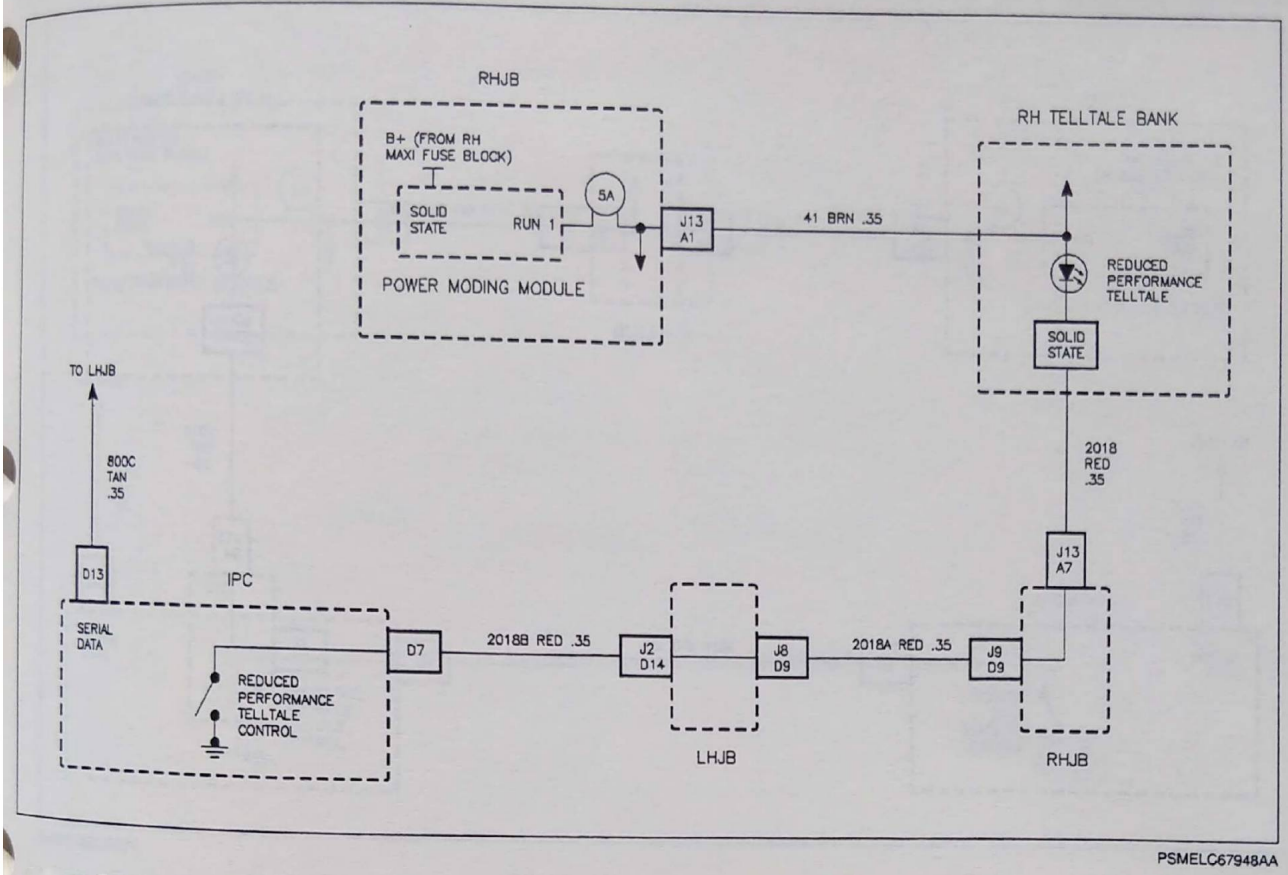

REDUCED PERFORMANCE TELLTALE

The instru
command^111 pane! c^uster (IPQ grounds circuit 2018 to turn on the reduced performance telltale when
e over serial data by the propulsion control module (PCM).

DTc PARAMETERS

Reduced
the PCM Pei^ormance telltale request received from

J^TION TAKEN BY THE IPC

\ ICglsler a history DTC 37

nitiates a
's^ngle chime and Check Messages warning.

.^TED DTCS

lowing PCM DTCs cause the reduced
performance telltale be
IPC history DTc 37 t0 time^ ®n' resulting in a

- ?CM DTc 37 M ■
  PUmn can... "^O 01' pressure sensed after oil
  I commanded on.
- PCM DTc 36 –
  175°C or Motor temperature exceeds
  EBexceeds74°C
- J-M DTc 53 _
  Capabilfty detect d°W ^atter^ Power output
- PCM DTc 1 n – Re
  10 reQuest fro^ BPM^UCe<^ Perf mo<^e ena^^ed due

TELLTALE ILLUMINATED

This history DTC was set because the reduced performance telltale was turned On.

This DTC does not cause any telltales to be turned On.

OTHER CONTROLLER INTERFACES

IPC sounds the chime each time the Check Messages warning comes on.

DIAGNOSTIC AIDS

- This DTC will only show up as a history DTC. Its presence does not in and of itself indicate a fault, but rather that the reduced performance telltale was commanded On due to a condition related to the PCM.
- Check to see if any of the DTCs listed under RELATED DTCS are set. If so, refer to the appropriate trouble tree to diagnose the root cause of the condition.

CamScanner

DTC 038 – BATTERY LIFE TELLTALE

IPC

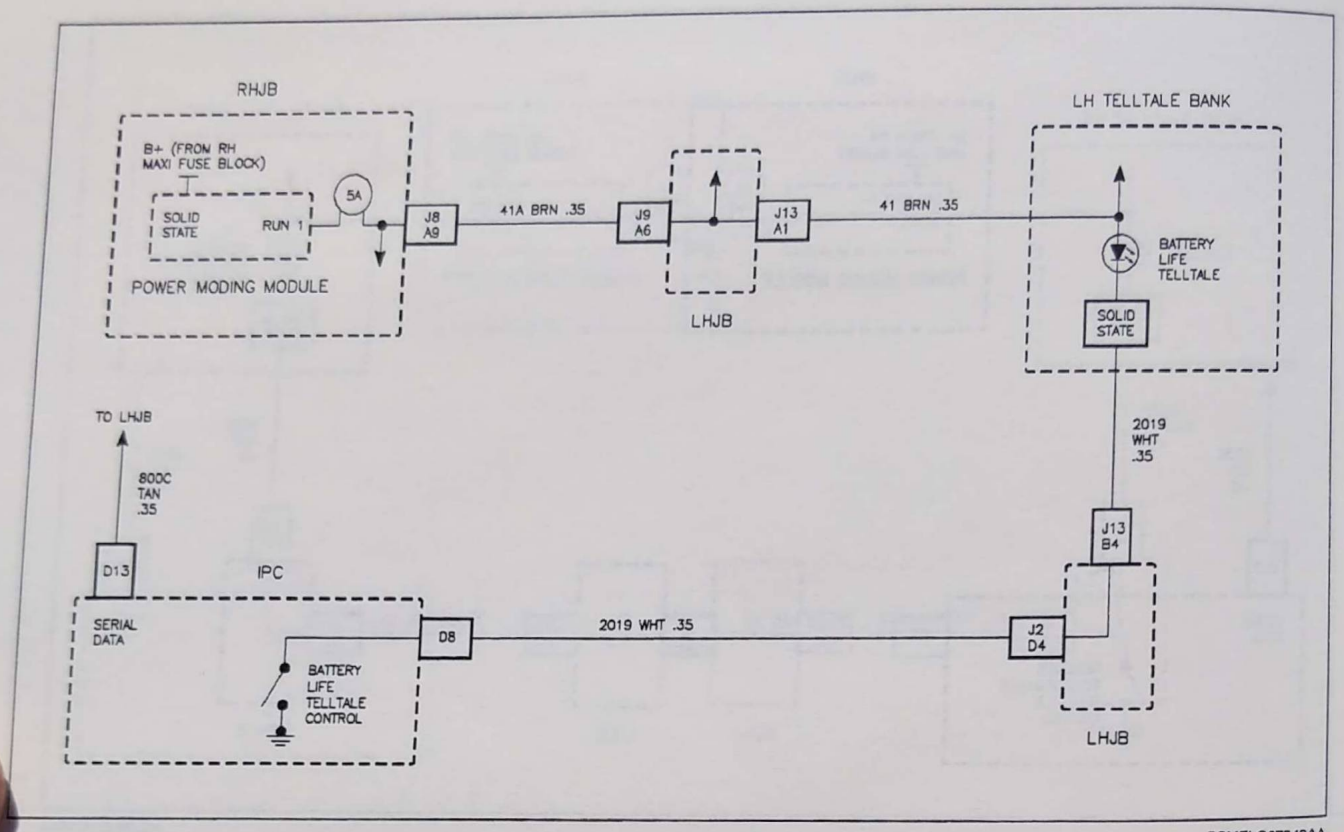

PSMELC67949AA

BATTERY LIFE TELLTALE

The instrument panel cluster (IPC) grounds circuit 2019 to turn On the battery life telltale when commanded over serial data by the battery pack module (BPM).

DTC PARAMETERS

Battery Life telltale request received from the BPM.

ACTION TAKEN BY THE IPC

Register a history' DTC 38

Initiates a single chime and Check Messages warning

RELATED DTCS

The *following BPM DTCs cause the* battery life telltale to be turned On, resulting in a IPC histoiy DTC 38:

- *BPM DTCs* 5,13,21,29, and so on up to 213 - Undervoltage modules detected.
- BPM DTC 220 — Undervoltage pack detected
- BPM DTC 230 - Low USOC detected

TELLTALE ILLUMINATED

This history DTC was set because the battery life telltale was turned On.

Check Messages warning on IPC comes on for seven seconds every five minutes.

OTHER CONTROLLER INTERFACES

DIAGNOSTIC AIDS

- This DTC will only show up as a history DTC. Its presence does not in and of itself indicate a fault, but rather that the battery life telltale was commanded On due to a condition related to the BPM.
- Check to see if any of the DTCs listed under RELATED DTCS are set. If so, refer to the appropriate trouble tree to diagnose the root cause of the condition.

CamScanner

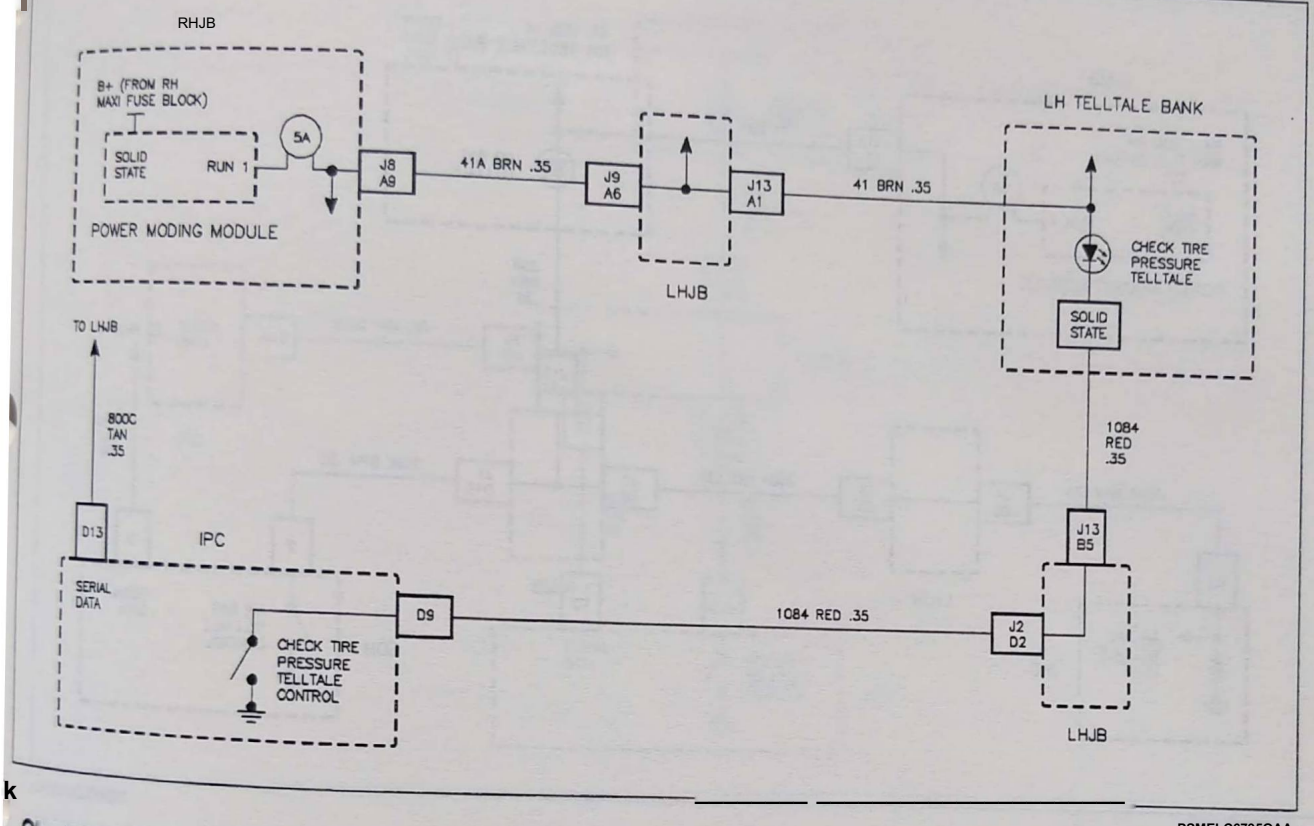

"HECK TIRE PRESSURE TELLTALE

The instrumer pa l
‘^‘Wndedoter s"6- ^Ster (IPC) Srounds circuit 1084 to turn On the check tire pressure telltale when o\ er serial data by the run/lock shifter assembly (RSA).

DTC PARAMETERS

checlj tir
kSA. P essure telltale request received from the

A T

»Cp'0NTAKEN BY ™E IPC

i Inihar53 WStOry DTC39’
Warning/ S*n^e ch™e and Check Messages

RELATED ^ca DTCS

TELLTALE ILLUMINATED

This history DTC was set because the check tire pressure telltale was turned On.

Check Messages warning comes on IPC comes on for seven seconds every five minutes.

OTHER CONTROLLER INTERFACES

DIAGNOSTIC AIDS

- This DTC will only show up as a history DTC. Its presence does not in and of itself indicate a fault, but rather that the check tire pressure telltale was commanded On due to a tire pressure condition indicated by the RSA.
- Check to see if the DTC listed under Related DTCs is set. If so, refer to the appropriate trouble tree to diagnose the root cause of the condition.

CamScanner

DTC 040 - AIR BAG (SIR) TELLTALE

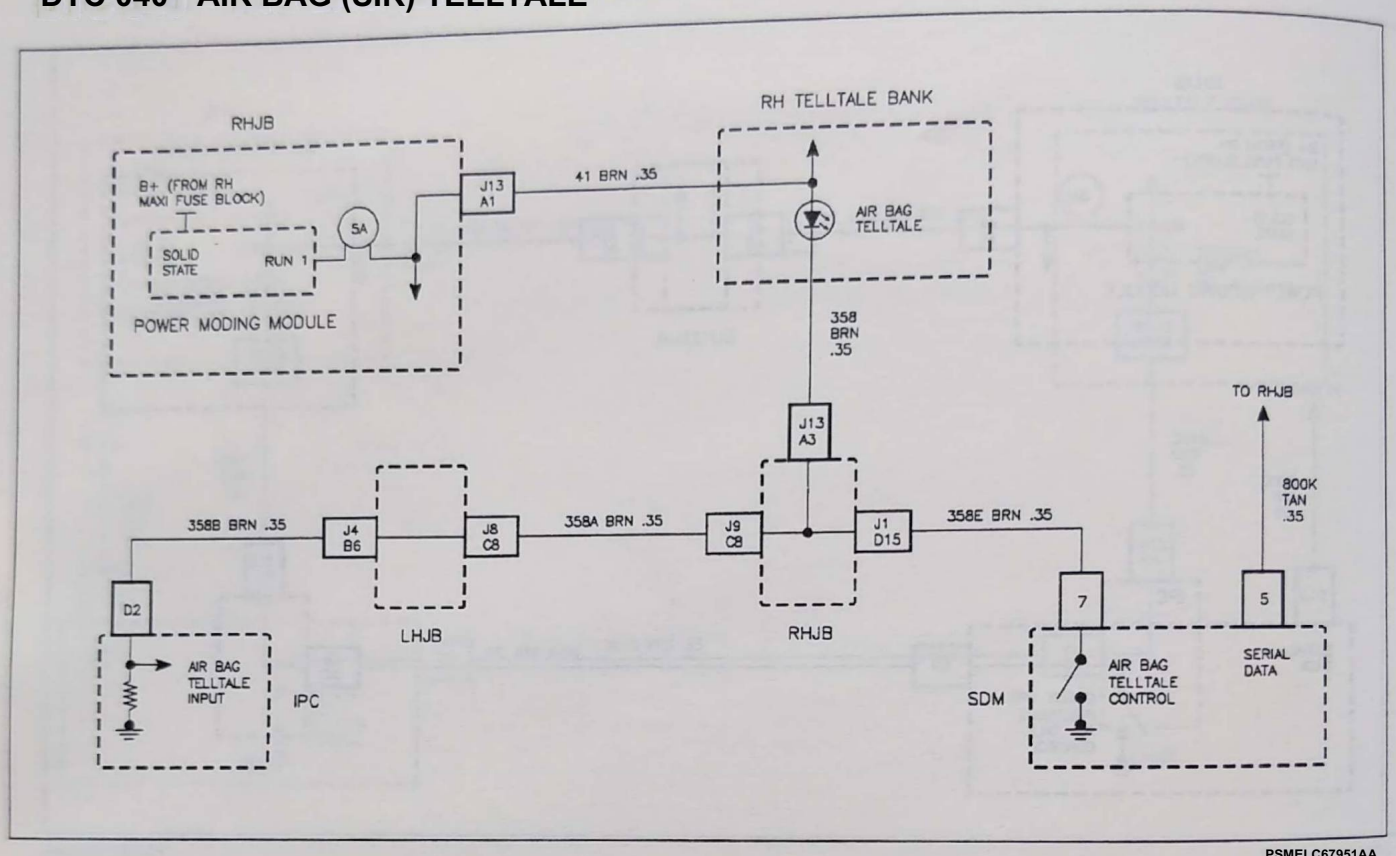

PSMELC67951AA

AIR BAG (SIR) TELLTALE

The sensor diagnostic (SDM) grounds circuit 358 to turn On the air bag telltale. The instrument panel cluster (IPC) monitors circuit 358 to determine if the telltale is On.

DTC PARAMETERS

Air bag telltale circuit 358 grounded

ACTION TAKEN BY THE IPC

- Registers a history DTC 40.
- Initiates a single chime and Check Messages warning.

RELATED DTCS

All SIR DTCs

TELLTALE ILLUMINATED

This history DTC was set because the air bag telltale was turned On.

Check Messages warning comes on IPC comes on for seven seconds every five minutes.

OTHER CONTROLLER INTERFACES

SDM controls the telltale.

DIAGNOSTIC AIDS

- This DTC will only show up as a history DTC. Its presence does not in and of itself indicate a fault, but rather that the air bage telltale was commanded On due to a DTC set in the SDM-
- Check to see if any SIR DTCs are set. If so, refer to the appropriate trouble tree in the “SIR” service manual to diagnose the root cause of the condition.

CamScanner

dTC 041 - SECURITY TELLTALE

IPC

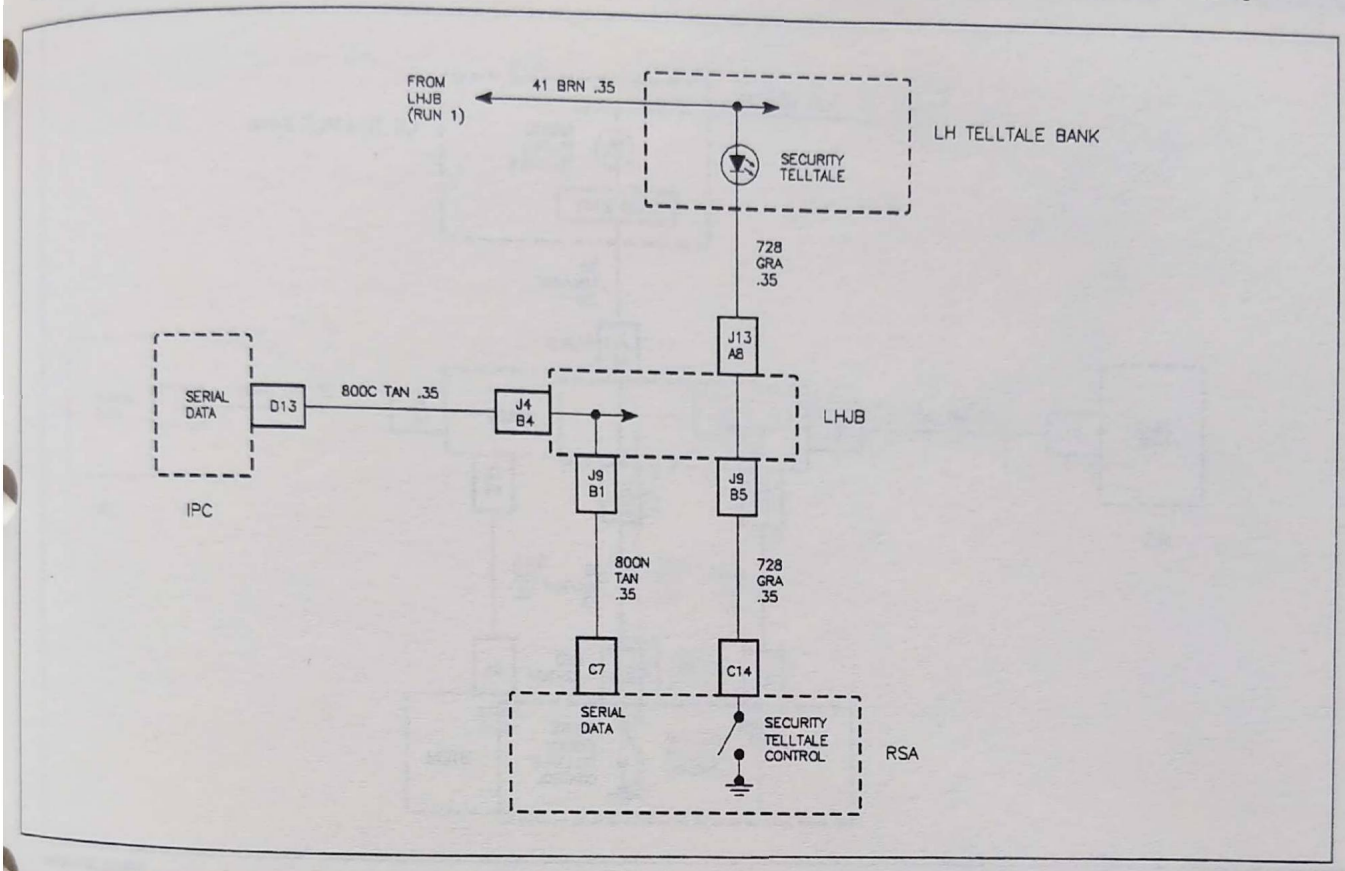

PSMELC67952AA

SECURITY TELLTALE

The ru[illegible]lock cluste-^/pp S^®er assembly (RSA) grounds circuit 728 to turn On the security telltale. The instrument panel 'C) receives a message over serial data from the RSA indicating the security telltale was turned On.

DTC PARAMETERS

The receives a message from RSA over serial data that security telltale was turned On.

ACTION TAKEN BY THE IPC

- Registers a history DTC 41.
- Initiates a single chime and Check Messages Earning.

ELATED DTCS

R security telltale is flashing there may be c°ntmunication DTCs set.

* PCM

TELLTALE ILLUMINATED

This history DTC was set because the decurity telltale was turned On.

Check Messages warning comes on IPC comes on for seven seconds every five minutes.

OTHER CONTROLLER INTERFACES

RSA controls the telltale.

DIAGNOSTIC AIDS

- This DTC will only show up as a history DTC. The presence of this DTC indicates the security telltale was commanded On. This could be due to:

  1. Driver entering 25 or more digits on either the external or RSA keypads without having entered the valid code (security telltale will be On solid).

  2. The RSA detects a loss of serial data communications sufficient to prevent a security handshake with the propulsion system (security telltale will be flashing).

- Check to see if any of the DTCs listed under RELATED DTCS are set. If so, refer to the appropriate trouble tree for any DTC set to diagnose the root cause of the condition.

CamScanner

DTC 042 - BRAKE TELLTALE

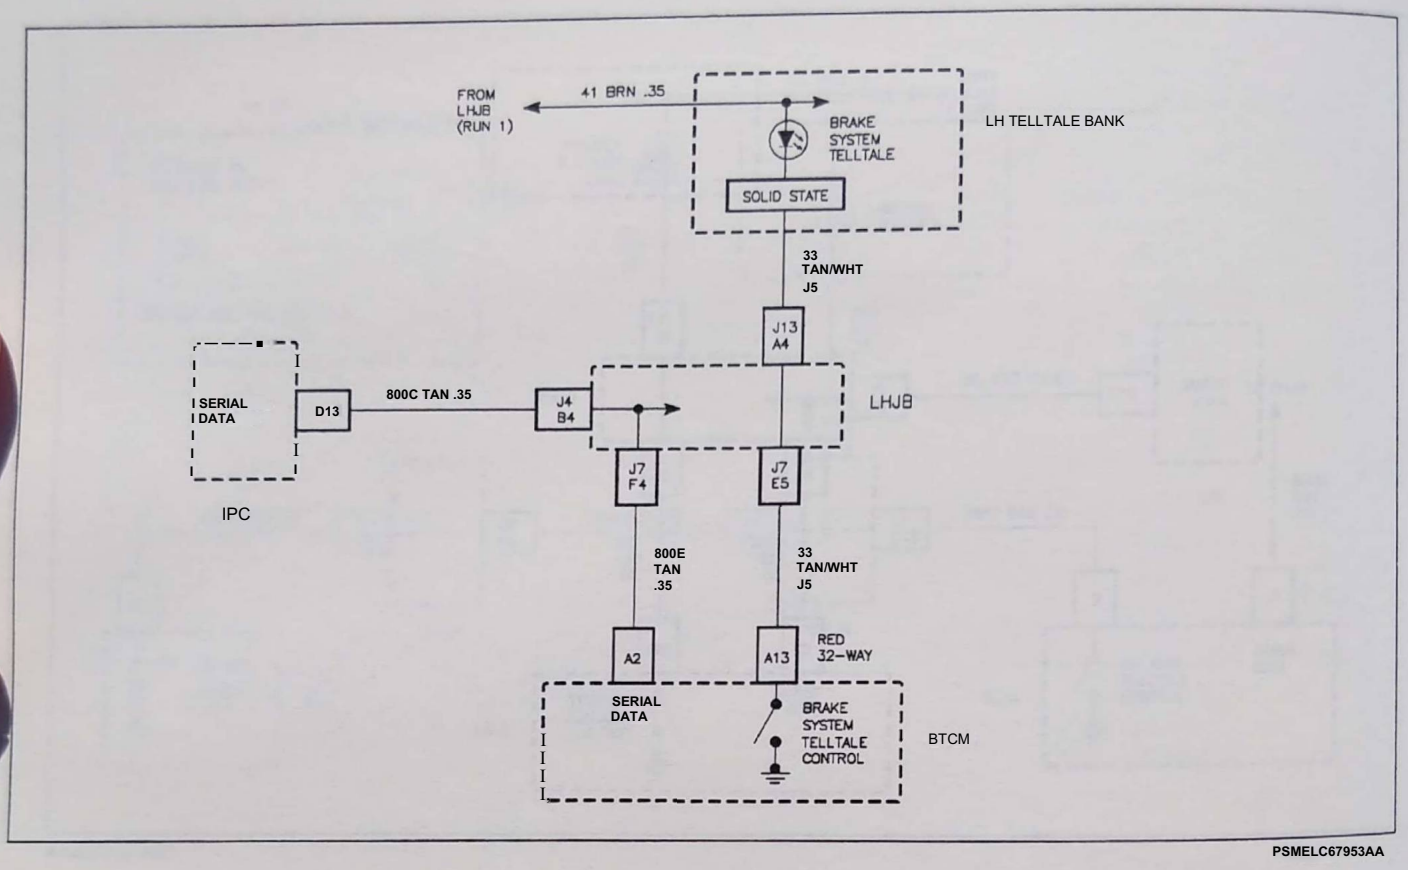

PSMELC67953AA

BRAKE TELLTALE

The brake torque control module (BTCM) grounds circuit 33 to turn On the brake system telltale. The instrument panel cluster (IPC) receives a message over serial data from the BTCM indicating the Brake System telltale was turned On.

DTC PARAMETERS

IPC receives a message from BTCM over serial data that the brake system telltale was turned On.

ACTION TAKEN BY IPC

- Registers a history DTC 42.
- Initiates a single chime and Check Messages warning.

RELATED DTCS

BTCM DTCs 14-18,23,24, 27-31, 34-51, 54-63, 66-71, 74-134,142-151,155-166.

TELLTALE ILLUMINATED

This history DTC was set because the brake system telltale was turned On.

Check Messages warning on IPC comes on for seven seconds every five minutes.

OTHER CONTROLLER INTERFACES

BTCM controls the telltale.

DIAGNOSTIC AIDS

- This DTC will only show up as a history DTC. The presence of this DTC indicates the brake system telltale was commanded On by the BTCM.
- Check to see if any of the DTCs listed under RELATED DTCS are set. If so, refer to the appropriate trouble tree to diagnose the root cause of the condition.

CamScanner

dTC o43 _ ANTI-LOCK TELLTALE

IPC

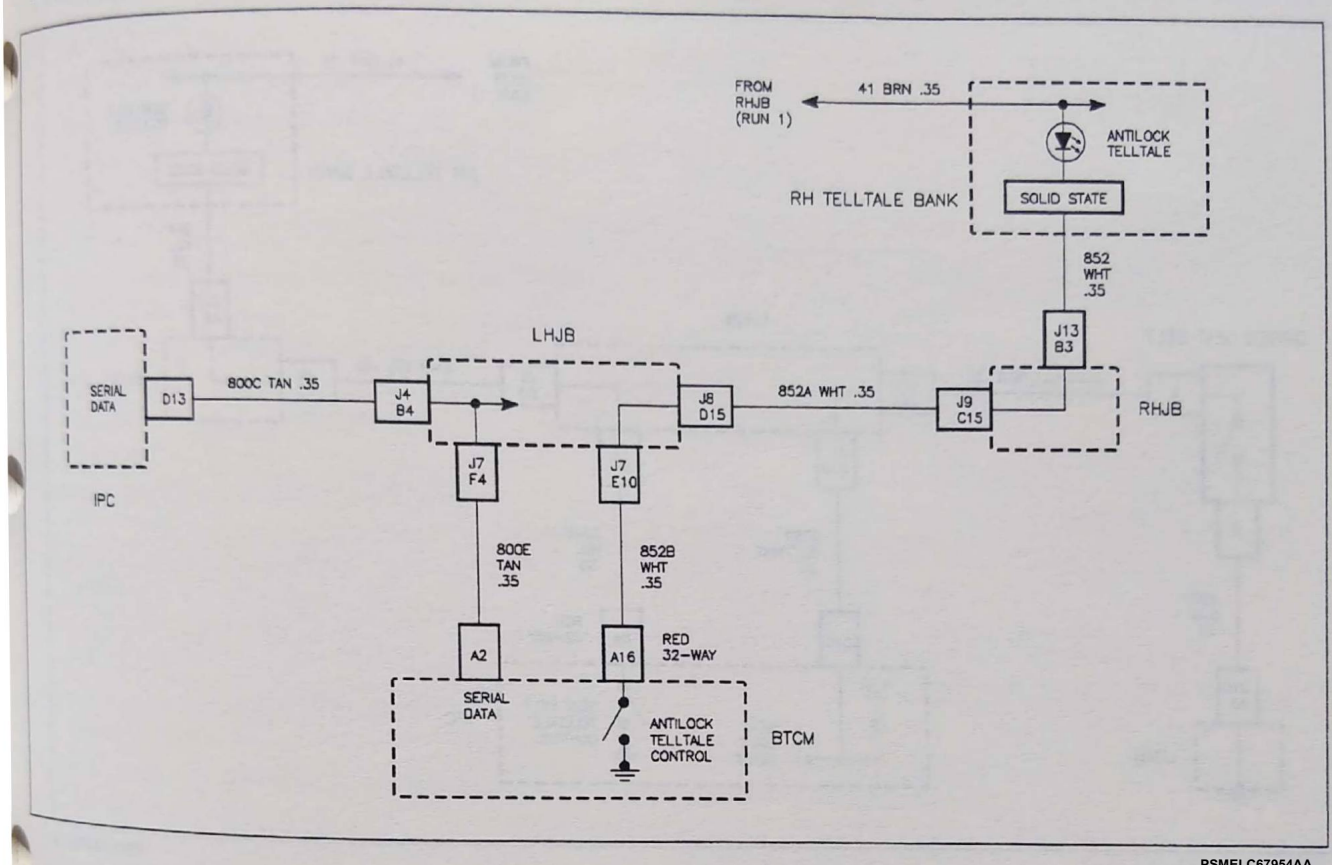

^I-LOCK TELLTALE

Panel chleTnpc^COntr°^ mo<^u^e (BTCM) grounds circuit 852 to turn On the antilock telltale. The instrument On. PC) receives a message over serial data from the BTCM indicating the antilock telltale was turned

DTC PARAMETERS

IPC
that receives a message from BTCM over sen al data the antilock telltale was turned On.

ACTION TAKEN BY IPC

- Rasters a history DT C 43.
- Vitiates a single chime and Check Mcssag Earning. es

ELATED DTCS

n?S?TCs U ^37,51-63,66-71,74-83,86,87, 114, -18, 125-132,143-152,155-163.

TELLTALE ILLUMINATED

This history DTC was set because the antilock telltale was turned On.

Check Messages warning on IPC comes on for seven seconds every five minutes.

OTHER CONTROLLER INTERFACES

BTCM controls the telltale.

DIAGNOSTIC AIDS

- This DTC will only show up as a history DTC. The presence of this DTC indicates the antilock telltale was commanded On by the BTCM.
- Check to see if any of the DTCs listed under RELATED DTCS are set. If so, refer to the appropriate trouble tree to diagnose the root cause of the condition.

CamScanner

DTC 044 - SEAT BELT TELLTALE

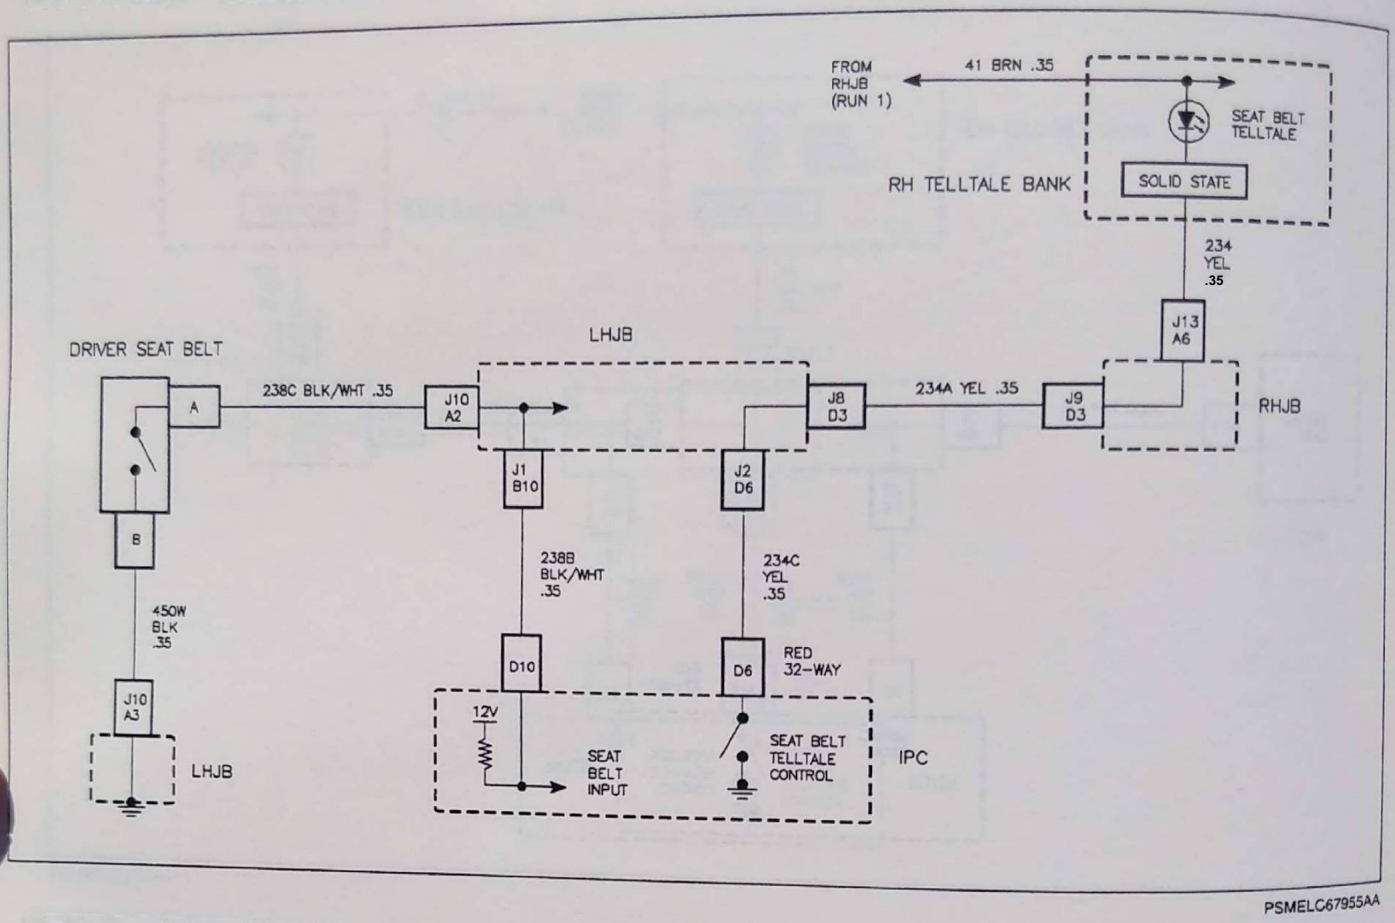

PSMELC67955AA

SEAT BELT TELLTALE

The instrument panel cluster (IPC) grounds circuit 234 to turn On the seat belt telltale when the driver's seat belt is unfastened.

DTC PARAMETERS

Seat belt telltale turned On by the IPC.

ACTION TAKEN BY IPC

- Registers a history DTC 44.
- Initiates a single chime and Check Messages warning.

RELATED DTCS

None

TELLTALE ILLUMINATED

This history DTC was set because the seat belt telltale was turned On.

Check Messages warning on IPC comes On for seven seconds every five minutes.

OTHER CONTROLLER INTERFACES

None

DIAGNOSTIC AIDS

- This D... *present* only will show up as a history DTC. The was turnpd r? IS DTC indicates the seat belt telltale unbuckled ^Ue t0 ^^vers seat ^em® ... the ... belt
- Check to see if ar... RELATEDDTr^ °f the DTCs listed under apDronriot D^CS are set. If so, refer to the ... tro ... tree of the condition^6 tO diagnose the r°Ot ... cause

NOTES

CamScanner

DTC 045 - PCM SERVICE SOON TELLTALE

IPC

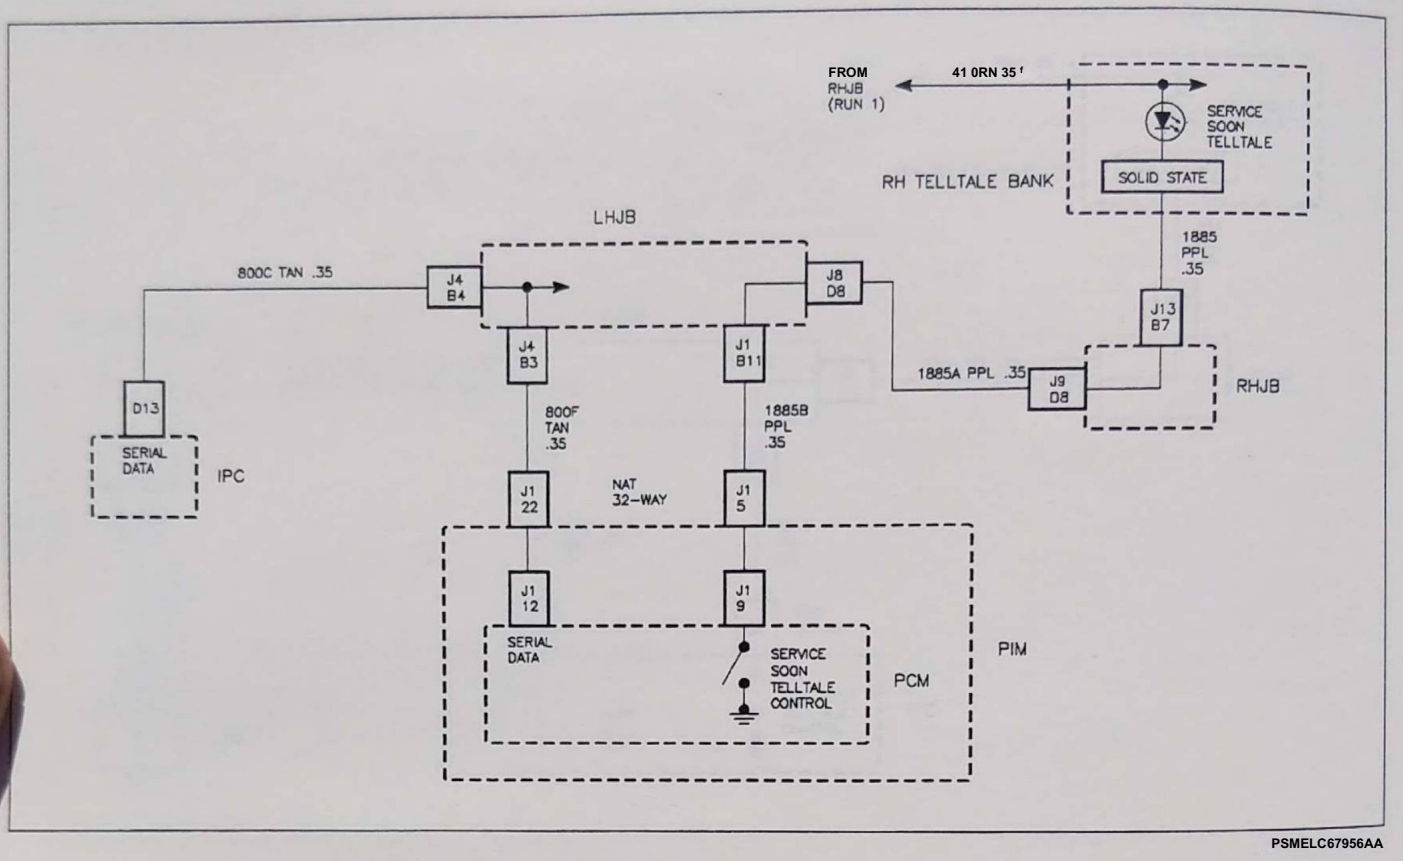

PSMELC67956AA

PCM SERVICE SERVICE SOON TELLTALE

The propulsion control module (PCM) grounds circuit 1885 to turn On the service soon telltale based on a PCM, battery pack module (BPM), Accessory AC and DC power module (APM), brake torque control module (BTCM), or HPVS/thermal control module (HTCM) failure. If the condition is detected by a module other than the PCM, a signal is sent to the PCM that the service soon telltale should be turned On. The PCM sends a message over the serial data line to the instrument panel cluster (IPC) when it turns On the service soon telltale so the IPC will turn On the Check Messages indicator and sound the chime.

DTC PARAMETERS

Service soon telltale request received from the PCM.

ACTION TAKEN BY IPC

Register a history DTC 45.

Initiates a single chime and Check Messages warning.

RELATED DTCS

The following DTCs cause the service soon telltale to be turned On, resulting in a IPC history DTC 45:

BPM:

- Accessory Range Fault (227)
- BP V Correlation Fault (219)
- BP Voltage Open Fault (217)
- BPM Hardware Malf (304)
- CP Short Detected (286)
- High Voltage Open Fault (229)
- Pack Current Fault (225, 226)
- Pack Temp Fault (3 or more of 233-266)
- PARK Correlation Fault (285)
- Prop Batt Voltage Fault (3 or more Module Voltage Faults)
- Reference Range Fault (228)
- Unintended Charge Detected (292, 291)

PCM:

- PEB temp, sensor shorted to ground (01)
- PEB temp, sensor open or shorted to battery (02)
- Motor winding temp, sensor shorted to ground (03)
- Motor winding temp, sensor open or shorted to battery (04).
- Vehicle Speed input too noisy (08)
- Regenerative braking retard request invalid (10, 11,12, or 13)
- Loss of serial data from BPM, BTCM, RSA, HTCM (26,27, 28, 29)
- PCM RAM or ROM failure (30, 31)

CamScanner

RELATED DTCS (CONTINUED)

- Oil pressure sensed after oil pump commanded OFF (33)
- Regcn disable correlation failure (41)
- Retard request correlation failure (42)
- Commanding regen, BPM doesn't indicate regen charging (47)
- Processor, memory, or timing problem (48, 49, 50)
- Commanded current has exceeded current feedback signal (51)
- BCA Fault input(s) not true at power-up (54,55,56)
- Short detected on ≥ 1 QDSM outputs for > 0.25 sec (57)
- Current feedback 7^ 0 during BCA Enable powerup test (73)
- PCM and BPM charge paddle present inputs disagree (97)
- Output voltage of V5B supply is < > thresholds (98,99,100,101)
- Regen brkg disabled; BTCM detected Retard Achieved fault (103)
- HV interlock is open for 250 ms, but Scaled VBAT>42.5V (105)
- BCA bias fault not set after IGN1 was low @ powerdown (106)
- Retard Request input duty cycle is too low or too high (107)

HTCM and APM:

- Drive unit temp sensor failure (12)
- Coolant temp sensor failure (14)
- Ambient temp sensor (16)
- APM shutdown (27)
- Heated windshield crack (28)
- CMCover/under voltage (31)
- APM 12V out of range minor (39)
- APM 47V isolation failure (41)
- APM 47V out of range (42)
- HTCM processor failure (45)
- Coolant pump failure (50)
- Low or high pressure (52,53)
- Low coolant (54)
- Coolant valve failure (58,59, 60)
- Charge port valve failure (62, 63, 64)
- Coolant level sensor failure (17)

BTCM:

- Telltale failure (11)
- Retard Achieved communication fault (141)
- Retard Achieved correlation fault (167)
- Retard Achieved duty cycle not within bounds (168)

TELLTALE ILLUMINATED

This history DTC was set because the service soon telltale was turned On.

Check Messages warning on IPC comes On for seven seconds every five minutes.

OTHER CONTROLLER INTERFACES

DIAGNOSTIC AIDS

- This DTC will only show up as a history DTC. The presence of this DTC is not in and of itself indicating a fault, but rather that the service soon telltale was commanded On due to problem registered by either the PCM, BPM, APM, BTCM, or HTCM.
- Check to see if any of the DTCs listed under RELATED DTCS are set. If so, refer to the appropriate trouble tree to diagnose the root cause of the condition.

CamScanner

INTERIOR LIGHTS

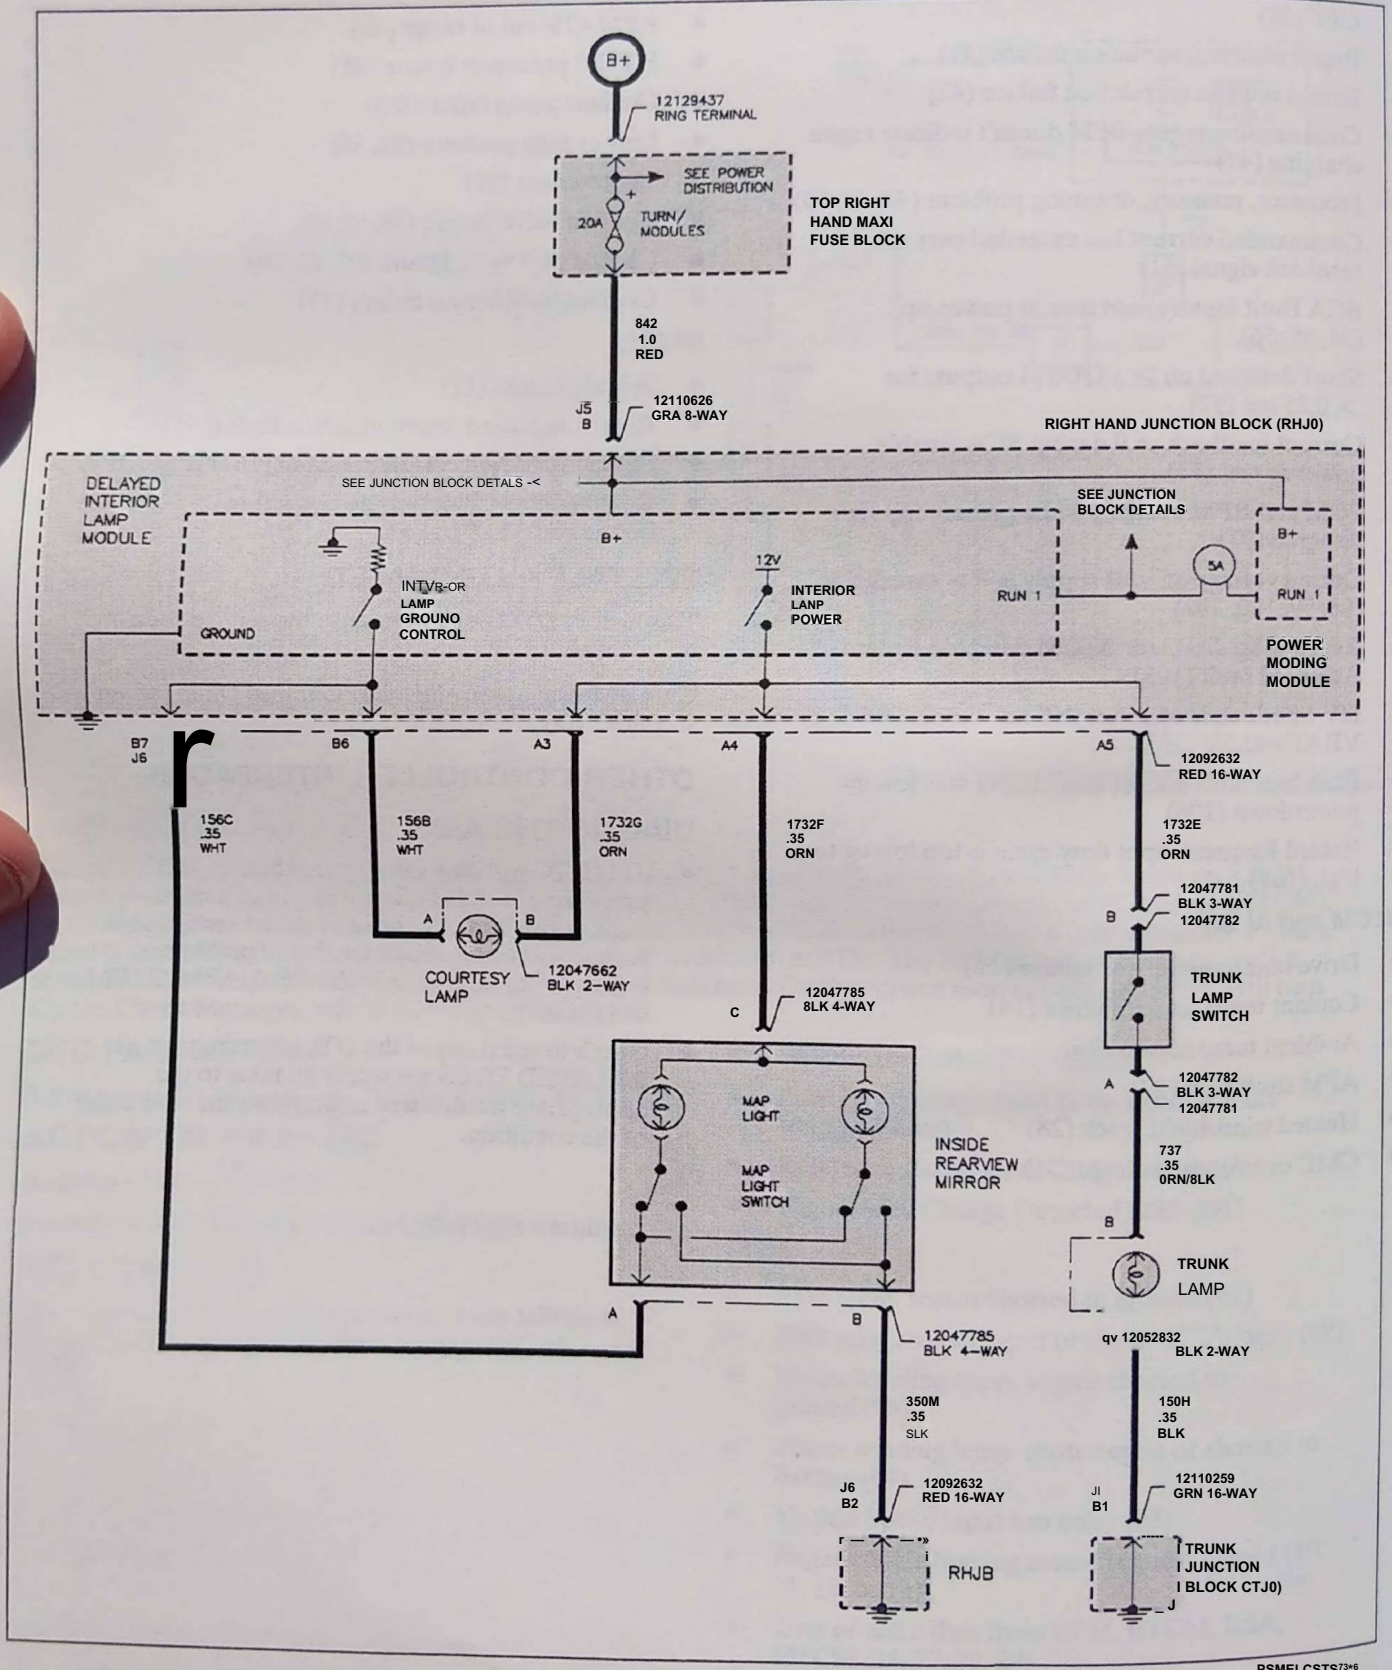

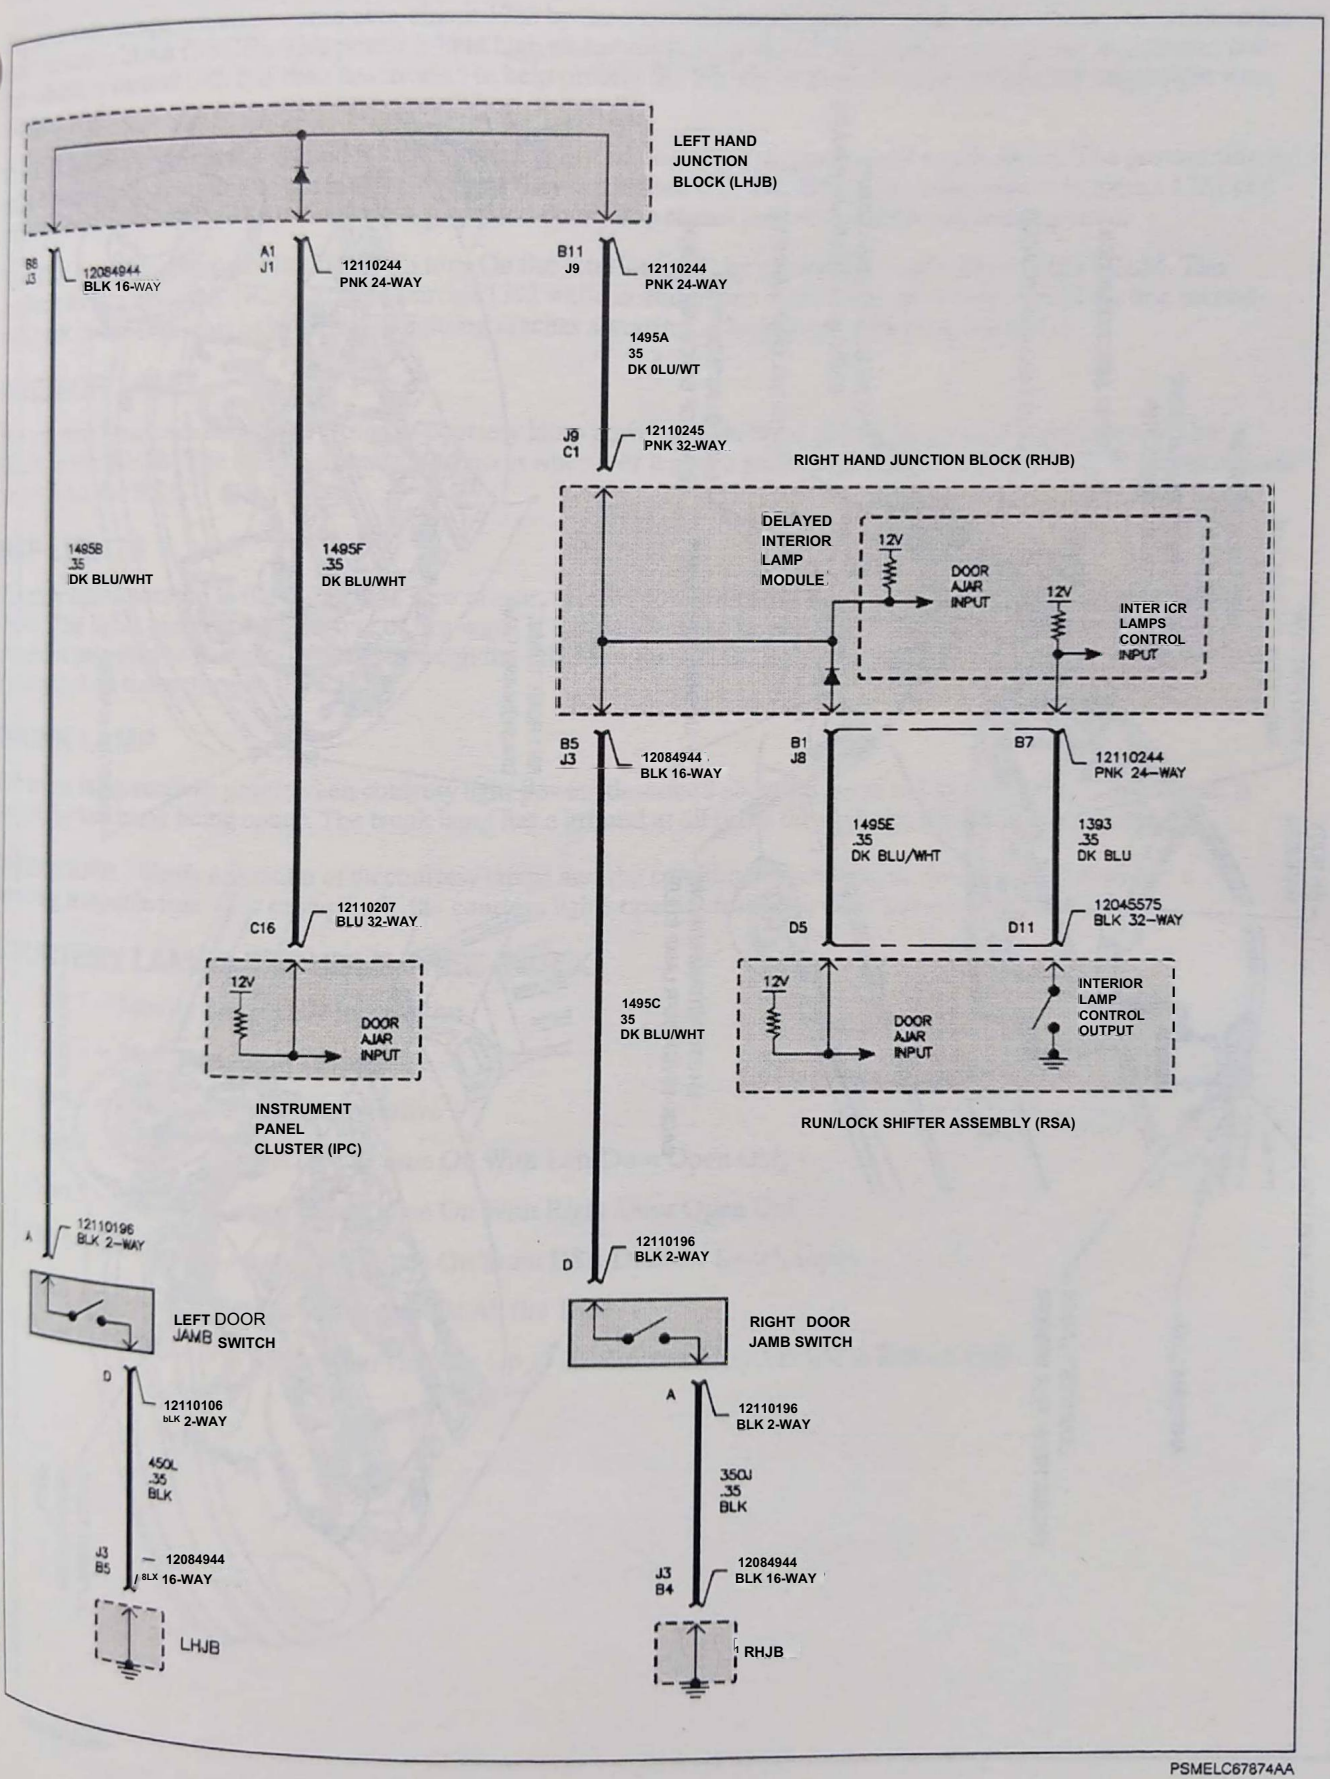

PSMELC67874AA

CamScanner

INTERIOR LIGHTS COMPONENT LOCATION VIEWS

RH JUNCTON BLOCK
RH BODY HARNESS
INTERIOR LAMP (MOUNTED TO FOUR BAR)
ANTENNA LEAD
HIGH MOUNTED STOP LAMP (CHMSL)
REAR COMPARTMENT LAMP CONNECTOR
COURTESY LAMPS (INSIDE REAR VIEW MIRROR)
TRUNK JUNCTION BLOCK
LH TAIL LAMP HARNESS
RH STOP/TURN/RUNNING/ BACK-UP/MARKER LAMP BULBS
RH TAIL LAMP HARNESS
LH STOP/TURN/RUNNING/ BACK-UP/MARKER LAMP BULBS
LICENSE PLATE LAMP
CARGO LAMP SWITCH (PART OF LATCH ASSEMBLY)
RH FRONT TURN/ DRL/RUNNING LAMP
LH FRONT TURN/ DRL/RUNNING LAMP
LH FRONT MARKER LAMP
RH FRONT MARKER
PSMELC68342AA

CamScanner

COURTESY LAMPS

The courtesy lamps are all powered over circuit 1732 by the delayed interior lamp module (DILM), located in the right junction block (RHJB). This power is held high whenever in Run nd nutes after ''Kb.de is turned Oft. It is then deatt.va.ed to help pro.ee, .he batte" STSap "gKSS li light were left On.

The DILM also controls the ground for the interior light and one of the grounds for the map lights. The ground side is pulsed to provide dimming of the interior lights as they are turned Off. The DILM provides power to circuit 1732 and ground to circuits 156 and 661 whenever a grounded door jamb circuit indicates a door has been opened.

The RSA can also command the DILM to turn On the interior lights by grounding circuit 1393 to the DILM. The run/lock shifter assembly (RSA) grounds circuit 1393 while in Run mode if the Dim up button is held for one second with park lamps Off, or is held until backlighting reaches a maximum brightness with park lamps On.

INTERIOR LAMP

The interior lamp receives power from the courtesy lamp power as described above. Its ground is provided by the DILM in the RHJB. The DILM grounds this circuit whenever it sees a ground on its door ajar input or the lamp control ^circuit from the RSA.

MAP LIGHTS

The map lights, located in the inside rear view mirror, receive power directly from courtesy light power as described above. The lights can be grounded one of two ways. If the switches are turned Off, the lamps come On only when a ground is provided to the interior lamp through the DILM in the RHJB. If the switches are turned On, the lamps have aground at all times through the RHJB.

TRUNK LAMP

The trunk lamp receives power when courtesy light power (described above) is provided and the trunk lamp switch is closed (by the trunk being open). The trunk lamp has a ground at all times through the trunk junction block.

^IMPORTANT: Verify operation of all courtesy lamps and the conditions under which the failure occurs before selecting a trouble tree. (For example, do the courtesy lights operate from one door but not the other?)

COURTESY LAMPS TROUBLE TREE INDEX

[1] Chart 1 - Interior Lamp Only Inoperative

- Chart 2 - Map Lights Only Inoperative

[1] Chart 3 - Trunk Lamp Only Inoperative

- Chart 4 - Courtesy Lamps Don't Come On With Left Door Open Only
- Chart 5 - Courtesy Lamps Don't Come On With Right Door Open Only
- Chart 6 - Courtesy Lamps Don't Come On From RSA Dimmer Switch Input
- Chart 7 - A]] Courtesy Lamps Inoperative All the Time

' [C1]W 8 - All Courtesy Lamps Slay On (For Up to 20 Minutes After Vehicle is Turned Off)

CamScanner

INTERIOR LAMP ONLY INOPERATIVE

CHART 1

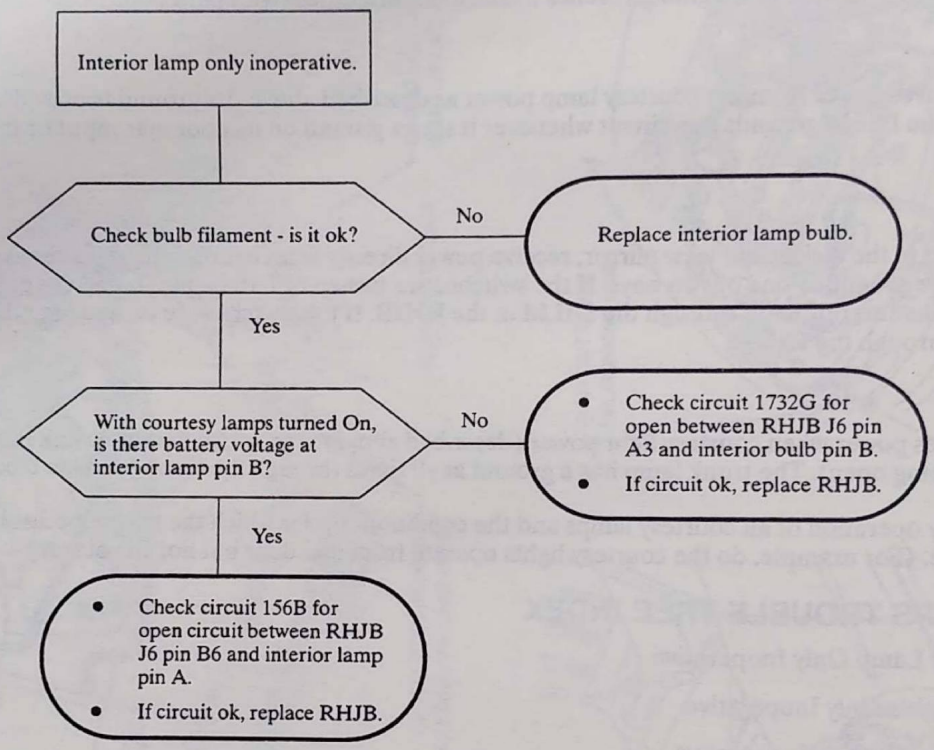
Interior lamp only inoperative.
Check bulb filament - is it ok?
No
Replace interior lamp bulb.
Yes
With courtesy lamps turned On, is there battery voltage at interior lamp pin B?
No
• Check circuit 1732G for open between RHJB J6 pin A3 and interior bulb pin B.
• If circuit ok, replace RHJB.
Yes
• Check circuit 156B for open circuit between RHJB J6 pin B6 and interior lamp pin A.
• If circuit ok, replace RHJB.

CamScanner

MAP LIGHTS ONLY INOPERATIVE

CHART 2

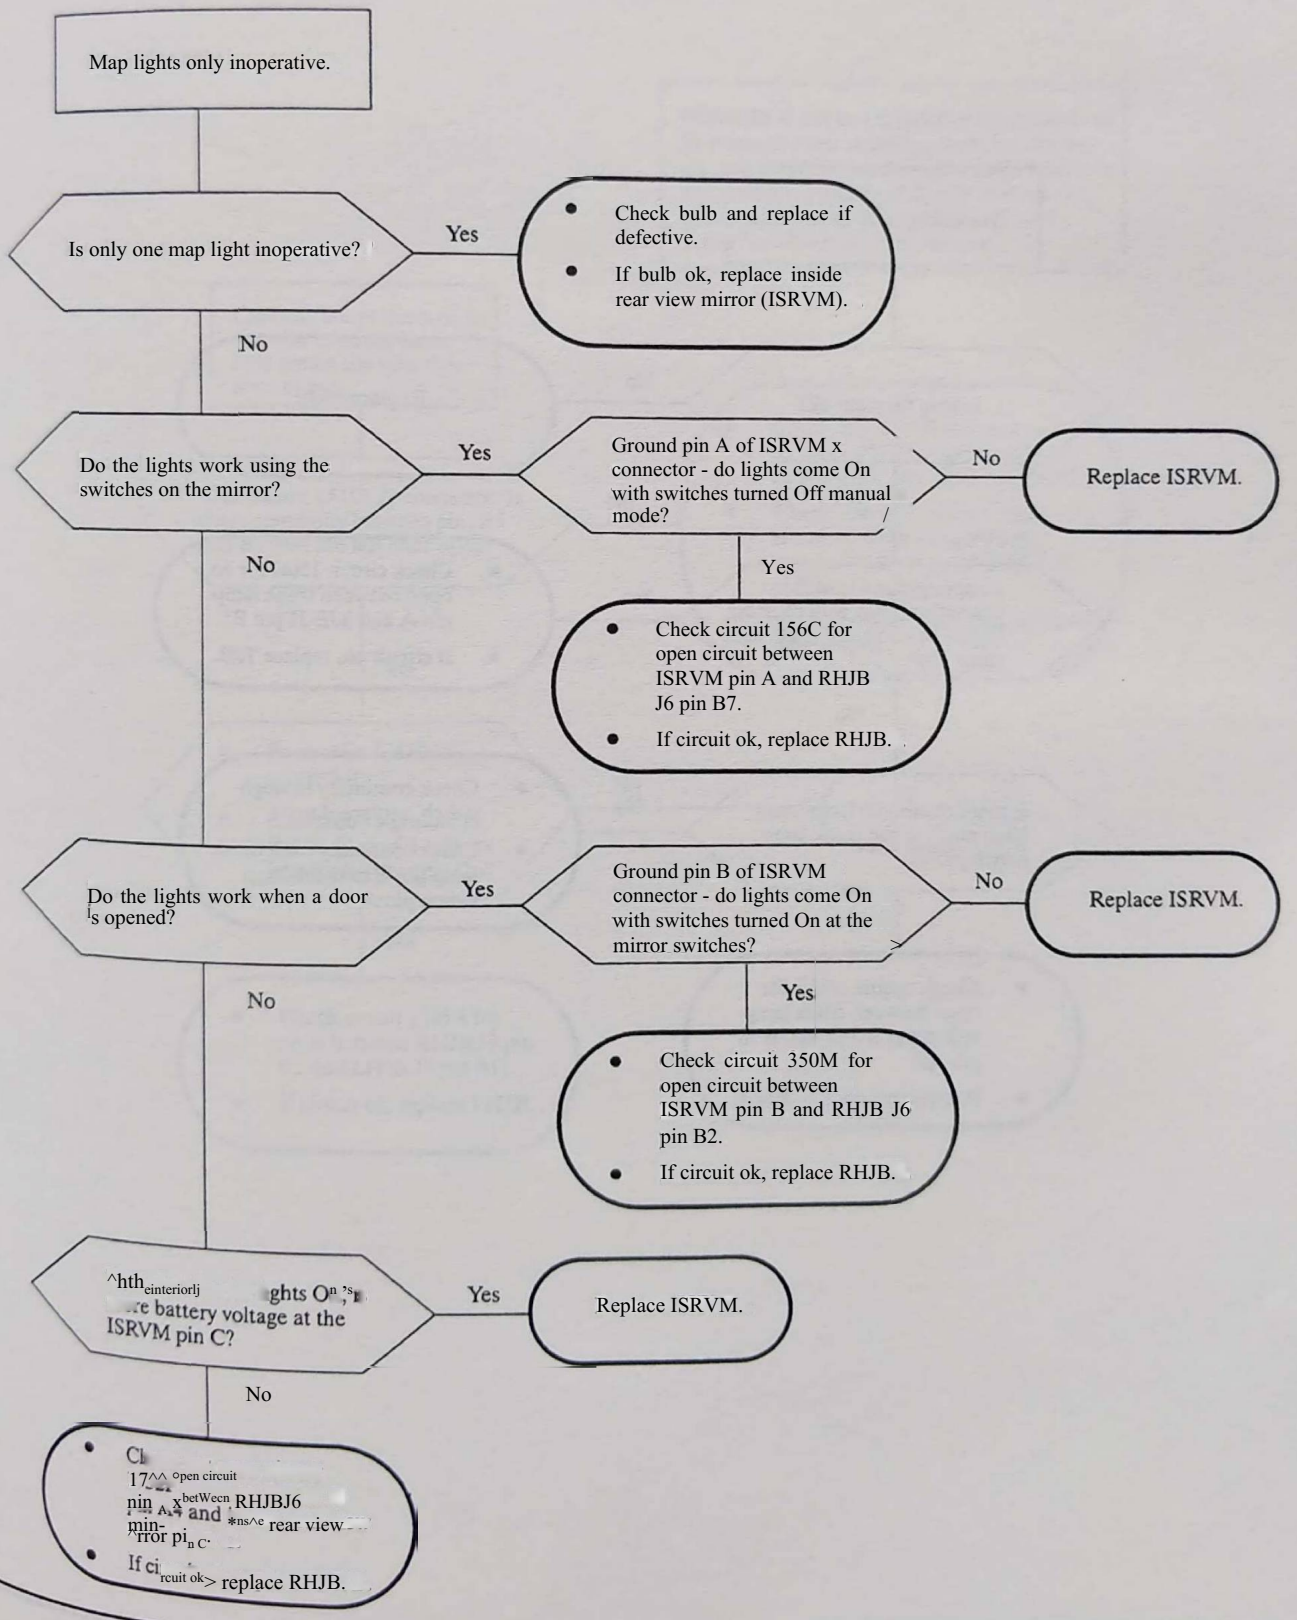
Map lights only inoperative.
Is only one map light inoperative?
Yes
Check bulb and replace if defective.
If bulb ok, replace inside rear view mirror (ISRVM).
No
Do the lights work using the switches on the mirror?
Yes
Ground pin A of ISRVM x connector - do lights come On with switches turned Off manual mode?
No
Replace ISRVM.
Yes
Check circuit 156C for open circuit between ISRVM pin A and RHJB J6 pin B7.
If circuit ok, replace RHJB.
No
Do the lights work when a door is opened?
Yes
Ground pin B of ISRVM connector - do lights come On with switches turned On at the mirror switches?
No
Replace ISRVM.
Yes
Check circuit 350M for open circuit between ISRVM pin B and RHJB J6 pin B2.
If circuit ok, replace RHJB.
No
Yes
Replace ISRVM.
No
If circuit ok> replace RHJB.

TRUNK LAMP ONLY INOPERATIVE

CHART 3

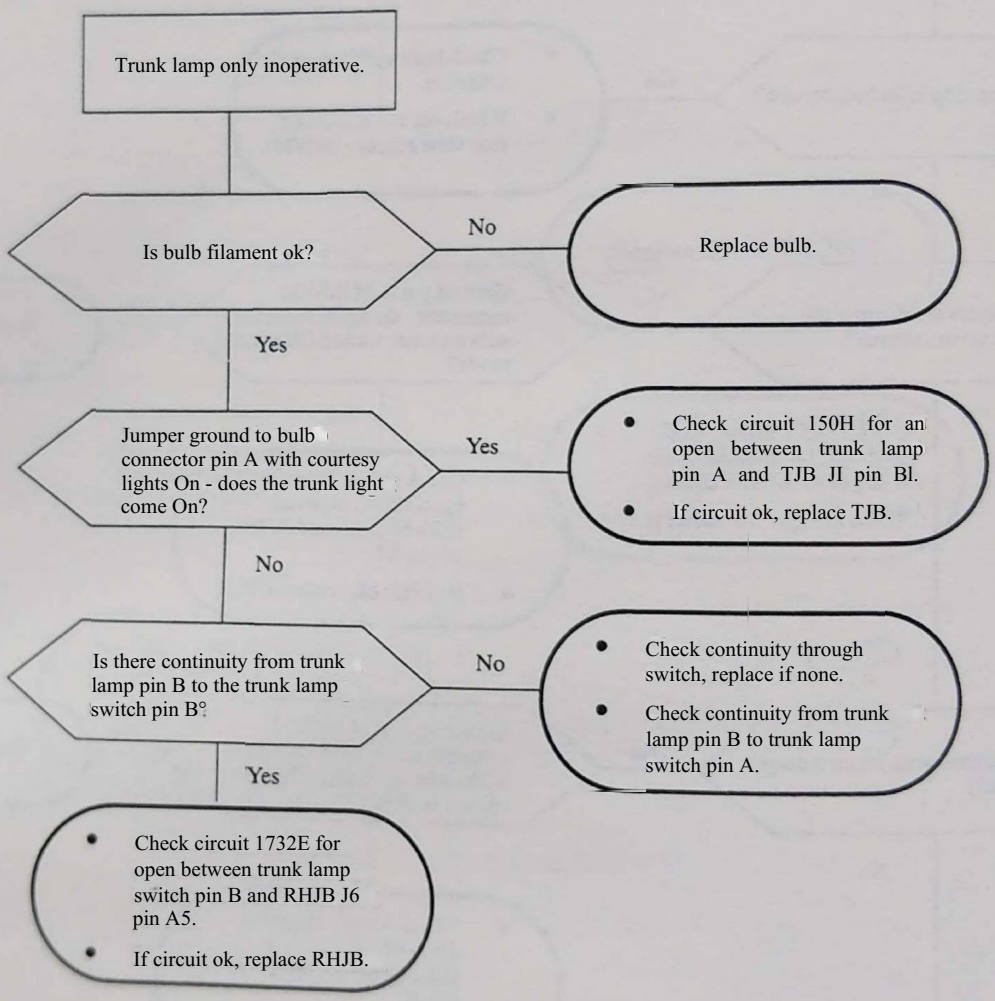
Trunk lamp only inoperative.
Is bulb filament ok?
No
Replace bulb.
Yes
Jumper ground to bulb connector pin A with courtesy lights On - does the trunk light come On?
Yes
• Check circuit 150H for an open between trunk lamp pin A and TJB JI pin Bl.
• If circuit ok, replace TJB.
No
Is there continuity from trunk lamp pin B to the trunk lamp switch pin B°
No
• Check continuity through switch, replace if none.
• Check continuity from trunk lamp pin B to trunk lamp switch pin A.
Yes
• Check circuit 1732E for open between trunk lamp switch pin B and RHJB J6 pin A5.
• If circuit ok, replace RHJB.

CamScanner

COURTESY LAMPS DON'T COME ON WITH LEFT DOOR OPEN ONLY (COME ON WITH RIGHT DOOR OPEN)

CHART 4

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap" installation in this manual.)

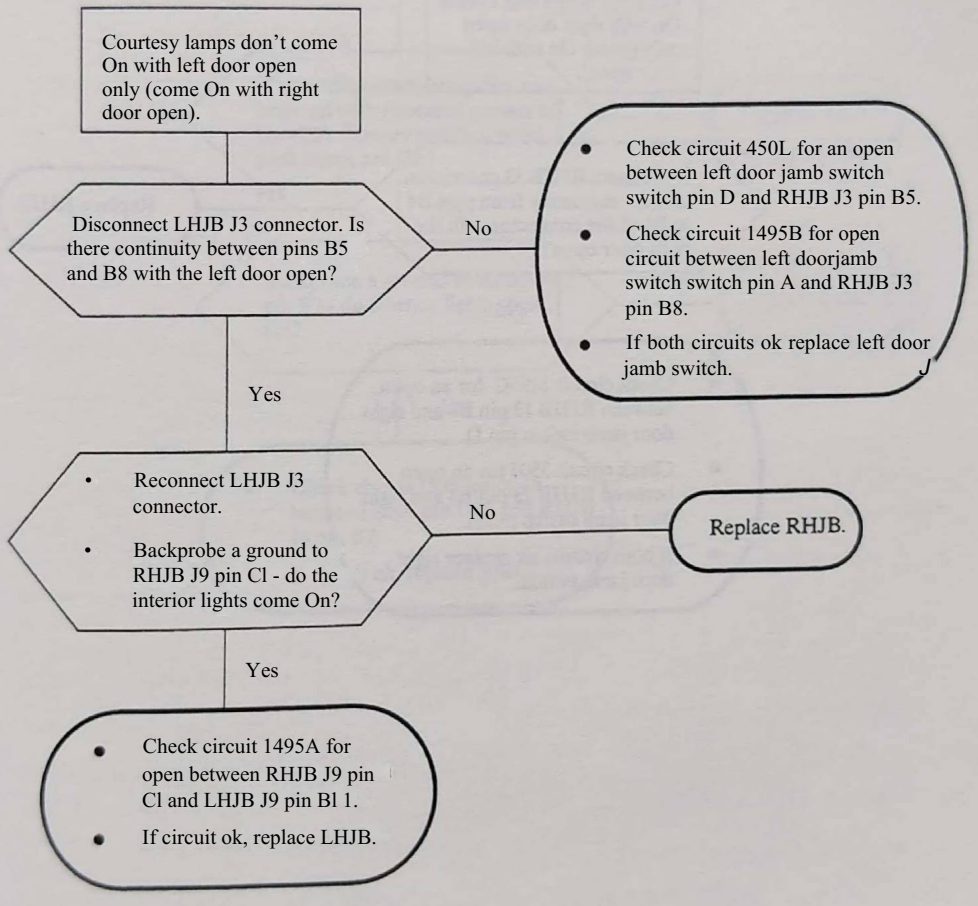
Courtesy lamps don't come On with left door open only (come On with right door open).
Disconnect LHJB J3 connector. Is there continuity between pins B5 and B8 with the left door open?
No
• Check circuit 450L for an open between left door jamb switch switch pin D and RHJB J3 pin B5.
• Check circuit 1495B for open circuit between left doorjamb switch switch pin A and RHJB J3 pin B8.
• If both circuits ok replace left door jamb switch.
Yes
• Reconnect LHJB J3 connector.
• Backprobe a ground to RHJB J9 pin Cl - do the interior lights come On?
No
Replace RHJB.
Yes
• Check circuit 1495A for open between RHJB J9 pin Cl and LHJB J9 pin Bl 1.
• If circuit ok, replace LHJB.

CamScanner

COURTESY LAMPSON. COME ONONLY WITH RIGHT DOOR OPEN
(C ON WITH LEFT DOOR OPEN)

CHARTS

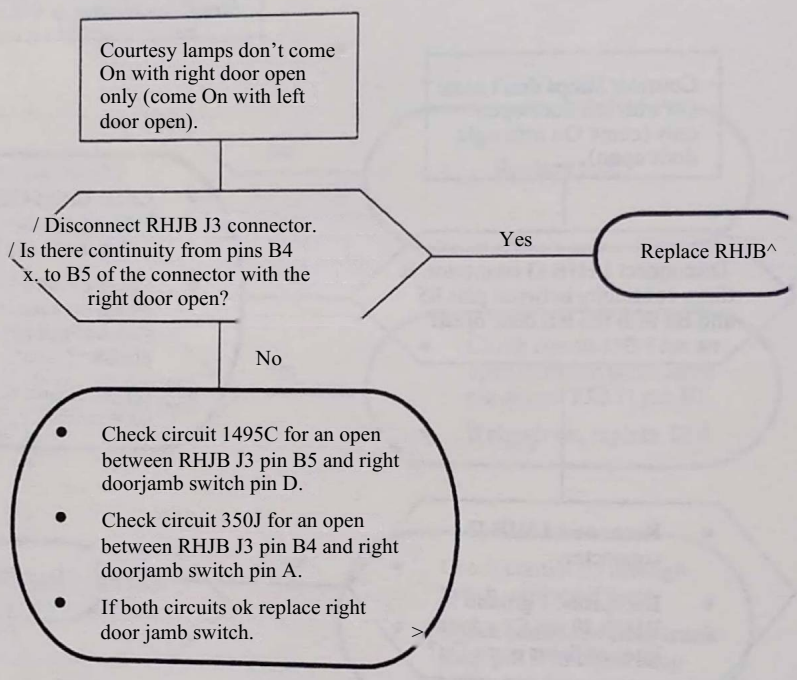
Courtesy lamps don't come On with right door open only (come On with left door open).
/ Disconnect RHJB J3 connector.
/ Is there continuity from pins B4 x. to B5 of the connector with the right door open?
Yes
Replace RHJB^
No
• Check circuit 1495C for an open between RHJB J3 pin B5 and right doorjamb switch pin D.
• Check circuit 350J for an open between RHJB J3 pin B4 and right doorjamb switch pin A.
• If both circuits ok replace right door jamb switch.

CamScanner

COURTESY LAMPS DON'T COME ON FROM RSA DIMMER SWITCH INPUT

CHART 6

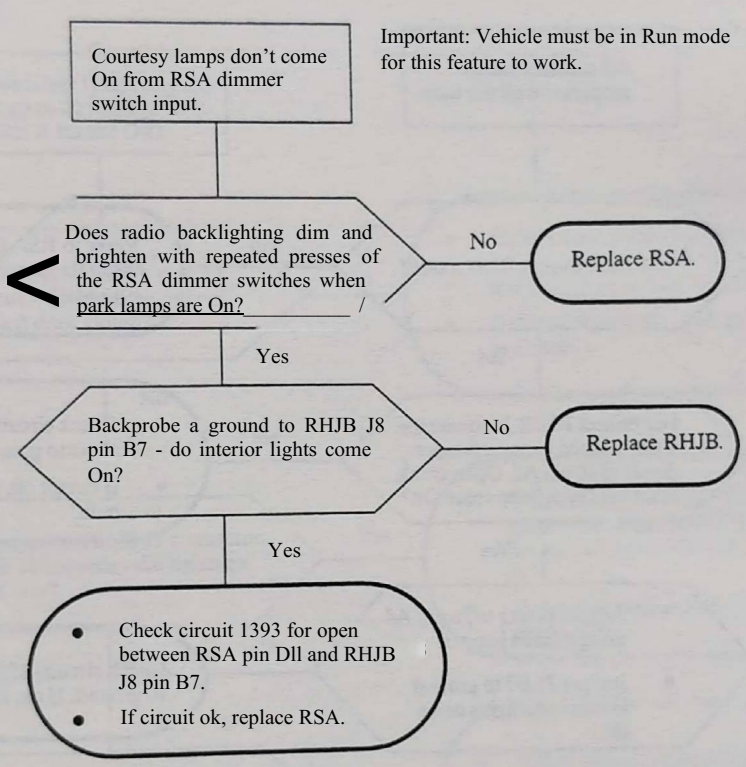
Courtesy lamps don't come On from RSA dimmer switch input.
Important: Vehicle must be in Run mode for this feature to work.
Does radio backlighting dim and brighten with repeated presses of the RSA dimmer switches when park lamps are On?
No
Replace RSA.
Yes
Backprobe a ground to RHJB J8 pin B7 - do interior lights come On?
No
Replace RHJB.
Yes
Check circuit 1393 for open between RSA pin Dll and RHJB J8 pin B7.
If circuit ok, replace RSA.

CamScanner

ALL COURTESY LAMPS INOPERATIVE ALL THE TIME

CHART 7

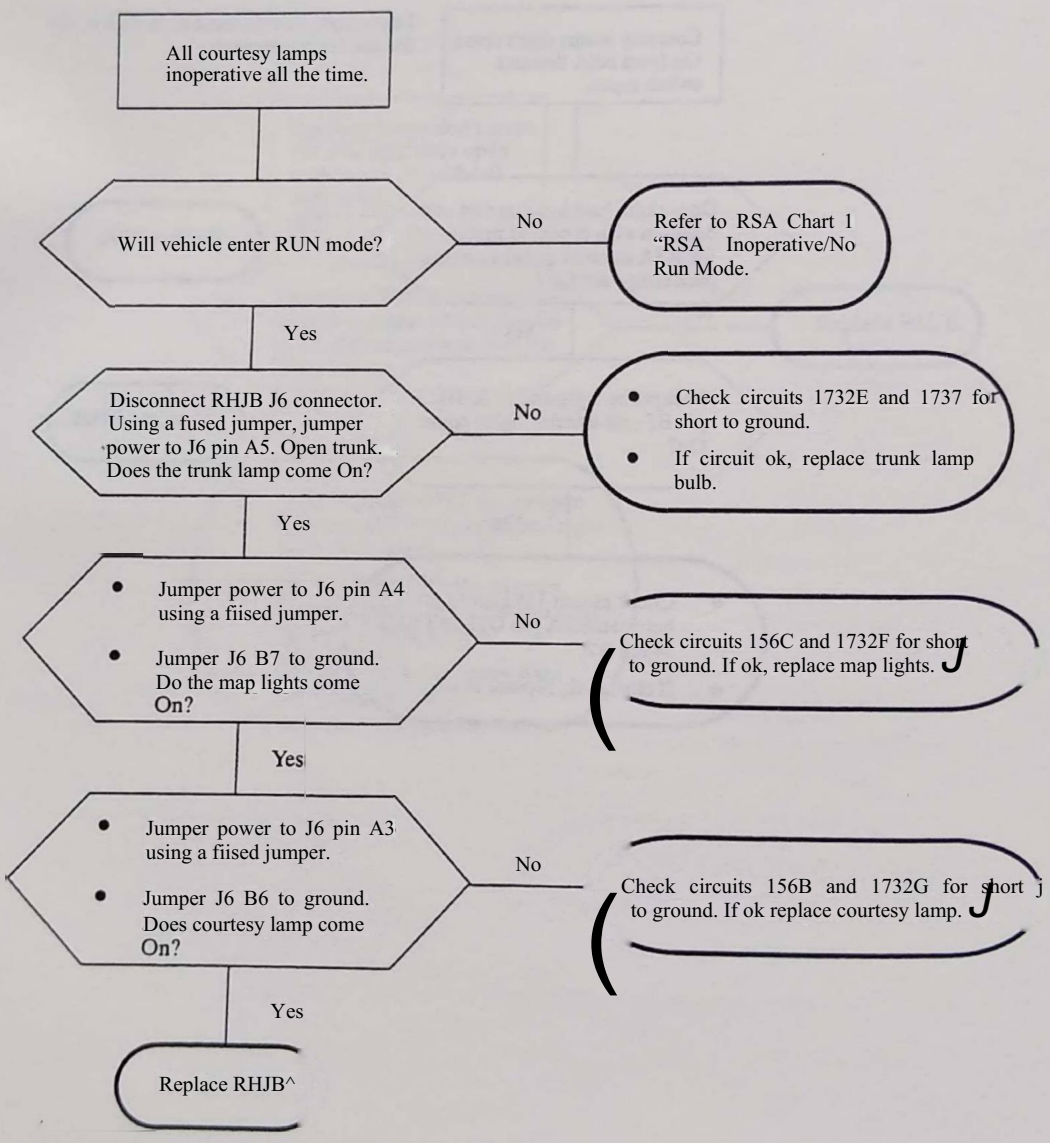
All courtesy lamps inoperative all the time.
Will vehicle enter RUN mode?
No
Refer to RSA Chart 1 "RSA Inoperative/No Run Mode.
Yes
Disconnect RHJB J6 connector. Using a fused jumper, jumper power to J6 pin A5. Open trunk. Does the trunk lamp come On?
No
Check circuits 1732E and 1737 for short to ground.
If circuit ok, replace trunk lamp bulb.
Yes
Jumper power to J6 pin A4 using a fiised jumper.
Jumper J6 B7 to ground. Do the map lights come On?
No
Check circuits 156C and 1732F for short to ground. If ok, replace map lights.
Yes
Jumper power to J6 pin A3 using a fiised jumper.
Jumper J6 B6 to ground. Does courtesy lamp come On?
No
Check circuits 156B and 1732G for short to ground. If ok replace courtesy lamp.
Yes
Replace RHJB^

CamScanner

ALL COURTESY LAMPS STAY ON (FOR UP TO 20 MINUTES AFTER VEHICLE IS TURNED OFF)

CHART 8

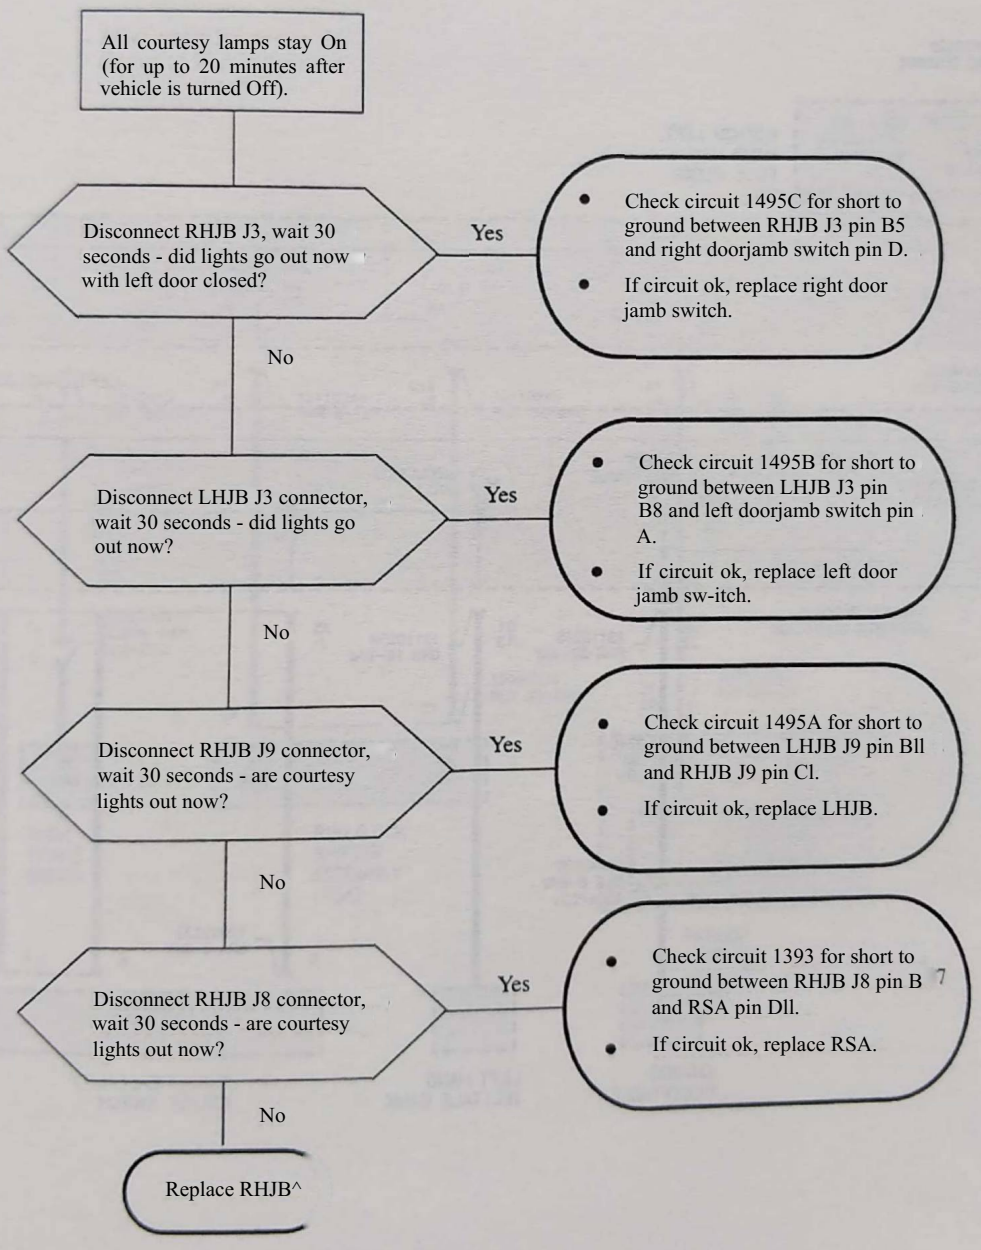
All courtesy lamps stay On (for up to 20 minutes after vehicle is turned Off).
Disconnect RHJB J3, wait 30 seconds - did lights go out now with left door closed?
Yes
Check circuit 1495C for short to ground between RHJB J3 pin B5 and right doorjamb switch pin D.
If circuit ok, replace right door jamb switch.
No
Disconnect LHJB J3 connector, wait 30 seconds - did lights go out now?
Yes
Check circuit 1495B for short to ground between LHJB J3 pin B8 and left doorjamb switch pin A.
If circuit ok, replace left door jamb sw-itch.
No
Disconnect RHJB J9 connector, wait 30 seconds - are courtesy lights out now?
Yes
Check circuit 1495A for short to ground between LHJB J9 pin Bll and RHJB J9 pin Cl.
If circuit ok, replace LHJB.
No
Disconnect RHJB J8 connector, wait 30 seconds - are courtesy lights out now?
Yes
Check circuit 1393 for short to ground between RHJB J8 pin B and RSA pin Dll.
If circuit ok, replace RSA.
No
Replace RHJB^

CamScanner

JUNCTION BLOCK DETAILS

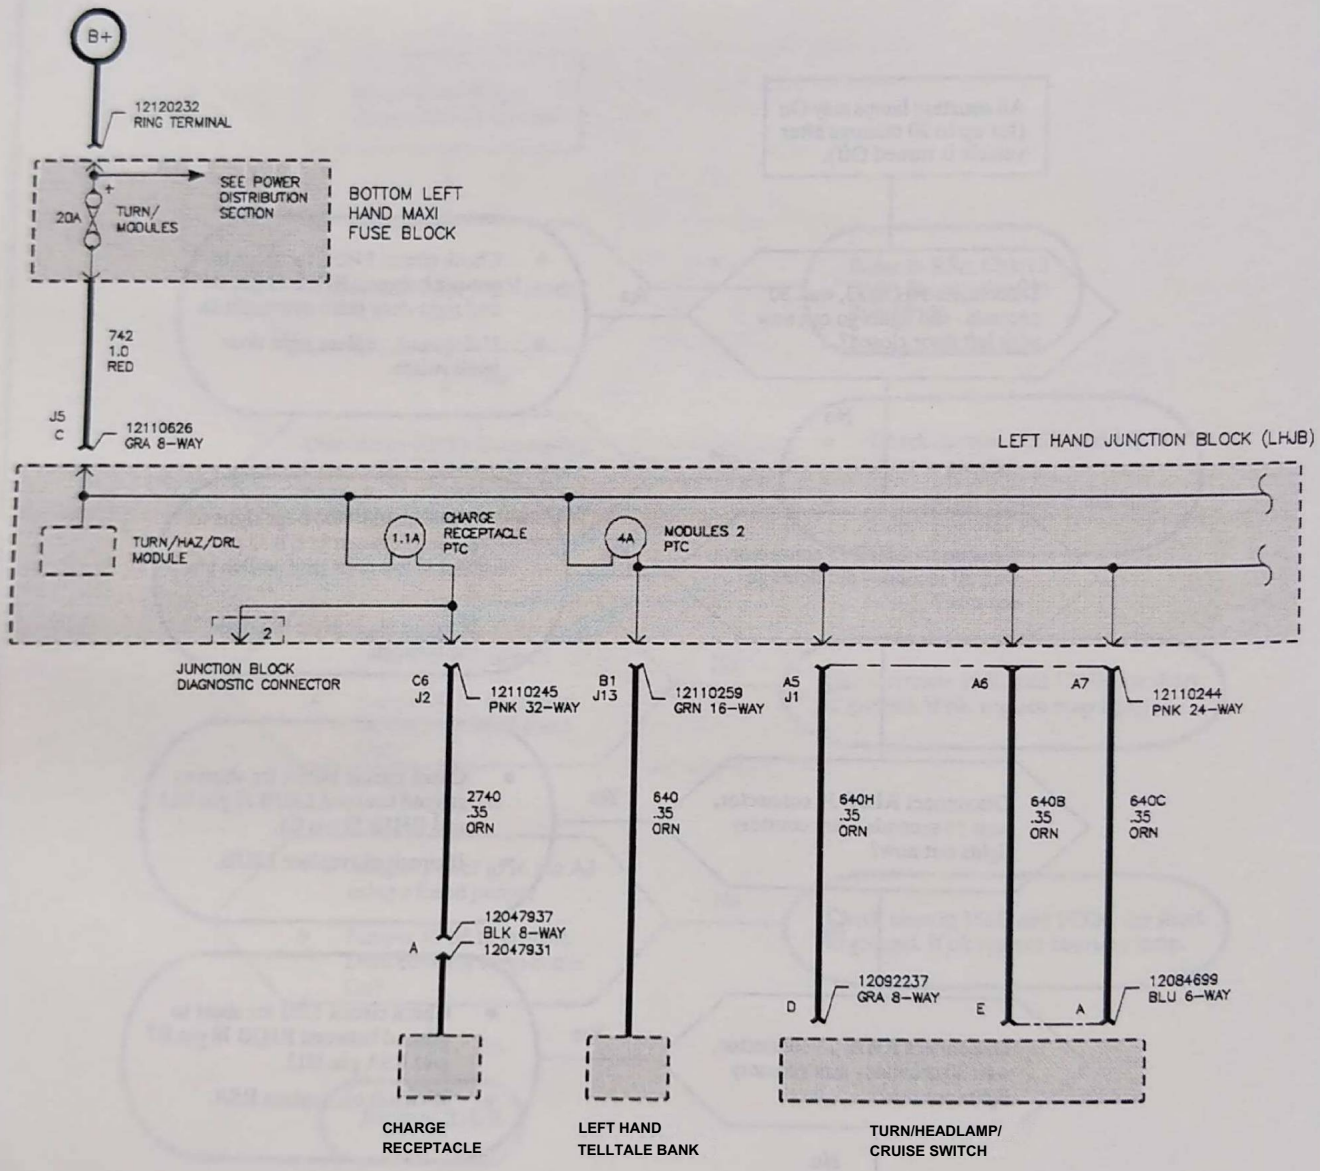

PSMELC68150A*

CamScanner

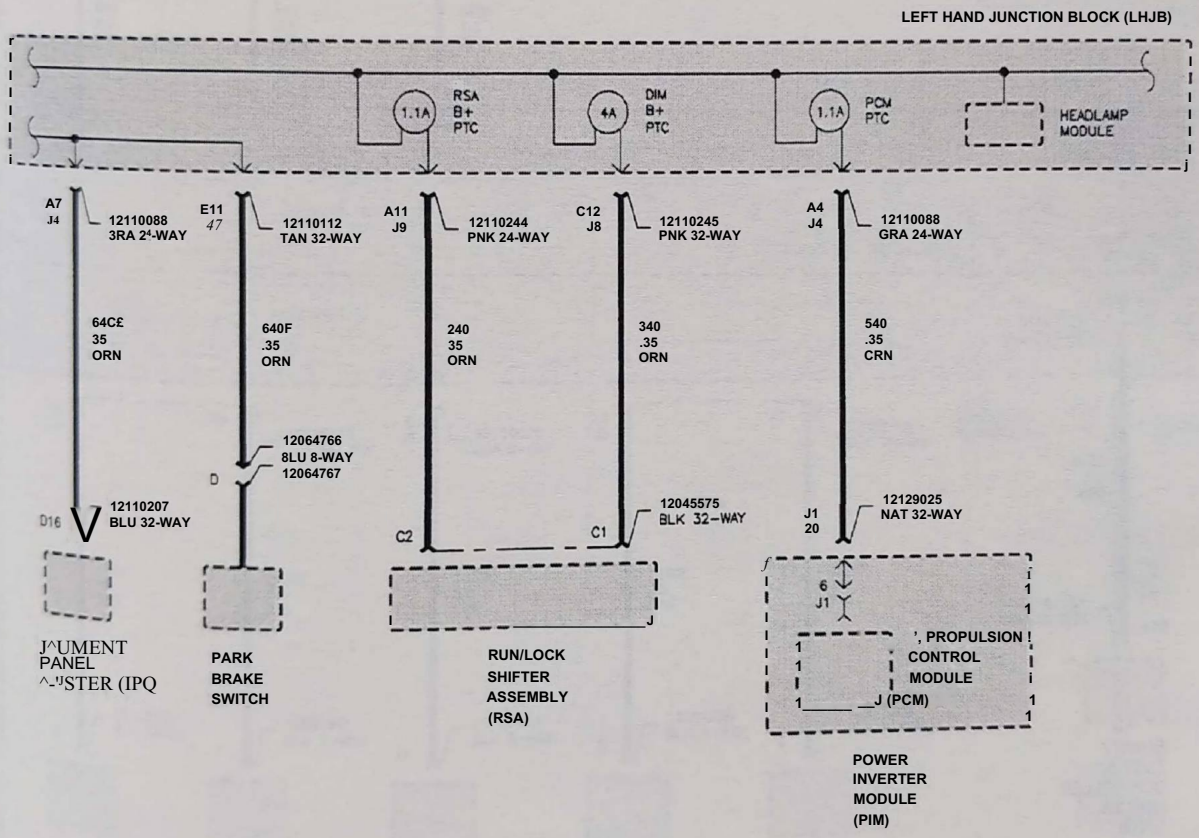

PSMELC68151AA

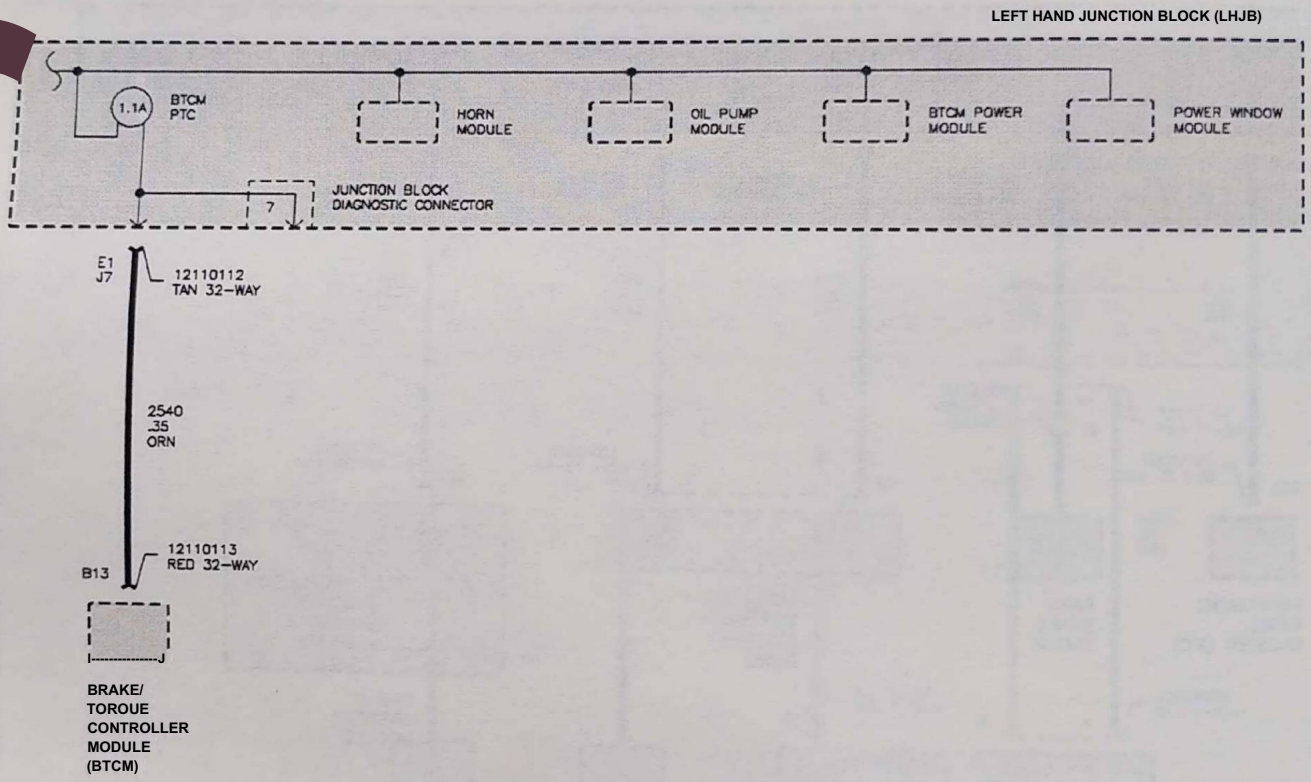

PSMELC68152AA

CamScanner

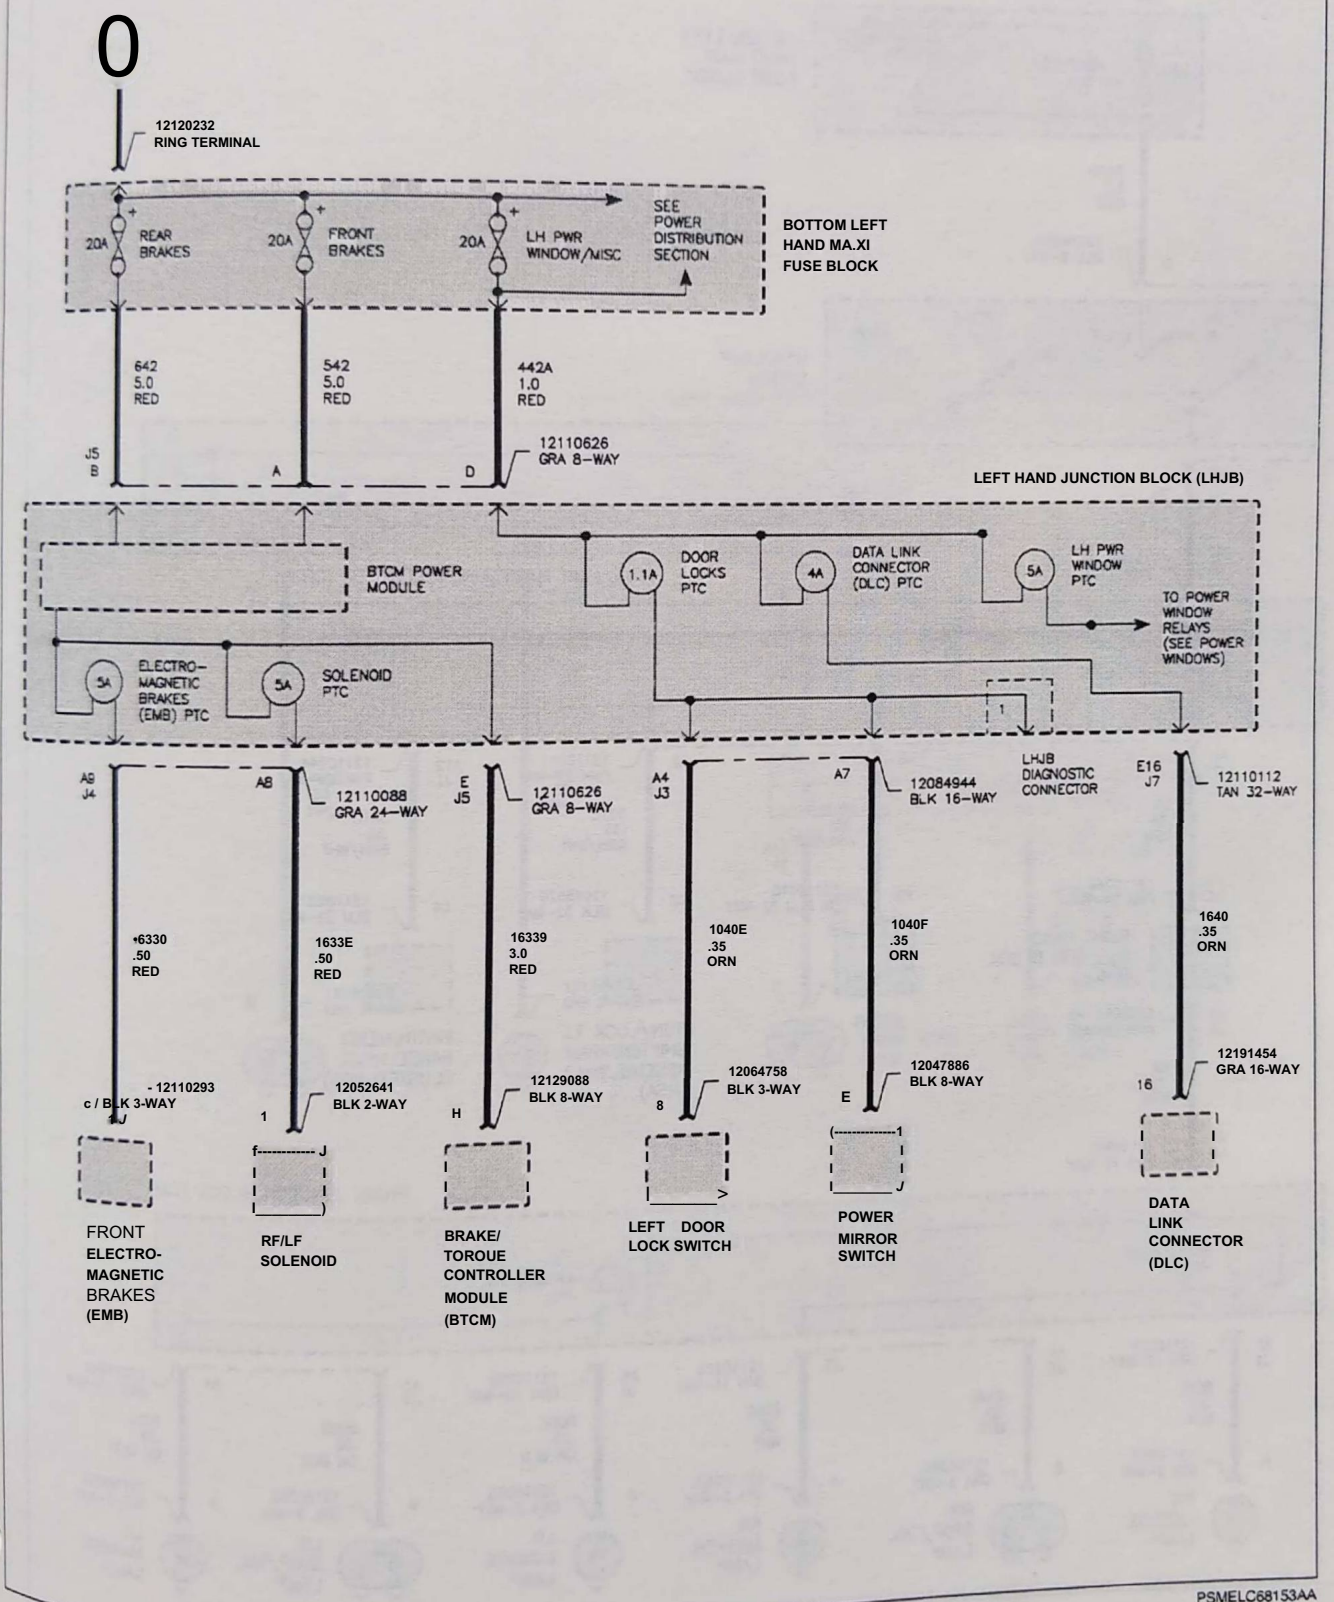

PSMELC68153AA

CamScanner

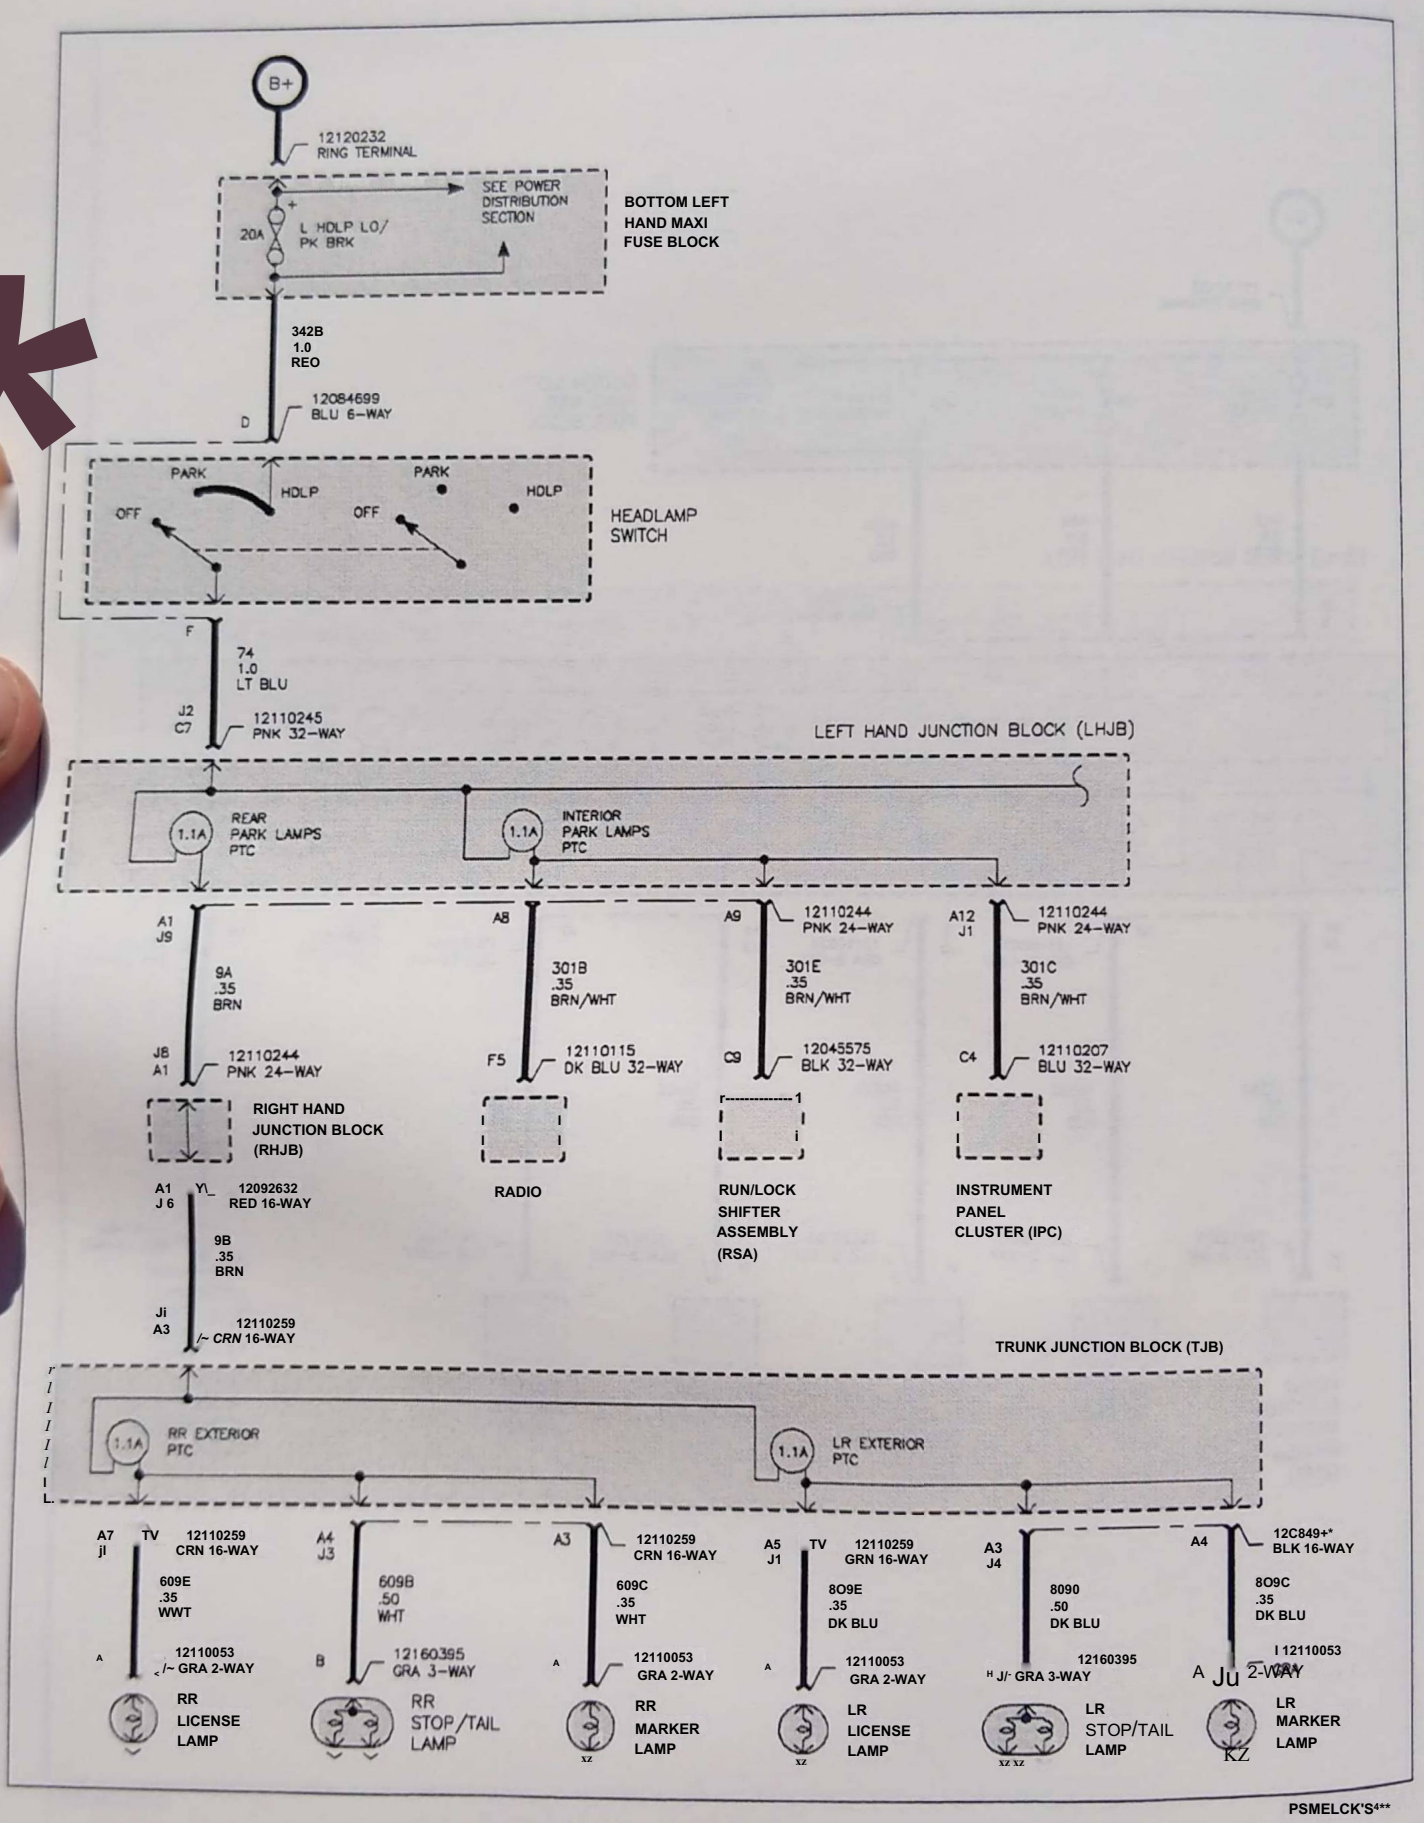
B+
12120232
RING TERMINAL
SEE POWER DISTRIBUTION SECTION
20A
L HDLP LO/ PK BRK
BOTTOM LEFT HAND MAXI FUSE BLOCK
342B
1.0
REO
D
12084699
BLU 6-WAY
PARK
HDLP
OFF
PARK
HDLP
OFF
HEADLAMP SWITCH
F
74
1.0
LT BLU
J2
C7
12110245
PNK 32-WAY
LEFT HAND JUNCTION BLOCK (LHJB)
1.1A
REAR PARK LAMPS PTC
1.1A
INTERIOR PARK LAMPS PTC
A1
J9
9A
.35
BRN
JB
A1
12110244
PNK 24-WAY
A8
301B
.35
BRN/WHT
F5
12110115
DK BLU 32-WAY
A9
12110244
PNK 24-WAY
301E
.35
BRN/WHT
C9
12045575
BLK 32-WAY
A12
J1
12110244
PNK 24-WAY
301C
.35
BRN/WHT
C4
12110207
BLU 32-WAY
RIGHT HAND JUNCTION BLOCK (RHJB)
RADIO
RUN/LOCK SHIFTER ASSEMBLY (RSA)
INSTRUMENT PANEL CLUSTER (IPC)
A1
J 6
12092632
RED 16-WAY
9B
.35
BRN
Ji
A3
12110259
CRN 16-WAY
TRUNK JUNCTION BLOCK (TJB)
1.1A
RR EXTERIOR PTC
1.1A
LR EXTERIOR PTC
A7
jl
TV
12110259
CRN 16-WAY
609E
.35
WWT
12110053
GRA 2-WAY
RR LICENSE LAMP
A4
J3
609B
.50
WHT
12160395
GRA 3-WAY
RR STOP/TAIL LAMP
A3
12110259
CRN 16-WAY
609C
.35
WHT
12110053
GRA 2-WAY
RR MARKER LAMP
A5
J1
TV
12110259
GRN 16-WAY
8O9E
.35
DK BLU
12110053
GRA 2-WAY
LR LICENSE LAMP
A3
J4
8090
.50
DK BLU
12160395
GRA 3-WAY
LR STOP/TAIL LAMP
A4
12C849+*
BLK 16-WAY
8O9C
.35
DK BLU
12110053
GRA 2-WAY
LR MARKER LAMP
PSMELCK'S4**

CamScanner

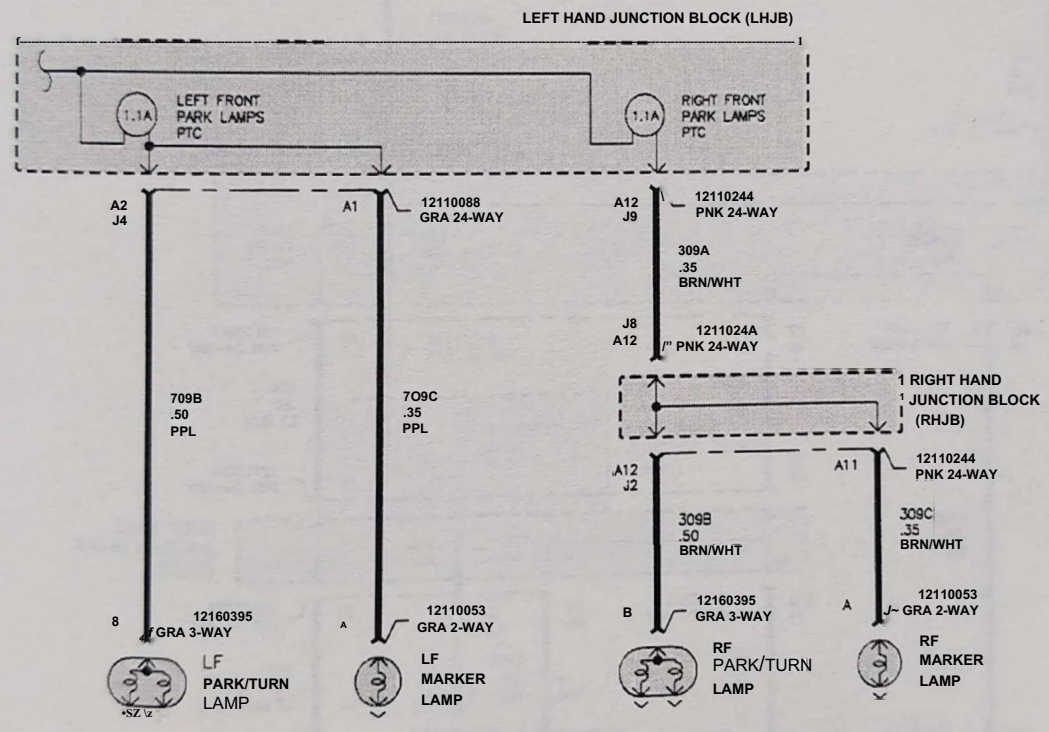

PSMELC68155AA

CamScanner

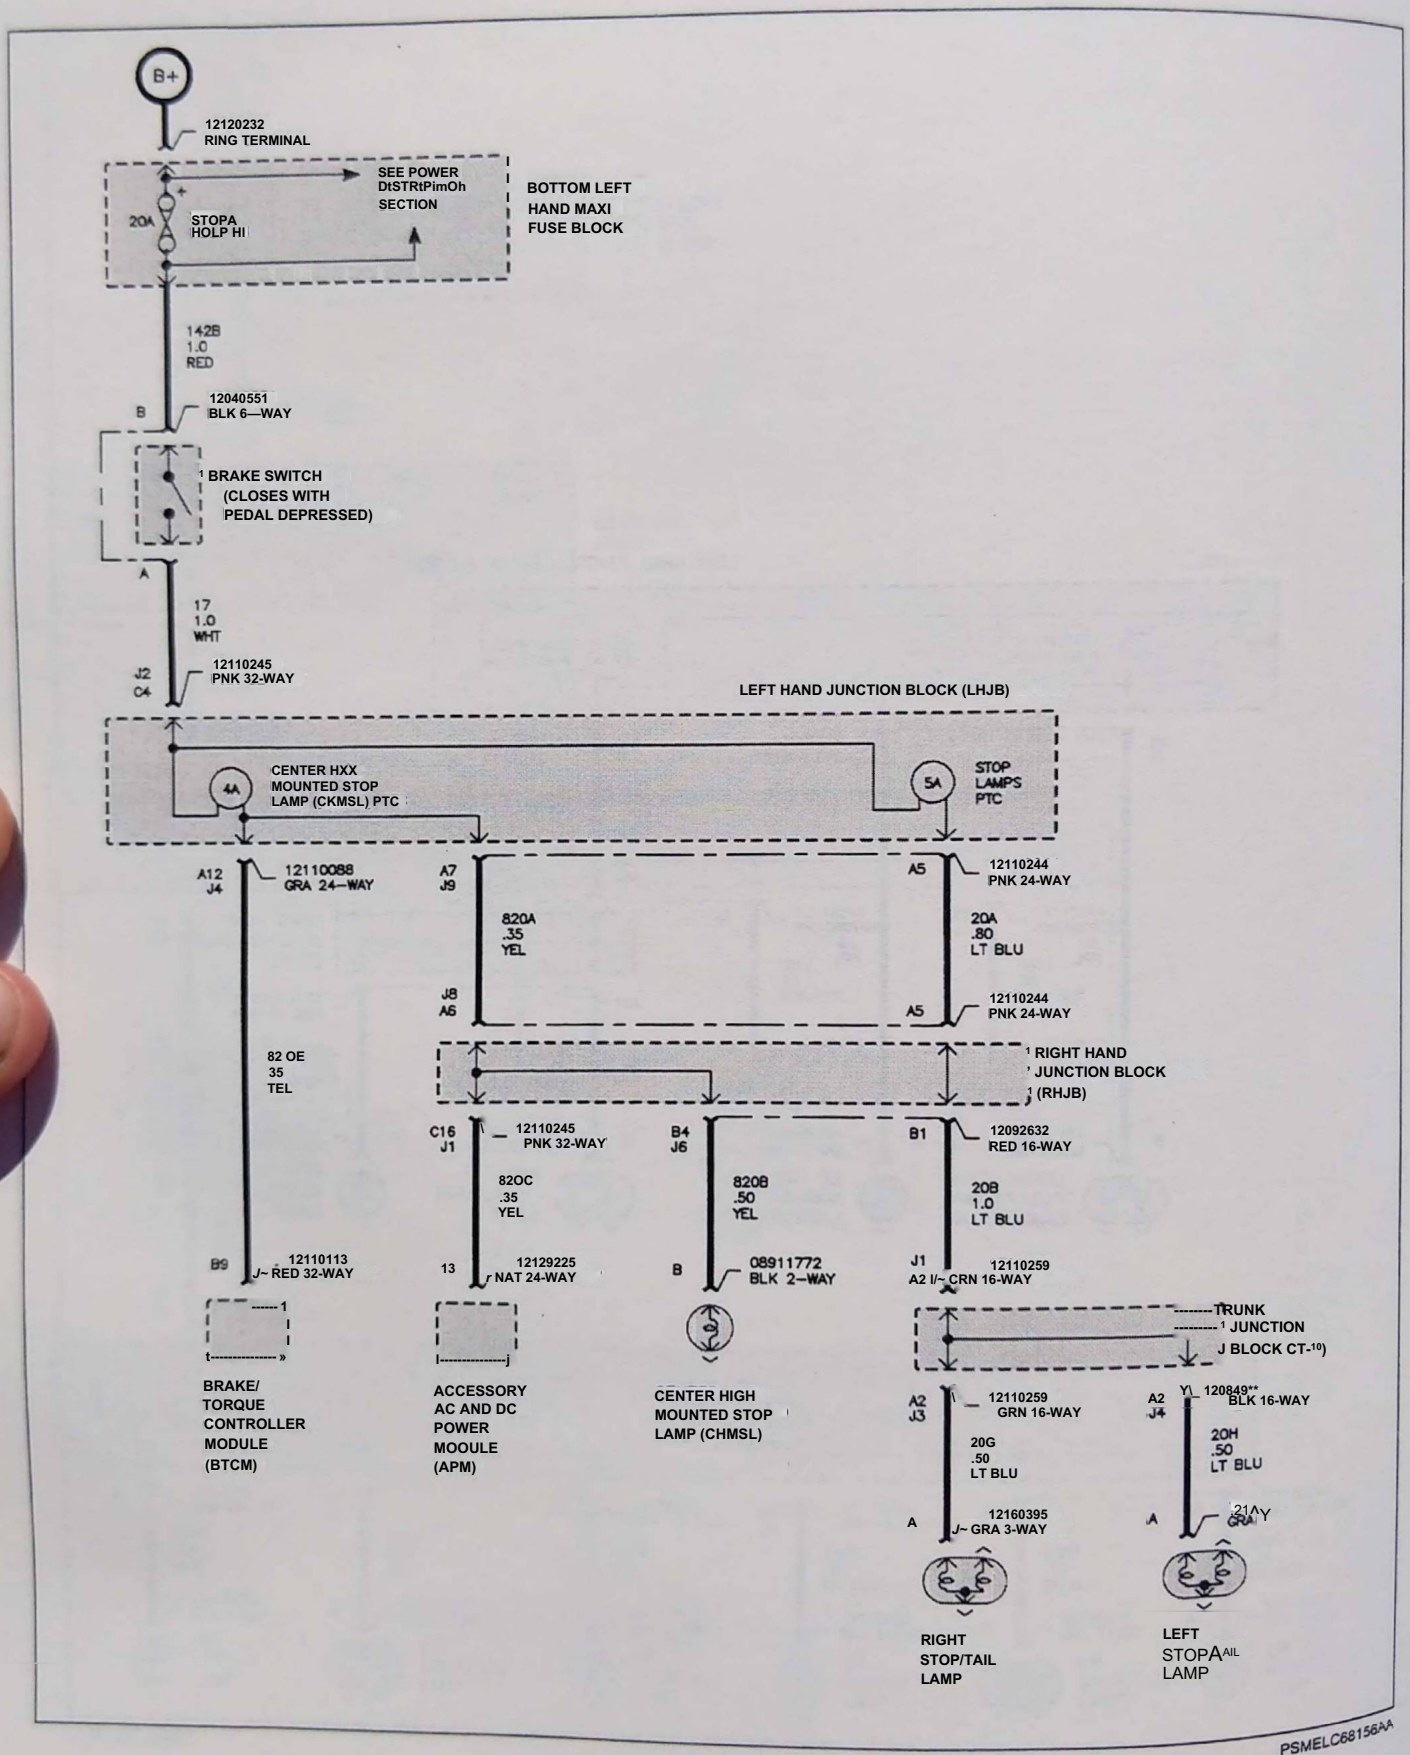
B+
12120232
RING TERMINAL
SEE POWER DtSTRtPimOh SECTION
BOTTOM LEFT HAND MAXI FUSE BLOCK
20A
STOPA HOLP HI
142B 1.0 RED
B
12040551 BLK 6—WAY
BRAKE SWITCH (CLOSES WITH PEDAL DEPRESSED)
A
17 1.0 WHT
J2 C4
12110245 PNK 32-WAY
LEFT HAND JUNCTION BLOCK (LHJB)
4A
CENTER HXX MOUNTED STOP LAMP (CKMSL) PTC
5A
STOP LAMPS PTC
A12 J4
12110088 GRA 24—WAY
A7 J9
820A .35 YEL
A5
12110244 PNK 24-WAY
20A .80 LT BLU
J8 A6
A5
12110244 PNK 24-WAY
RIGHT HAND JUNCTION BLOCK (RHJB)
82 OE 35 TEL
C16 J1
12110245 PNK 32-WAY
82OC .35 YEL
B4 J6
820B .50 YEL
B1
12092632 RED 16-WAY
20B 1.0 LT BLU
B9
12110113 J~ RED 32-WAY
13
12129225 NAT 24-WAY
B
08911772 BLK 2—WAY
J1
A2 I/~ CRN 16-WAY
12110259
TRUNK JUNCTION J BLOCK CT-10)
BRAKE/ TORQUE CONTROLLER MODULE (BTCM)
ACCESSORY AC AND DC POWER MOOULE (APM)
CENTER HIGH MOUNTED STOP LAMP (CHMSL)
A2 J3
12110259 GRN 16-WAY
20G .50 LT BLU
A
12160395 J~ GRA 3-WAY
A2 J4
120849** BLK 16-WAY
20H .50 LT BLU
21AY GRA
RIGHT STOP/TAIL LAMP
LEFT STOPAAIL LAMP
PSMELC68156AA

CamScanner

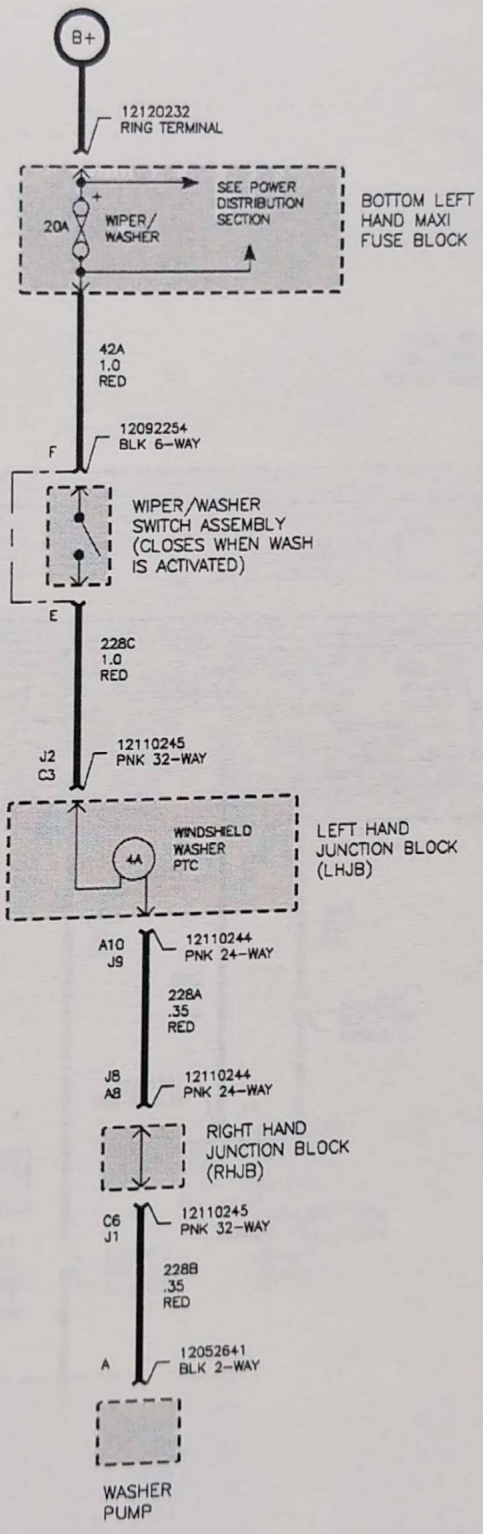

PSMELC68157AA

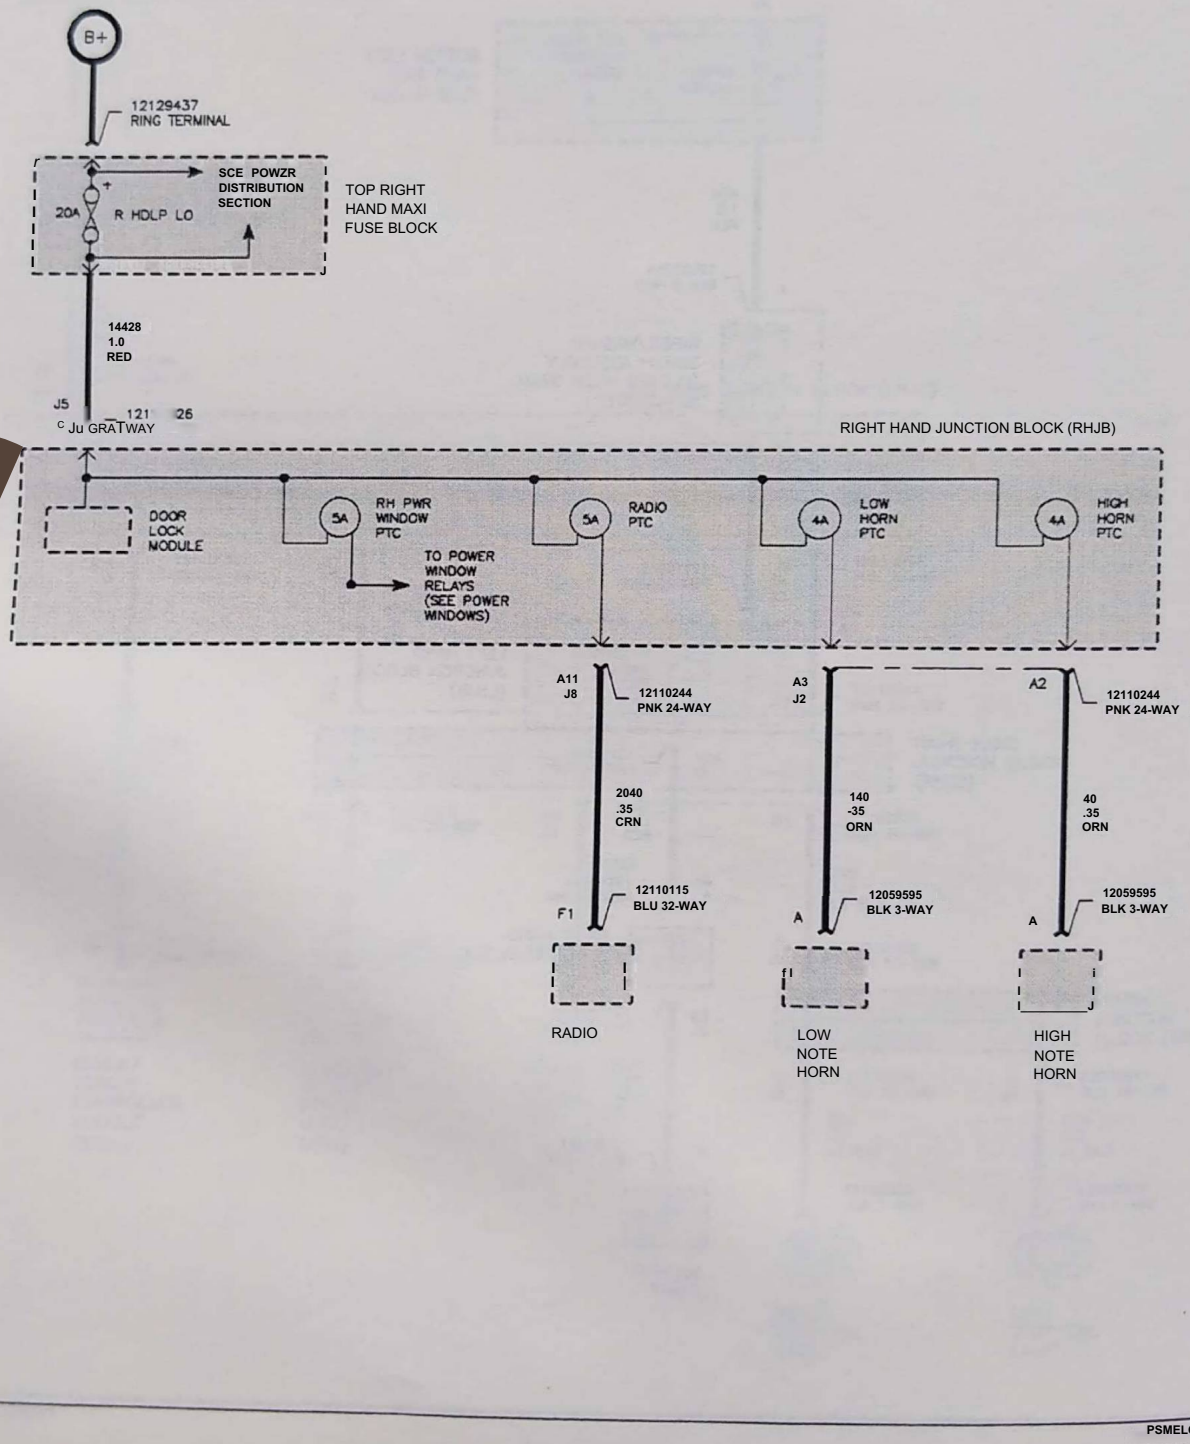
B+
12129437
RING TERMINAL
SCE POWZR
DISTRIBUTION
SECTION
20A
R HDLP LO
TOP RIGHT
HAND MAXI
FUSE BLOCK
14428
1.0
RED
J5
121
26
RIGHT HAND JUNCTION BLOCK (RHJB)
DOOR
LOCK
MODULE
5A
RH PWR
WINDOW
PTC
TO POWER
WINDOW
RELAYS
(SEE POWER
WINDOWS)
5A
RADIO
PTC
4A
LOW
HORN
PTC
4A
HIGH
HORN
PTC
A11
J8
12110244
PNK 24-WAY
2040
.35
CRN
F1
12110115
BLU 32-WAY
RADIO
A3
J2
140
-35
ORN
A
12059595
BLK 3-WAY
LOW
NOTE
HORN
A2
12110244
PNK 24-WAY
40
.35
ORN
A
12059595
BLK 3-WAY
HIGH
NOTE
HORN
PSMELC68158AA

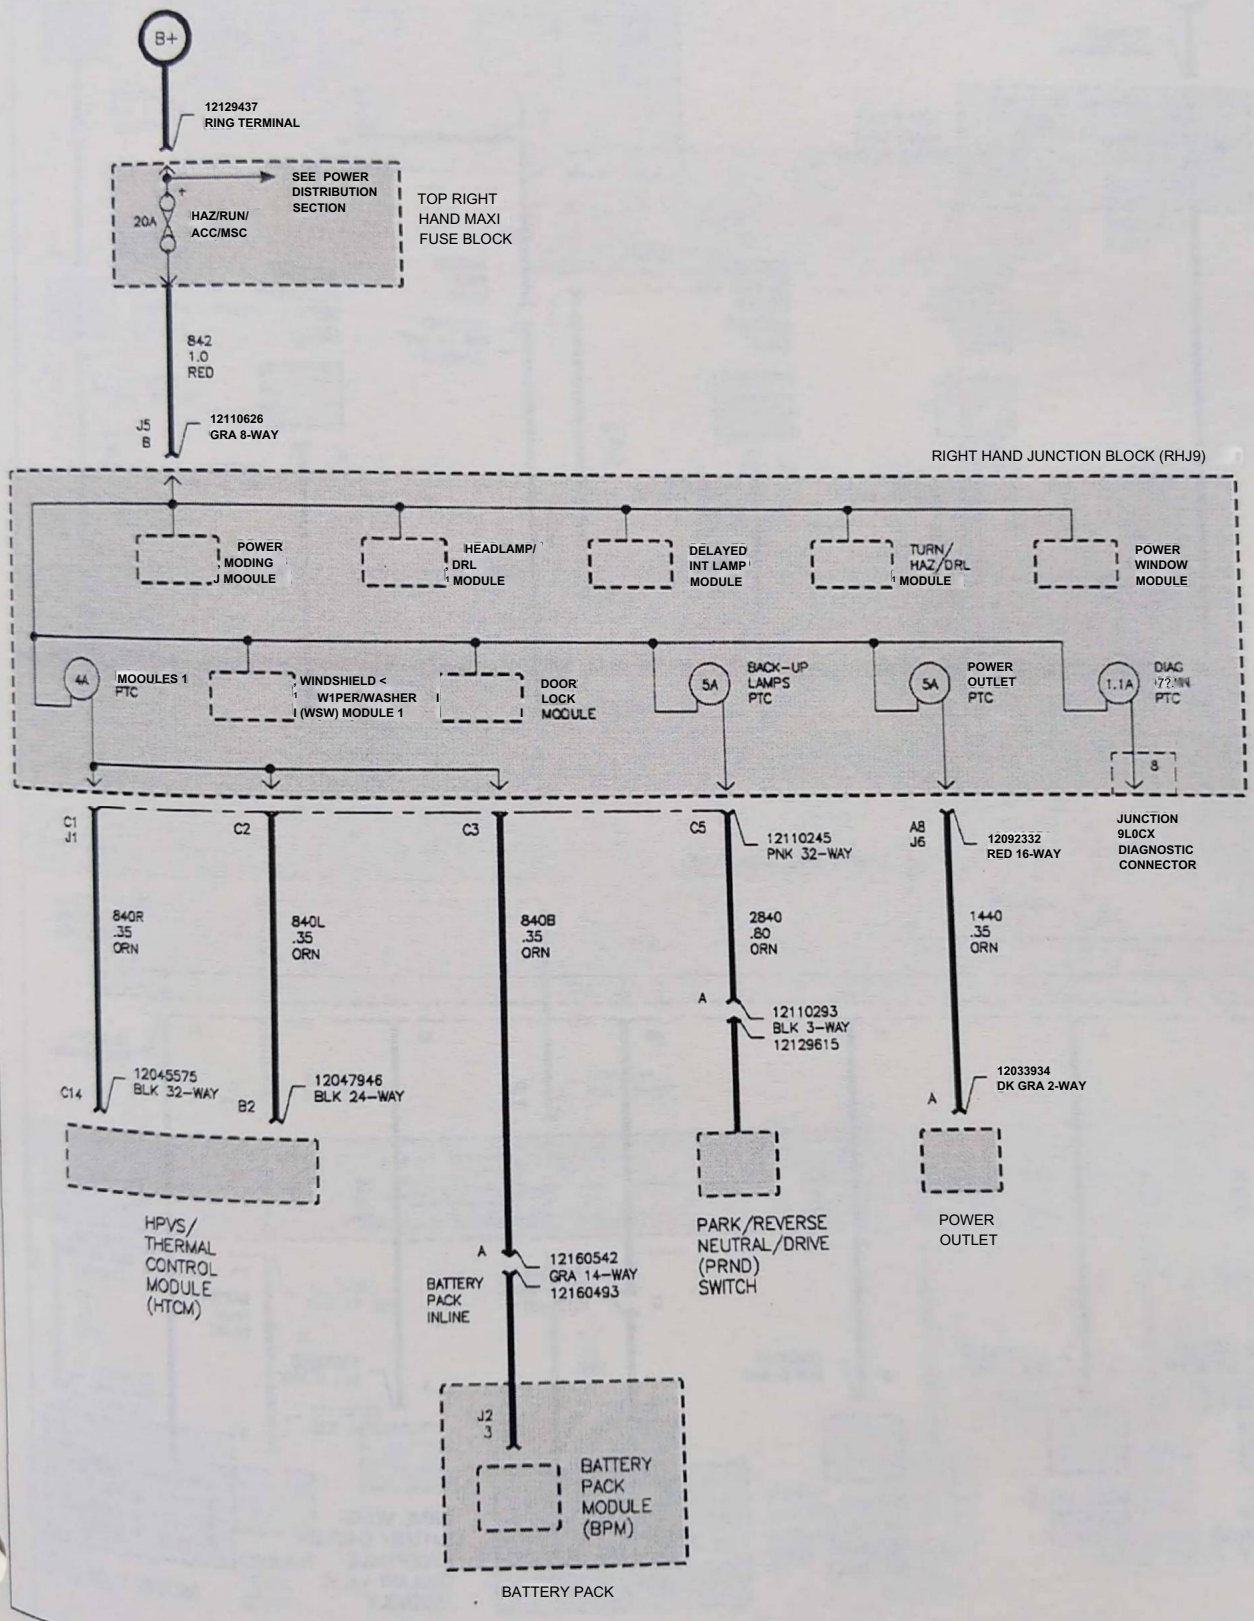
B+
12129437
RING TERMINAL
SEE POWER DISTRIBUTION SECTION
20A
HAZ/RUN/ ACC/MSC
TOP RIGHT HAND MAXI FUSE BLOCK
842
1.0
RED
J5
B
12110626
GRA 8-WAY
RIGHT HAND JUNCTION BLOCK (RHJ9)
POWER MODING J MOOULE
HEADLAMP/ DRL MODULE
DELAYED INT LAMP MODULE
TURN/ HAZ/DRL MODULE
POWER WINDOW MODULE
4A
MOOULES 1 PTC
WINDSHIELD < W1PER/WASHER (WSW) MODULE 1
DOOR LOCK MODULE
5A
BACK-UP LAMPS PTC
5A
POWER OUTLET PTC
1.1A
DIAG PTC
C1
J1
C2
C3
C5
12110245
PNK 32-WAY
A8
J6
12092332
RED 16-WAY
JUNCTION 9L0CX DIAGNOSTIC CONNECTOR
840R
.35
ORN
840L
.35
ORN
840B
.35
ORN
2840
.80
ORN
1440
.35
ORN
A
12110293
BLK 3-WAY
12129615
C14
12045575
BLK 32-WAY
B2
12047946
BLK 24-WAY
A
12033934
DK GRA 2-WAY
HPVS/ THERMAL CONTROL MODULE (HTCM)
PARK/REVERSE NEUTRAL/DRIVE (PRND) SWITCH
POWER OUTLET
A
12160542
GRA 14-WAY
12160493
BATTERY PACK INLINE
J2
3
BATTERY PACK MODULE (BPM)
BATTERY PACK
PSMELC68159AA

CamScanner

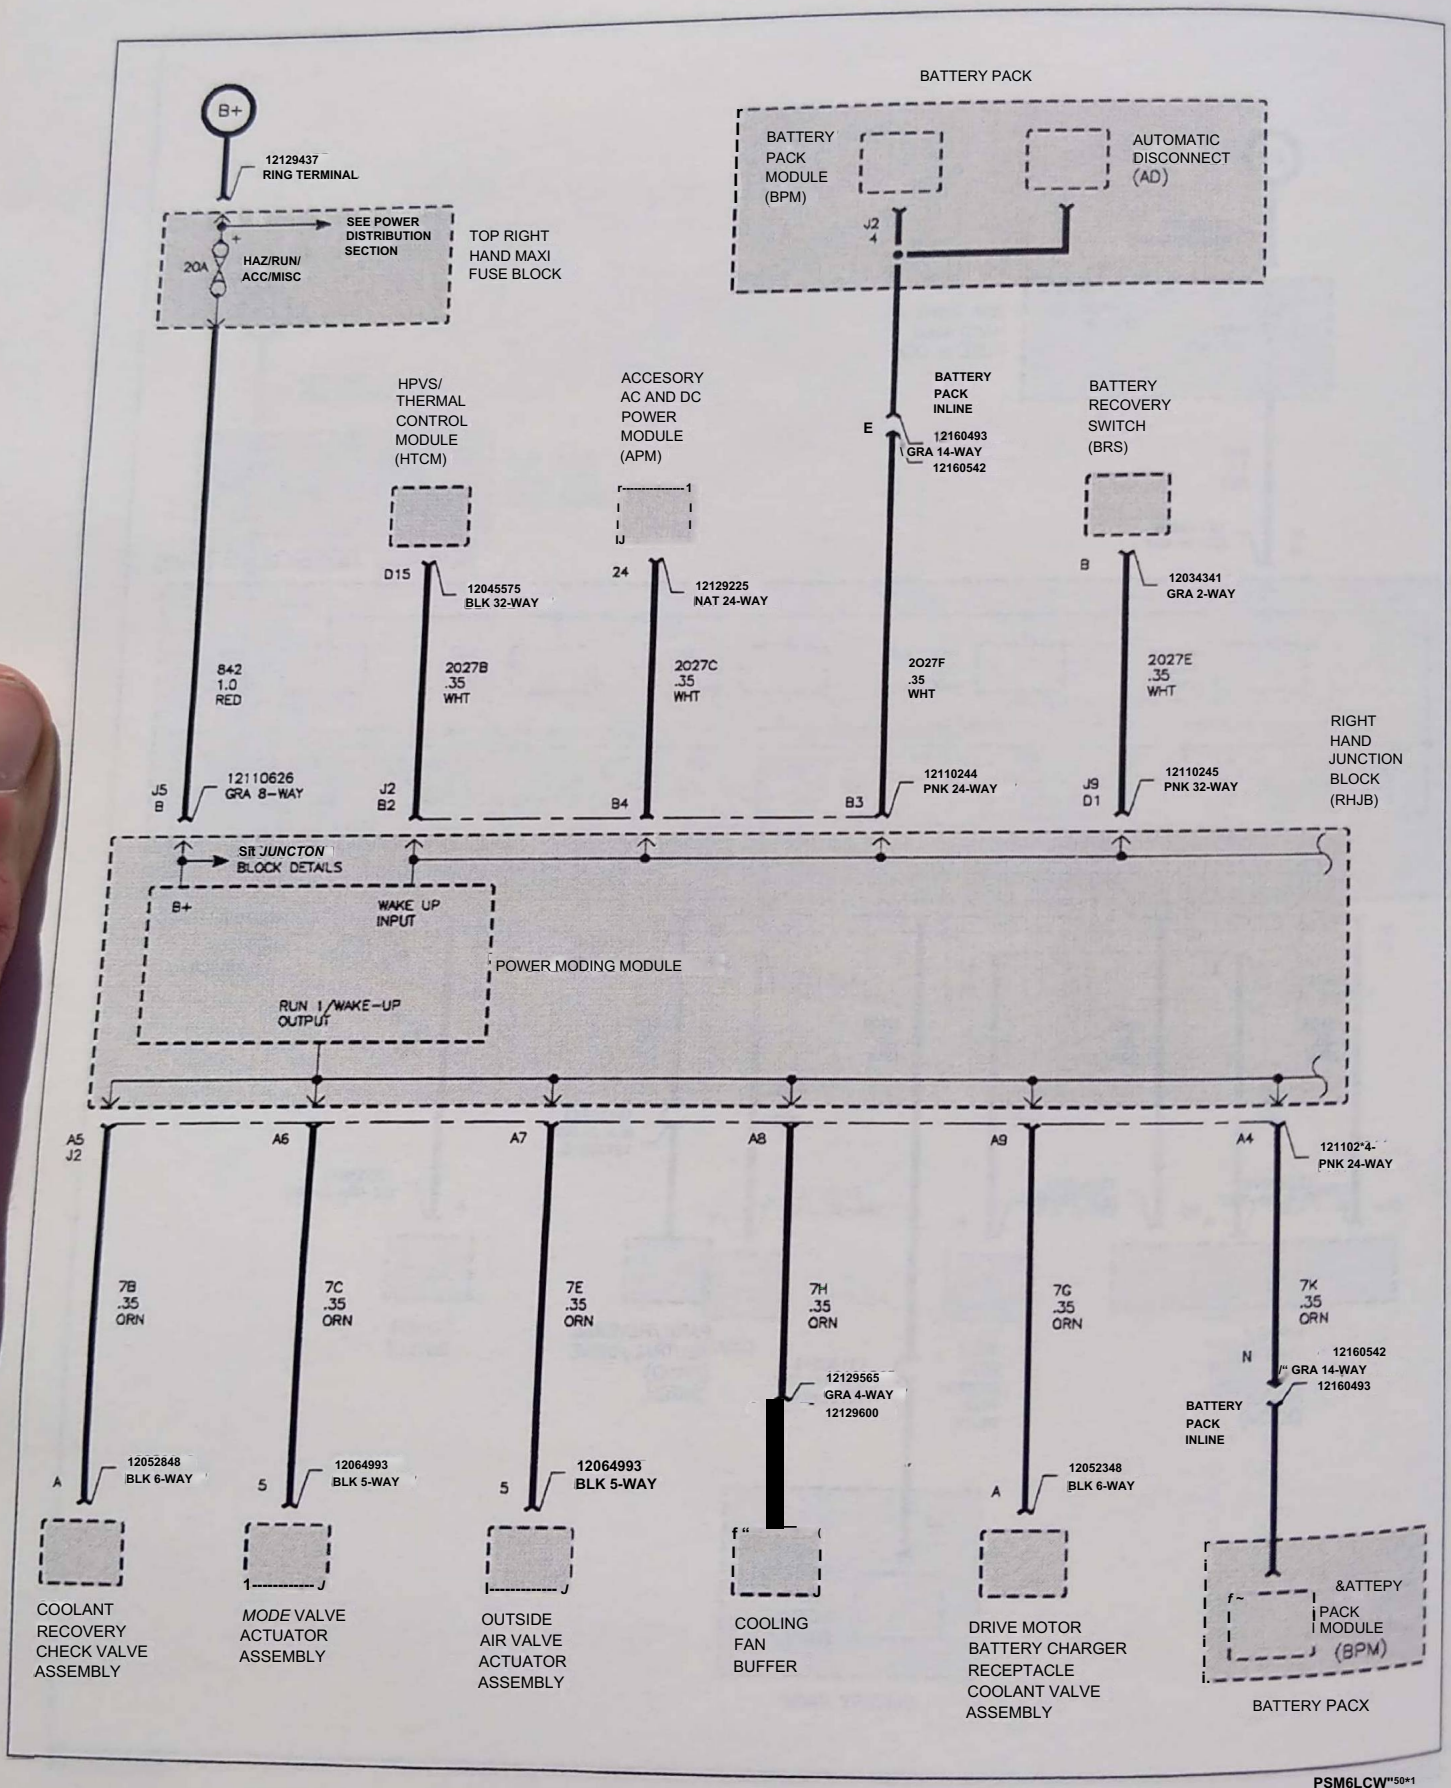
BATTERY PACK
B+
12129437
RING TERMINAL
SEE POWER DISTRIBUTION SECTION
20A
HAZ/RUN/ ACC/MISC
TOP RIGHT HAND MAXI FUSE BLOCK
BATTERY PACK MODULE (BPM)
AUTOMATIC DISCONNECT (AD)
J2
4
HPVS/ THERMAL CONTROL MODULE (HTCM)
ACCESORY AC AND DC POWER MODULE (APM)
BATTERY PACK INLINE
E
12160493
GRA 14-WAY
12160542
BATTERY RECOVERY SWITCH (BRS)
D15
12045575
BLK 32-WAY
24
12129225
NAT 24-WAY
B
12034341
GRA 2-WAY
842
1.0
RED
2027B
.35
WHT
2027C
.35
WHT
2027F
.35
WHT
2027E
.35
WHT
RIGHT HAND JUNCTION BLOCK (RHJB)
J5
B
12110626
GRA 8-WAY
J2
B2
B4
B3
12110244
PNK 24-WAY
J9
D1
12110245
PNK 32-WAY
See JUNCTON BLOCK DETAILS
B+
WAKE UP INPUT
POWER MODING MODULE
RUN / WAKE-UP OUTPUT
A5
J2
A6
A7
A8
A9
A4
12110244-
PNK 24-WAY
7B
.35
ORN
7C
.35
ORN
7E
.35
ORN
7H
.35
ORN
7G
.35
ORN
7K
.35
ORN
N
12160542
GRA 14-WAY
12160493
BATTERY PACK INLINE
12129565
GRA 4-WAY
12129600
A
12052848
BLK 6-WAY
5
12064993
BLK 5-WAY
5
12064993
BLK 5-WAY
A
12052348
BLK 6-WAY
COOLANT RECOVERY CHECK VALVE ASSEMBLY
MODE VALVE ACTUATOR ASSEMBLY
OUTSIDE AIR VALVE ACTUATOR ASSEMBLY
COOLING FAN BUFFER
DRIVE MOTOR BATTERY CHARGER RECEPTACLE COOLANT VALVE ASSEMBLY
&ATTEPY PACK MODULE (BPM)
BATTERY PACX
PSM6LCW"50*1

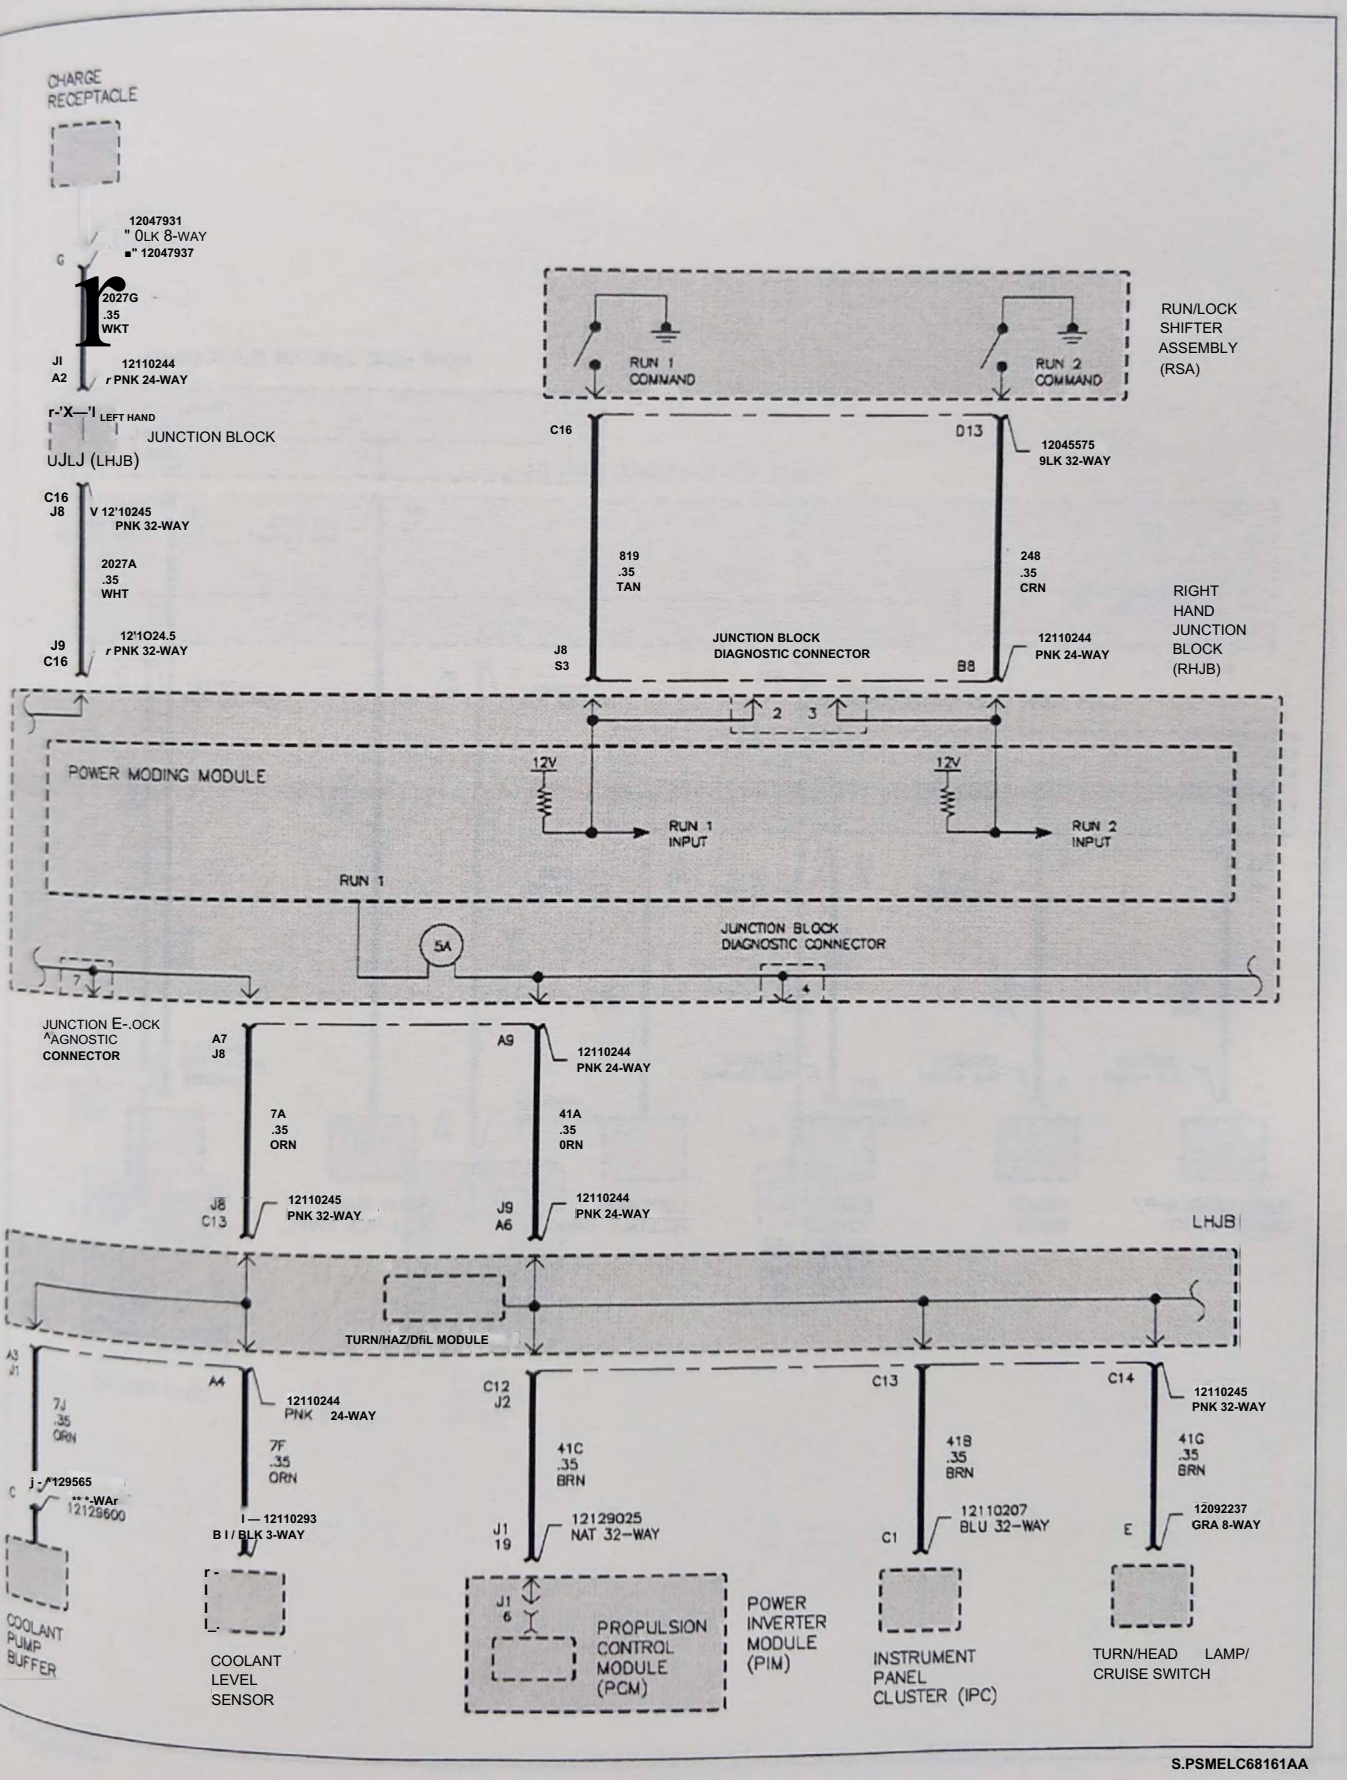

S.PSMELC68161AA

CamScanner

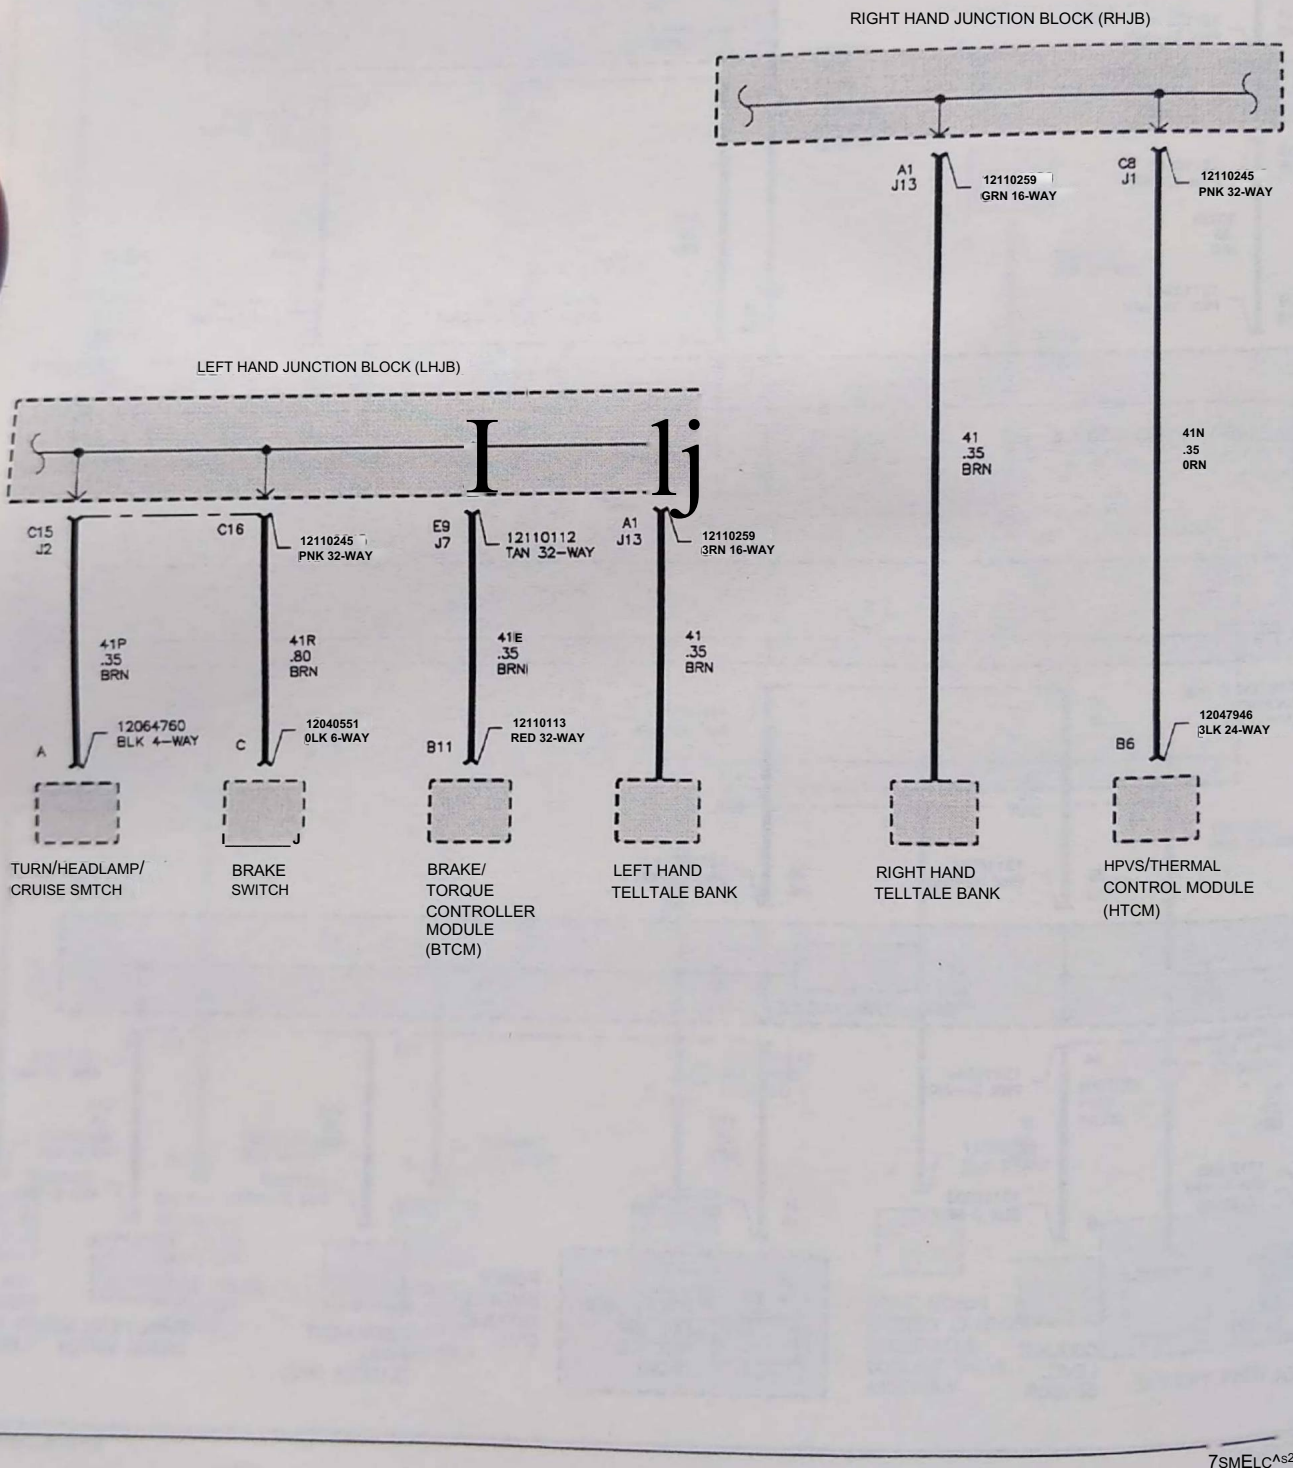

7SMELC^S2AA

CamScanner

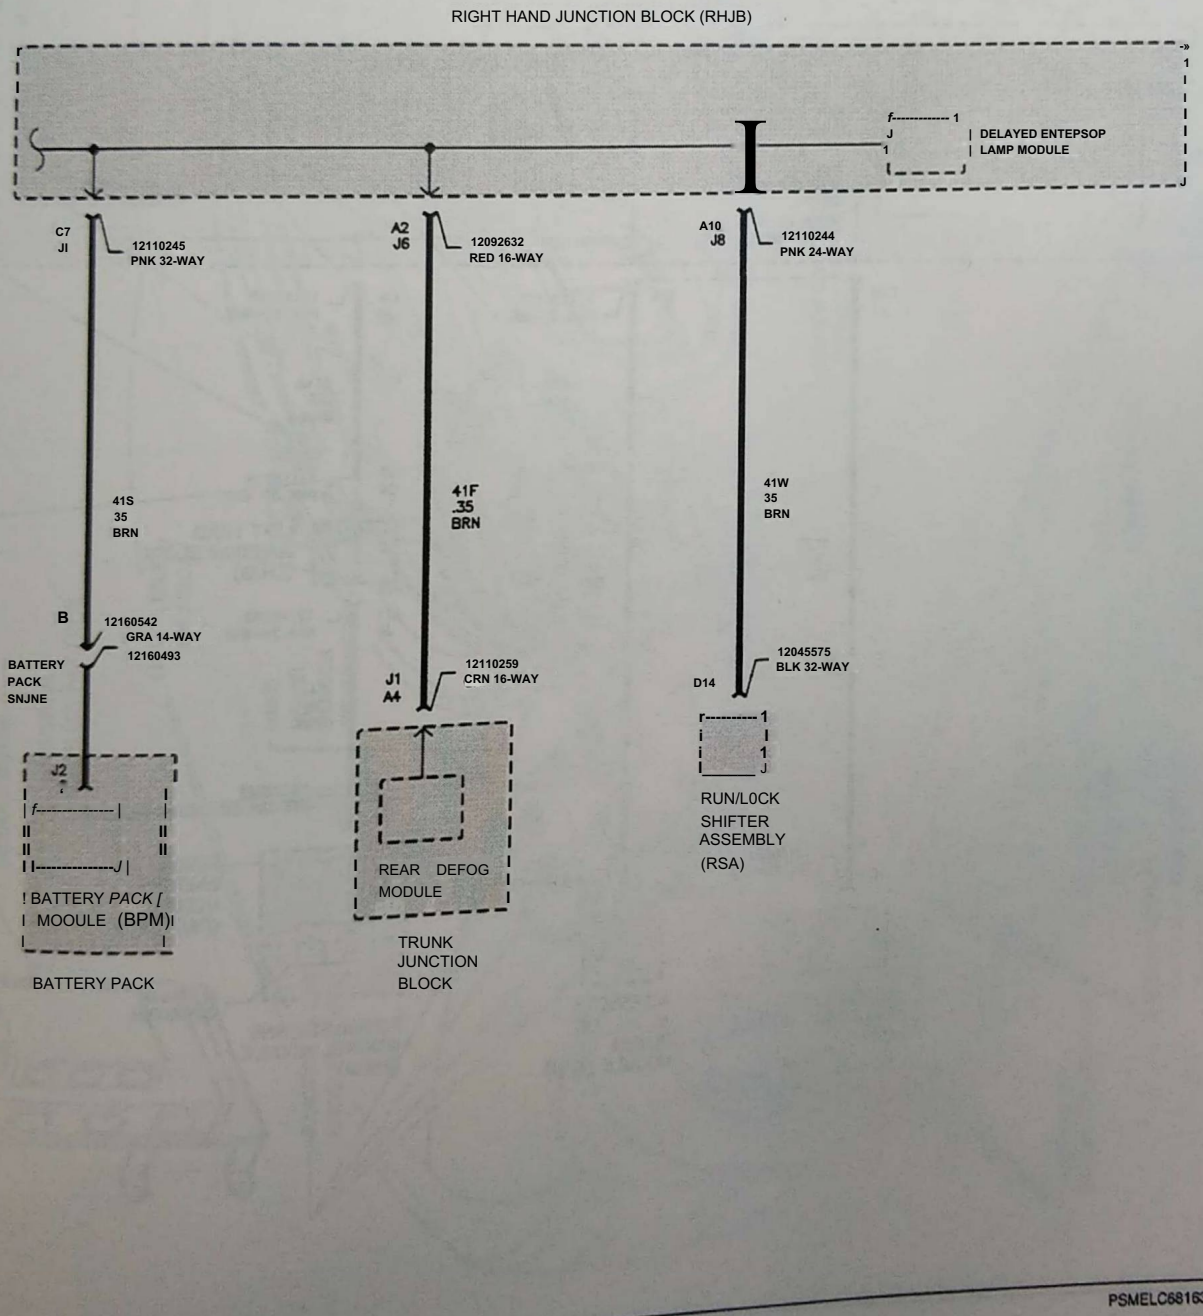
RIGHT HAND JUNCTION BLOCK (RHJB)
DELAYED ENTEPSOP LAMP MODULE
C7 JI
12110245 PNK 32-WAY
A2 J6
12092632 RED 16-WAY
A10 J8
12110244 PNK 24-WAY
41S 35 BRN
41F 35 BRN
41W 35 BRN
B
12160542 GRA 14-WAY
12160493
BATTERY PACK SNJNE
J1 A4
12110259 CRN 16-WAY
D14
12045575 BLK 32-WAY
REAR DEFOG MODULE
RUN/L0CK SHIFTER ASSEMBLY (RSA)
! BATTERY PACK [I MOOULE (BPM)
BATTERY PACK
TRUNK JUNCTION BLOCK
PSMELC68163AA

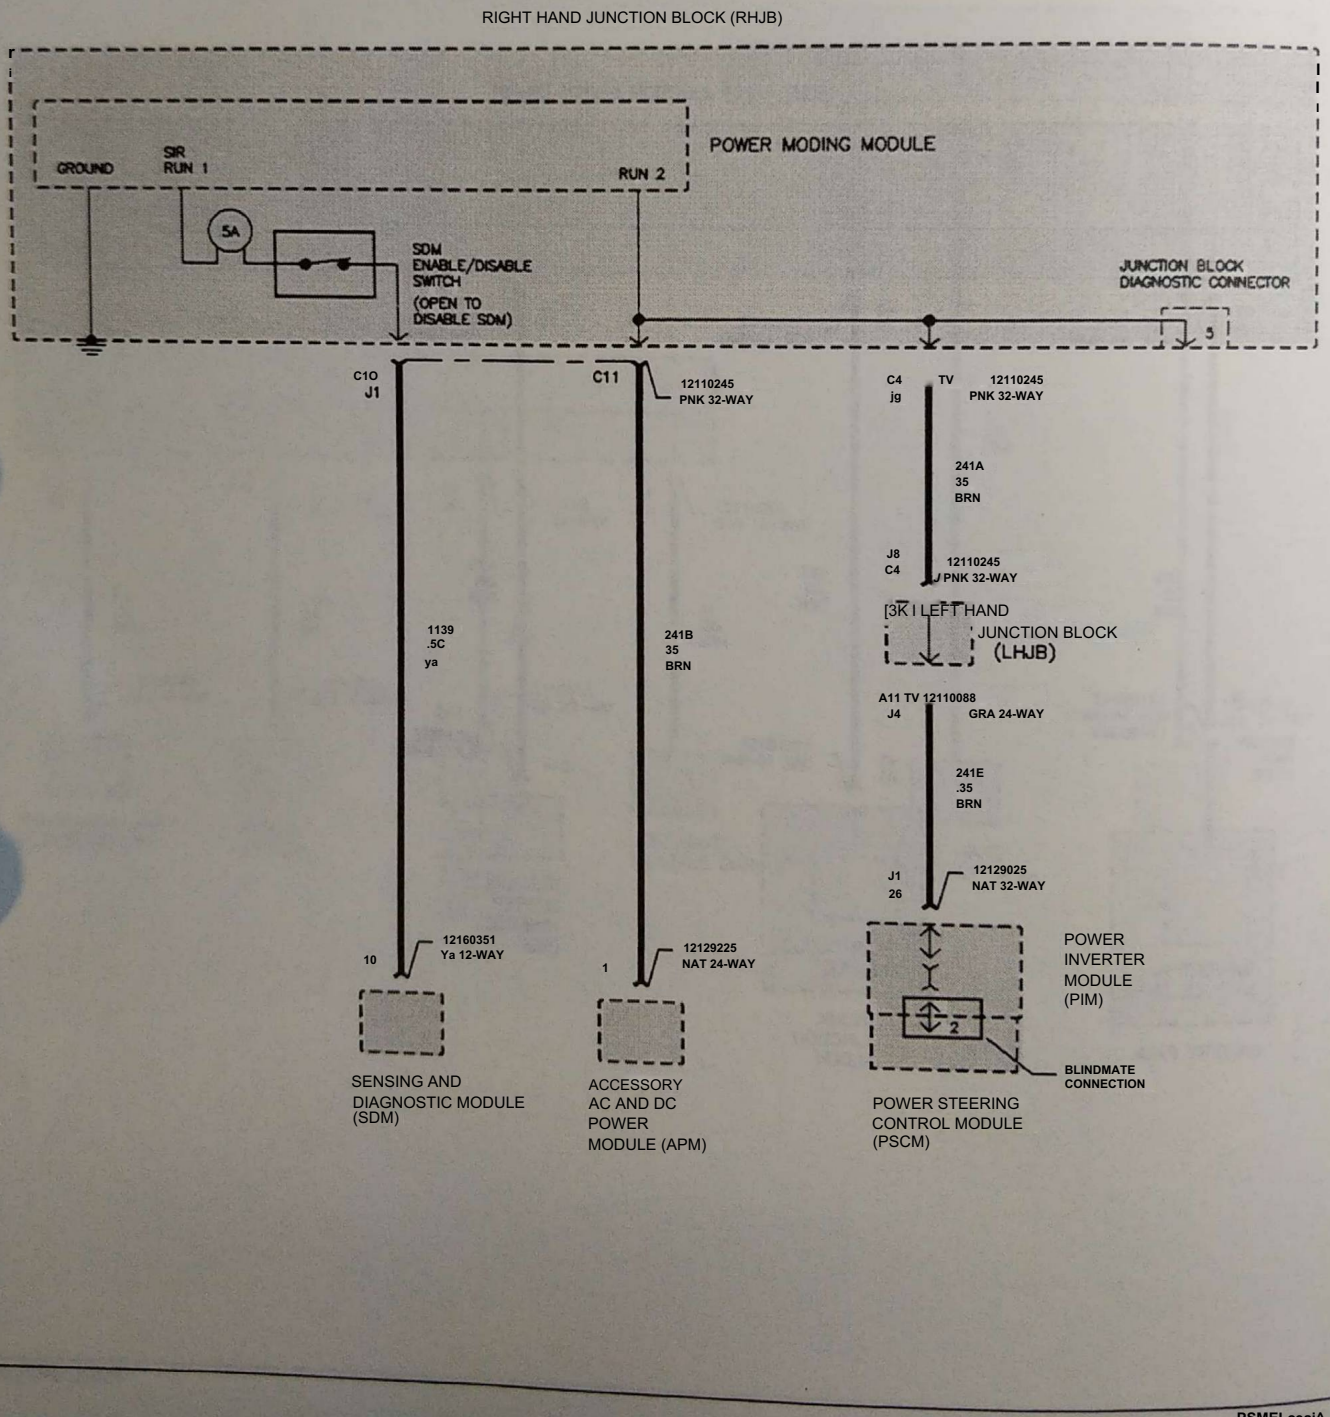

PSMELceai^

CamScanner

JUNCTION BLOCK COMPONENT LOCATION VIEW

CamScanner

JUNCTION BLOCK COMPONENT LOCATION VIEWS (CONTINUED)

RH TELLTALE CONNECTOR LOCATION
BATTERY PACK/REAR DEFOGGER INLINE CONNECTOR
RH TELLTALE ASSEMBLY
RH JUNCTION BLOCK
BLOWER POWER MODULE CONNECTOR
RH FORWARD LAMP I/P HARNESS
PASSENGER SIDE INFLATOR MODULE CONNECTOR
SENSING AND DIAGNOSTIC MODULE CONNECTOR
DRIVER SIDE INFLATOR MODULE CONNECTOR
BLOWER MOTOR CONNECTOR
OUTSIDE AIR VALVE ACTUATOR CONNECTOR
PSMELC67633AA

CamScanner

JUNCTION BLOCK COMPONENT LOCATION VIEWS - (CONTINUED)

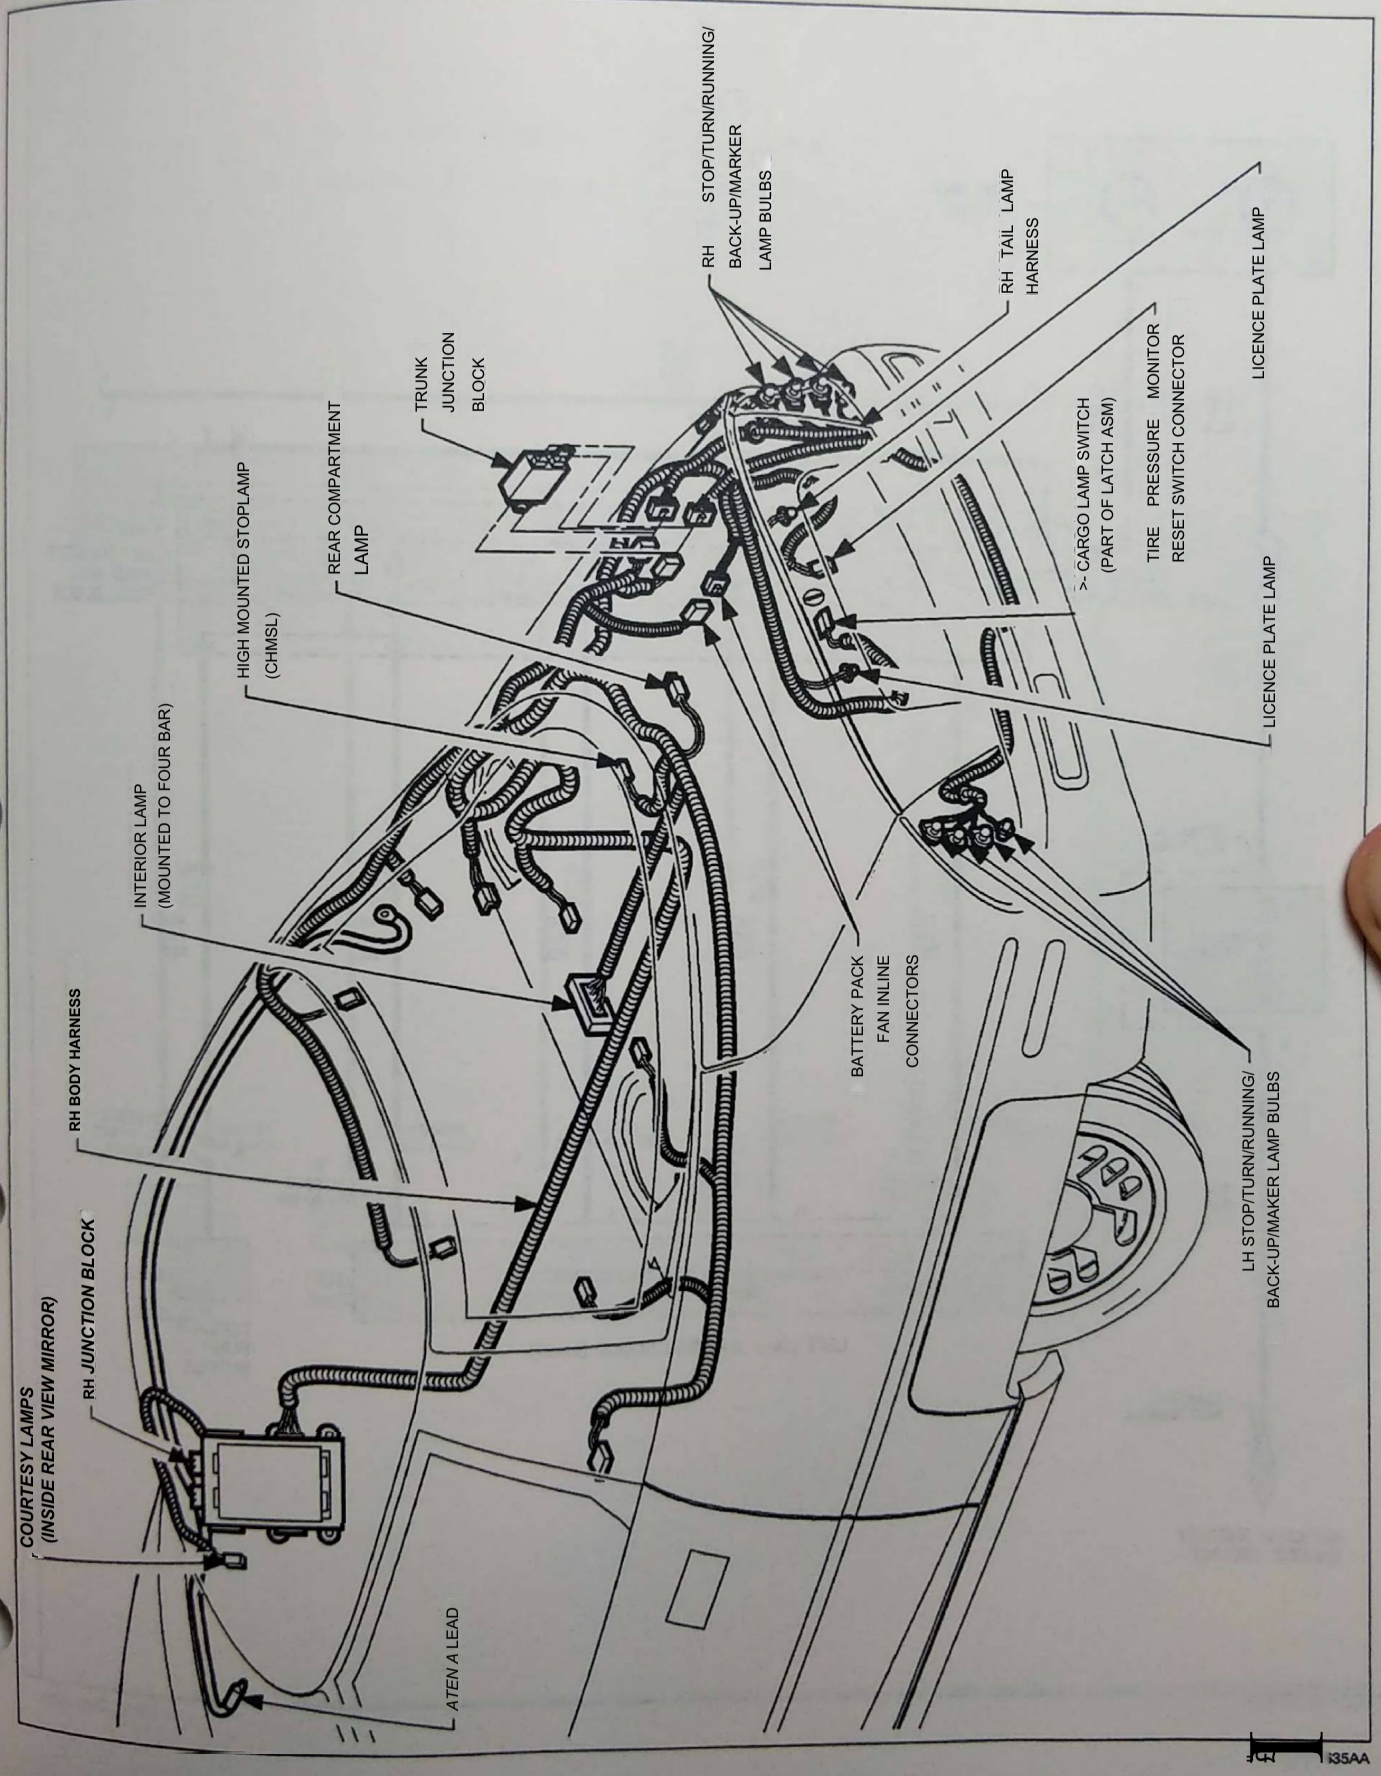
COURTESY LAMPS (INSIDE REAR VIEW MIRROR)
RH JUNCTION BLOCK
RH BODY HARNESS
INTERIOR LAMP (MOUNTED TO FOUR BAR)
HIGH MOUNTED STOPLAMP (CHMSL)
REAR COMPARTMENT LAMP
TRUNK JUNCTION BLOCK
RH STOP/TURN/RUNNING/ BACK-UP/MARKER LAMP BULBS
RH TAIL LAMP HARNESS
CARGO LAMP SWITCH (PART OF LATCH ASM)
TIRE PRESSURE MONITOR RESET SWITCH CONNECTOR
LICENCE PLATE LAMP
BATTERY PACK FAN INLINE CONNECTORS
LH STOP/TURN/RUNNING/ BACK-UP/MAKER LAMP BULBS
ATEN A LEAD
i35AA

POWER DISTRIBUTION

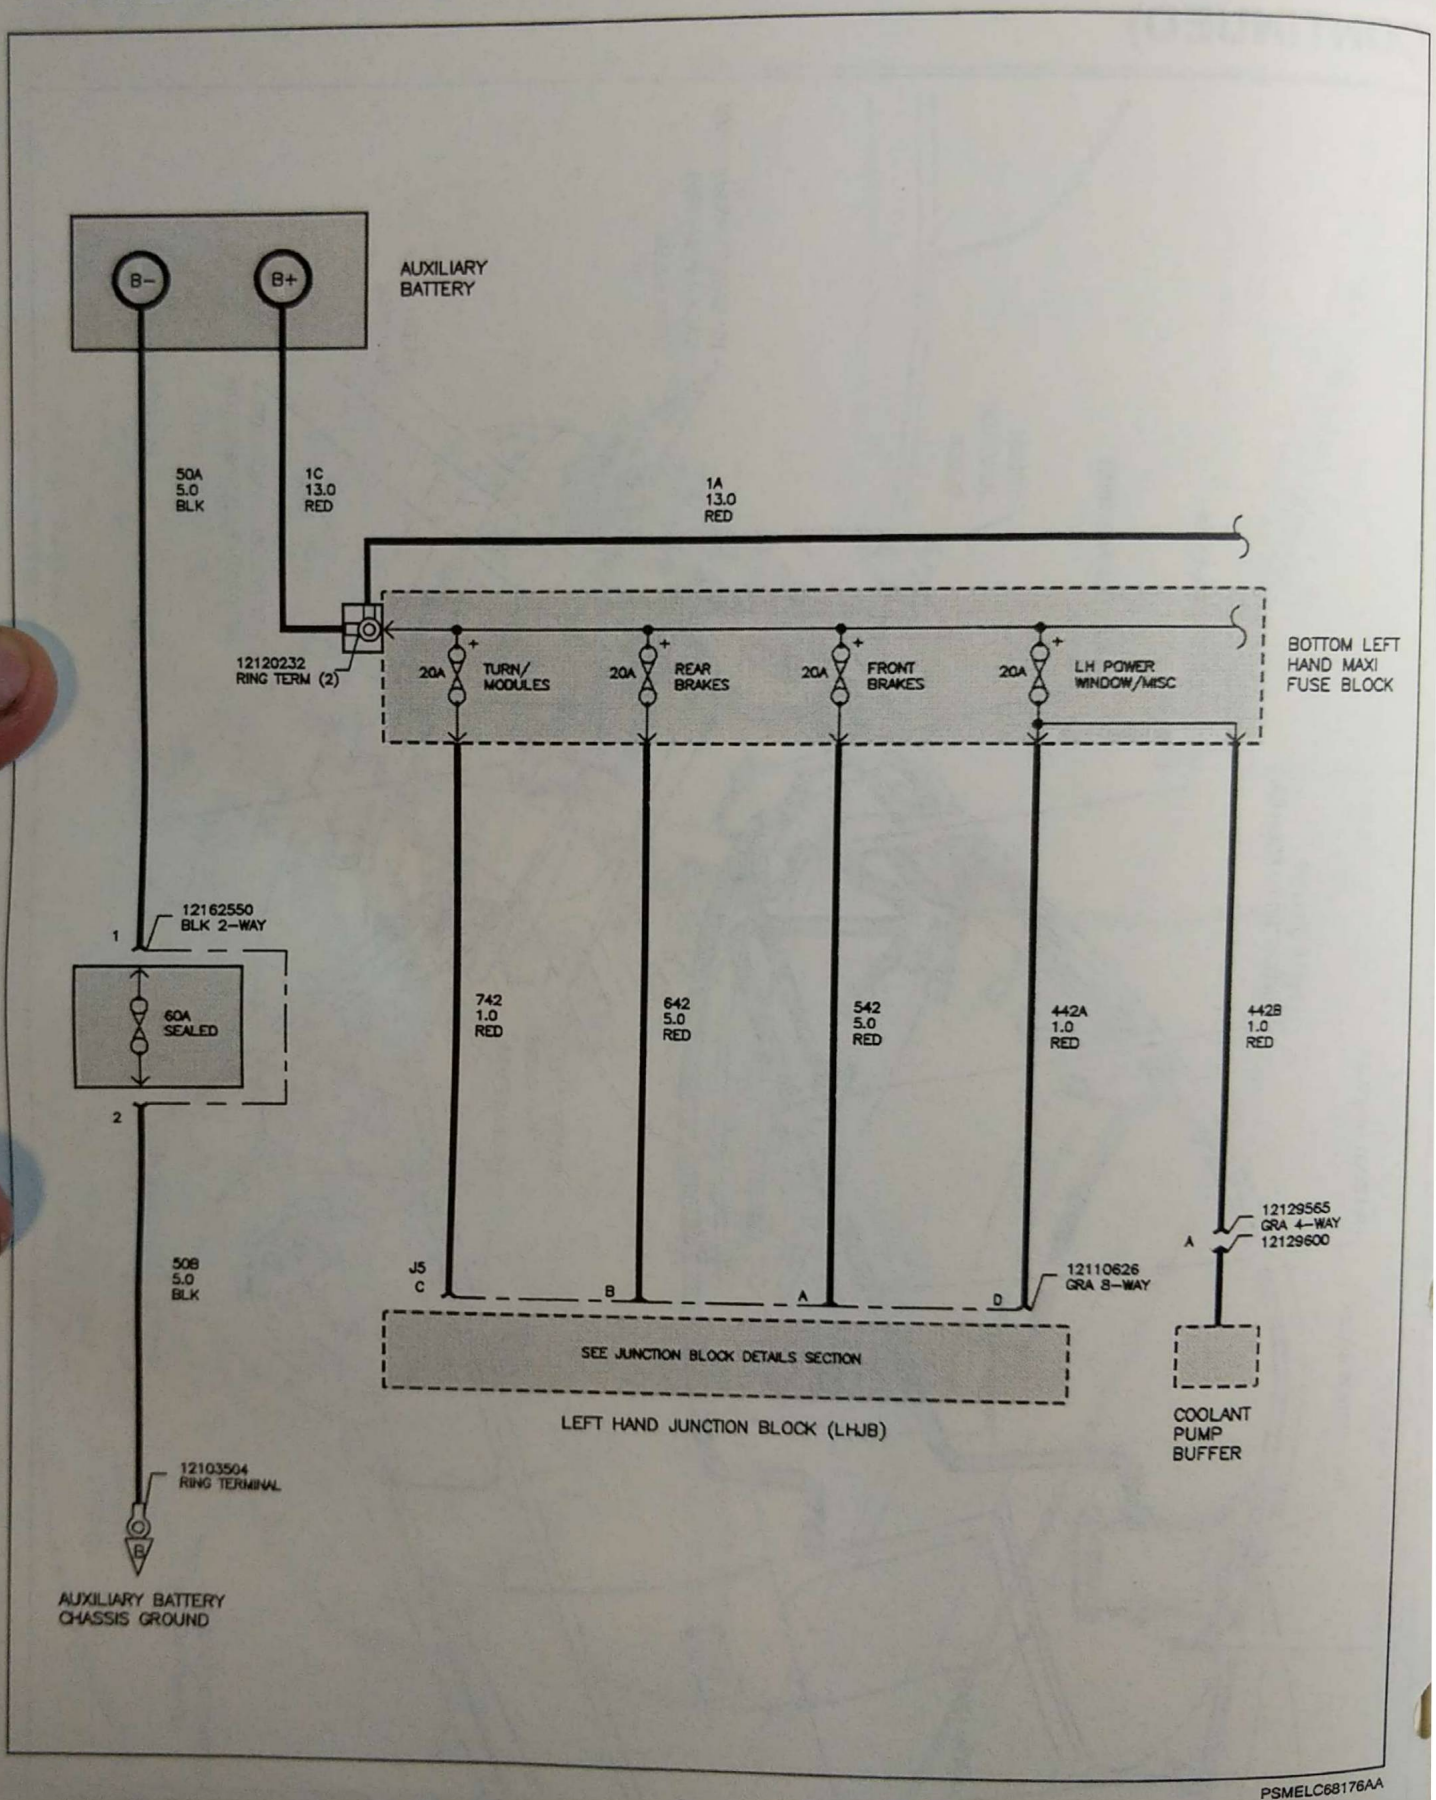

CamScanner

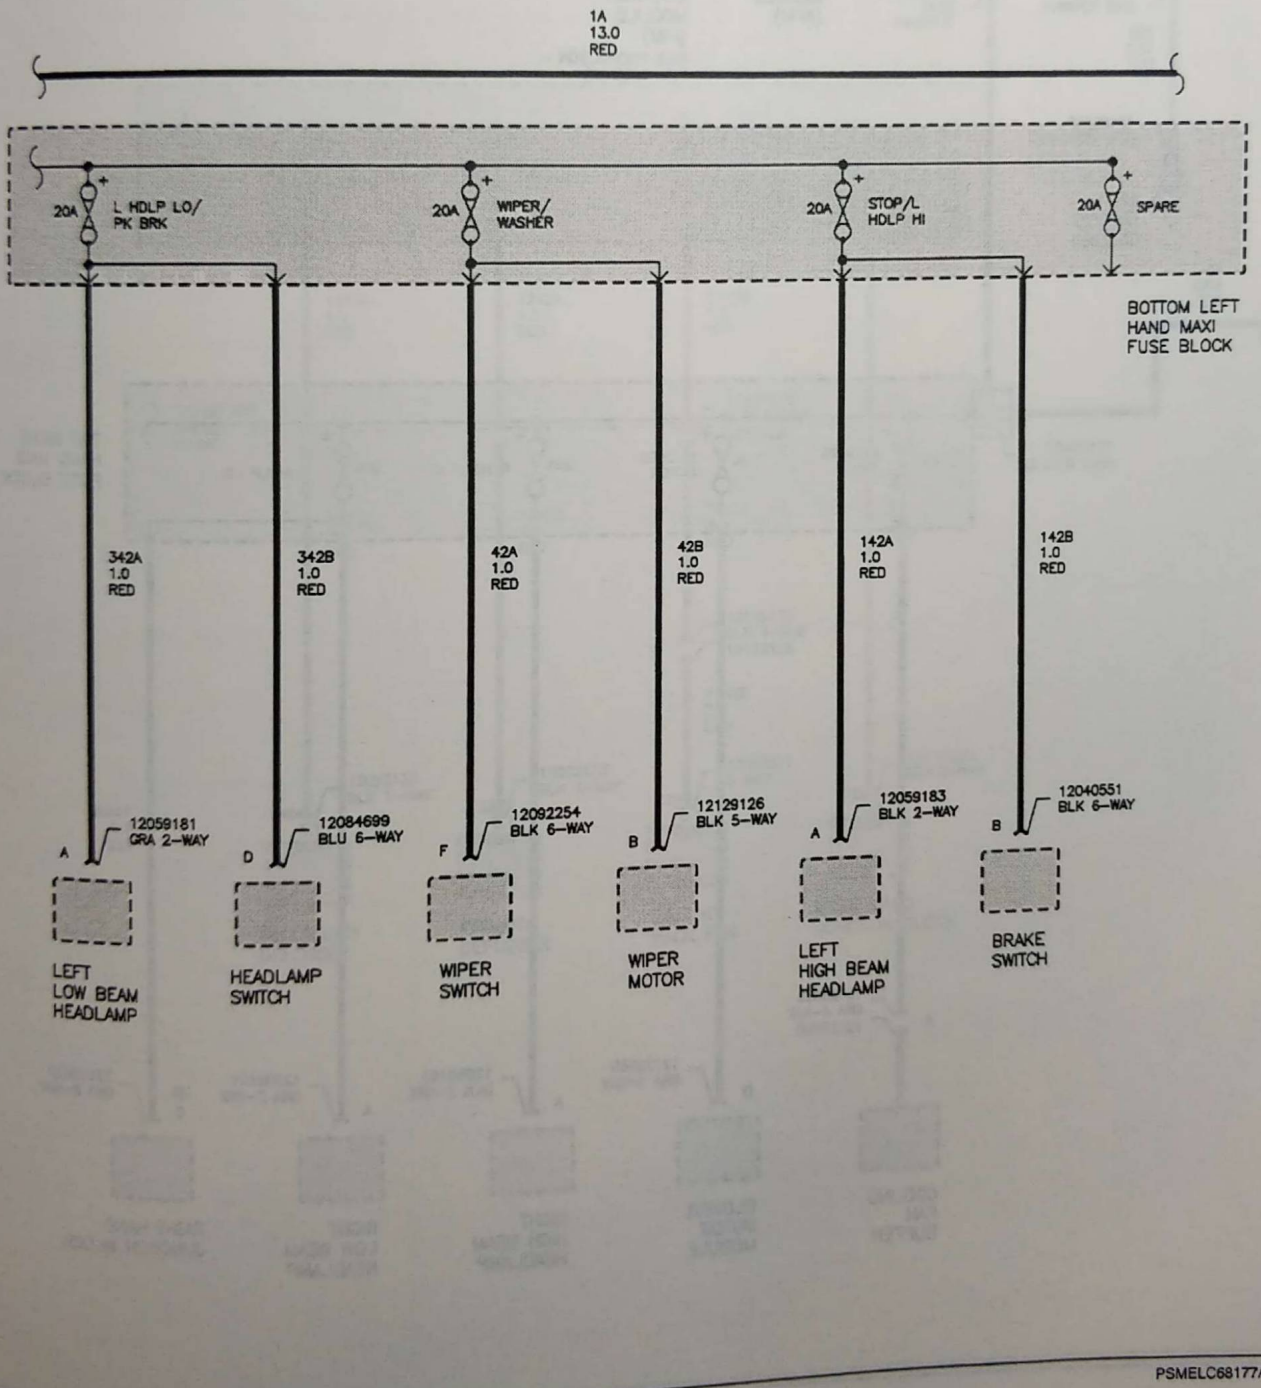
1A
13.0
RED
20A
L HDLP LO/
PK BRK
20A
WIPER/
WASHER
20A
STOP/L
HDLP HI
20A
SPARE
BOTTOM LEFT
HAND MAXI
FUSE BLOCK
342A
1.0
RED
342B
1.0
RED
42A
1.0
RED
42B
1.0
RED
142A
1.0
RED
142B
1.0
RED
A
12059181
GRA 2-WAY
D
12084699
BLU 6-WAY
F
12092254
BLK 6-WAY
B
12129126
BLK 5-WAY
A
12059183
BLK 2-WAY
B
12040551
BLK 6-WAY
LEFT
LOW BEAM
HEADLAMP
HEADLAMP
SWITCH
WIPER
SWITCH
WIPER
MOTOR
LEFT
HIGH BEAM
HEADLAMP
BRAKE
SWITCH
PSMELC68177AA

CamScanner

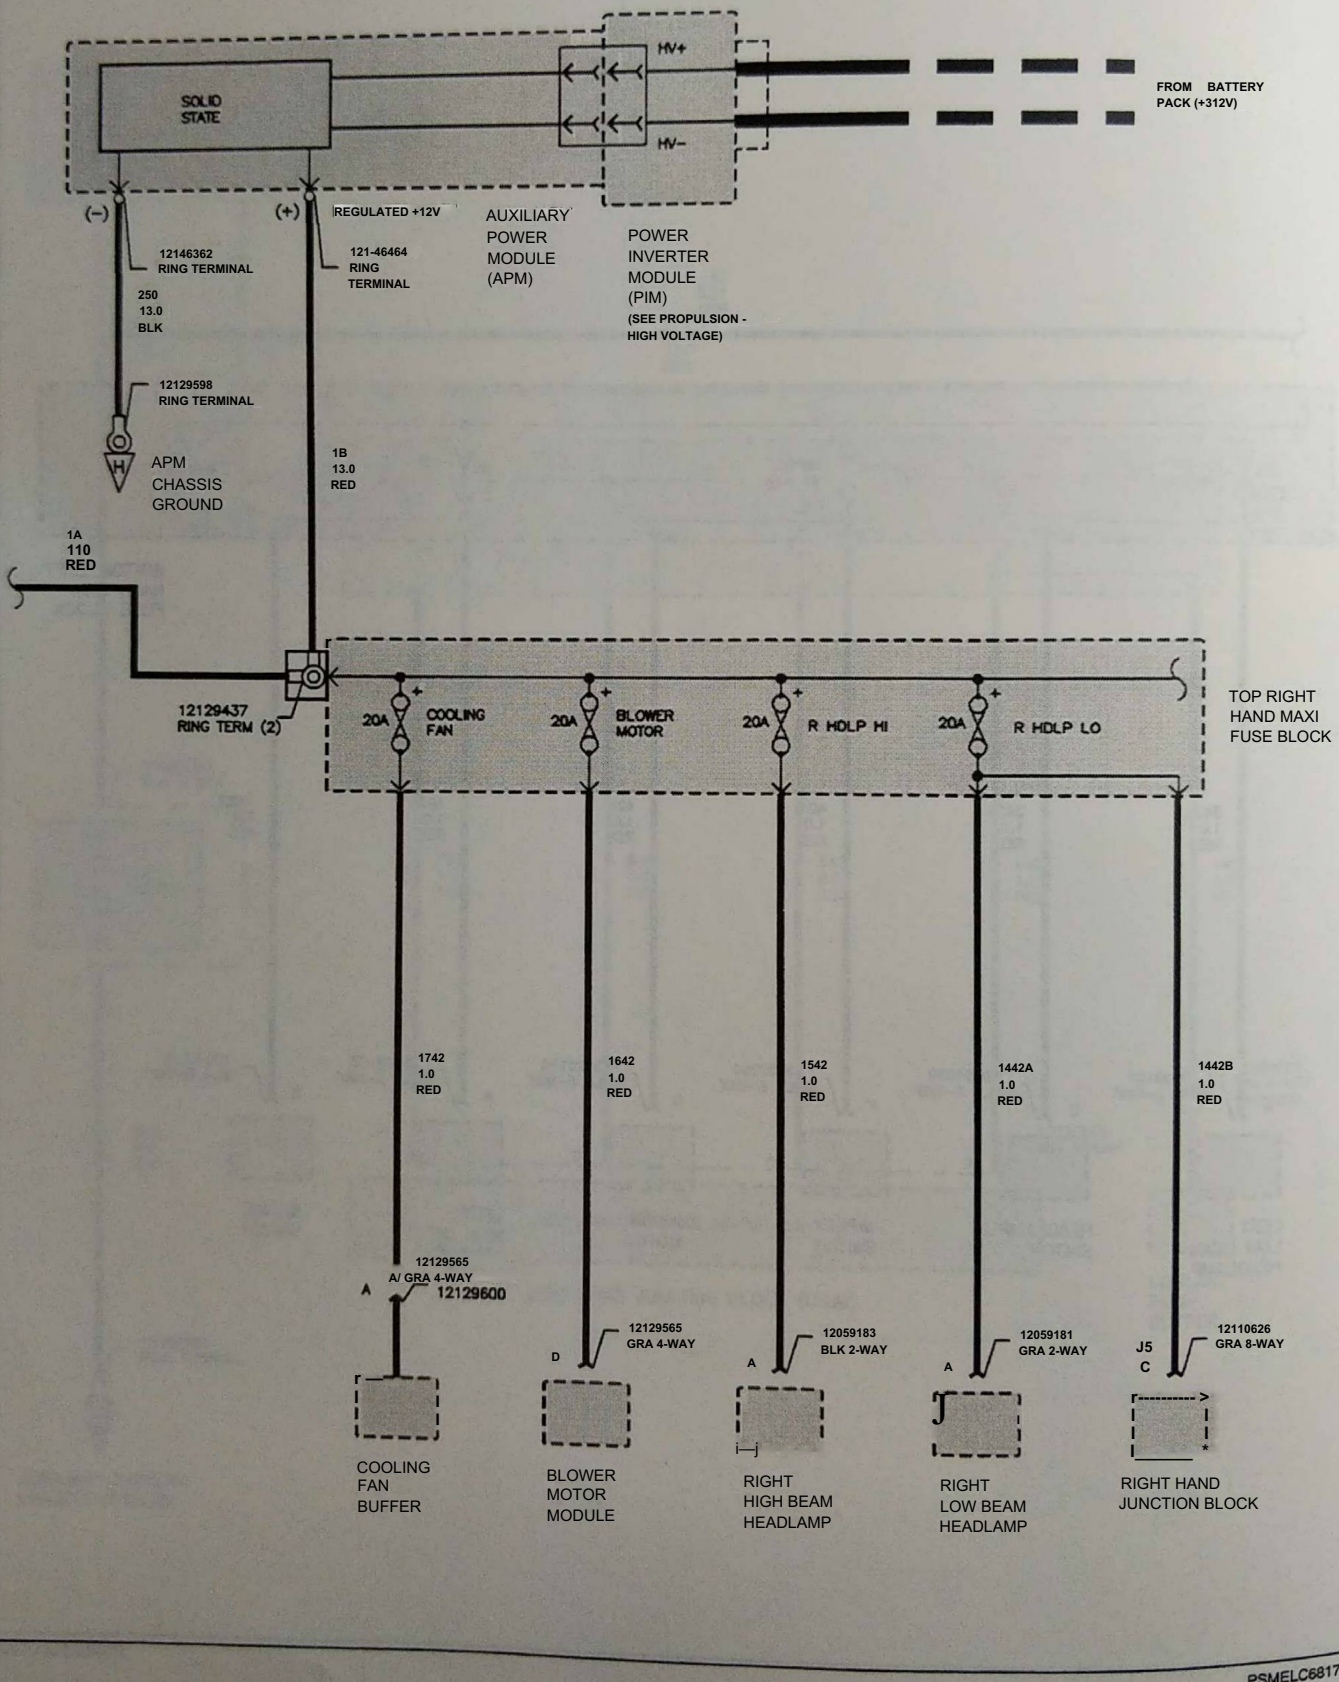
SOLID STATE
HV+
HV-
FROM BATTERY PACK (+312V)
(-)
(+)
REGULATED +12V
AUXILIARY POWER MODULE (APM)
POWER INVERTER MODULE (PIM)
(SEE PROPULSION - HIGH VOLTAGE)
12146362 RING TERMINAL
250 13.0 BLK
121-46464 RING TERMINAL
12129598 RING TERMINAL
APM CHASSIS GROUND
1B 13.0 RED
1A 110 RED
12129437 RING TERM (2)
20A COOLING FAN
20A BLOWER MOTOR
20A R HDLP HI
20A R HDLP LO
TOP RIGHT HAND MAXI FUSE BLOCK
1742 1.0 RED
1642 1.0 RED
1542 1.0 RED
1442A 1.0 RED
1442B 1.0 RED
12129565 A/ GRA 4-WAY
12129600
12129565 GRA 4-WAY
12059183 BLK 2-WAY
12059181 GRA 2-WAY
12110626 GRA 8-WAY
COOLING FAN BUFFER
BLOWER MOTOR MODULE
RIGHT HIGH BEAM HEADLAMP
RIGHT LOW BEAM HEADLAMP
RIGHT HAND JUNCTION BLOCK
PSMELC68178AA

CamScanner

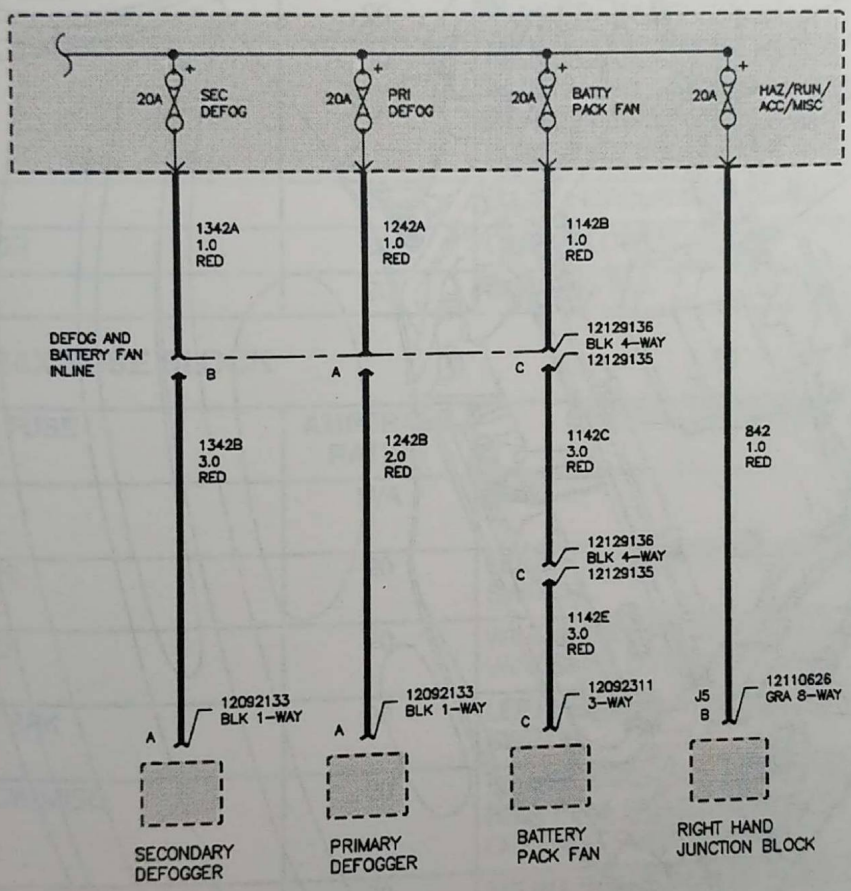

PSMELC68179AA

CamScanner

POWER DISTRIBUTION COMPONENT LOCATION VIEW

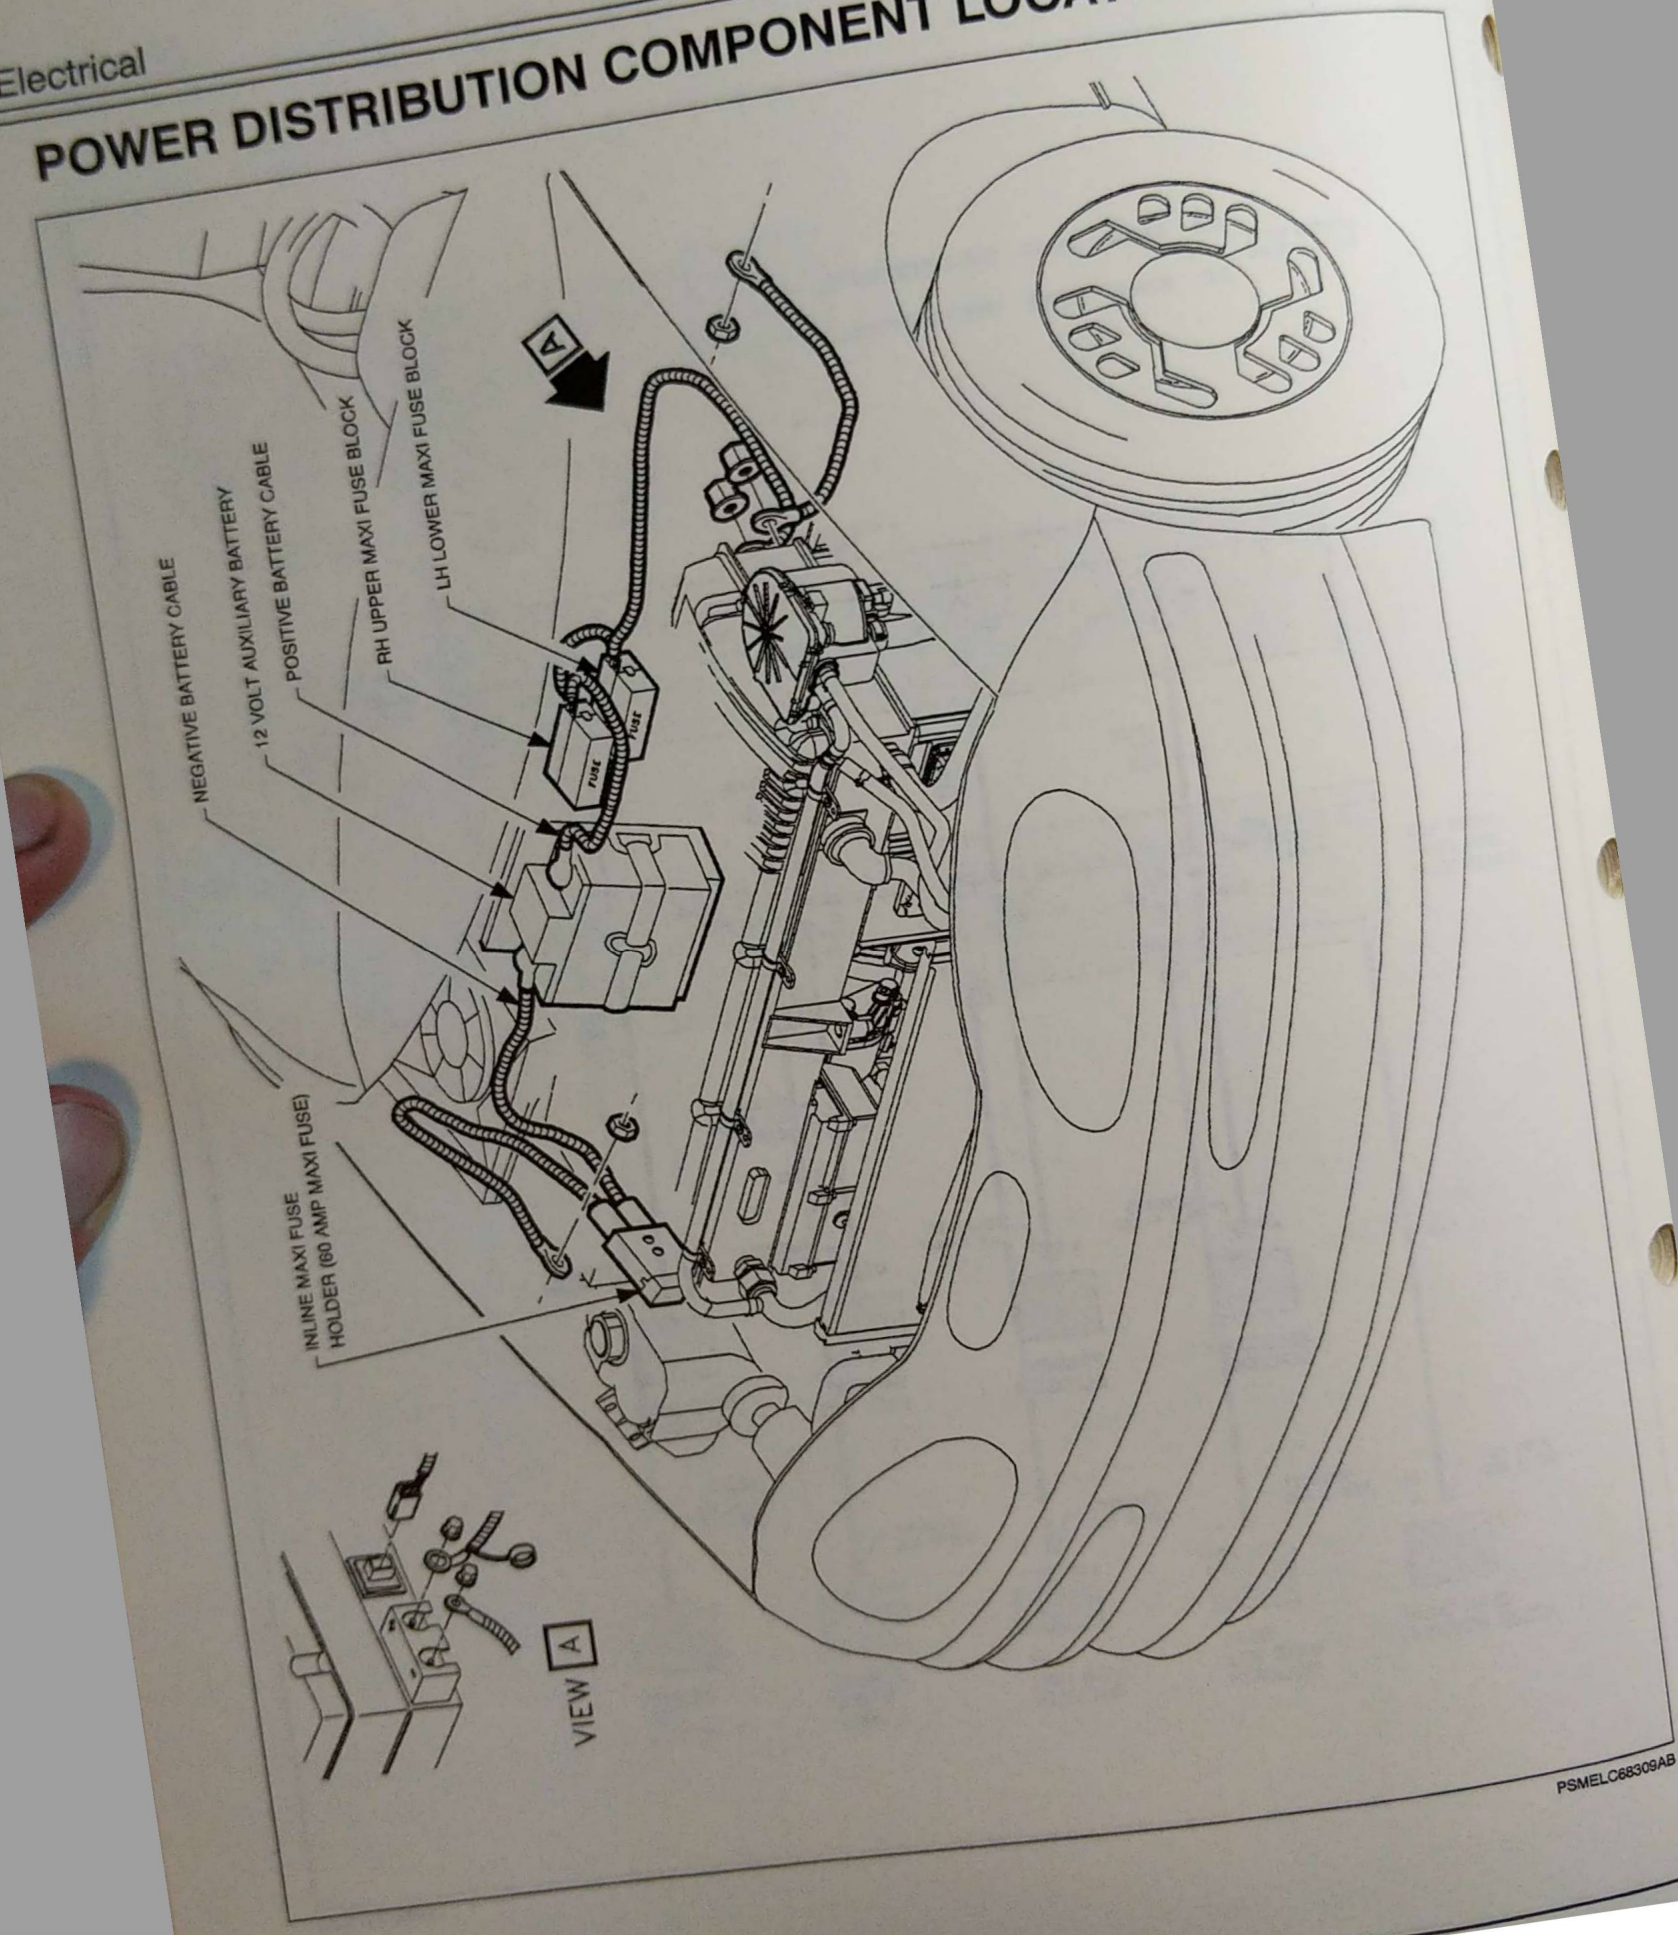

CamScanner

POWER DISTRIBUTION

FUSE BLOCK DETAILS

RH UPPER MAXIFUSE BLOCK

FUSE	AMPERAGE RATING	FUSED CIRCUITS	SECTION
HAZ/RUN/ACC/MISC	20	RIGHT HAND JUNCTION BLOCK, RUN1, RUN2, DRL, TURN SIGNAL, BACK UP, INTERIOR LAMPS	POWEF 1 DISTRI 3UTION
BATTY PACK FAN	20	BATTERY PACK FAN	
PRI DEFOG	20	PRIMARY DEFOGGER	
SEC DEFOG	20	SECONDARY DEFOGGER	
R HDLP LO	20	RIGHT HEADLAMP LO BEAM, RIGHT HAND JUNCTION BLOCK, HORNS POWER WINDOWS, POWER LOCKS, RADIO	
R HDLP HI	20	RIGHT HEADLAMP HI BEAM	
BLOWER MOTOR	20	CABIN BLOWER MOTOR	
COOLING FAN	20	COOLING FAN	

LH LOWER MAXIFUSE BLOCK

FUSE	AMPERAGE RATING	FUSED CIRCUITS	SECTION
SPARE	N/A	N/A	POWER DISTRIBUTION
ST I UP/L HDLP HI	20	LEFT HEADLAMP HI STOPLAMP SWITCH	
VviHER/WASHER	20	WINDSHIELD WIPER SWITCH, WINDSHIELD WASHER PUMP	
LHDLPLO/PK BRK	20	LEFT HEADLAMP LO, HEADLAMP SWITCH	
LHPWR WNDOW/MISC	20	POWER WINDOWS, POWER MIR-ROR, PCM, DLC CONNECTOR, COOLANT PUMP BUFFER	
PRAKES FRONT	20	FRONT BRAKE POWER FEED (LH JUNCTION BLOCK)	
^KESREAR"----------	20	REAR BRAKE POWER FEED (LH JUNCTION BLOCK)	
TU&N/MODULES	20	RUN/LOCK SHIFTER ASSEMBLY, LEFT DRL, LEFT TURN, RADIO, BACK UP LAMPS, DIMMER, OIL PUMP HORN PAD, CHARGE RE-CEPTICAL, DOOR LOCKS, PROPUL-SION CONTROL MODULE, BRAKE TORQUE CONTROL MODULE	

CamScanner

CIRCUIT AND CAVITY LOCATION

RH UPPER MAXIFUSE BLOCK				LH LOWER MAXIFUSE BLOCK----------			
CAVITY	CIRCUIT	CAVITY	CIRCUIT	CAVITY	CIRCUIT	CAVITY	CIRCUIT
A1	SPARE	B1	B+	A1	842	B1	~B+
A2	142A/142B	B2		A2	1142B	B2	
A3	42A/42B	B3		A3	1242A	B3	
A4	342A/342B	B4	1	A4	1342A	B4	3
A5	442A/442B	B5		A5	1442A/1442B	B5	
A6	542	B6		A6	1542	B6	
A7	642	B7		A7	1642	B7	
A8	742	B8		A8	1742	B8	

CamScanner

FUSE COLOR/RATING	
COLOR	AMPS
TAN	5
BROWN	7.5
RED	10
BLUE	15
YELLOW	20
WHITE	25
GREEN	30
AMBER	40
RED	50
BLUE	60
BROWN	70
NATURAL	80

TOP RIGHT HAND MAXI FUSE BLOCK

FRONT VIEW

BOTTOM LEFT HAND MAXI FUSE BLOCK

	TOP RIGHT HAND MAXI FUSE BLOCK	BOTTOM LEFT HAND MAXI FUSE BLOCK
1	HAZ/RUN/ ACC/MISC FUSE 20A	SPARE
2	BATTY PACK FAN FUSE 20A	STOP/L HDLP HI FUSE 20A
3	PRI DEFOG FUSE 20A	WIPER/ WASHER FUSE 20A
4	SEC DEFOG FUSE 20A	L HDLP LO/ PK BRK FUSE 20A
5	R HDLP LO FUSE 20A	LH PWR WINDOW/MISC FUSE 20A
6	R HDLP HI FUSE 20A	BRAKES FRONT FUSE 20A
7	BLOWER MOTOR FUSE 20A	BRAKES REAR FUSE 20A
ao	COOLING FAN FUSE 20A	TURN/ MODULES FUSE 20A

REAR VIEW

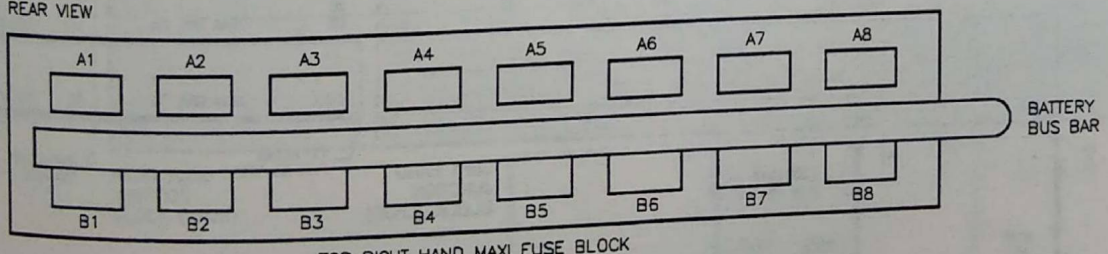

TOP RIGHT HAND MAXI FUSE BLOCK

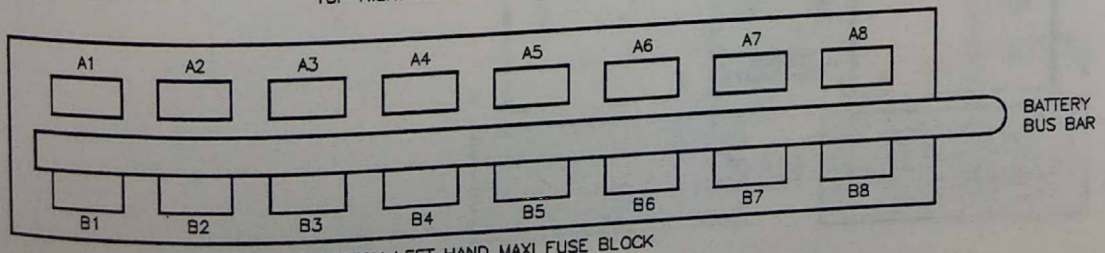

BOTTOM LEFT HAND MAXI FUSE BLOCK

PSMELC68113AA

CamScanner

POWER DOOR LOCKS

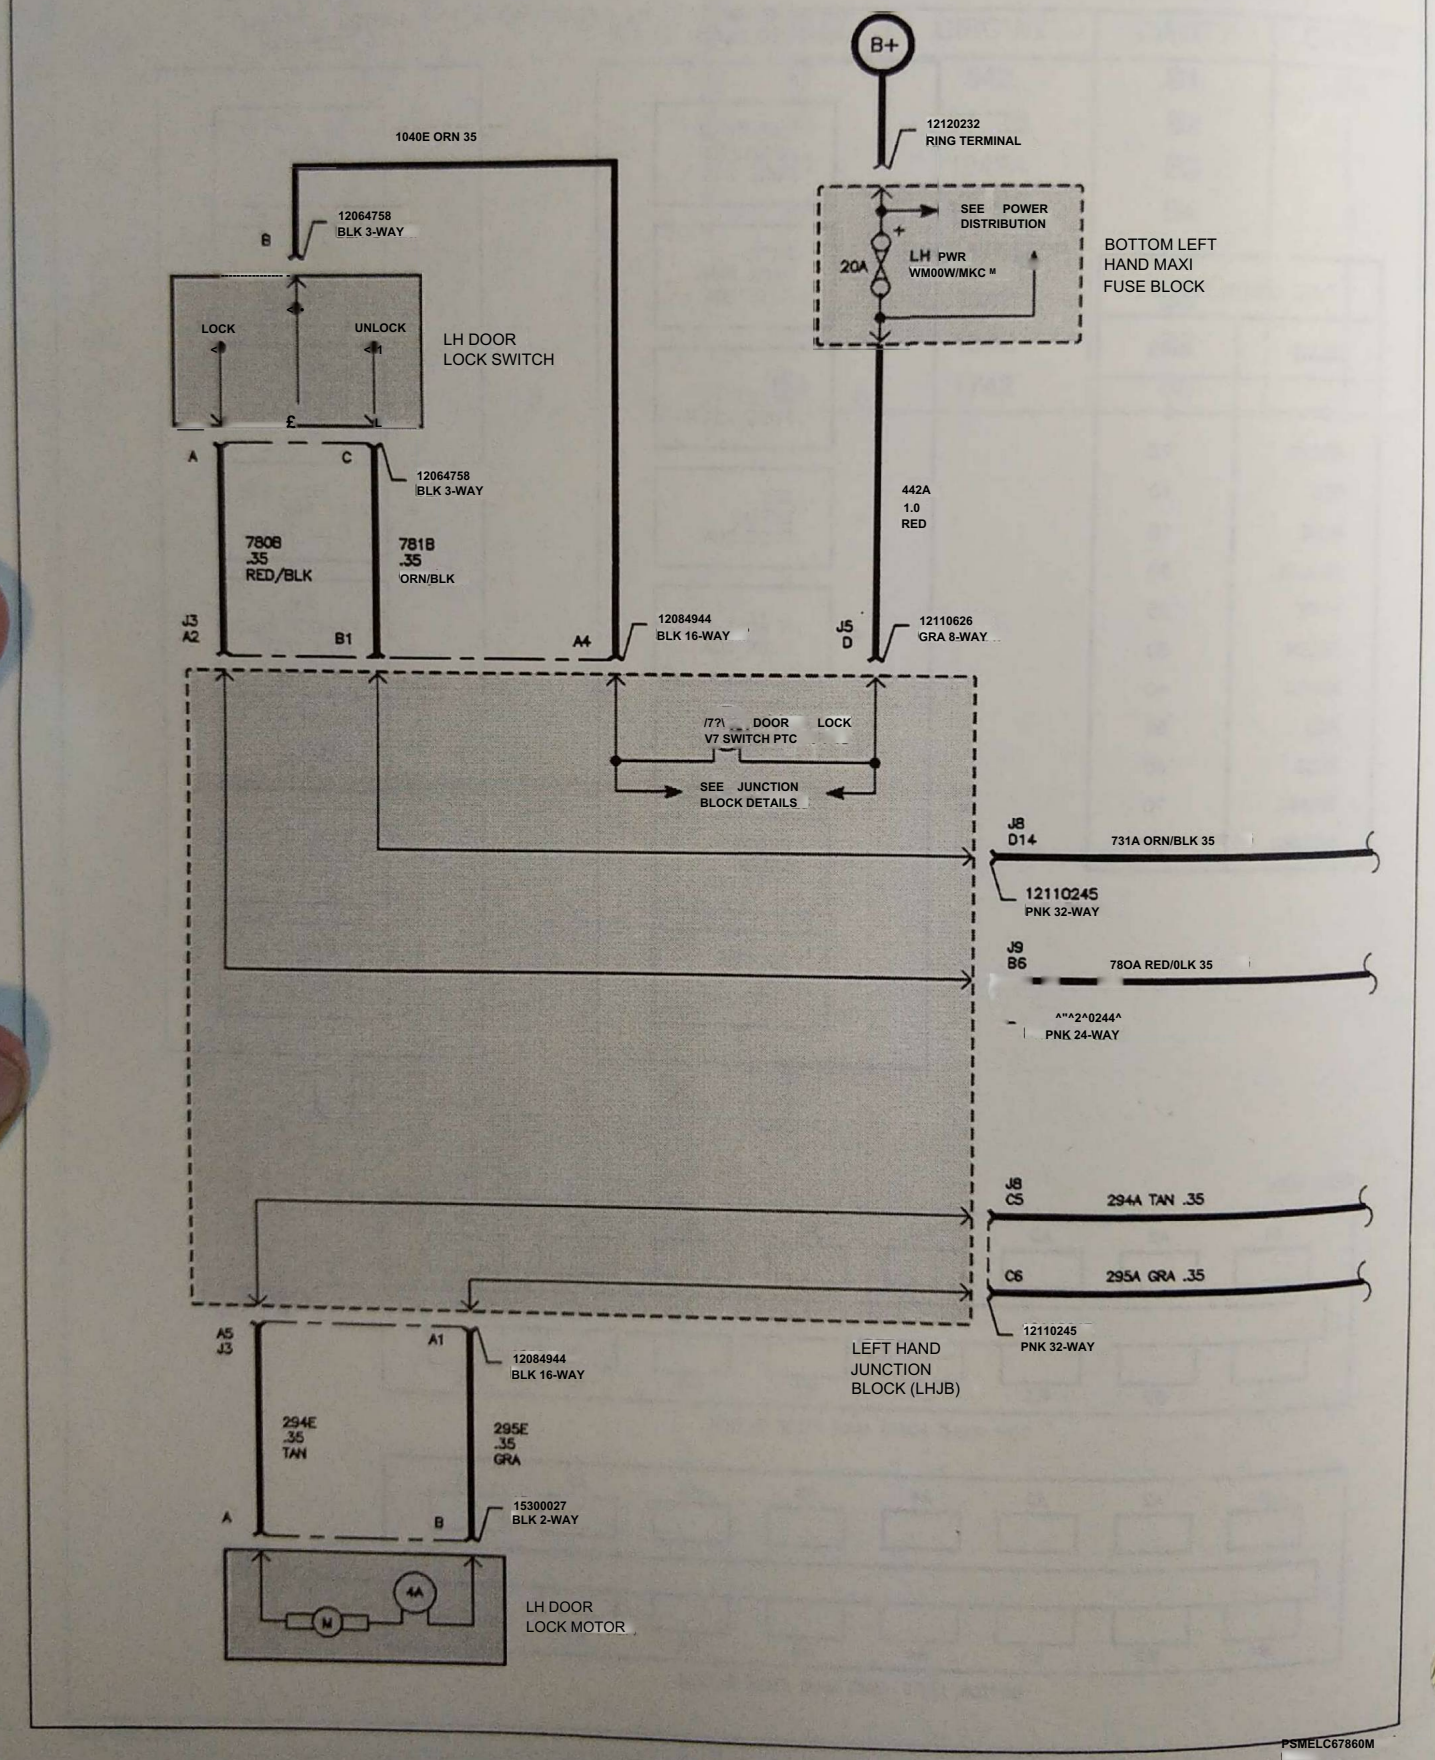

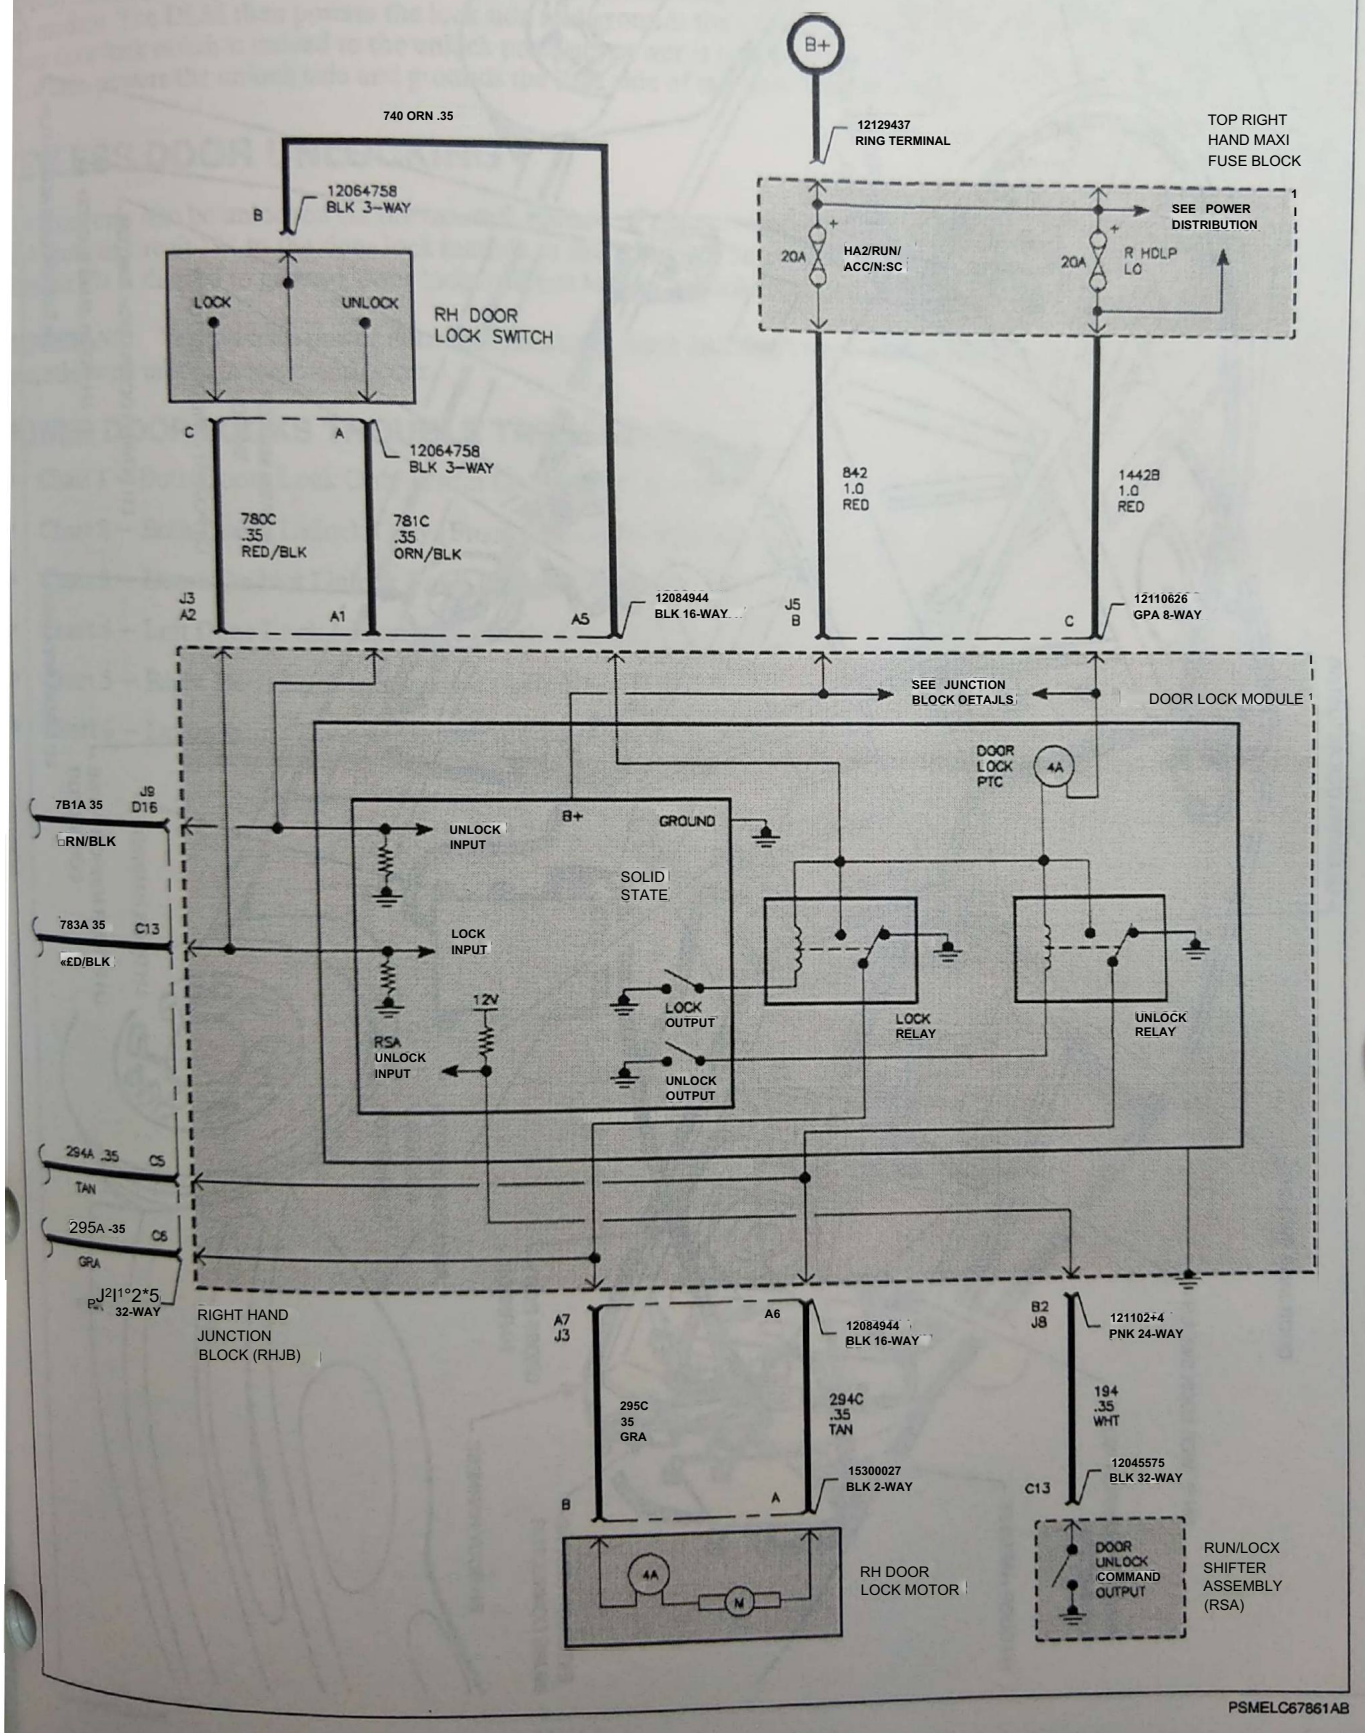

PSMELC67861AB

CamScanner

POWER DOOR LOCK COMPONENT LOCATION VIEW

CamScanner

p0WER DOOR LOCKS

The *power* door locks are controlled by the door lock- module (DLM), located inside the right hand junction block (RHJB). When either power door lock switch is moved to the lock position, power is sent over circuit lock module. The DLM then powers the lock side a
power door lock switch is moved to the unlock *posit^TM/^5 the Unlock Sldc of the door* loc 780-10 the door 785. When either
dLM then powers the unlock side and grounds^ lock , power is sent over circuit 781 to the d^ module. The side of the door lock actuators.

KEYLESS DOOR UNLOCKING

The doors may also be unlocked via the external keypad If the correct J
RSAgrounds circuit 194 to the door lock module in the RHTR Wh kc^code is entered on the external keypad, the
If circuit 194 is shorted to ground, door locks S iottkoSt n circuit 194 is grounded, '>o,h d^^rS are unlocked. from either switch.

IMPORTANT: Verify which power door lock functions work and don't work before selecting the appropriate trouble tree, otherwise misdiagnosis could occur.

POWER DOOR LOCKS TROUBLE TREE INDEX

- Chart 1 - Both Doors Lock Only (From One or Both Switches)
- Chart 2 - Both Doors Unlock Only (From One or Both Switches)
- Chart 3 - Doors Do Not Unlock From External Keypad
- Chart 4 - Left Door Lock Inoperative (Right Side OK)
- Chart 5 - Right Door Lock Inoperative (Left Side OK)
- Chart 6 - Doors Won't Lock or Unlock From One or Both Switches

CamScanner

BOTH DOORS LOCK ONLY (FROM ONE OR BOTH SWITCHES)

CHART 1

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, too) EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Both doors lock only (from one or both switches).

Both switches inoperative

Left switch inoperative only

Right switch inoperative only

Backprobe LHJB J3 pin Bl with door lock held-is there battery voltage?

No

- Check circuit 781B for open from door lock switch pin C to LHJB J3 pin Bl.
- If circuit ok, replace door lock switch.

Yes

Backprobe RHJB J9 pin DI6 with door unlock held. Is battery voltage present?

No

- Check circuit 781A for open from RHJB J9 pin D16 to LHJB J8 pin D14.
- If circuit ok, replace LHJB.

Yes

Replace RHJB/^

Backprobe pin A of door lock switch with unlock pressed - is there battery voltage?

No

Replace door lock switch.

Yes

- Check circuit 781C for open from door lock switch pin A to RHJBJ3 pin Al.
- If circuit ok, replace RHJB.

Backprobe RHJB J3 pin A2 - is there battery voltage?

Yes

Disconnect LHJB J3 connector - is battery voltage still present on A2?

Yes

Disconnect RHJB x connector J9 - is battery voltage still present on J3 pin A2>

Yes

- Check for short to\ voltage on circuit 244 from lock switch pin C to RHJBJ3 pin A2.
- Check for passenger door lock switch lock contacts shorted.
- If circuit ok, / replace RHJB- *J*

No

Go to next page.

No

- Check for short to voltage on circuit 780B from lock switch pin C to LHJBJ3 pin A2.
- If circuit ok, replace door lock switch for lock contacts shorted.

No

- Check for short to voltage on circuit 780A from RHJB J9 pin C13 to LHJB J9 pin B6.
- If circuit ok, replace LHJB.

CamScanner

BOTH DOORS **LOCK ONLY (FROM ONE OR BOTH SWITCHES)**

CHART 1 (CONTINUED)

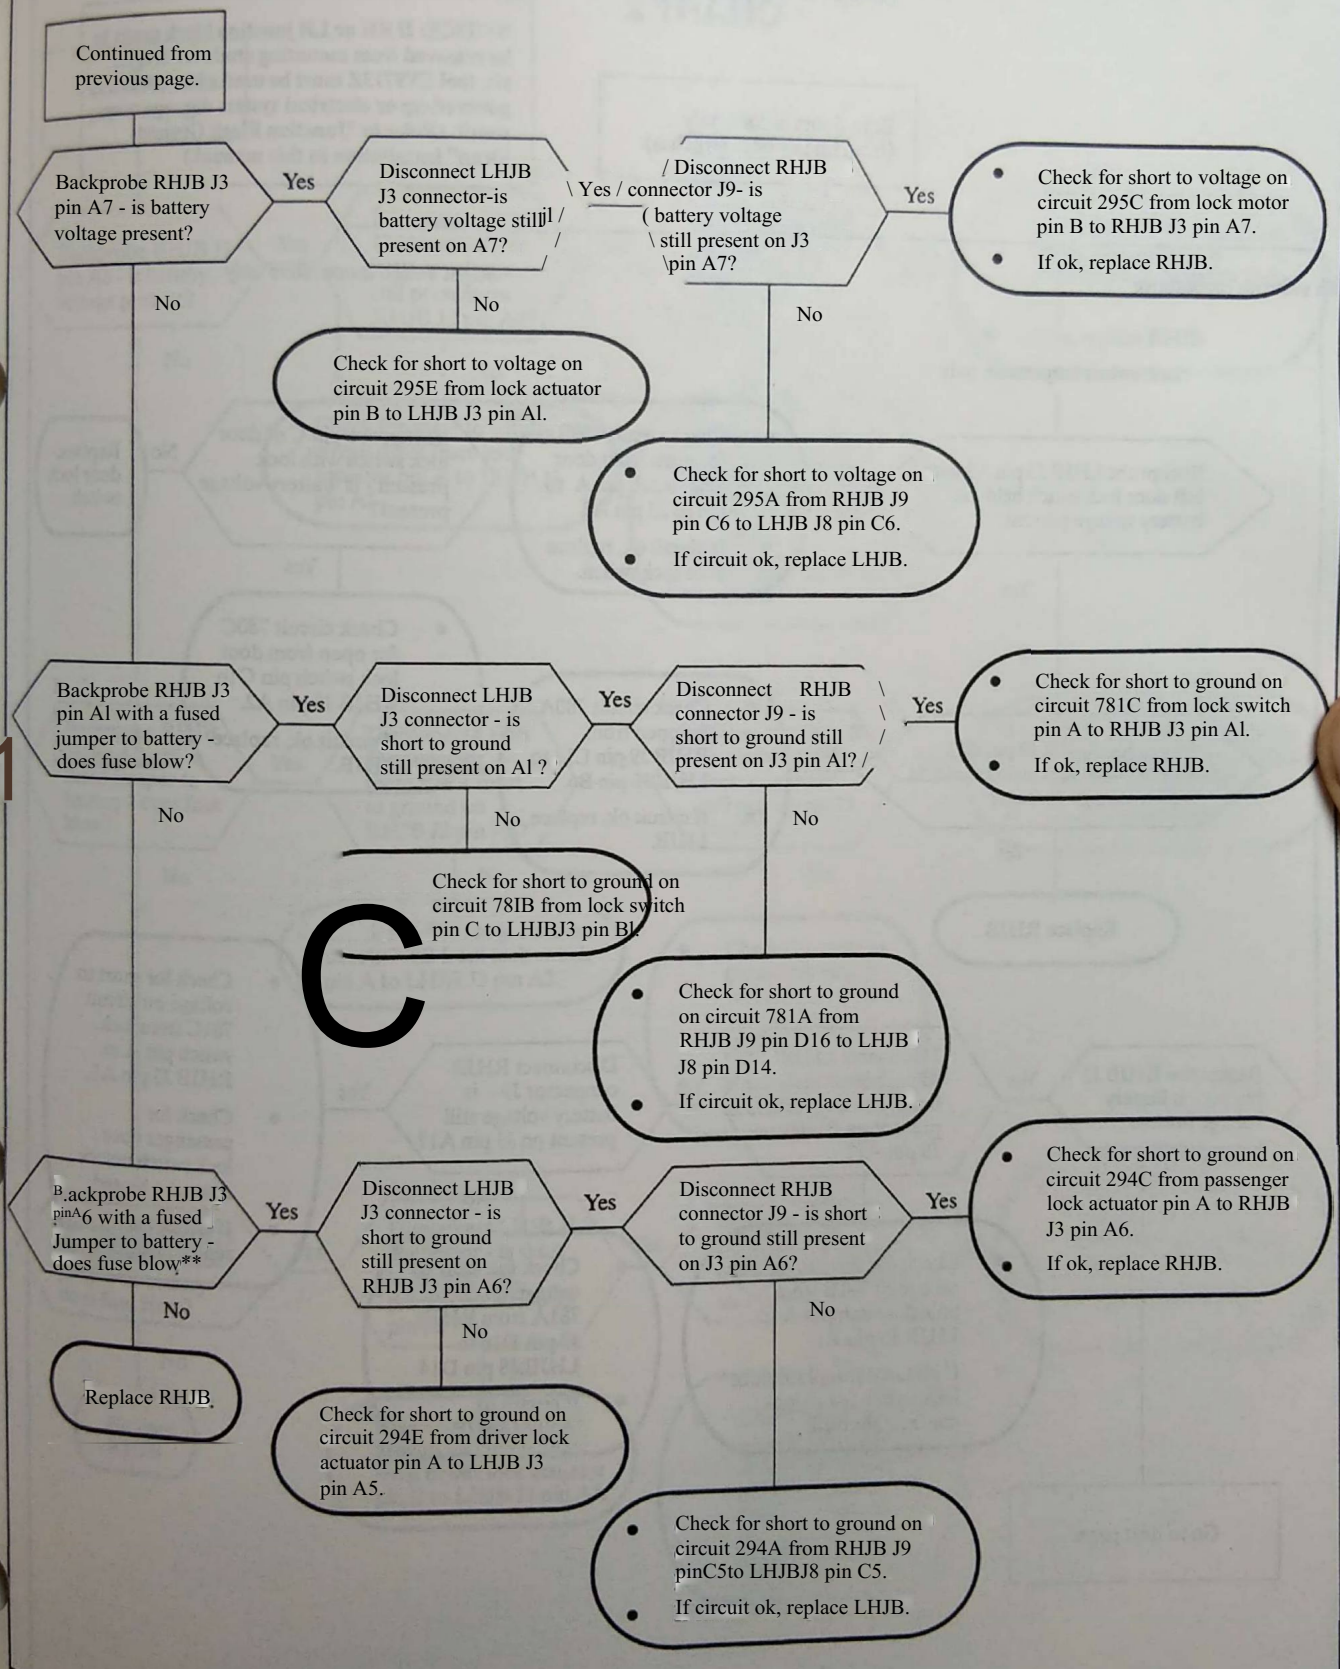
Continued from previous page.
Backprobe RHJB J3 pin A7 - is battery voltage present?
Yes
Disconnect LHJB J3 connector-is battery voltage still present on A7?
Yes
Disconnect RHJB connector J9- is battery voltage still present on J3 pin A7?
Yes
Check for short to voltage on circuit 295C from lock motor pin B to RHJB J3 pin A7.
If ok, replace RHJB.
No
No
No
Check for short to voltage on circuit 295E from lock actuator pin B to LHJB J3 pin Al.
Check for short to voltage on circuit 295A from RHJB J9 pin C6 to LHJB J8 pin C6.
If circuit ok, replace LHJB.
Backprobe RHJB J3 pin Al with a fused jumper to battery - does fuse blow?
Yes
Disconnect LHJB J3 connector - is short to ground still present on Al ?
Yes
Disconnect RHJB connector J9 - is short to ground still present on J3 pin Al?
Yes
Check for short to ground on circuit 781C from lock switch pin A to RHJB J3 pin Al.
If ok, replace RHJB.
No
No
No
Check for short to ground on circuit 78IB from lock switch pin C to LHJBJ3 pin Bl.
Check for short to ground on circuit 781A from RHJB J9 pin D16 to LHJB J8 pin D14.
If circuit ok, replace LHJB.
Backprobe RHJB J3 pinA6 with a fused Jumper to battery - does fuse blow**
Yes
Disconnect LHJB J3 connector - is short to ground still present on RHJB J3 pin A6?
Yes
Disconnect RHJB connector J9 - is short to ground still present on J3 pin A6?
Yes
Check for short to ground on circuit 294C from passenger lock actuator pin A to RHJB J3 pin A6.
If ok, replace RHJB.
No
No
No
Replace RHJB.
Check for short to ground on circuit 294E from driver lock actuator pin A to LHJB J3 pin A5.
Check for short to ground on circuit 294A from RHJB J9 pinC5to LHJBJ8 pin C5.
If circuit ok, replace LHJB.

CamScanner

BOTH DOORS UNLOCK ONLY (FROM ONE OR BOTH SWITCHES)

CHART 2

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Both doors unlock only (from one or both switches).

1

Both switches inoperative

Left switch inoperative only

Backprobe LHJB J3 pin A2 with left door lock switch held - is battery voltage present?

No

- Check circuit 780B for open from door lock switch pin A to LHJBJ3 pin A2.
- If circuit ok, replace door lock switch.

Yes

Backprobe RHJB J9 pin Cl 3 with left door lock switch held. Is battery voltage present?

No

- Check circuit 780A for open from RHJB J9 pin C13 to LHJB J9 pin B6.
- If circuit ok, replace LHJB.

Yes

Replace RHJB.

---------- 1

Right switch inoperative only

Backprobe pin C of door lock switch with lock pressed - is battery voltage present?

No

Replace door lock switch

Yes

- Check circuit 780C for open from door lock switch pin C to RHJB J3 pin A2.
- If circuit ok, replace RHJB.

Backprobe RHJB J3 pin Al - is battery voltage present?

Yes

Disconnect LHJB J3 connector - is battery voltage still present on RHJB J3 pin Al?

Yes

Disconnect RHJB connector J9- is battery voltage still present on J3 pin Al?

Yes

- Check for short to voltage on circuit 781C from lock switch pin A to RHJBJ3 pin Al.
- Check for passenger door lock switch unlock contacts shorted.
- If circuit ok, replace RHJB.

No

- Check for short to voltage on circuit 781B from unlock switch pin A to LHJB J3 pin Bl.
- If circuit ok, replace door lock switch for unlock contacts shorted.

No

- Check for short to voltage on circuit 781A from RHJB J9 pin DI 6 to LHJB J8 pin D14.
- If circuit ok, replace LHJB.

Go to next page.

CamScanner

BOTH DOORS UNLOCK ONLY (FROM ONE OR BOTH SWITCHES)
CHART 2 (CONTINUED)

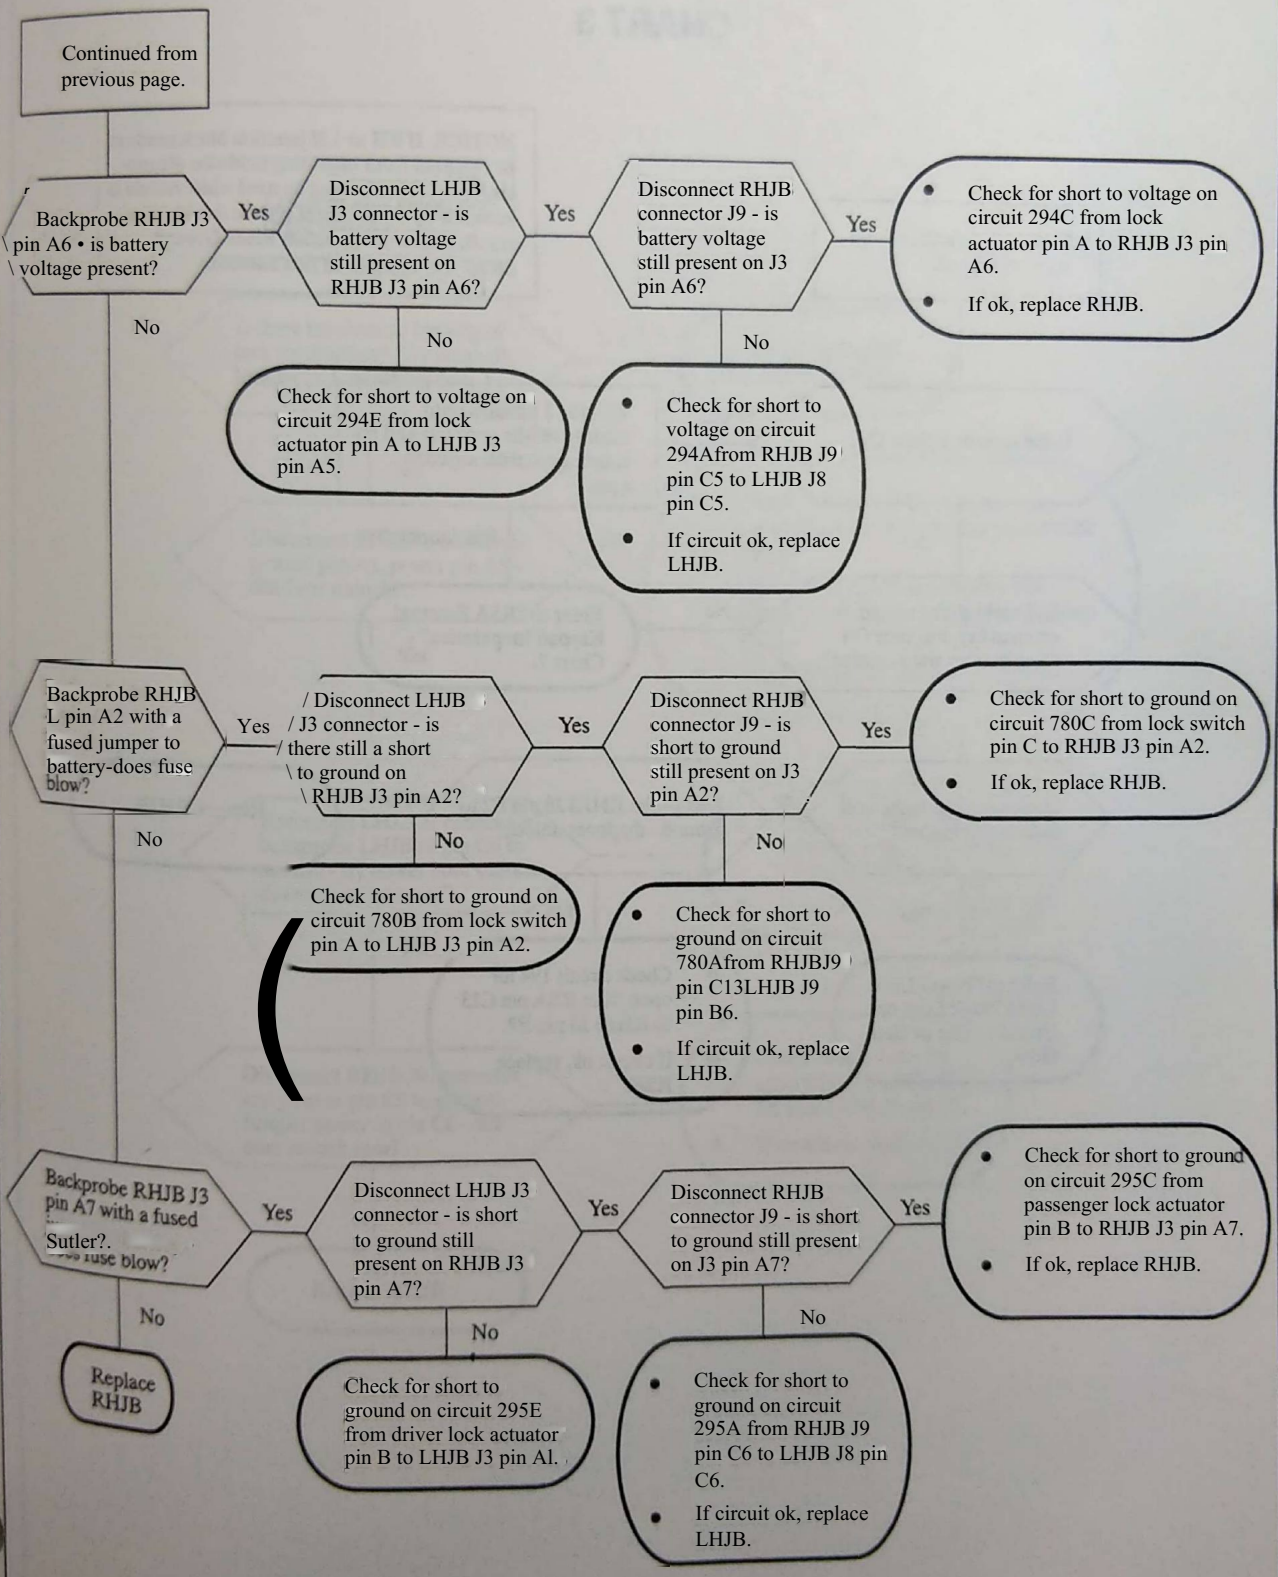
Continued from previous page.
Backprobe RHJB J3 pin A6 • is battery voltage present?
Yes
Disconnect LHJB J3 connector - is battery voltage still present on RHJB J3 pin A6?
Yes
Disconnect RHJB connector J9 - is battery voltage still present on J3 pin A6?
Yes
Check for short to voltage on circuit 294C from lock actuator pin A to RHJB J3 pin A6.
If ok, replace RHJB.
No
No
No
Check for short to voltage on circuit 294E from lock actuator pin A to LHJB J3 pin A5.
Check for short to voltage on circuit 294Afrom RHJB J9 pin C5 to LHJB J8 pin C5.
If circuit ok, replace LHJB.
Backprobe RHJB L pin A2 with a fused jumper to battery-does fuse blow?
Yes
Disconnect LHJB J3 connector - is there still a short to ground on RHJB J3 pin A2?
Yes
Disconnect RHJB connector J9 - is short to ground still present on J3 pin A2?
Yes
Check for short to ground on circuit 780C from lock switch pin C to RHJB J3 pin A2.
If ok, replace RHJB.
No
No
No
Check for short to ground on circuit 780B from lock switch pin A to LHJB J3 pin A2.
Check for short to ground on circuit 780Afrom RHJBJ9 pin C13LHJB J9 pin B6.
If circuit ok, replace LHJB.
Backprobe RHJB J3 pin A7 with a fused Sutler?. fuse blow?
Yes
Disconnect LHJB J3 connector - is short to ground still present on RHJB J3 pin A7?
Yes
Disconnect RHJB connector J9 - is short to ground still present on J3 pin A7?
Yes
Check for short to ground on circuit 295C from passenger lock actuator pin B to RHJB J3 pin A7.
If ok, replace RHJB.
No
Replace RHJB
No
Check for short to ground on circuit 295E from driver lock actuator pin B to LHJB J3 pin Al.
No
Check for short to ground on circuit 295A from RHJB J9 pin C6 to LHJB J8 pin C6.
If circuit ok, replace LHJB.

CamScanner

DOORS DO NOT UNLOCK FROM EXTERNAL KEYPAD

CHART 3

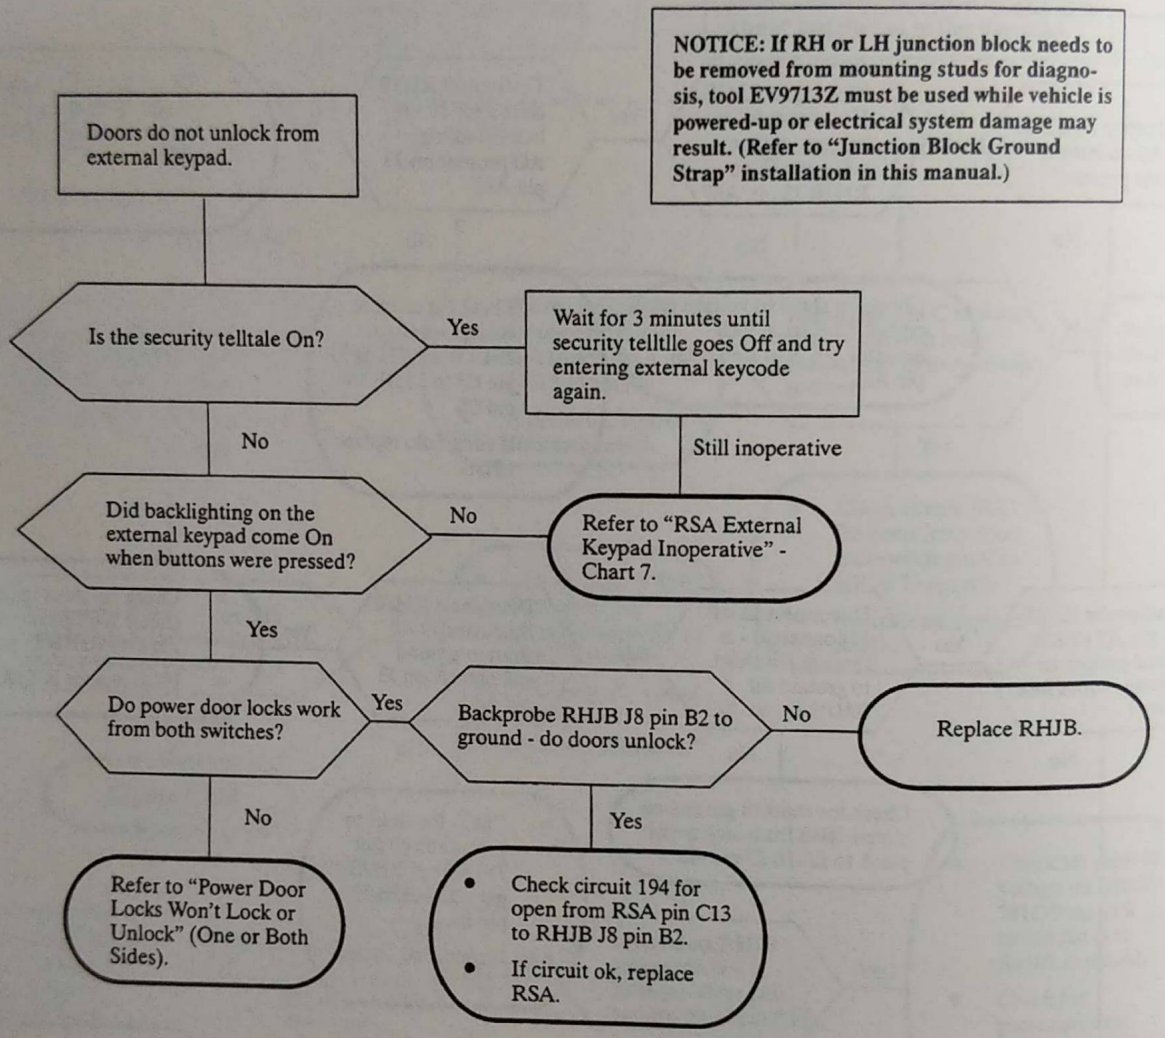
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)
Doors do not unlock from external keypad.
Is the security telltale On?
Yes
Wait for 3 minutes until security telltlle goes Off and try entering external keycode again.
Still inoperative
No
Did backlighting on the external keypad come On when buttons were pressed?
No
Refer to "RSA External Keypad Inoperative" - Chart 7.
Yes
Do power door locks work from both switches?
Yes
Backprobe RHJB J8 pin B2 to ground - do doors unlock?
No
Replace RHJB.
No
Yes
Refer to "Power Door Locks Won't Lock or Unlock" (One or Both Sides).
• Check circuit 194 for open from RSA pin C13 to RHJB J8 pin B2.
• If circuit ok, replace RSA.

CamScanner

LEFT DOOR LOCK INOPERATIVE (RIGHT SIDE OK)

CHART 4

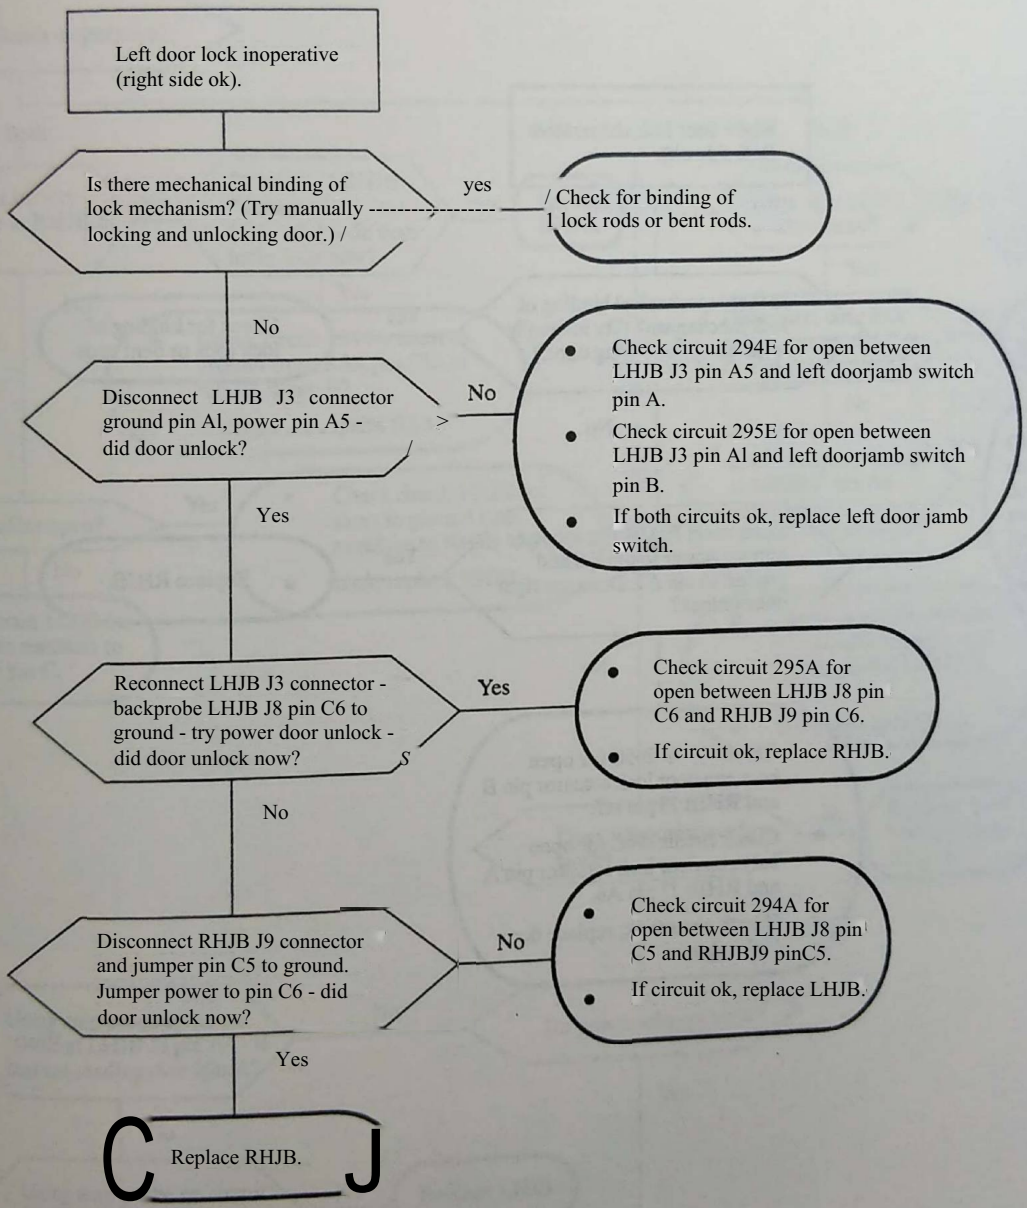
Left door lock inoperative (right side ok).
Is there mechanical binding of lock mechanism? (Try manually locking and unlocking door.)
yes
Check for binding of lock rods or bent rods.
No
Disconnect LHJB J3 connector ground pin Al, power pin A5 - did door unlock?
No
Check circuit 294E for open between LHJB J3 pin A5 and left doorjamb switch pin A.
Check circuit 295E for open between LHJB J3 pin Al and left doorjamb switch pin B.
If both circuits ok, replace left door jamb switch.
Yes
Reconnect LHJB J3 connector - backprobe LHJB J8 pin C6 to ground - try power door unlock - did door unlock now?
Yes
Check circuit 295A for open between LHJB J8 pin C6 and RHJB J9 pin C6.
If circuit ok, replace RHJB.
No
Disconnect RHJB J9 connector and jumper pin C5 to ground. Jumper power to pin C6 - did door unlock now?
No
Check circuit 294A for open between LHJB J8 pin C5 and RHJBJ9 pinC5.
If circuit ok, replace LHJB.
Yes
C
Replace RHJB.
J

CamScanner

RIGHT DOOR LOCK INOPERATIVE (LEFT SIDE OK)

CHART 5

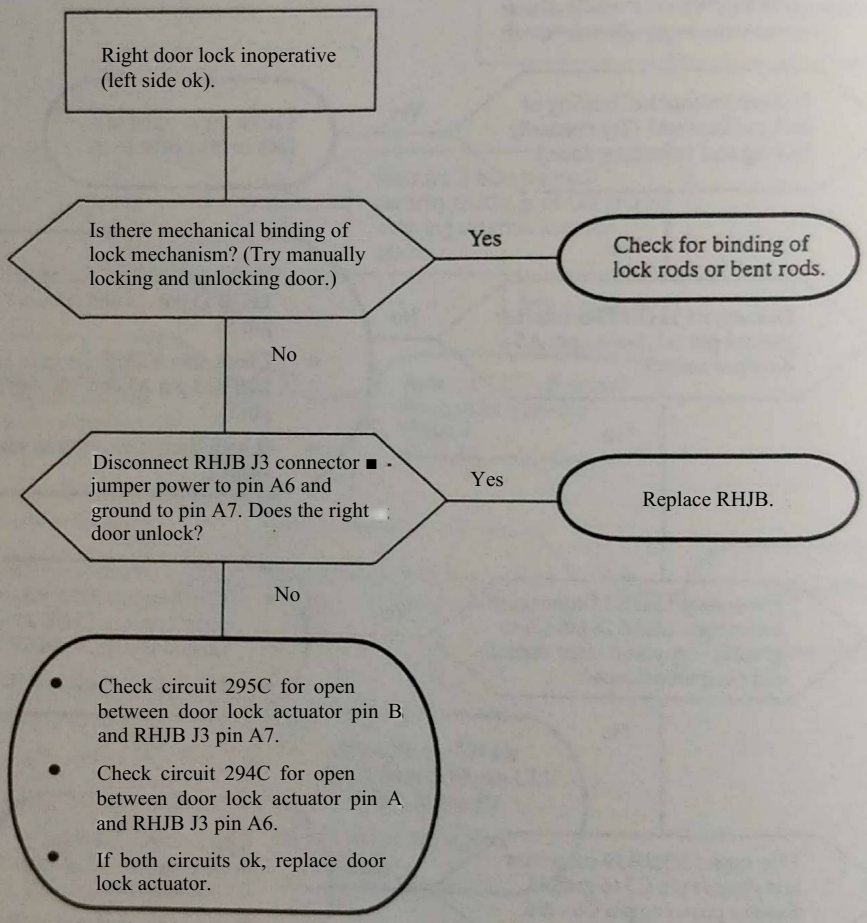
Right door lock inoperative (left side ok).
Is there mechanical binding of lock mechanism? (Try manually locking and unlocking door.)
Yes
Check for binding of lock rods or bent rods.
No
Disconnect RHJB J3 connector ■ - jumper power to pin A6 and ground to pin A7. Does the right door unlock?
Yes
Replace RHJB.
No
• Check circuit 295C for open between door lock actuator pin B and RHJB J3 pin A7.
• Check circuit 294C for open between door lock actuator pin A and RHJB J3 pin A6.
• If both circuits ok, replace door lock actuator.

CamScanner

DOORS WON'T LOCK OR UNLOCK FROM ONE OR BOTH SWITCHES

CHART 6

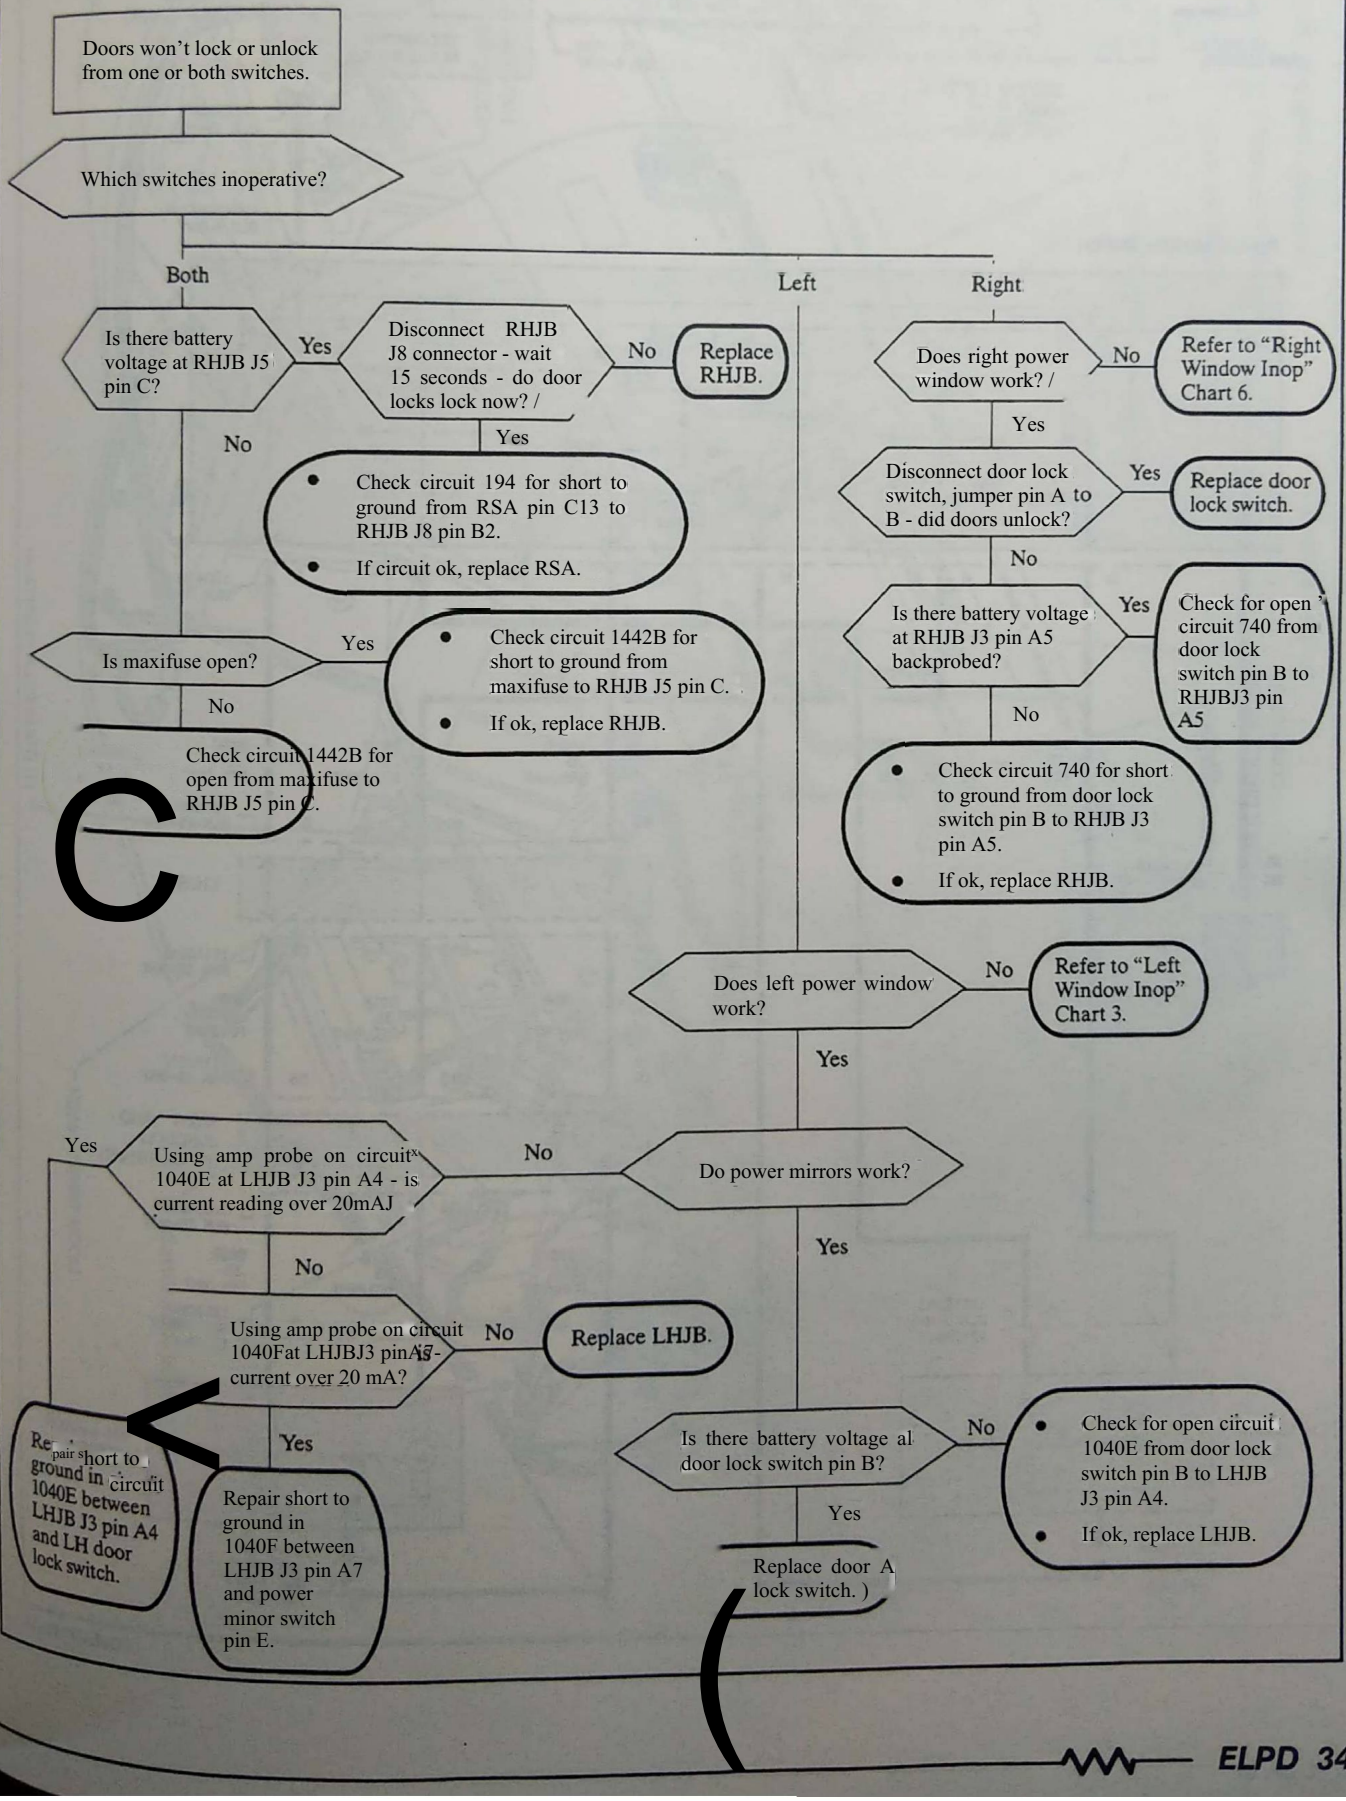
Doors won't lock or unlock from one or both switches.
Which switches inoperative?
Both
Left
Right
Is there battery voltage at RHJB J5 pin C?
Yes
Disconnect RHJB J8 connector - wait 15 seconds - do door locks lock now? /
No
Replace RHJB.
No
Yes
Check circuit 194 for short to ground from RSA pin C13 to RHJB J8 pin B2.
If circuit ok, replace RSA.
Is maxifuse open?
Yes
Check circuit 1442B for short to ground from maxifuse to RHJB J5 pin C.
If ok, replace RHJB.
No
Check circuit 1442B for open from maxifuse to RHJB J5 pin C.
Does right power window work? /
No
Refer to "Right Window Inop" Chart 6.
Yes
Disconnect door lock switch, jumper pin A to B - did doors unlock?
Yes
Replace door lock switch.
No
Is there battery voltage at RHJB J3 pin A5 backprobed?
Yes
Check for open circuit 740 from door lock switch pin B to RHJBJ3 pin A5
No
Check circuit 740 for short to ground from door lock switch pin B to RHJB J3 pin A5.
If ok, replace RHJB.
Does left power window work?
No
Refer to "Left Window Inop" Chart 3.
Yes
Do power mirrors work?
No
Using amp probe on circuit 1040E at LHJB J3 pin A4 - is current reading over 20mAJ
Yes
No
Yes
Using amp probe on circuit 1040Fat LHJBJ3 pinA7 - current over 20 mA?
No
Replace LHJB.
Yes
Repair short to ground in circuit 1040E between LHJB J3 pin A4 and LH door lock switch.
Repair short to ground in 1040F between LHJB J3 pin A7 and power minor switch pin E.
Is there battery voltage at door lock switch pin B?
No
Check for open circuit 1040E from door lock switch pin B to LHJB J3 pin A4.
If ok, replace LHJB.
Yes
Replace door A lock switch.)

POWER MIRRORS

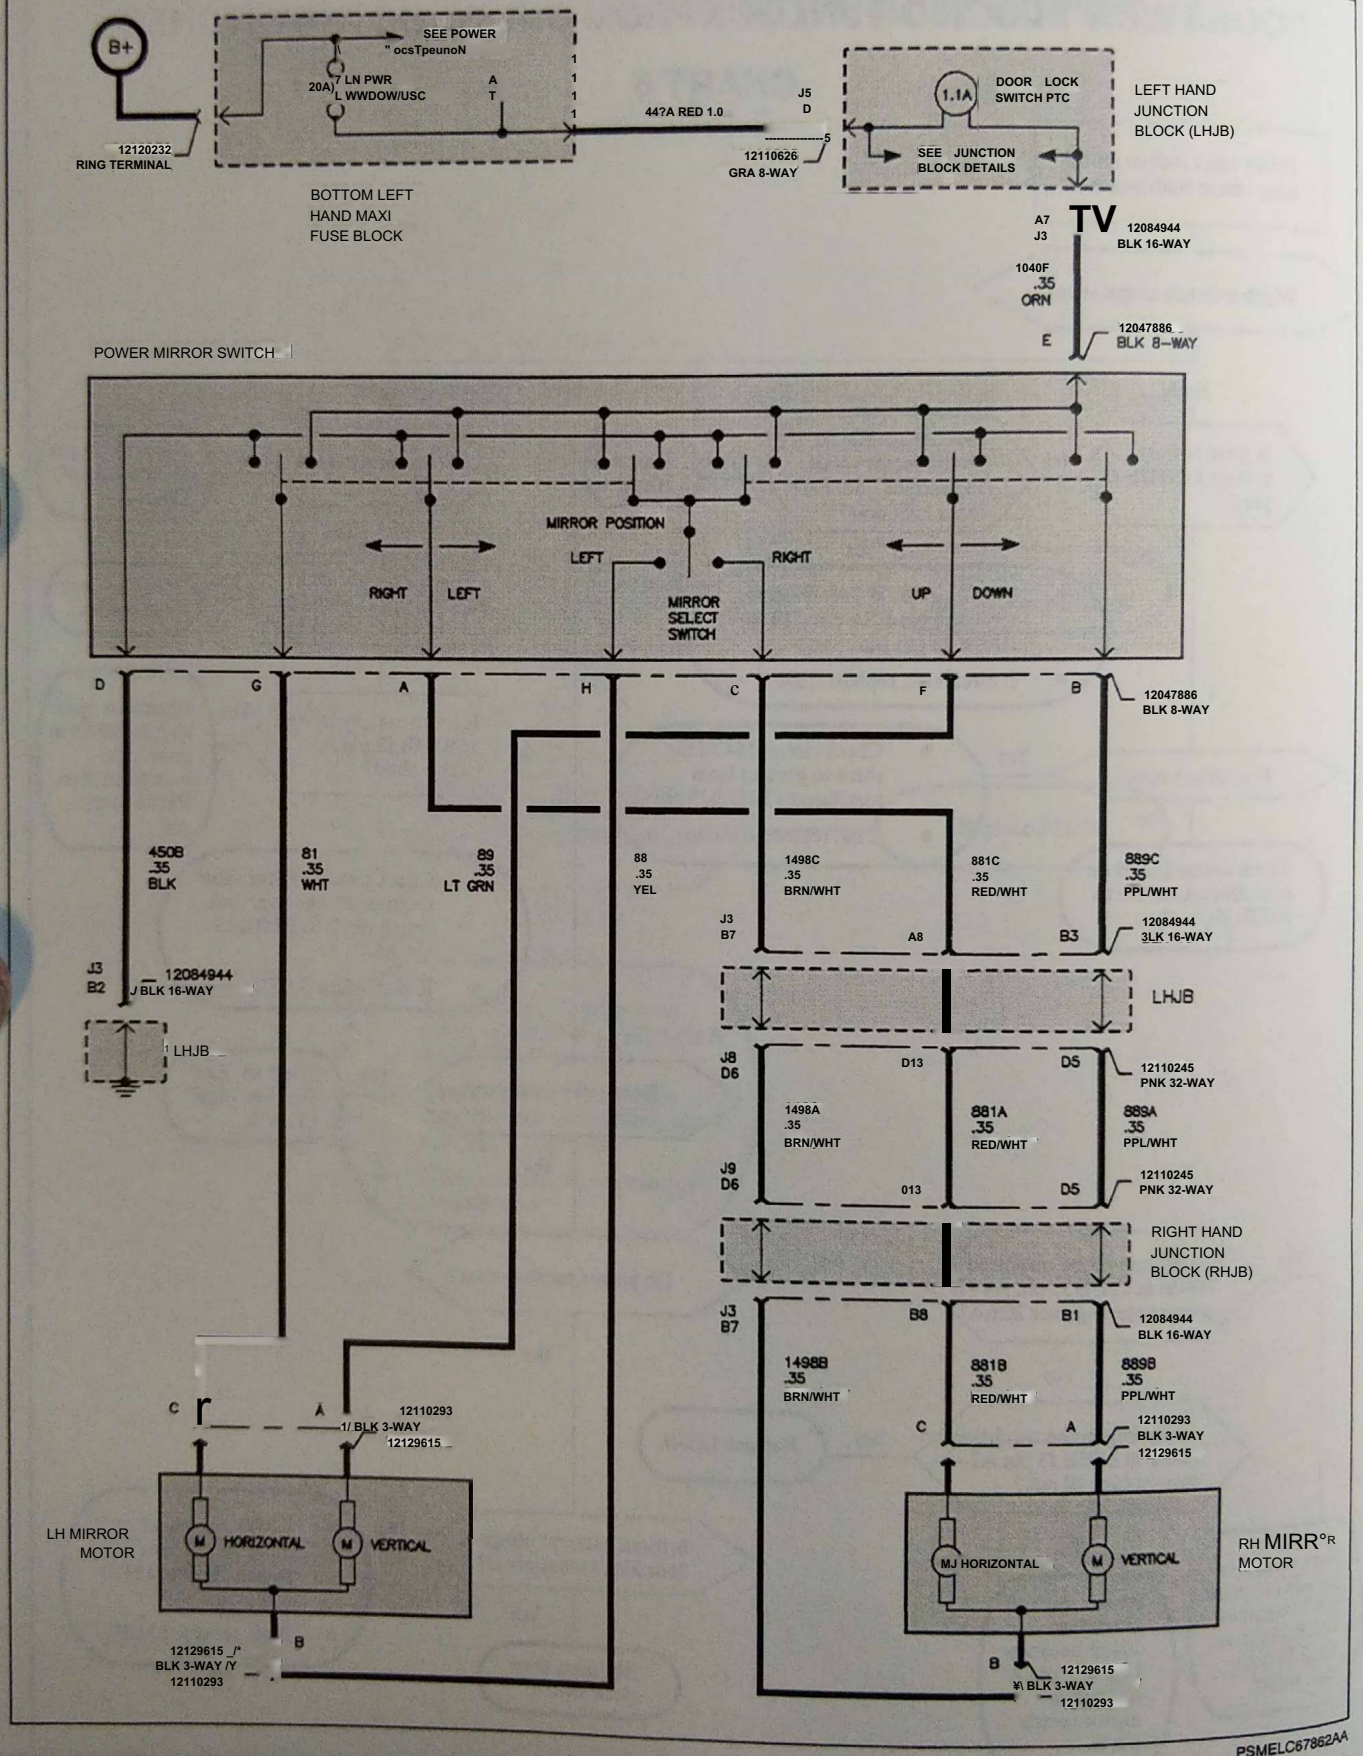

POWER MIRROR COMPONENT LOCATION VIEW

CamScanner

POWER MIRRORS

The power mirror motors all receive their power and ground through the power mirror switch. The pow mirror switch is provided by a 1.1 amp positive temperature coefficient (PTC) in the left hand junction bh dedicated ground to the switch is provided by the LHJB.

er to the power
ock (LHJB). A

POWER MIRRORS TROUBLE TREE INDEX

- Chart 1 - Both Power Mirrors Inoperative In All Directions
- Chart 2 - Left Side Power Mirror Problem
- Chart 3 - Right Side Power Mirror Problem

CamScanner

BOTH POWER MIRRORS INOPERATIVE IN ALL DIRECTIONS

CHART 1

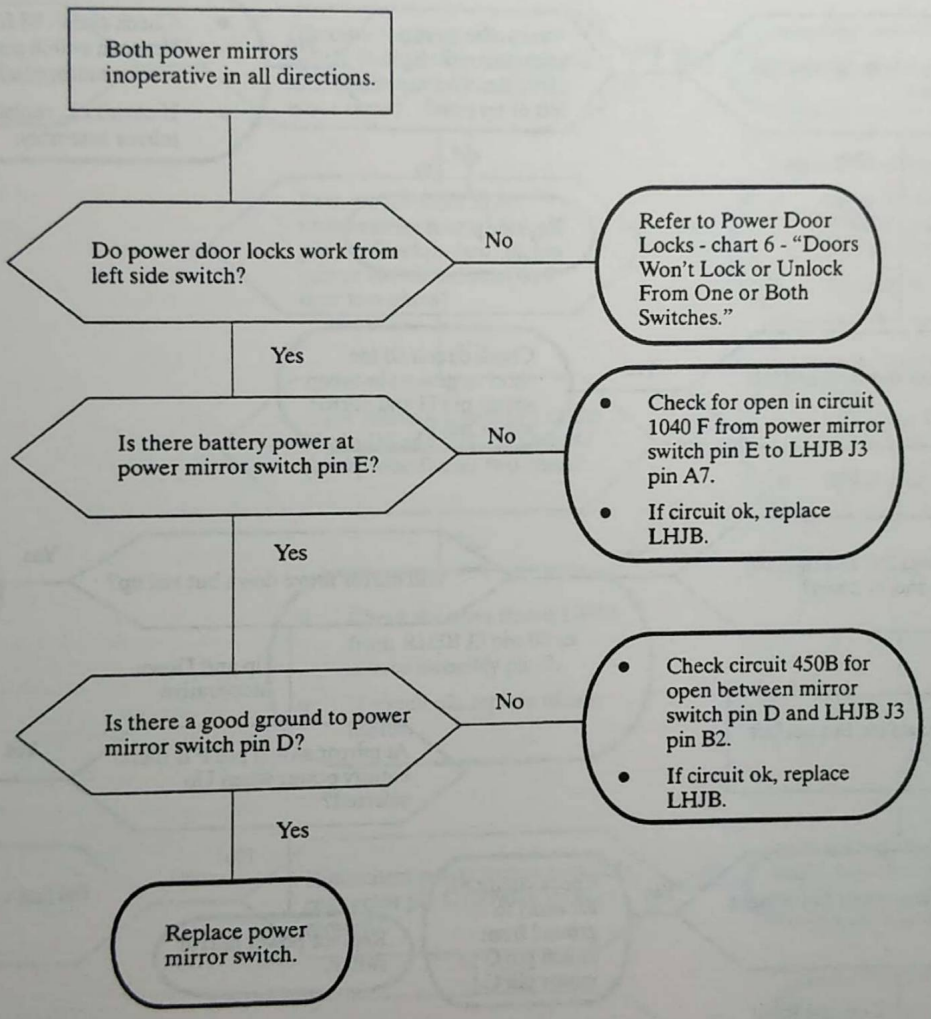
Both power mirrors inoperative in all directions.
Do power door locks work from left side switch?
No
Refer to Power Door Locks - chart 6 - "Doors Won't Lock or Unlock From One or Both Switches."
Yes
Is there battery power at power mirror switch pin E?
No
• Check for open in circuit 1040 F from power mirror switch pin E to LHJB J3 pin A7.
• If circuit ok, replace LHJB.
Yes
Is there a good ground to power mirror switch pin D?
No
• Check circuit 450B for open between mirror switch pin D and LHJB J3 pin B2.
• If circuit ok, replace LHJB.
Yes
Replace power mirror switch.

CamScanner

LEFTSIDE POWER MIRROR PROBLEM

CHART 2

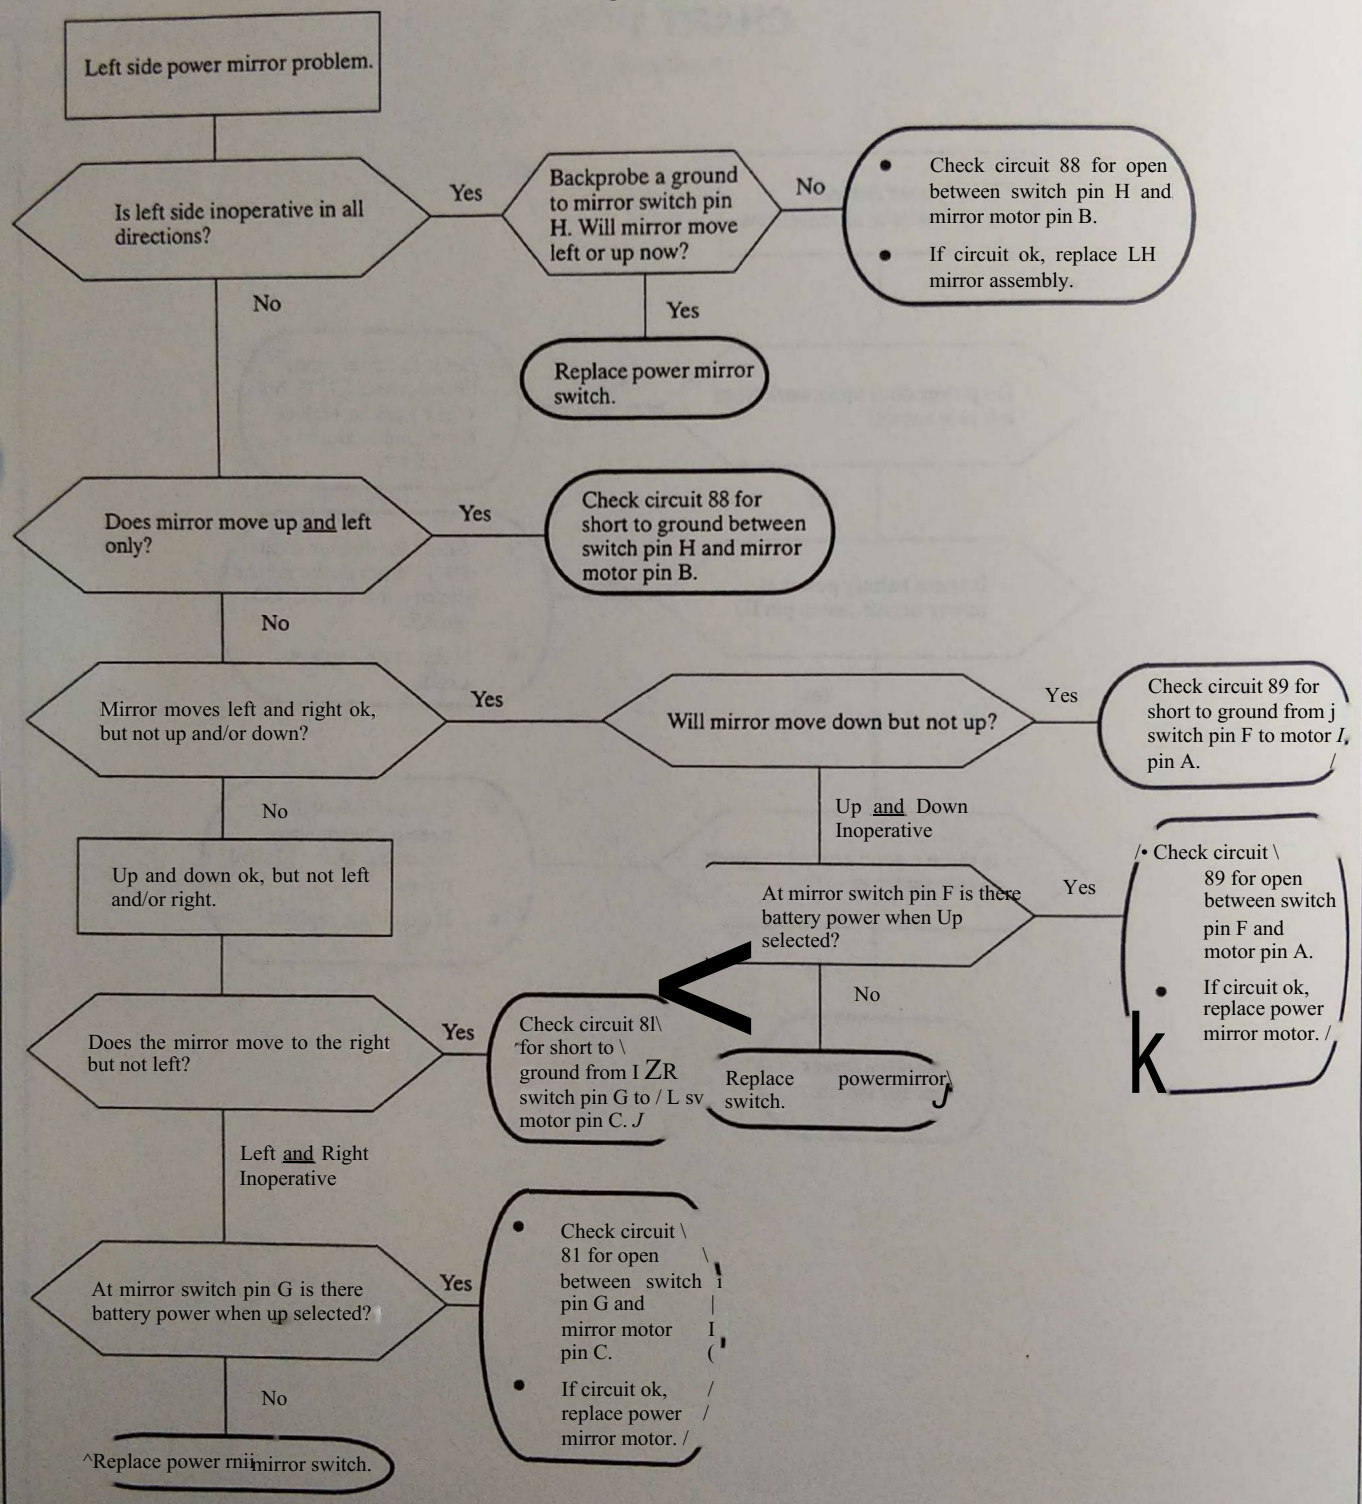
Left side power mirror problem.
Is left side inoperative in all directions?
Yes
Backprobe a ground to mirror switch pin H. Will mirror move left or up now?
No
• Check circuit 88 for open between switch pin H and mirror motor pin B.
• If circuit ok, replace LH mirror assembly.
Yes
Replace power mirror switch.
No
Does mirror move up and left only?
Yes
Check circuit 88 for short to ground between switch pin H and mirror motor pin B.
No
Mirror moves left and right ok, but not up and/or down?
Yes
Will mirror move down but not up?
Yes
Check circuit 89 for short to ground from j switch pin F to motor I, pin A.
No
Up and down ok, but not left and/or right.
Up and Down Inoperative
At mirror switch pin F is there battery power when Up selected?
Yes
• Check circuit 89 for open between switch pin F and motor pin A.
• If circuit ok, replace power mirror motor.
No
Replace powermirror switch.
Does the mirror move to the right but not left?
Yes
Check circuit 81 for short to ground from switch pin G to motor pin C.
Left and Right Inoperative
At mirror switch pin G is there battery power when up selected?
Yes
• Check circuit 81 for open between switch pin G and mirror motor pin C.
• If circuit ok, replace power mirror motor.
No
Replace power mirror switch.

CamScanner

RIGHT SIDE POWER MIRROR PROBLEM

CHART 3

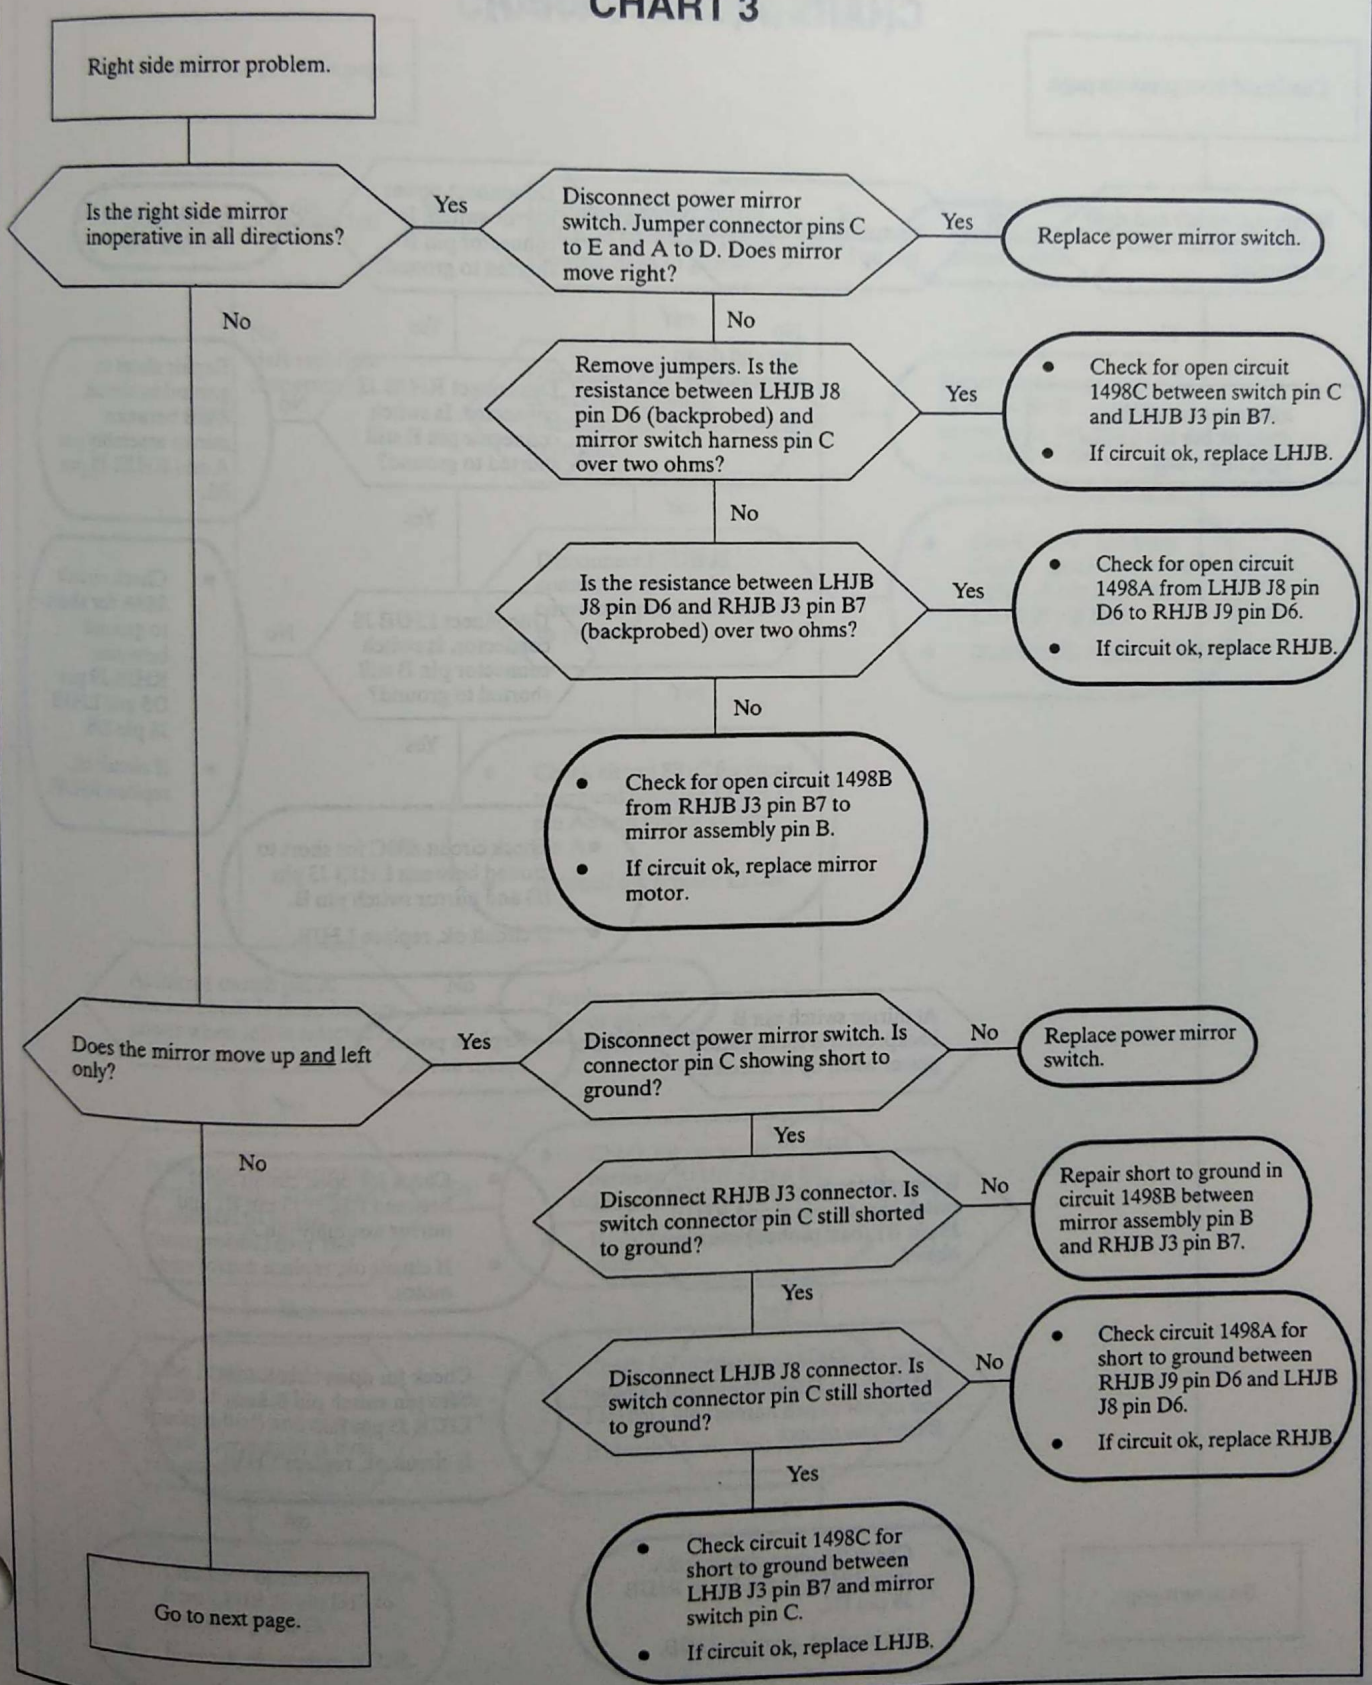
Right side mirror problem.
Is the right side mirror inoperative in all directions?
Yes
Disconnect power mirror switch. Jumper connector pins C to E and A to D. Does mirror move right?
Yes
Replace power mirror switch.
No
Remove jumpers. Is the resistance between LHJB J8 pin D6 (backprobed) and mirror switch harness pin C over two ohms?
Yes
• Check for open circuit 1498C between switch pin C and LHJB J3 pin B7.
• If circuit ok, replace LHJB.
No
Is the resistance between LHJB J8 pin D6 and RHJB J3 pin B7 (backprobed) over two ohms?
Yes
• Check for open circuit 1498A from LHJB J8 pin D6 to RHJB J9 pin D6.
• If circuit ok, replace RHJB.
No
• Check for open circuit 1498B from RHJB J3 pin B7 to mirror assembly pin B.
• If circuit ok, replace mirror motor.
No
Does the mirror move up and left only?
Yes
Disconnect power mirror switch. Is connector pin C showing short to ground?
No
Replace power mirror switch.
Yes
No
Disconnect RHJB J3 connector. Is switch connector pin C still shorted to ground?
No
Repair short to ground in circuit 1498B between mirror assembly pin B and RHJB J3 pin B7.
Yes
Disconnect LHJB J8 connector. Is switch connector pin C still shorted to ground?
No
• Check circuit 1498A for short to ground between RHJB J9 pin D6 and LHJB J8 pin D6.
• If circuit ok, replace RHJB.
Yes
• Check circuit 1498C for short to ground between LHJB J3 pin B7 and mirror switch pin C.
• If circuit ok, replace LHJB.
Go to next page.

CamScanner

RIGHT SIDE POWER MIRROR PROBLEM

CHART 3 (CONTINUED)

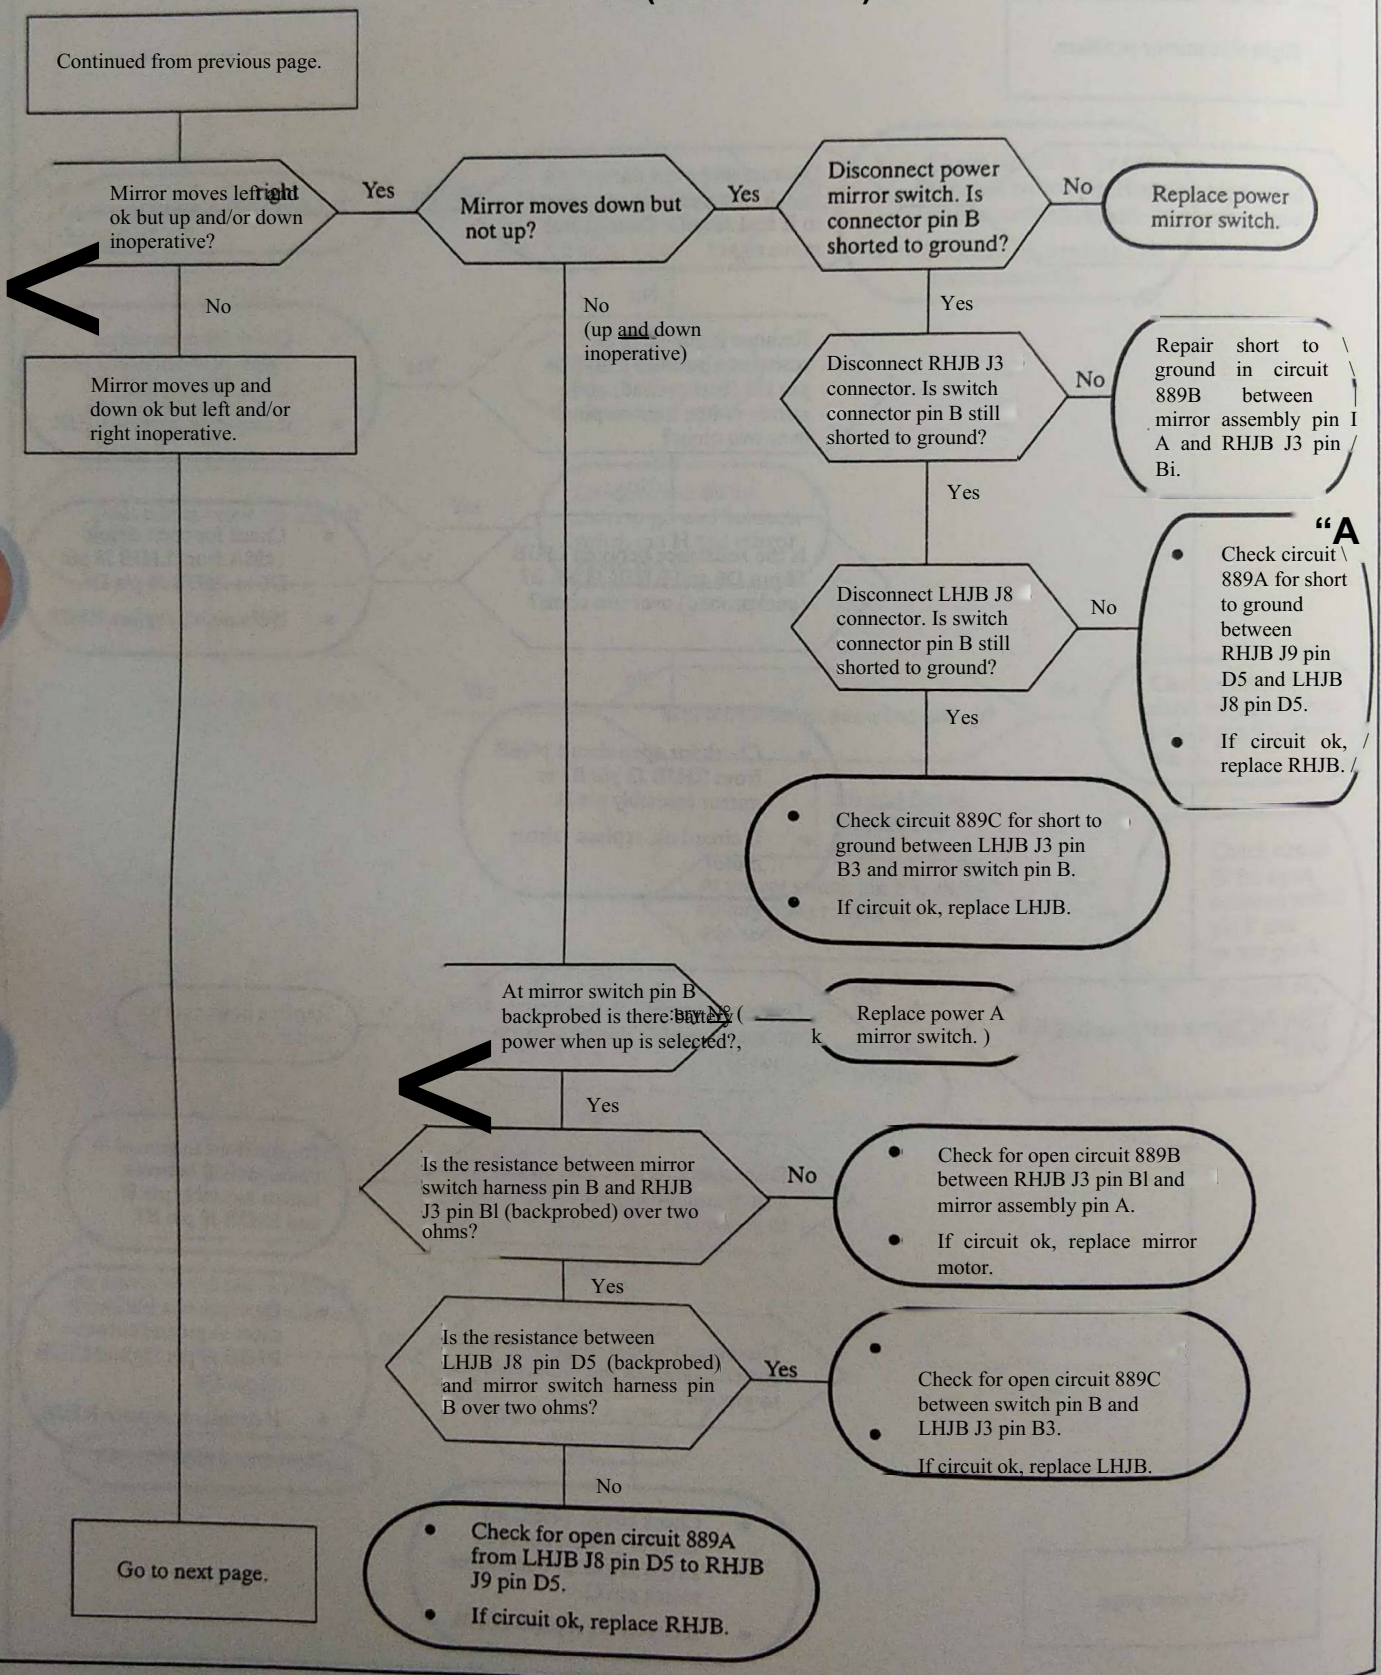
Continued from previous page.
Mirror moves left/right ok but up and/or down inoperative?
Yes
Mirror moves down but not up?
Yes
Disconnect power mirror switch. Is connector pin B shorted to ground?
No
Replace power mirror switch.
Yes
Disconnect RHJB J3 connector. Is switch connector pin B still shorted to ground?
No
Repair short to ground in circuit 889B between mirror assembly pin I A and RHJB J3 pin Bi.
Yes
Disconnect LHJB J8 connector. Is switch connector pin B still shorted to ground?
No
"A
Check circuit 889A for short to ground between RHJB J9 pin D5 and LHJB J8 pin D5.
If circuit ok, replace RHJB.
Yes
Check circuit 889C for short to ground between LHJB J3 pin B3 and mirror switch pin B.
If circuit ok, replace LHJB.
No
(up and down inoperative)
No
Mirror moves up and down ok but left and/or right inoperative.
At mirror switch pin B backprobed is there battery power when up is selected?,
Replace power mirror switch.
Yes
Is the resistance between mirror switch harness pin B and RHJB J3 pin Bl (backprobed) over two ohms?
No
Check for open circuit 889B between RHJB J3 pin Bl and mirror assembly pin A.
If circuit ok, replace mirror motor.
Yes
Is the resistance between LHJB J8 pin D5 (backprobed) and mirror switch harness pin B over two ohms?
Yes
Check for open circuit 889C between switch pin B and LHJB J3 pin B3.
If circuit ok, replace LHJB.
No
Check for open circuit 889A from LHJB J8 pin D5 to RHJB J9 pin D5.
If circuit ok, replace RHJB.
Go to next page.

RIGHT SIDE POWER MIRROR PROBLEM

CHART 3 (CONTINUED)

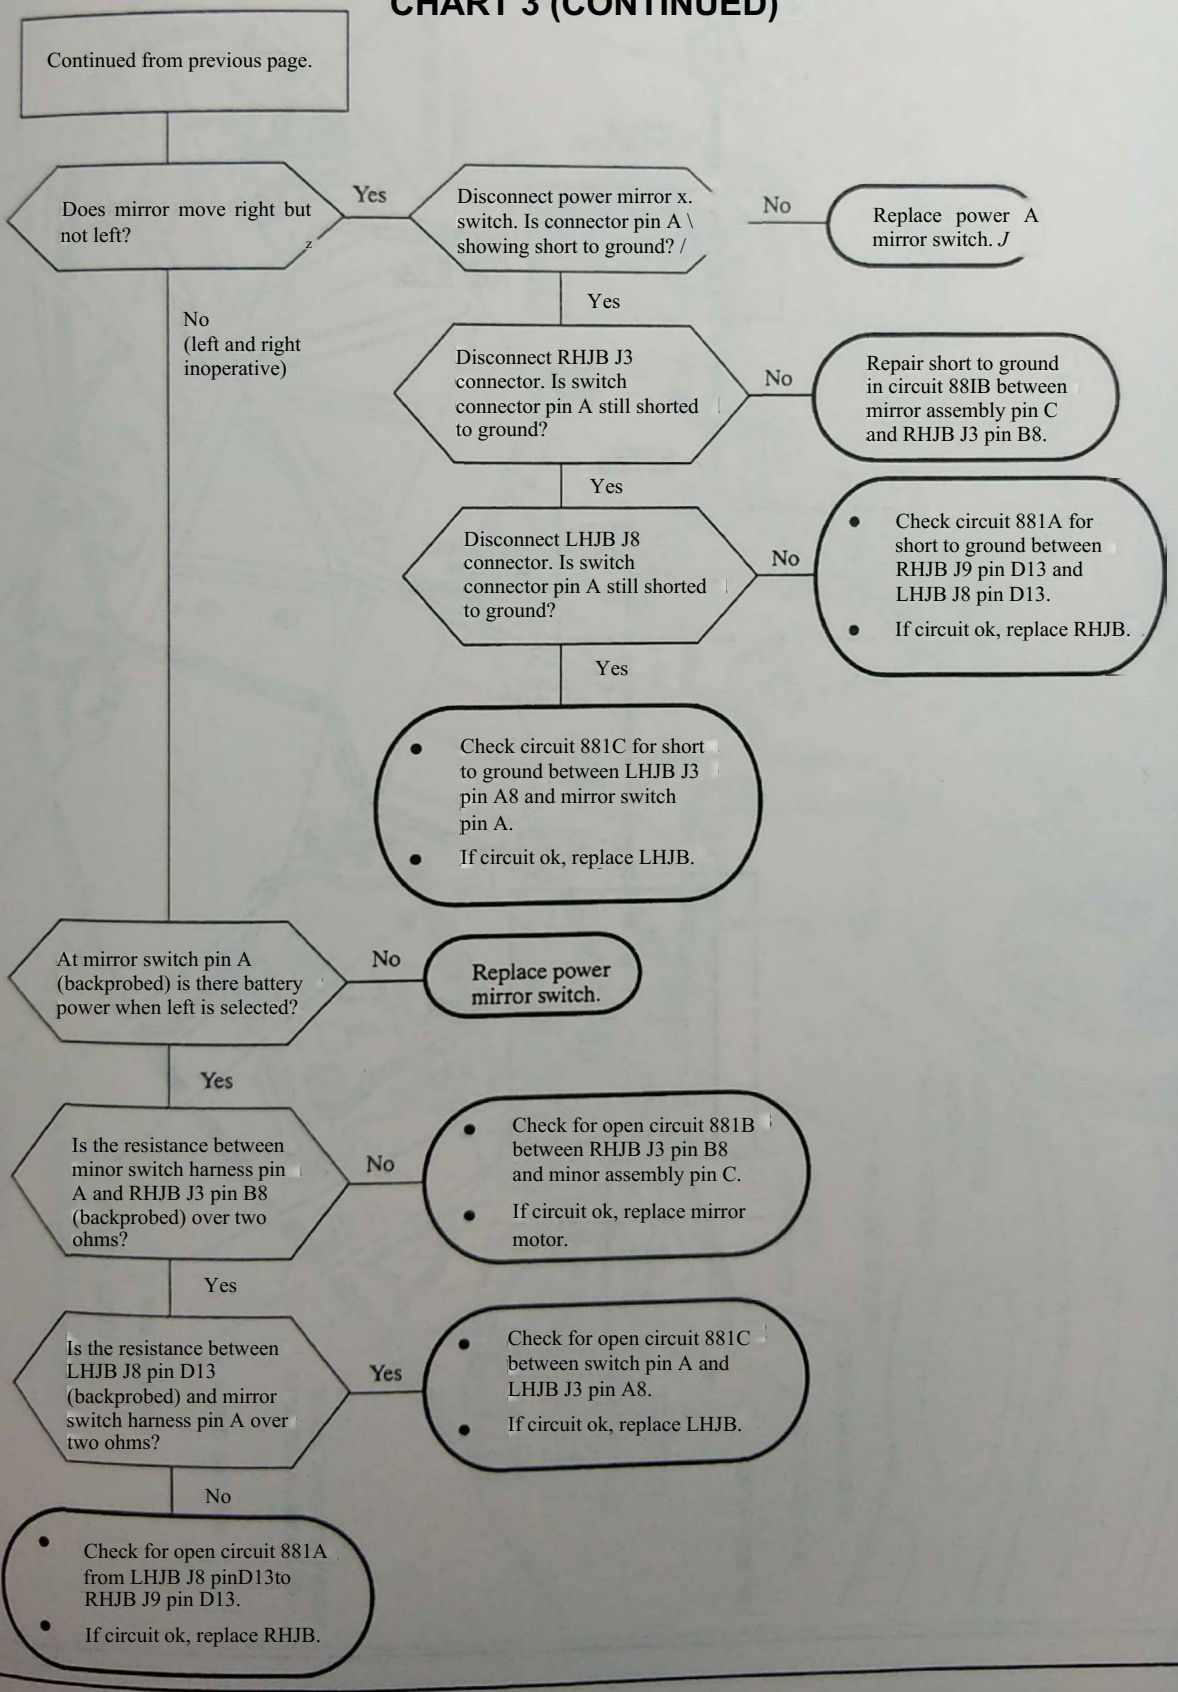
Continued from previous page.
Does mirror move right but not left?
Yes
Disconnect power mirror x. switch. Is connector pin A \ showing short to ground? /
No
Replace power A mirror switch. J
Yes
No (left and right inoperative)
Disconnect RHJB J3 connector. Is switch connector pin A still shorted to ground?
No
Repair short to ground in circuit 88IB between mirror assembly pin C and RHJB J3 pin B8.
Yes
Disconnect LHJB J8 connector. Is switch connector pin A still shorted to ground?
No
Check circuit 881A for short to ground between RHJB J9 pin D13 and LHJB J8 pin D13.
If circuit ok, replace RHJB.
Yes
Check circuit 881C for short to ground between LHJB J3 pin A8 and mirror switch pin A.
If circuit ok, replace LHJB.
At mirror switch pin A (backprobed) is there battery power when left is selected?
No
Replace power mirror switch.
Yes
Is the resistance between minor switch harness pin A and RHJB J3 pin B8 (backprobed) over two ohms?
No
Check for open circuit 881B between RHJB J3 pin B8 and minor assembly pin C.
If circuit ok, replace mirror motor.
Yes
Is the resistance between LHJB J8 pin D13 (backprobed) and mirror switch harness pin A over two ohms?
Yes
Check for open circuit 881C between switch pin A and LHJB J3 pin A8.
If circuit ok, replace LHJB.
No
Check for open circuit 881A from LHJB J8 pinD13to RHJB J9 pin D13.
If circuit ok, replace RHJB.

CamScanner

POWER OUTLET

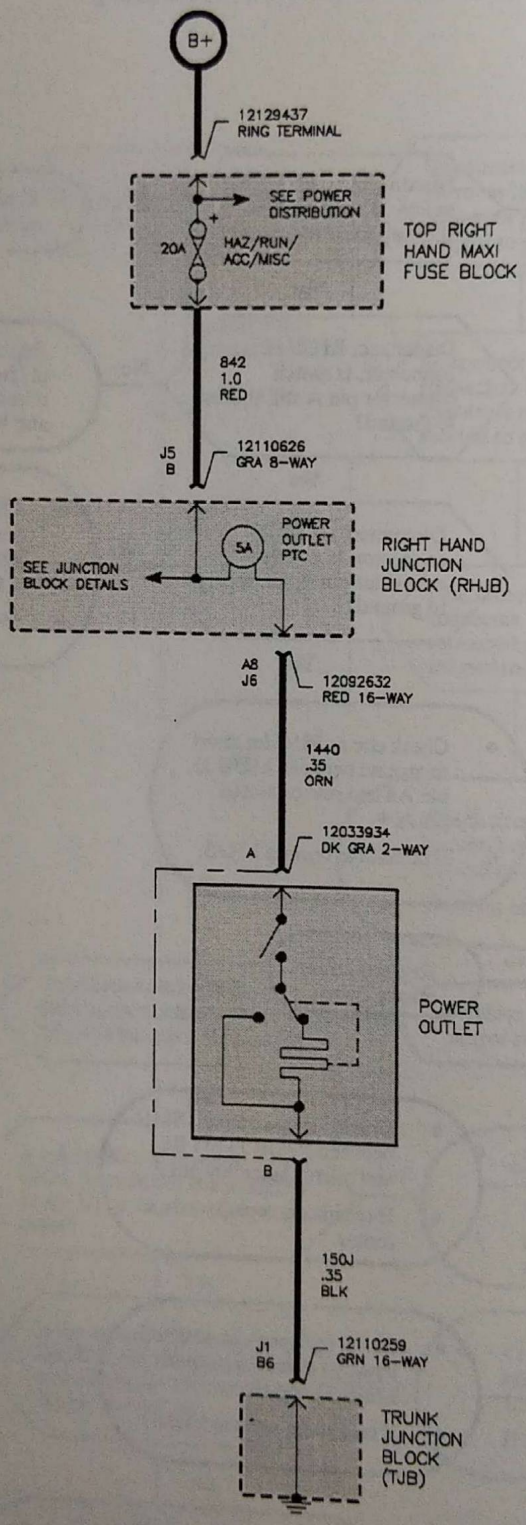

PSMELC68125AA

CamScanner

POWER OUTLET COMPONENT LOCATION VIEW

CamScanner

POWER STEERING CONTROL MODULE

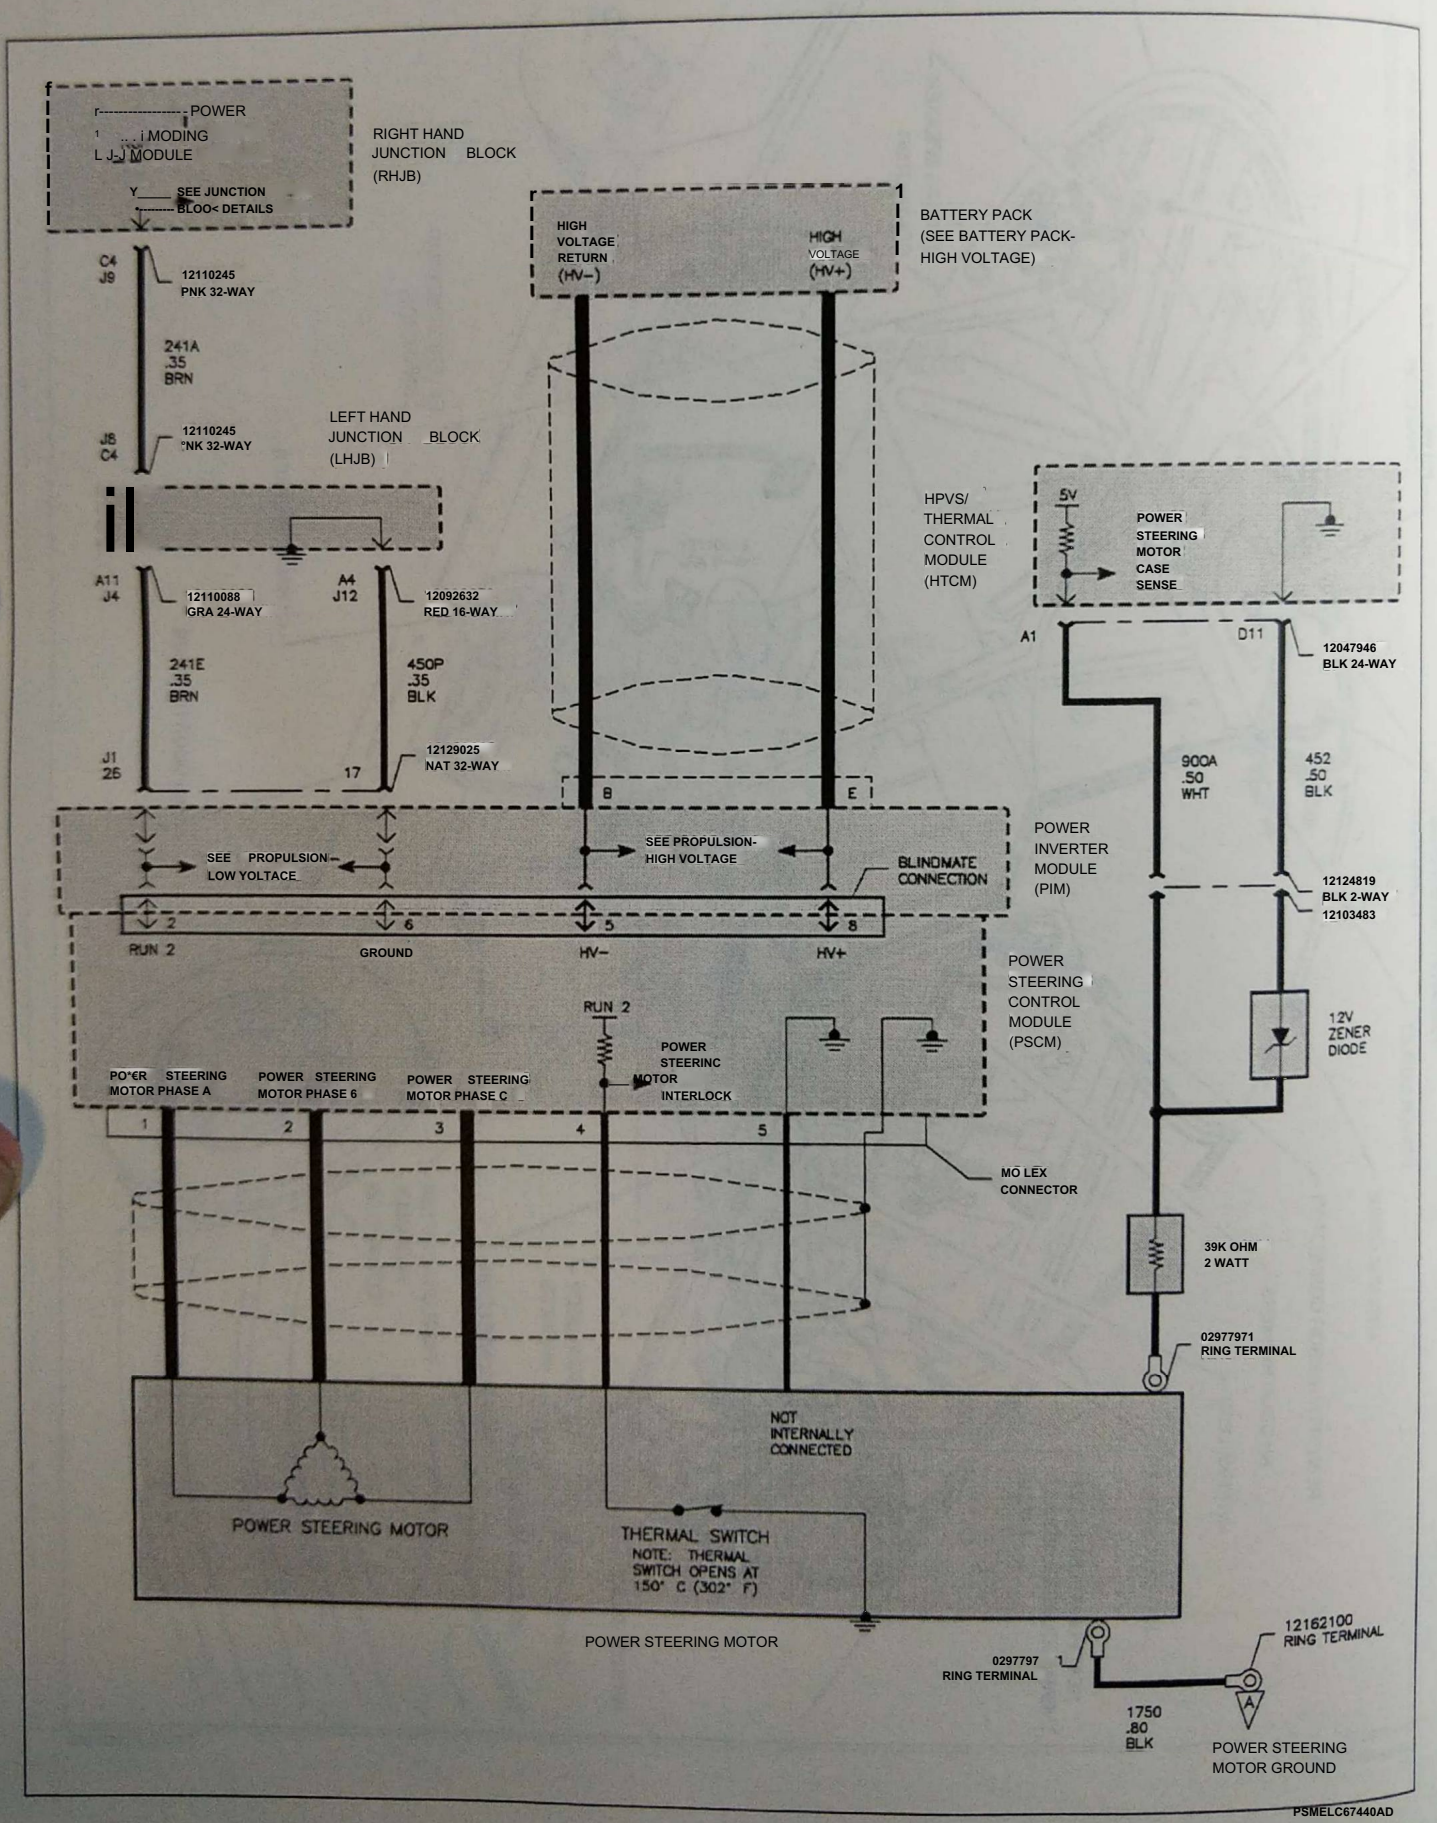

CamScanner

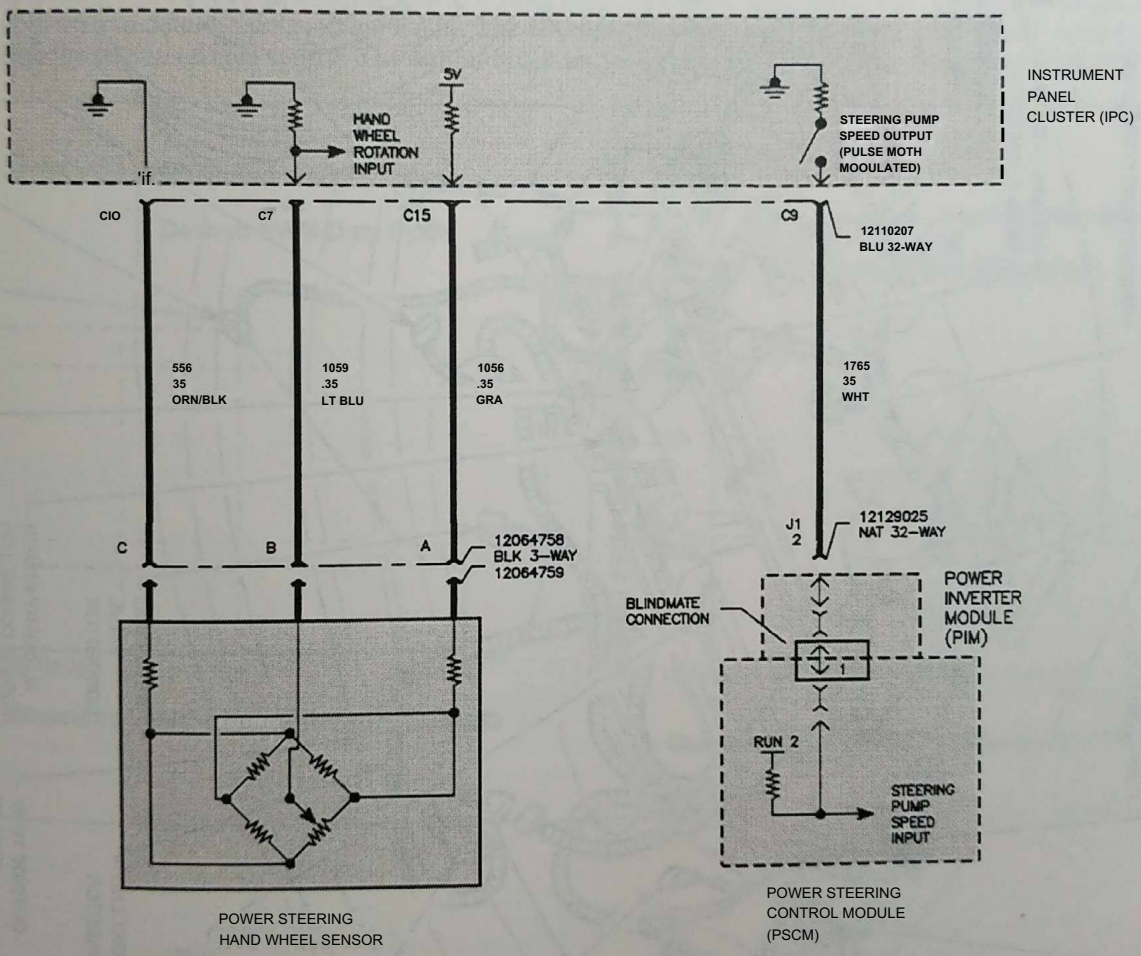

PSMELC67441AA

CamScanner

POWER STEERING CONTROL MODULE COMPONENT LOCATION VIEW

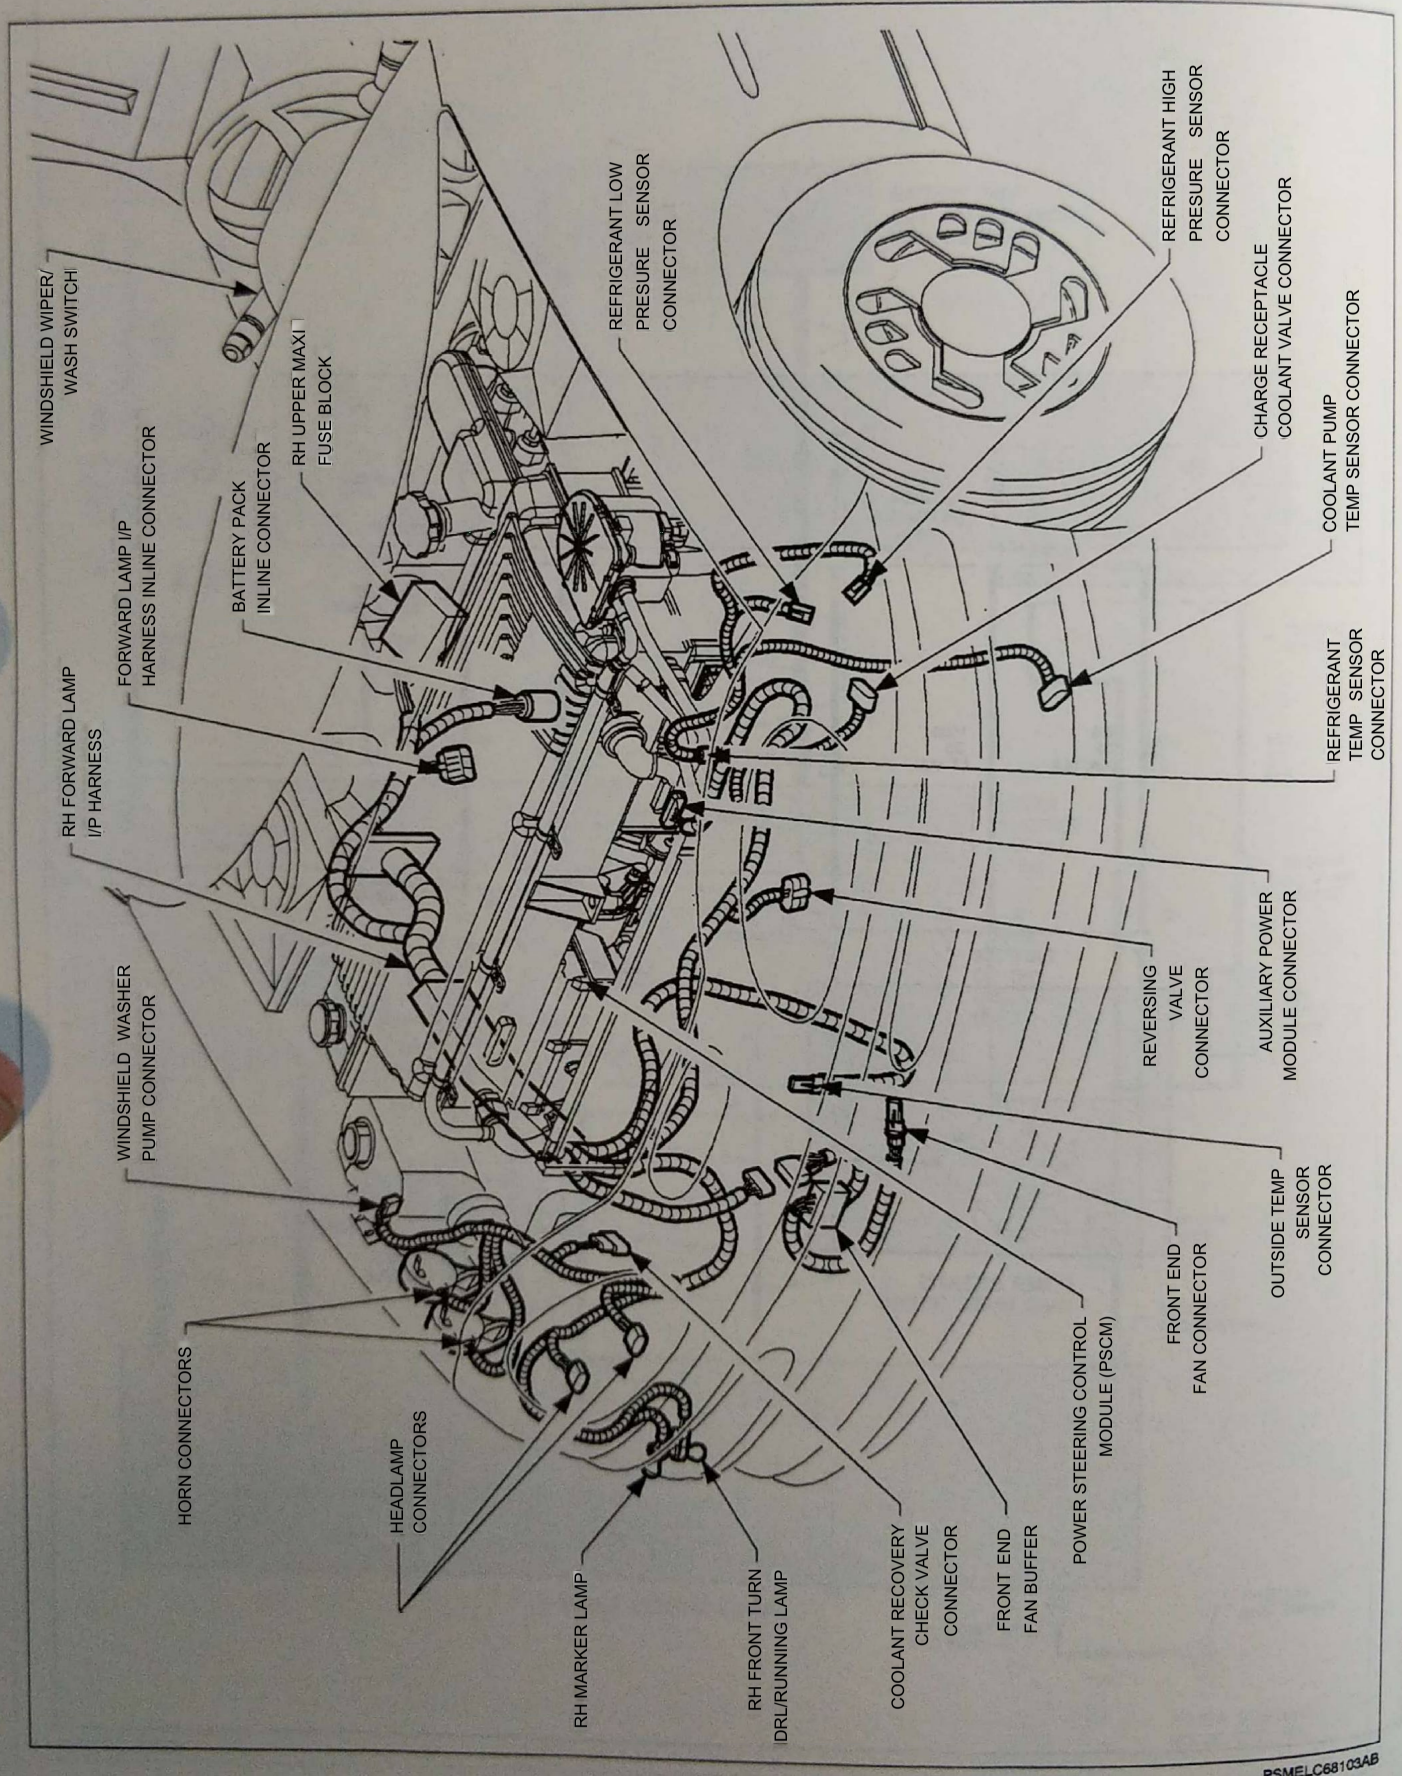
WINDSHIELD WIPER/ WASH SWITCH
RH UPPER MAXI FUSE BLOCK
BATTERY PACK INLINE CONNECTOR
FORWARD LAMP I/P HARNESS INLINE CONNECTOR
RH FORWARD LAMP I/P HARNESS
WINDSHIELD WASHER PUMP CONNECTOR
HORN CONNECTORS
HEADLAMP CONNECTORS
RH MARKER LAMP
RH FRONT TURN DRL/RUNNING LAMP
COOLANT RECOVERY CHECK VALVE CONNECTOR
FRONT END FAN BUFFER
POWER STEERING CONTROL MODULE (PSCM)
FRONT END FAN CONNECTOR
OUTSIDE TEMP SENSOR CONNECTOR
REVERSING VALVE CONNECTOR
AUXILIARY POWER MODULE CONNECTOR
REFRIGERANT TEMP SENSOR CONNECTOR
COOLANT PUMP TEMP SENSOR CONNECTOR
CHARGE RECEPTACLE COOLANT VALVE CONNECTOR
REFRIGERANT HIGH PRESURE SENSOR CONNECTOR
REFRIGERANT LOW PRESURE SENSOR CONNECTOR
PSMELC68103AB

POWER STEERING CONTROL MODULE

The purpose of the power steering control module (PSCM) is to control the power steering pump (electro-hydraulic power steering [EHPS] motor). The ESCM controls the speed of the EHPS motor, which determines power steering assist. Power steering assist is controlled to meet driving requirements. The amount of power steering assist is determined by the instrument panel cluster (IPC) based on vehicle speed and steering wheel rotation speed.

The IPC monitors the handwheel sensor feedback voltage whenever in Run mode. A five volt reference is fed to the sensor and a sensor return circuit acts as the sensor ground. The sensor feedback voltage varies between about 0.5v and 4.6v during normal steering maneuvers. The voltage may ramp up and down several times during a full steering maneuver.

The IPC uses a combination of the handwheel sensor input and vehicle speed input to calculate the steering pump $need signal, which is sent over a discreet line to the PSCM. A PSCM supplied reference voltage is pulse width modulated (PWM) between about 20% and 83 % by the IPC. Because of resistors in the PSCM and IPC, the voltage only varies between about 11.0 and 12.8 volts over the entire PWM range. The charts below show the relationships between vehicle speed and PWM and steering wheel turning rpm and PWM. Whichever input results in a larger PWM at a given time is used to determine the actual PWM. The IPC output drops to 48% when in park after 4 seconds of nonactivity from the steering wheel sensor. The output drops and remains at 20% while the charge paddle is inserted

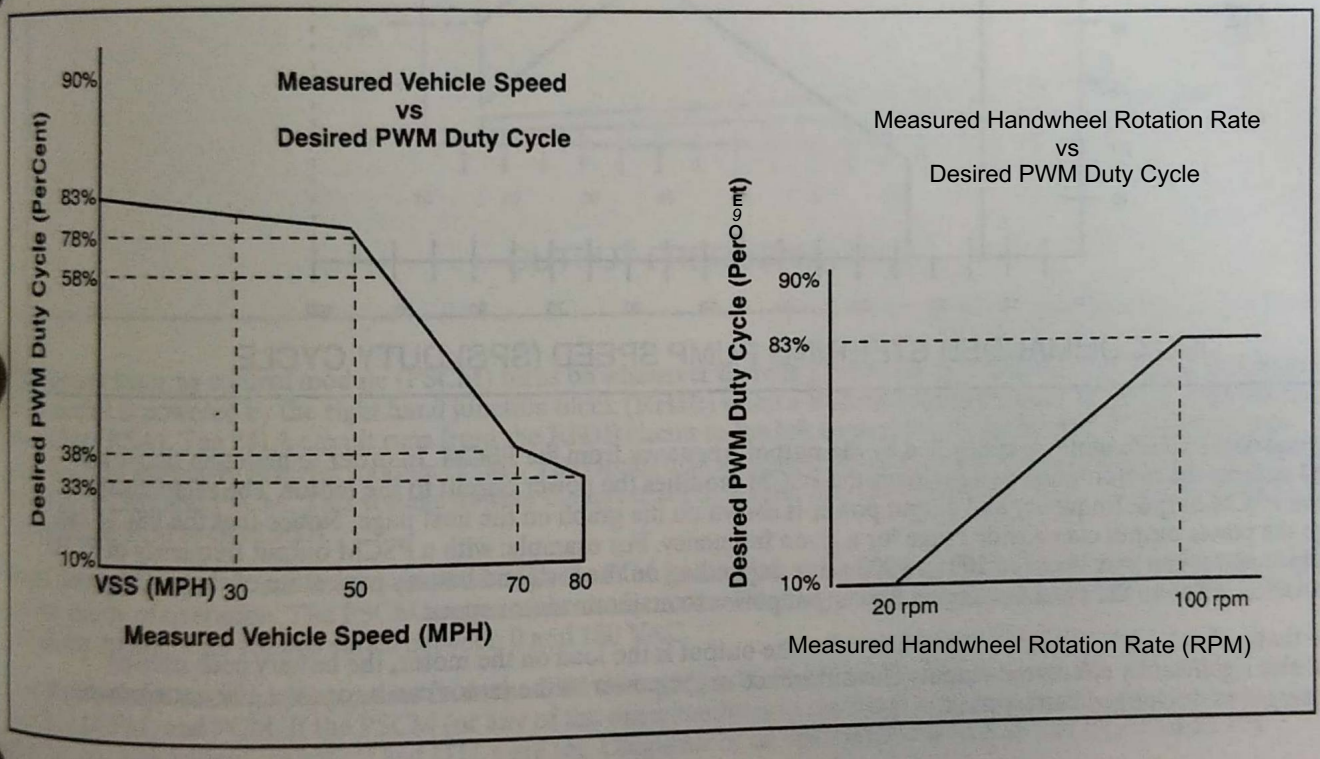

CamScanner

The IPC duty cycle signal to the PSCM is shown in the graph below.
If the signal from the IPC is out of range < 5% or > 87% the PSCM defaults to 62 Hz output. The PSCM turn. u. motor Off when the IPC sends a 77% to 87% duty cycle signal. the

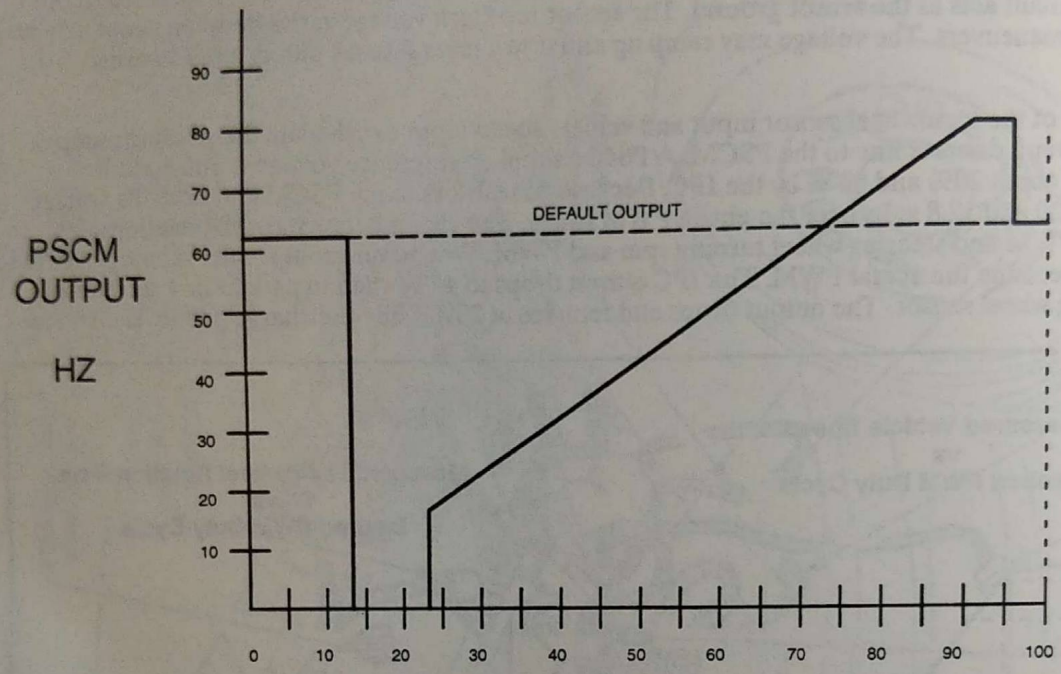

IPC COMMANDED STEERING PUMP SPEED (SPS) DUTY CYCLE

The speed of the EHPS motor is controlled by the output frequency from the PSCM. In order to maintain the powv. needed to drive the motor under various loads the PSCM modifies the power output to the motor. The relationship between PSCM output frequency and output power is shown on the graph on the next page. Notice that the PSU change the power output over a wide range for a given frequency. For example: with a PSCM output frequency,o^- the output power can vary between 100 and 900 watts depending on the load and battery pack state of charge, i los this variation is due to the PSCM changing the output power to maintain motor speed.

Notice that while the primary determining factor for the output is the load on the motor, the battery pack state of charge also significantly affects the output. The difference in the power to the motor can be as over 100 watts betv^- fully charged vs discharged battery pack.

CamScanner

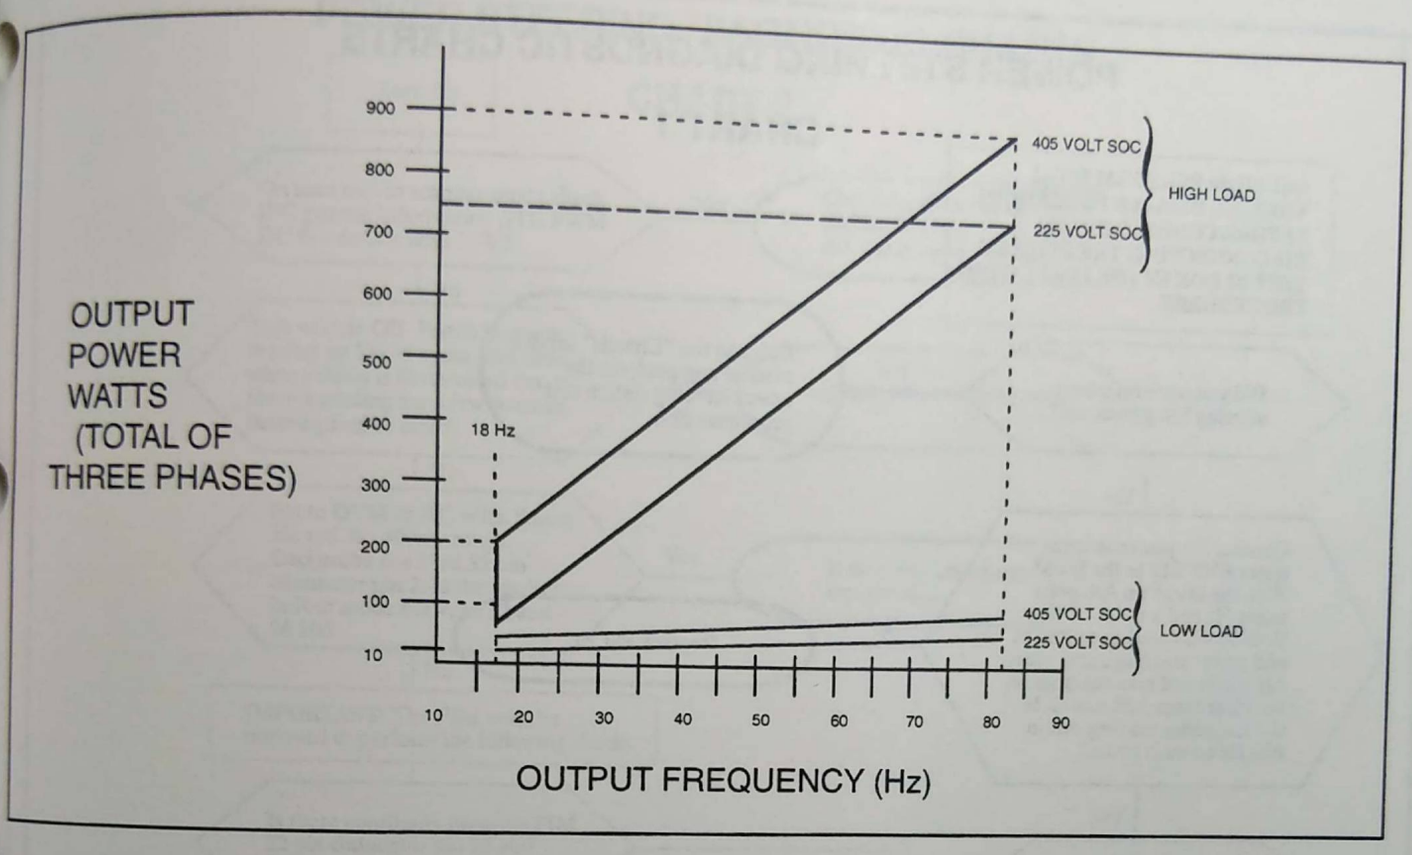

Thk ri er Steenng control module (PSCM) turns on whenever there is 12 volts on the secondary run power circuit 241. «f -l r CU zpc P°wered by the right hand junction block (RHJB) when a Run command is issued by the run/lock shifter in t0 241E to the power inverter module (PIM). The circuit divides in the PIM and feeds both the propulsion control modi l le (PC , M) and PSCM. This voltage powers the internal PSCM circuitry. The 12 volt ground for the PSCM runs ^ough the PIM to the LHJB.

Hi ^ k°bage DC power and return come through the PIM from either the battery pack or charge receptacle, depending \\L cu e mode of operation. The PSCM inverts and transforms the DC high voltage into three phase AC voltage to drive the - pump motor. This voltage varies between 0 and 180 VAC.

The high Voltage interlock loop passes from the PIM through the PSCM in addition to the accessory AC and DC power modu tim Ue ' APM) and PCM. If the PSCM (or any of the other modules in the loop) are disconnected or have an open in follln lrCUIt' high voltage is shut off and DTCs are set. Diagnosis of an open interlock loop should be performed by ~Wlng the trouble trees for the DTCs set.

There is another interlock loop that affects only the PSCM operation. It consists of wiring to and from the EHPS motor and a thermal switch in the EHPS motor. The switch opens if the motor overheats (150°C [302°F]). If the loop opens the PSCM will stop three phase power to the motor until loop continuity is restored and the vehicle (Run 2 voltage) is cvclfH ■ ta Off and back On.

JotSSM ^atches the power output to the EHPS motor. If it determines there is an over current, over temperature, e -- fault condition, power to the EHPS motor will be shut off until Run 2 power is cycled Off and back On again.

CamScanner

POWER STEERING DIAGNOSTIC CHARTS

CHART 1

CAUTION: PERFORM HIGH VOLTAGE DISABLE PROCEDURE BEFORE CONNECTING OR DISCONNECTING THE PSCM OR TESTER BOX IN THE FOLLOWING PROCEDURES.

Did you perform power steering test procedure?

No → Refer to the "Chassis" service manual and perform the power steering system test procedure first.

Yes

Connect the power steering tester EV97012 to the DVM. With the DVM on A/C volts, select Hz and a range of 40. With tool hooked up to PSCM and power steering pump enter run mode and take readings on switch settings A,B, and C. Is the frequency reading within two Hz on each phase?

No → Replace PSCM.

Yes

What are the frequency readings?

- 0 Hz → Go to Chart 2
- 1–37, 47–59, or 66–83 Hz → ^^Go to Chart 3
- 60-65 Hz → G to Chart 4
- 38-46 Hz (Normal Reading)

Turn the steering wheel while watching the reading - does the frequency jump to between 76 and 80 Hz for four seconds, then return to 38-46 Hz?

No → Select IPC general info on PDT scanner mode. Does HWS INPUT fluxuate between about 0.5 and 4.6 while turning the steering wheel?

No → Replace handwheel sensor (part of steering wheel assembly).

Yes → ^Replace IPC.

Yes

Drive vehicle - do the frequencies match the chart for speed vs Duty cycle under power steering control module? (on scan tool in scanner mode in IPC general information)

No → Does the IPC display the correct speed while driving?

No → Refer to IPC chart 3 vss erratic/flashing/zero all the time.

Yes → Replace IPC.

Yes

Perform power steering system hydraulic test.

CamScanner

POWER STEERING DIAGNOSTIC CHARTS

CHART 2

Zero Hz

On scan tool in scanner mode check IPC general information STR PWM DC % - does it read 20%?

Yes → Check for presence of chargeX paddle. If inserted, remove it and begin chart 1 again.

No

Vehicle Off. Watch frequency reading on DVM again, this time when vehicle is first turned On. Is there a reading for a few seconds before going to zero?

Yes → Replace power steering pump^^^

No

Set to DVM to AC volts. Select Hz and the 400mv range. Backprobe the PIM 32 pin connector pin 2. Is the reading in Run mode between 72 and" 76 Hz?

Yes → C If no codes are present replace I PC.

No

IMPORTANT: The PIM must be removed to perform the following checks.

Is there continuity between PIM 32 pin connector pin 26 and PSCM/PIM connector pin 2?

Yes

Is there continuity between PIM 32 pin connector pin 17 and PSCM/PIM connector pin 6?

Yes

Is there continuity between PIM 32 pin connector pin 2 and PSCM/PIM connector pin 1?

No → Replace PIM.

Yes

Is there continuity between PIM battery pack canon connector pin B and PSCM/PIM connector pin 5?

Yes

Is there continuity between PIM battery pack canon connector pin E and PSCM/PIM connector pin 8?

Yes

- Replace PSCM.
- If condition is still present replace power steering pump for seized condition.

CamScanner

POWER STEERING DIAGNOSTIC CHARTS

CHART 3

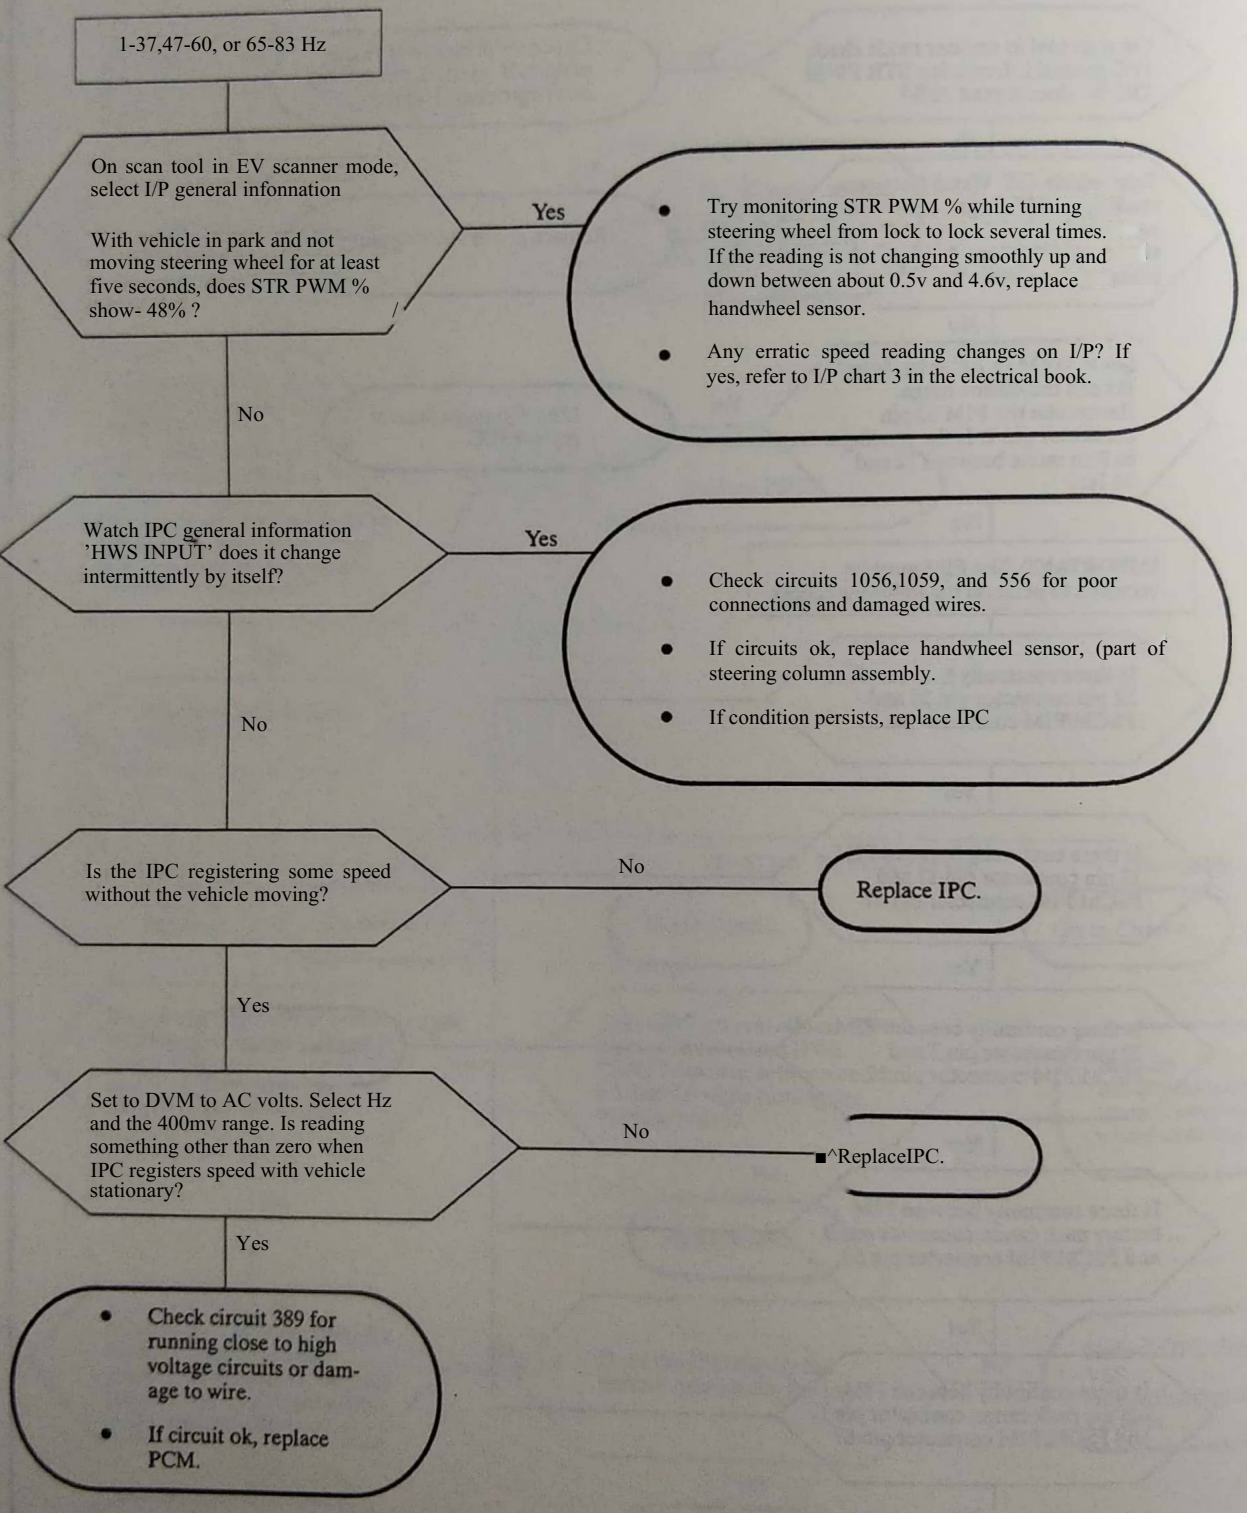
1-37,47-60, or 65-83 Hz
On scan tool in EV scanner mode, select I/P general infonnation
With vehicle in park and not moving steering wheel for at least five seconds, does STR PWM % show- 48% ?
Yes
Try monitoring STR PWM % while turning steering wheel from lock to lock several times. If the reading is not changing smoothly up and down between about 0.5v and 4.6v, replace handwheel sensor.
Any erratic speed reading changes on I/P? If yes, refer to I/P chart 3 in the electrical book.
No
Watch IPC general information 'HWS INPUT' does it change intermittently by itself?
Yes
Check circuits 1056,1059, and 556 for poor connections and damaged wires.
If circuits ok, replace handwheel sensor, (part of steering column assembly.
If condition persists, replace IPC
No
Is the IPC registering some speed without the vehicle moving?
No
Replace IPC.
Yes
Set to DVM to AC volts. Select Hz and the 400mv range. Is reading something other than zero when IPC registers speed with vehicle stationary?
No
^ReplaceIPC.
Yes
Check circuit 389 for running close to high voltage circuits or damage to wire.
If circuit ok, replace PCM.

CamScanner

POWER STEERING DIAGNOSTIC CHARTS

CHART 4

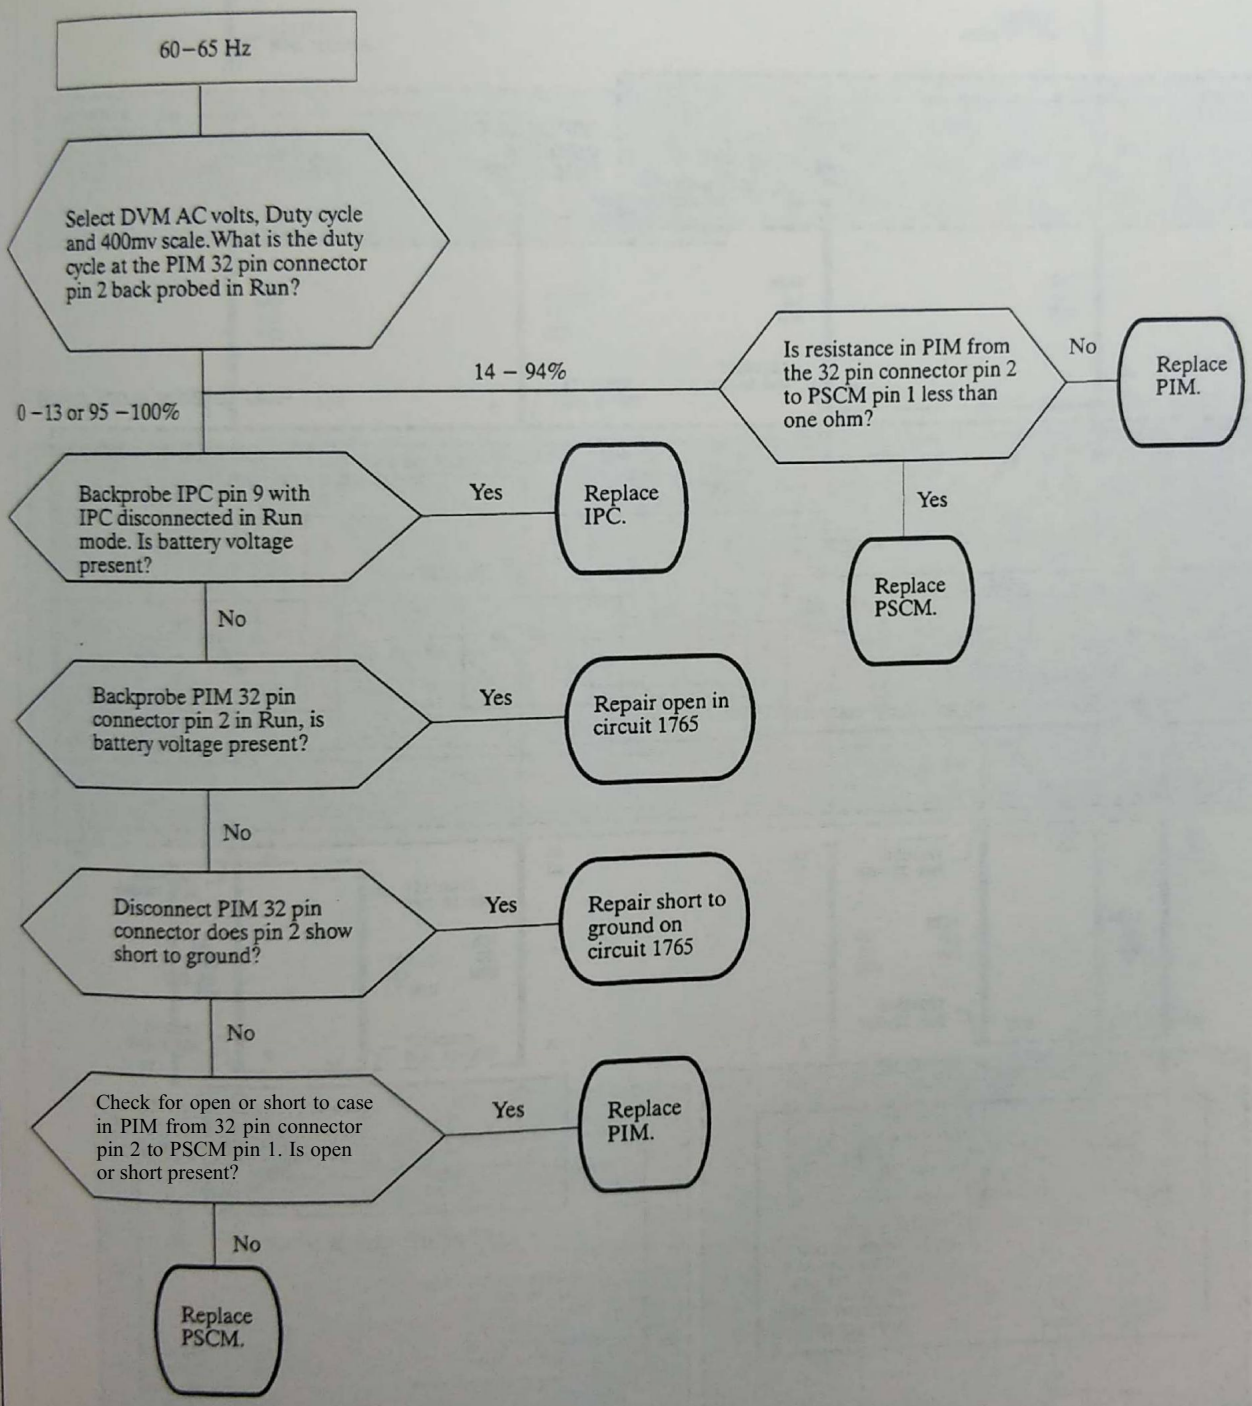
60–65 Hz
Select DVM AC volts, Duty cycle and 400mv scale. What is the duty cycle at the PIM 32 pin connector pin 2 back probed in Run?
14 – 94%
0 –13 or 95 –100%
Is resistance in PIM from the 32 pin connector pin 2 to PSCM pin 1 less than one ohm?
No
Replace PIM.
Yes
Replace PSCM.
Backprobe IPC pin 9 with IPC disconnected in Run mode. Is battery voltage present?
Yes
Replace IPC.
No
Backprobe PIM 32 pin connector pin 2 in Run, is battery voltage present?
Yes
Repair open in circuit 1765
No
Disconnect PIM 32 pin connector does pin 2 show short to ground?
Yes
Repair short to ground on circuit 1765
No
Check for open or short to case in PIM from 32 pin connector pin 2 to PSCM pin 1. Is open or short present?
Yes
Replace PIM.
No
Replace PSCM.

CamScanner

POWER WINDOWS

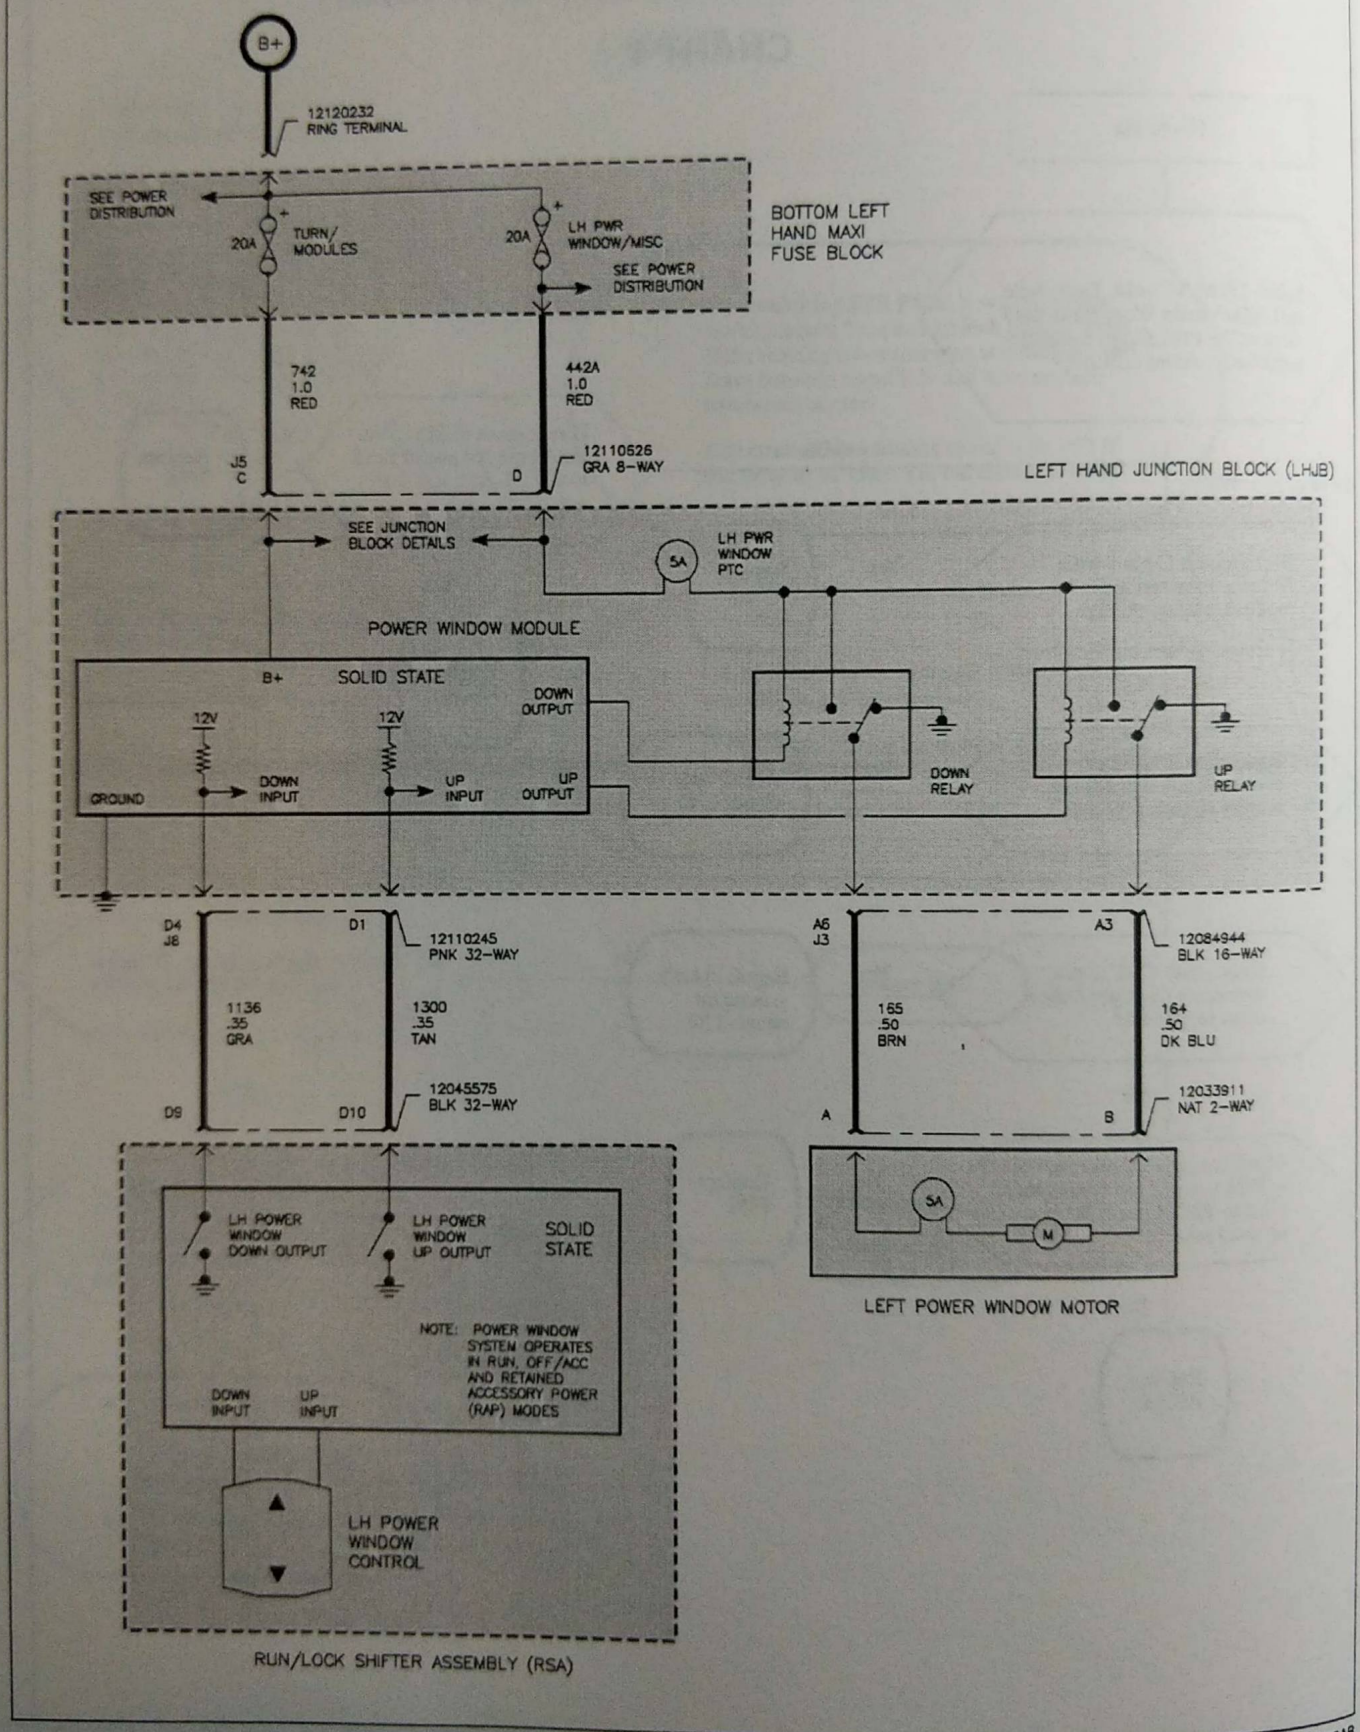

CamScanner

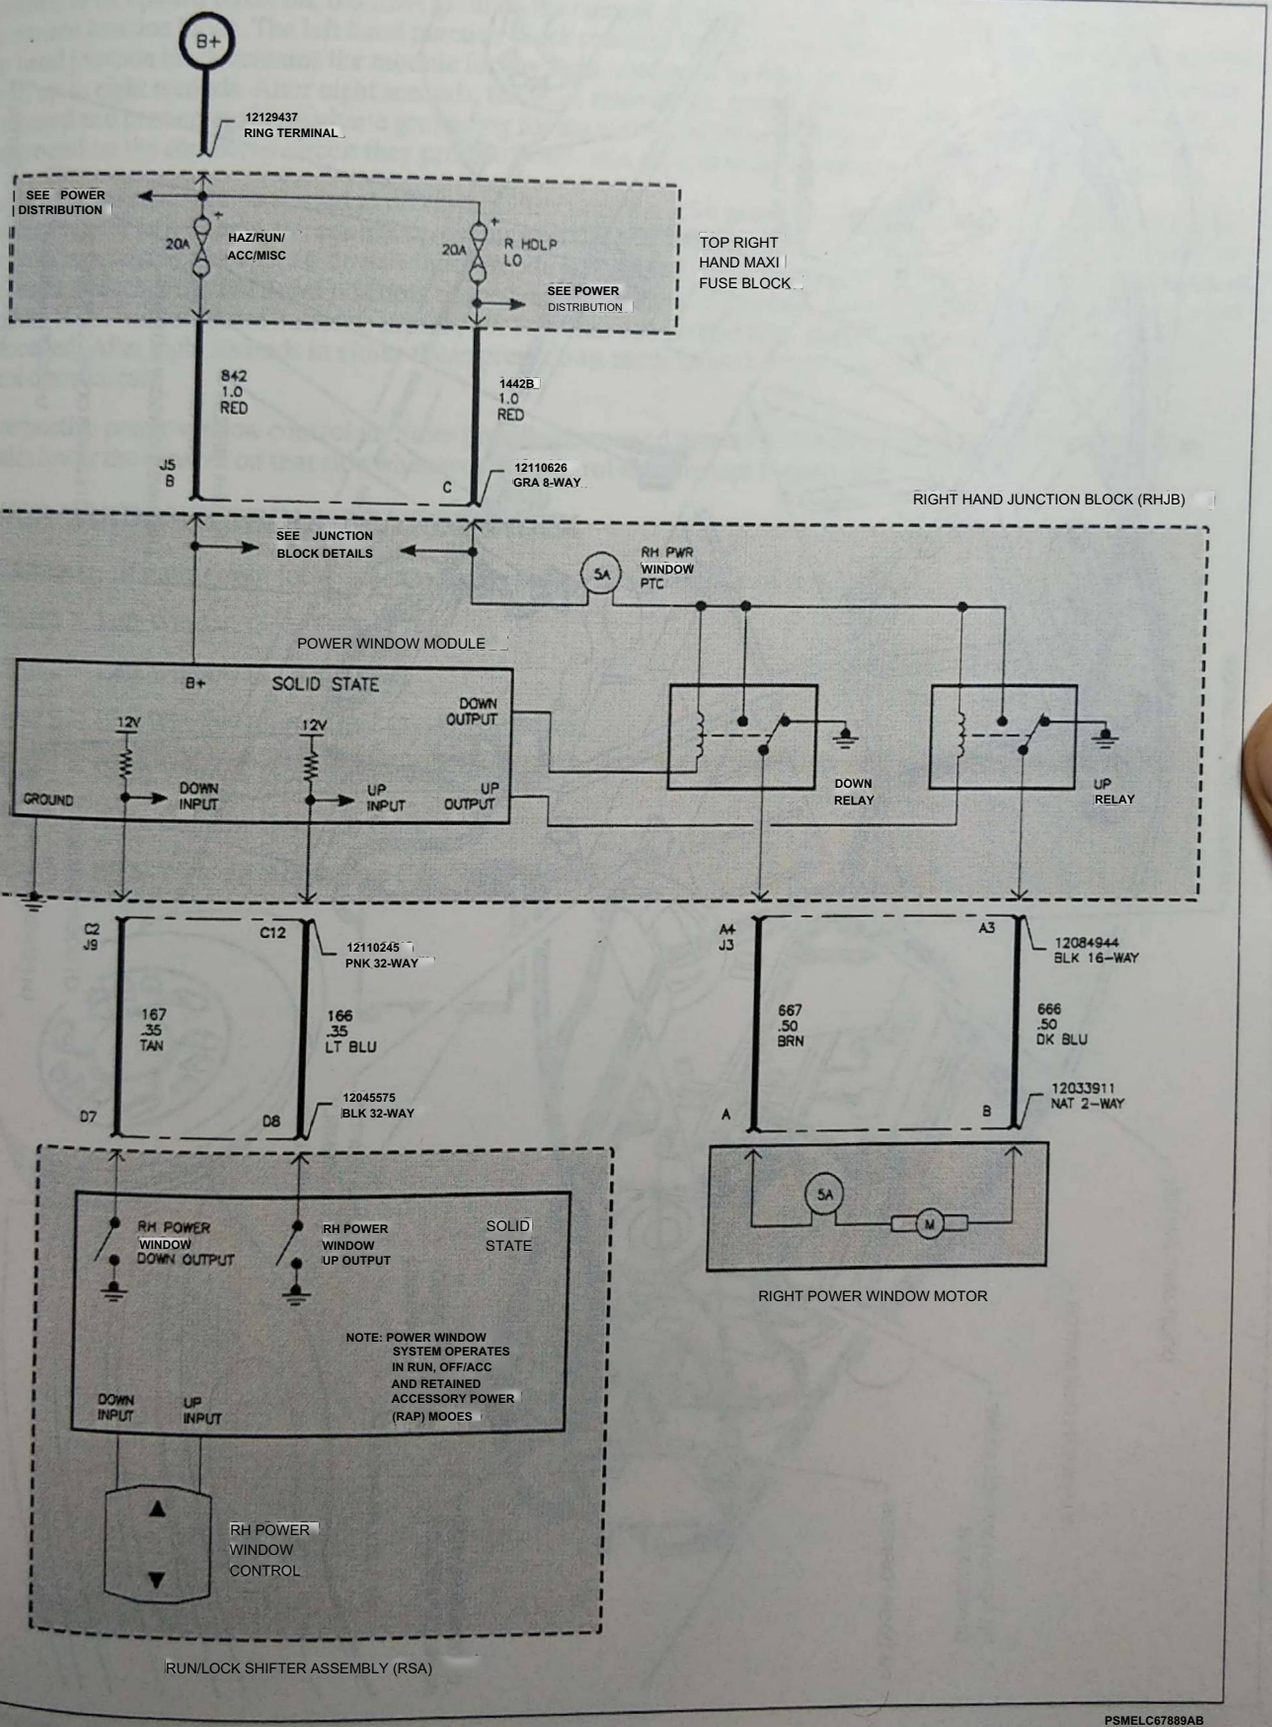

PSMELC67889AB

CamScanner

POWER WINDOW COMPONENT LOCATION VIEW

CamScanner

POWER WINDOWS

ower window switches are located on the run/lock shifter assembly (RSA). When a power window button is ed in an upward direction, the RSA grounds the control up circuit to the power window module in the ooriate junction block. The left hand junction block contains the power window module for the left window and the ?hand junction block contains the module for the right window. The RSA grounds the circuit as long as the button h Id up to eight seconds. After eight seconds, the RSA releases the ground to the module. The window button must h released and pressed again to initiate grounding for another eight seconds. Whenever the power window modules rVa eround on the control up circuit they provide power and ground to the window motor to move the window up.

If the window switches are depressed in downward direction, the RSA provides a ground to the control down circuit in the same manner as it does to the control up circuit with the following exception. If the window down button is held for more than one second, the express down window mode is activated. In this mode the window will continue its downward travel until it reaches the full down position, or the window switch is depressed again in either the upward or downward direction. If the window down button is pressed for less than one second after express down has been activated, it will be cancelled. After eight seconds in either the express down mode or with the switch held, the RSA ungrounds the control down circuit.

The respective power window control modules provide power and ground to the window motor that it controls. The modules lower the window on that side whenever the control down circuit is grounded.

POWER WINDOWS TROUBLE TREE INDEX

IMPORTANT: If power door locks are also inoperative, refer to “Power Door Lock Diagnosis” first.

- Chart 1 - Left Window Goes Down Only
- Chart 2 - Left Window Goes Up Only
- Chart 3 - Left Window Inoperative (No Up or Down)
- Chart 4 - Right Window Goes Down Only
- Chart 5 - Right Window Goes Up Only
- Chart 6 - Right Window Inoperative (No Up or Down)

CamScanner

LEFT WINDOW GOES DOWN ONLY

CHART 1

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

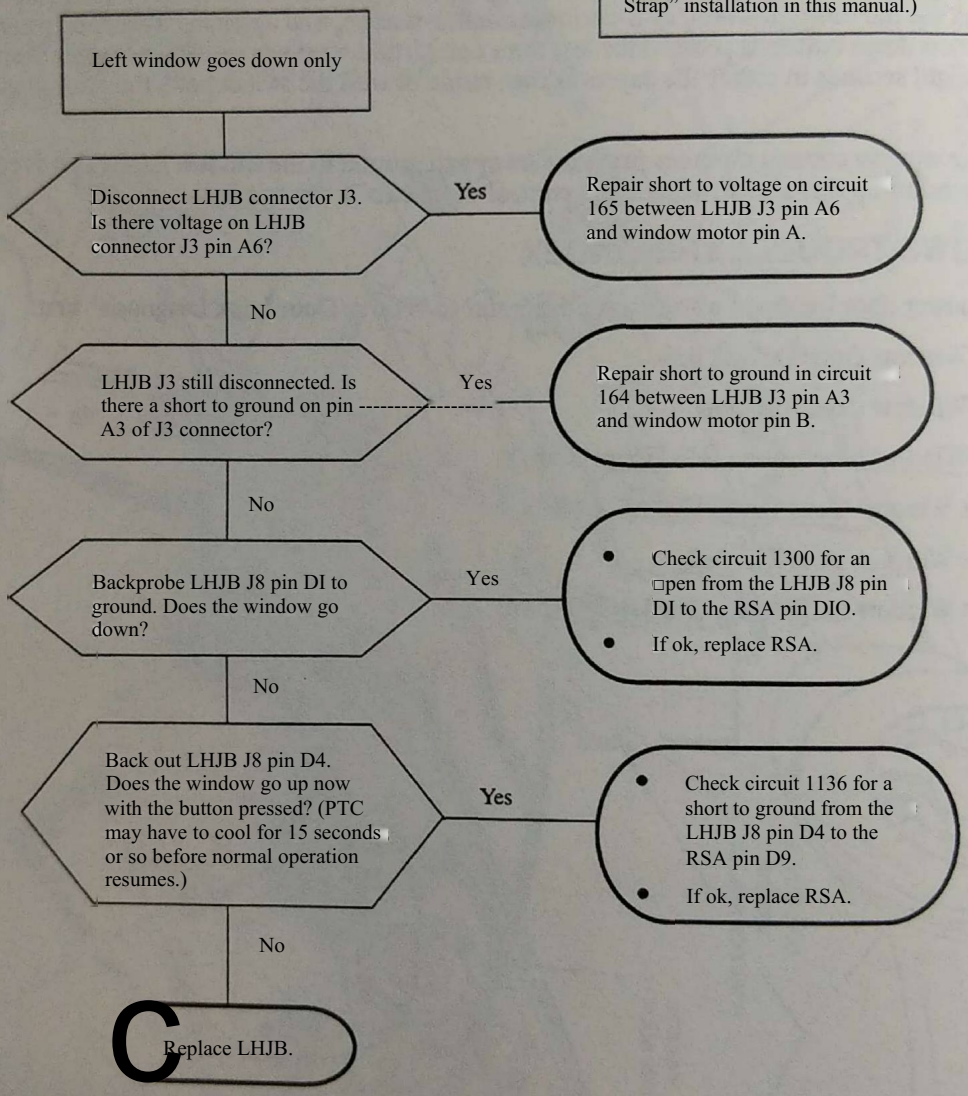
Left window goes down only
Disconnect LHJB connector J3. Is there voltage on LHJB connector J3 pin A6?
Yes
Repair short to voltage on circuit 165 between LHJB J3 pin A6 and window motor pin A.
No
LHJB J3 still disconnected. Is there a short to ground on pin A3 of J3 connector?
Yes
Repair short to ground in circuit 164 between LHJB J3 pin A3 and window motor pin B.
No
Backprobe LHJB J8 pin DI to ground. Does the window go down?
Yes
Check circuit 1300 for an open from the LHJB J8 pin DI to the RSA pin DIO.
If ok, replace RSA.
No
Back out LHJB J8 pin D4. Does the window go up now with the button pressed? (PTC may have to cool for 15 seconds or so before normal operation resumes.)
Yes
Check circuit 1136 for a short to ground from the LHJB J8 pin D4 to the RSA pin D9.
If ok, replace RSA.
No
C
Replace LHJB.

CamScanner

LEFT WINDOW GOES UP ONLY

CHART2

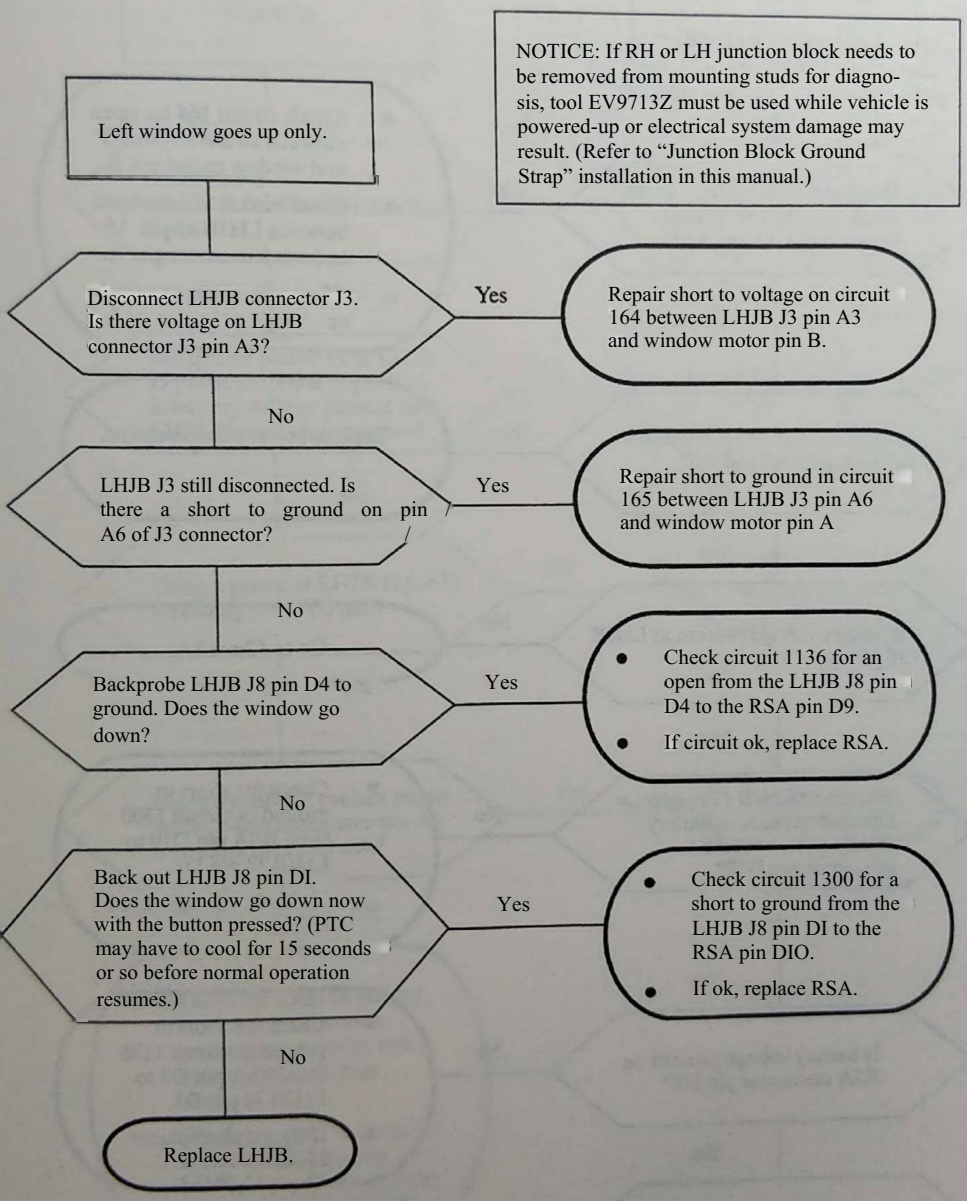
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)
Left window goes up only.
Disconnect LHJB connector J3. Is there voltage on LHJB connector J3 pin A3?
Yes
Repair short to voltage on circuit 164 between LHJB J3 pin A3 and window motor pin B.
No
LHJB J3 still disconnected. Is there a short to ground on pin A6 of J3 connector?
Yes
Repair short to ground in circuit 165 between LHJB J3 pin A6 and window motor pin A
No
Backprobe LHJB J8 pin D4 to ground. Does the window go down?
Yes
Check circuit 1136 for an open from the LHJB J8 pin D4 to the RSA pin D9.
If circuit ok, replace RSA.
No
Back out LHJB J8 pin DI. Does the window go down now with the button pressed? (PTC may have to cool for 15 seconds or so before normal operation resumes.)
Yes
Check circuit 1300 for a short to ground from the LHJB J8 pin DI to the RSA pin DIO.
If ok, replace RSA.
No
Replace LHJB.

CamScanner

LEFT WINDOW INOPERATIVE (NO UP OR DOWN)

CHART 3

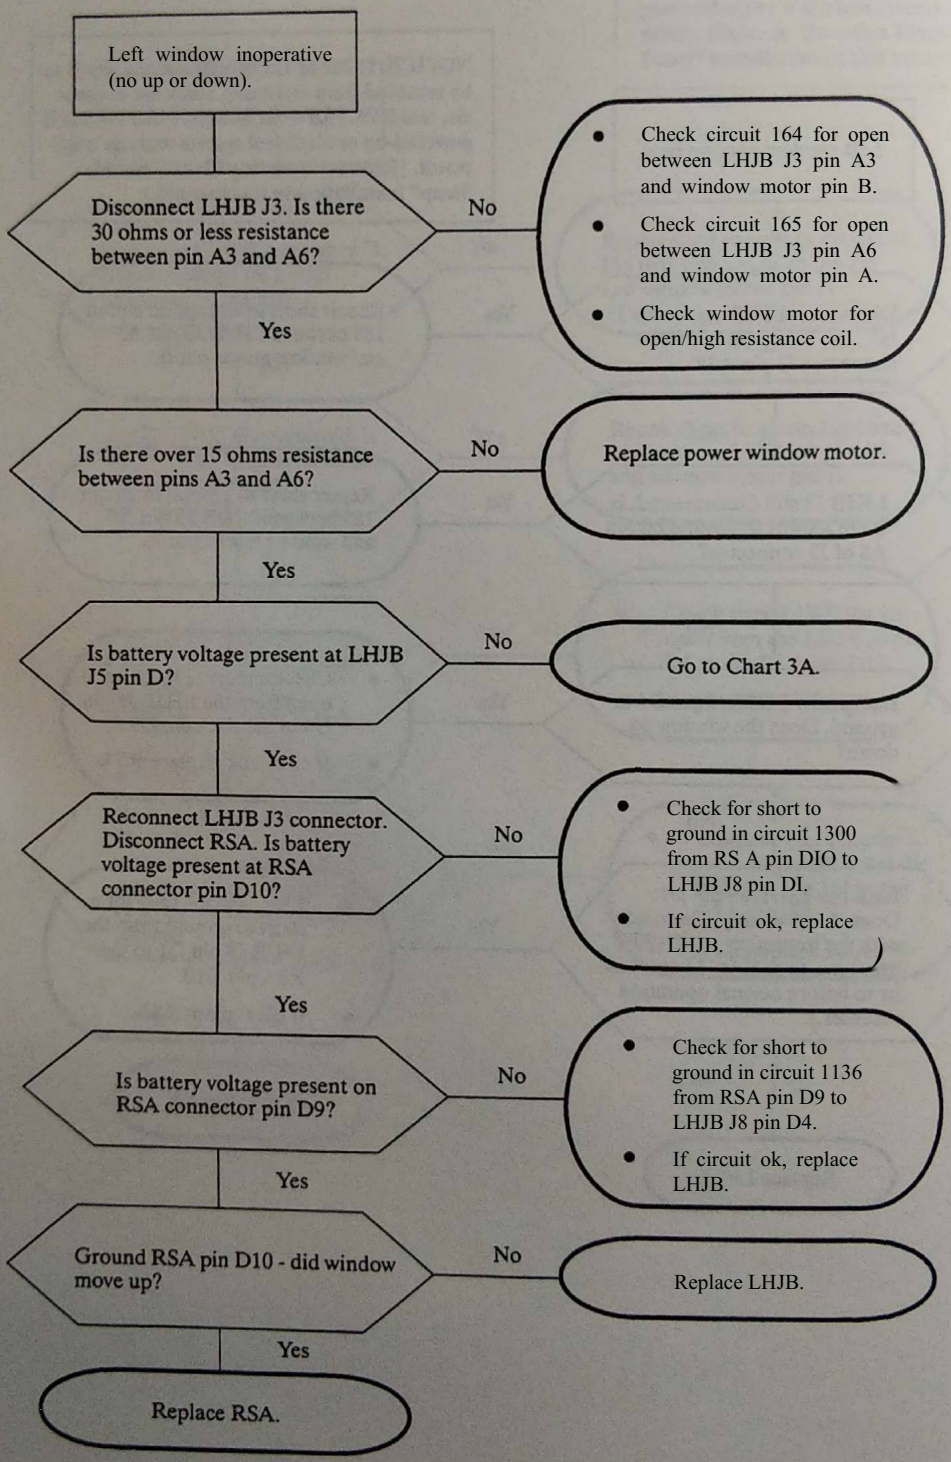
Left window inoperative (no up or down).
Disconnect LHJB J3. Is there 30 ohms or less resistance between pin A3 and A6?
No
• Check circuit 164 for open between LHJB J3 pin A3 and window motor pin B.
• Check circuit 165 for open between LHJB J3 pin A6 and window motor pin A.
• Check window motor for open/high resistance coil.
Yes
Is there over 15 ohms resistance between pins A3 and A6?
No
Replace power window motor.
Yes
Is battery voltage present at LHJB J5 pin D?
No
Go to Chart 3A.
Yes
Reconnect LHJB J3 connector. Disconnect RSA. Is battery voltage present at RSA connector pin D10?
No
• Check for short to ground in circuit 1300 from RS A pin DIO to LHJB J8 pin DI.
• If circuit ok, replace LHJB.
Yes
Is battery voltage present on RSA connector pin D9?
No
• Check for short to ground in circuit 1136 from RSA pin D9 to LHJB J8 pin D4.
• If circuit ok, replace LHJB.
Yes
Ground RSA pin D10 - did window move up?
No
Replace LHJB.
Yes
Replace RSA.

CamScanner

CHART 3A

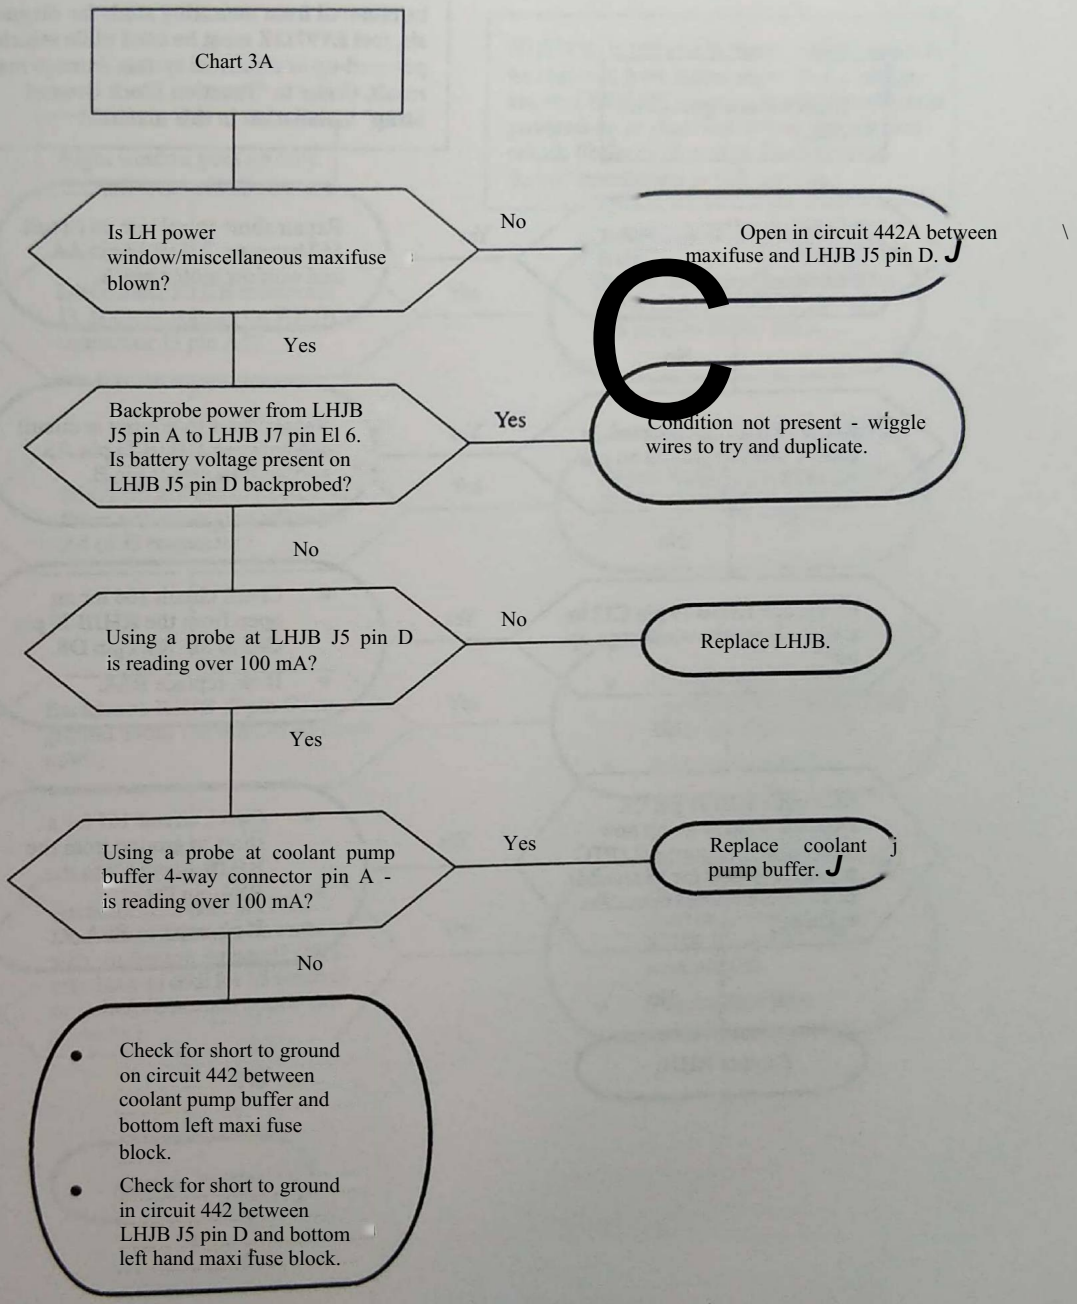
Chart 3A
Is LH power window/miscellaneous maxifuse blown?
No
Open in circuit 442A between maxifuse and LHJB J5 pin D.
Yes
Backprobe power from LHJB J5 pin A to LHJB J7 pin El 6. Is battery voltage present on LHJB J5 pin D backprobed?
Yes
Condition not present - wiggle wires to try and duplicate.
No
Using a probe at LHJB J5 pin D is reading over 100 mA?
No
Replace LHJB.
Yes
Using a probe at coolant pump buffer 4-way connector pin A - is reading over 100 mA?
Yes
Replace coolant pump buffer.
No
Check for short to ground on circuit 442 between coolant pump buffer and bottom left maxi fuse block.
Check for short to ground in circuit 442 between LHJB J5 pin D and bottom left hand maxi fuse block.

CamScanner

RIGHT WINDOW GOES DOWN ONLY

CHART 4

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

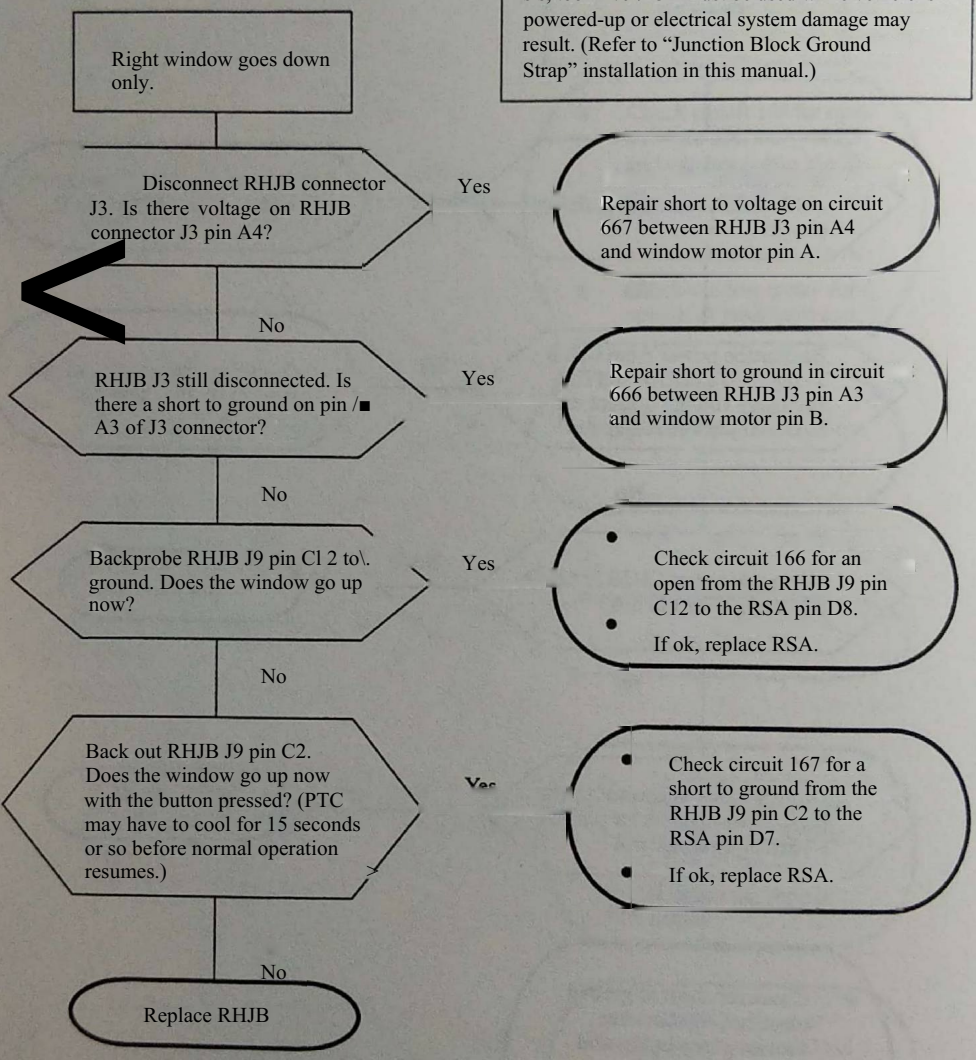
Right window goes down only.
Disconnect RHJB connector J3. Is there voltage on RHJB connector J3 pin A4?
Yes
Repair short to voltage on circuit 667 between RHJB J3 pin A4 and window motor pin A.
No
RHJB J3 still disconnected. Is there a short to ground on pin /■ A3 of J3 connector?
Yes
Repair short to ground in circuit 666 between RHJB J3 pin A3 and window motor pin B.
No
Backprobe RHJB J9 pin Cl 2 to\. ground. Does the window go up now?
Yes
Check circuit 166 for an open from the RHJB J9 pin C12 to the RSA pin D8.
If ok, replace RSA.
No
Back out RHJB J9 pin C2. Does the window go up now with the button pressed? (PTC may have to cool for 15 seconds or so before normal operation resumes.)
Yes
Check circuit 167 for a short to ground from the RHJB J9 pin C2 to the RSA pin D7.
If ok, replace RSA.
No
Replace RHJB

CamScanner

RIGHT WINDOW GOES UP ONLY

CHARTS

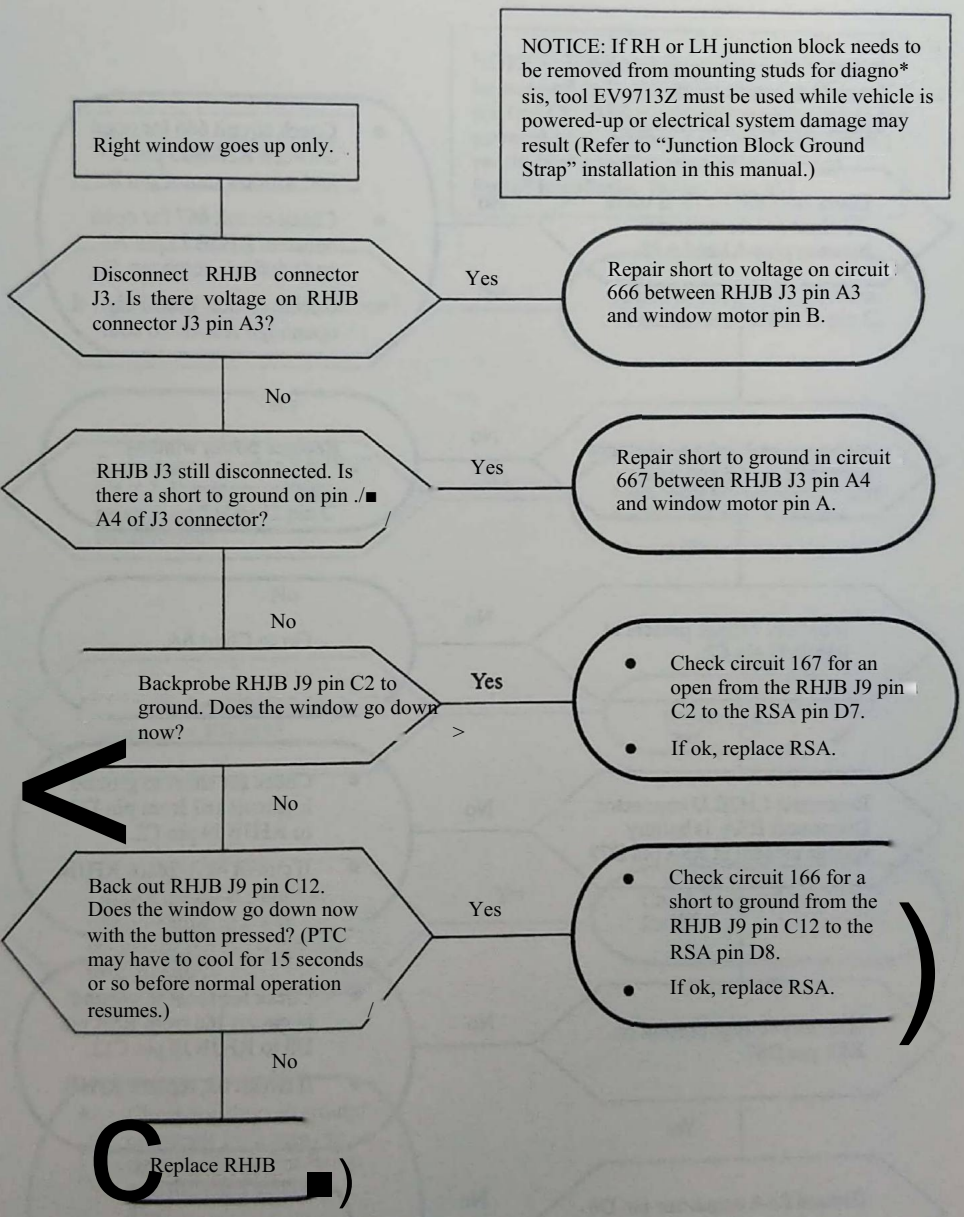
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagno* sis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap" installation in this manual.)
Right window goes up only.
Disconnect RHJB connector J3. Is there voltage on RHJB connector J3 pin A3?
Yes
Repair short to voltage on circuit 666 between RHJB J3 pin A3 and window motor pin B.
No
RHJB J3 still disconnected. Is there a short to ground on pin A4 of J3 connector?
Yes
Repair short to ground in circuit 667 between RHJB J3 pin A4 and window motor pin A.
No
Backprobe RHJB J9 pin C2 to ground. Does the window go down now?
Yes
Check circuit 167 for an open from the RHJB J9 pin C2 to the RSA pin D7.
If ok, replace RSA.
No
Back out RHJB J9 pin C12. Does the window go down now with the button pressed? (PTC may have to cool for 15 seconds or so before normal operation resumes.)
Yes
Check circuit 166 for a short to ground from the RHJB J9 pin C12 to the RSA pin D8.
If ok, replace RSA.
No
Replace RHJB

CamScanner

RIGHT WINDOW INOPERATIVE (NO UP OR DOWN)

CHART 6

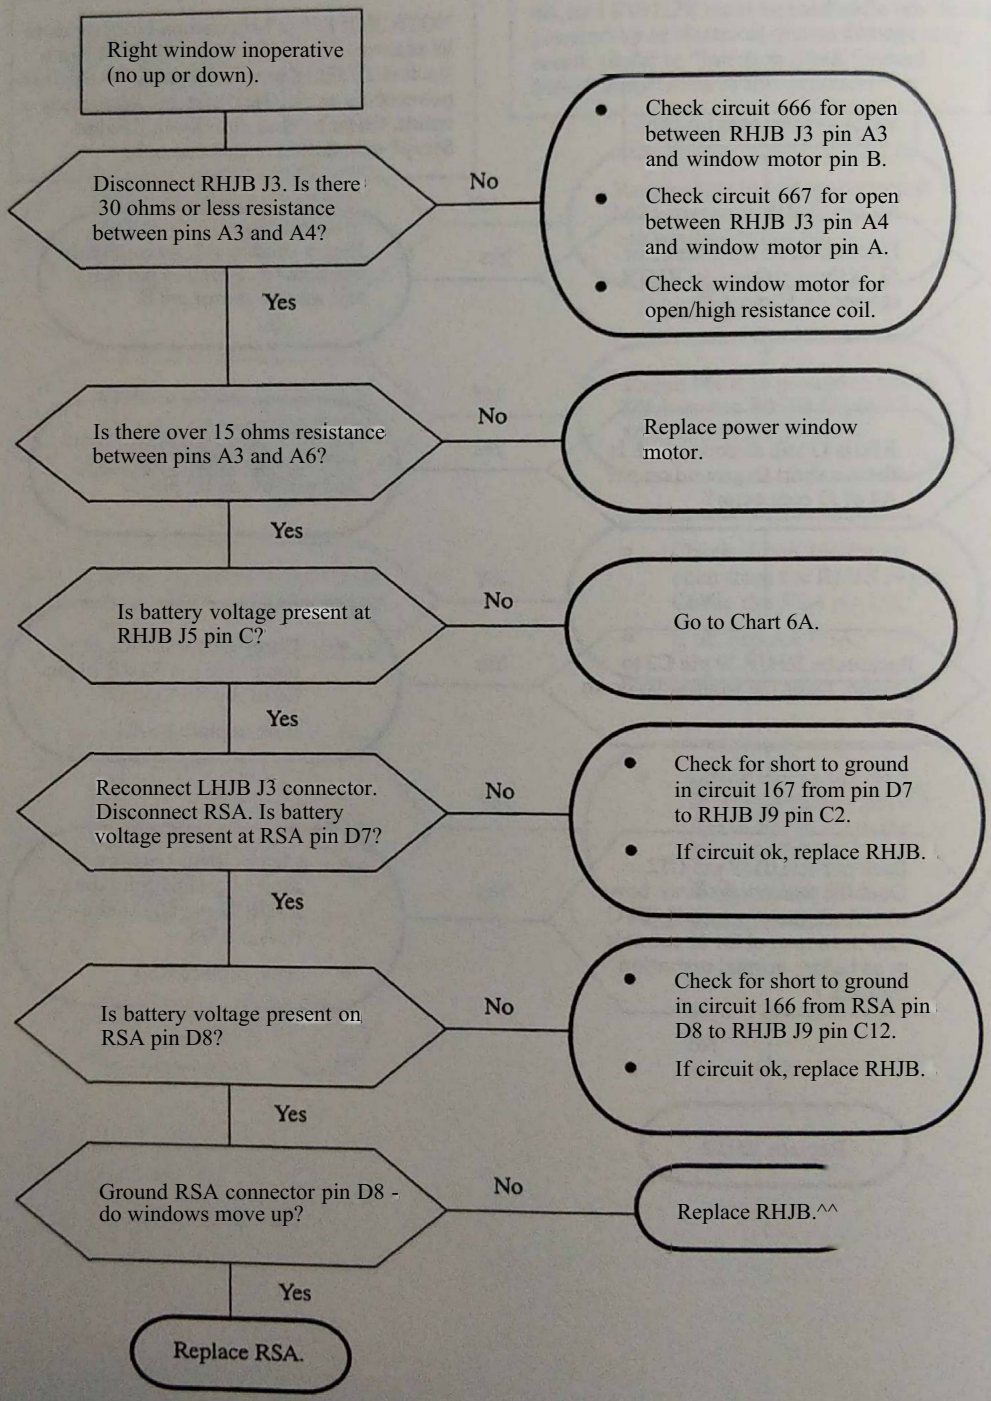
Right window inoperative (no up or down).
Disconnect RHJB J3. Is there 30 ohms or less resistance between pins A3 and A4?
No
• Check circuit 666 for open between RHJB J3 pin A3 and window motor pin B.
• Check circuit 667 for open between RHJB J3 pin A4 and window motor pin A.
• Check window motor for open/high resistance coil.
Yes
Is there over 15 ohms resistance between pins A3 and A6?
No
Replace power window motor.
Yes
Is battery voltage present at RHJB J5 pin C?
No
Go to Chart 6A.
Yes
Reconnect LHJB J3 connector. Disconnect RSA. Is battery voltage present at RSA pin D7?
No
• Check for short to ground in circuit 167 from pin D7 to RHJB J9 pin C2.
• If circuit ok, replace RHJB.
Yes
Is battery voltage present on RSA pin D8?
No
• Check for short to ground in circuit 166 from RSA pin D8 to RHJB J9 pin C12.
• If circuit ok, replace RHJB.
Yes
Ground RSA connector pin D8 - do windows move up?
No
Replace RHJB.^^
Yes
Replace RSA.

CamScanner

CHART 6A

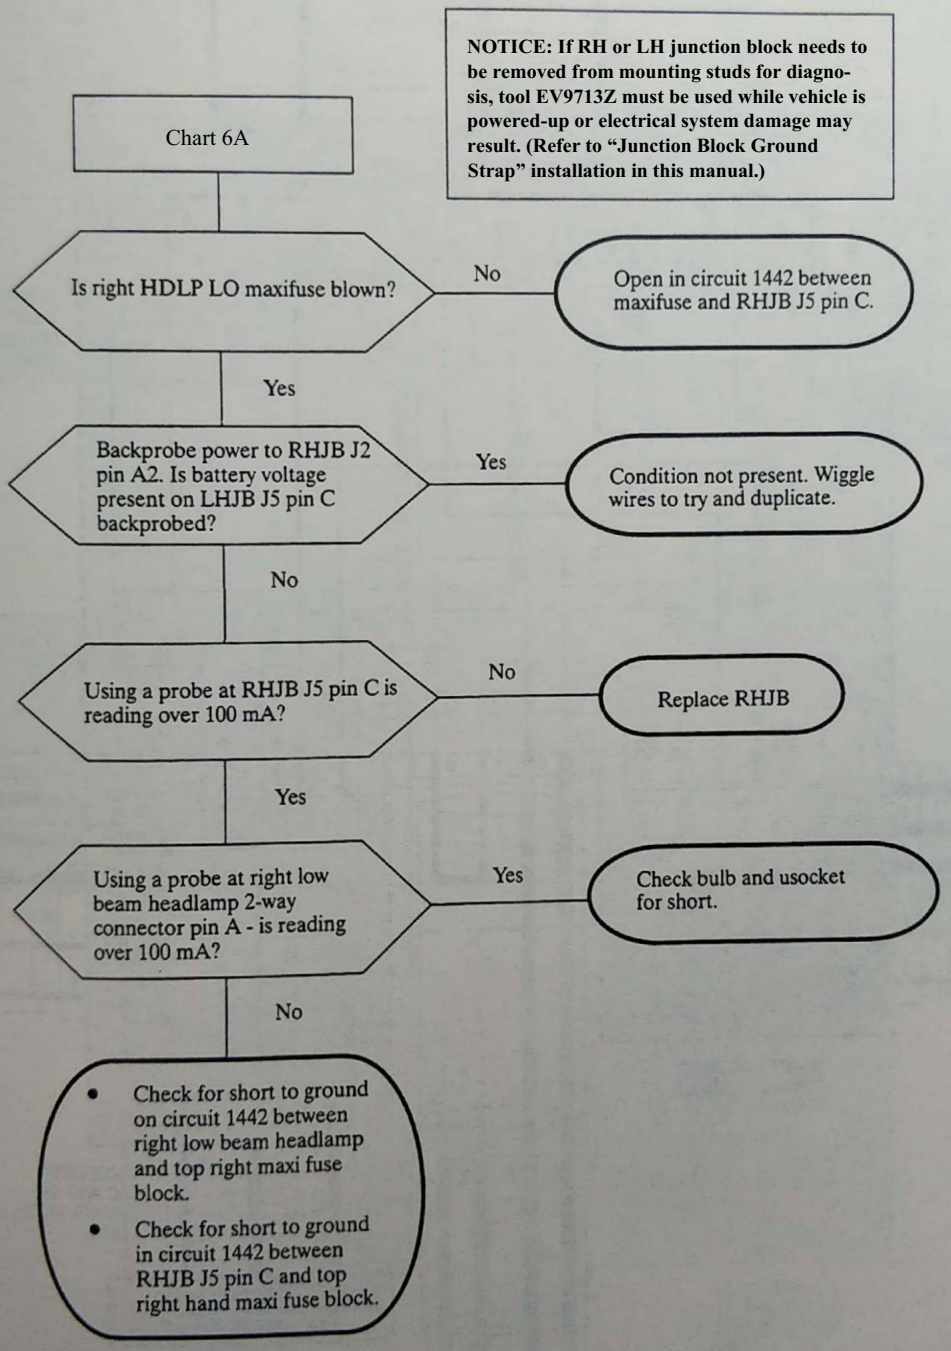
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)
Chart 6A
Is right HDLP LO maxifuse blown?
No
Open in circuit 1442 between maxifuse and RHJB J5 pin C.
Yes
Backprobe power to RHJB J2 pin A2. Is battery voltage present on LHJB J5 pin C backprobed?
Yes
Condition not present. Wiggle wires to try and duplicate.
No
Using a probe at RHJB J5 pin C is reading over 100 mA?
No
Replace RHJB
Yes
Using a probe at right low beam headlamp 2-way connector pin A - is reading over 100 mA?
Yes
Check bulb and usocket for short.
No
• Check for short to ground on circuit 1442 between right low beam headlamp and top right maxi fuse block.
• Check for short to ground in circuit 1442 between RHJB J5 pin C and top right hand maxi fuse block.

CamScanner

PROPULSION (HIGH VOLTAGE)

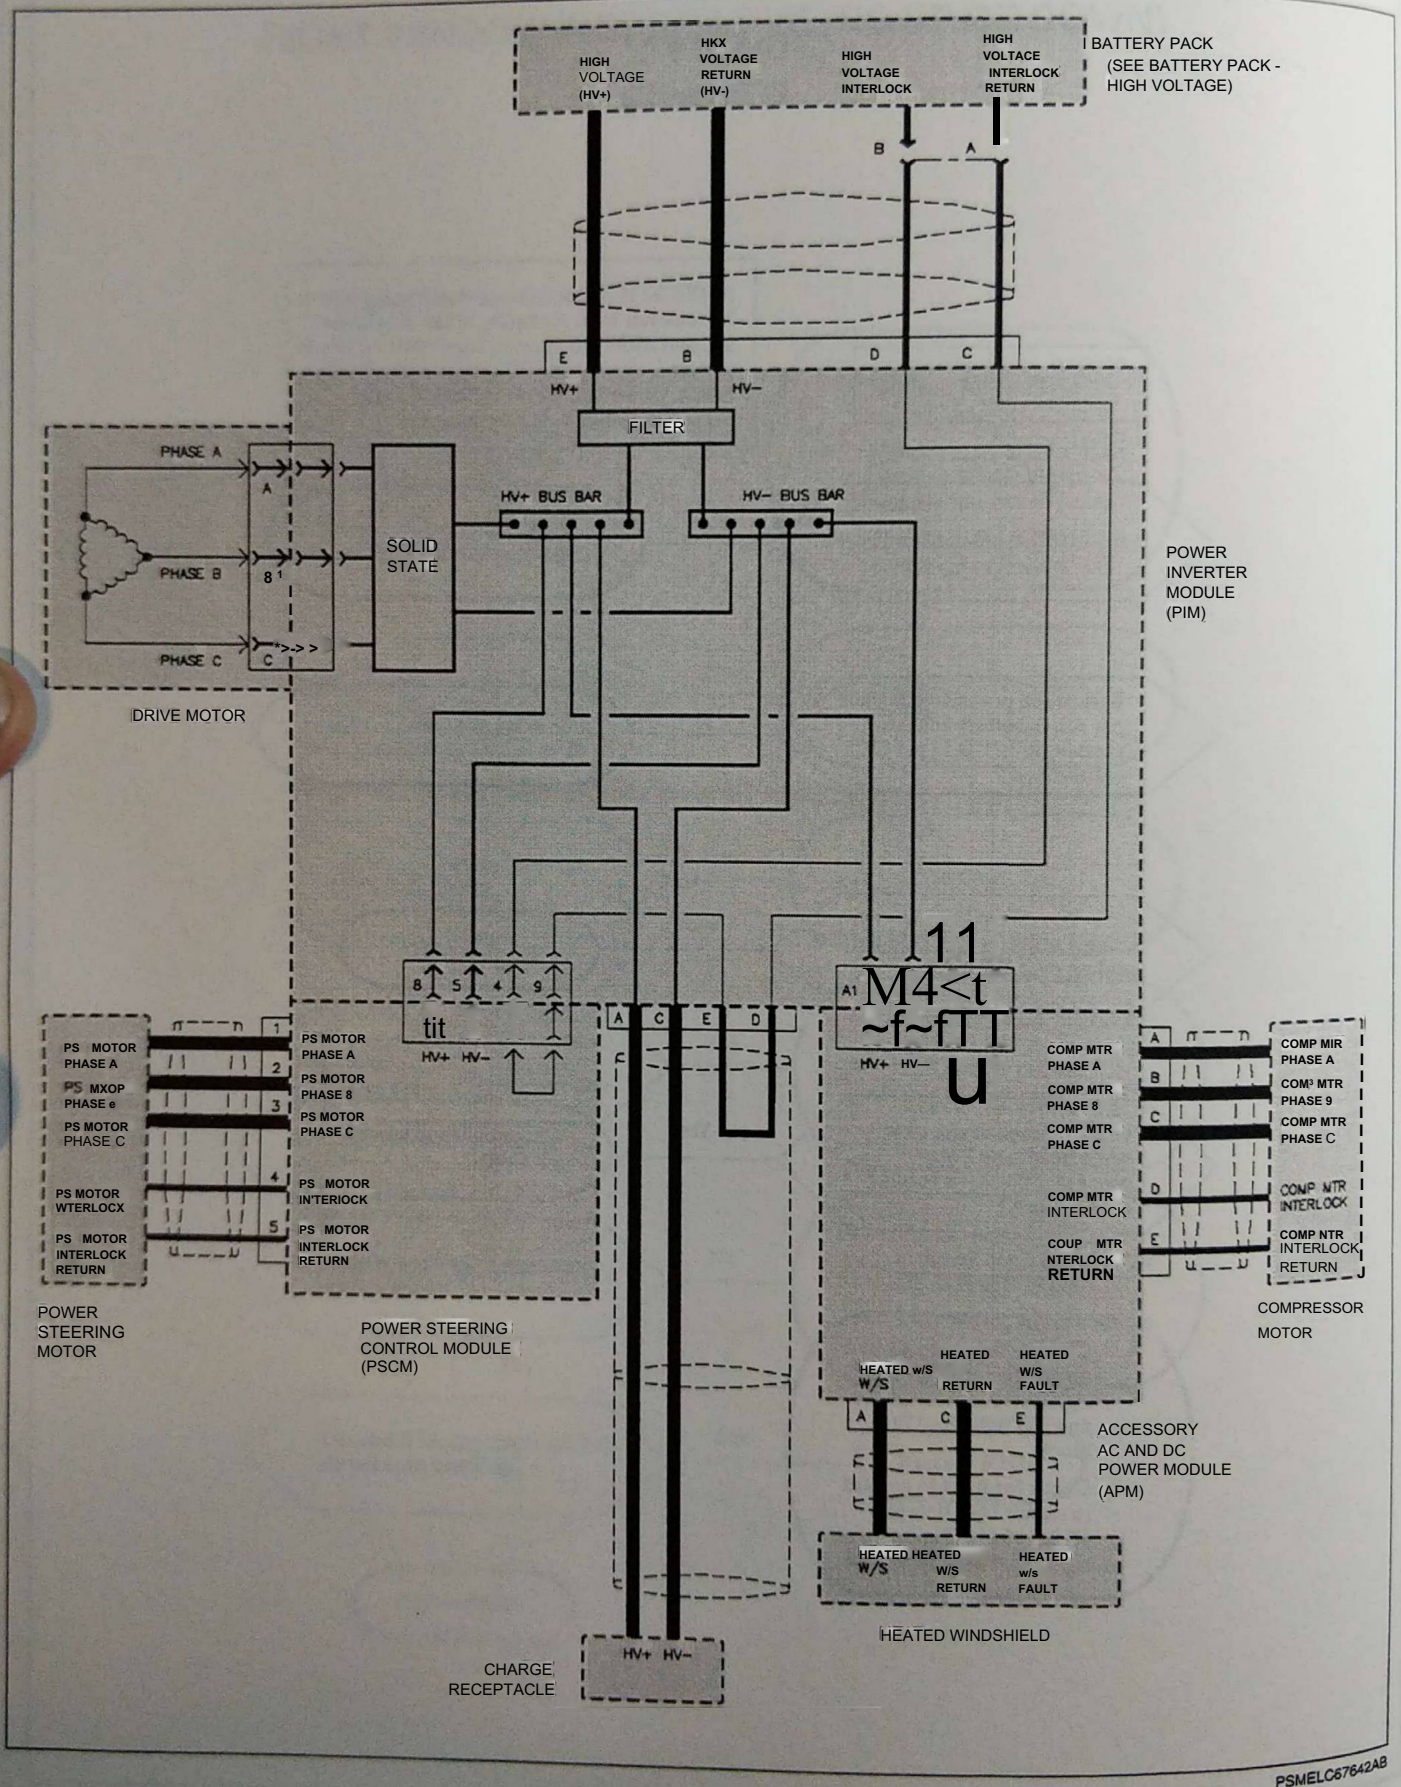

PSMELC67642AB

CamScanner

PROPULSION (HIGH VOLTAGE-CONT.)

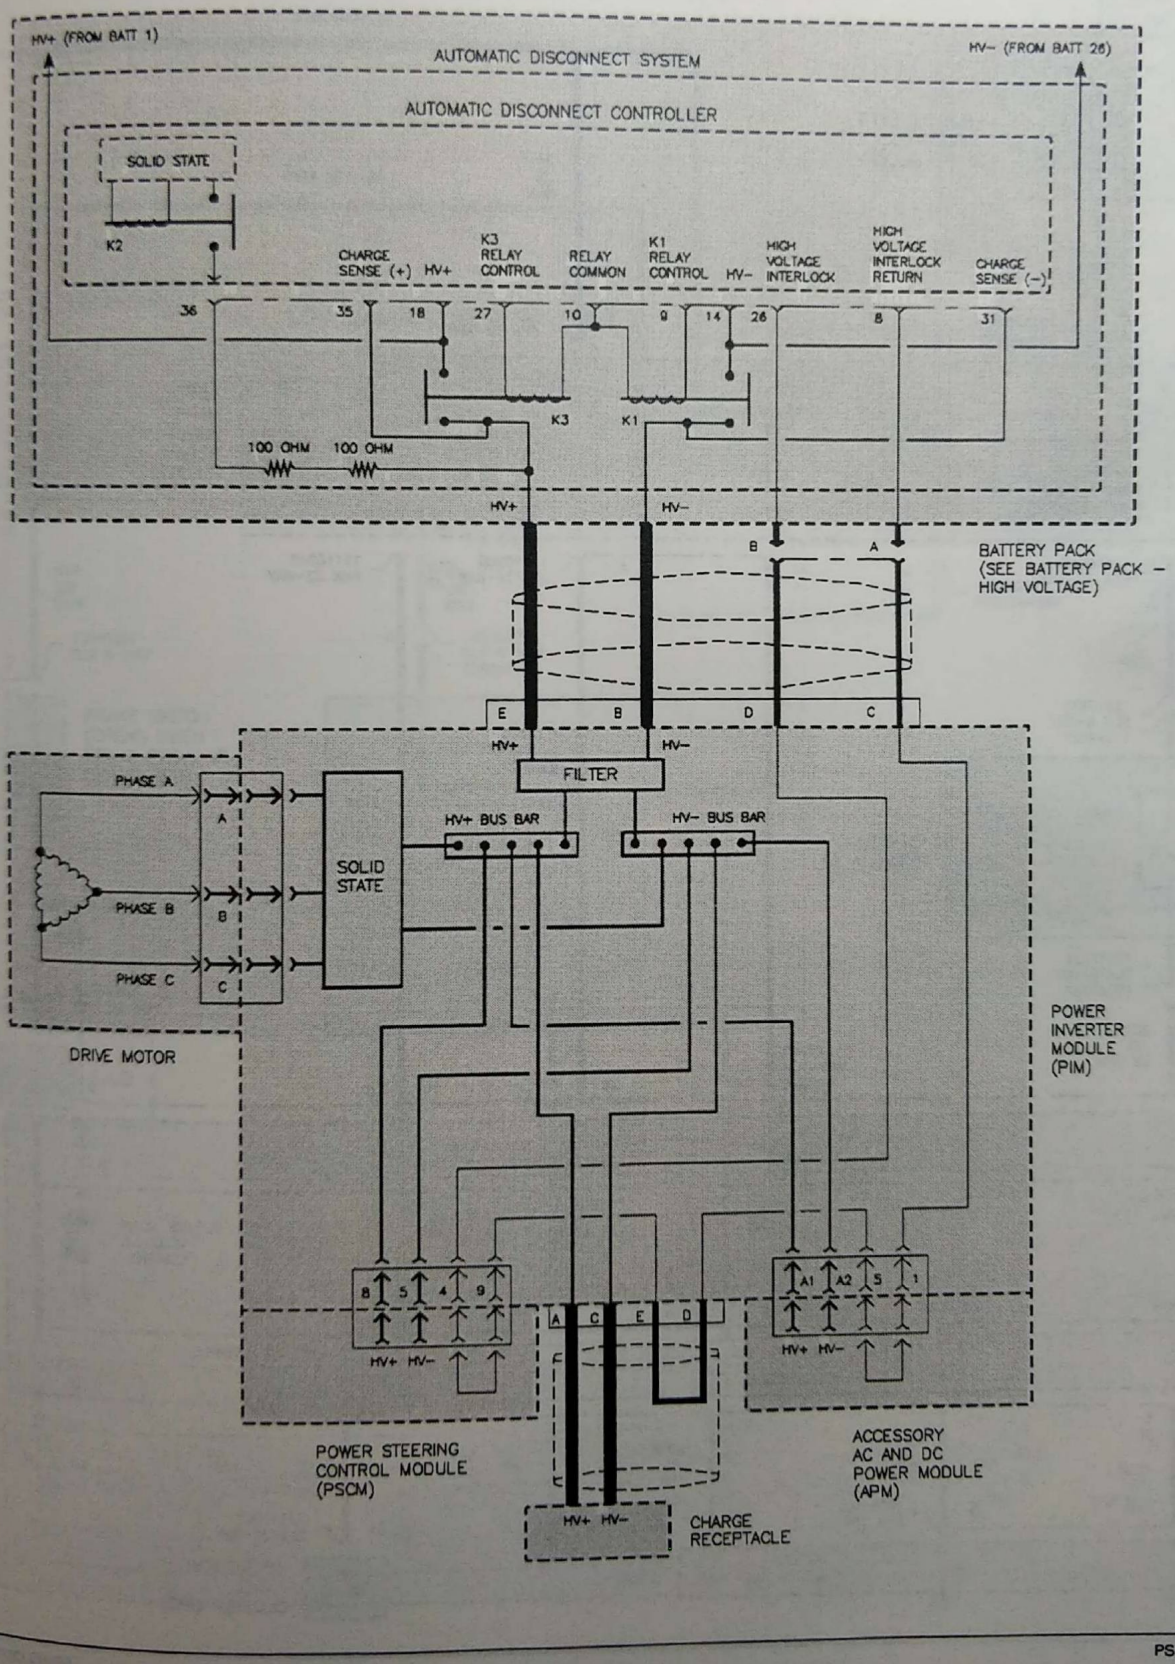

PSMELC67643AC

CamScanner

PROPULSION (LOW VOLTAGE)

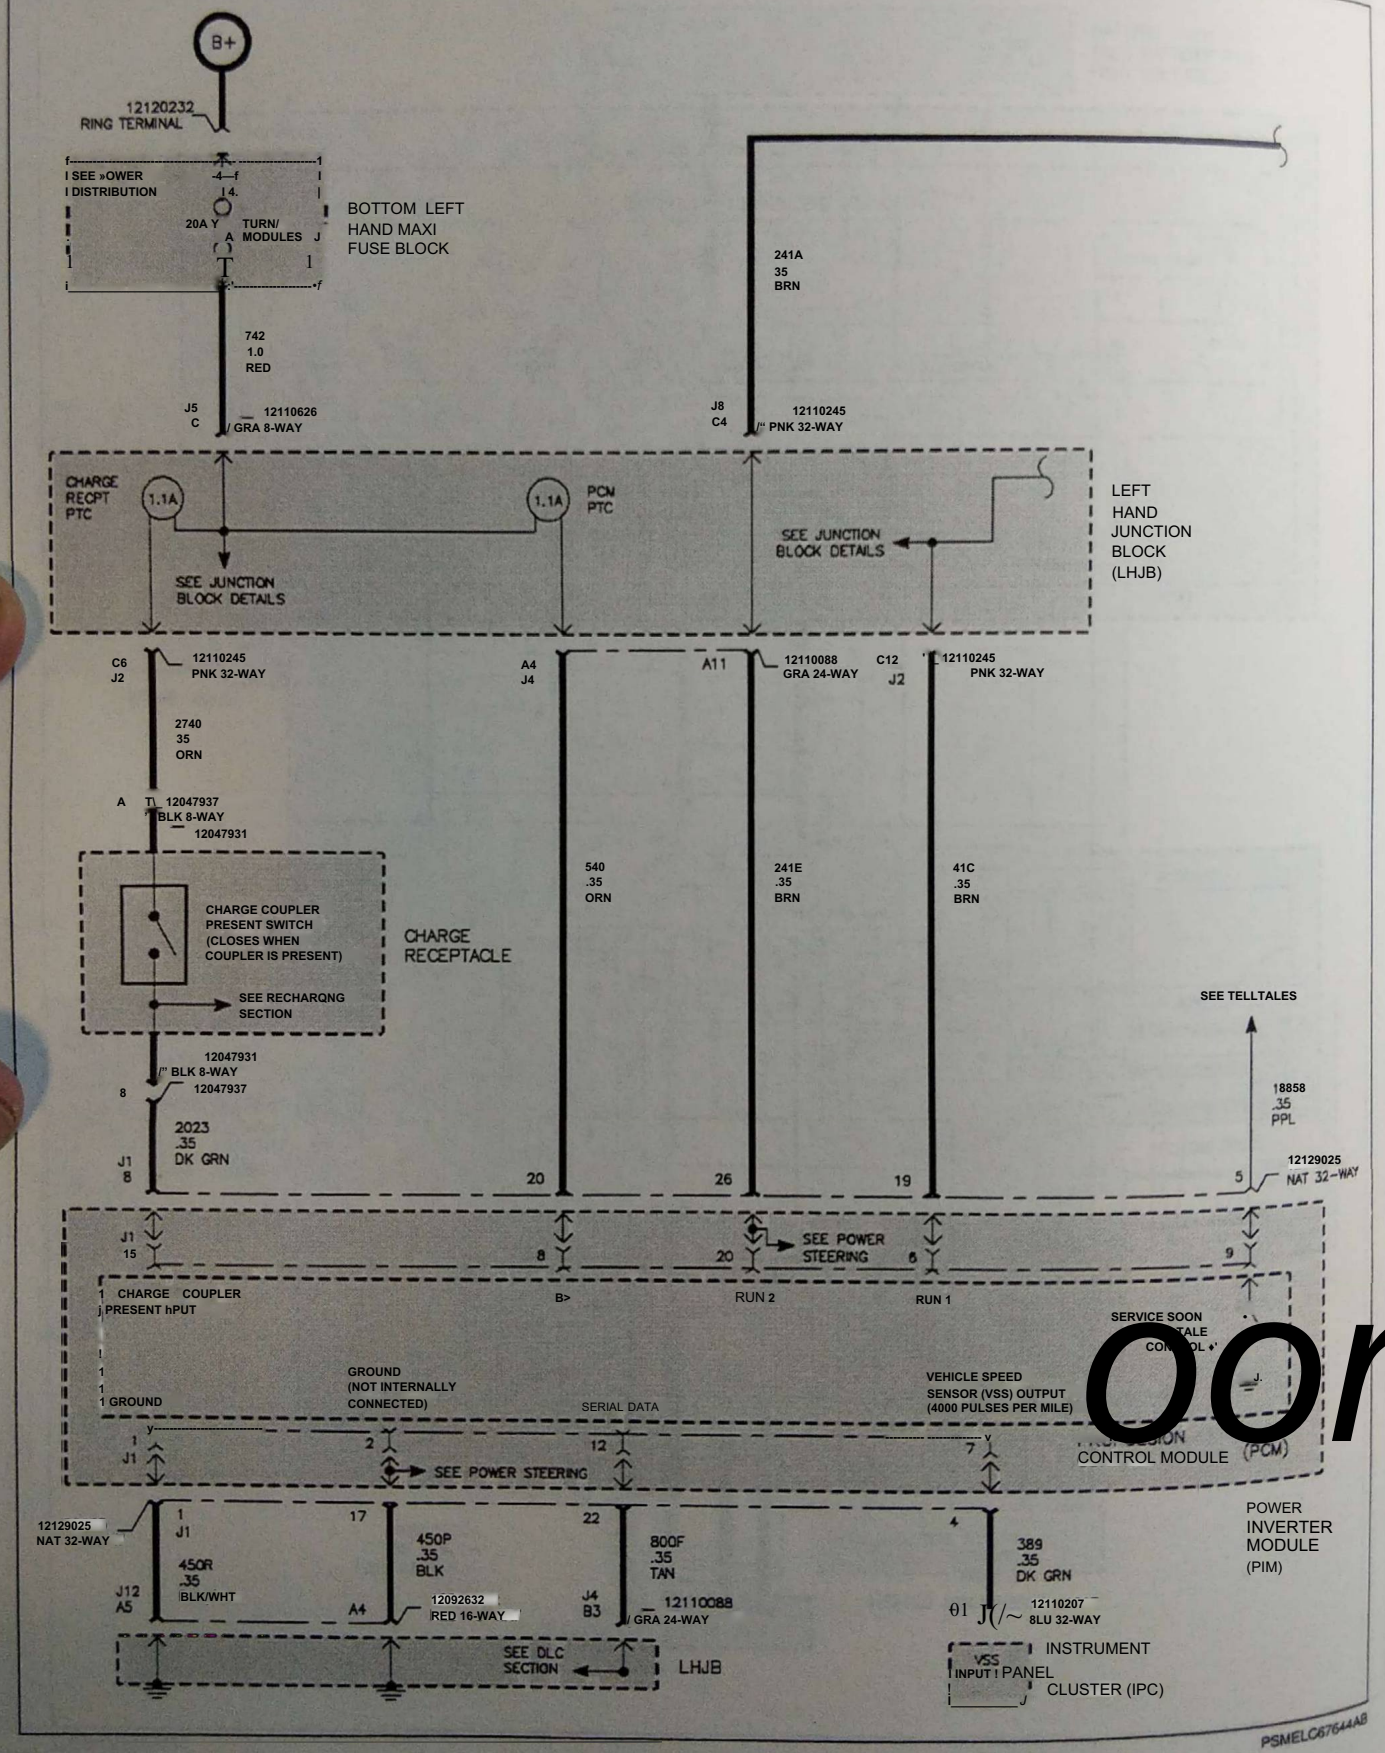

PROPULSION (LOWVOLTAGE-CONT.)

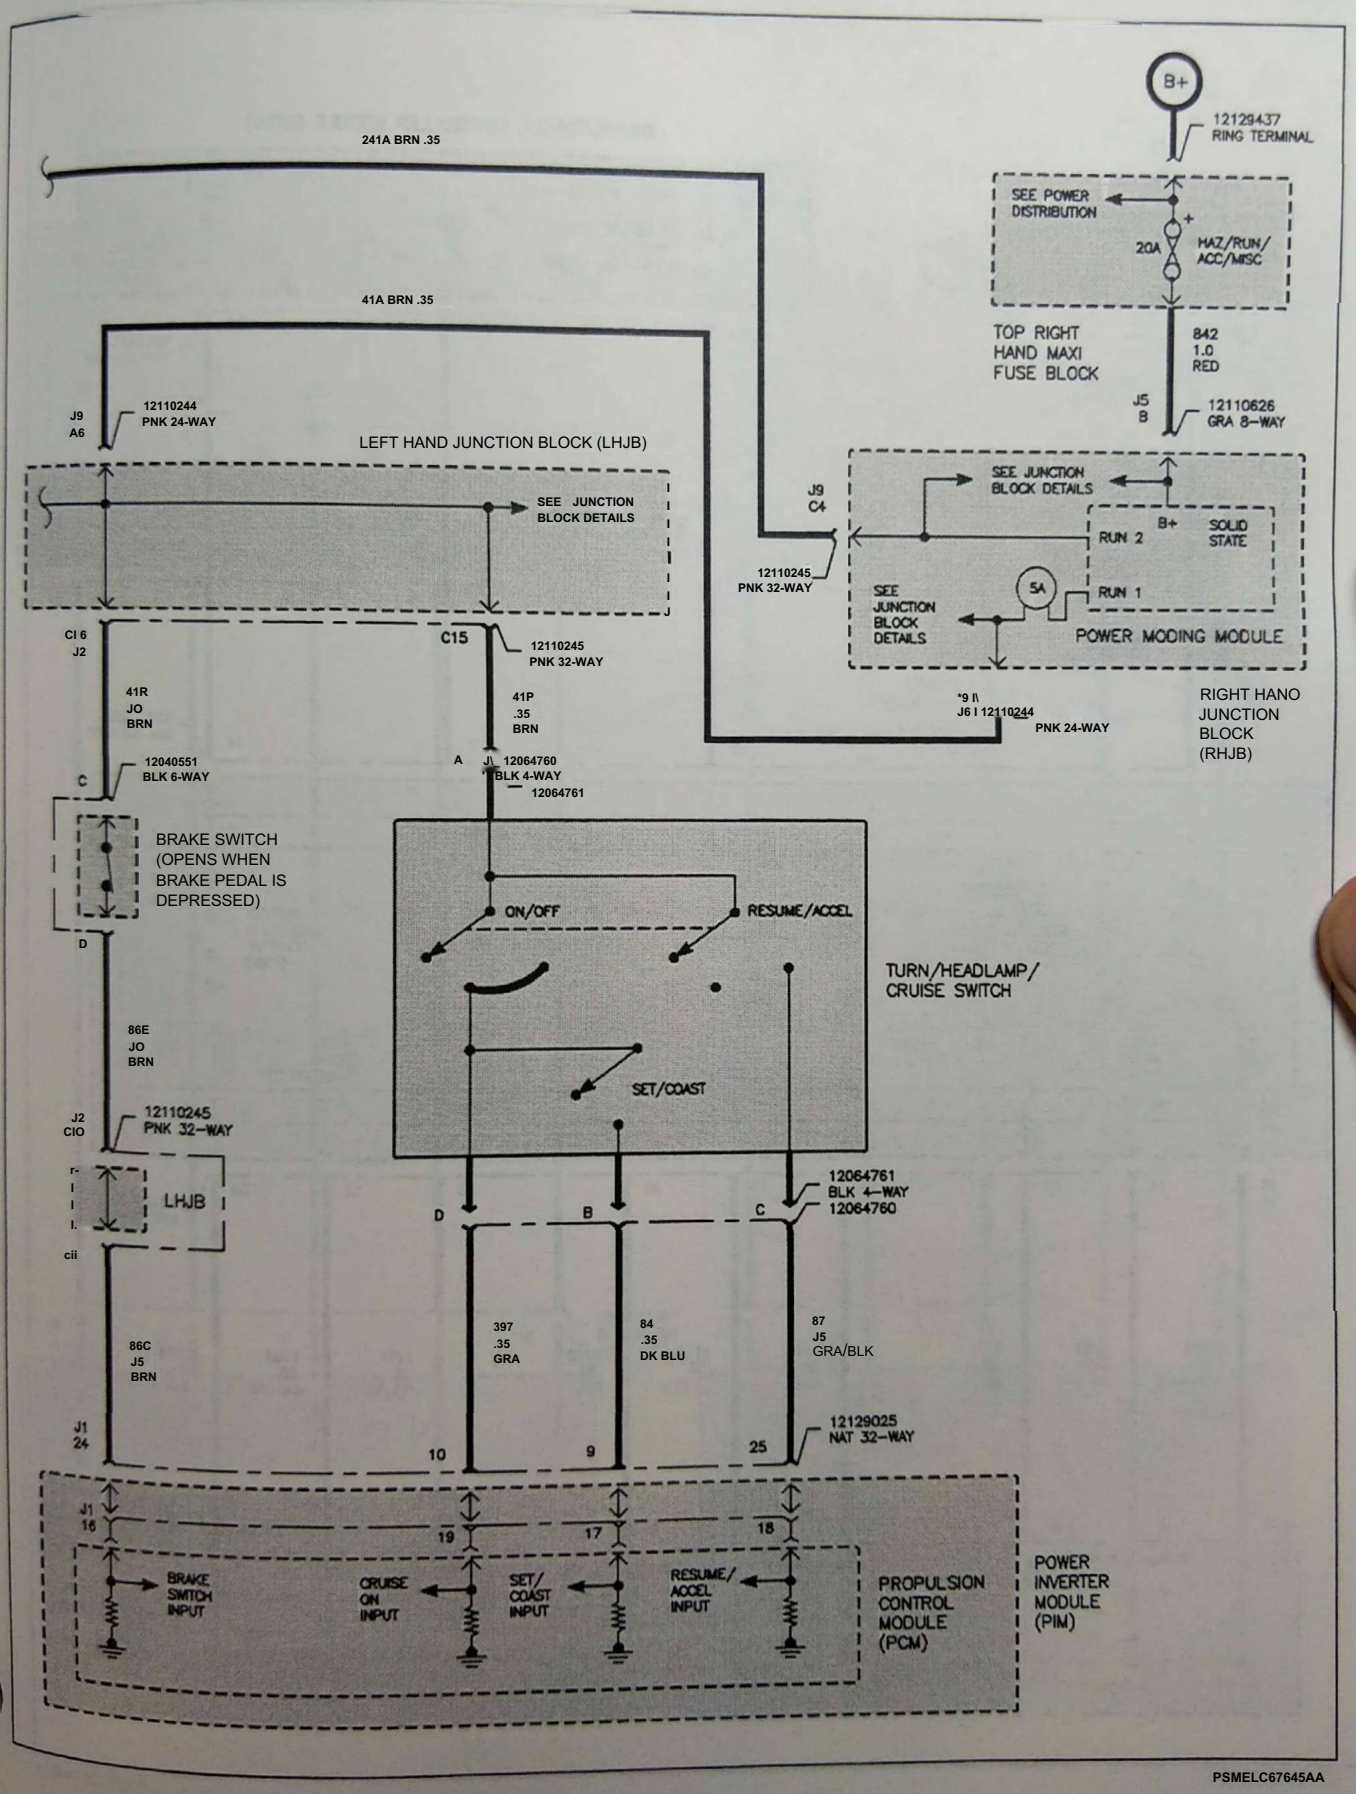

CamScanner

PROPULSION (LOW VOLTAGE-CONT.)

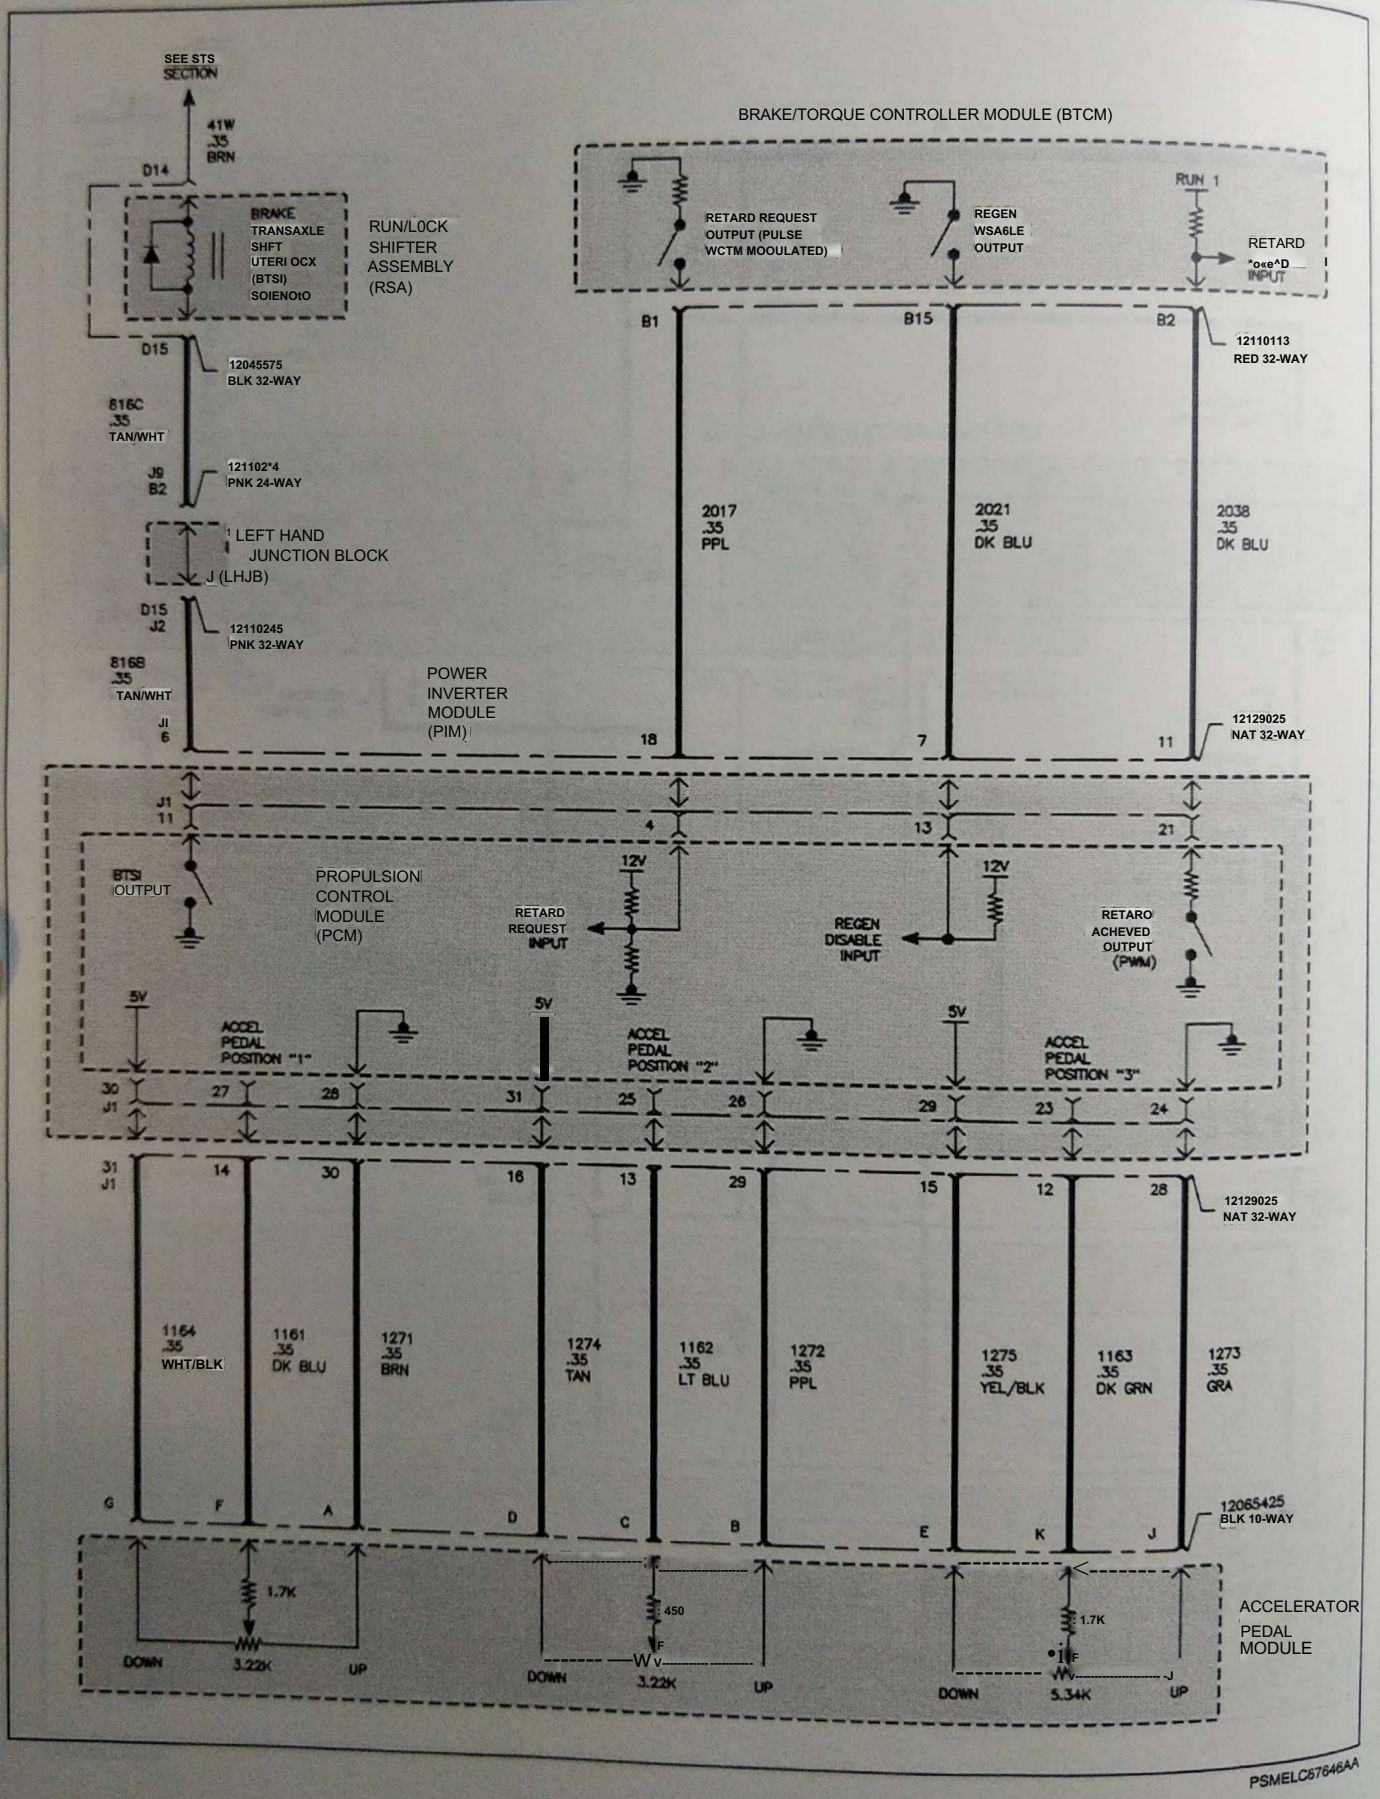

CamScanner

PROPULSION (LOW VOLTAGE-CONT.)

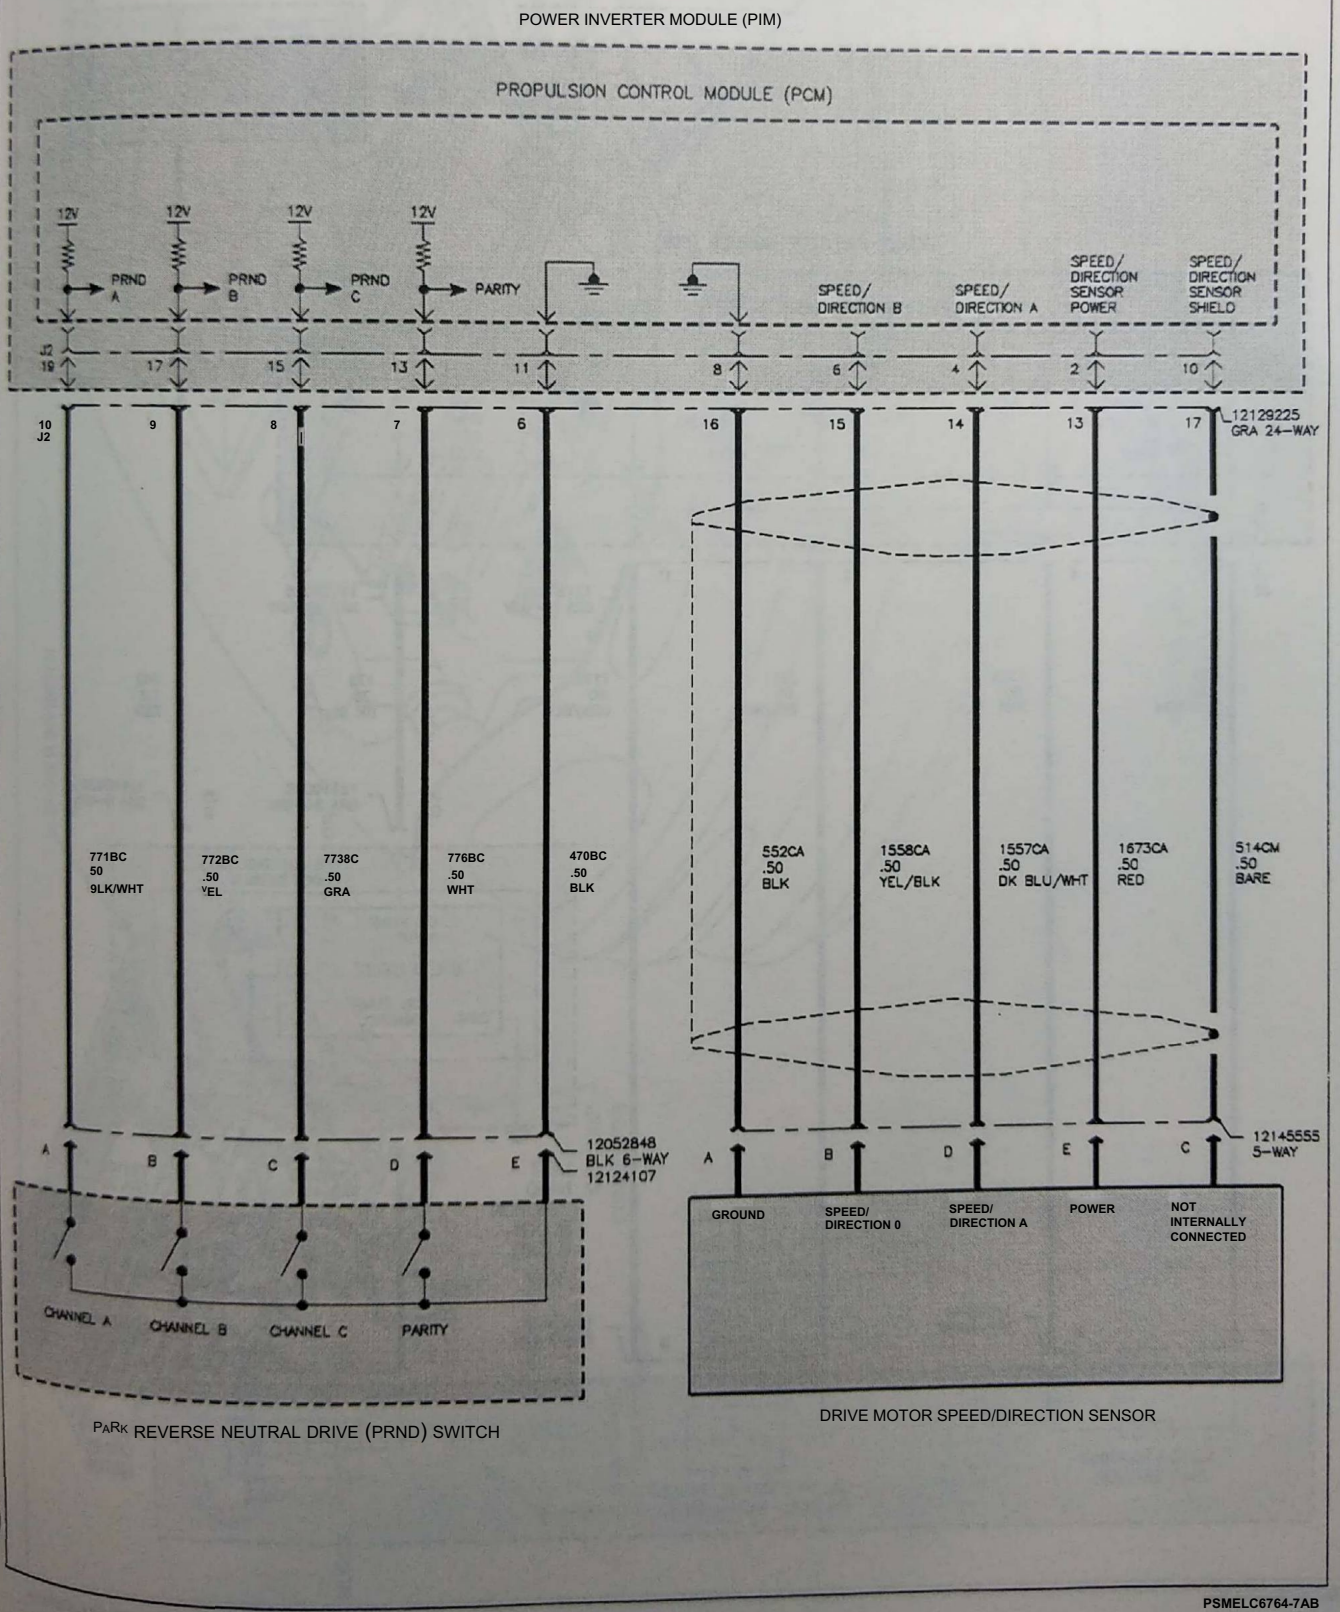

PROPULSION (LOW VOLTAGE-CONT.)

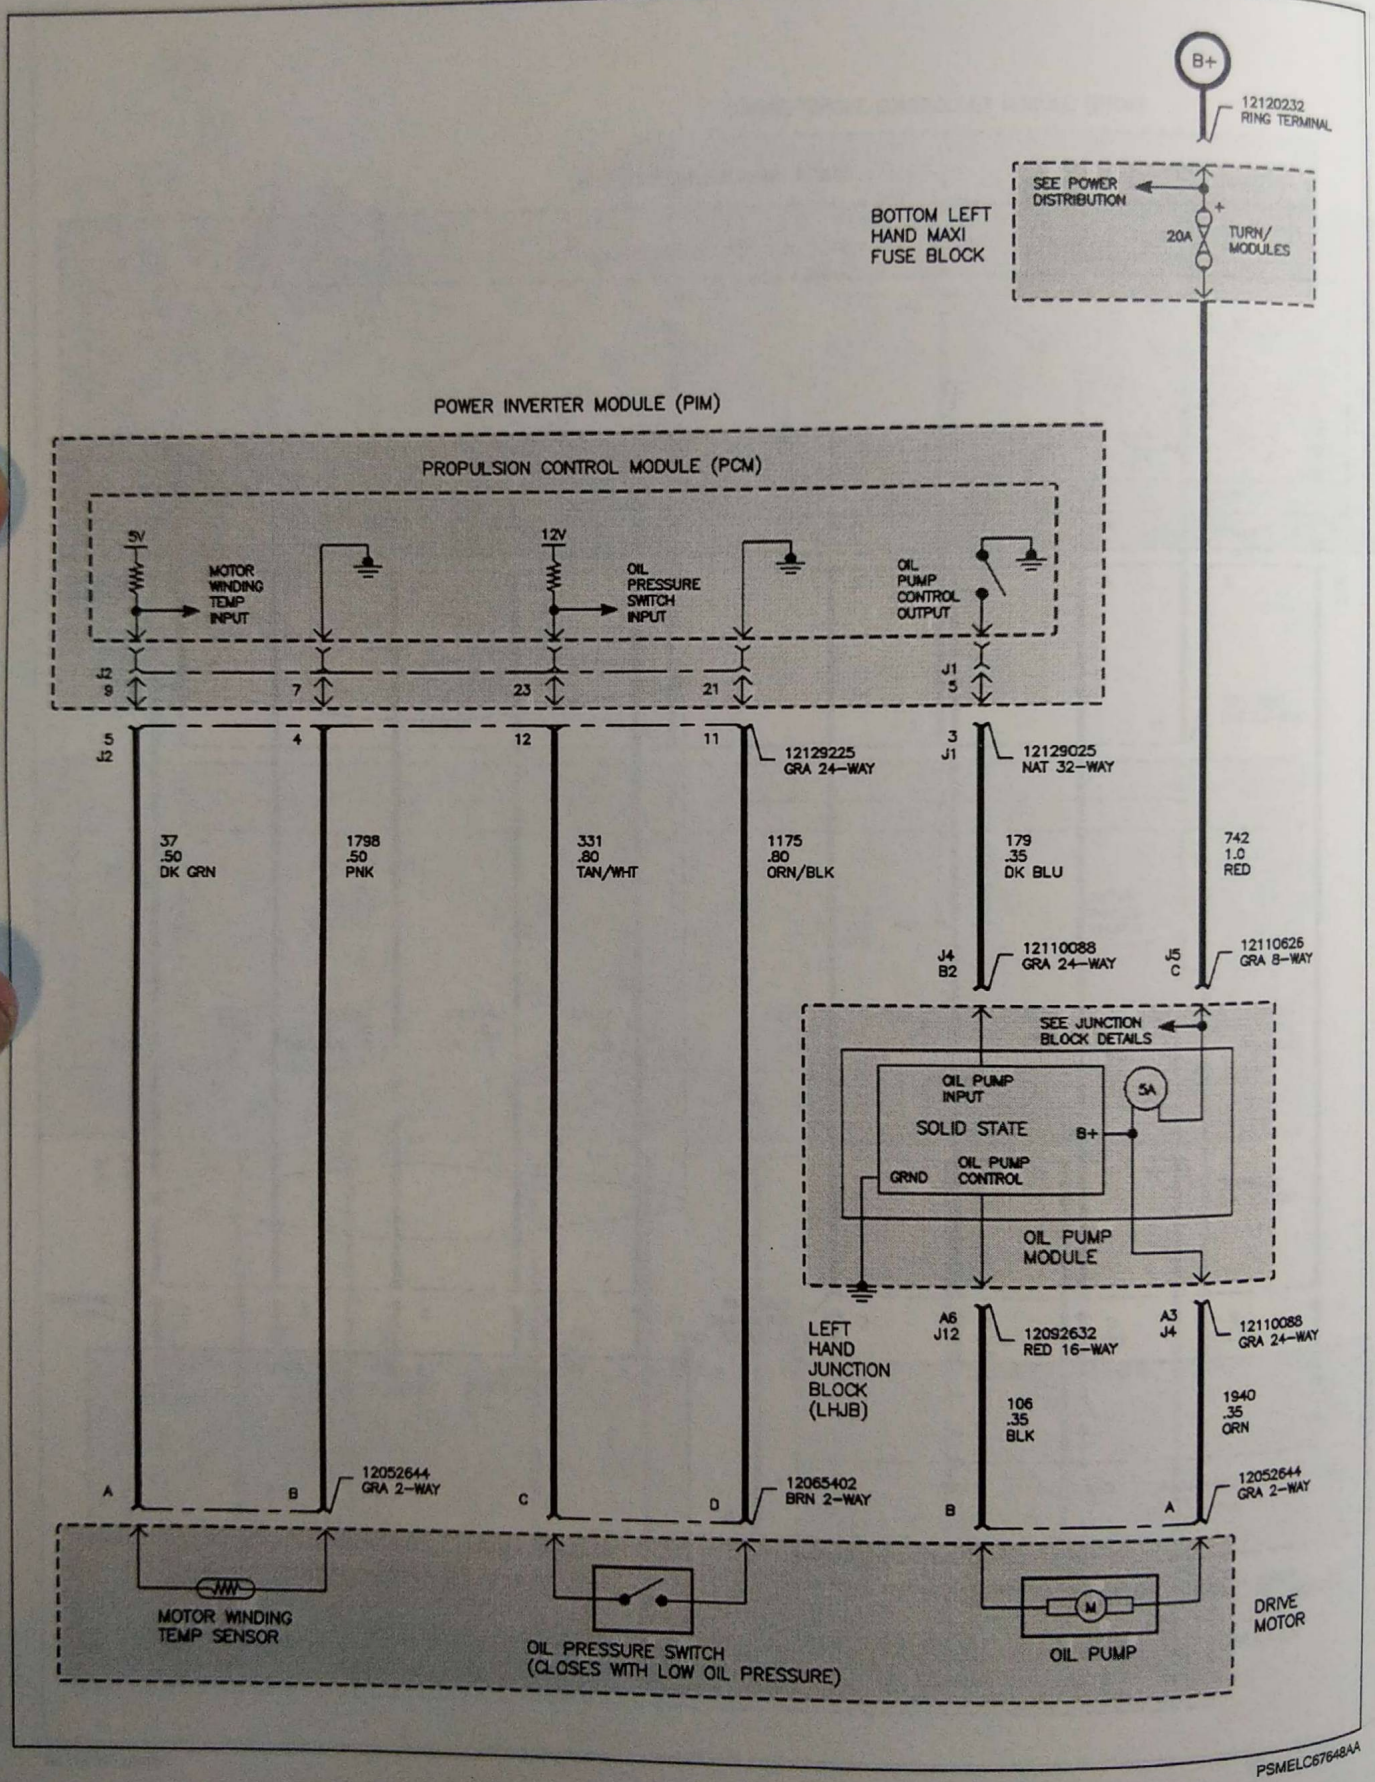

CamScanner

PSMELC68351AA

CamScanner

PROPULSION COMPONENT LOCATION VIEWS (CONTINUED)

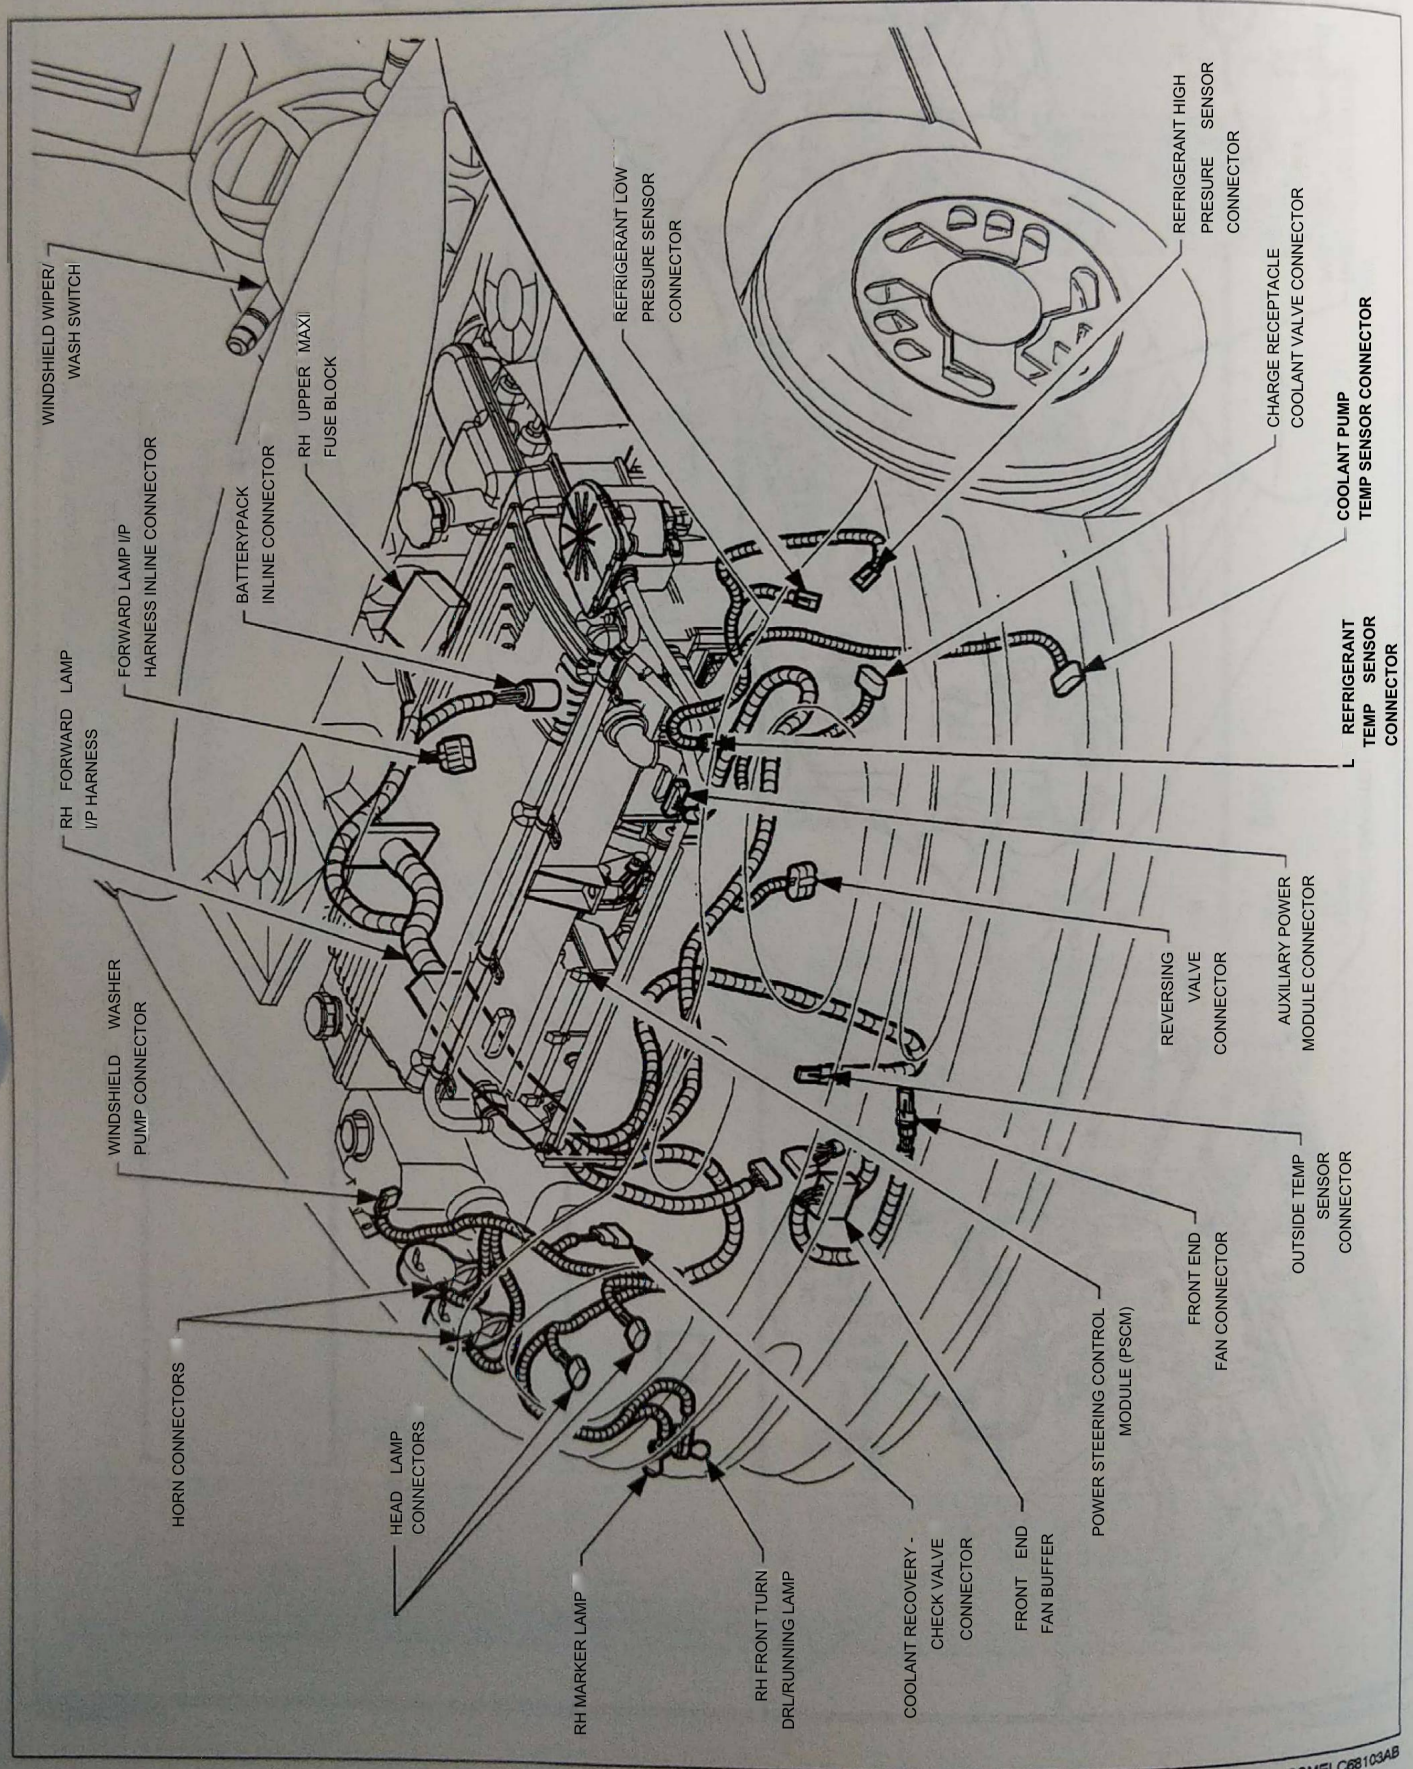
WINDSHIELD WIPER/ WASH SWITCH
FORWARD LAMP I/P HARNESS INLINE CONNECTOR
BATTERYPACK INLINE CONNECTOR
RH UPPER MAXI FUSE BLOCK
REFRIGERANT LOW PRESURE SENSOR CONNECTOR
REFRIGERANT HIGH PRESURE SENSOR CONNECTOR
CHARGE RECEPTACLE COOLANT VALVE CONNECTOR
COOLANT PUMP TEMP SENSOR CONNECTOR
L REFRIGERANT TEMP SENSOR CONNECTOR
RH FORWARD LAMP I/P HARNESS
WINDSHIELD WASHER PUMP CONNECTOR
REVERSING VALVE CONNECTOR
AUXILIARY POWER MODULE CONNECTOR
OUTSIDE TEMP SENSOR CONNECTOR
FRONT END FAN CONNECTOR
POWER STEERING CONTROL MODULE (PSCM)
FRONT END FAN BUFFER
COOLANT RECOVERY - CHECK VALVE CONNECTOR
RH FRONT TURN DRL/RUNNING LAMP
RH MARKER LAMP
HEAD LAMP CONNECTORS
HORN CONNECTORS
PSMELC68103AB

PROPULSION COMPONENT LOCATION VIEWS (CONTINUED)

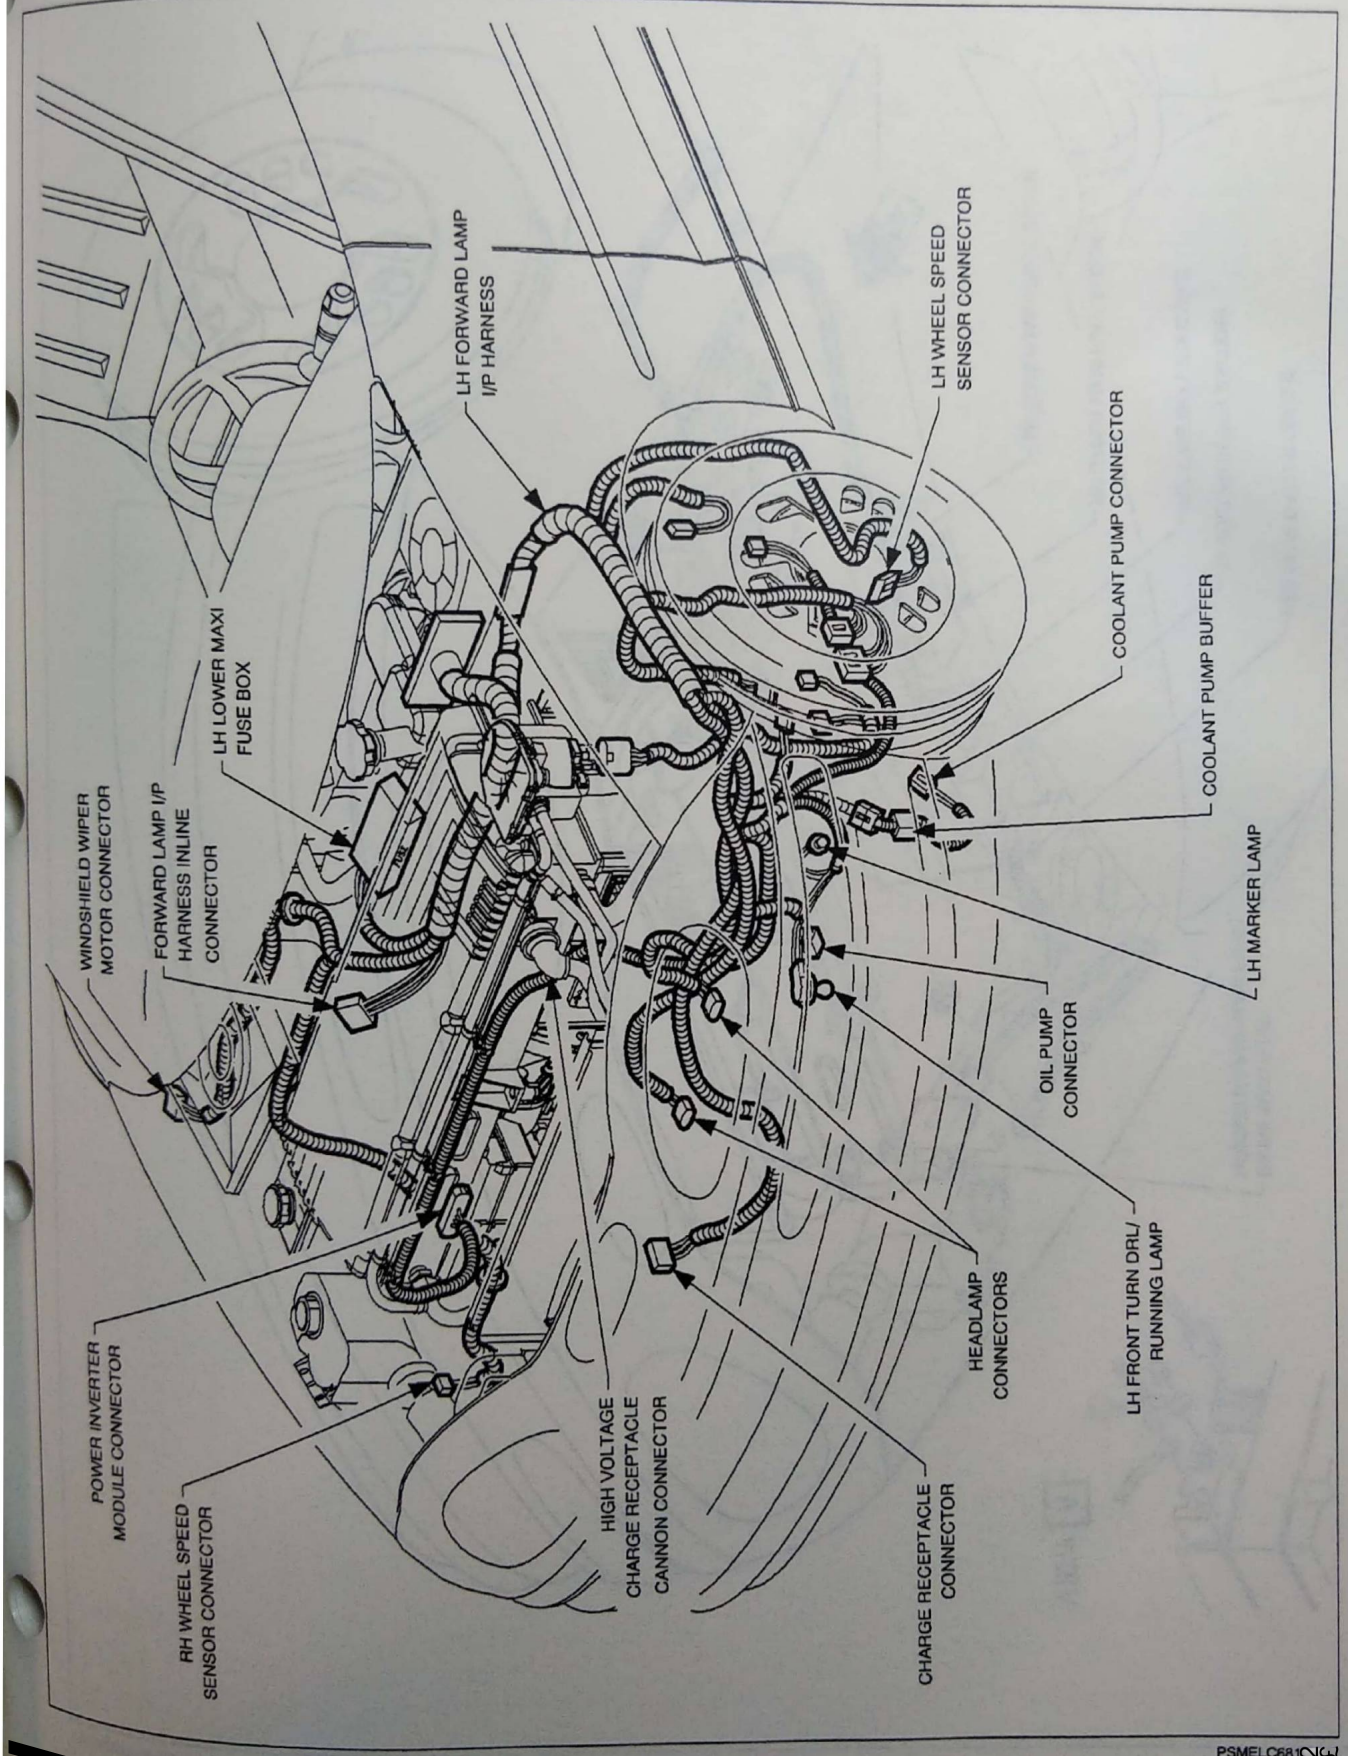
WINDSHIELD WIPER MOTOR CONNECTOR
FORWARD LAMP I/P HARNESS INLINE CONNECTOR
LH LOWER MAXI FUSE BOX
LH FORWARD LAMP I/P HARNESS
LH WHEEL SPEED SENSOR CONNECTOR
COOLANT PUMP CONNECTOR
COOLANT PUMP BUFFER
LH MARKER LAMP
OIL PUMP CONNECTOR
LH FRONT TURN DRL/ RUNNING LAMP
HEADLAMP CONNECTORS
CHARGE RECEPTACLE CONNECTOR
HIGH VOLTAGE CHARGE RECEPTACLE CANNON CONNECTOR
RH WHEEL SPEED SENSOR CONNECTOR
POWER INVERTER MODULE CONNECTOR
PSMELC681CNCA

PROPULSION COMPONENT LOCATION VIEWS (CONTINUED)

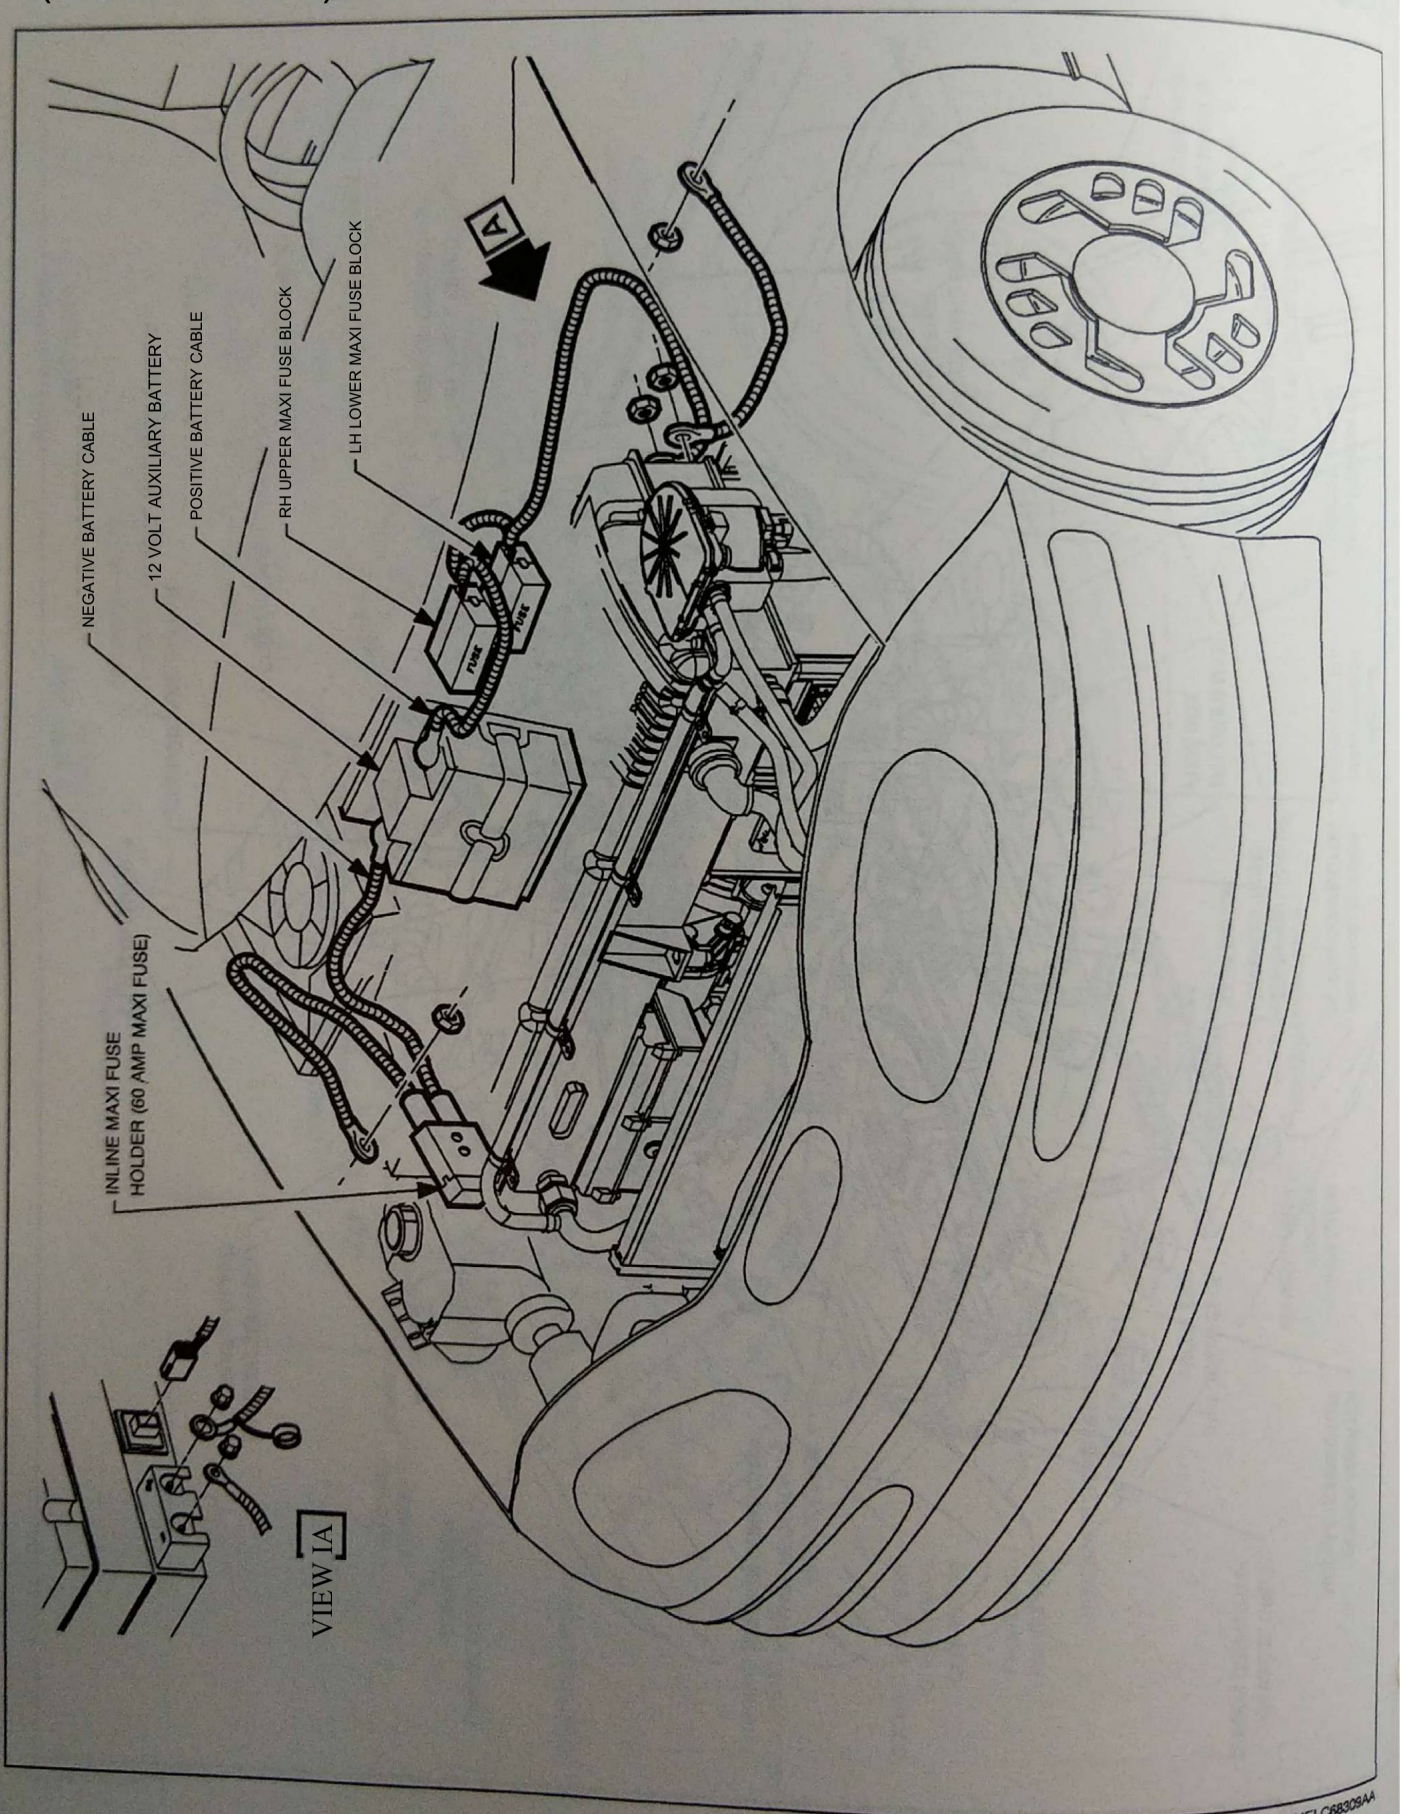

NOTES

CamScanner

RADIO

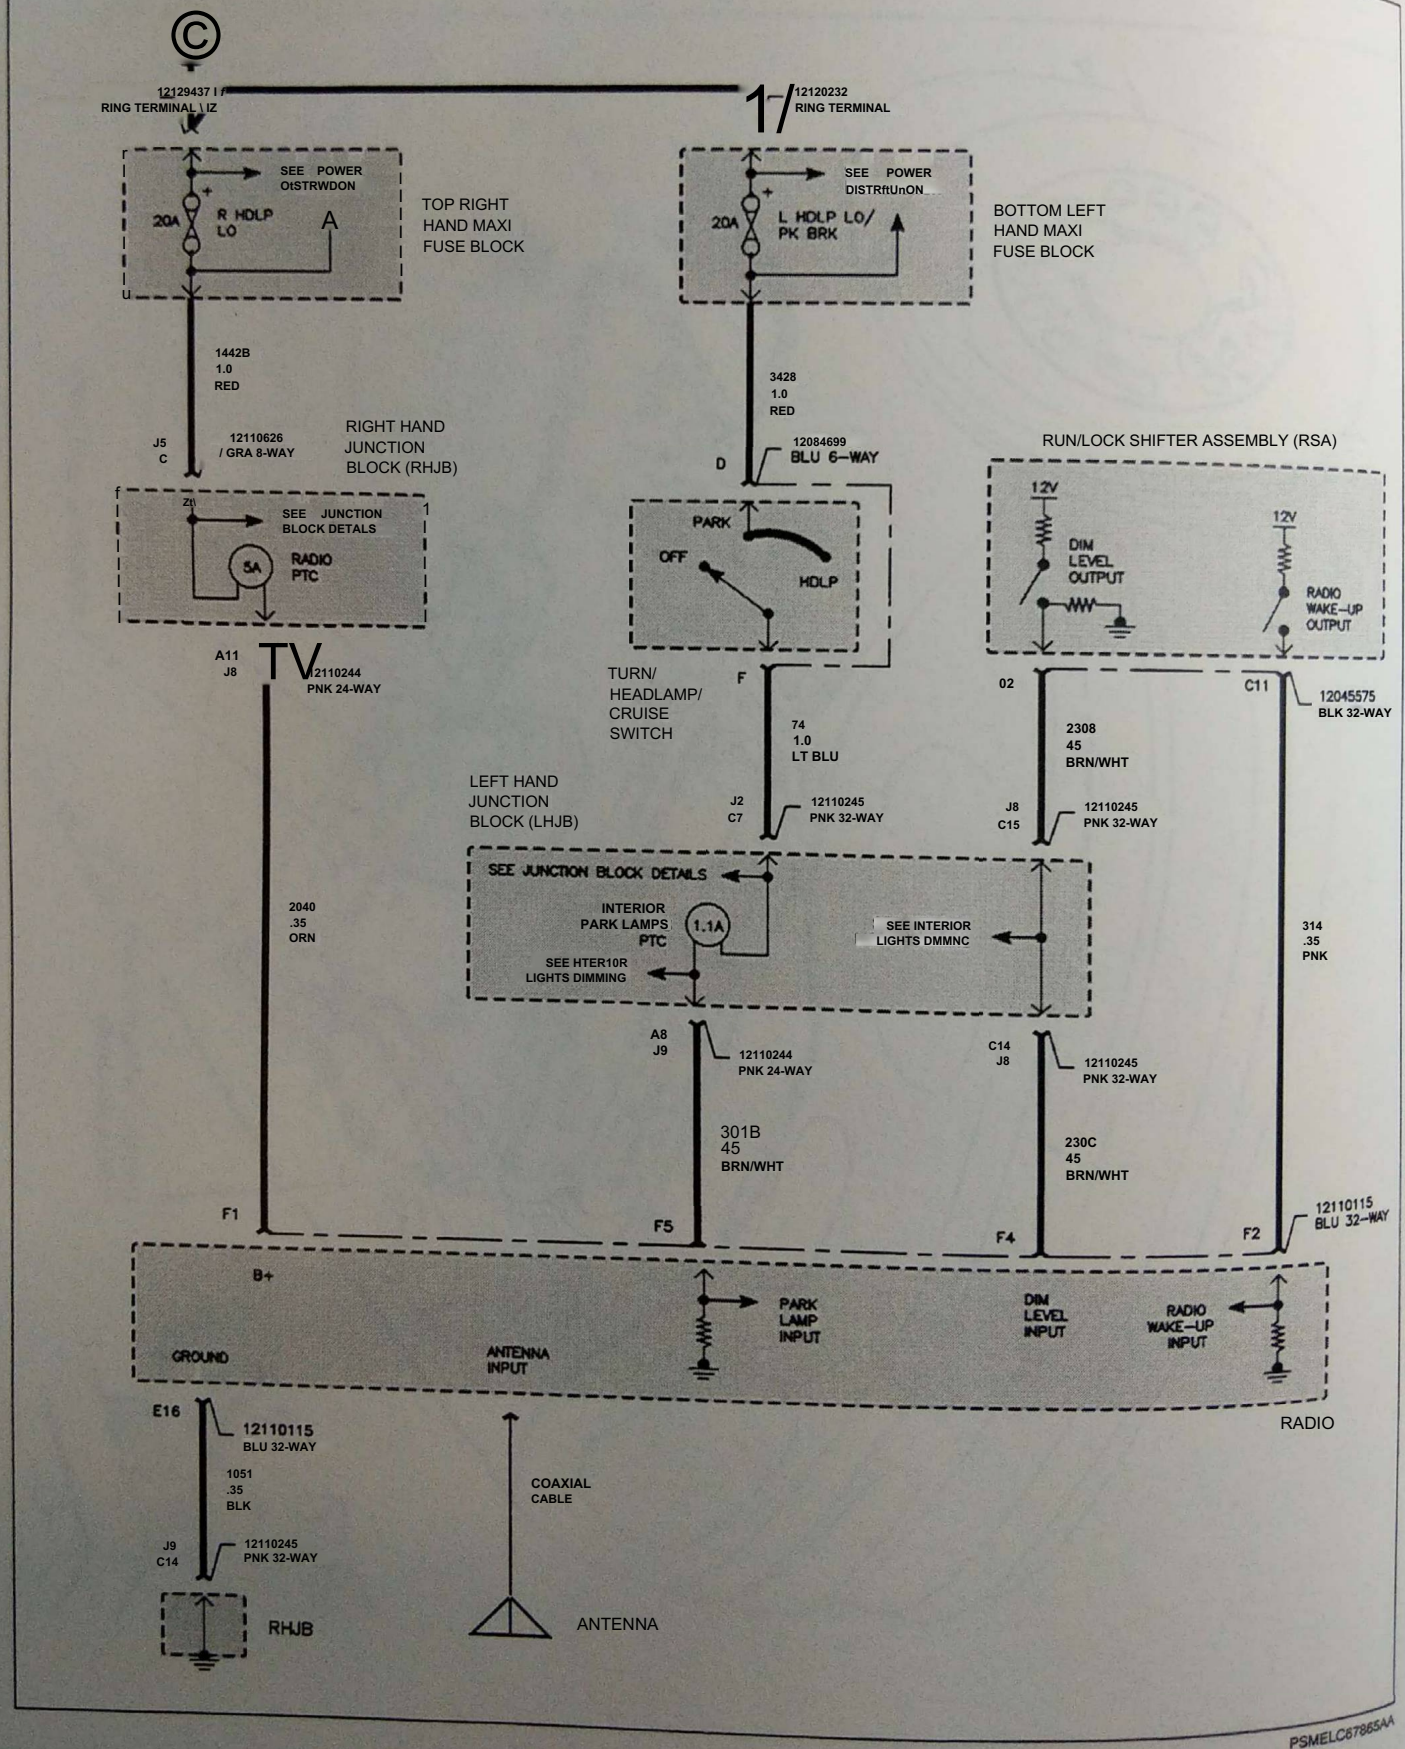
12129437
RING TERMINAL
12120232
RING TERMINAL
SEE POWER DISTRIBUTION
20A
R HDLP LO
A
TOP RIGHT HAND MAXI FUSE BLOCK
SEE POWER DISTRIBUTION
20A
L HDLP LO/ PK BRK
BOTTOM LEFT HAND MAXI FUSE BLOCK
1442B 1.0 RED
3428 1.0 RED
J5 C
12110626 GRA 8-WAY
RIGHT HAND JUNCTION BLOCK (RHJB)
D
12084699 BLU 6-WAY
RUN/LOCK SHIFTER ASSEMBLY (RSA)
SEE JUNCTION BLOCK DETAILS
5A
RADIO PTC
PARK
OFF
HDLP
12V
DIM LEVEL OUTPUT
12V
RADIO WAKE-UP OUTPUT
A11 J8
12110244 PNK 24-WAY
TURN/ HEADLAMP/ CRUISE SWITCH
F
74 1.0 LT BLU
02
C11
12045575 BLK 32-WAY
2308 45 BRN/WHT
LEFT HAND JUNCTION BLOCK (LHJB)
J2 C7
12110245 PNK 32-WAY
J8 C15
12110245 PNK 32-WAY
SEE JUNCTION BLOCK DETAILS
INTERIOR PARK LAMPS PTC
1.1A
SEE INTERIOR LIGHTS DIMMING
SEE HTER10R LIGHTS DIMMING
2040 .35 ORN
314 .35 PNK
A8 J9
12110244 PNK 24-WAY
C14 J8
12110245 PNK 32-WAY
301B 45 BRN/WHT
230C 45 BRN/WHT
F1
F5
F4
F2
12110115 BLU 32-WAY
B+
GROUND
ANTENNA INPUT
PARK LAMP INPUT
DIM LEVEL INPUT
RADIO WAKE-UP INPUT
RADIO
E16
12110115 BLU 32-WAY
1051 .35 BLK
J9 C14
12110245 PNK 32-WAY
RHJB
COAXIAL CABLE
ANTENNA
PSMELC67865AA

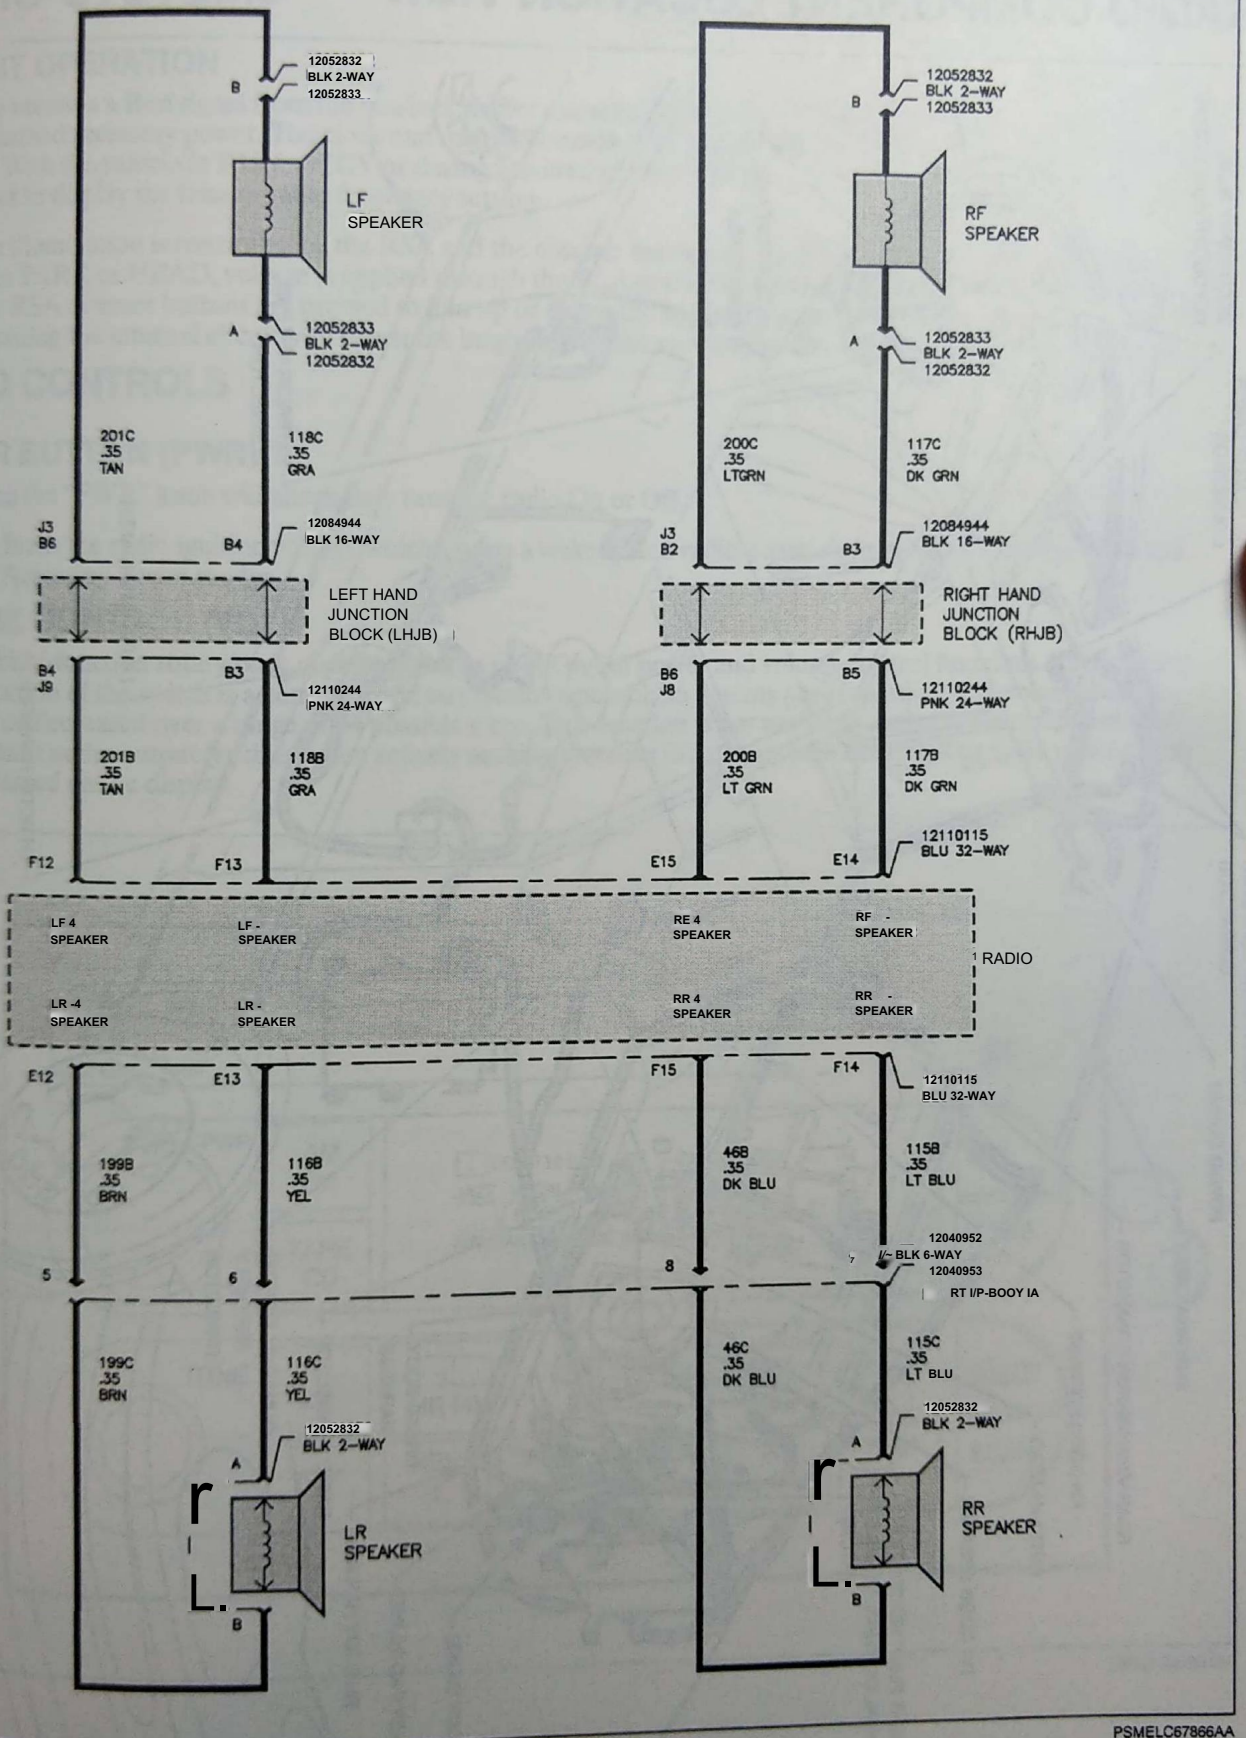

PSMELC67866AA

RADIO COMPONENT LOCATION VIEW

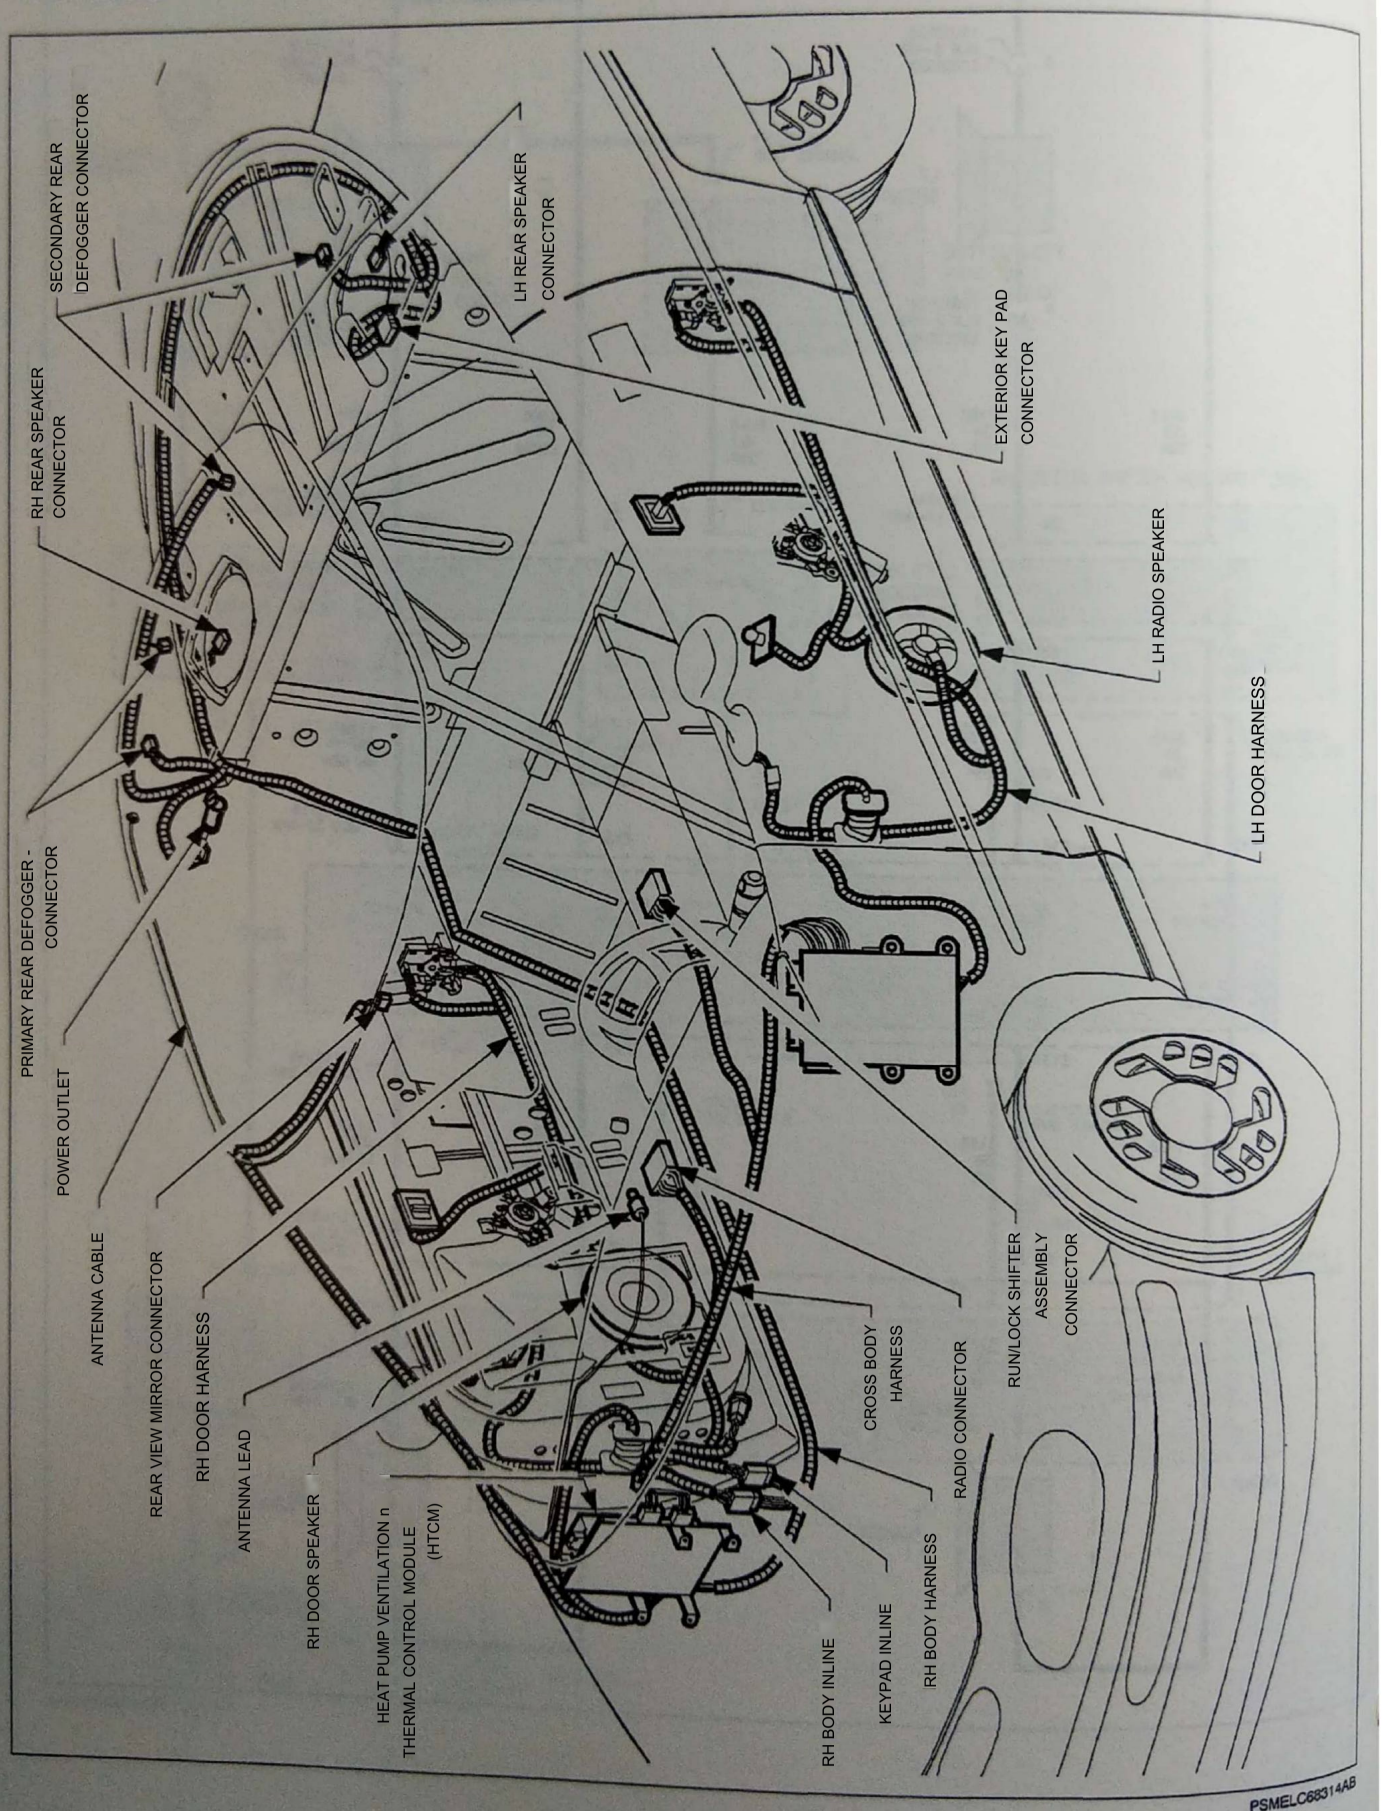

AUDIO SYSTEMS

CIRCUIT OPERATION

The radio receives a Run signal from the run/lock shifter assembly (RSA) when the vehicle is in RUN ACCY or all times with the vehicle in RUN, ACCY or during retained accessory power, the vacuum fluorescent display illuminates to display the time or radio frequency setting.

The radio illumination is controlled by the RSA. When the head/park lamp switch is in PARK or HEAD voltage is applied through the RSA to the radio panel lamp and the internal circuitry. When the RSA dimmer buttons are pressed to dim up or down, the appropriate level of voltage is supplied to the radio, signaling the internal circuitry to adjust the brightness of the vacuum fluorescent display to the desired level

RADIO CONTROLS

POWER BUTTON (PWR)

Depressing the "PWR" knob will alternately turn the radio On or Off.

The RSA feeds the radio ignition voltage which acts as a wakeup and radio power during the ACCessory, RUN and Retained Accessory Power modes.

VOLUME CONTROL (VOL)

A single multi-function rotary/push control provides both On/Off power and volume control functions. The volume control portion of the switch is a continuous rotary detent type with 36 detents per revolution. The volume can be increased or decreased over a range of 64 possible steps. This function is not available during radio conditions that do not permit audio output (such as when actively seeking/scanning in tuner or tape modes). The radio volume level is not indicated on the display.

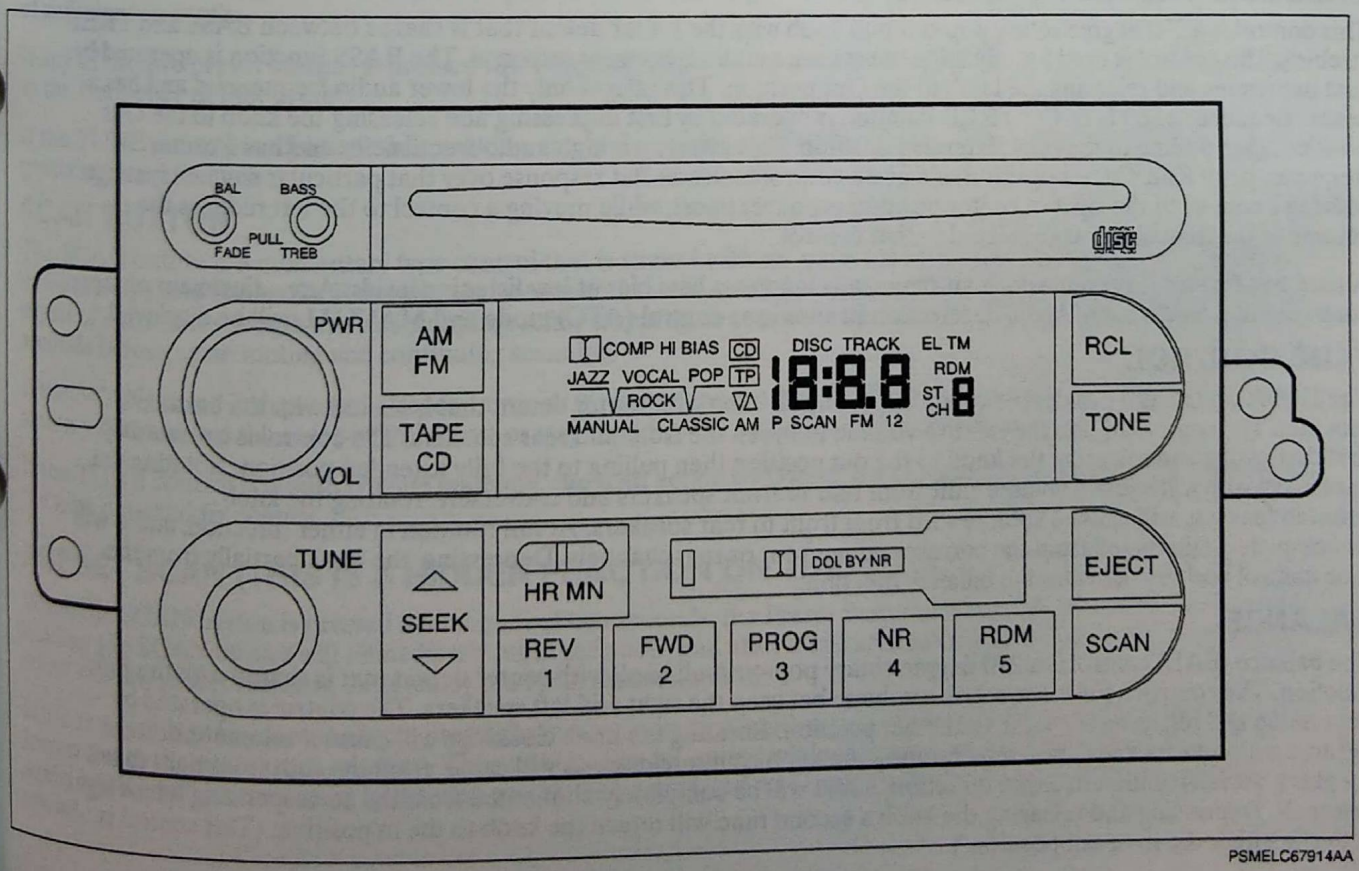

PSMELC67914AA

STEREO INDICATOR

ST is displayed whenever a stereo broadcast is received.

TUNE CONTROL

The tuning control is a pop-out continuous rotary knob with 20 detents per revolution. Tuning of the receiver is accomplished by turning the control in the desired direction. Clockwise turning increases the frequency while counterclockwise decreases the frequency. Frequency is increased or decreased by one channel per detent.

Adjusting the tuning control will stop the SEEK and SCAN functions. Tuning will then continue from the frequency that the receiver was at when the function was stopped.

AM-FM SWITCHING

The AM/FM button is a sequencing (push-push) type that toggles between AM, FM1 and FM2 bands. The button is active anytime the unit is On. Depressing the AM/FM button while in the receiver mode will change the tuning to the frequency last selected on the next band. Depressing the AM/FM button while in the playback mode will cause the unit to switch into the receiver mode with the last selected band and frequency.

The band switching sequence, from an initial state of FM1, is as follows:

- First push toggles the receiver to FM2
- Second push toggles the receiver to AM
- Third push toggles the receiver back to FM1

RECALL BUTTON (RCL)

The RECALL (RCL) button changes the information shown on the display with no changes to the operation of the unit. If the ignition is Off, depressing this control causes the time of day (TOD) to be displayed. The button has no effect while the ignition is On if the radio is Off, since the TOD is already being displayed.

BASS AND TREBLE CONTROLS

This control is a 270 degree rotary pop-out/pull knob with the center detent that is shared between BASS and TREB (treble). This control is used for adjusting the system's audio frequency response. The BASS function is operated by first depressing and releasing the knob to the Out position. This affects only the lower audio frequencies and has a center frequency of 60 HZ. The TREB function is operated by first depressing and releasing the knob to the Out position, then pulling to the fully Extended position. This affects the high audio frequencies and has a center frequency of 10 Khz. Center position of a given control indicates flat response over that particular frequency range. Moving a control to the right of center position produces boost, while moving a control to the left reduces the volume of the frequency range related to that control.

A loudness feature is present which automatically increases bass bias at low listening levels. Any adjustment of these controls will activate the MANUAL selection in auto tone control (ATC) mode and MANUAL will be displayed.

FADE CONTROL

The FADE control is a 270 degree rotary pop-out/pull knob with center detent that is shared with the balance function. The control adjusts the relative volume between the front and rear sneaVerc TBP control k onerated by first depressing and releasing the knob to the out position then pulling to the fully extended position. Rotating the knob clockwise will cause a volume shift from rear to front speakers and conversely, rotating the knob counterclockwise will cause a volume shift from front to rear speakers. At full rotation in either direction, audio will be completely eliminated from the corresponding front or rear channels. Depressing the knob partially from the fade control position activates the balance function.

BALANCE

The balance (BAL) control is a 270 degree rotary pop-out/pull knob with center detent that is shared with the fade function. The control adjusts the relative volume between the right and left speakers. The control is operated by depressing and releasing the knob to the out position. Rotating the knob clockwise will cause a volume shift from left to right speakers and conversely, rotating the knob counterclockwise will cause a volume shift from right to left speakers. At full rotation in either direction, audio will be completely eliminated from the corresponding left or right channels. Depressing and releasing the knob a second time will return the knob to the in position. (This control is active in either the in or out position.)

CamScanner

STATION PRESET SETTING

There are favorite station preset buttons, all of which service a dual role with cassette and/or compact disc player Functions. When in the receiver mode, they function as station memories (1-5). When a CD or tape is being played, 1 Sy perform the CD or tape deck functions.

Pressing and releasing any of the five preset buttons will recall that particular frequency, ATC setting and channel number. The audio will mute and any displayed channel number indicators will be extinguished while the button is being depressed. The unit will then tune to the desired preset UPON RELEASE of the button, as long as the button is depressed for less than two seconds. If this time is exceeded, the set mode will be activated.

The five preset buttons allow presetting five AM stations and 10 FM stations (using FM1 and FM2 bands) along with their respective ATC settings. Setting station presets is accomplished by selecting a station with either manual TUNE, SEEK or SCAN, then depressing the desired preset for at least two seconds. The audio will be muted and NO channel number will be displayed during this time-out period, after which audio is returned and the channel number is displayed, signaling the new preset frequency has been stored. The button can then be released.

The display will show frequency and channel number for five seconds after the preset is set.

. SEEK BUTTONS

J The SEEK button is a rocker type which provides seek up or down in the direction pressed. If the top portion of the rocker is depressed the frequencies will increase. Likewise, pressing the bottom portion of the rocker will cause seeking in the decreasing frequency direction. Depressing the button will cause the audio to mute and the frequency to increase or decrease until a signal of sufficient strength enables stopping or at the end of two complete loops.

If the selected frequency is a preset on the current band, the associated ATC mode will also be selected.

If the SEEK button is depressed a second time while seeking is underway, the seeking action will cease and the receiver will revert to its previous state just prior to the original seek command.

If the SEEK button is held in the depressed position, the seek action will begin, then stop and stay on the next signal i of sufficient strength.

If any of the five preset buttons is pressed while seeking, the seeking action will cease and the receiver will be tuned y to the frequency of that preset.

If the TUNE control is adjusted while seeking, the seeking action will cease and the frequency will change from the preset scanned frequency.

SCAN BUTTON

The SCAN button is a momentary type control that is shared with the nreset scan feature. Pressing the button will immediately mute the audio. Releasing the button within two seconds will cause the frequency to increase until a signal of sufficient strength enables stopping. After stopping the audio is un-muted while the tuner pauses for five seconds before again muting and continuing searching. If no station is found after two complete band cycles, the scan will cease and the receiver will revert to the previous frequency that was selected.

If the SCAN button is depressed a second time or if any VISt frequency that was selected. >«ion will cease and the receiver will revert or y

t0 and stop at

\ K the TUNE control is adjusted while scanning, t e sch an action will cease and the frequency will move 1 the next detected frequency.

ADICH

PRESET SCAN (THIS IS A HIDDEN FUNCTION ON THE R

be activated· Pressing and

Men the SCAN button is pressed a minimum of wsecon^s after a two second delay, will cause the receiver to bolding the SCAN button will imrnediately, mU Q J n or eset buttons.

Se«ct the last preset selection initiated by the r p . . -th r nne of these buttons, the receiver will

If the receiver is presently tuned to a preset that was selected with either

increment to the next preset selection. The audio is then un-muted while the tuner pauses for five seconds before a?mn muting and incrementing to the next prese .t The associated ATC mode will also be selected along with the Preset,

CamScanner

SETTING TIME OF DAY

Time-of-day (TOD) is set using the [illegible] hrM.r fMR'i and minute (MN) buttons. There will be an initial delay of tv/o seconds after first button depression, before the unit will enter the _ _ TM»d' _d th' ___ time will

. When the time set mode is entered, the display will show TOD along with an A (AM) or P (PM)

• Depressing HR will cause hours to increase, while depressing MN will cause minutes to increase.

If the electrical power is interrupted by a blown fuse, discharged battery, etc., the clock must be reset.

TONE CONTROL

The TONE button is a sequencing (push-push) type switch that switches between predetermined frequency response curves and a manual mode (BASS and TREB controls functional). The sequence is as follows in a *continuous loop* configuration:

- **JAZZ**
- **VOCAL**
- **POP**
- **ROCK**
- **CLASSICAL**
- **MANUAL**

When a specific ATC mode is selected with the tone button, it becomes the default. This ATC setting will be stored along with receiver preset frequencies and be recalled when the preset is selected. The radio will display the graphical frequency response curve representations as shown.

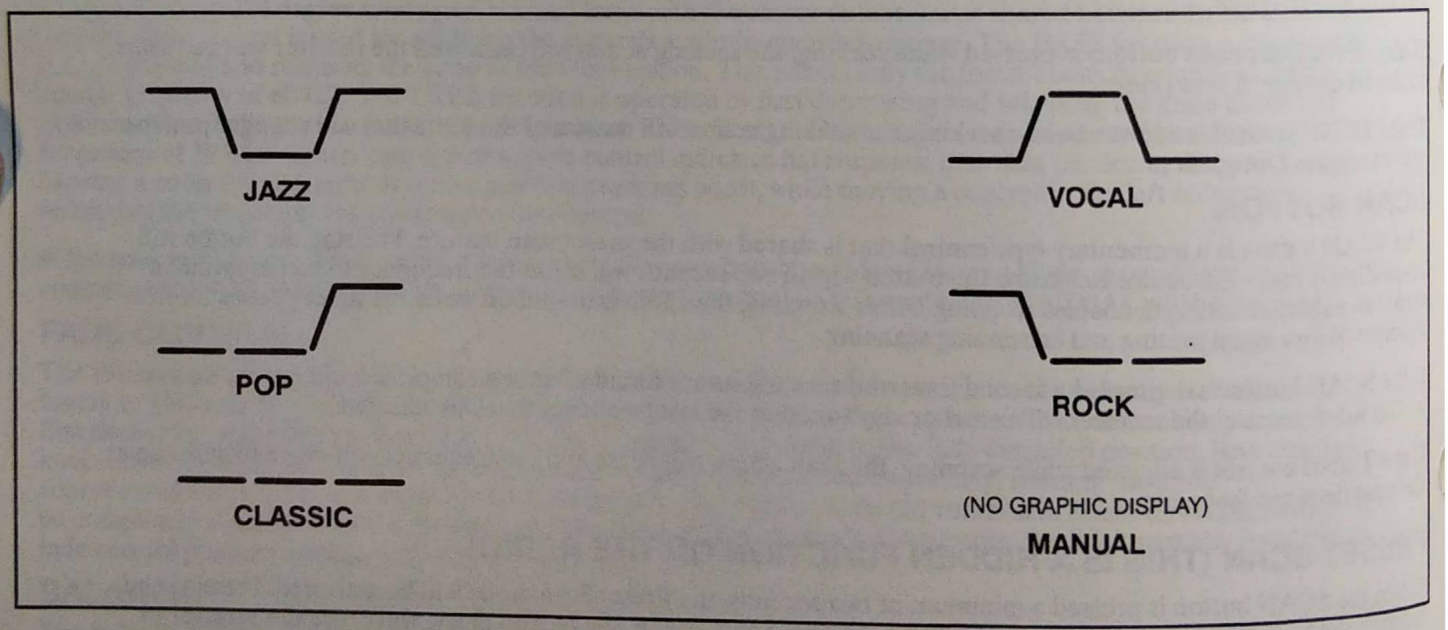

CASSETTE TAPE PLAYER

TAPE LOAD

The cassette player incor orates a powe load
partially inserted throuelFthe P ca•s ®tte mech anism with an illuminated slot opening. The tape is
Se automadcal£? ly dt o th] " fr○nt ○ the trimplate, after which the mechanism completes the loading
CRO2SThe ■t" CaSSette player autom atically senses the tape cartridge for metal tape or
CRO2 usage. The appropriate adjustments are made within the player and the cassette is ready to be played.

EJECT BUTTON

Depressing the EJECT button a unit
The eject function is o er ttSXn"d I"U"'S ‘he Mdi○ “,he radio modc if the * ○N
P duve rrom all modes of cassette operation and while ignition is OFF.

CamScanner

FAST REVERSE BUTTON (REV)

phe Fast reverse (REV) button is a non-latching momentary contact control that serves a dual function with radio % preset #1- Depressing REV button moves the tape in the reverse direction at a rapid speed until this button is ▼ depressed a second time or the program button is depressed to return the unit to the normal play mode. During rewind, the audio reverts to the radio. If no operator changes occur, rewinding continues until the beginning of the tape is reached, whereupon the unit returns to the play mode. Time of Day (TOD) will remain displayed and a program arrow will blink while in the fast reverse mode.

FAST FORWARD BUTTON (FWD)

The Fast forward (FWD) button is a non-latching momentary contact control that serves a dual function with radio preset #2. Depressing the FWD button causes the same operation as described in fast Reverse Button (REV) in this section, except the direction of tape travel is in the forward direction. The corresponding program arrow is lit while the fast forward mode is selected.

SEEK BUTTON

The seek button is a rocker type switch which provides seek up or down of tape selections in the direction pressed, while in the tape mode. A blank spot of three seconds minimum duration is required for the deck to recognize it as a pause between selections.

- If the top portion of the rocker is depressed, audio will be muted while the deck searches for the BEGINNING of the next tape selection.
- If the bottom portion of the rocker is depressed, audio will be muted while the deck searches for the BEGINNING of the CURRENT selection being played.

PROGRAM BUTTON (PROG)

The program (PROG) button is a momentary contact control. Depressing the PROG button causes the tape deck to reverse play direction and changes the indicator arrow direction.

DOLBY

The Dolby Noise Reduction (NR) button is a non-latching momentary contact control that serves a dual function % with radio preset #4. Depressing this control in the tape mode, switches Dolby B noise reduction OFF or ON. A 1 Dolby symbol will appear in the display while in the tape mode and this function is active.

COMPACT DISC PLAYER

NOTICE: Do not attempt to insert any disc into a CD player except those discs which display the symbol shown (see illustration) on the disc label. Insertion of a disc which does not display this symbol may cause damage to the CD player and/or disc. An adapter ring must be used for playing 8 cm disks.

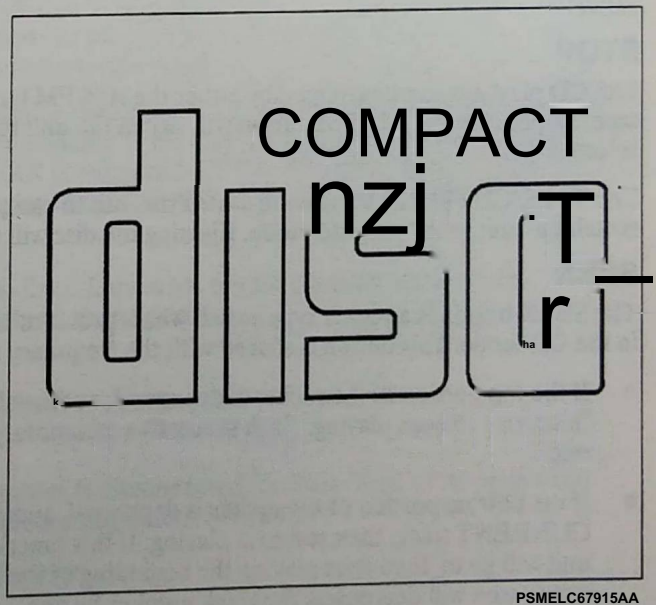

PSMELC67915AA

POWER CYCLING

If the CD is playing when ignition voltage is X rej noved, upon reapplication of power the unit y res umes playing from the position reached prior to power down. CD VF display shows track elected and CD IN.

If battery and ignition is removed from the Un it, upon reapplication of power the radio is in the OFF mode and indicates the time of day, the CD IN lamp turns ON. When the radio is turned On, the CD is initialized and starts to P?y track one and CD IN lights along with the of P^y. After five seconds the track ection is displayed.

CamScanner

PRIORITY STRUCTURE

The last function selecmd is the^ unction that has priority If a compact disc is inserted while the radio is ON the radio shifts to the disc mode aft r the disc is initialized and starts Playing the d*SC‘The CD PtayCr 'S g,vcn priorib hy the radio.

CD LOAD

The CD is inserted approximately 1/2 of the way after wh- ch the mechanism completes the loading cycle automatically and begins to play track ■>»=»”the d“ ThC C○ lMd fUnC,i○n “ aVai'able “ a“ tim“,hat ’ cartridge is not presently loaded.

CD EJEC T

Thisfunction‘« aTMla*Je>n a ll modes of nneration and with ignition ON or OFF. With the radio and ignition ON pressin the bi :ton mutes the disc and the motonge ectSf Sc and the CD indicator turns Off. At any time, with radio or ignition ON or OFF an ejected disc that is not removed from the CD load mechanism within 25 seconds will automatically be reloaded but the play mode will not be activated.

PLAY

The CD (Tape/CD) button is a sequencing momentary contact type switch that causes the unit to enter the playback mode. The operation of this control is explained under the following two conditions:

- With NO cassette loaded. Depressing this button with a CD loaded will cause the CD to begin playing. This button will have no effect if a CD is not presently loaded.
- With both CD and cassette loaded. Depressing this button will cause the last selected playback device to start playing. Pressing the button repeatedly will toggle between playbacks.

Depressing the TAPE/CD button, from all modes of CD deck operation (excluding stop), causes the CD mechanism to halt and the cassette to start playing. Depressing TAPE/CD with a cassette active and a CD loaded, will cause the cassette deck to stop and the CD to resume playing from the same location as when stopped. Play will be continuous with a wrap back to the first track after the last track has completed. If ignition is turned OFF or if the unit is turned off with any CD mode active, the unit will revert to the play mode, from the previous location, upon reapplication of ignition voltage and radio power-up. A box will appear around the CD symbol in the display when the CD becomes active.

STOP

The CD playback can be stopped by either the AM/FM button, the TAPE/CD button, ejecting a disc or loading a tape. Depressing the AM/FM button will switch the unit to the radio mode with the last frequency and band

Pt Pf E/CD (PPE) buttOn Wil1 switch the unit t0 cassette mode with a cassette loaded. Loading a tape will switch the unit to the cassette mode. Ejecting the disc will switch the unit to the tuner mode

SEEK

Pthe CDKmX0™aP?tknn Ph swl tch 'yhi ch Provides seek up or down of CD tracks in the direction pressed while CD mode. This button is shared with the frequency seek function in tuner mode and with cassette seek.

- If the top portion of the rocker is depressed, aUdi○ Wil1 be muted as the d^k moves to the beginning of the next track, one then begins playing. Each successive momentary press of this button will increment the track number by
- If the bottom portion of the rocker is depressed, audio wU1 be “uted the deck moves to the beginning of the CURRENT track, then resumes playing. If this function is enabled within the first eight seconds of a track, the unit will go to, then start playing the bevinnino of i this button will decrement the track number if onP^^TOUS track. Each successive momentary' press of

SCAN

1 y ○ne

The scan button is a n - at ntrc which p g s With the frequency sca^flnSfi^tune! mode aidl^h onVard scanning of CD selections. This button is shared d di nKP’ aU,n○ WIU be muted “ the deck incremenPPPP6 SCan Action. When the SCAN button is (0 the first 10 seconds of the track prior to again incrementing and playing the first 10 seconds of each consecutive track. If the SCAN button is again pressed while the function is active, the SCAN function will be canceled and the present track will continue playing. The SCAN symbol along with the Track # will appear in the display while in the CD scan mode.

CamScanner

RANDOM

The Random (RDM) button is a non-latching control Dcnre«,n<, tk ,. . . is contro tne ent selection to stop playing while a random playback order ^chosenh H?" C○ Play mode causes the a curr 1 with the tracks being played in the random order that was chosen When £ !n,c rocomPuter- Play then resumes will continue play in the original random order. Pressing the random hnnl, select«on has been played, the unit causes the playback to continue in the normal sequencei bearing°withX curremSc^ 8 rand○m Playback at any durin

The Random symbol (RDM) will be displayed when the feature is active

FAST REVERSE

The fast reverse (REV) button is a non-latching momentary contact control. This button is of a press and hold nature. The button allows reverse movement within the disc at a faster rate than normal playbac button is held. When activated, ,he audi°level is red““d b> 6dB md th' »■“ p'-y -S,S'he rate of six times normal speed.

Elapsed time within the selected track will be displayed while in the REV mode. The track number, followed in five seconds y elapse buttin is^reUased^timC fo ○Wed m flve more seconds by the user selected default will be displayed after the REV

FAST FORWARD

1 tie fast forward (FWD) button is a non-latching momentary contact control. Operation of this feature is the same as the fast Reverse (REV) button only the movement will be forward rather than reverse.

NR BUTTON

me NR button does not perform a special function in CD mode.

VF DISPLAY

me display is a 3 1/2 digit vacuum fluorescent display with a nonflashing colon (used in time) and various indicators. Tais display exhibits even color and brightness over the full brightness range of the dimming control. Dimming is controlled by the RSA.

ERROR (ERR) DETECTION

The unit indicates ERR in the VF display if the focusing mechanism is impaired by moisture, or if tracking or serve^ problems occur, of if a disc is inserted upside down. The unit switches to the radio mode and ejects the CD. If a CD is inserted upside down, the CD player is not able to initialize and the unit will not shift into the audio modes. The ERR graphics turn off after five seconds or sooner if the disc is reinserted correctly.

ERR is not lit unless the CD player is active and in the play mode or the ambient temperature exceeds a preset temperature and the CD operation is either not functional or in jeopardy of damaging thelaser. The disc ejects and £RR lights in the VF tube. If the temperature is too high the ERR is maintained in the VF display until the CD Player cools to a safe operating temperature. While ERR is displayed the unit will not accept CDs.

MODE SWITCHING

J he unit gracefully changes status without popping on the audio lines. Lapses are not lon$_0$er than two seconds “tween switching sources and after initialization has occurred there are no pauses.

SPEAKERS

The EV audio system consists of four speakers: one in each door and two in the rear.

THEFT DETERRENT (THEFTLOCK)

Theftlock will cause the radio to become inoperative if battery power is disconnected for more than 15 seconds when 1116 u mt is in the secured state. A DTC entry scheme is used to secure a nd unlock the radio.

The theft deterrent is ENABLED by the following sequence of operations.

1. With battery and ignition voltages applied and radio OFF
2. Depress preset buttons 1 (REV) and 4 (NR or · rdM) for five seconds. The VF display will show ---------- “ ”

'“dealing lhe unit is NOT in .he secure mode^ — initial key press of eirher button will causa .he

[1] Using the HR and MN buttons, enter any DTC ""“b “ T ie user DTC Subsequent key presses of the HR ^splay to indicate 000, the last three digits of the 21/~ I g the MN win cause the right two digits to button will cause the left 1 1/2 digits to increment and dep ressing t a rate of once every one secon a tor the firs two increment. The digitswill continuously increment a as the button is pressed. The digits will also increments and then once every 250 milliseconds as long Cerement by one with every momentary epres d sion.

5

CamScanner

4. Depress the AM/FM button. The display win now show ^REP for five seconds, indicating that the steps to re-enter the 3 1/2 digit DTC will need to be repeated for verification.
5. Re-enter the 3 1/2 digit DTC according to step 2.
6. Depress the AM/FM button. If the display shows SEC the verification was successful and the system is ln the SECUREstate. If the display shows the "verification steps were not successful and the entire sequence must be started from the beginning.

The display will revert to TOD after 15 seconds. The Theft Deterrent is DISABLED from the SECURE mode by the following sequence of operations:

1. Battery and Ignition voltages applied and radio OFF.
2. Depress buttons 1 (REV) and 4 (NR or RDM) for five seconds. The display will show SEC, indicating the unit is in the SECURE mode.
3. Using HR and MN buttons, enter the correct DTC number. The initial key press of either button will cause the display to indicate 000, the last three digits of the 3 1/2 digit user DTC. Subsequent key presses of the HR button will cause the left 1 1/2 digits to increment and depressing the MN button will cause the right two digits to increment. The digits will continuously increment at a rate of once every one second for the first two increments and then once every 250 milliseconds, as long as the button is depressed. The digits will also increment by one with every momentary depression.
4. Depress the AM/FM button. If the display shows "", the disabling sequence was successful (the numbers matched the user-selected DTC or the factory backup DTC) and the unit is in the UNSECURED state. I: the display shows SEC, the numbers did not match either of the DTCs and the unit will remain in the SECURE state. The display will revert to TOD after 15 seconds.

DIAGNOSIS/TROUBLESHOOTING HINTS

RADIO

The radio is the bridge audio type, using two wires to each speaker. It is very important when changing speakers or performing any radio work to avoid pinching the wires. A short circuit to ground from either wire causes damage to the output circuit in the radio.

Many conditions that affect radio operation may be corrected without removing the radio from the vehicle. Verify the condition and follow the diagnosis in the appropriate trouble tree to isolate and determine the cause of the problem. Before attempting to diagnose radio problems with a low battery, be sure that the vehicle is fully charged. If the radio power supply drops below nine volts, AM or FM problems may be induced.

Because radio service problems are corrected at authorized warranty repair stations, the tendency is to remove the set when a problem is reported, without any preliminary diagnosis. A large number of radios received by warranty repair stations are found to be okay. This indicates that the trouble could have been corrected without removing t radio.

If possible, determine from the owner the exact nature of the radio problems as an aid to diagnosis. Knowing whether the condition is intermittent or constant, whether the vehicle is in Run or Accesory, whether it is stationai} or moving, will help to pinpoint the problem. Also, check that the antenna is not damaged (above the headliner ai - that the lead-in is not at fault. (Refer to "Antenna Diagnosis" in this section)

RADIO INOPERATIVE HINTS

For checkin a a e
kPrgwhSri kfr USe a C or D ce11 batteD and momentarily connect and disconnect it across the circuits; to If SeJh^nshth?^nLng fo7 S lght POpPing S0Und or watching8 for the cone of the speaker to move in and ou either happens, the speaker and circuitry are usually ok.

Check radio power at pins Fl and F2.

Check ground circuit 1051 pin E16 to RHJB J9 pin C14.

CamScanner

RADIO NOISE HINTS

Test the radio outside and away from building with the hood down.

% Check antenna coax connectors for corrosion or bad connections.

If a test antenna is used, ground the base of the antenna to a vehicle ground.

When shielding components, use aluminum foil tape (nickel tape works best for magnetic interference) and ground the end of the shield.

Most noise can be found on weak AM stations near the low end of radio band.

Coated screws or bolts may cause ground problems.

Before removing a speaker, check all accessible wiring and connectors to that speaker.

FM STEREO

FM broadcasts are line of sight from station antenna to receiving antenna. The range is often limited to 40 km (25 miles) or less for steady reception. Beyond that noise and flutter may begin to appear due to the line of sight range limitation of FM signals. Tall buildings or hills may cause shadows or cancellation of FM signals (this is similar to the ghost or flutter effect seen on television sometimes when airplanes are flying in the vicinity). It will sound like a pop or momentary hiss. Turn down the treble setting to help reduce these noises.

AM STEREO

AM stations broadcasting C-QUAM® stereo may be automatically processed in stereo if the receiver has this feature. Switching to stereo improves fidelity, but may increase noise on weaker stations. AM does not have the flutter characteristics of FM (caused by tall buildings, hills, etc.). However, it is subject to interference from power lines, neon signs, atmospheric conditions, overpasses, and unwanted stations. To help reduce noise try turning down treble. Refer to the trouble trees in this section for specific diagnosis of static and noise.

ANTENNA SYSTEMS

TESTING ANTENNA GROUND/CONNECTIONS

Poor connection in the antenna/lead-in system can result in seriously degraded radio performance. A poor ground can be a reason for excess noise on AM or erratic audio. Lead-in connectors must be clean and securely connected.

Possible ground loss or high-resistance ground points are:

- Lead-in cable connector at antenna (loose or internally corroded).
- Lead-in cable connector at radio (loose or internally corroded).
- Missing or loose ground bolt at right rear inner quarter.

CHECKING LEAD-IN CABLE

Usually symptoms of a broken center conductor of the lead-in ^ble will result in no AM and weak FM. In case of continued reception or noise complaints, always check the lead-in with an ohmmeter. The chart and illustration show readings which should be obtained. When checking resistance, wiggle the lead-in tip and cable. If the readings shown are not obtained, the lead-in should be replaced.

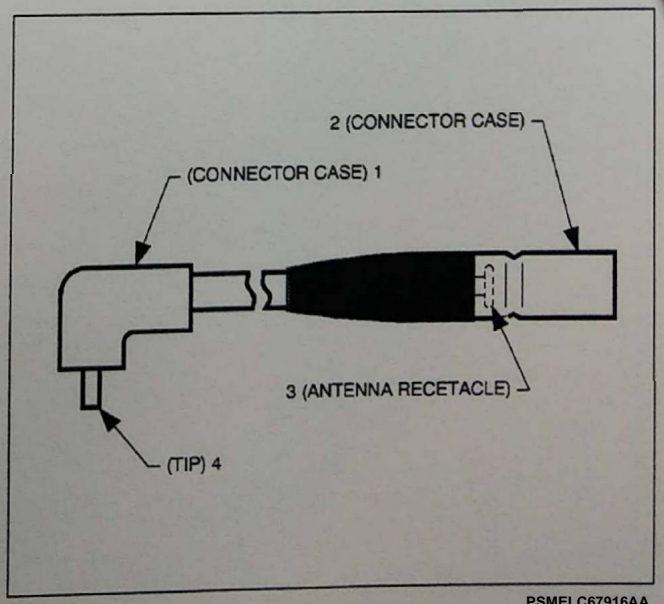

PSMELC67916AA

MEASURE RESISTANCE WITH DIGITAL VOLT-OHMMETER.
(LEAD IN CABLE DIAGNOSIS)

'EBQBES^N	INDICATION (OHMS1L
1 AND 2	LESS THAN 0.3**
3 AND 4	LESS THAN 2.5**
1AND3	INFINITE
1AND4	INFINITE
2 AND 3	INFINITE
2AND4	INFINITE

* C&E MEASURING, WIGGLE LEAD-IN TIP AND * ^LE; INDICATION SHOULD NOT VARY.

** WHEN TAKING THESE READING BE SURE TO ZERO M^1^ LEADS OR MISDIAGNOSIS MAY OCCUR

CamScanner

USING A TEST ANTENNA

Disconnect antenna lead-in at back of radio and plug a test antenna into radio. Make sure test antenna base [1] is grounded to the vehicle chassis and keep hands off the antenna. Check radio reception in an area away from electrical interferences such as tall buildings, metal structures, power lines, fluorescent lighting, and power tor ols. Tune to high and low ends of the dial on both AM and FM, checking weak and strong station reception.

If reception is okay, a problem may exist with the antenna and/or its lead-in cable. Be aware that most antennas generally provide better reception than film antennas. Compare reception to another vehicle before replacing antenna. If reception is still poor, refer to diagnosis in this section.

TAPE PLAYER WILL NOT WORK

Check for obstruction behind the tape door. If no obstruction is found, insert a good tape and check the operation. If the tape player continues not to work, remove the radio assembly for repair and refer to the appropriate trouble tree in this section.

TAPES SOUND WEAK OR NOISY

Clean the head using the procedure below. After cleaning insert a good tape and check the operation. If the tape sound is still weak and noisy, remove the radio assembly for repair.

CamScanner

TAPE HEAD AND CAPSTAN CLEANING

There are two parts that are cleaned on a tape player* the head and tu o- S tape door, do not remove the radio.This service should be pertormed™^ lSjhoureof ice they can be reached ,hr°"8h on.

To Clean the head and capstan, use a cotton swab dipped in ordinary nibbing alcohol, or use aTeZing cassette.

Dn not contact the tape head with magnetized tools. If the head hpm m»e ~ degraded. No service is performed on the tapes and warranty of tapes is handled bvVh'eT^^ played wil* bc by the retailer. Any test tape used by the retailer should be scored m its container to keep^he tapTcle^ turer, not

Store cassettes away from extreme heat or direct sunlight. When leaving the vehicle, cassettes may be left in auto-reverse tape players, as the head retracts to prevent damage when off.

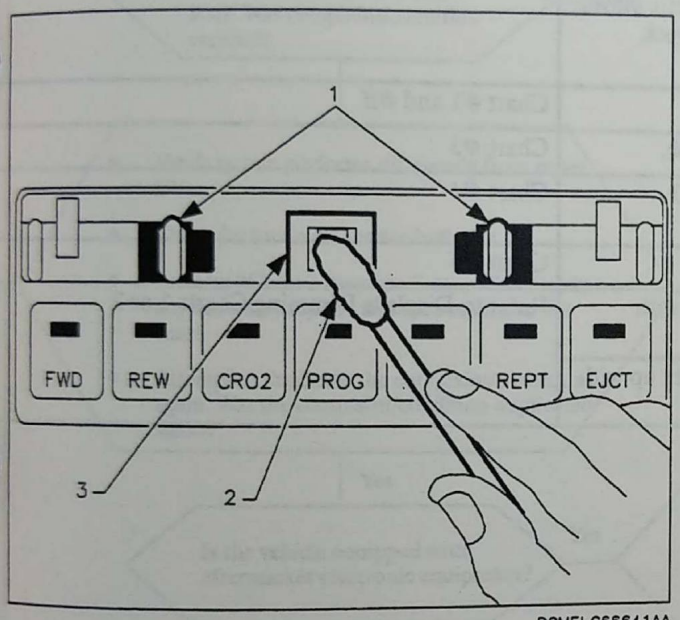

PSMELC66641AA

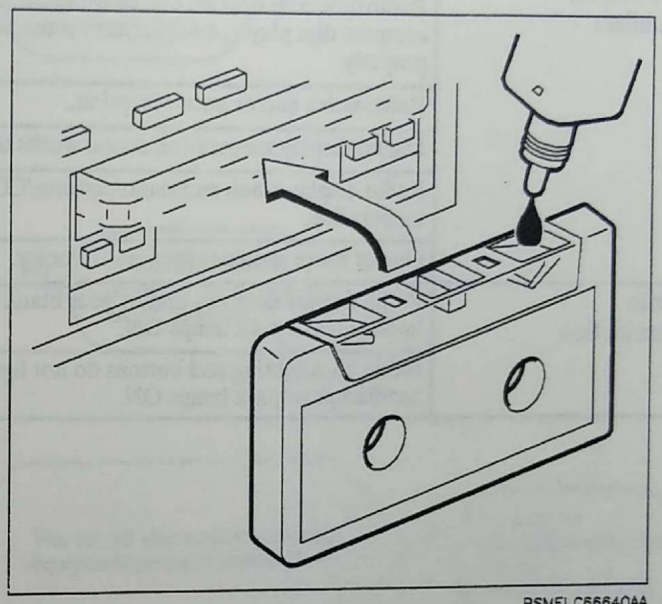
PSMELC66640AA

A

SYSTEM DIAGNOSIS

r j* rvn^iaint Trv to duplicate condition (listen to AM or FM, start vehicle, put in a good (B
Determine type of audio complaint: ... X operation per —on ■„ this seenon.
or cassette, test switches, etc.) Verify radio

Follow diagnosis given for your symptom in Symptom Table below.

SYMPTOM TABLE

SYMPTOM		FOR DIAGNOSIS'"^
Radio/Clock/ Cassette Player/ Compact Disc Player/ Equalizer	Radio display forms incomplete numbers or letters.	Refer to hints under diagnosis. If conditionhnMT" resolved, send radio to an authorized AC-Delco repar station.
	Radio plays, however, one or more radio controls do not operate.	
	Radio functions operate correctly but cassette player, compact disc player, or equalizer do not work properly.	
	Radio noise and/or poor reception.	Chart #1 and #2
	Digital display inoperative, sound works ok.	Chart #3
	Radio display blank and radio/cassette/CD inoperative.	Chart #4
	One or more speakers inoperative/noisy.	Chart #5
Radio Illumination	Radio display does not dim or goes blank with headlamps or park lamps ON.	Refer to Displays Dimming Charts 1 or 2
	Radio backlighting and buttons do not light up with headlamps or park lamps ON.	

CamScanner

RADIO NOISE AND/OR POOR RECEPTION

CHART 1

Important: To avoid misdiagnosis check for stored diagnostic trouble codes (DTCs) and diagnose those first.

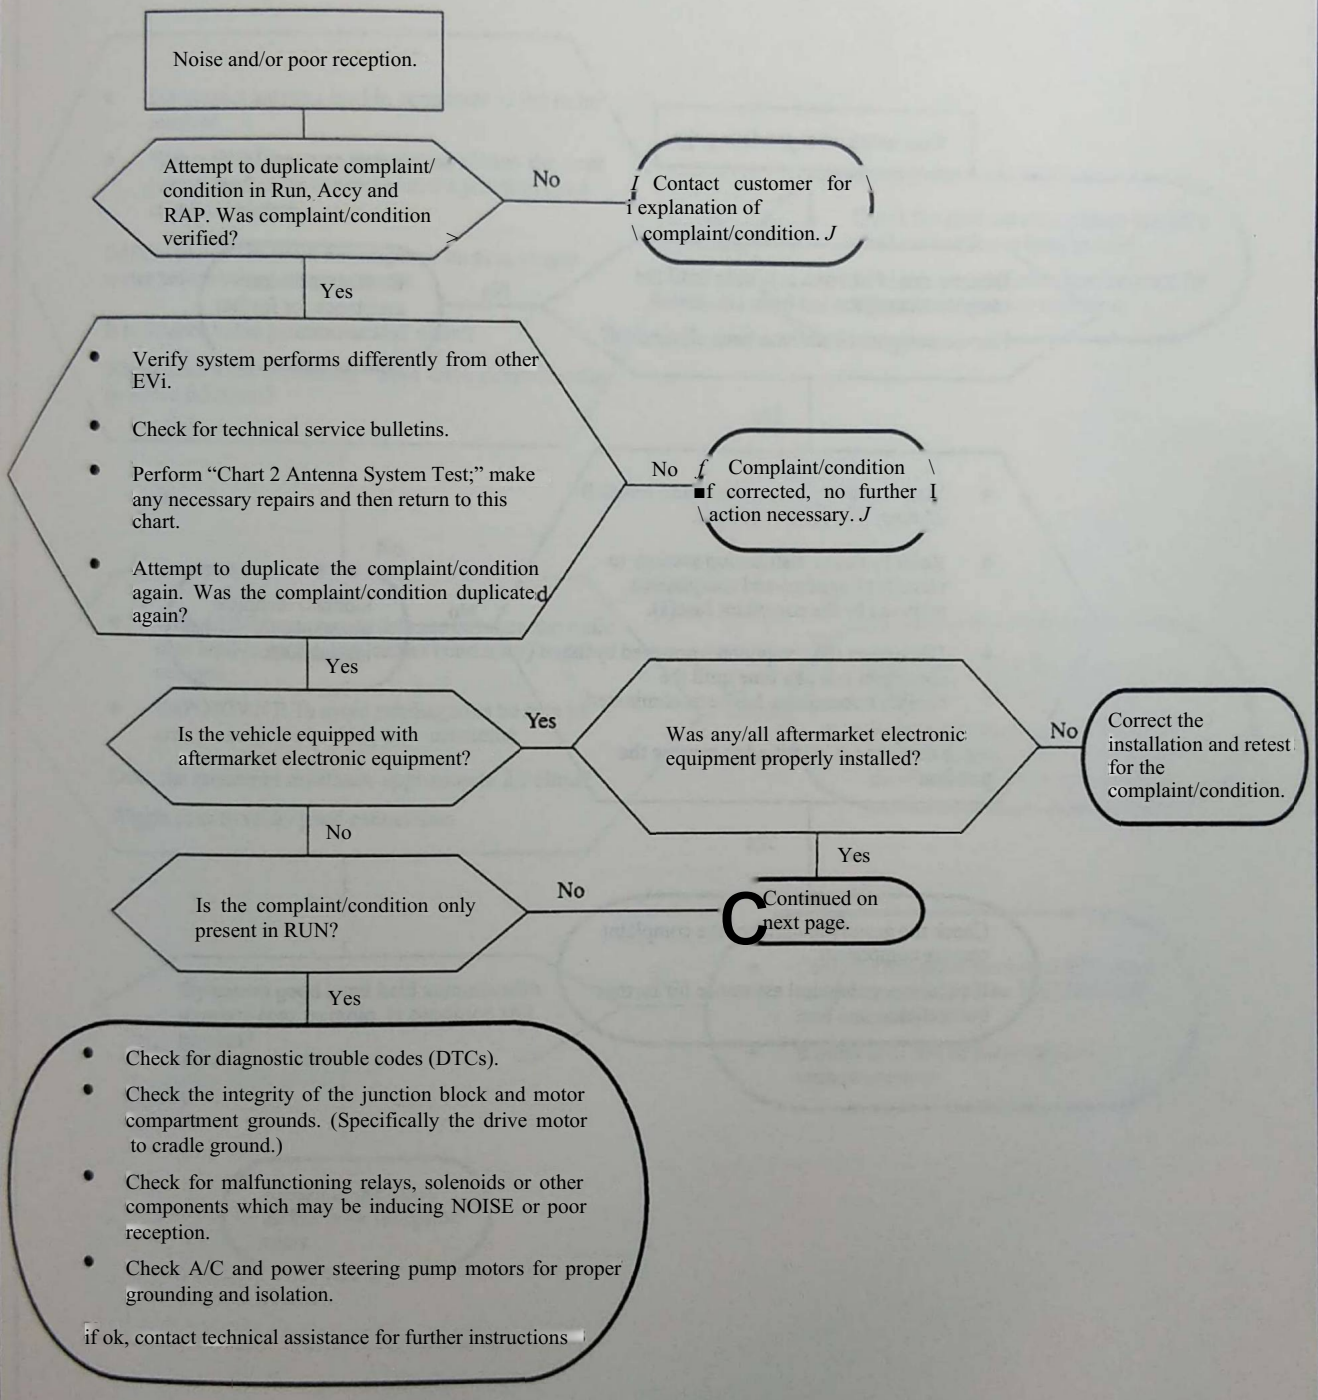
Noise and/or poor reception.
Attempt to duplicate complaint/ condition in Run, Accy and RAP. Was complaint/condition verified?
No
Contact customer for explanation of complaint/condition.
Yes
Verify system performs differently from other EVi.
Check for technical service bulletins.
Perform "Chart 2 Antenna System Test;" make any necessary repairs and then return to this chart.
Attempt to duplicate the complaint/condition again. Was the complaint/condition duplicated again?
No
Complaint/condition corrected, no further action necessary.
Yes
Is the vehicle equipped with aftermarket electronic equipment?
Yes
Was any/all aftermarket electronic equipment properly installed?
No
Correct the installation and retest for the complaint/condition.
Yes
No
Is the complaint/condition only present in RUN?
No
C
Continued on next page.
Yes
Check for diagnostic trouble codes (DTCs).
Check the integrity of the junction block and motor compartment grounds. (Specifically the drive motor to cradle ground.)
Check for malfunctioning relays, solenoids or other components which may be inducing NOISE or poor reception.
Check A/C and power steering pump motors for proper grounding and isolation.
if ok, contact technical assistance for further instructions

CamScanner

RADIO NOISE AND/OR POOR RECEPTION (CONTINUED)

CHART 1

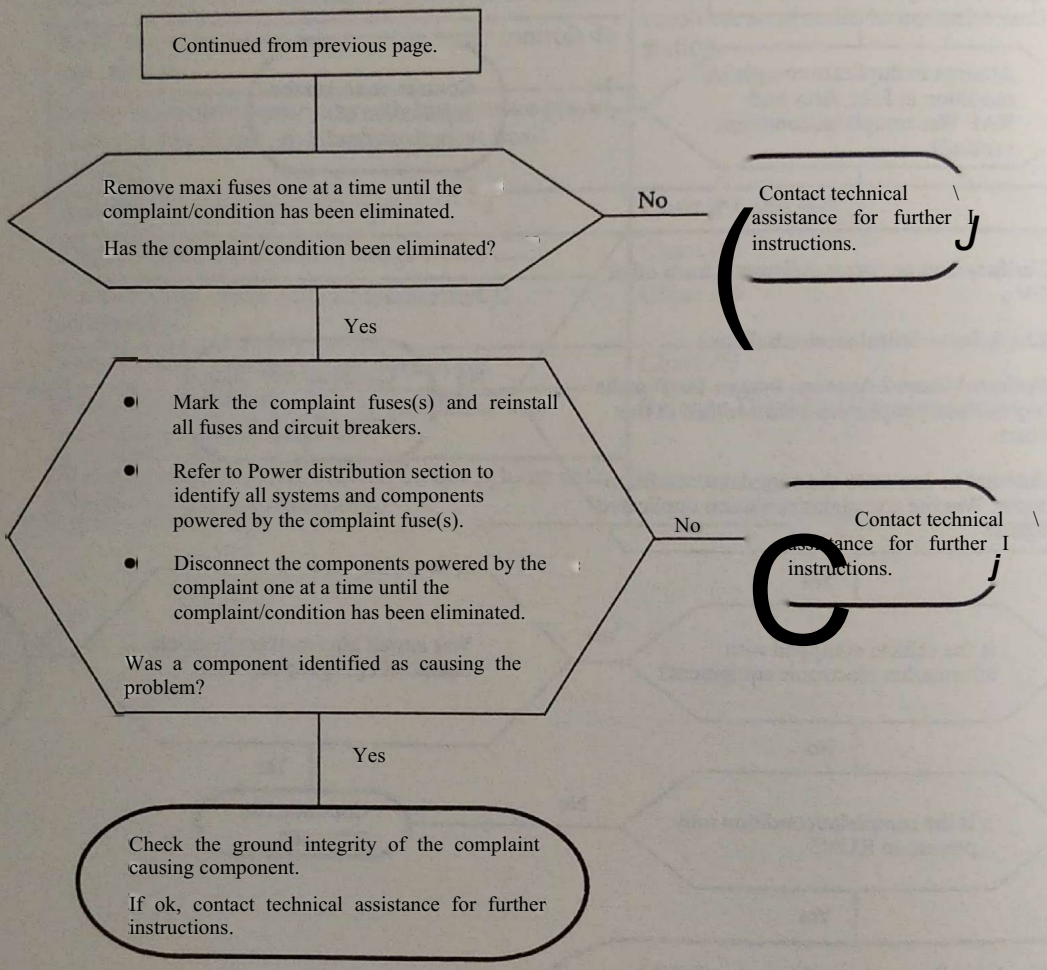
Continued from previous page.
Remove maxi fuses one at a time until the complaint/condition has been eliminated.
Has the complaint/condition been eliminated?
No
Contact technical assistance for further instructions.
Yes
Mark the complaint fuses(s) and reinstall all fuses and circuit breakers.
Refer to Power distribution section to identify all systems and components powered by the complaint fuse(s).
Disconnect the components powered by the complaint one at a time until the complaint/condition has been eliminated.
Was a component identified as causing the problem?
No
Contact technical assistance for further instructions.
Yes
Check the ground integrity of the complaint causing component.
If ok, contact technical assistance for further instructions.

CamScanner

ANTENNA SYSTEM TEST

CHART 2

- Disconnect antenna lead-in connector at the radio receiver.
- With a DVM measure resistance between the coax (outer conductor) connector and a junction block case ground stud.

IMPORTANT: To avoid misdiagnosis be sure to zero meter before taking measurements.

Is resistance value greater than 0.5 ohms?

Wiggle coax while measuring - does value intermittently go above 0.5 ohms?

Yes

- Check the antenna coax ground bolt for a good connection to body ground.
- Check the coaxial cable interconnects for a poor connection or corrosion.

No

- With a DVM measure resistance between the radio coax lead-in connector (center conductor) and the antenna.
- IMPORTANT: To avoid misdiagnosis be sure to zero meter before taking measurements.

Does the measured resistance approximate 2.0 ohms?

Wiggle coax to verify good connection.

No

- Check the coaxial cable interconnects for a poor connection or corrosion.
- Replace the antenna coaxial circuit antenna as necessary and return to the noise and/or poor reception chart.

Yes

Try known good hand held antenna with separate coax to radio. Is condition still present?

No

- Compare reception to another EVI since reception varies between hand-held and roof antennas.
- If other EVI has better reception, replace antenna.

Yes

Return to the noise and/or poor reception chart.

CamScanner

RADIO DISPLAY INOPERATIVE - SOUND WORKS OK

CHART 3

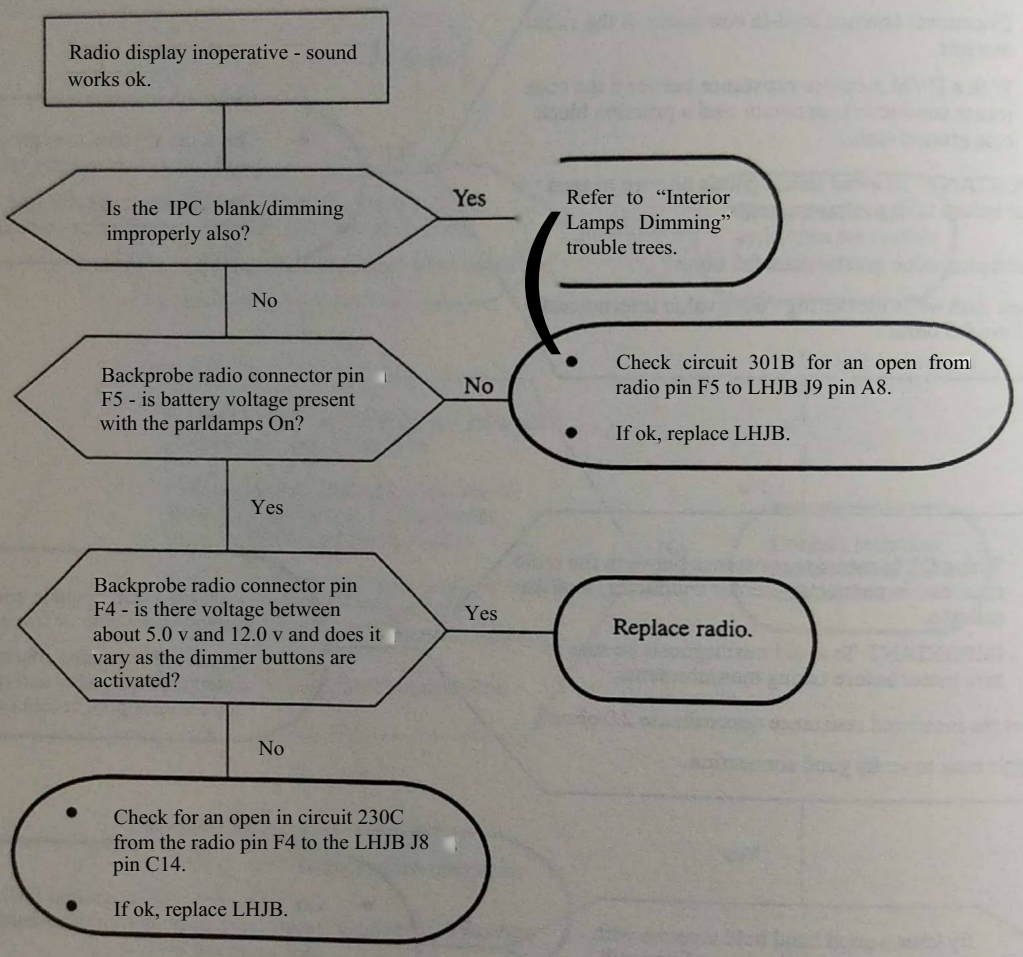
Radio display inoperative - sound works ok.
Is the IPC blank/dimming improperly also?
Yes
Refer to "Interior Lamps Dimming" trouble trees.
No
Backprobe radio connector pin F5 - is battery voltage present with the parldamps On?
No
Check circuit 301B for an open from radio pin F5 to LHJB J9 pin A8.
If ok, replace LHJB.
Yes
Backprobe radio connector pin F4 - is there voltage between about 5.0 v and 12.0 v and does it vary as the dimmer buttons are activated?
Yes
Replace radio.
No
Check for an open in circuit 230C from the radio pin F4 to the LHJB J8 pin C14.
If ok, replace LHJB.

CamScanner

RADIO DISPLAY BLANK AND RADIO/CASSETTE/CD INOPERATIVE

CHART 4

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

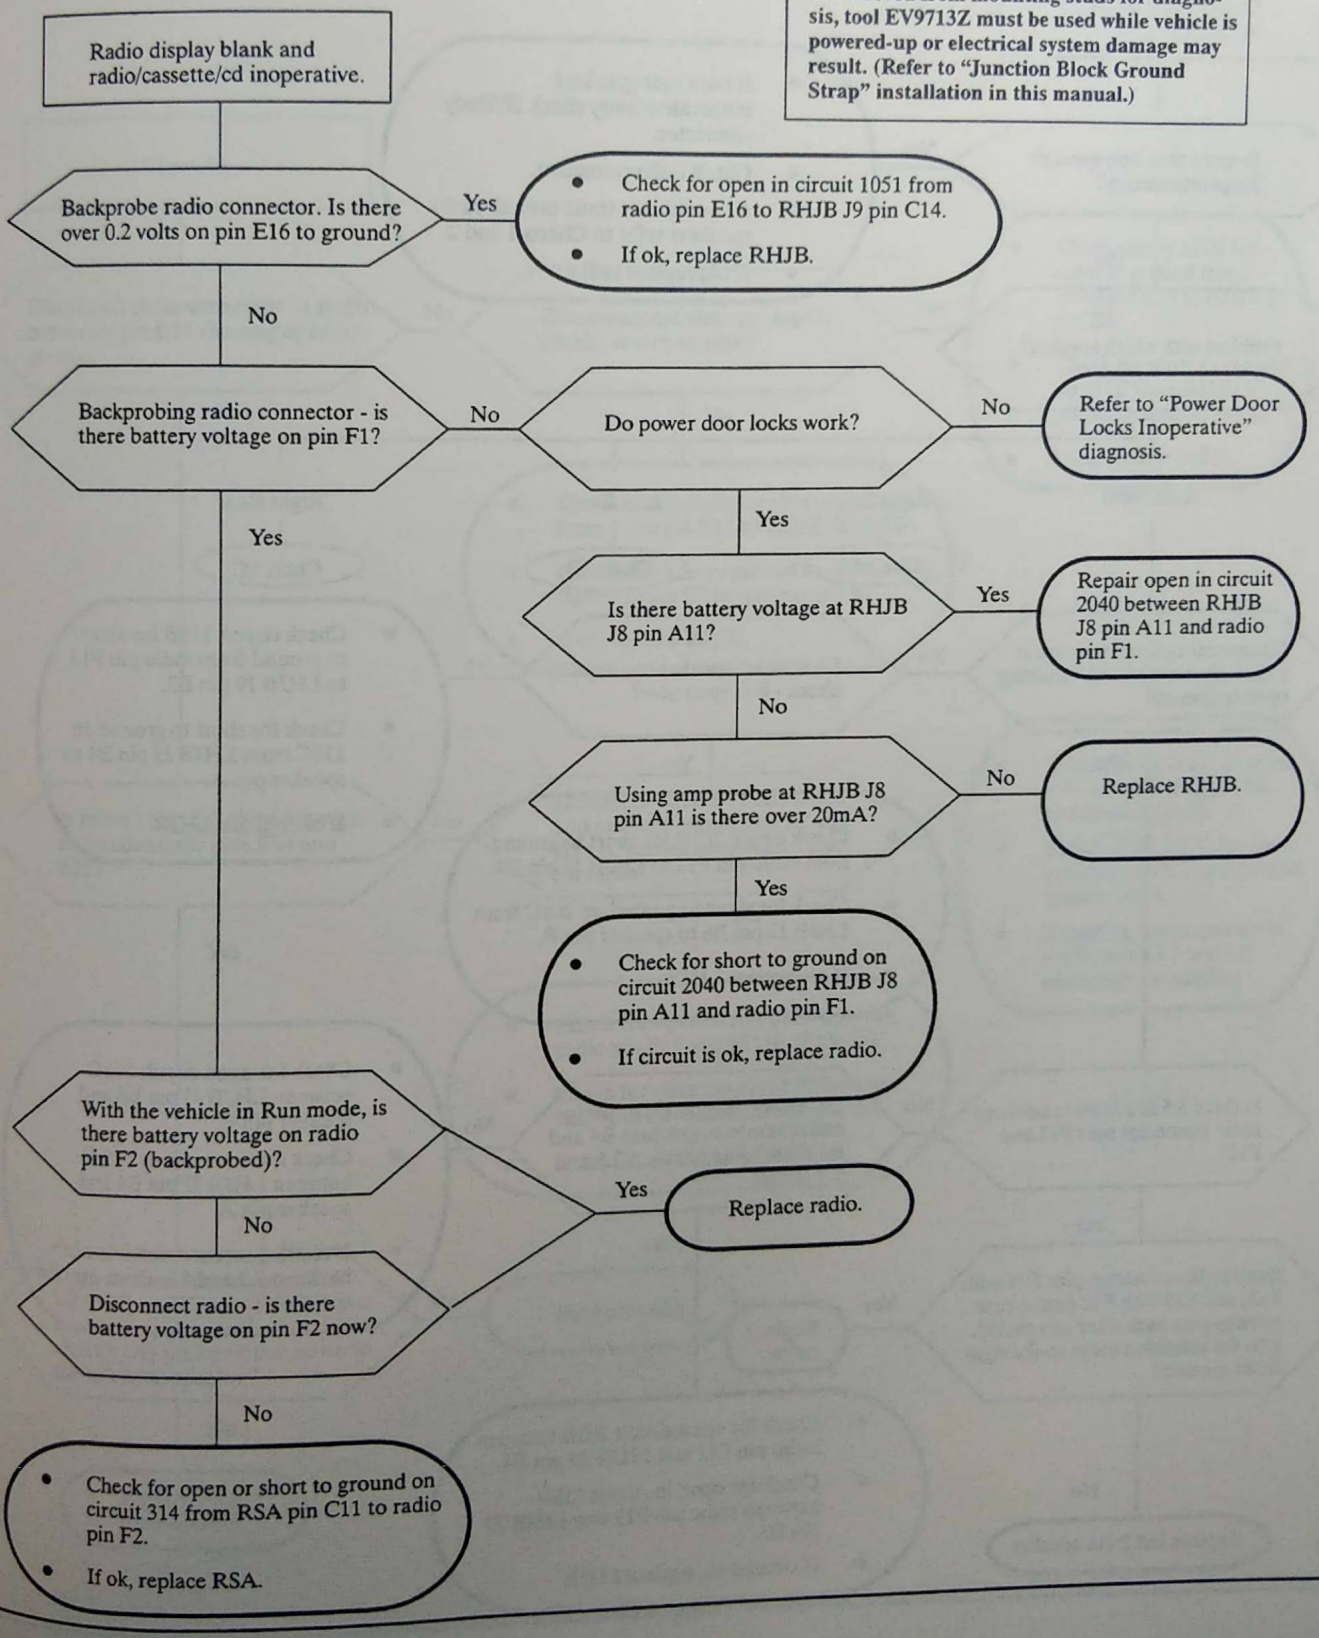
Radio display blank and radio/cassette/cd inoperative.
Backprobe radio connector. Is there over 0.2 volts on pin E16 to ground?
Yes
• Check for open in circuit 1051 from radio pin E16 to RHJB J9 pin C14.
• If ok, replace RHJB.
No
Backprobing radio connector - is there battery voltage on pin F1?
No
Do power door locks work?
No
Refer to "Power Door Locks Inoperative" diagnosis.
Yes
Yes
Is there battery voltage at RHJB J8 pin A11?
Yes
Repair open in circuit 2040 between RHJB J8 pin A11 and radio pin F1.
No
Using amp probe at RHJB J8 pin A11 is there over 20mA?
No
Replace RHJB.
Yes
• Check for short to ground on circuit 2040 between RHJB J8 pin A11 and radio pin F1.
• If circuit is ok, replace radio.
With the vehicle in Run mode, is there battery voltage on radio pin F2 (backprobed)?
Yes
Replace radio.
No
Disconnect radio - is there battery voltage on pin F2 now?
No
• Check for open or short to ground on circuit 314 from RSA pin C11 to radio pin F2.
• If ok, replace RSA.

CamScanner

ONE OR MORE SPEAKERS INOPERATIVE/NOISY

CHART 5

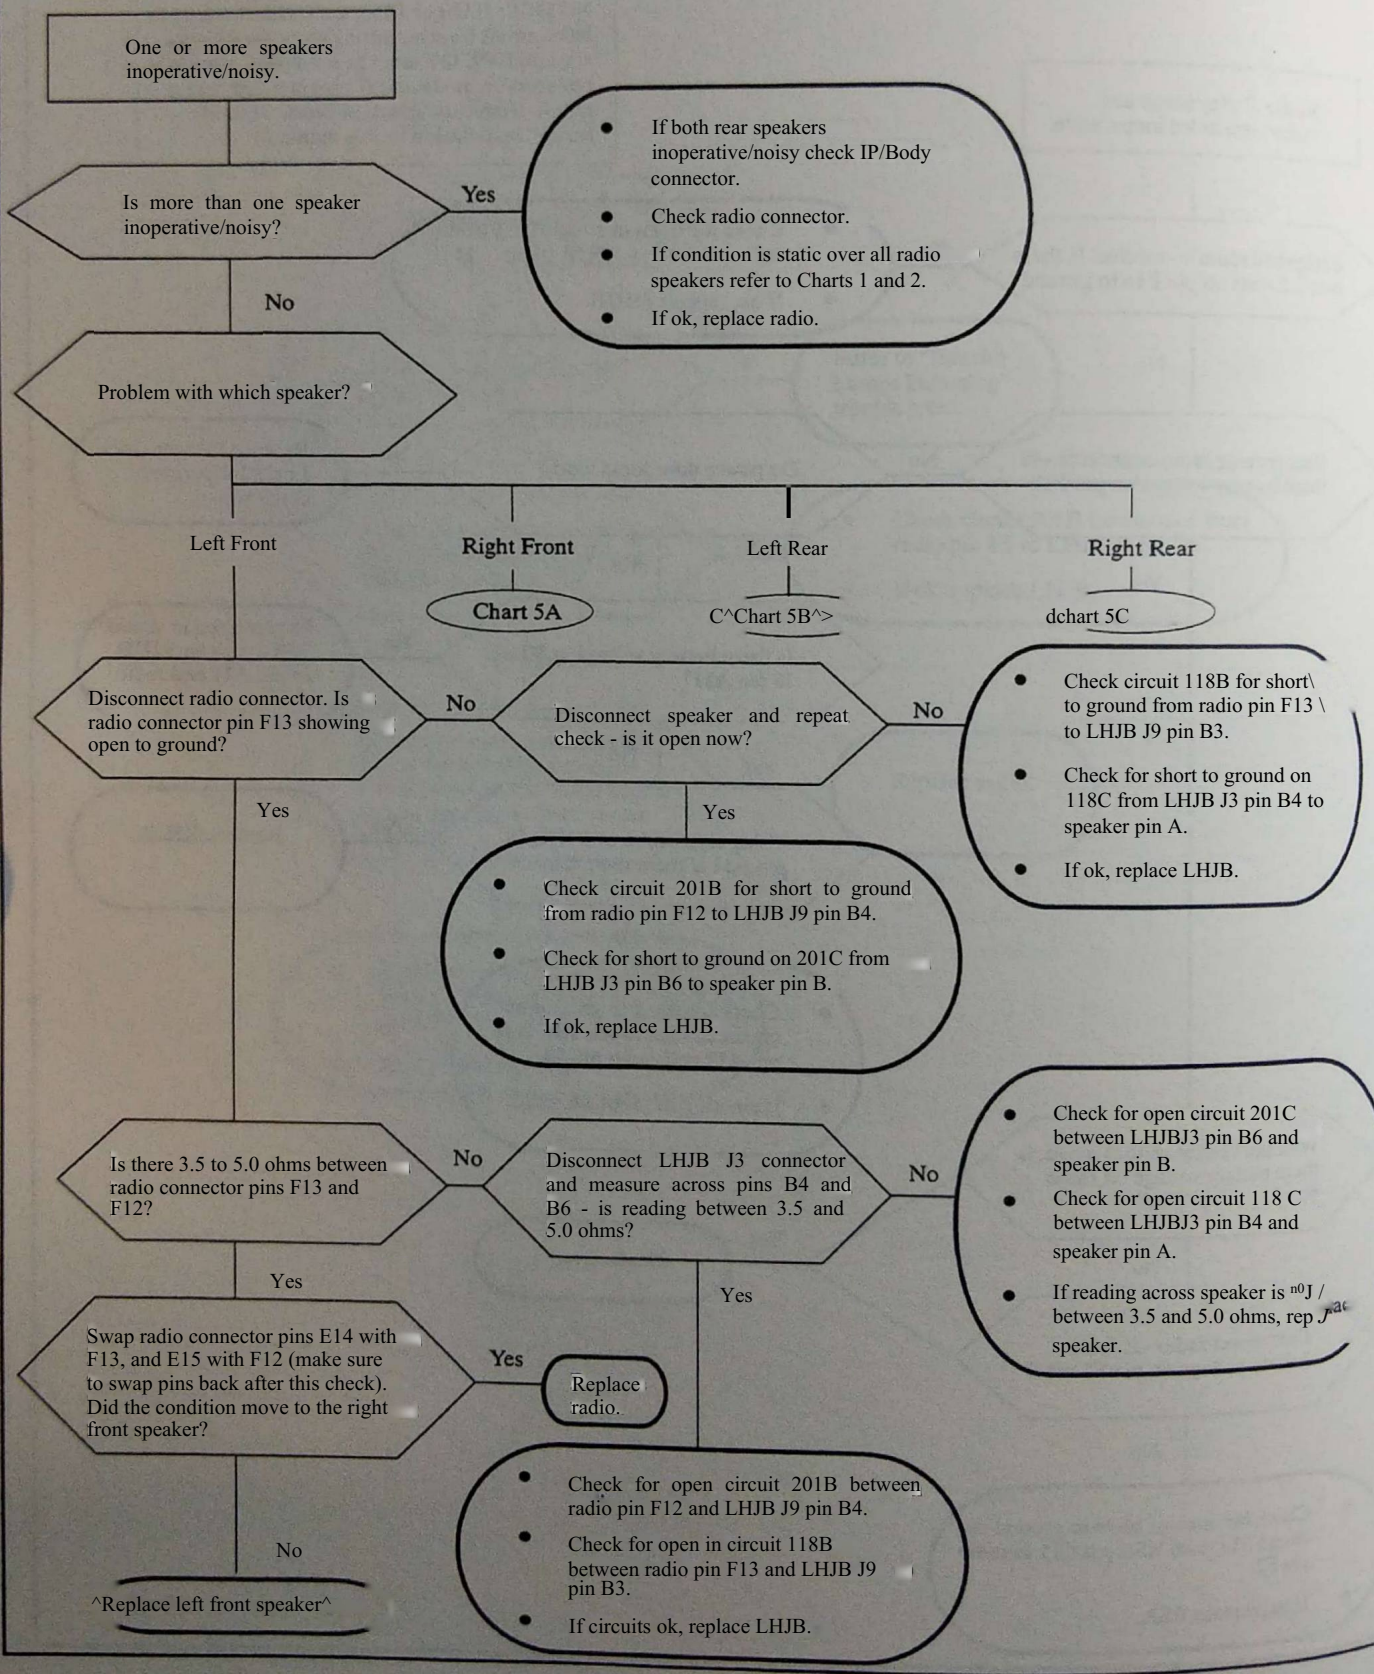
One or more speakers inoperative/noisy.
Is more than one speaker inoperative/noisy?
Yes
If both rear speakers inoperative/noisy check IP/Body connector.
Check radio connector.
If condition is static over all radio speakers refer to Charts 1 and 2.
If ok, replace radio.
No
Problem with which speaker?
Left Front
Right Front
Left Rear
Right Rear
Chart 5A
C^Chart 5B^>
dchart 5C
Disconnect radio connector. Is radio connector pin F13 showing open to ground?
No
Disconnect speaker and repeat check - is it open now?
No
Check circuit 118B for short\ to ground from radio pin F13 \ to LHJB J9 pin B3.
Check for short to ground on 118C from LHJB J3 pin B4 to speaker pin A.
If ok, replace LHJB.
Yes
Yes
Check circuit 201B for short to ground from radio pin F12 to LHJB J9 pin B4.
Check for short to ground on 201C from LHJB J3 pin B6 to speaker pin B.
If ok, replace LHJB.
Is there 3.5 to 5.0 ohms between radio connector pins F13 and F12?
No
Disconnect LHJB J3 connector and measure across pins B4 and B6 - is reading between 3.5 and 5.0 ohms?
No
Check for open circuit 201C between LHJBJ3 pin B6 and speaker pin B.
Check for open circuit 118 C between LHJBJ3 pin B4 and speaker pin A.
If reading across speaker is
between 3.5 and 5.0 ohms, rep
speaker.
Yes
Yes
Swap radio connector pins E14 with F13, and E15 with F12 (make sure to swap pins back after this check). Did the condition move to the right front speaker?
Yes
Replace radio.
No
^Replace left front speaker^
Check for open circuit 201B between radio pin F12 and LHJB J9 pin B4.
Check for open in circuit 118B between radio pin F13 and LHJB J9 pin B3.
If circuits ok, replace LHJB.

CamScanner

ONE OR MORE SPEAKERS INOPERATIVE/NOISY (CONTINUED)

CHART 5A

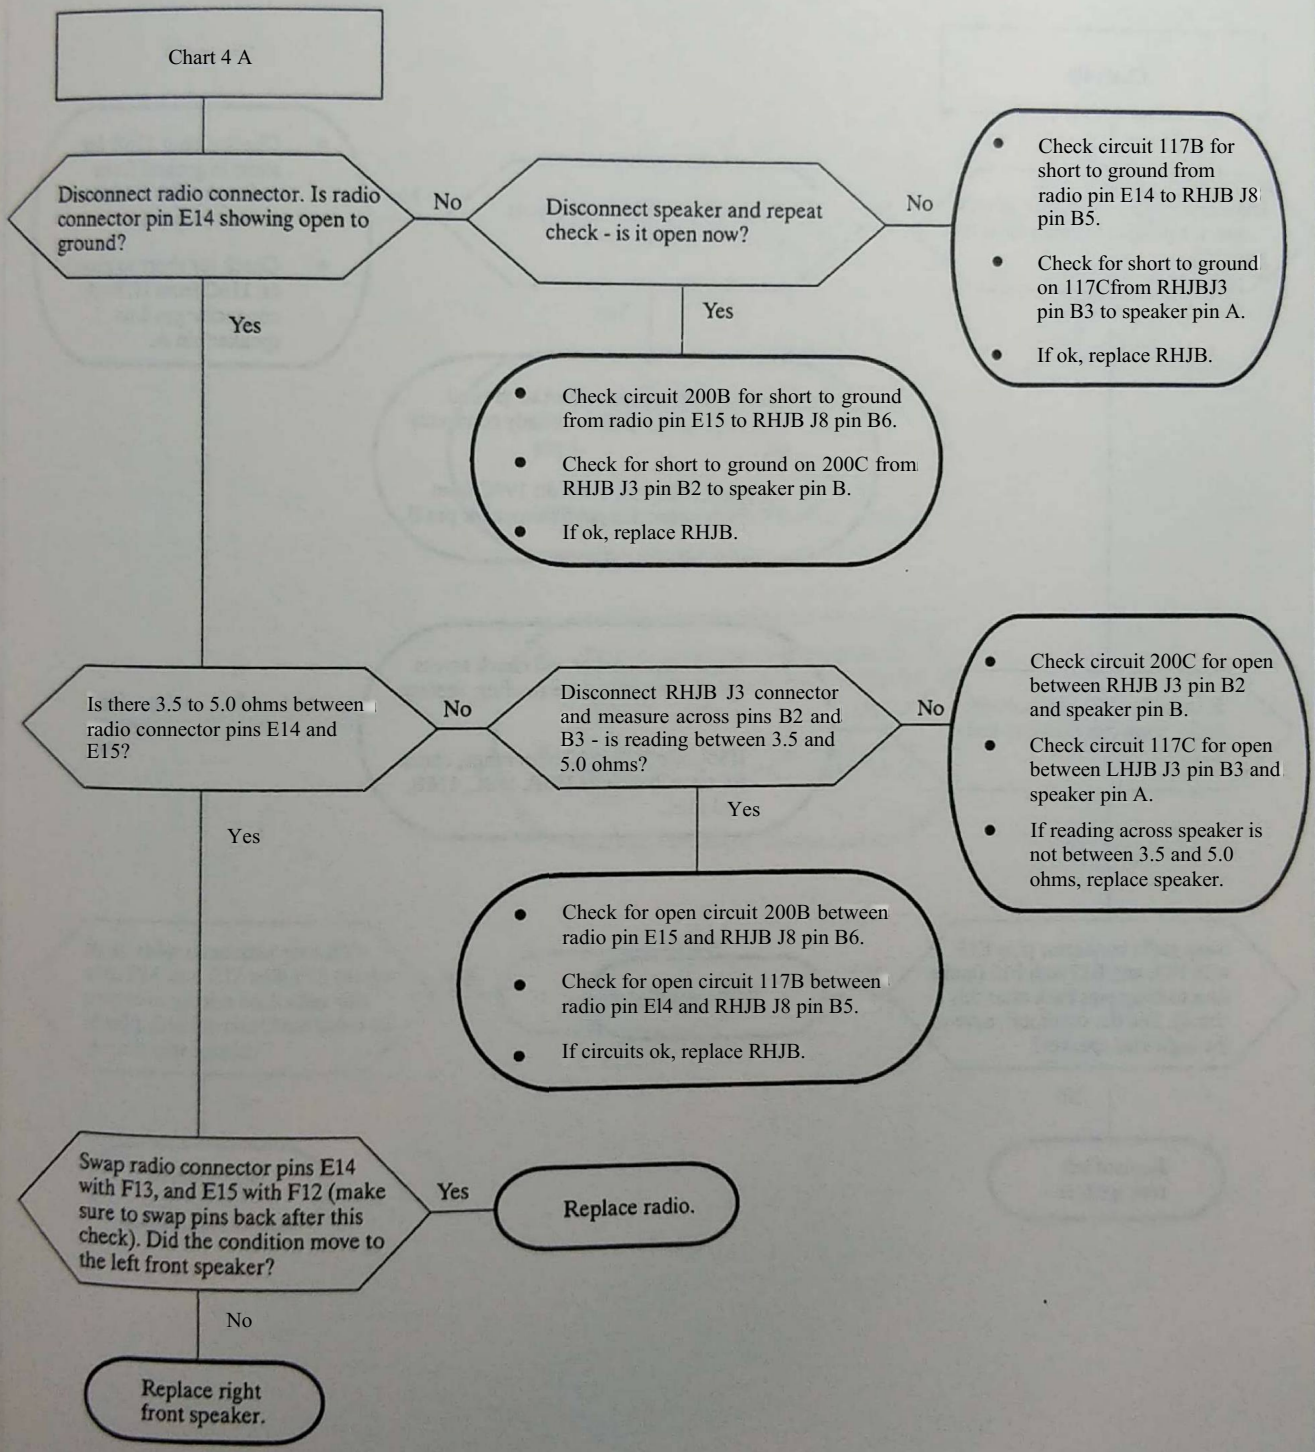
Chart 4 A
Disconnect radio connector. Is radio connector pin E14 showing open to ground?
No
Disconnect speaker and repeat check - is it open now?
No
Check circuit 117B for short to ground from radio pin E14 to RHJB J8 pin B5.
Check for short to ground on 117Cfrom RHJBJ3 pin B3 to speaker pin A.
If ok, replace RHJB.
Yes
Yes
Check circuit 200B for short to ground from radio pin E15 to RHJB J8 pin B6.
Check for short to ground on 200C from RHJB J3 pin B2 to speaker pin B.
If ok, replace RHJB.
Is there 3.5 to 5.0 ohms between radio connector pins E14 and E15?
No
Disconnect RHJB J3 connector and measure across pins B2 and B3 - is reading between 3.5 and 5.0 ohms?
No
Check circuit 200C for open between RHJB J3 pin B2 and speaker pin B.
Check circuit 117C for open between LHJB J3 pin B3 and speaker pin A.
If reading across speaker is not between 3.5 and 5.0 ohms, replace speaker.
Yes
Yes
Check for open circuit 200B between radio pin E15 and RHJB J8 pin B6.
Check for open circuit 117B between radio pin El4 and RHJB J8 pin B5.
If circuits ok, replace RHJB.
Swap radio connector pins E14 with F13, and E15 with F12 (make sure to swap pins back after this check). Did the condition move to the left front speaker?
Yes
Replace radio.
No
Replace right front speaker.

CamScanner

ONE OR MORE SPEAKERS INOPERATIVE/NOISY (CONTINUED)

CHART 5B

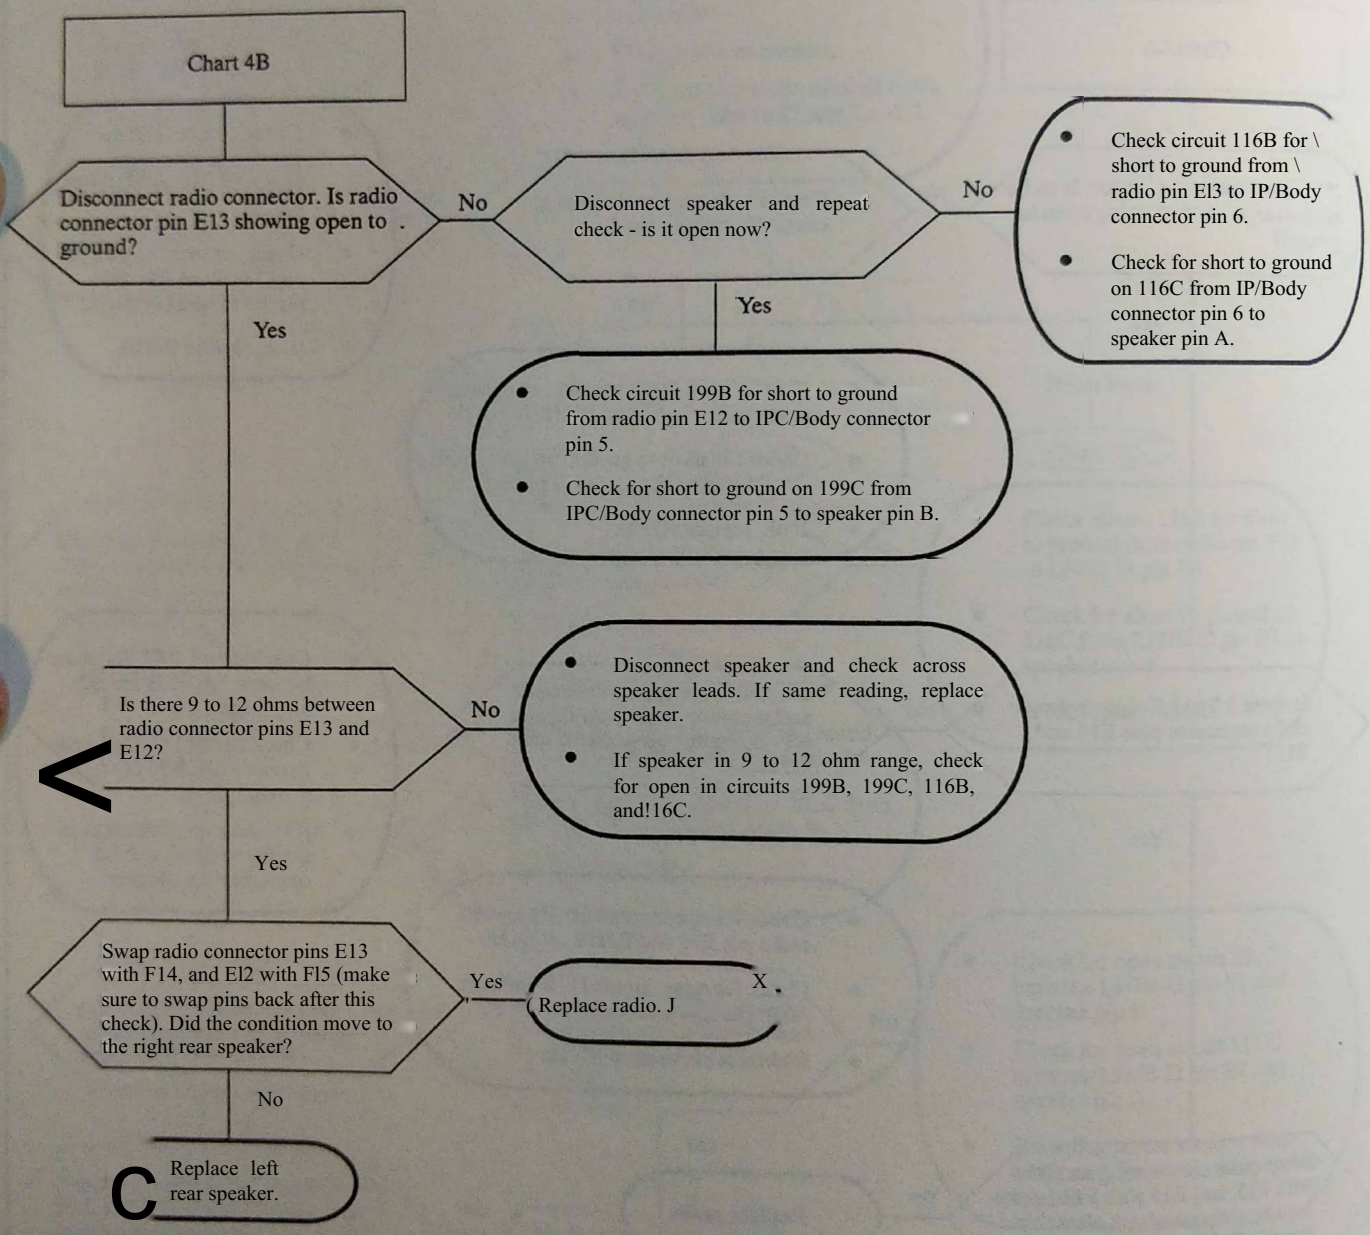
Chart 4B
Disconnect radio connector. Is radio connector pin E13 showing open to ground?
No
Disconnect speaker and repeat check - is it open now?
No
Check circuit 116B for \ short to ground from \ radio pin El3 to IP/Body connector pin 6.
Check for short to ground on 116C from IP/Body connector pin 6 to speaker pin A.
Yes
Yes
Check circuit 199B for short to ground from radio pin E12 to IPC/Body connector pin 5.
Check for short to ground on 199C from IPC/Body connector pin 5 to speaker pin B.
Is there 9 to 12 ohms between radio connector pins E13 and E12?
No
Disconnect speaker and check across speaker leads. If same reading, replace speaker.
If speaker in 9 to 12 ohm range, check for open in circuits 199B, 199C, 116B, and!16C.
Yes
Swap radio connector pins E13 with F14, and El2 with Fl5 (make sure to swap pins back after this check). Did the condition move to the right rear speaker?
Yes
Replace radio. J
X
No
Replace left rear speaker.

CamScanner

ONE OR MORE SPEAKERS INOPERATIVE/NOISY (CONTINUED)

CHART 5C

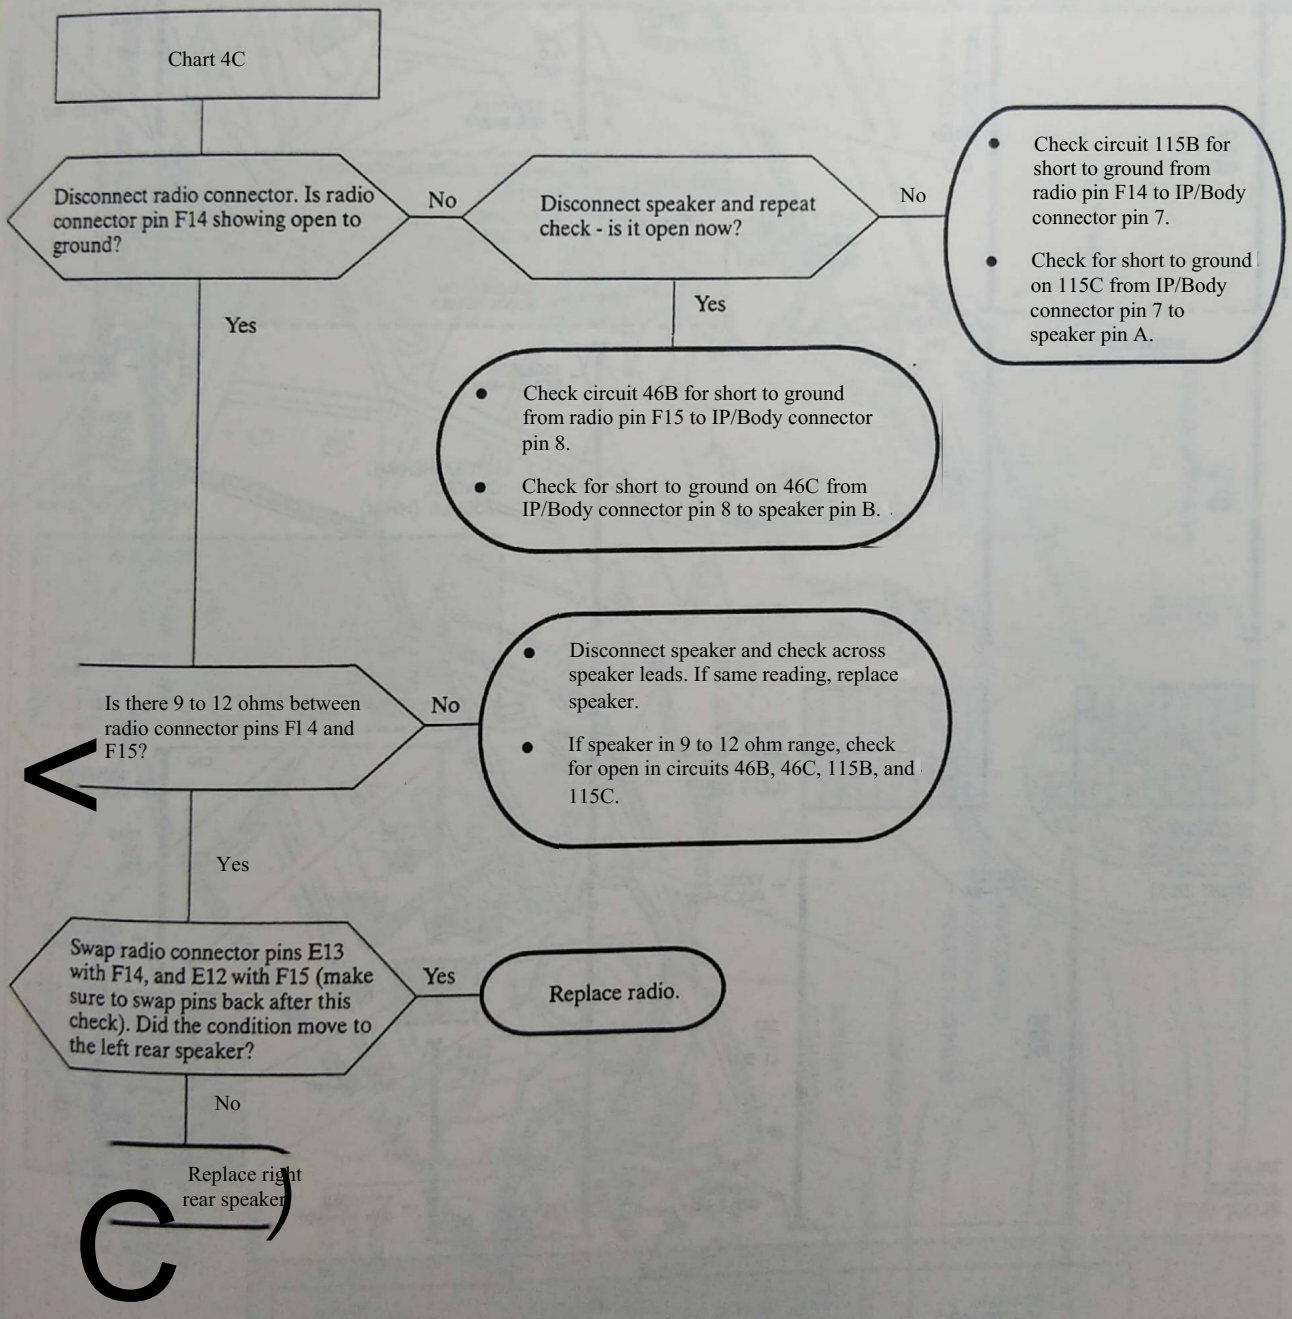
Chart 4C
Disconnect radio connector. Is radio connector pin F14 showing open to ground?
No
Disconnect speaker and repeat check - is it open now?
No
Check circuit 115B for short to ground from radio pin F14 to IP/Body connector pin 7.
Check for short to ground on 115C from IP/Body connector pin 7 to speaker pin A.
Yes
Yes
Check circuit 46B for short to ground from radio pin F15 to IP/Body connector pin 8.
Check for short to ground on 46C from IP/Body connector pin 8 to speaker pin B.
Is there 9 to 12 ohms between radio connector pins Fl 4 and F15?
No
Disconnect speaker and check across speaker leads. If same reading, replace speaker.
If speaker in 9 to 12 ohm range, check for open in circuits 46B, 46C, 115B, and 115C.
Yes
Swap radio connector pins E13 with F14, and E12 with F15 (make sure to swap pins back after this check). Did the condition move to the left rear speaker?
Yes
Replace radio.
No
Replace right rear speaker

CamScanner

REAR DEFOGGER

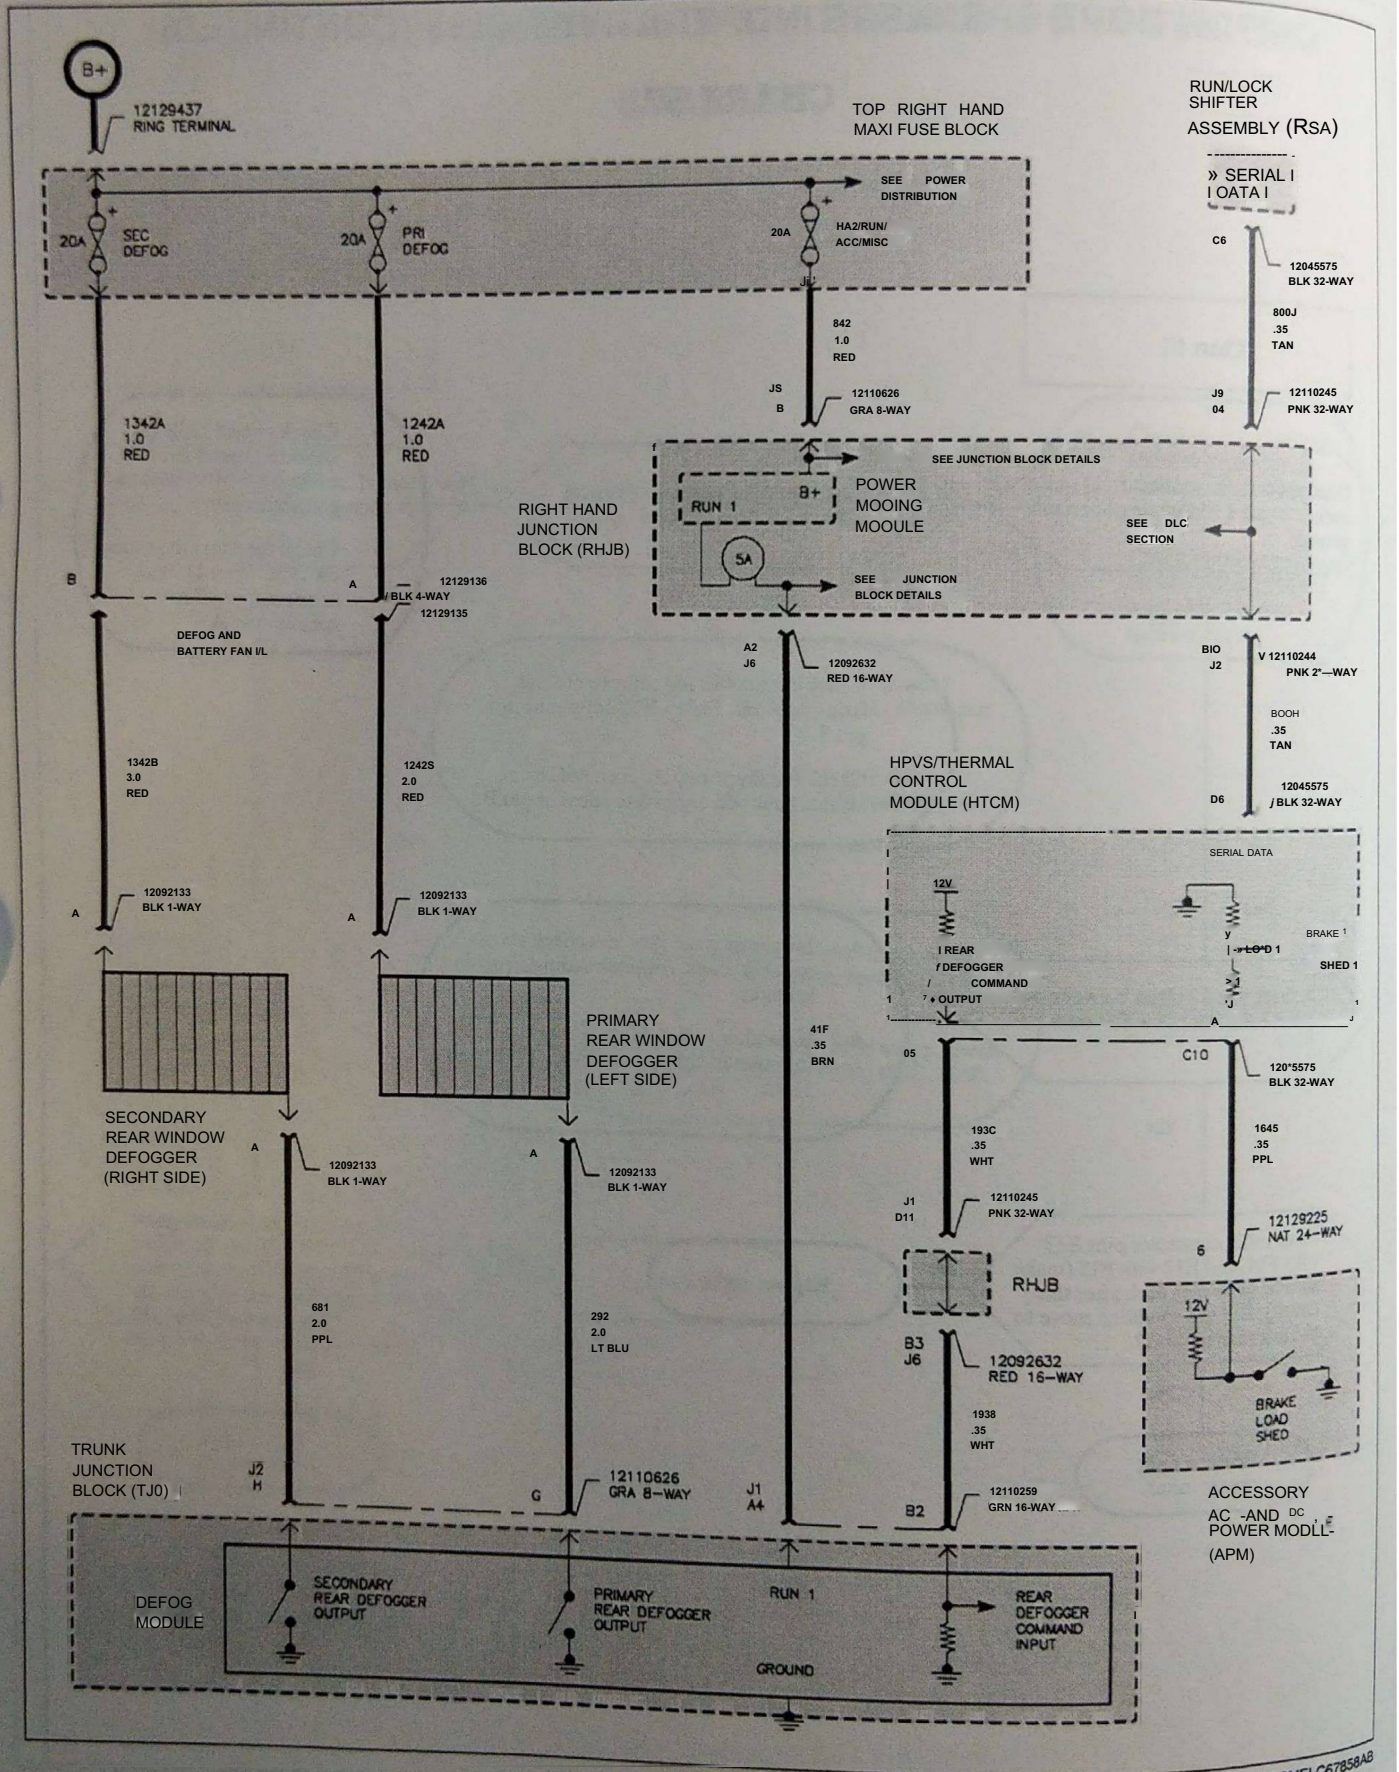

CamScanner

REAR DEFOGGER COMPONENT LOCATION VIEW

CamScanner

REAR DEFOGGER

The rear defogger button is located on the run/lock shifter assembly (RSA). When the rear defogger button is pressed, the RSA sends a serial data message to the HPVS/thermal control module (HTCM) to command on the defogger. The HTCM then provides battery power on circuit 193 to the defog module, located in the trunk junction block (TJB). The HTCM also sends a serial data message back to the RSA to turn on the defog light emitting diode (LED), indicating that defog has been commanded On.

The defog module in the TJB constantly monitors circuit 193 for a defog command. When the defog module $p - battery voltage on circuit 193 it provides the grounds for the left and right side defog grids.

Once the rear defog has been selected it remains On for 10 minutes or until the defogger button is pressed a*ar > it Off. If defoggers are desired beyond the initial 10 minutes, they may be reselected as many times as desired V- time they will remain On for 10 minutes or until deselected.

REAR DEFOGGER TROUBLE TREE INDEX

- Chart 1 - Rear Defogger Inoperative (One or Both Sides)
- Chart 2 - Defog Stays On All the Time (One or Both Sides)

CamScanner

REAR DEFOGGER INOPERATIVE (ONE OR BOTH SIDES)

CHART 1

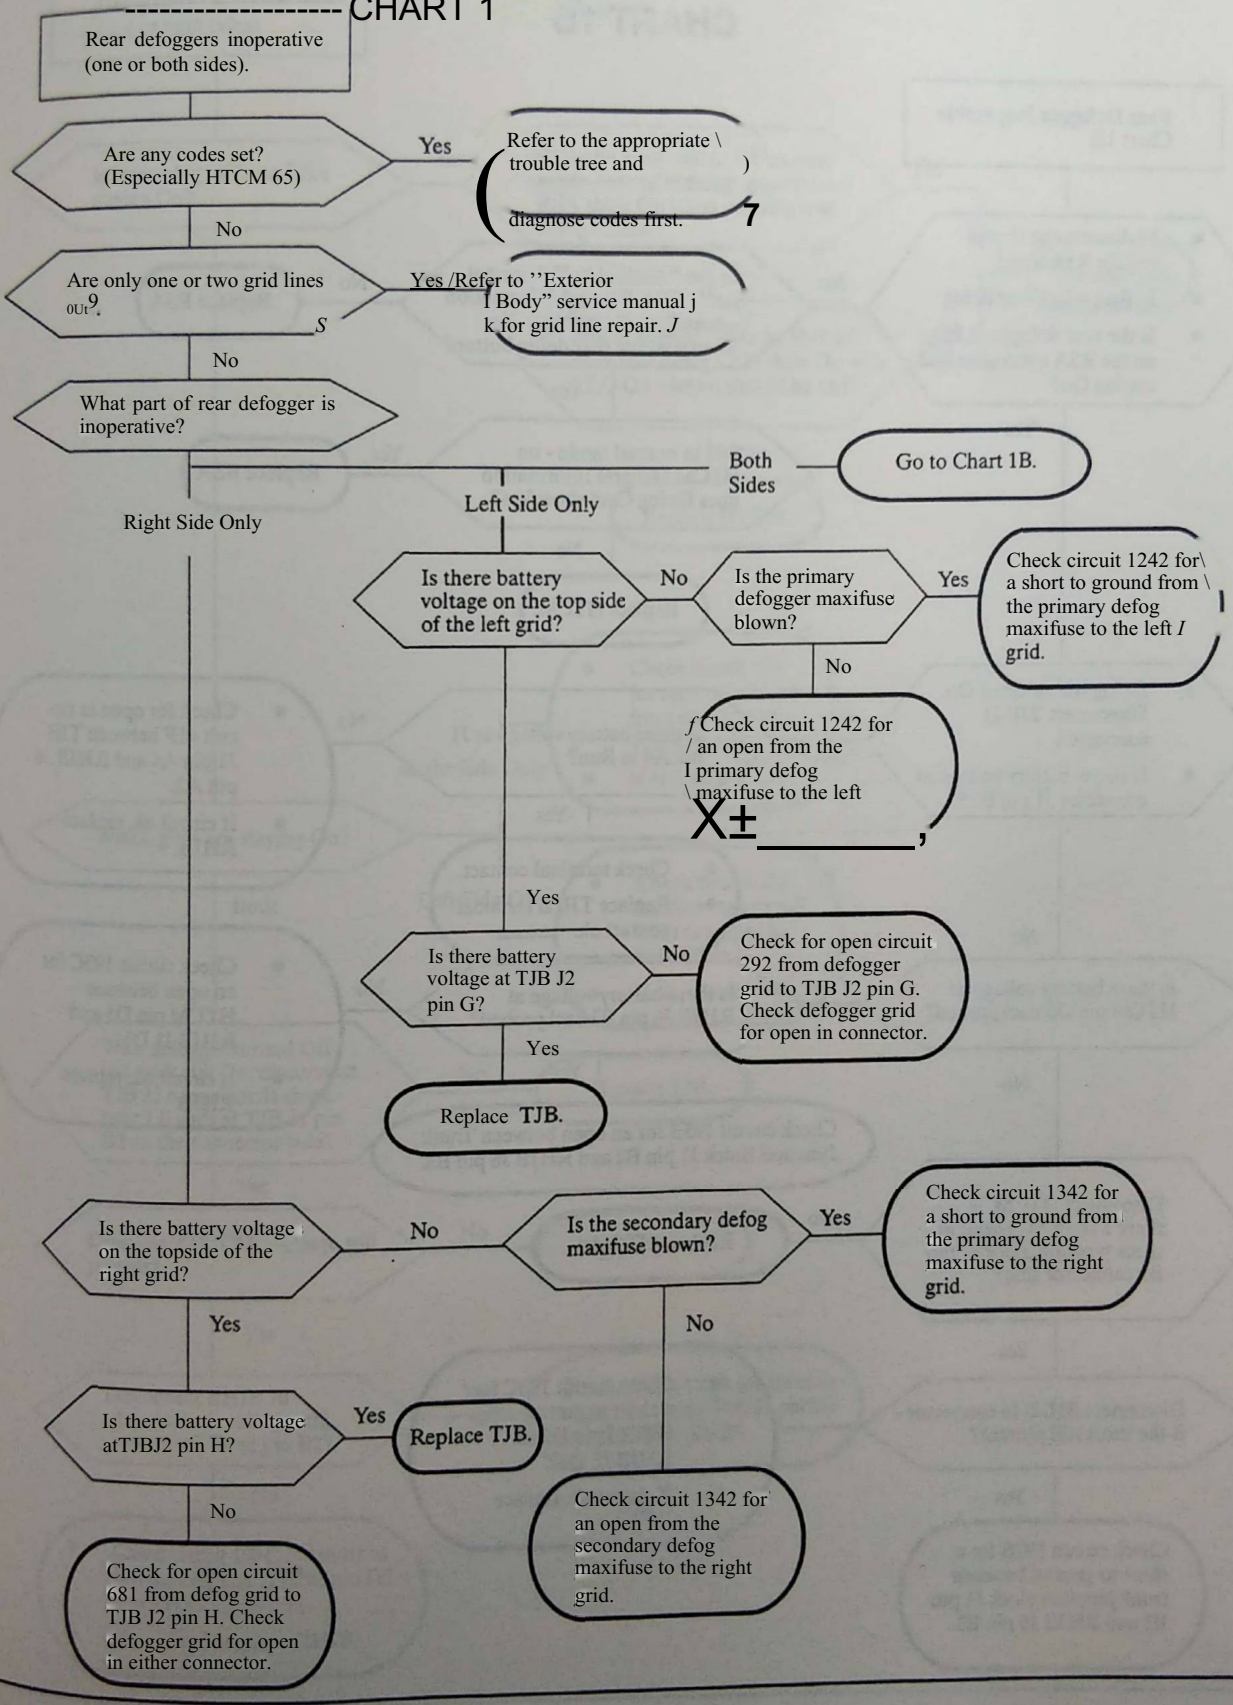
Rear defoggers inoperative (one or both sides).
Are any codes set? (Especially HTCM 65)
Yes
Refer to the appropriate trouble tree and diagnose codes first.
No
Are only one or two grid lines out?
Yes /Refer to ''Exterior Body" service manual j k for grid line repair.
No
What part of rear defogger is inoperative?
Both Sides
Go to Chart 1B.
Right Side Only
Left Side Only
Is there battery voltage on the top side of the left grid?
No
Is the primary defogger maxifuse blown?
Yes
Check circuit 1242 for a short to ground from the primary defog maxifuse to the left grid.
No
Check circuit 1242 for an open from the primary defog maxifuse to the left
Yes
Is there battery voltage at TJB J2 pin G?
No
Check for open circuit 292 from defogger grid to TJB J2 pin G. Check defogger grid for open in connector.
Yes
Replace TJB.
Is there battery voltage on the topside of the right grid?
No
Is the secondary defog maxifuse blown?
Yes
Check circuit 1342 for a short to ground from the primary defog maxifuse to the right grid.
Yes
No
Is there battery voltage atTJBJ2 pin H?
Yes
Replace TJB.
No
Check circuit 1342 for an open from the secondary defog maxifuse to the right grid.
Check for open circuit 681 from defog grid to TJB J2 pin H. Check defogger grid for open in either connector.

CamScanner

REAR DEFOGGER INOPERATIVE

CHART1B

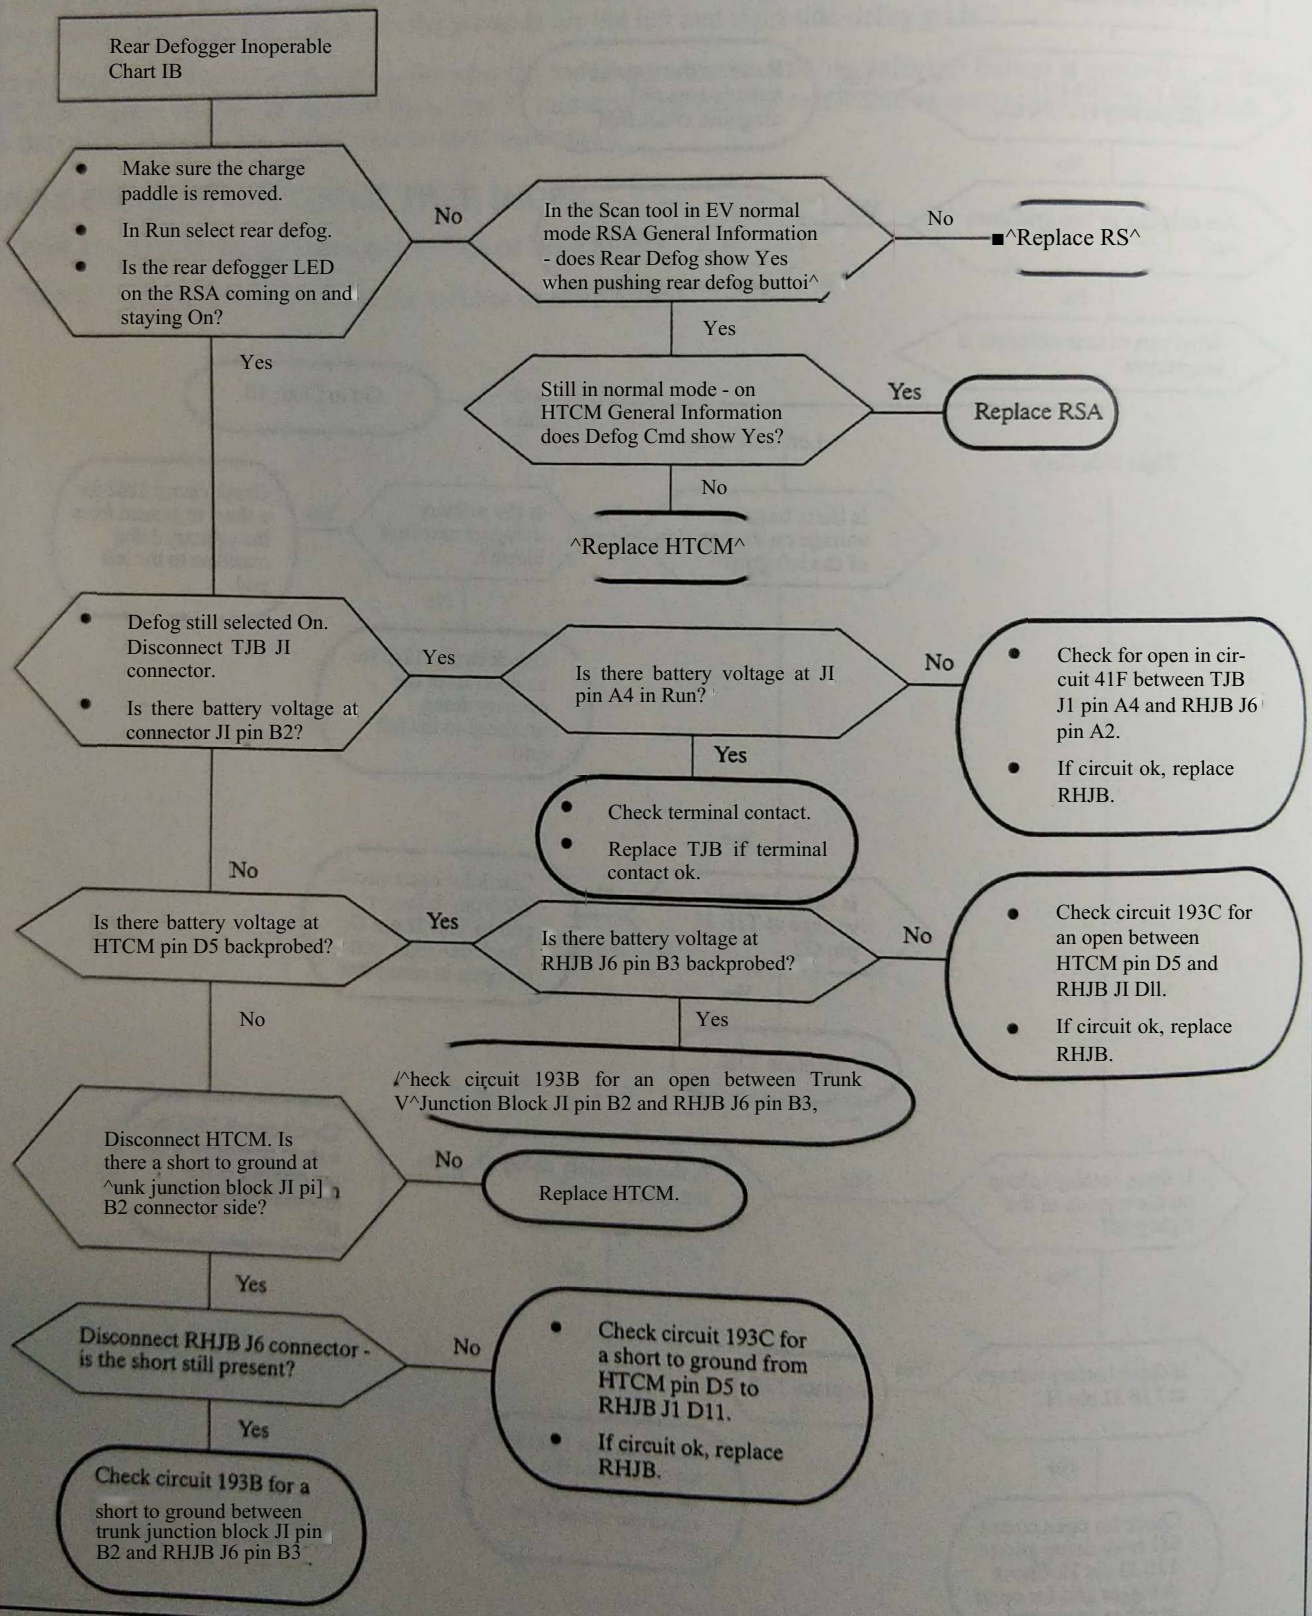
Rear Defogger Inoperable Chart IB
Make sure the charge paddle is removed.
In Run select rear defog.
Is the rear defogger LED on the RSA coming on and staying On?
No
In the Scan tool in EV normal mode RSA General Information - does Rear Defog show Yes when pushing rear defog buttoi^
No
^Replace RS^
Yes
Still in normal mode - on HTCM General Information does Defog Cmd show Yes?
Yes
Replace RSA
No
^Replace HTCM^
Yes
Defog still selected On. Disconnect TJB JI connector.
Is there battery voltage at connector JI pin B2?
Yes
Is there battery voltage at JI pin A4 in Run?
No
Check for open in circuit 41F between TJB J1 pin A4 and RHJB J6 pin A2.
If circuit ok, replace RHJB.
Yes
Check terminal contact.
Replace TJB if terminal contact ok.
No
Is there battery voltage at HTCM pin D5 backprobed?
Yes
Is there battery voltage at RHJB J6 pin B3 backprobed?
No
Check circuit 193C for an open between HTCM pin D5 and RHJB JI Dll.
If circuit ok, replace RHJB.
No
Yes
/^heck circuit 193B for an open between Trunk V^Junction Block JI pin B2 and RHJB J6 pin B3,
Disconnect HTCM. Is there a short to ground at ^unk junction block JI pi] B2 connector side?
No
Replace HTCM.
Yes
Disconnect RHJB J6 connector - is the short still present?
No
Check circuit 193C for a short to ground from HTCM pin D5 to RHJB J1 D11.
If circuit ok, replace RHJB.
Yes
Check circuit 193B for a short to ground between trunk junction block JI pin B2 and RHJB J6 pin B3

CamScanner

DEFOG STAYS ON ALLTT4ETIME (°NE OR BOTH SIDES)

CHART 2

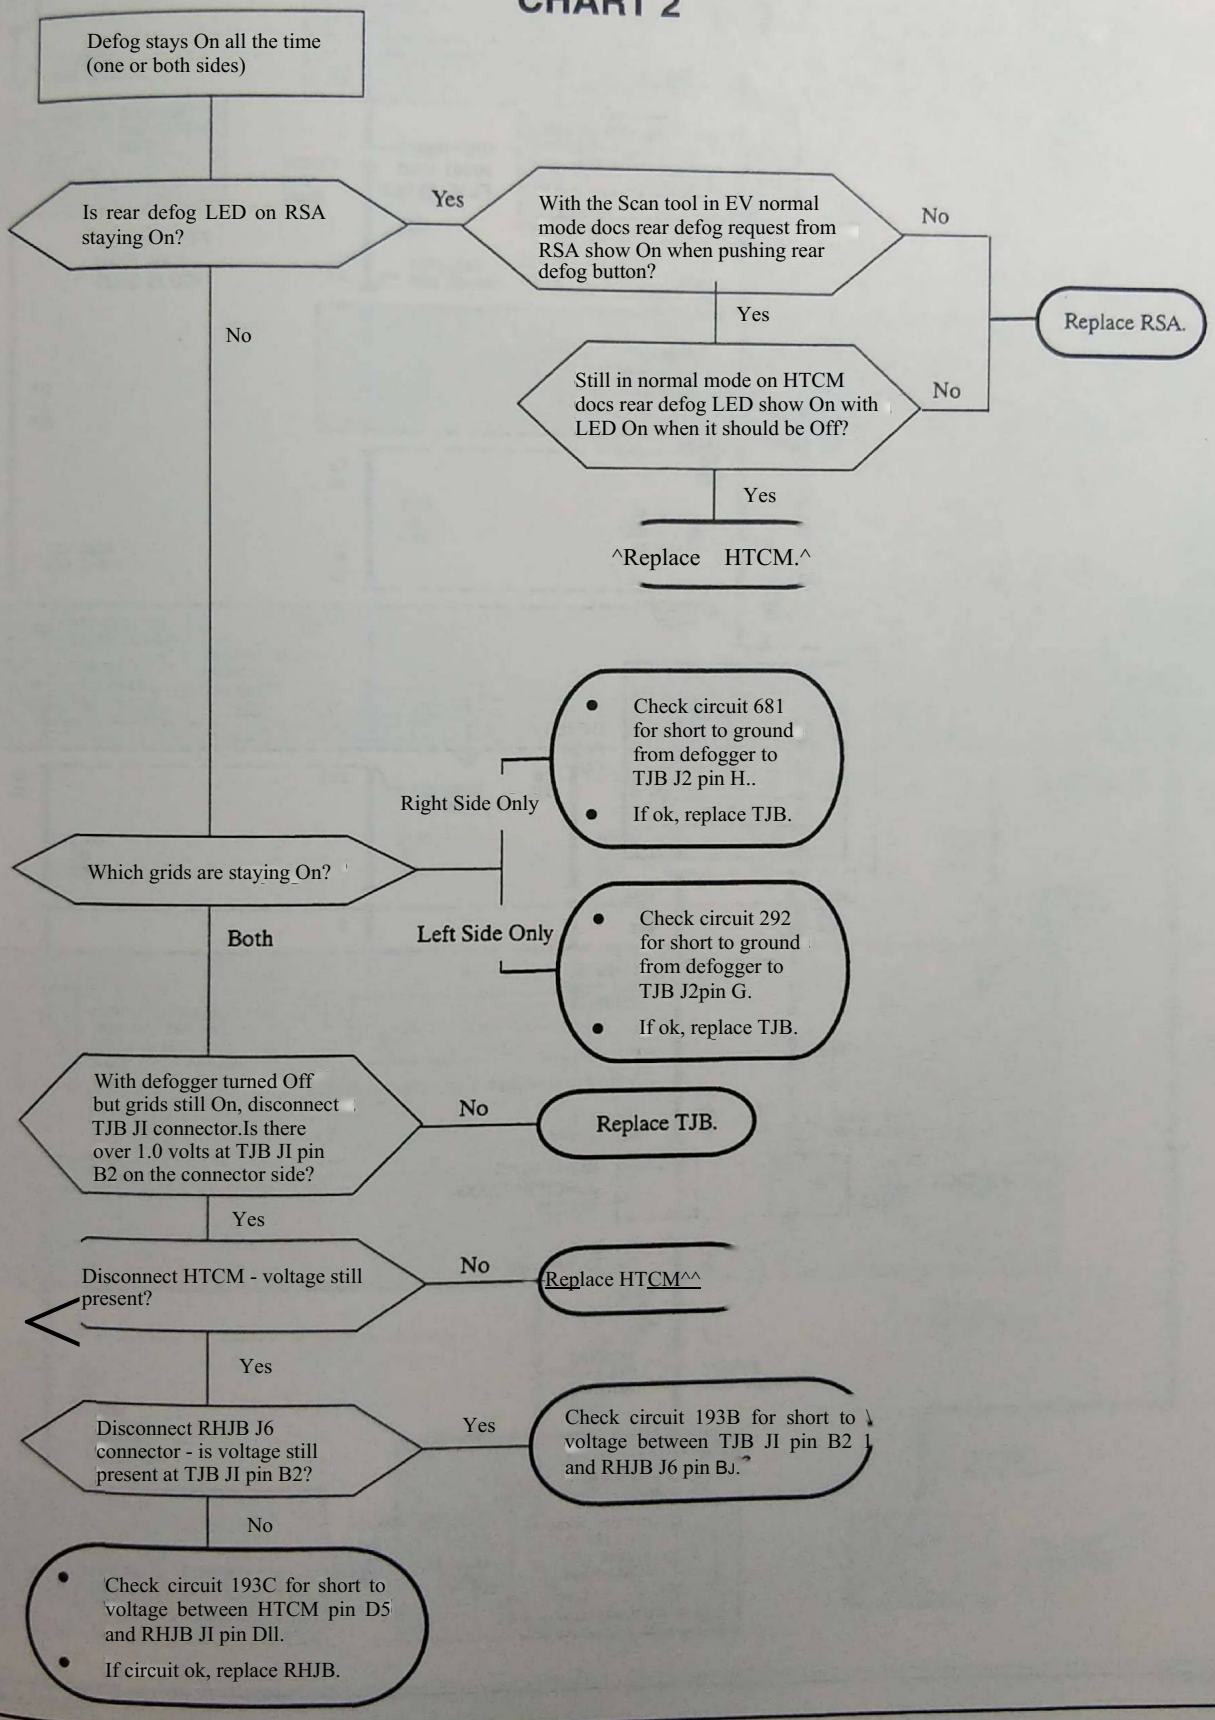
Defog stays On all the time (one or both sides)
Is rear defog LED on RSA staying On?
Yes
With the Scan tool in EV normal mode docs rear defog request from RSA show On when pushing rear defog button?
No
Replace RSA.
Yes
Still in normal mode on HTCM docs rear defog LED show On with LED On when it should be Off?
No
Yes
^Replace HTCM.^
No
Which grids are staying On?
Right Side Only
Check circuit 681 for short to ground from defogger to TJB J2 pin H..
If ok, replace TJB.
Both
Left Side Only
Check circuit 292 for short to ground from defogger to TJB J2pin G.
If ok, replace TJB.
With defogger turned Off but grids still On, disconnect TJB JI connector.Is there over 1.0 volts at TJB JI pin B2 on the connector side?
No
Replace TJB.
Yes
Disconnect HTCM - voltage still present?
No
Replace HTCM^^
Yes
Disconnect RHJB J6 connector - is voltage still present at TJB JI pin B2?
Yes
Check circuit 193B for short to voltage between TJB JI pin B2 and RHJB J6 pin BJ.
No
Check circuit 193C for short to voltage between HTCM pin D5 and RHJB JI pin Dll.
If circuit ok, replace RHJB.

RECHARGING

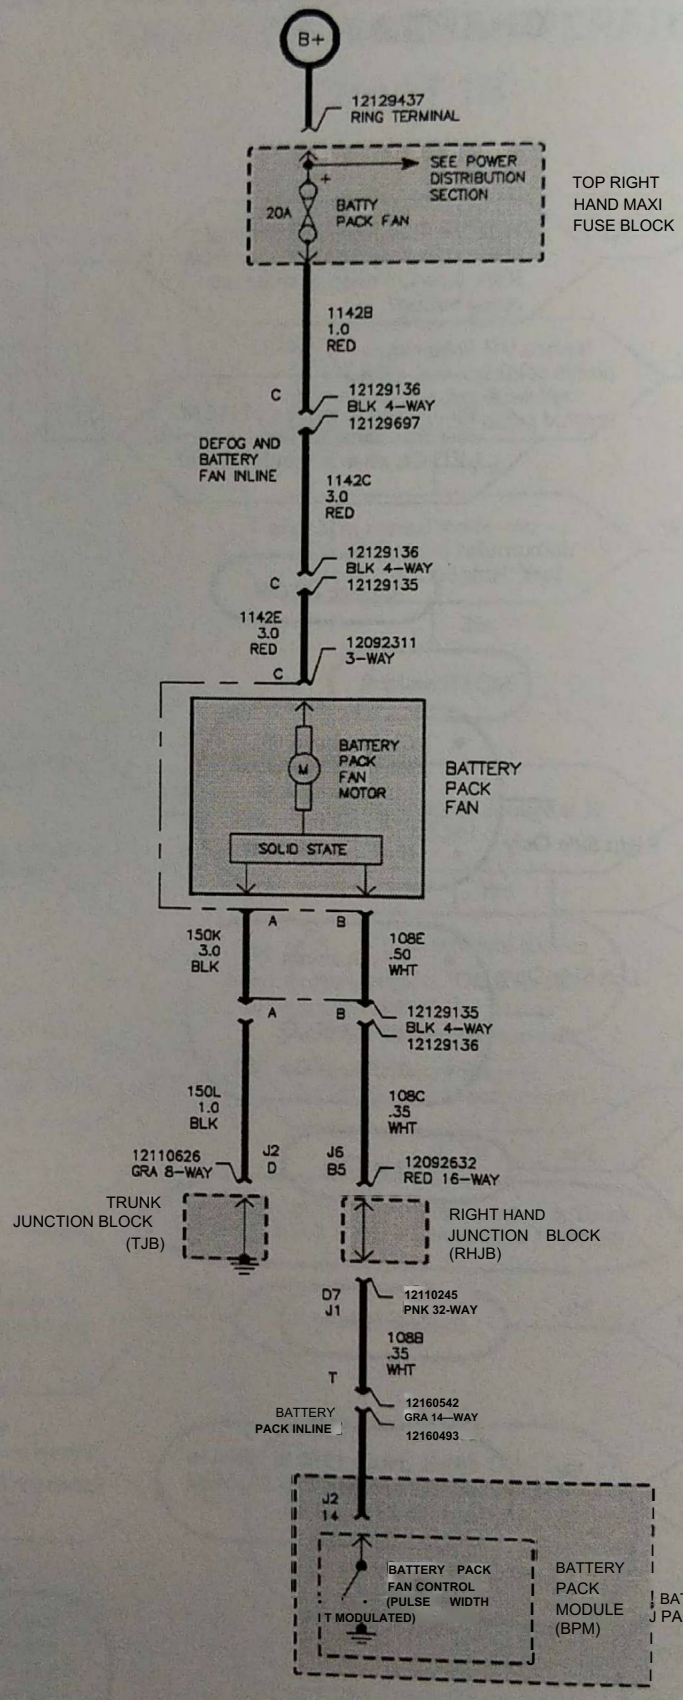
B+
12129437
RING TERMINAL
SEE POWER DISTRIBUTION SECTION
20A
BATTY PACK FAN
TOP RIGHT HAND MAXI FUSE BLOCK
1142B 1.0 RED
C
12129136 BLK 4-WAY 12129697
DEFOG AND BATTERY FAN INLINE
1142C 3.0 RED
12129136 BLK 4-WAY 12129135
C
1142E 3.0 RED
12092311 3-WAY
C
BATTERY PACK FAN MOTOR
SOLID STATE
BATTERY PACK FAN
A
B
150K 3.0 BLK
108E .50 WHT
A
B
12129135 BLK 4-WAY 12129136
150L 1.0 BLK
108C .35 WHT
12110626 GRA 8-WAY
J2 D
J6 B5
12092632 RED 16-WAY
TRUNK JUNCTION BLOCK (TJB)
RIGHT HAND JUNCTION BLOCK (RHJB)
D7 J1
12110245 PNK 32-WAY
108B .35 WHT
T
12160542 GRA 14-WAY 12160493
BATTERY PACK INLINE
J2 14
BATTERY PACK FAN CONTROL (PULSE WIDTH MODULATED)
BATTERY PACK MODULE (BPM)
BATTERY J PACK
PSMELC68131AA

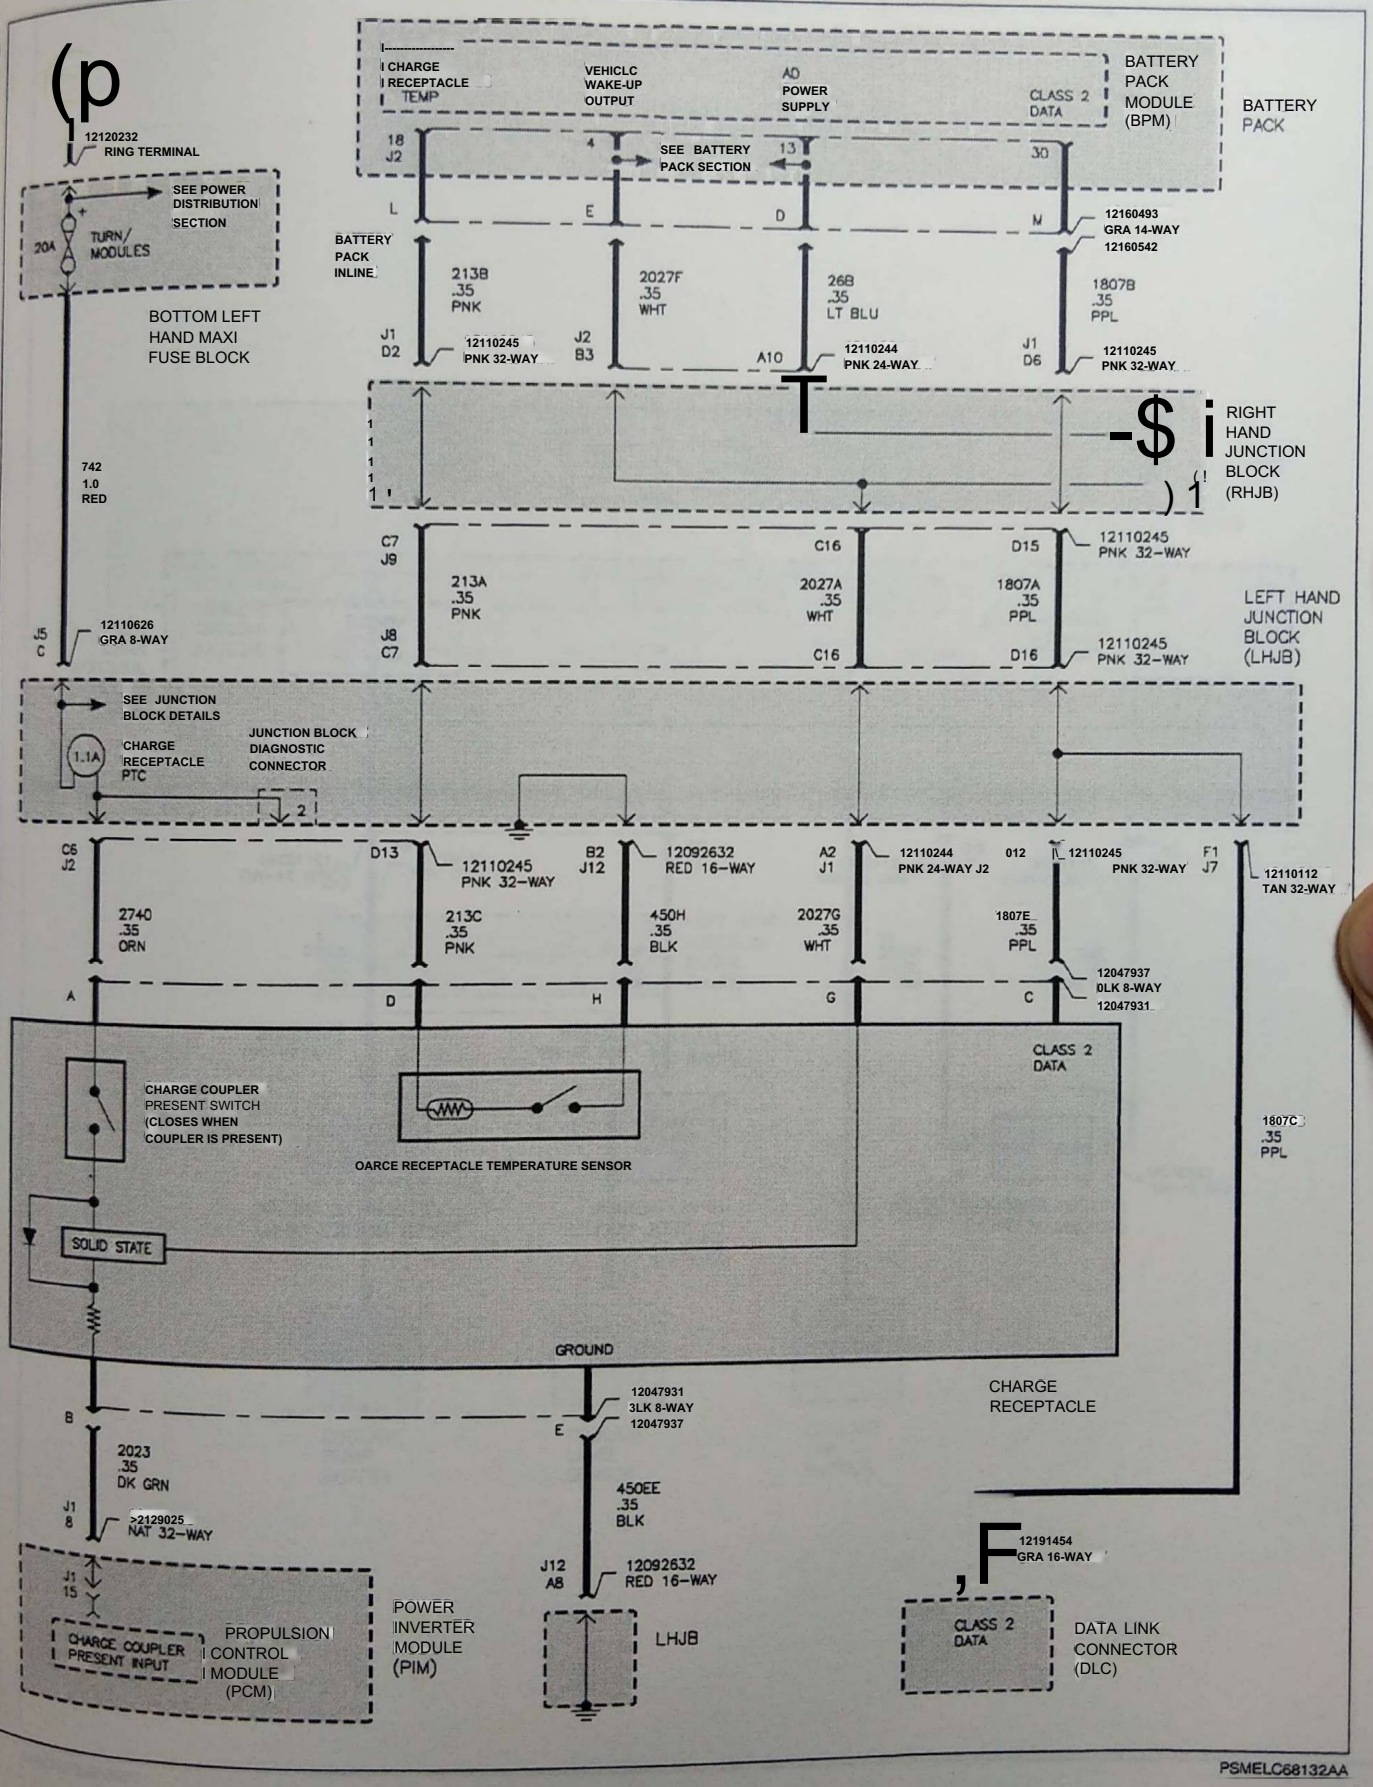
CHARGE RECEPTACLE TEMP
VEHICLC WAKE-UP OUTPUT
A0 POWER SUPPLY
CLASS 2 DATA
BATTERY PACK MODULE (BPM)
BATTERY PACK
SEE BATTERY PACK SECTION
12120232 RING TERMINAL
SEE POWER DISTRIBUTION SECTION
20A
TURN/ MODULES
BOTTOM LEFT HAND MAXI FUSE BLOCK
BATTERY PACK INLINE
213B .35 PNK
2027F .35 WHT
26B .35 LT BLU
1807B .35 PPL
12160493 GRA 14-WAY
12160542
12110245 PNK 32-WAY
12110244 PNK 24-WAY
742 1.0 RED
RIGHT HAND JUNCTION BLOCK (RHJB)
213A .35 PNK
2027A .35 WHT
1807A .35 PPL
LEFT HAND JUNCTION BLOCK (LHJB)
12110626 GRA 8-WAY
SEE JUNCTION BLOCK DETAILS
CHARGE RECEPTACLE PTC
JUNCTION BLOCK DIAGNOSTIC CONNECTOR
2740 .35 ORN
213C .35 PNK
450H .35 BLK
2027G .35 WHT
1807E .35 PPL
12092632 RED 16-WAY
12110244 PNK 24-WAY J2
12110112 TAN 32-WAY
12047937 0LK 8-WAY
12047931
CLASS 2 DATA
CHARGE COUPLER PRESENT SWITCH (CLOSES WHEN COUPLER IS PRESENT)
OARCE RECEPTACLE TEMPERATURE SENSOR
1807C .35 PPL
SOLID STATE
GROUND
12047931 3LK 8-WAY
12047937
CHARGE RECEPTACLE
2023 .35 DK GRN
450EE .35 BLK
12129025 NAT 32-WAY
12191454 GRA 16-WAY
CHARGE COUPLER PRESENT INPUT
PROPULSION CONTROL MODULE (PCM)
POWER INVERTER MODULE (PIM)
LHJB
CLASS 2 DATA
DATA LINK CONNECTOR (DLC)
PSMELC68132AA

CamScanner

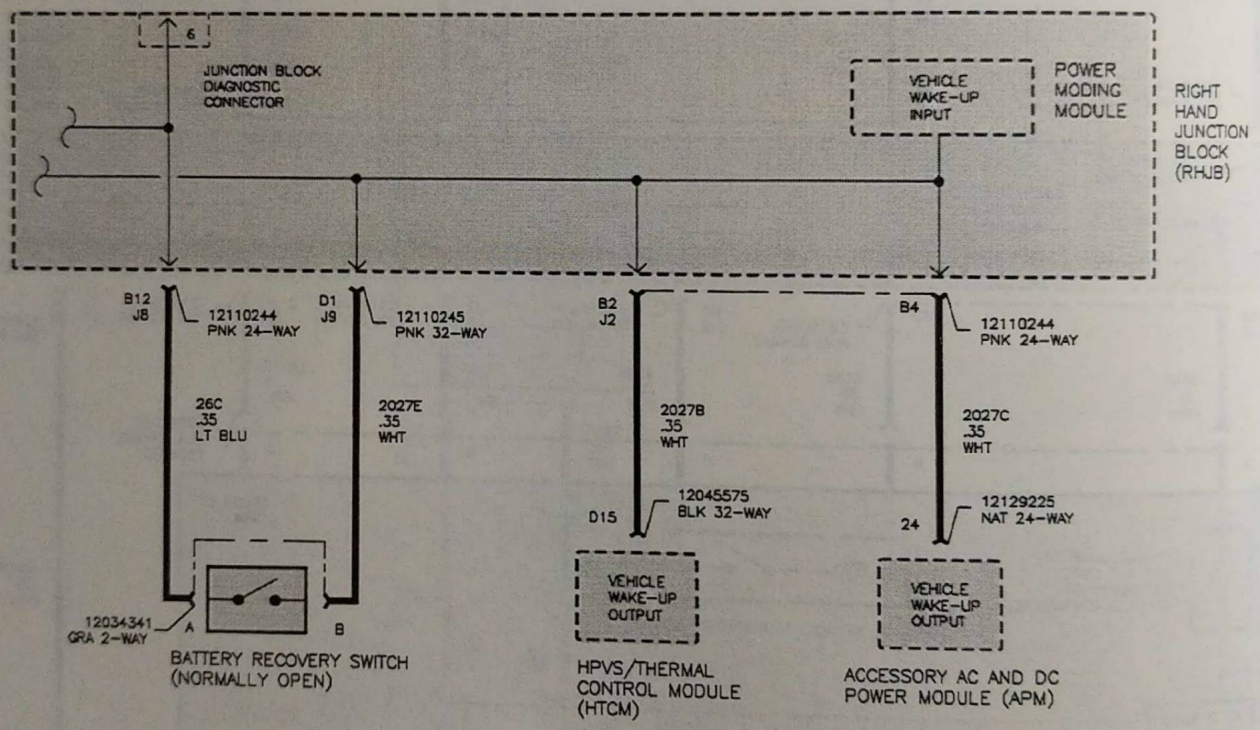

PSKMELC68133AA

CamScanner

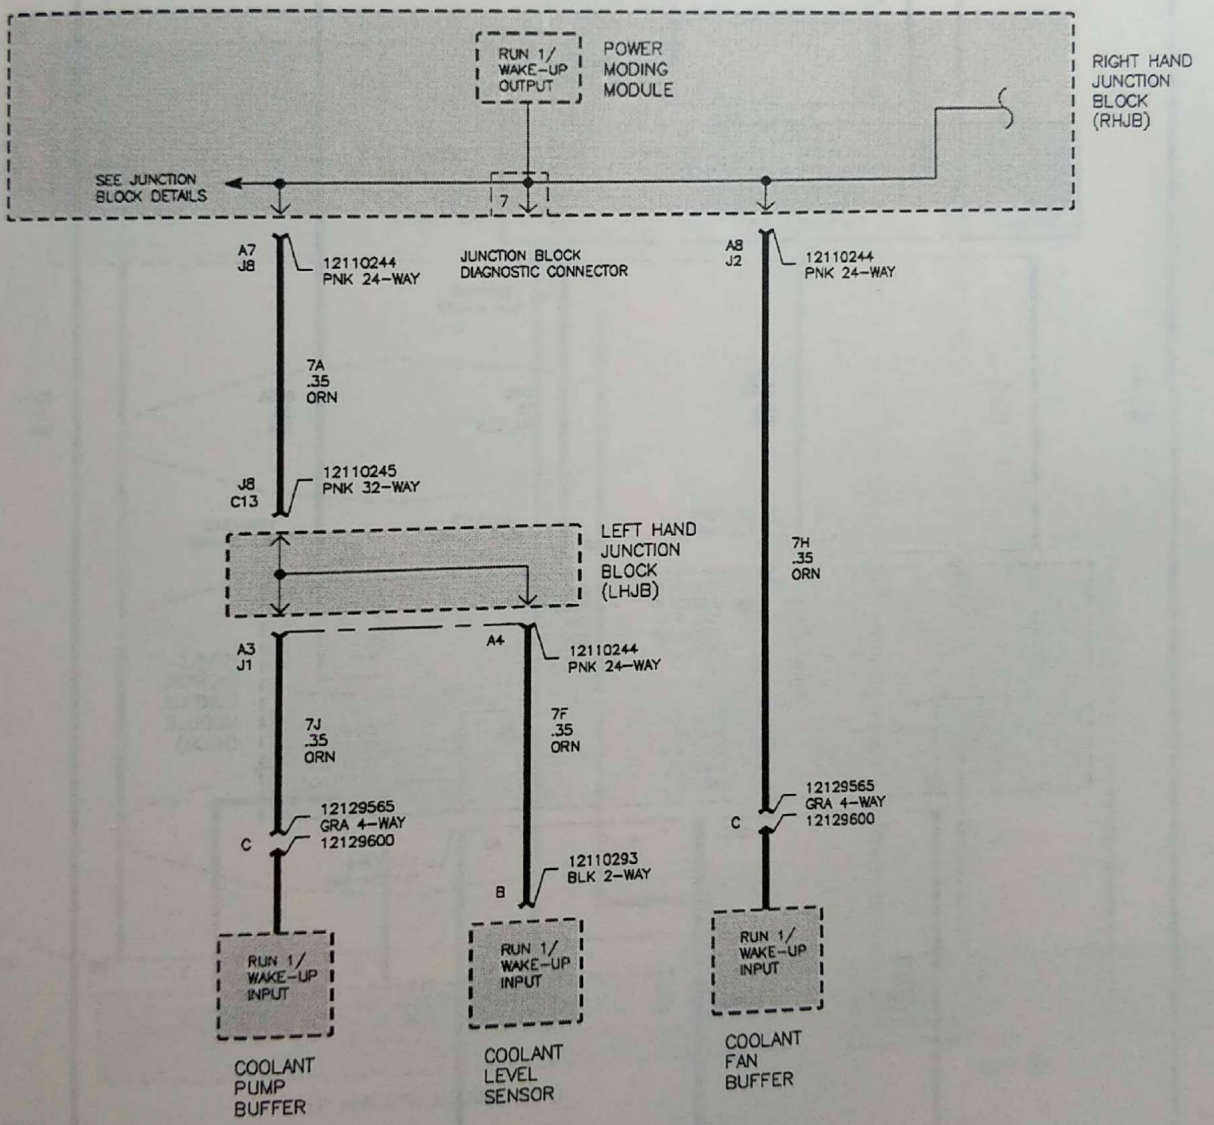

PSMELC68134AA

CamScanner

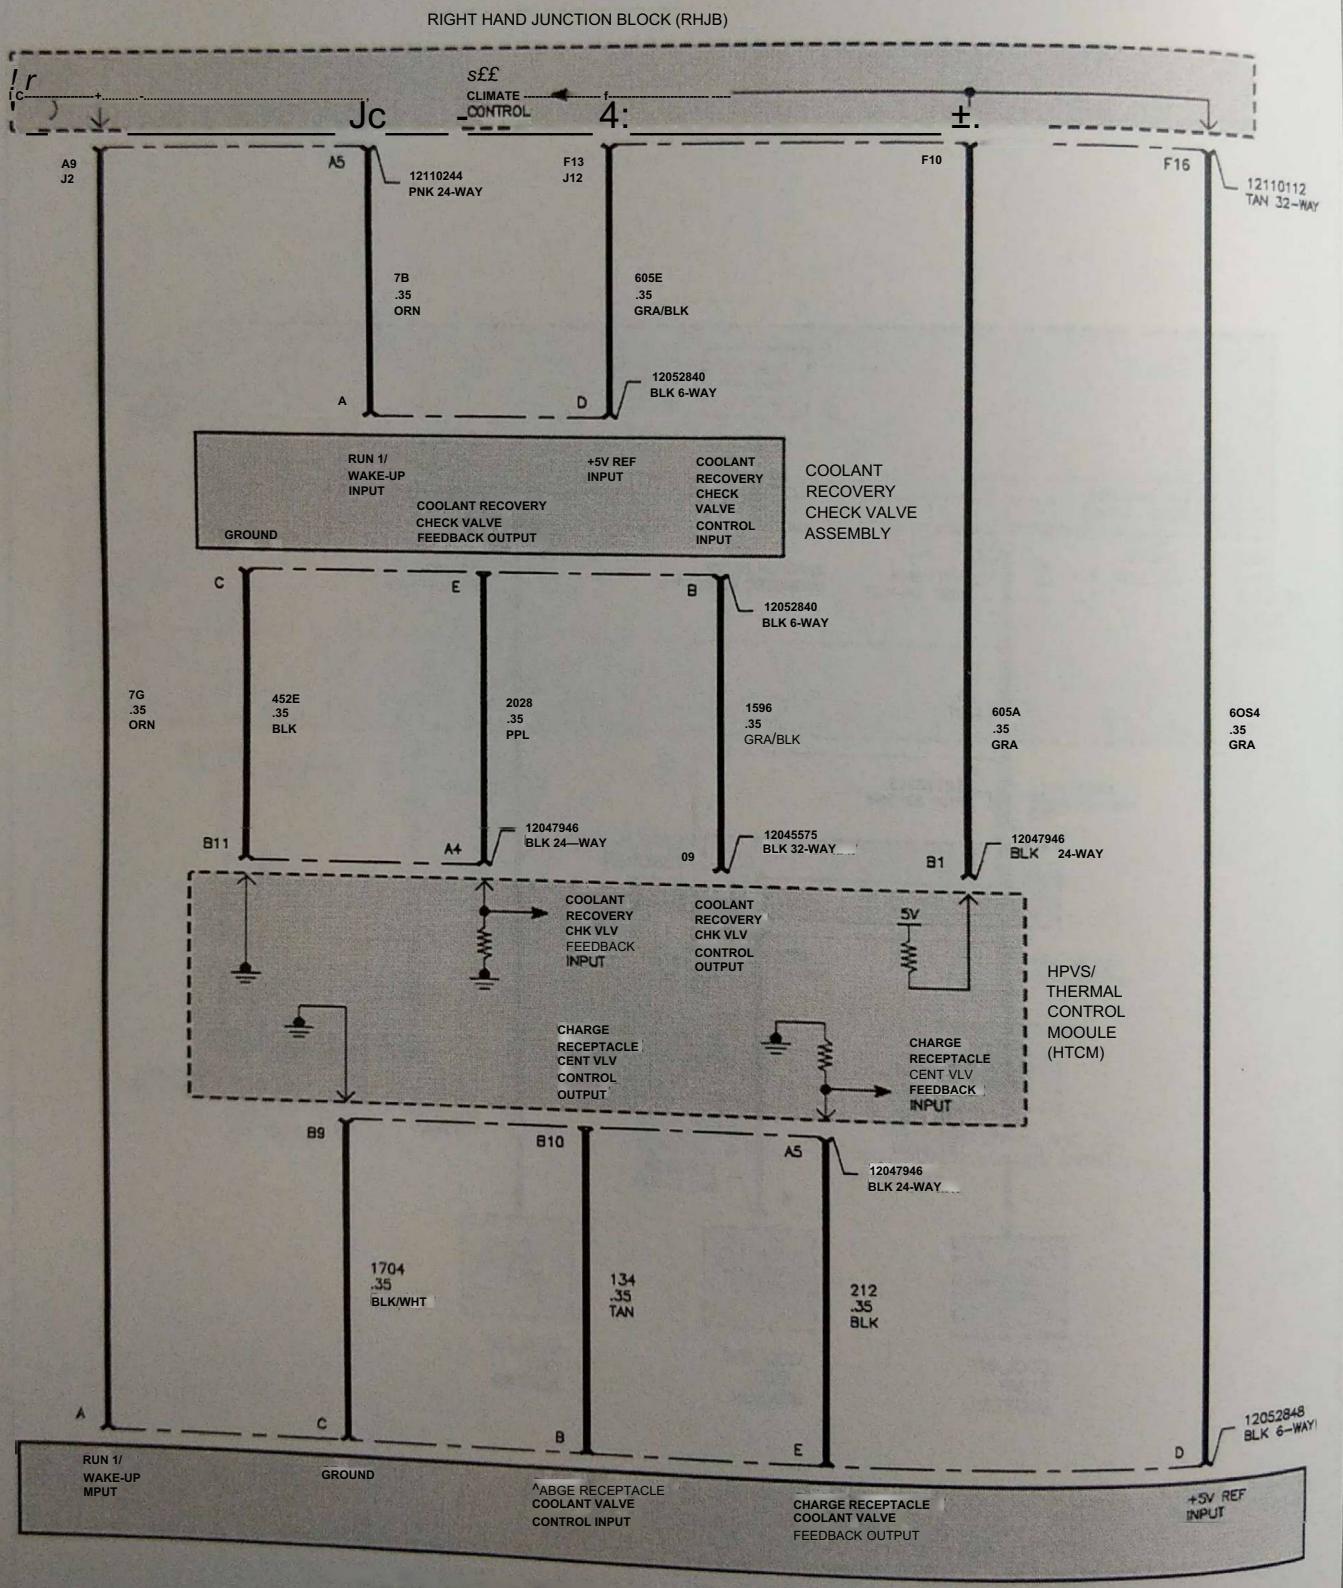
RIGHT HAND JUNCTION BLOCK (RHJB)
CLIMATE CONTROL
A9 J2
A5
12110244 PNK 24-WAY
F13 J12
F10
F16
12110112 TAN 32-WAY
7B .35 ORN
605E .35 GRA/BLK
12052840 BLK 6-WAY
A
D
RUN 1/ WAKE-UP INPUT
+5V REF INPUT
COOLANT RECOVERY CHECK VALVE CONTROL INPUT
GROUND
COOLANT RECOVERY CHECK VALVE FEEDBACK OUTPUT
COOLANT RECOVERY CHECK VALVE ASSEMBLY
C
E
B
12052840 BLK 6-WAY
7G .35 ORN
452E .35 BLK
2028 .35 PPL
1596 .35 GRA/BLK
605A .35 GRA
6OS4 .35 GRA
B11
A4
09
B1
12047946 BLK 24—WAY
12045575 BLK 32-WAY
12047946 BLK 24-WAY
COOLANT RECOVERY CHK VLV FEEDBACK INPUT
COOLANT RECOVERY CHK VLV CONTROL OUTPUT
5V
CHARGE RECEPTACLE CENT VLV CONTROL OUTPUT
CHARGE RECEPTACLE CENT VLV FEEDBACK INPUT
HPVS/ THERMAL CONTROL MOOULE (HTCM)
B9
B10
A5
12047946 BLK 24-WAY
1704 .35 BLK/WHT
134 .35 TAN
212 .35 BLK
A
C
B
E
D
12052848 BLK 6-WAY
RUN 1/ WAKE-UP MPUT
GROUND
^ABGE RECEPTACLE COOLANT VALVE CONTROL INPUT
CHARGE RECEPTACLE COOLANT VALVE FEEDBACK OUTPUT
+5V REF INPUT
DKNE MOTOR BATTERY CHARGER RECEPTACLE COOLANT VALVE ASSEMBLY
PSMELC68135AA

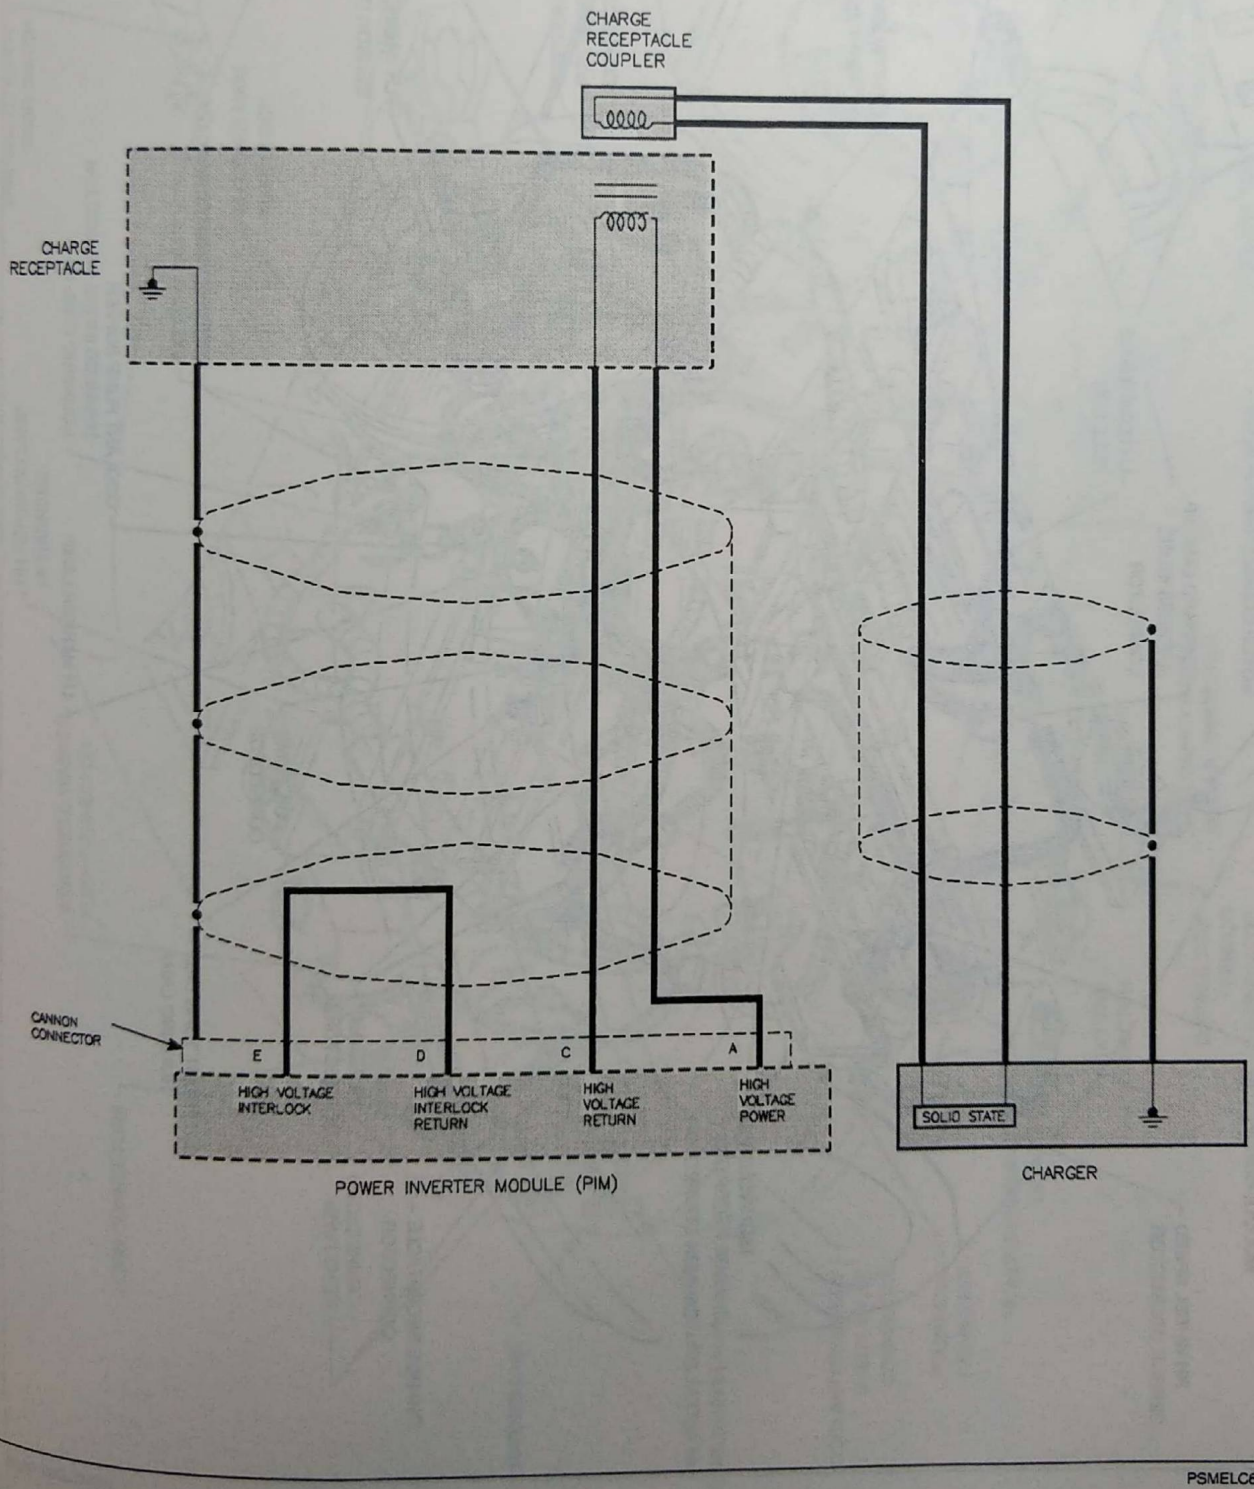

PSMELC68136AA

CamScanner

RECHARGING COMPONENT LOCATION VIEWS

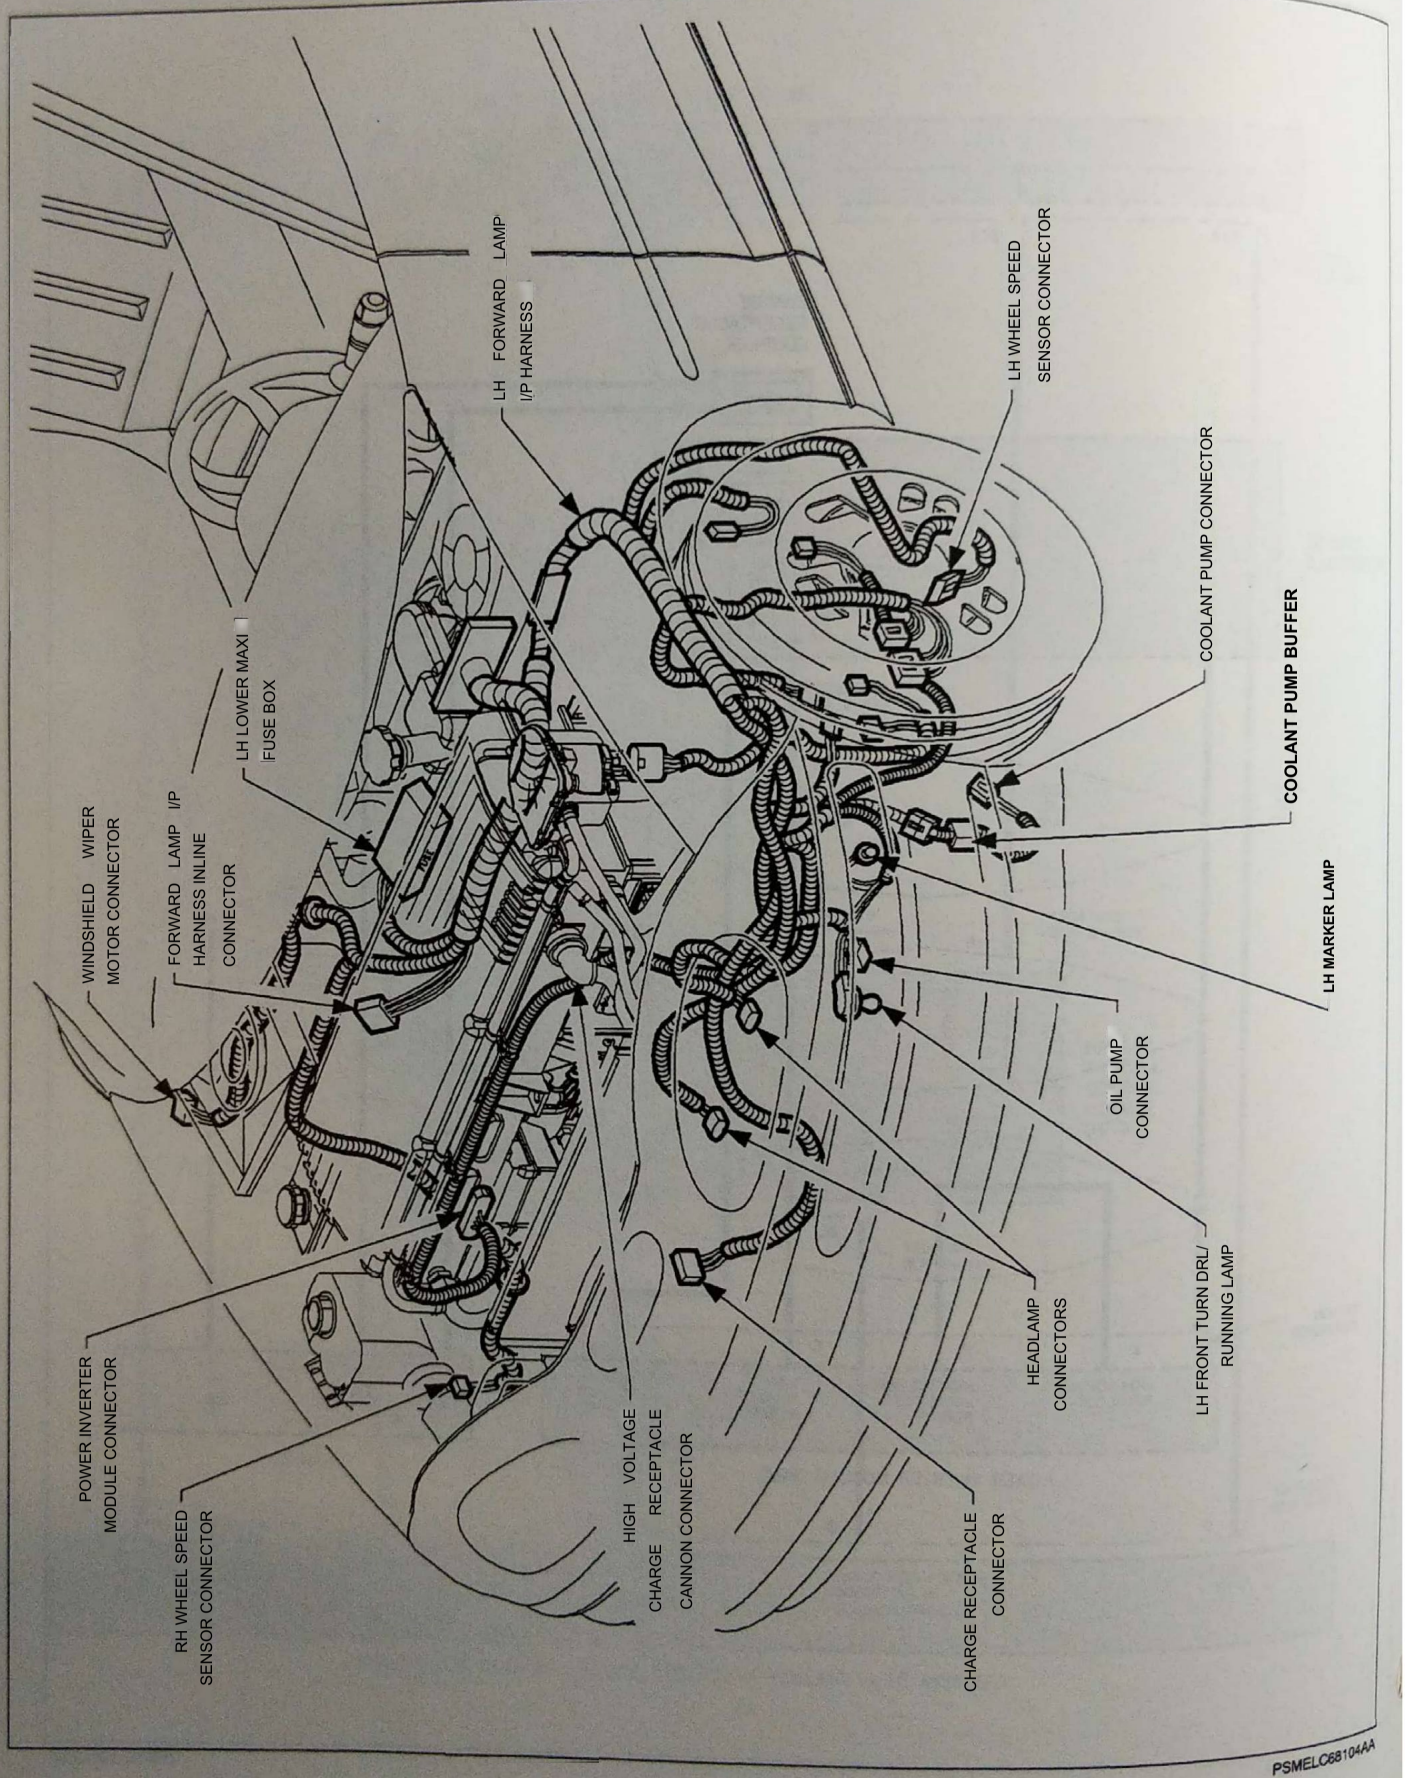
WINDSHIELD WIPER MOTOR CONNECTOR
FORWARD LAMP I/P HARNESS INLINE CONNECTOR
LH LOWER MAXI FUSE BOX
LH FORWARD LAMP I/P HARNESS
LH WHEEL SPEED SENSOR CONNECTOR
COOLANT PUMP CONNECTOR
COOLANT PUMP BUFFER
LH MARKER LAMP
OIL PUMP CONNECTOR
LH FRONT TURN DRL/ RUNNING LAMP
HEADLAMP CONNECTORS
CHARGE RECEPTACLE CONNECTOR
HIGH VOLTAGE CHARGE RECEPTACLE CANNON CONNECTOR
RH WHEEL SPEED SENSOR CONNECTOR
POWER INVERTER MODULE CONNECTOR
PSMELC68104AA

RECHARGING COMPONENT LOCATION VIEWS (CONTINUED)

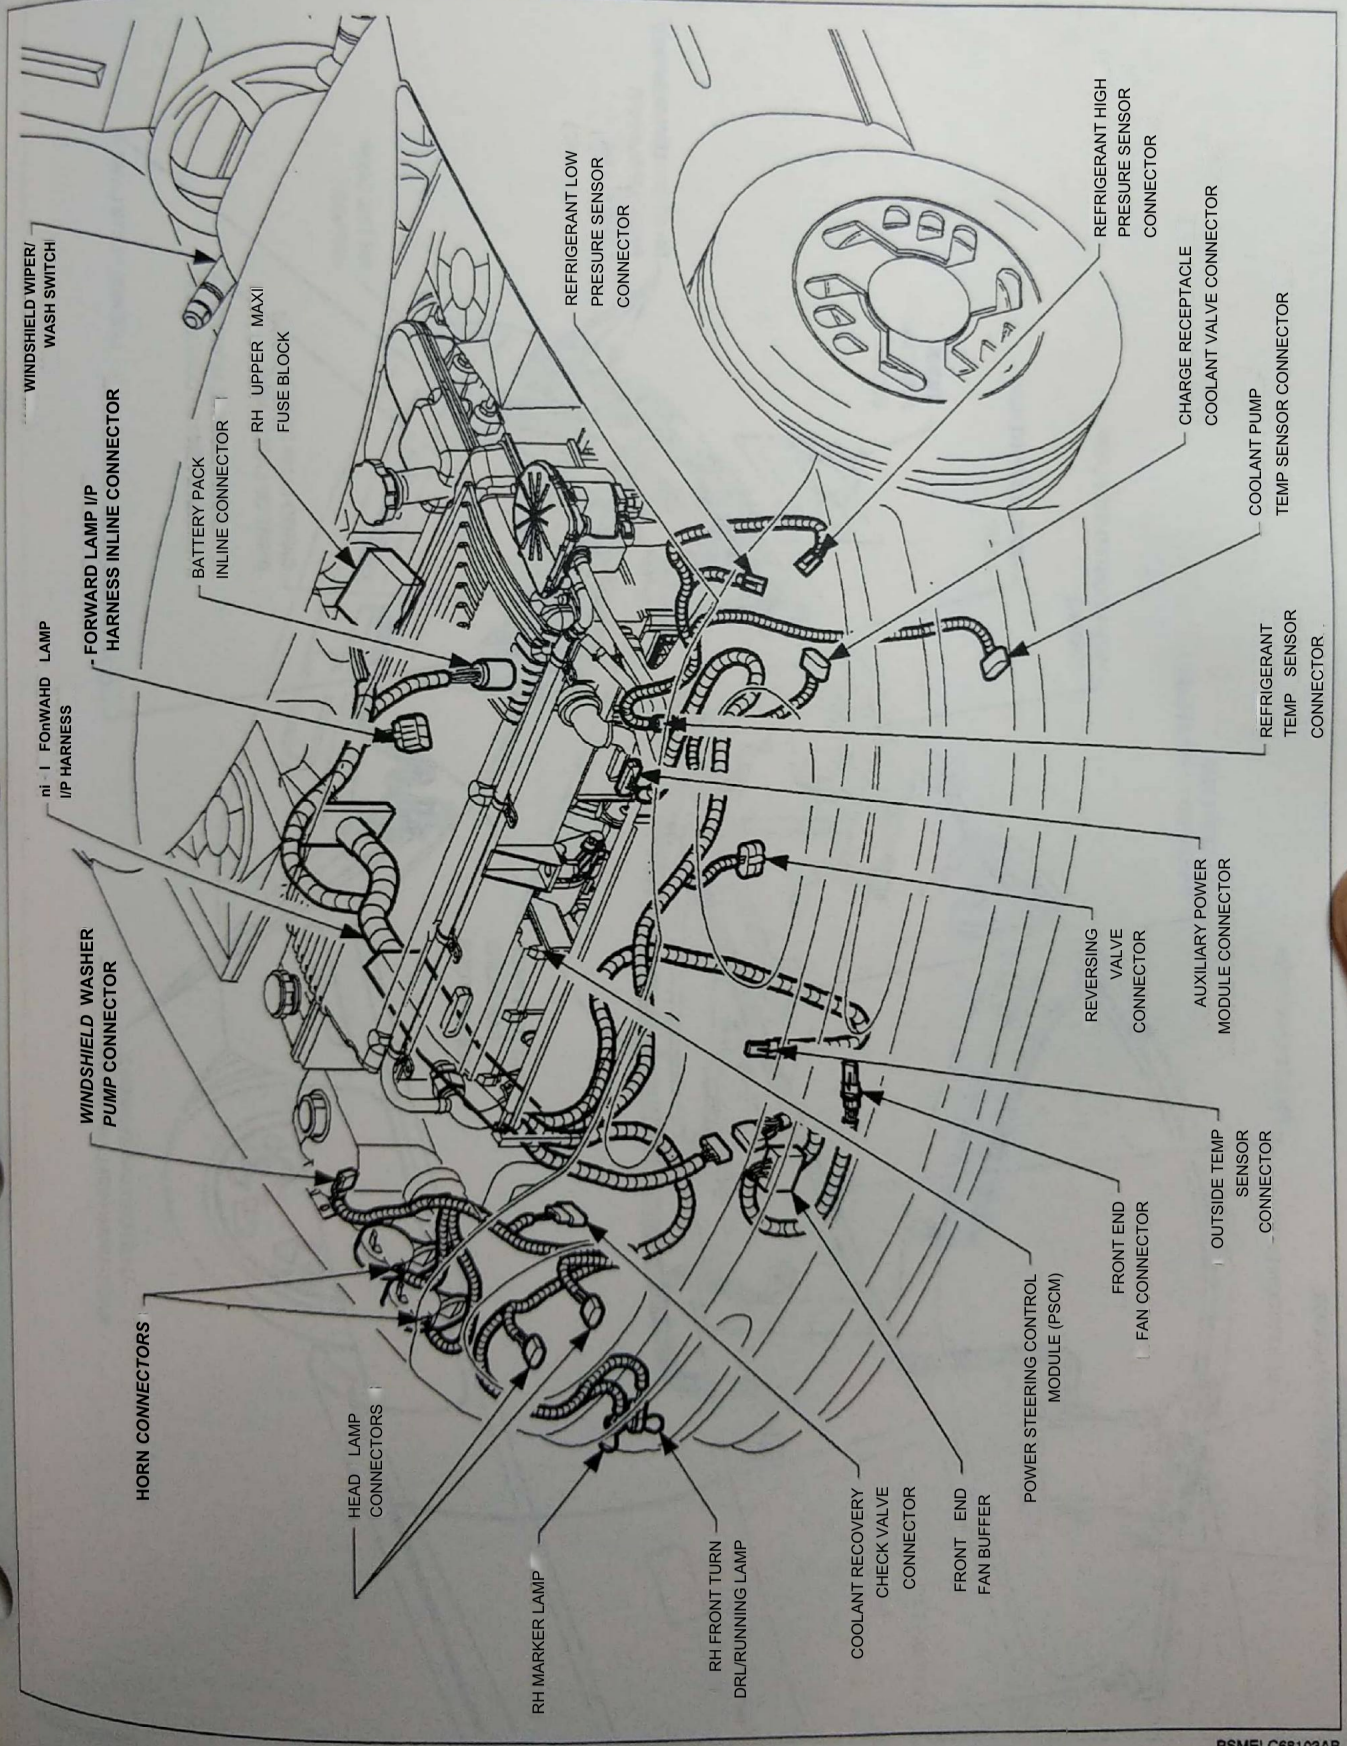
WINDSHIELD WIPER/ WASH SWITCH
ni I FOnWAHD LAMP I/P HARNESS
FORWARD LAMP I/P HARNESS INLINE CONNECTOR
BATTERY PACK INLINE CONNECTOR
RH UPPER MAXI FUSE BLOCK
REFRIGERANT LOW PRESURE SENSOR CONNECTOR
REFRIGERANT HIGH PRESURE SENSOR CONNECTOR
CHARGE RECEPTACLE COOLANT VALVE CONNECTOR
COOLANT PUMP TEMP SENSOR CONNECTOR
REFRIGERANT TEMP SENSOR CONNECTOR
WINDSHIELD WASHER PUMP CONNECTOR
HORN CONNECTORS
HEAD LAMP CONNECTORS
RH MARKER LAMP
RH FRONT TURN DRL/RUNNING LAMP
COOLANT RECOVERY CHECK VALVE CONNECTOR
FRONT END FAN BUFFER
POWER STEERING CONTROL MODULE (PSCM)
FRONT END FAN CONNECTOR
OUTSIDE TEMP SENSOR CONNECTOR
REVERSING VALVE CONNECTOR
AUXILIARY POWER MODULE CONNECTOR

PSMELC68103AB

RECHARGING COMPONENT LOCATION VIEWS (CONTINUED)

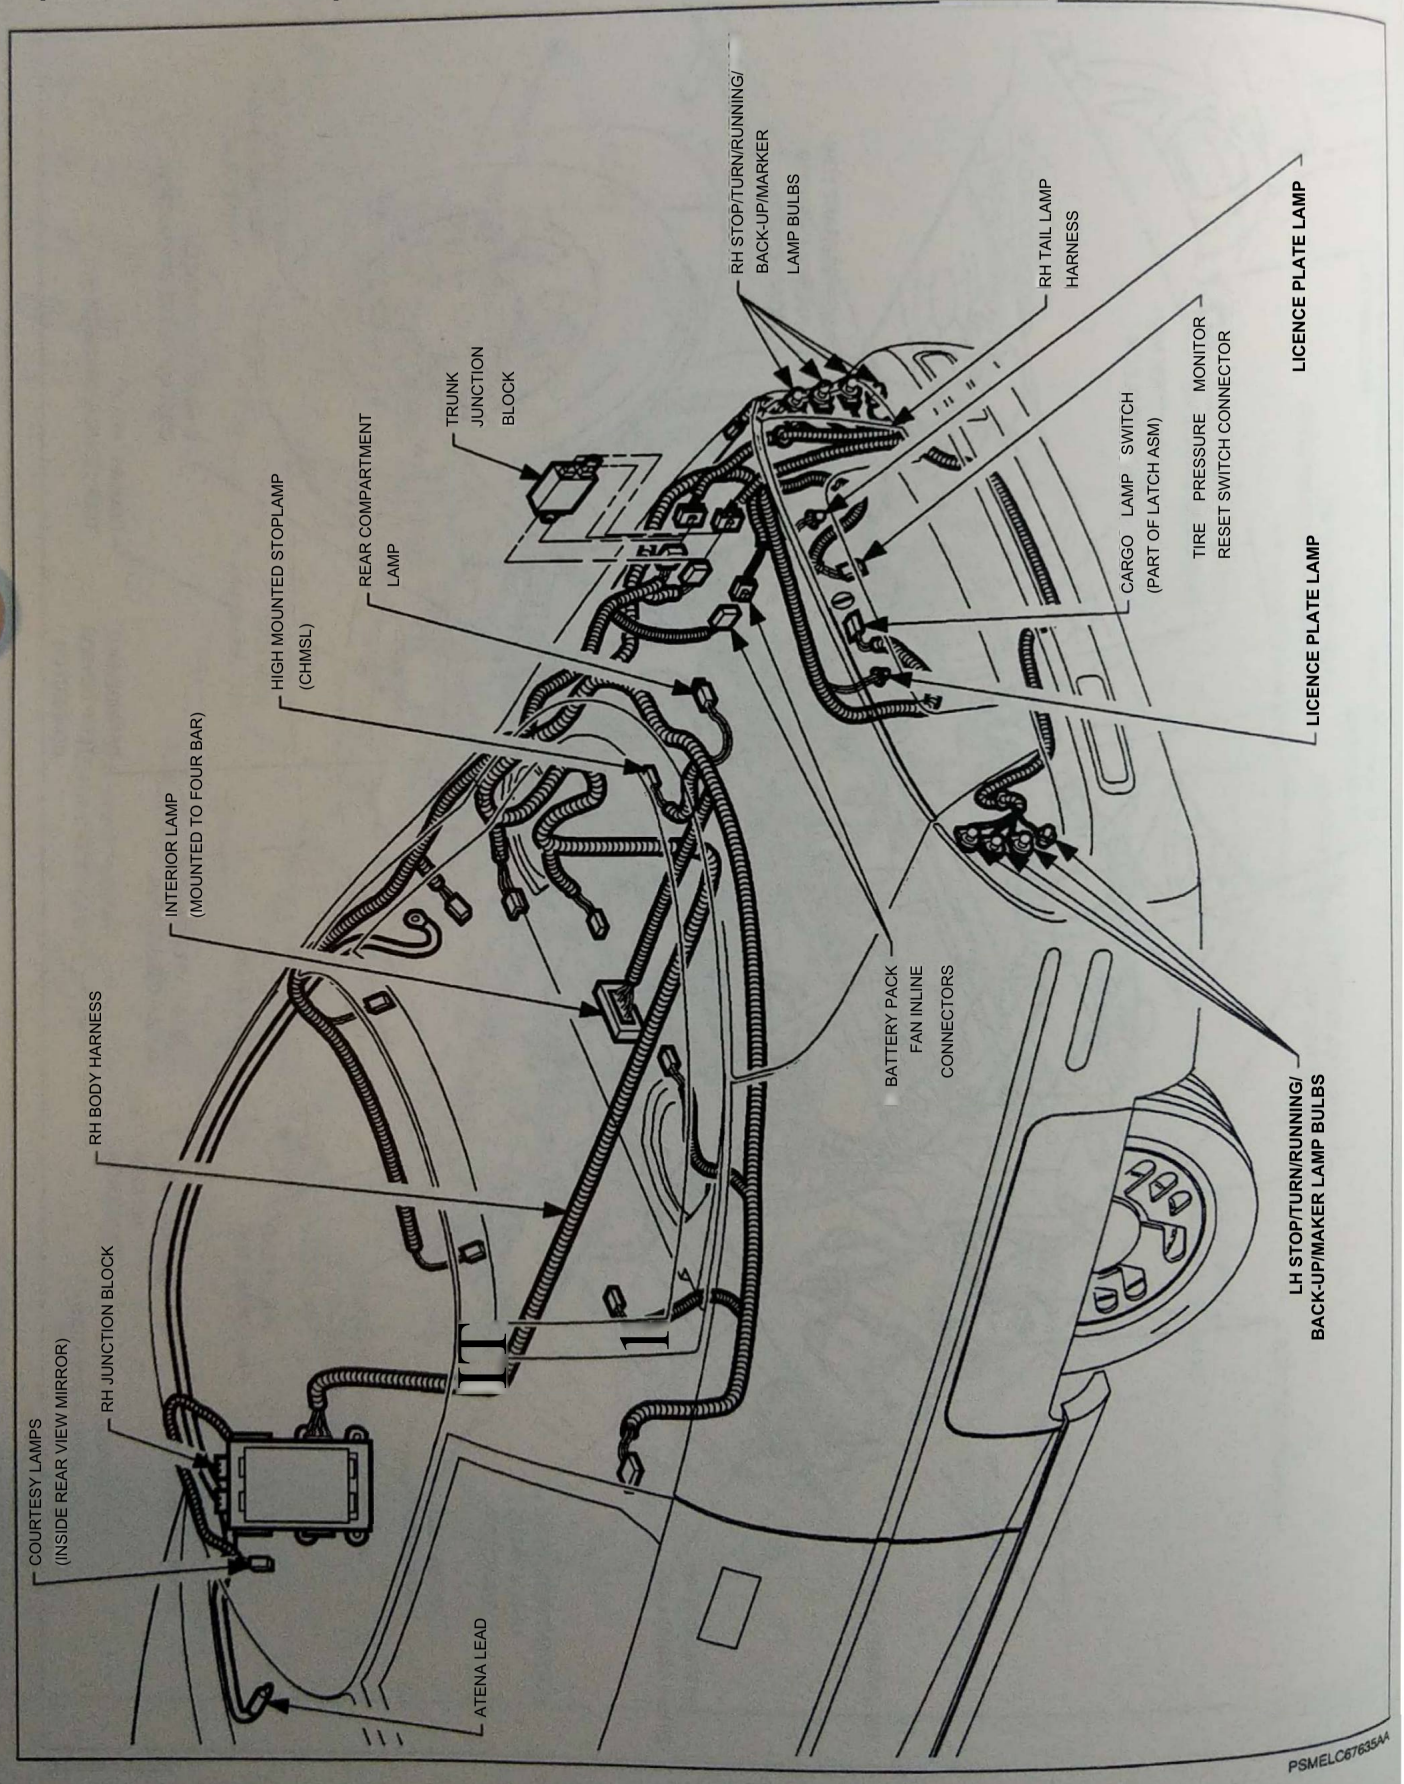

NOTES

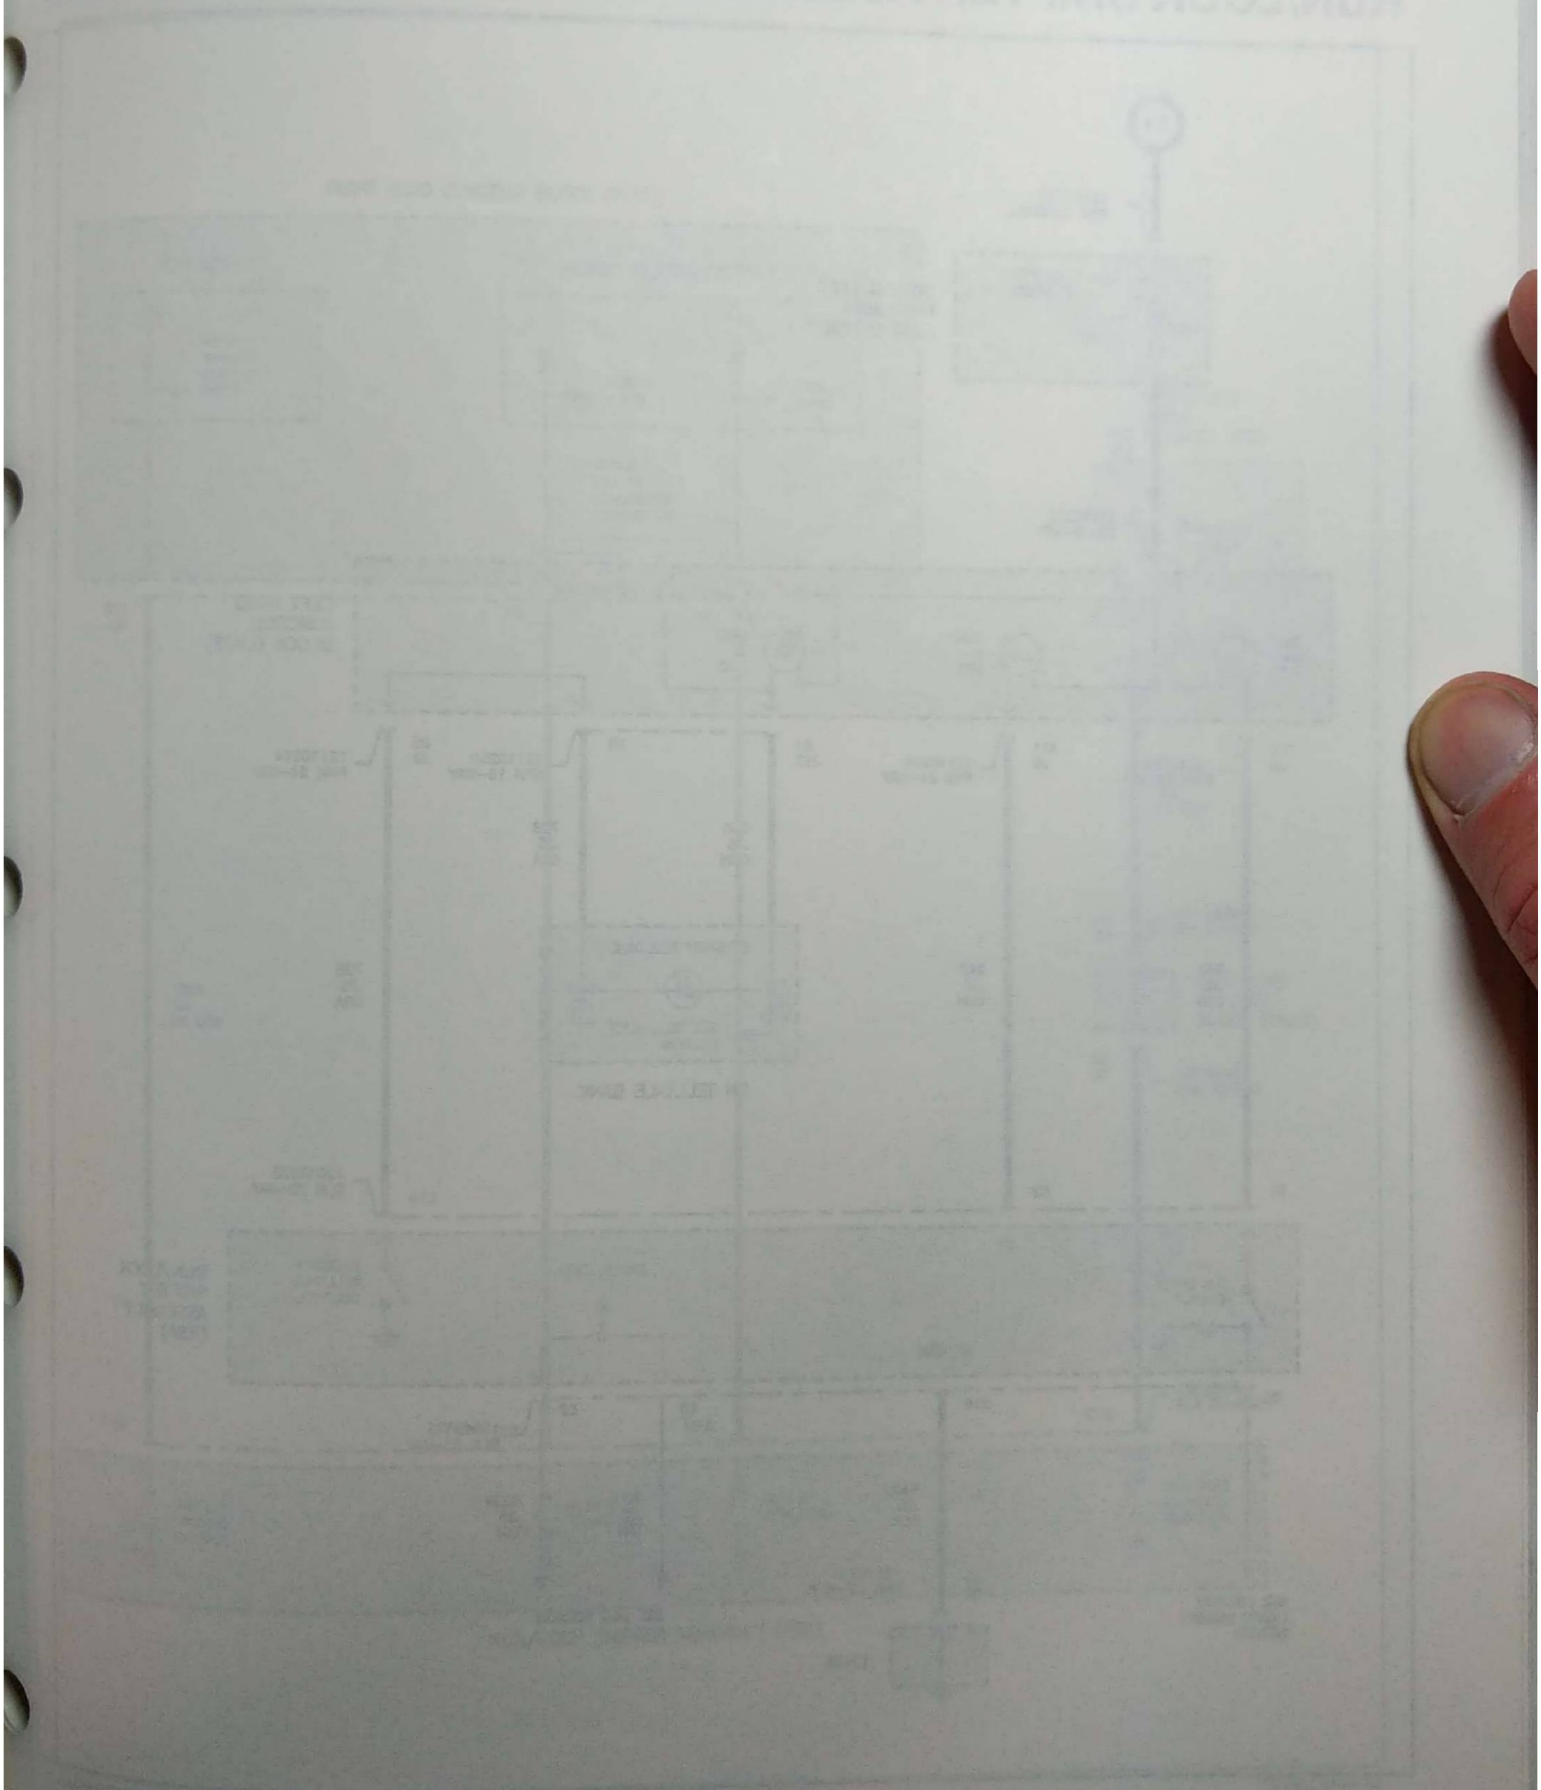

CamScanner

RUN/LOCK SHIFTER ASSEMBLY

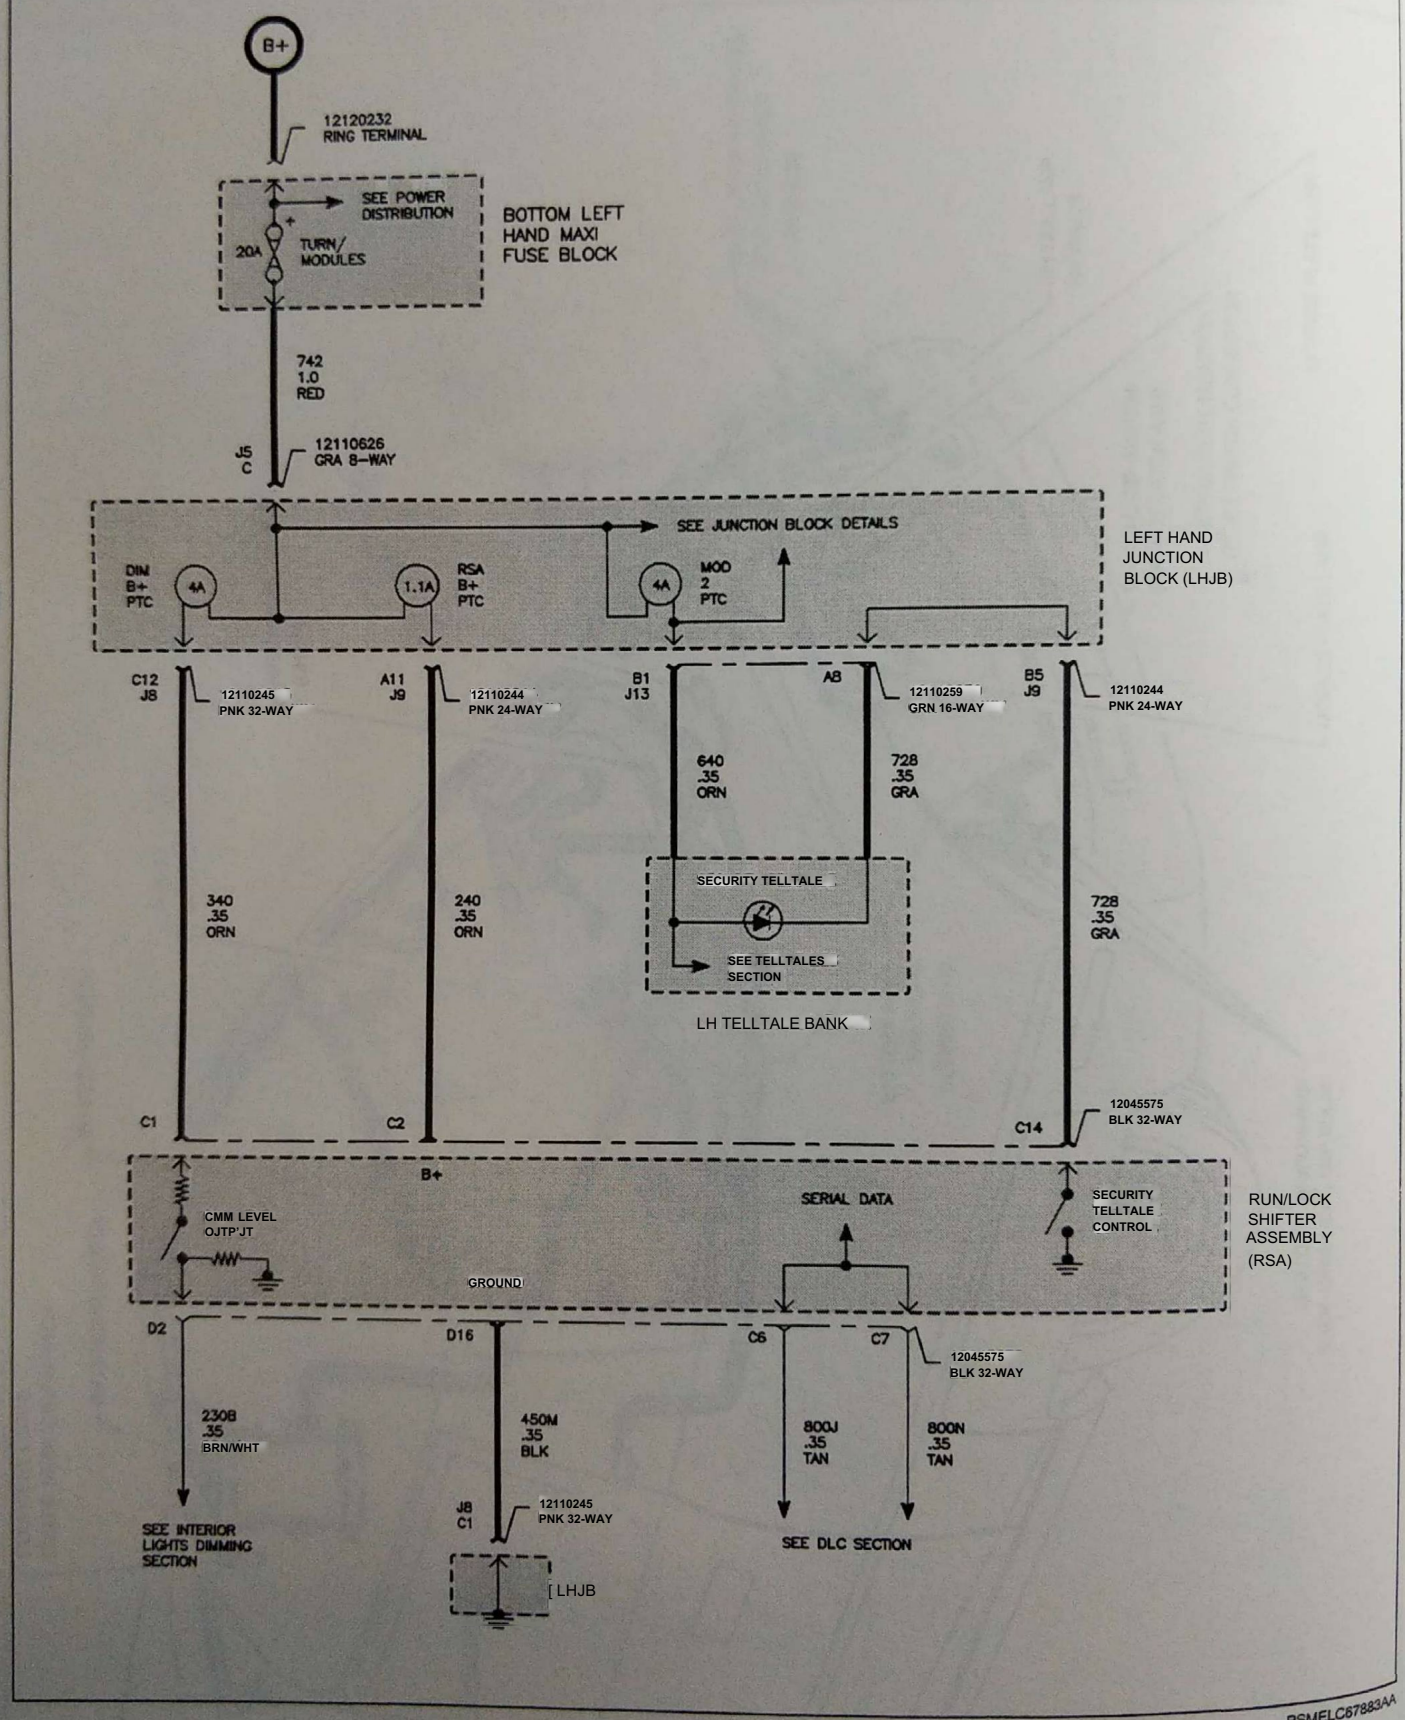

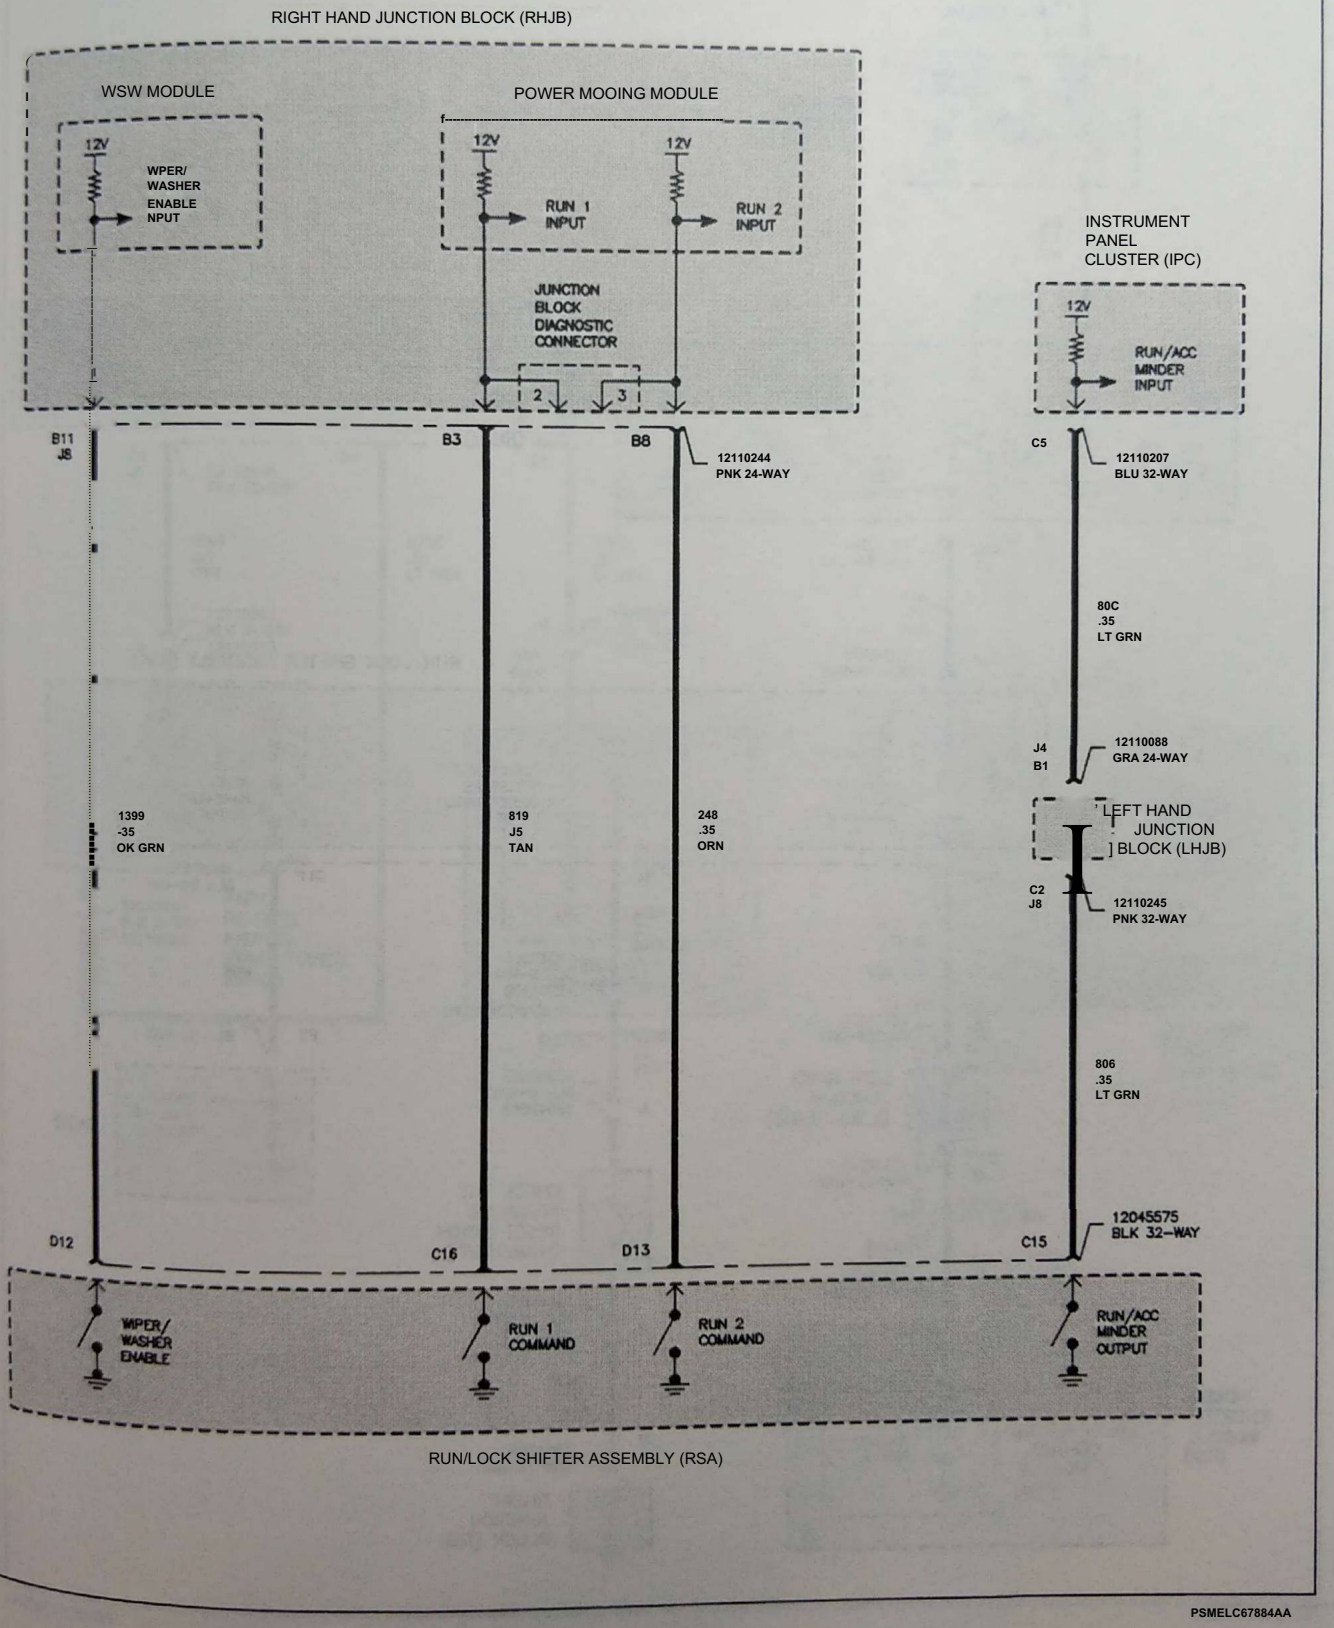

PSMELC67884AA

CamScanner

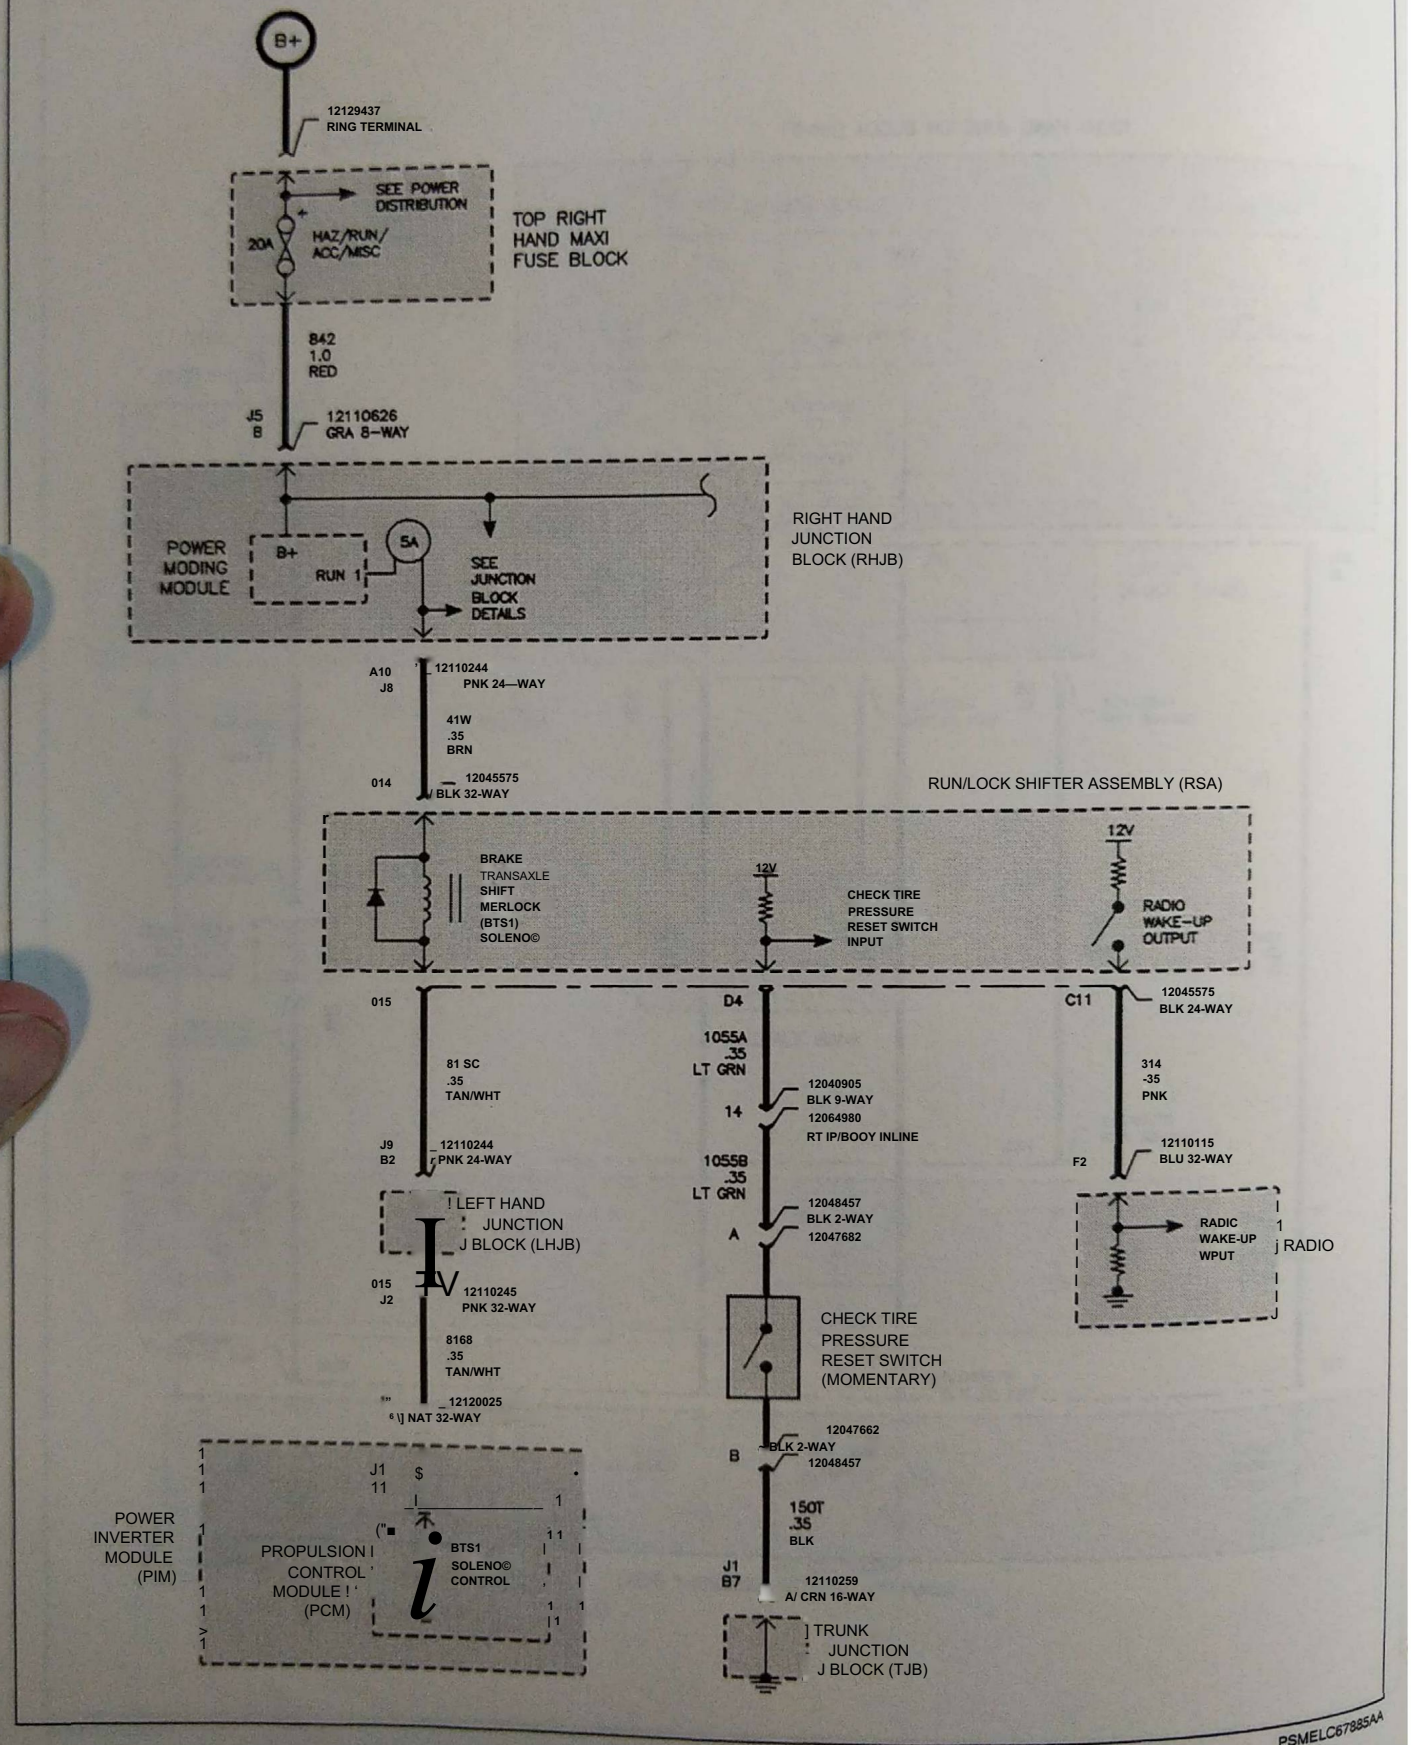
B+
12129437
RING TERMINAL
SEE POWER DISTRIBUTION
20A
HAZ/RUN/ ACC/MISC
TOP RIGHT HAND MAXI FUSE BLOCK
842
1.0
RED
J5
B
12110626
GRA 8-WAY
POWER MODING MODULE
B+
RUN 1
5A
SEE JUNCTION BLOCK DETAILS
RIGHT HAND JUNCTION BLOCK (RHJB)
A10
J8
12110244
PNK 24-WAY
41W
.35
BRN
014
12045575
BLK 32-WAY
RUN/LOCK SHIFTER ASSEMBLY (RSA)
BRAKE TRANSAXLE SHIFT MERLOCK (BTS1) SOLENOID
12V
CHECK TIRE PRESSURE RESET SWITCH INPUT
12V
RADIO WAKE-UP OUTPUT
015
81 SC
.35
TAN/WHT
J9
B2
12110244
PNK 24-WAY
LEFT HAND JUNCTION BLOCK (LHJB)
015
J2
12110245
PNK 32-WAY
8168
.35
TAN/WHT
12120025
NAT 32-WAY
D4
1055A
.35
LT GRN
14
12040905
BLK 9-WAY
12064980
RT IP/BOOY INLINE
1055B
.35
LT GRN
A
12048457
BLK 2-WAY
12047682
CHECK TIRE PRESSURE RESET SWITCH (MOMENTARY)
B
12047662
BLK 2-WAY
12048457
150T
.35
BLK
J1
B7
12110259
A/ CRN 16-WAY
TRUNK JUNCTION BLOCK (TJB)
C11
12045575
BLK 24-WAY
314
-35
PNK
F2
12110115
BLU 32-WAY
RADIO WAKE-UP WPUT
RADIO
POWER INVERTER MODULE (PIM)
PROPULSION CONTROL MODULE (PCM)
J1
11
BTS1
SOLENOID CONTROL
PSMELC67885AA

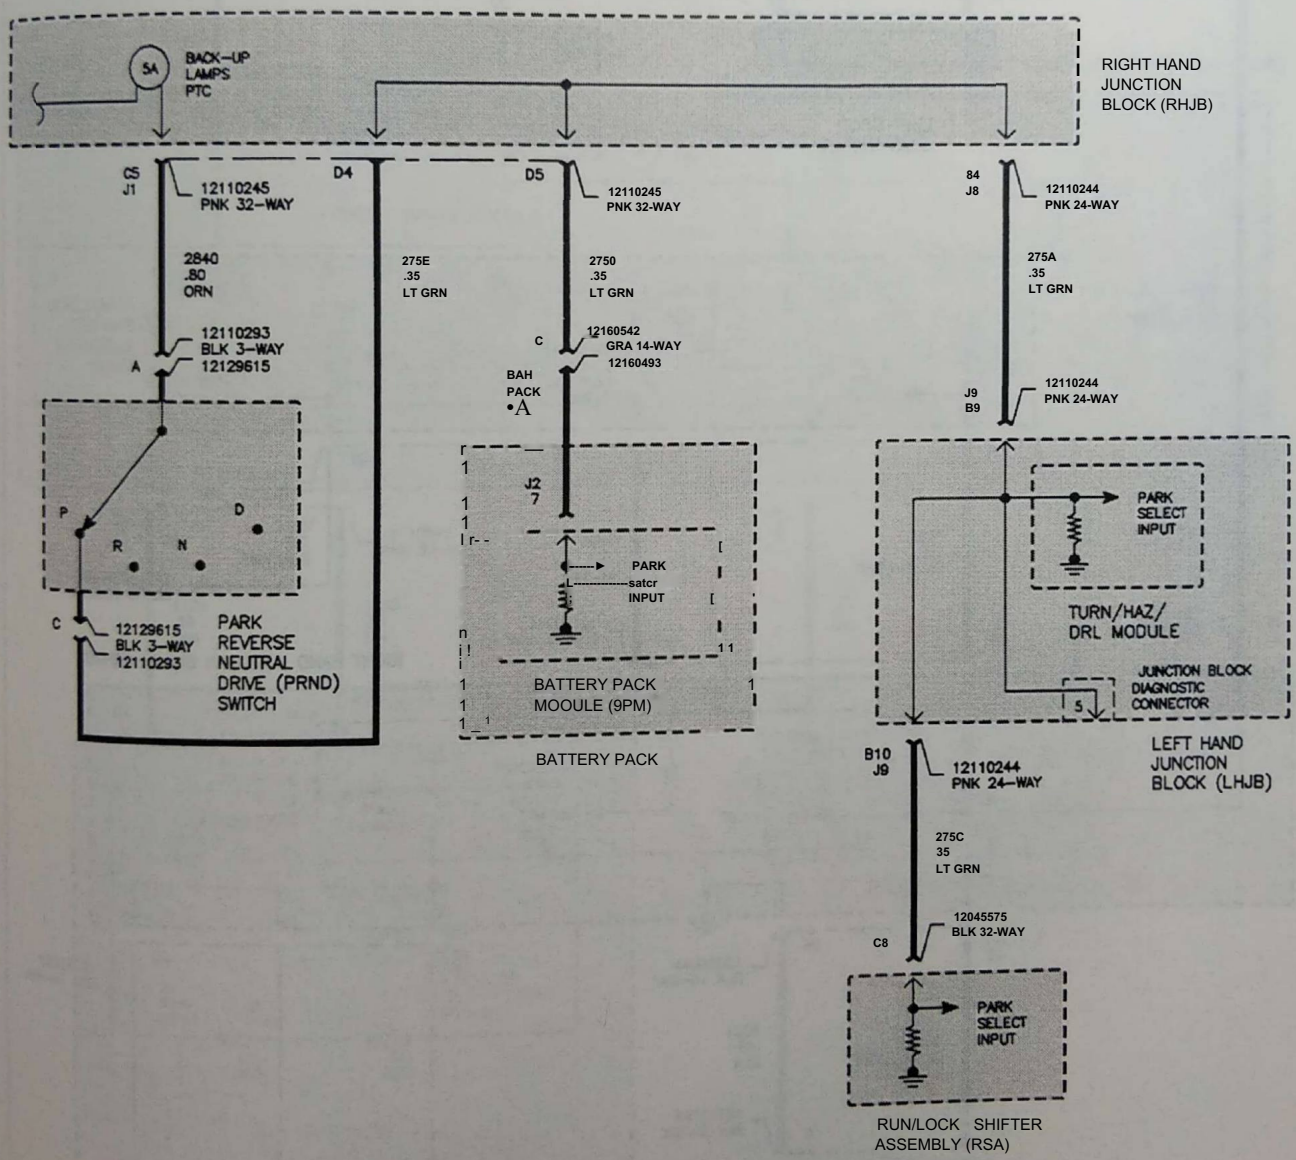

PSMELC67886AA

CamScanner

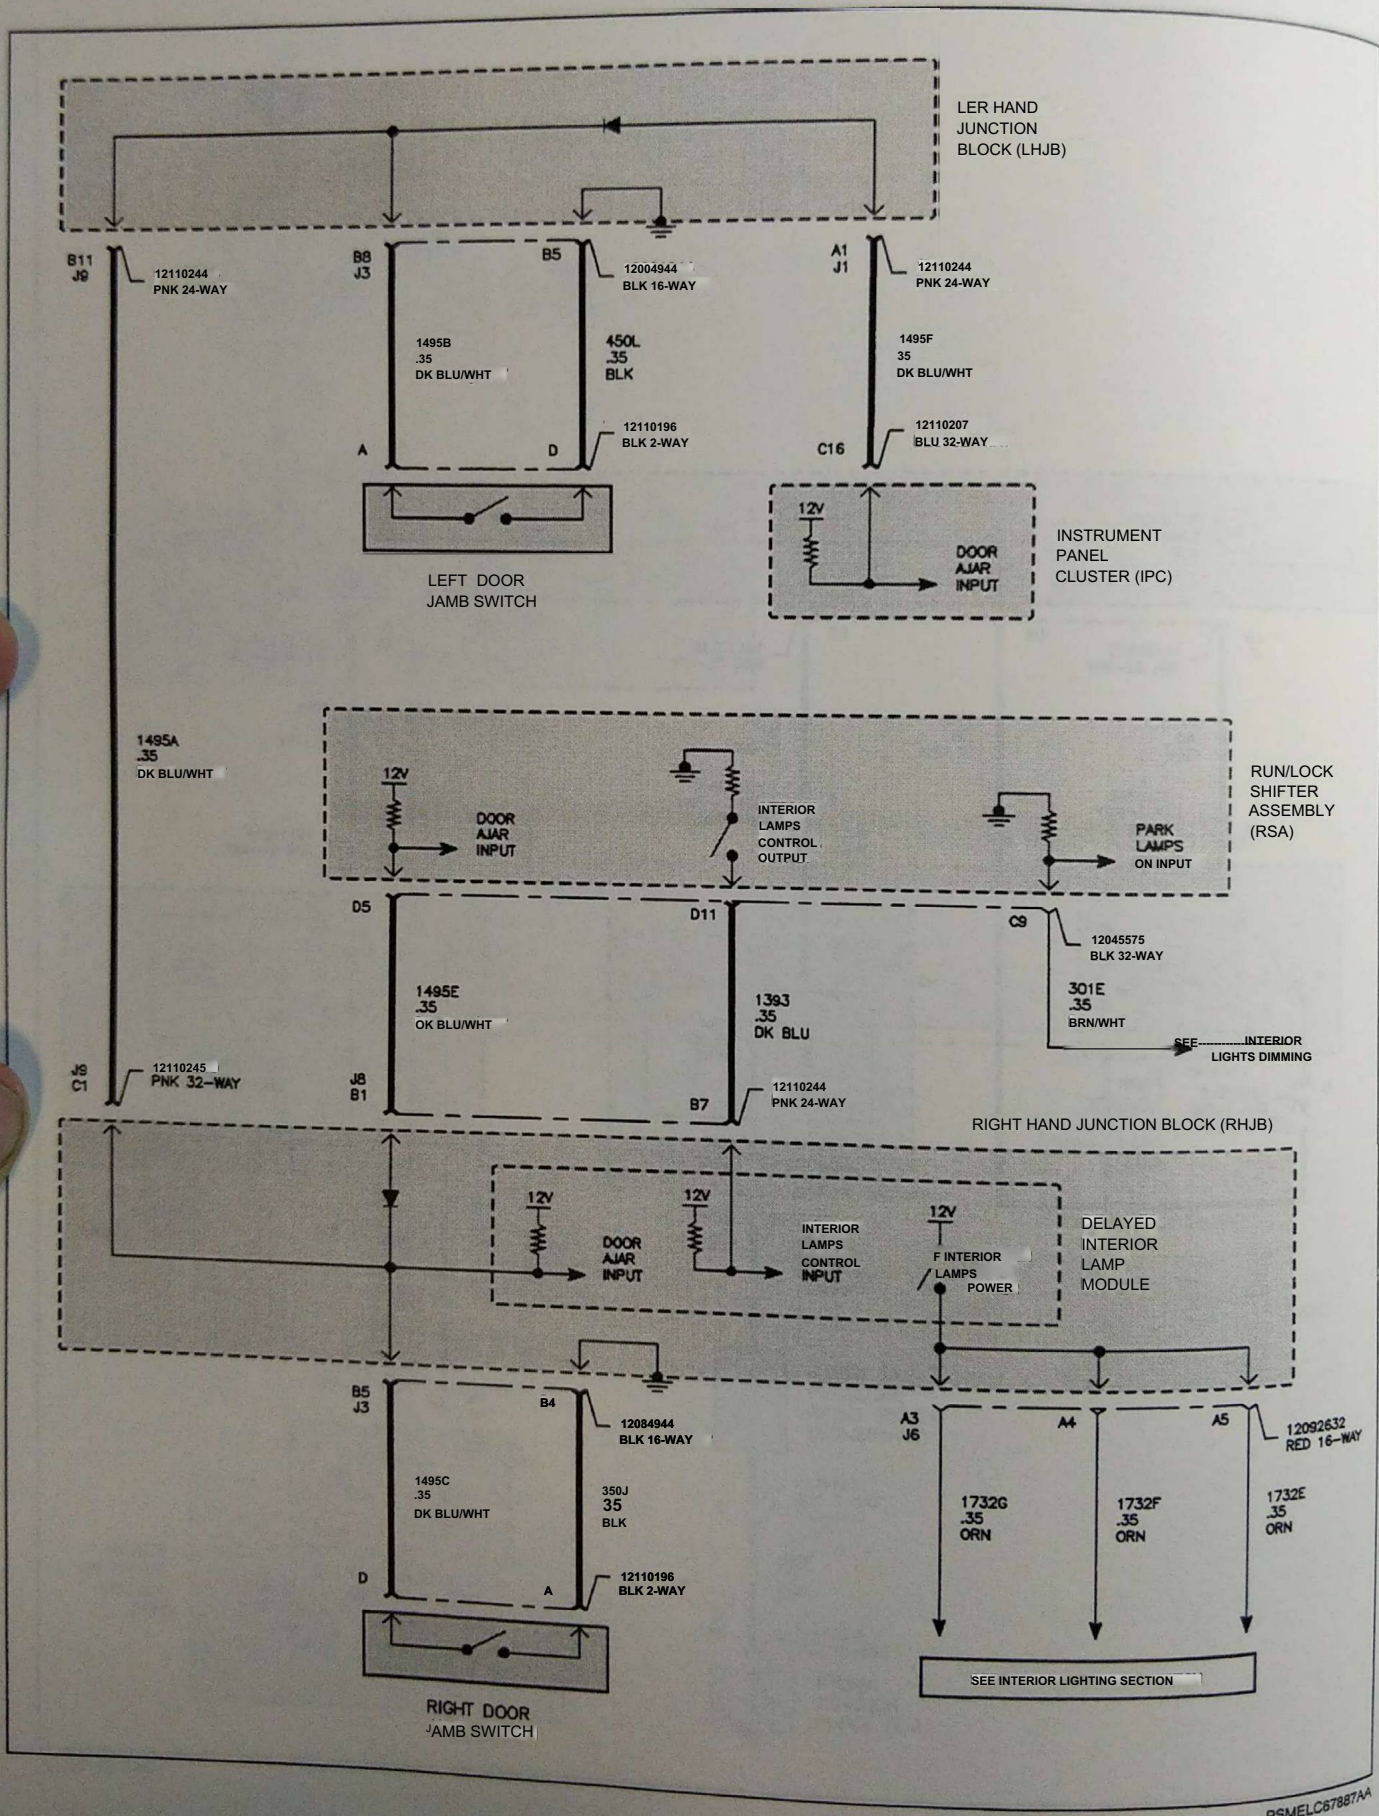
LER HAND JUNCTION BLOCK (LHJB)
B11 J9
12110244 PNK 24-WAY
B8 J3
B5
12004944 BLK 16-WAY
1495B .35 DK BLU/WHT
450L .35 BLK
A
D
12110196 BLK 2-WAY
LEFT DOOR JAMB SWITCH
A1 J1
12110244 PNK 24-WAY
1495F 35 DK BLU/WHT
C16
12110207 BLU 32-WAY
12V
DOOR AJAR INPUT
INSTRUMENT PANEL CLUSTER (IPC)
1495A .35 DK BLU/WHT
12V
DOOR AJAR INPUT
INTERIOR LAMPS CONTROL OUTPUT
PARK LAMPS ON INPUT
RUN/LOCK SHIFTER ASSEMBLY (RSA)
D5
D11
C9
12045575 BLK 32-WAY
1495E .35 OK BLU/WHT
1393 .35 DK BLU
301E .35 BRN/WHT
SEE INTERIOR LIGHTS DIMMING
J9 C1
12110245 PNK 32-WAY
J8 B1
B7
12110244 PNK 24-WAY
RIGHT HAND JUNCTION BLOCK (RHJB)
12V
DOOR AJAR INPUT
12V
INTERIOR LAMPS CONTROL INPUT
12V
F INTERIOR LAMPS POWER
DELAYED INTERIOR LAMP MODULE
B5 J3
B4
12084944 BLK 16-WAY
1495C .35 DK BLU/WHT
350J 35 BLK
D
A
12110196 BLK 2-WAY
RIGHT DOOR JAMB SWITCH
A3 J6
A4
A5
12092632 RED 16-WAY
1732G .35 ORN
1732F .35 ORN
1732E .35 ORN
SEE INTERIOR LIGHTING SECTION
PSMELC67887AA

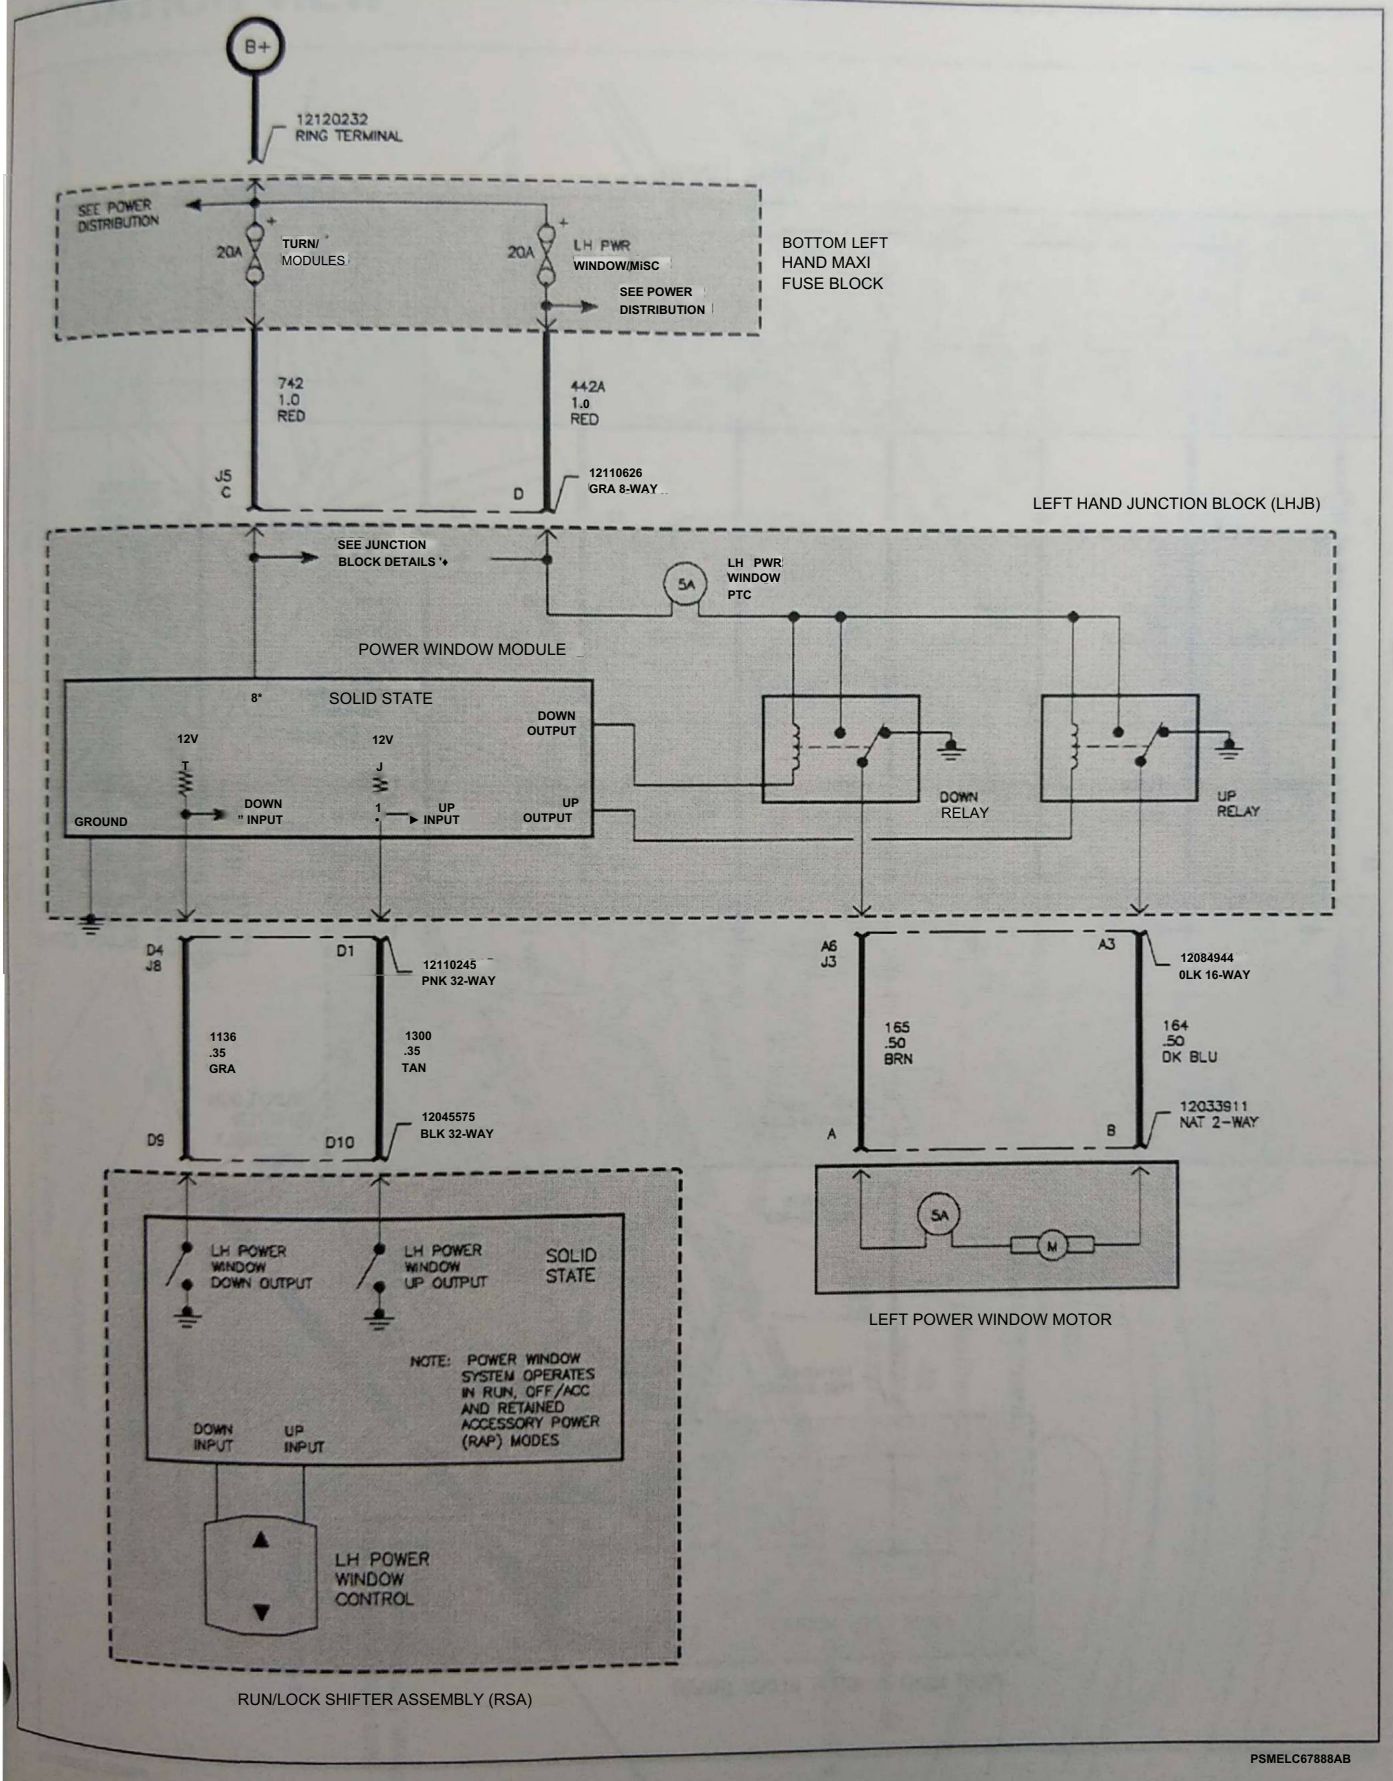

PSMELC67888AB

CamScanner

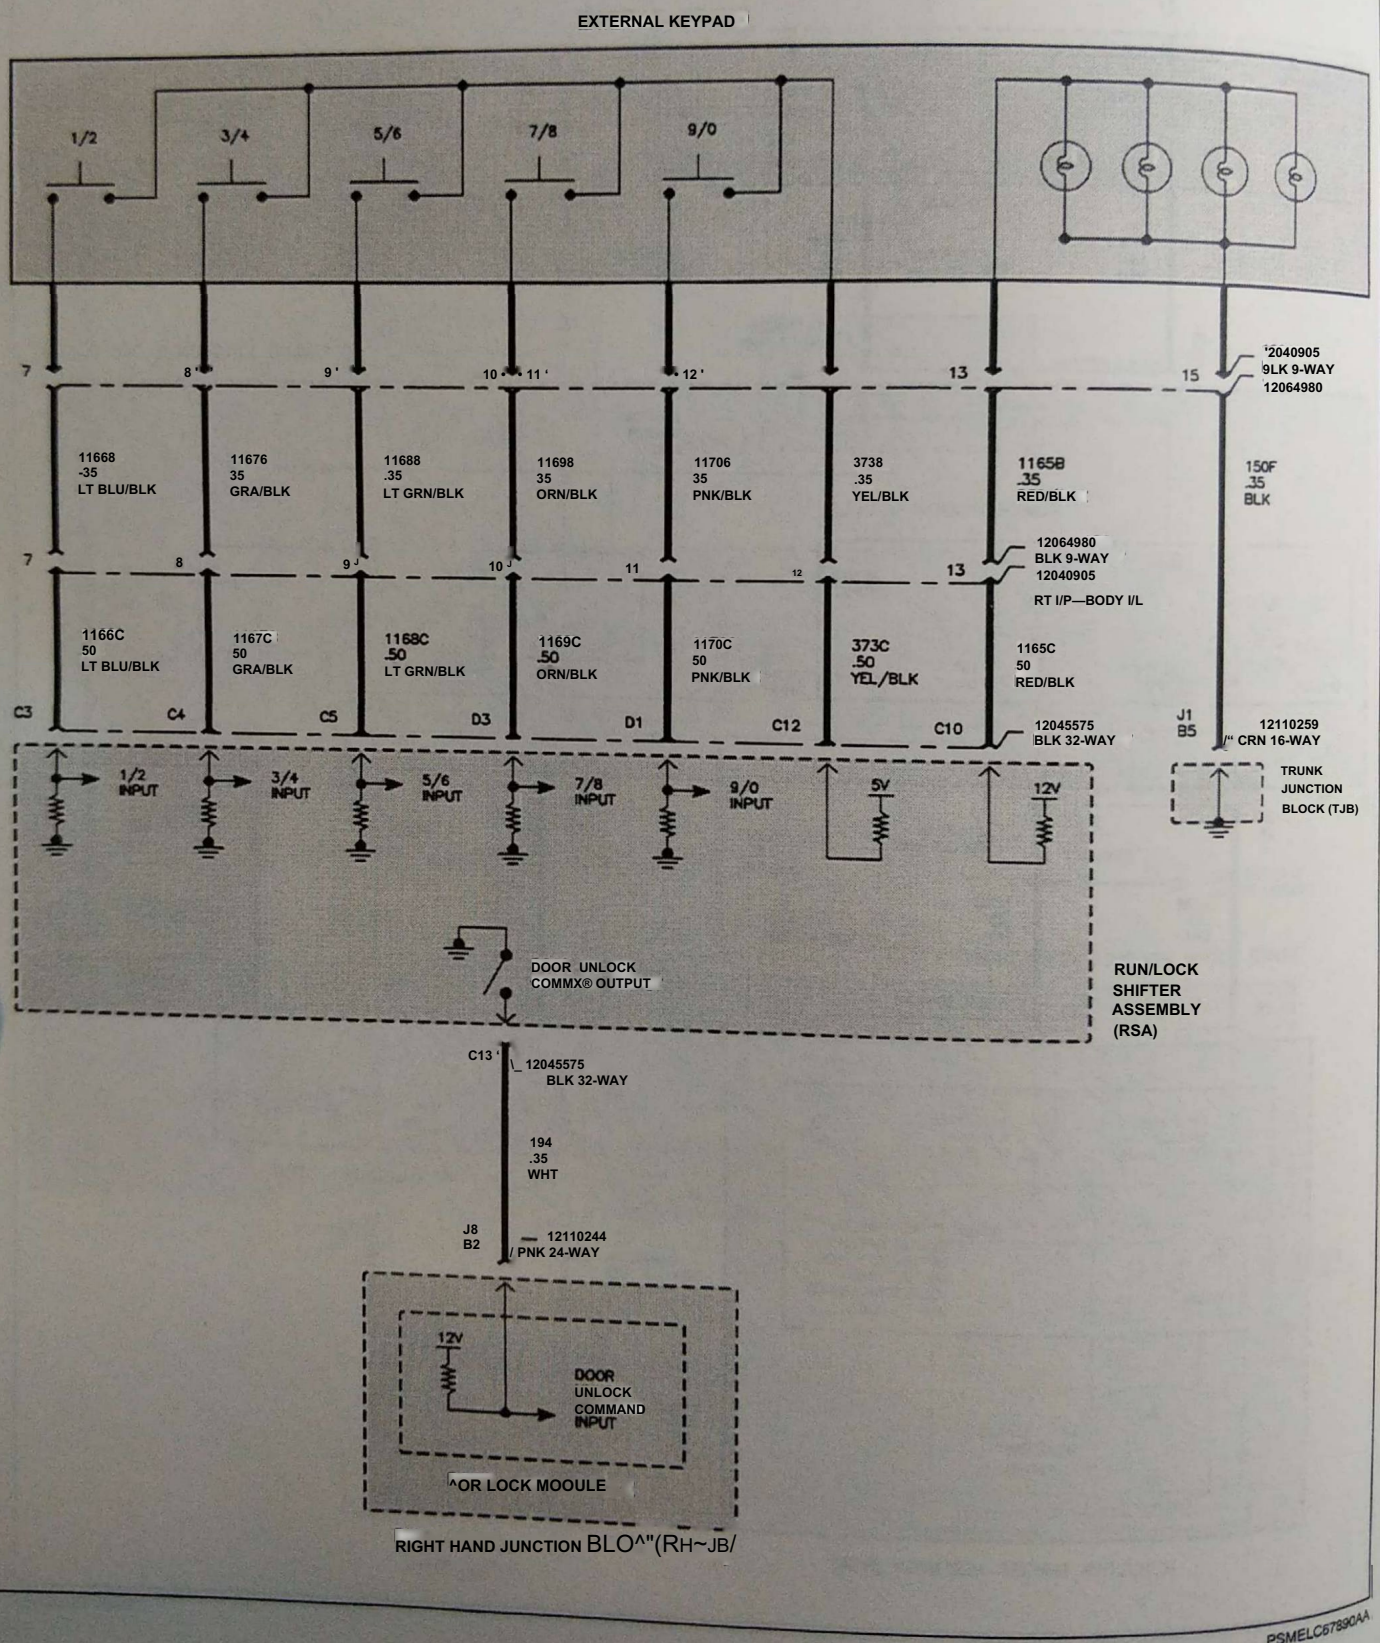

PSMELC67890AA

RUN/LOCK SHIFTER ASSEMBLY (RSA) COMPONENT LOCATION VIEW

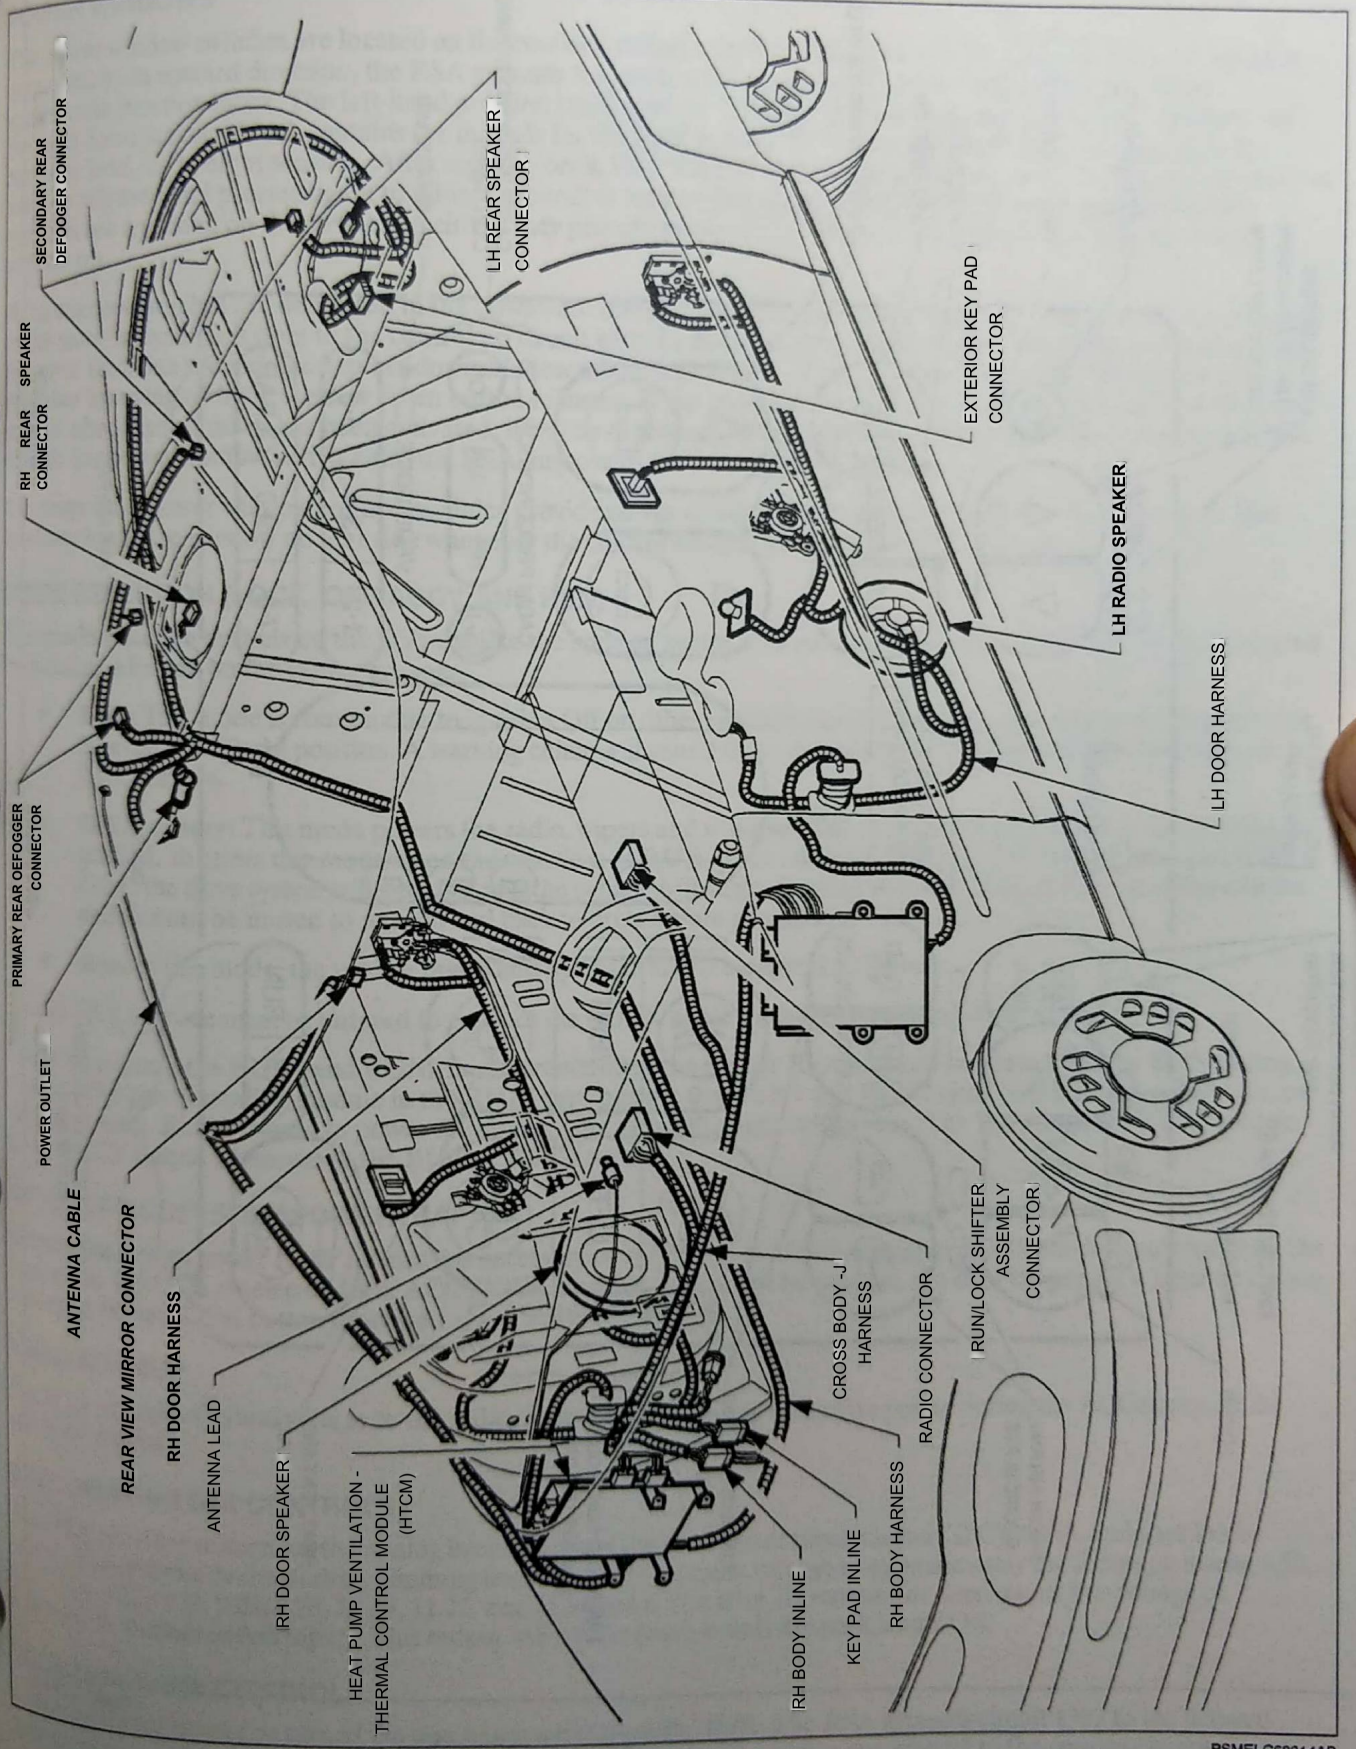

RUN/LOCK SHIFTER ASSEMBLY (RSA)

RUN/LOCK SHIFTER ASSEMBLY (RSA)

< GENERAL DESCRIPTION

* p0WER WINDOWS

PJC power window switches are located on the rurVlock shifter assembly (RSA) pad. When a power window button is depressed in an upward direction the RSA grounds the control up circuit to the power window module in the appropriate junction block. The left-hand junction block contains the power window module for the left window and the right hand junction block contains the module for the right window. The RSA grounds the circuit as long as the button is held, up to eight seconds. After eight seconds, the RSA releases the ground to the module. The window button must be released and pressed again to initiate grounding for another eight seconds. Whenever the power window modules see a ground on the control up circuit they provide power and ground to the window motor to move the window up.

If the window switches are depressed in the downward direction, the RSA provides a ground to the control down circuit in the same manner as it does to the control up circuit with the following exception: if the window down button is held for more than one second, the express down window mode is activated. In the express down mode the window will continue lowering with the window down button released. If the window button is pressed down or up for less than one second after express down has been activated, it will be cancelled. After eight seconds in either the express down mode or with the power window switch held, the RSA ungrounds the control down circuit.

The respective power window control modules provide power and ground to the window motor that it controls. The modules lower the window on that side whenever the control down circuit is grounded.

MODE SELECTION (LOCK, OFF/ACCY, AND RUN)

The mode selection buttons on the EVi are like the ignition switch on a gasoline powered vehicle. The mode is selected by pressing a button on the center console.

- Lock: This mode is comparable to ignition Off on other vehicles. Lock cannot be selected unless the shift lever is in the “P” (Park) position. A warning chime will sound if the driver’s door is opened and the vehicle is not in LOCK mode.
- Off/Accessory: This mode powers the radio, wipers and windows. Select the OFF/ACC mode if the car must be pushed. To select this mode when the vehicle is in RUN, press and hold OFF/ACC for one second. But if this is done, the drive system will shut Off and the vehicle will begin coasting to a stop. Run must be selected and the shifter must be moved to neutral and back to drive before propulsion will return.
- Run: In this mode, the vehicle drives and operates all the electrical accessories.

A valid RSA keycode must be entered to go from the LOCK mode to the OFF/ACC or RUN mode.

The RSA grounds the RUN1 and RUN2 input circuits after the proper RSA keycode is entered and the RUN button is Passed. The power moding module in the RHJB then powers the RUN1 and RUN2 circuits^ RUN1 is used for the low voltage circuits. RUN2 is used to power the devices that affect the high voltage bus. The RSA provides RUN1 voltage to the ACCY output whenever in the RUN or ACCY modes.

1 RETAINED ACCESSORY POWER (RAP)

ode entered from the gained accessory power (RAP) maintains accessory power for up to 10 minutes *after* LOCK J^ene cT a kevcoctebmton Run mode. If LOCK is selected from ACCY/OFF mode, RAP will not be present. If a door is opened, a keycode button is Passed or the LOCK button is pressed again, RAP will shut off.

RADIO WAKEUP

i JSA provides ignition voltage to the radio. This acts as a wakeup and radio power during rhe Accessory. RUN AP modes.

B

^CKLIGHTING DIM CONTROLS

The RSA e a el cluster (IPC), radio, and park brake switch provides voltage for the analog backlighting of the instTMTMy"[P g at approximately the following levels: 5.52, h 6'22, 6?2 P^ion t0 the desired dimming level The RSA outputs vohag^P decrements this voltage in \res Pon Se ;7?’ 8‘33’ 9-05, 9.76,10.49,11.21, and 11.94 volts. The RSA ncreme ’ POnse to dimmer switch inputs. This output will not be present with the parK P lam s Off.

COURTE LAMP

The court!7 C0NTR0L Inte li- Sy lghts ma be turned On due to a request frornth RSA The RSA grounds circuit 1393 to the delayed 10r la tnp module £ th£ right hand junction block, which provides power g and groun d t0 the courtesy lamps.

CamScanner

• v DT TMoindp and the dim up button is held for one second, the courtesy lights 11L

If the park lamps are not On m the RU N mode the dim up sw jtch can be held to ramp up backlight dimmin fumed On. If the park lamps; are < n i th RU an(ither second the ^^5, ljgbls Wl bc turncd On rh(eou"™XoN "Xand fro m the RSA will be turned Off if the dim down switch is depressed. The courtesy lights are not turned On by the RSA if not in the RUN mode.

RSA KEYPAD

The EVi doesn't have an ignition key and an ignition switch like a gasoline-powered vehicle Instead the RSA keycode reolaces the ienition kev and the keypad and mode selection buttons on the console replace the ignition switch. To Stl "he RUN mode on the EVl. enter the five-digit RSA keycode on the keypad while the backltghtmg is On. (The backlighting will come on for a minute when a door is opened and for 10 seconds when any RSA button is preMed). The valid code LED should come on as soon as the correct keycode is entered. Now press the RUN button. The RUN LED should come On and the vehicle will be in the RUN mode.

When a new EVi is delivered, the retailer programs the five-digit external keypad and RSA keycodes and writes the keycodes on the key tag.

SECURITY TELLTALE/DISABLE

If the correct DTC sequence is not entered into RSA or the External Keypad (EKP) within 25 key entries, the RSA grounds circuit 728 to turn on the security telltale and goes into "Passkey Disable" mode. The RSA remains in this mode for three minutes during which time the security telltale remains lit and there is no response to the EKP or the RSA keypad. When the three minutes have expired the RSA will wake up with key inputs and read up to another 25 key entries on either the EKP or the RSA keypad.

CHANGING THE RSA KEYCODE

The five-digit RSA keycode can be changed using the following procedure. During this procedure, letting 10 seconds pass without pressing a key or pressing "OFF/ACC" or "LOCK" will cancel the procedure. If this happens, all of the steps must be repeated.

1. Make sure the shift lever is in P (Park).
2. Make sure both doors are closed.
3. Using the keypad on the RSA, enter the current five-digit RSA keycode and select the RUN mode.
4. Press and hold the "1*2" key for about three seconds. The VALID code light should start to flash slowly.
5. Enter the new five digit RSA keycode. Once all five digits have been entered, the VALID code light should stop flashing and remain On for about two seconds.

If a mistake is made before all five digits have been entered, press CLEAR. The digits entered will be erased. Step 5 then can be repeated.

6. Wait for the VALID code light to flash slowly again.
7. Enter the five digits of the new RSA keycode again. Once all five digits have been entered again, the "VALID code" light should stop flashing and remain On for about two seconds.

NOTICE: The RSA user keycode should be set to all ones (1,1,1,1,1) before returning the RSA to the manufacturer for warranty.

When the "VALID code" light goes out, it means the old keycode has been erased and the new RSA keycode can be used.

I he key e d kVvcodek^TmrSd inf.Sfe.P? " nOt thC Same neW keycode entered in step 5, try to enter it two more times. If the mpSld to change the RsXk^d"CmPBl RSA kCy"de Wi" "o" be the changed. All of th"" S"pS W°Uld ha"

EXTERNAL KEYPAD

Entering the five digit external keypad keycode on the keypad by the driver unlocks both doors. Don't press the buttons with a hard object, like a key or a pen as that could damage the buttons. When using the external keypad, the keypad backlighting and the courtesy lamps come On. After five seconds without pressing a button, the keypad light will go out and the system will shut down. If this happens before the doors are unlocked the entire external keypad keycode must be entered again.

CamScanner

If 25 digits are entered without entering a valid five digit keycode, the keypad will turn Off for three minutes and the security telltale on the instrument panel will come On. Once the security telltale goes Off, the external keypad keycode can be re-entered. While the security telltale is On, neither the external keypad nor the RSA keypad key DTCs will operate.The RSA provides five volts to the external keypad at all times, even when the RSA is in sleep mode. The external keypad provides a return voltage to the RSA on the appropriate circuit when a given keypad button is depressed.

EXTERNAL KEYPAD KEYCODE

The external keypad unlocks both doors when the proper keycode is entered. When a new EV1 is delivered, the retailer receives a five digit keycode to open the doors and enable RUN mode. The retailer files this keycode and gives the five digit external keypad keycode to the first owner. The keycode can then be changed by using the following procedure. Use the keypad on the RSA inside the vehicle to follow this procedure—not the external keypad.

CHANGING THE EXTERNAL KEYPAD KEYCODE

During this procedure, letting 10 seconds pass without pressing a key or pressing OFF/ACC or LOCK will cancel the procedure. If this happens, all of the steps must be repeated.

1. Make sure the shift lever is in P (Park).
2. Make sure both doors are closed.
3. ■ Using the RSA keypad, enter the five digit RSA keycode and select the RUN mode.
4. Press and hold the "3*4" key on the RSA keypad for about three seconds. The VALID CODE light should start to flash slowly.
5. Enter the five digit new external keypad keycode. Once all five digits have been entered, the VALID CODE light should stop flashing and remain On for about two seconds.

If you make a mistake before all five digits have been entered, press CLEAR. The digits you entered will be erased, ai nd you can then repeat step 5.

6 Wait for the VALID CODE light to flash slowly again.

*7- Enter the five digits of the new external keypad keycode again. Once all five digits have been entered again, the VALID CODE light should stop flashing and remain On for about two seconds.

When the VALID CODE light goes out, it means the old keycode has been erased and the new external keypad keycode can be used.

If the keycode entered in step 7 is not the same new keycode entered in step 5, try to enter it two more times. If the Keycode isn't matched after three attempts the external keypad keycode will not be changed. All of these steps would have to be repeated to change the external keypad keycode.

°OAST DOWN FEATURE

The EV1 is more aerodynamically efficient and rolls more easily than a gasoline-powered vehicle. When the EV1 is in "D" (Drive) and you take your foot off the accelerator pedal, the EV1 coasts freely. The coast down feature causes the EV1 to slow down more quickly. It produces an engine braking feel similar to a gasoline-powered vehicle with an automatic transmission.

Jnlh"1 the feature On> Press the "COAST-DOWN" button on the side of the shift lever. The "COAST-DOWN LED thp —on, press me center console indicates when the coast-down feature is On.

The coast-down teatnre remains in the slate last selected (On or Off) until the button is pressed again, even if the veUlcle is tnm^ rvff] AX- is turned Off and back On.

CAUTION: THE COAST-DOWN FEATURE CAN BE DANGEROUS ON SLIPPERY ROADS. ON SLIPPERY ROADS, FAST CHANGES IN TIRE TRACTION CAN CAUSE THE VEHICLE TO SLIDE AND YOU COULD LOSE CONTROL. DON'T USE THE COAST-DOWN FEATURE ON SLIPPERY ROADS.

CamScanner

CABIN PRECONDITIONING

Preconditioning provid" b, ^dd have befn used to get the vehicle to a comfortable temperature. conserve batten power a th

During preconditioning, the cabin 'vll be heated or cooe l d as needed based on the outside temperature and the ctto air temperature. PreeoudtUoming must be n b e a led each time you want to use R .

XSt'ion X'EVI SSttep "ddle must a* mserted into the charge port and the battery charge must be above 80% before preconditioning begins, or it will not come On.

To precondition the cabin of the EVi:

1. Switch the vehicle to RUN.
2. Display the preconditioning-complete time on the cluster by pressing the HR (hour) or MN (minute) button on the center console. The preconditioning-complete time will be preceded by a P and it will remain on the display for about five seconds.
3. Set (or verify) the preconditioning-complete time. This is the time when the preconditioning will be complete not the time the preconditioning will start. (Preconditioning will begin about 15 minutes prior to the preconditioning-complete time.) Press the HR or MN button briefly to advance the set time one hour or minute. Holding the HR or MN button causes the setting to keep advancing until the button is released.
4. Display the current time by pressing the button that looks like a clock. The current time will be preceded by a D and will remain on the display for about five seconds.
5. Make sure the current time is correct. If it is not, set the correct time. By pressing the button that looks like a clock and the HR or MN button briefly, the setting will advance one hour or minute. When the button that looks like a clock and the HR or MN button is pressed and held, the setting will keep advancing until the button is released. Changing this time setting doesn't affect the time setting on the radio. The radio clock is set separately.
6. Turn on the pre-conditioning system by pressing the pre-condition ON button on the center console. The light above the ON button will come On. This light indicates that pre-conditioning has been set and will be completed at the pre-conditioning-complete time that was set (provided that steps 7 and 8 are completed). It doesn't indicate that pre-conditioning is taking place.
7. Switch the vehicle to LOCK.

8" cha^g Ve^e *Sn 1 akeady connecte d t0 a wall or floor mounted charging station, insert the charge paddle into the

You can turn o? P r econd>t>oning at any time by switching the ^bicle to RUN and pressing the pre-condition ON button. The light above the ON button will go Off.

MI/KM BUTTON

The MI/KM button toggles the instrument panel cluster (IPC) between English units and Metric units.

TRIP/RESET

trip b n toggles the odometer between trip

Sag'emTbe"1T50W ?oMr wn"&P in the odometer mode, the trip

19,999.9 miles or 32,186.8 km. If battery power is lwt to the ifc.'th ""/d The nP odoraetcr rcJls over to zero at odometer will read up to 500,000 km 0 tne trip odometer will reset to zero. The season

GAGE BUTTON

Pressin the ga buttc gles b ween charge level and power use d Mays. The charge level display appears similar to a di Jtal fud^gedKdeven^ horizontal bars, ea becomes very low, the battery life telltale w U come n? r®pres e ntin g about 9% of available charge. If the charge leve the gage button is pressed while showing charge level and a chim^wi11 sound once every five minutes as a warning- power is being used up. This display provides instant feedh 15 pay changes to power use - an indication of how q^ulC^/ and featu e^en ab?d on the car Power Sv S?? driver so tbeV can be aware of how driving hatHts the range traveled on one charge. Powe^ us ca also h £mng this gage a driver can modifv their driving to maxt^ much power is being put into the batteries So be Viewed duTMg charging - in this case the bars indicate how

CLIMATE CONTROL SYSTEM BUTTONS

As each button is pressed the indicator light next o u t l me n. the system

SpST1„h'iDdiCa,Or ligh' wi"st*yOn. K the'u.SoJlSoS'off'/h "CU"atCCoD'r01 gni goes Off, the system was unable to complete the '("hT''"1

CamScanner

CLIMATE CONTROL MODES

HEAT – Press this button for warmer air. There are three temperature settings. Press the button once to select the lowest setting, twice for the middle setting, and three times for the highest setting. If the button is pressed again the system will return to the lowest setting. The lights to the right of the button will show which setting is selected.

VENT – Press this button for air that is at the outside air temperature.

AIR CONDITIONING – Press this button for cooler air. There are three temperature settings. Press the button once to select the lowest setting, twice for the middle setting, and three times for the highest setting. If you continue to press the button, the system will cycle through the three settings again. The indicator lights to the right of the button will show which setting is selected.

OFF – Press this button to turn Off the climate control system. The ventilation system will still supply some outside air when the vehicle is moving.

AIRFLOW CONTROLS

L2WER - Press this button to direct most of the air through the lower vents.

BbLEYEL - Press this button to direct the air through both the upper and lower vents.

OFEER - Press this button to direct most of the air through the upper vents in the instrument panel and through the vents in the doors.

FRESH AIR - Press this button to bring outside air into the vehicle.

RECIRCULATE — Press this button to recirculate most of the air inside the vehicle. Use this setting when entering a smoky or dusty area. Your air conditioning system will cool the air better when this setting is used.

FAN CONTROLS

FAN - Press these buttons to select the fan speed. There are five fan settings. Press the upper button for more air flow, and press the lower button for less air flow. If you press and hold either button the system will cycle through the five settings. The indicators to the left of the button will show which setting is selected.

DEFOGGING AND DE-ICING

Both the windshield and the rear window can be electrically heated to clear them of fog, frost, snow, or ice. If the windshield ever becomes cracked, the heating element won't work and the service soon warning light will come On.

DEFOG – Press this button to defog the windshield on cold, humid days. The system will heat the windshield for five minutes, then it will cycle Off for three minutes and On for three minutes repeatedly to keep the windshield clear of fog. The system may be turned Off at any time by pressing the button again. For best driving range, turn Off defog when it is no longer needed.

DE-ICE– Press this button to clear the windshield of frost, snow or ice. The system will heat the windshield for 10 minutes, then it will automatically shut Off. The system may be turned Off sooner by pressing the button again. If the windshield is still not completely cleared, the button may be pressed again to turn on DE-ICE for an additional 10 minutes.

REAR – Press this button to clear the rear window of fog, frost, snow or ice. The system will heat the rear window for 10 minutes, then it will automatically shut Off. The system may be turned Off at any time by pressing the button again. If rear defog is desired beyond the 10 minutes, it may be reselected by pressing the button again.

KEYMINDER

The RSA signals the IPC whenever the car is in the RUN or accessory mode over the keyminder circuit. Whenever a door is open, the IPC tries to put out battery voltage over the keyminder circuit. If the RSA is in RUN or ACCY mode it pulls the keyminder circuit down to about 1.5-2.0 volts. This tells the IPC to turn On the keyminder warning.

SHIFTER

The shifter operates in a similar manner to shifters on other vehicles. In Park the park pawl and the parking brakes are engaged. The brake pedal must be depressed to release the BTSI solenoid before the shifter will move out of Park. If power is lost the shifter will not move out of Park. In reverse the voltage to the motor is reversed to move the vehicle in the reverse direction. In neutral the parking pawl is released and there is no power to the motor. In Drive, voltage is available to the motor to move the vehicle in the forward direction. For more information on these positions refer to the "Propulsion" service manual.

CamScanner

BTSI CONTROL

The BTSI (Brake Transmission Shift Interlock) is housed in the RSA. It receives power from the RUNl power f is pulled to ground by the PCM when the brake is applied, if the PCM determines the charge port paddle is not , '' charge port. When the BTSI solenoid is not powered, the shifter is prevented from moving out of park.

CHECK TIRE PRESSURE RESET

The RSA performs the calculations to determine if *a* low tire pressure condition is present. If the low tire pre switch is in any mode, the RSA recalibrates the tire speed comparisons. Refer to "Check Tire Pressure System'- more information on this system.

RUN/LOCK SHIFTER ASSEMBLY (RSA) TROUBLE TREE INDEX

- Chart 1 - RSA Inoperative/ No Run Mode
- Chart 2 - Vehicle Stuck in Run Mode
- Chart 3 - No Accessory Mode
- Chart 4 - Retained Accessory Power (RAP) Inoperative
- Chart 5 - Accessory Mode/RAP Stays On in Lock Mode
- Chart 6 — Security Inoperative
- Chart 7 -External Keypad (EKP)/Backlighting Inoperative
- RSA DTC 11 - Serial Data Loss from BTCM
- RSA DTC 12 - Serial Data Loss from HTCM
- RSA DTC 13 - Serial Data Loss from PCM
- RSA DTC 23 - Tire Pressure — Low or High
- RSA DTC 33 - Tire Reports Invalid Signal

CamScanner

RSAINOPERATIVE/NO RUN MODE

CHART 1

(PAGE 1 OF 2)

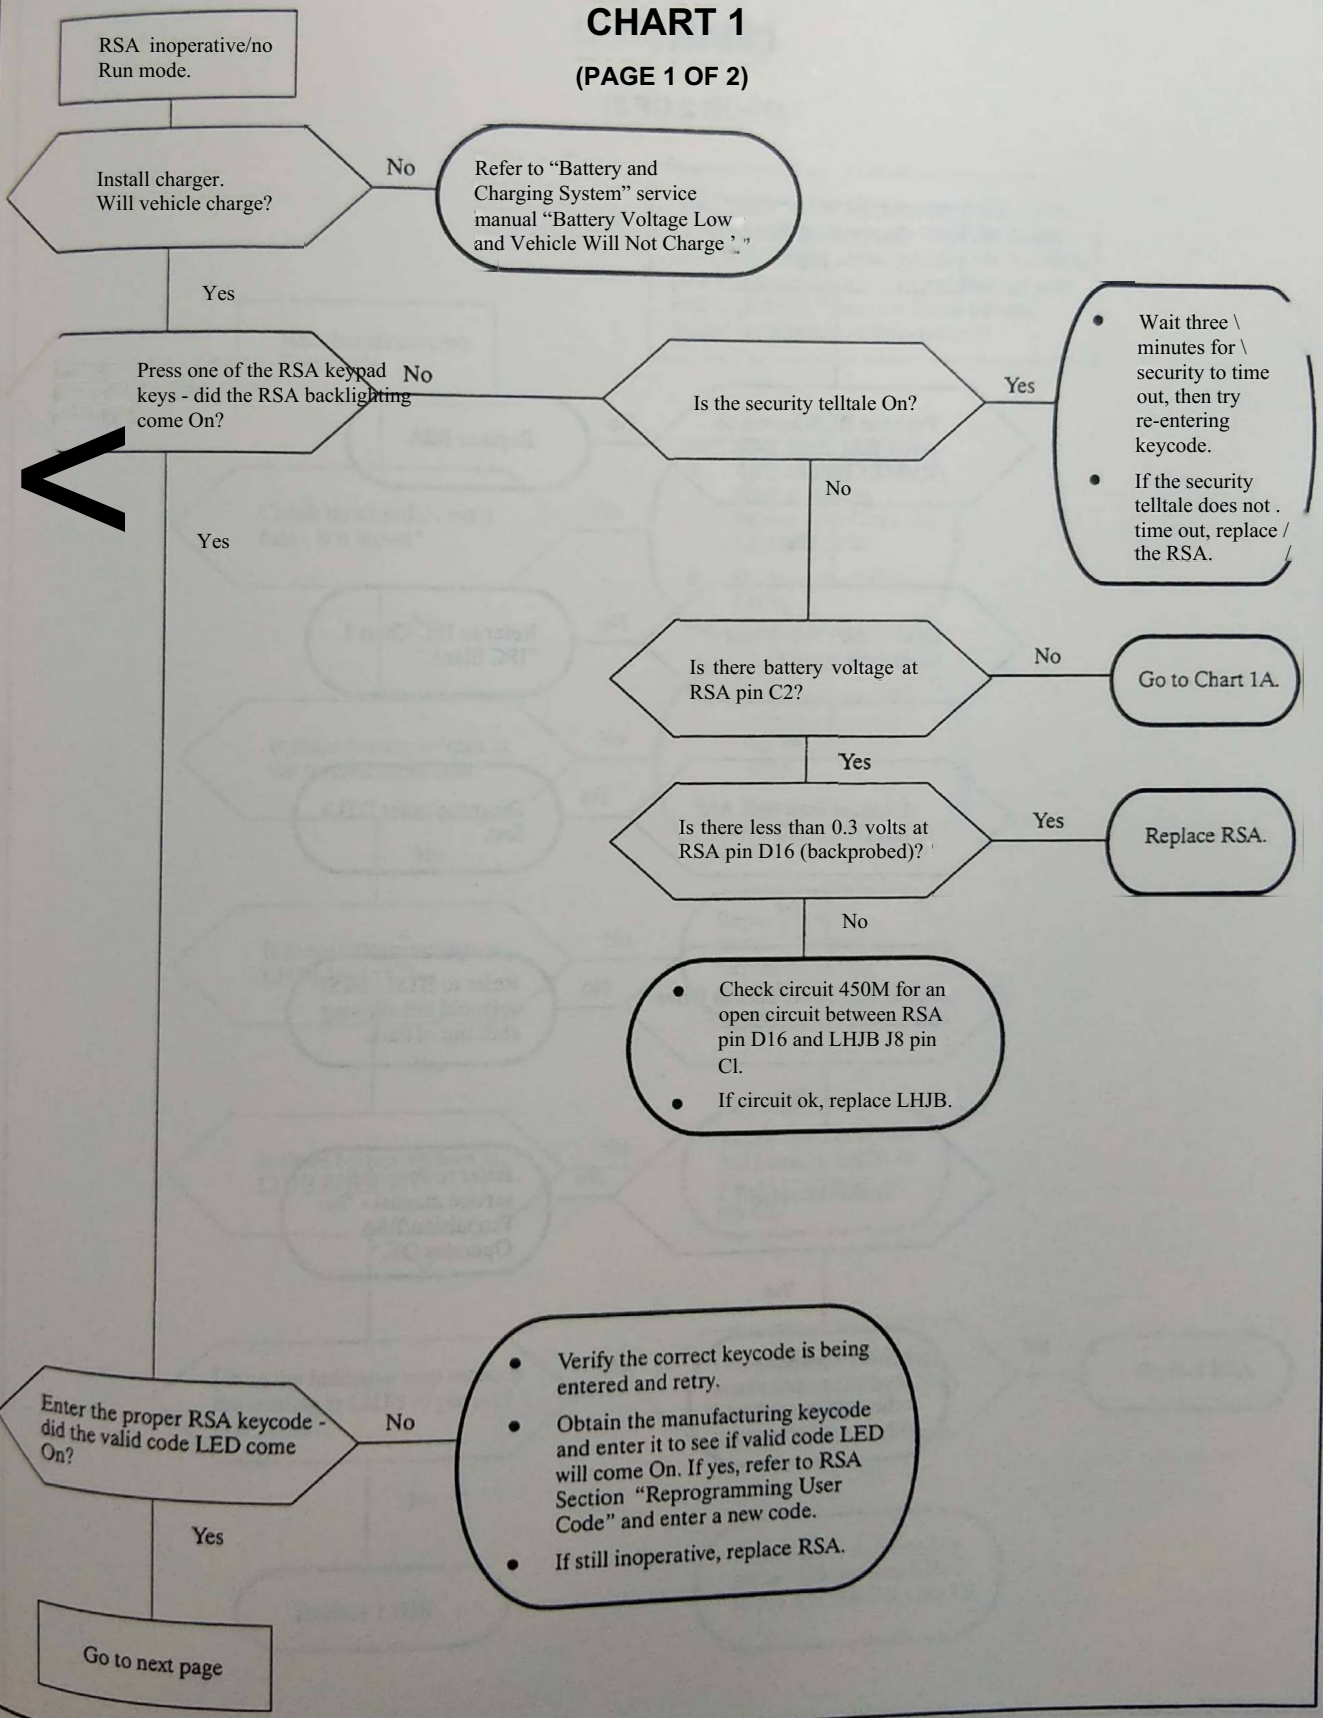
RSA inoperative/no Run mode.
Install charger. Will vehicle charge?
No
Refer to "Battery and Charging System" service manual "Battery Voltage Low and Vehicle Will Not Charge".
Yes
Press one of the RSA keypad keys - did the RSA backlighting come On?
No
Is the security telltale On?
Yes
Wait three minutes for security to time out, then try re-entering keycode.
If the security telltale does not time out, replace the RSA.
No
Yes
Is there battery voltage at RSA pin C2?
No
Go to Chart 1A.
Yes
Is there less than 0.3 volts at RSA pin D16 (backprobed)?
Yes
Replace RSA.
No
Check circuit 450M for an open circuit between RSA pin D16 and LHJB J8 pin Cl.
If circuit ok, replace LHJB.
Enter the proper RSA keycode - did the valid code LED come On?
No
Verify the correct keycode is being entered and retry.
Obtain the manufacturing keycode and enter it to see if valid code LED will come On. If yes, refer to RSA Section "Reprogramming User Code" and enter a new code.
If still inoperative, replace RSA.
Yes
Go to next page

RSA INOPERATIVE/NO RUN MODE

CHART 1

(PAGE 2 OF 2)

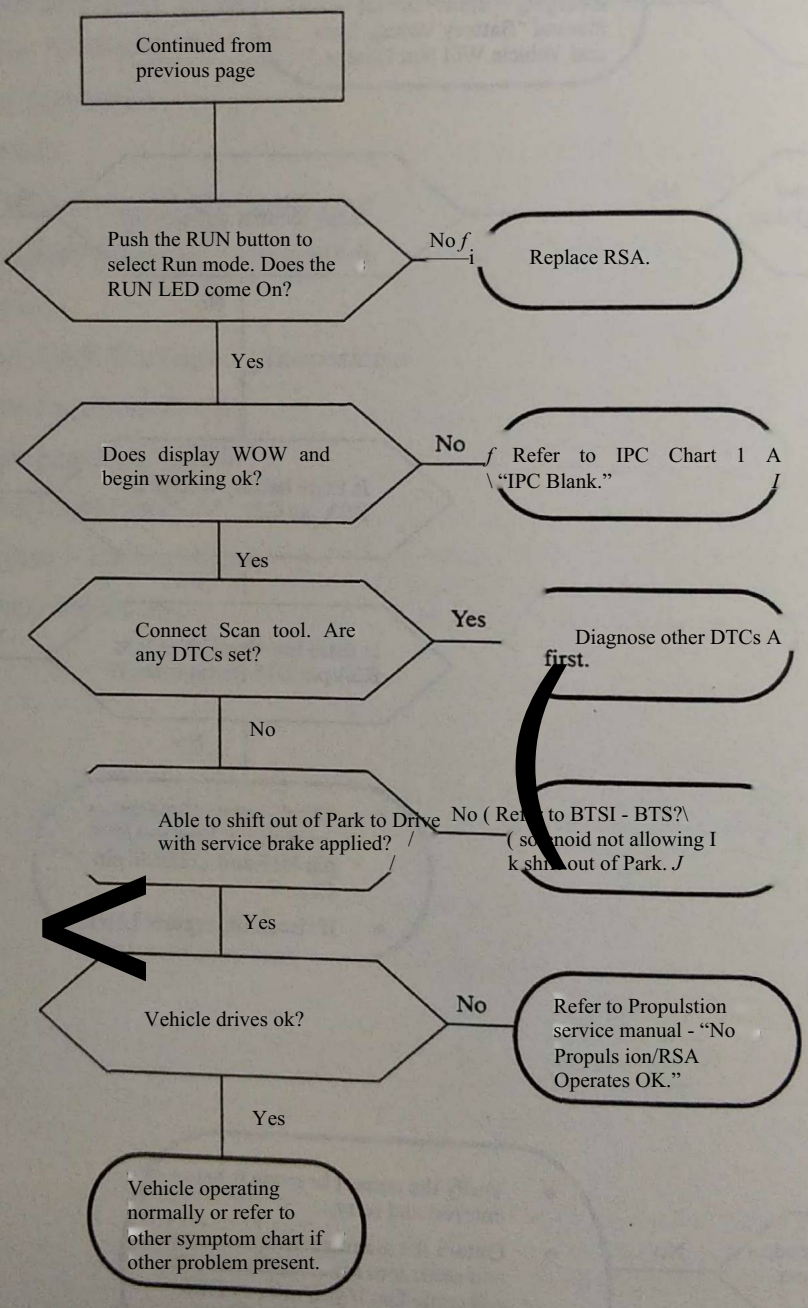
Continued from previous page
Push the RUN button to select Run mode. Does the RUN LED come On?
No
Replace RSA.
Yes
Does display WOW and begin working ok?
No
Refer to IPC Chart 1 A "IPC Blank."
Yes
Connect Scan tool. Are any DTCs set?
Yes
Diagnose other DTCs A first.
No
Able to shift out of Park to Drive with service brake applied?
No
to BTSI - BTS?
out of Park.
Yes
Vehicle drives ok?
No
Refer to Propulstion service manual - "No Propuls ion/RSA Operates OK."
Yes
Vehicle operating normally or refer to other symptom chart if other problem present.

CamScanner

RSA INOPERATIVE/NO RUN MODE

CHART 1A

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap'' installation in this manual.)

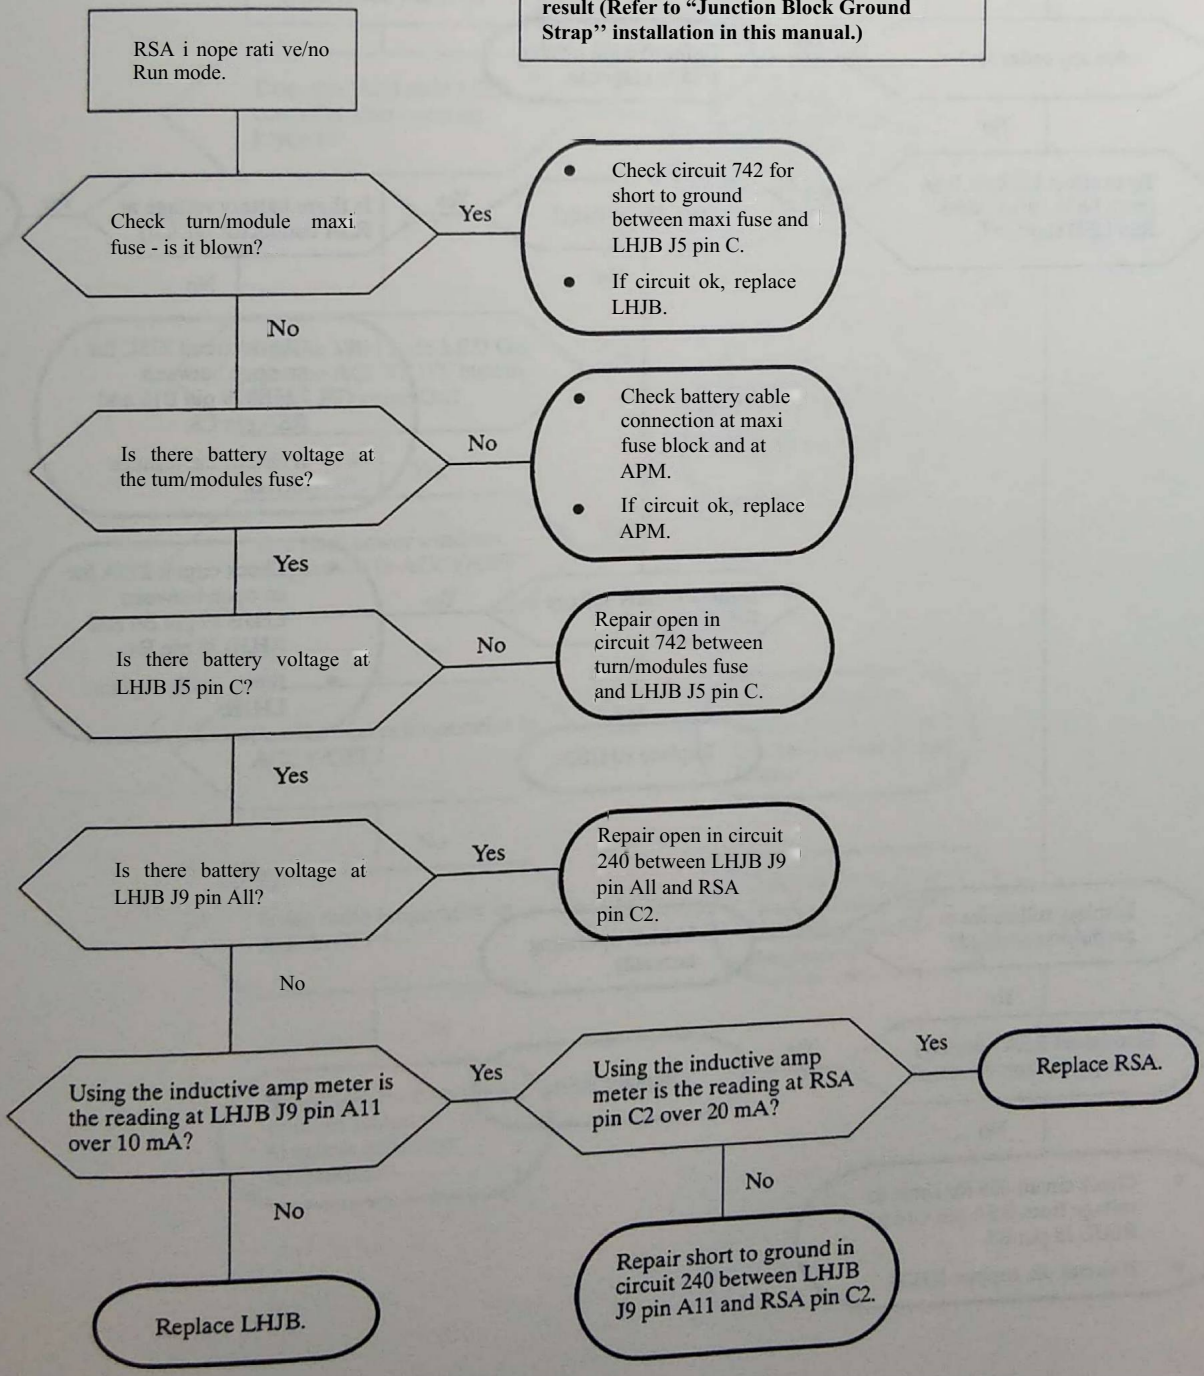
RSA i nope rati ve/no Run mode.
Check turn/module maxi fuse - is it blown?
Yes
Check circuit 742 for short to ground between maxi fuse and LHJB J5 pin C.
If circuit ok, replace LHJB.
No
Is there battery voltage at the tum/modules fuse?
No
Check battery cable connection at maxi fuse block and at APM.
If circuit ok, replace APM.
Yes
Is there battery voltage at LHJB J5 pin C?
No
Repair open in circuit 742 between turn/modules fuse and LHJB J5 pin C.
Yes
Is there battery voltage at LHJB J9 pin All?
Yes
Repair open in circuit 240 between LHJB J9 pin All and RSA pin C2.
No
Using the inductive amp meter is the reading at LHJB J9 pin A11 over 10 mA?
Yes
Using the inductive amp meter is the reading at RSA pin C2 over 20 mA?
Yes
Replace RSA.
No
Repair short to ground in circuit 240 between LHJB J9 pin A11 and RSA pin C2.
No
Replace LHJB.

CamScanner

VEHICLE STUCK IN RUN MODE

CHART 2

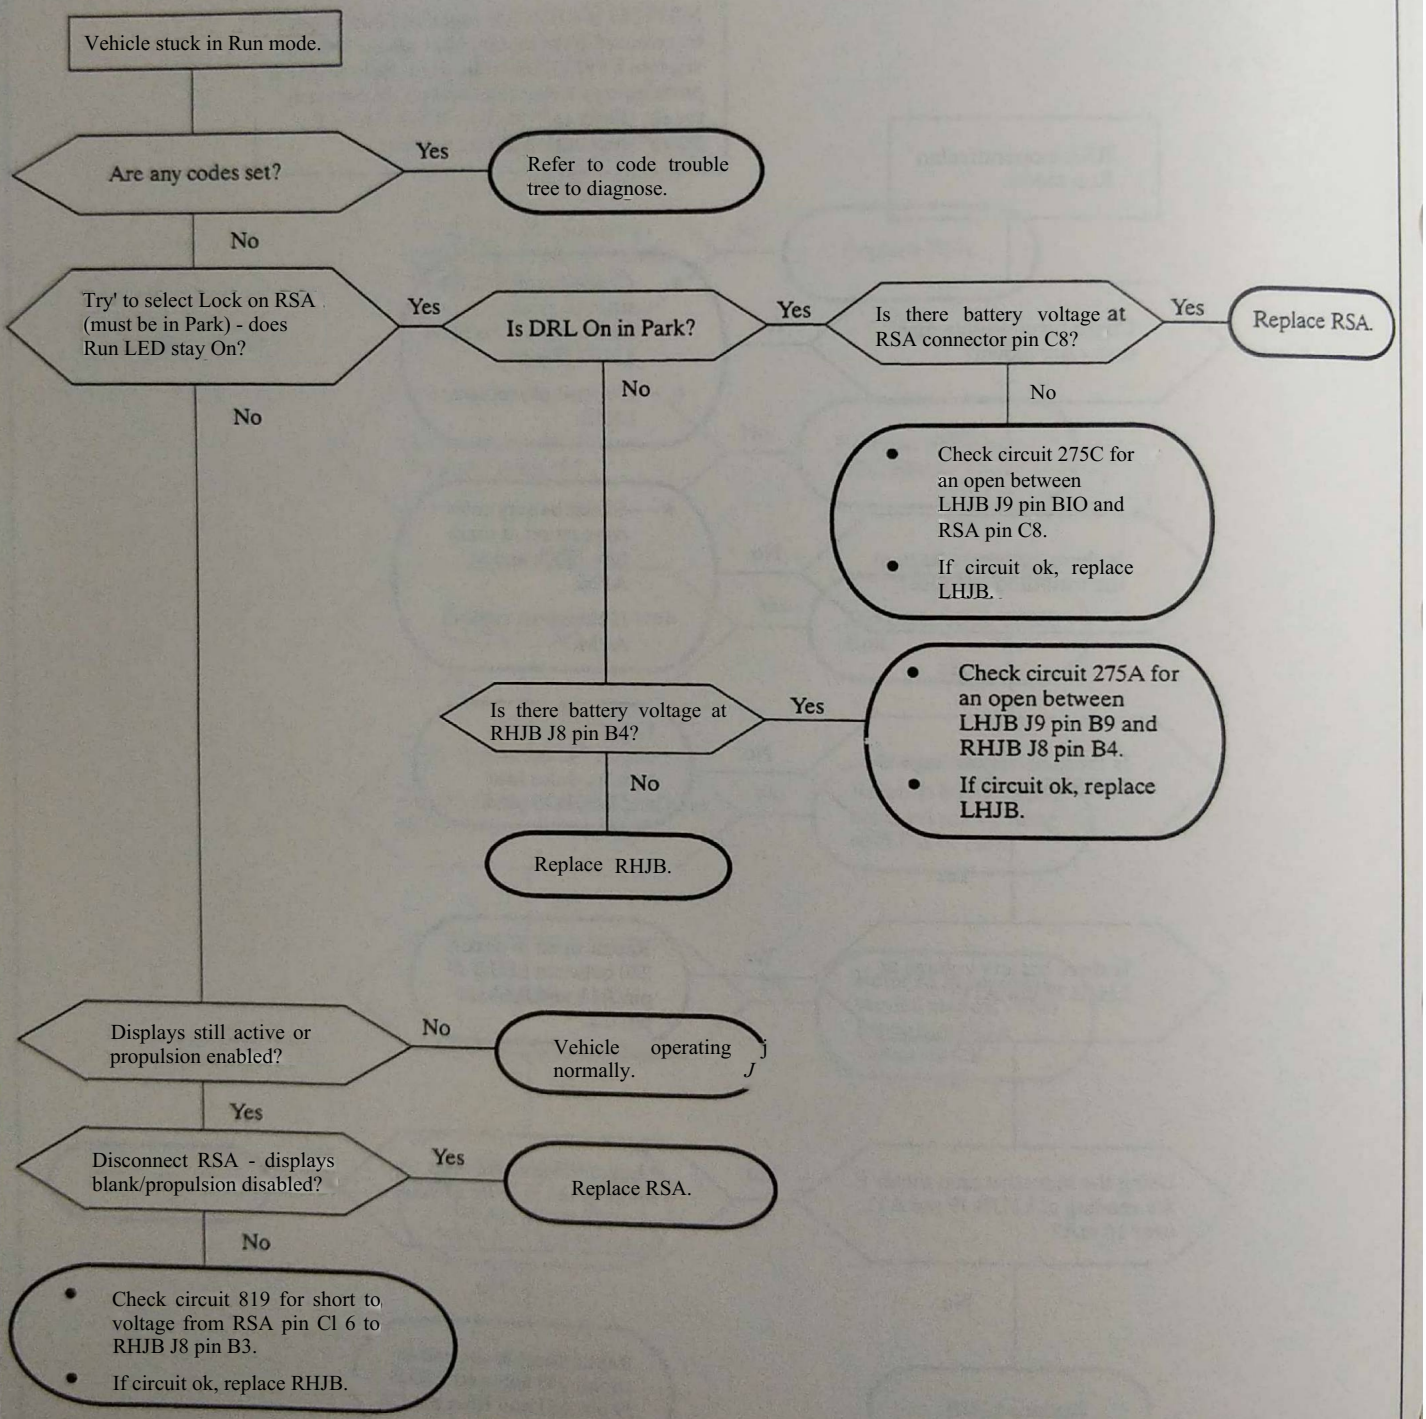
Vehicle stuck in Run mode.
Are any codes set?
Yes
Refer to code trouble tree to diagnose.
No
Try' to select Lock on RSA (must be in Park) - does Run LED stay On?
Yes
Is DRL On in Park?
Yes
Is there battery voltage at RSA connector pin C8?
Yes
Replace RSA.
No
No
No
Check circuit 275C for an open between LHJB J9 pin BIO and RSA pin C8.
If circuit ok, replace LHJB.
Is there battery voltage at RHJB J8 pin B4?
Yes
Check circuit 275A for an open between LHJB J9 pin B9 and RHJB J8 pin B4.
If circuit ok, replace LHJB.
No
Replace RHJB.
Displays still active or propulsion enabled?
No
Vehicle operating normally.
Yes
Disconnect RSA - displays blank/propulsion disabled?
Yes
Replace RSA.
No
Check circuit 819 for short to voltage from RSA pin Cl 6 to RHJB J8 pin B3.
If circuit ok, replace RHJB.

CamScanner

NO ACCESSORY MODE

CHART 3

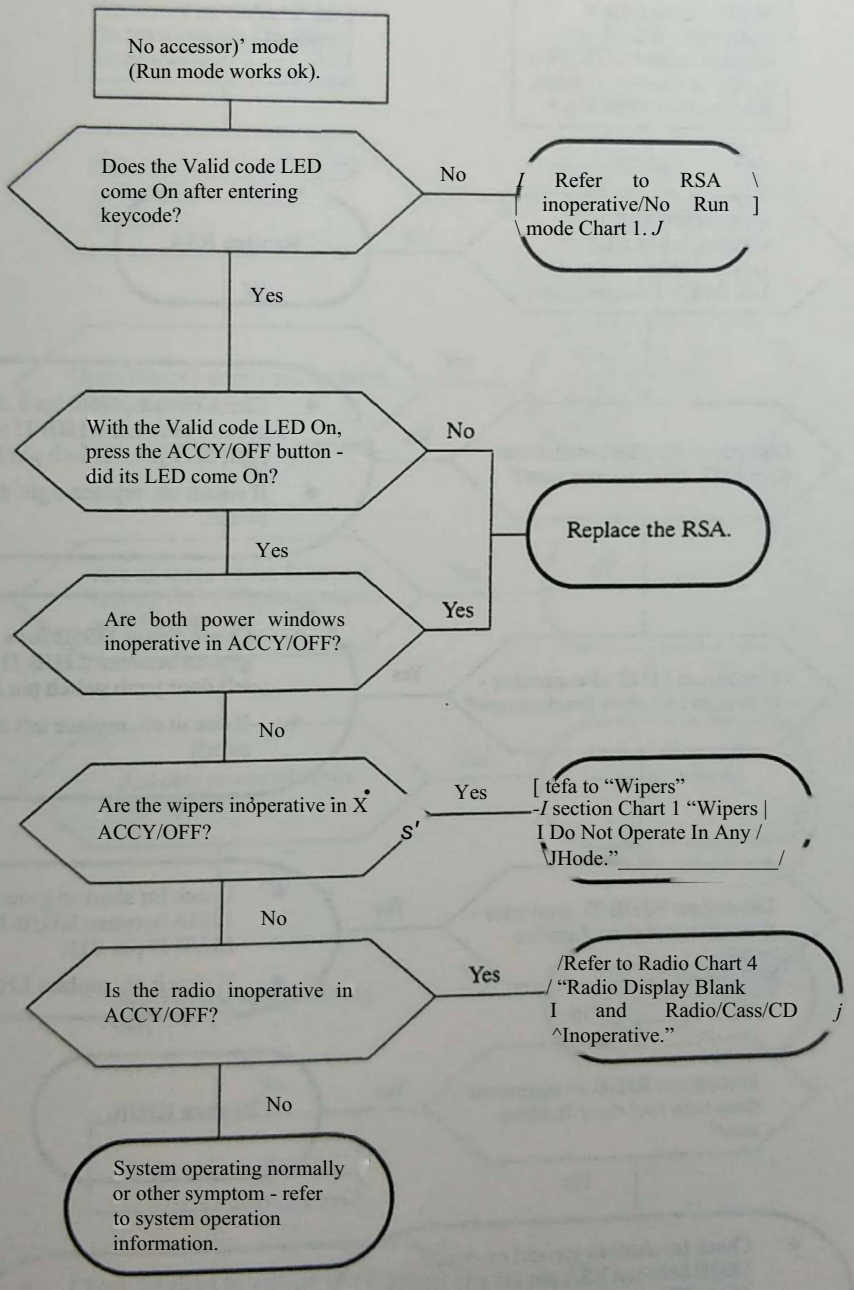
No accessor)' mode (Run mode works ok).
Does the Valid code LED come On after entering keycode?
No
Refer to RSA inoperative/No Run mode Chart 1.
Yes
With the Valid code LED On, press the ACCY/OFF button - did its LED come On?
No
Replace the RSA.
Yes
Are both power windows inoperative in ACCY/OFF?
Yes
No
Are the wipers inoperative in ACCY/OFF?
Yes
[tefa to "Wipers" section Chart 1 "Wipers | I Do Not Operate In Any / JHode."
No
Is the radio inoperative in ACCY/OFF?
Yes
/Refer to Radio Chart 4 "Radio Display Blank and Radio/Cass/CD ^Inoperative."
No
System operating normally or other symptom - refer to system operation information.

CamScanner

RETAINED ACCESSORY POWER (RAP) INOPERATIVE

CHART 4

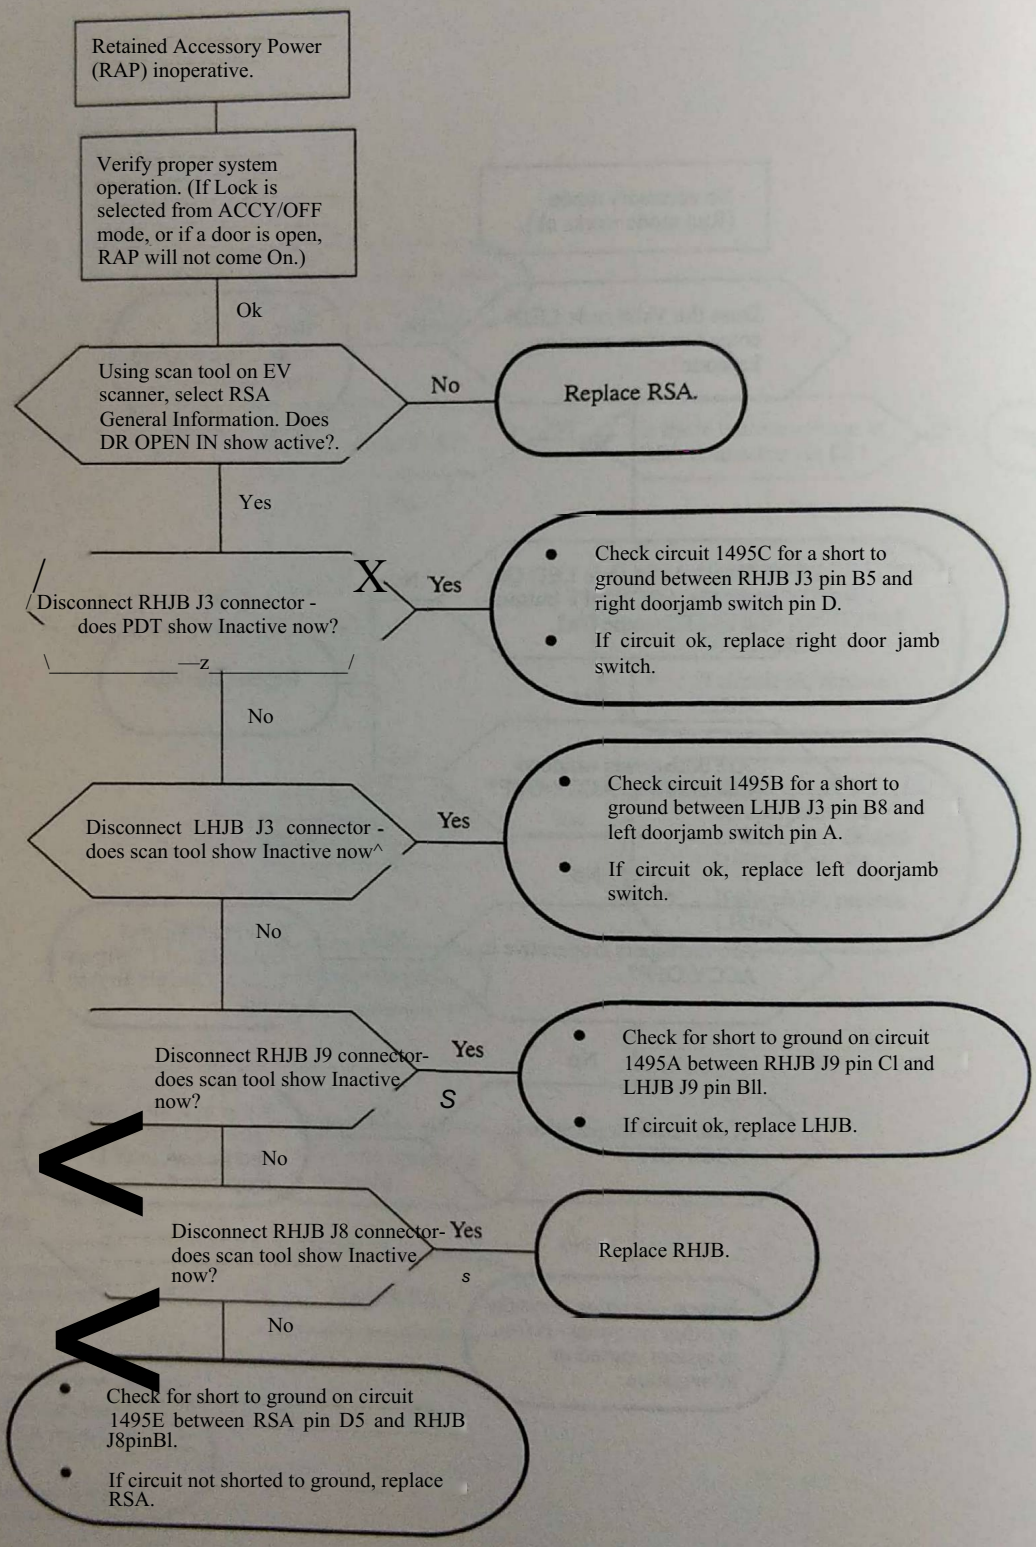
Retained Accessory Power (RAP) inoperative.
Verify proper system operation. (If Lock is selected from ACCY/OFF mode, or if a door is open, RAP will not come On.)
Ok
Using scan tool on EV scanner, select RSA General Information. Does DR OPEN IN show active?.
No
Replace RSA.
Yes
Disconnect RHJB J3 connector - does PDT show Inactive now?
Yes
Check circuit 1495C for a short to ground between RHJB J3 pin B5 and right doorjamb switch pin D.
If circuit ok, replace right door jamb switch.
No
Disconnect LHJB J3 connector - does scan tool show Inactive now^
Yes
Check circuit 1495B for a short to ground between LHJB J3 pin B8 and left doorjamb switch pin A.
If circuit ok, replace left doorjamb switch.
No
Disconnect RHJB J9 connector- does scan tool show Inactive now?
Yes
Check for short to ground on circuit 1495A between RHJB J9 pin Cl and LHJB J9 pin Bll.
If circuit ok, replace LHJB.
No
Disconnect RHJB J8 connector- does scan tool show Inactive now?
Yes
Replace RHJB.
No
Check for short to ground on circuit 1495E between RSA pin D5 and RHJB J8pinBl.
If circuit not shorted to ground, replace RSA.

CamScanner

ACCESSORY MODE/RAP STAYS ON IN LOCK MODE

CHART 5

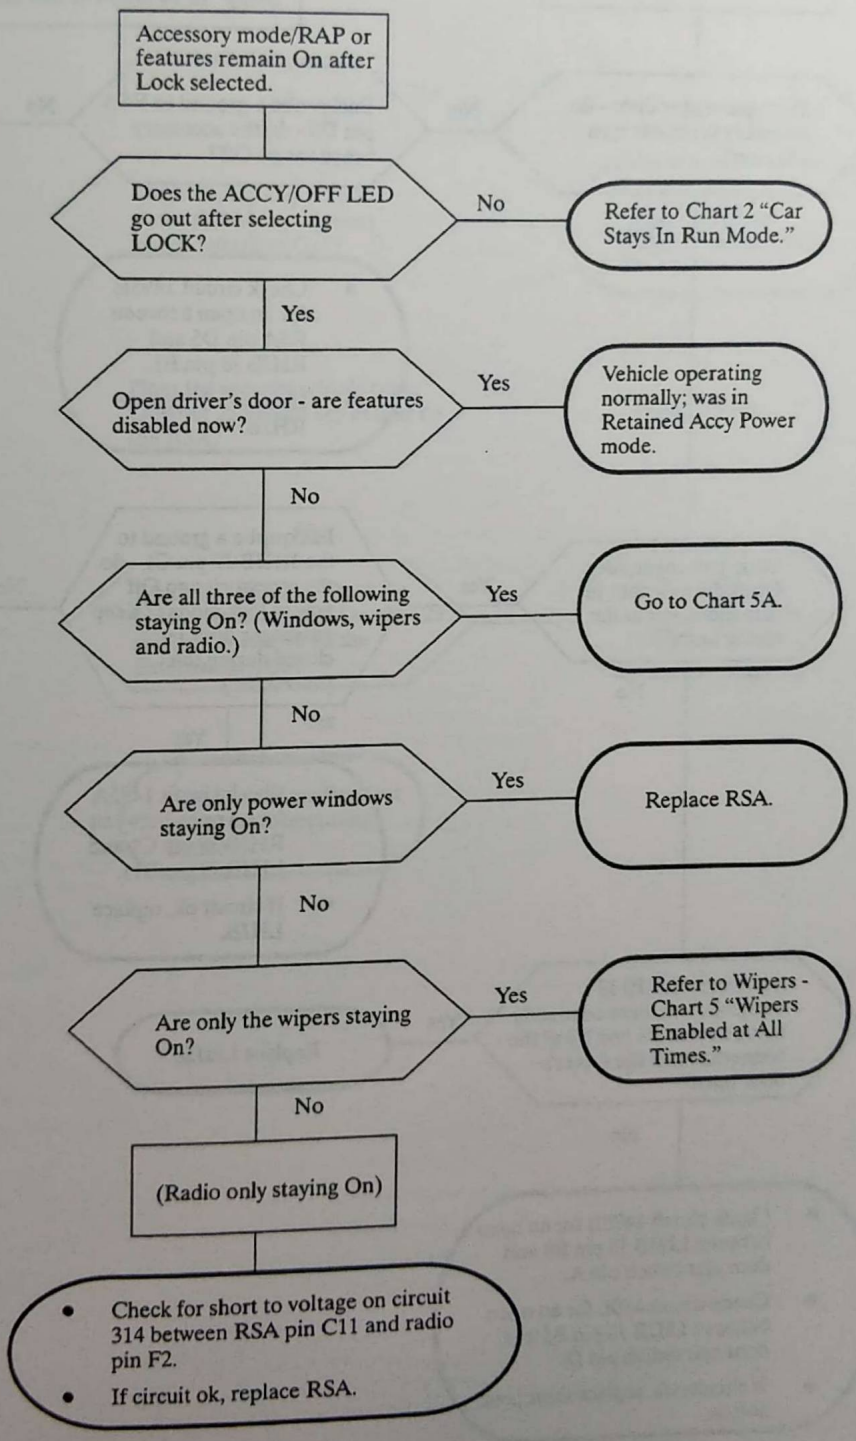
Accessory mode/RAP or features remain On after Lock selected.
Does the ACCY/OFF LED go out after selecting LOCK?
No
Refer to Chart 2 "Car Stays In Run Mode."
Yes
Open driver's door - are features disabled now?
Yes
Vehicle operating normally; was in Retained Accy Power mode.
No
Are all three of the following staying On? (Windows, wipers and radio.)
Yes
Go to Chart 5A.
No
Are only power windows staying On?
Yes
Replace RSA.
No
Are only the wipers staying On?
Yes
Refer to Wipers - Chart 5 "Wipers Enabled at All Times."
No
(Radio only staying On)
• Check for short to voltage on circuit 314 between RSA pin C11 and radio pin F2.
• If circuit ok, replace RSA.

CamScanner

ACCESSORY MODE/RAP STAYS ON IN LOCK MODE

CHART 5A

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

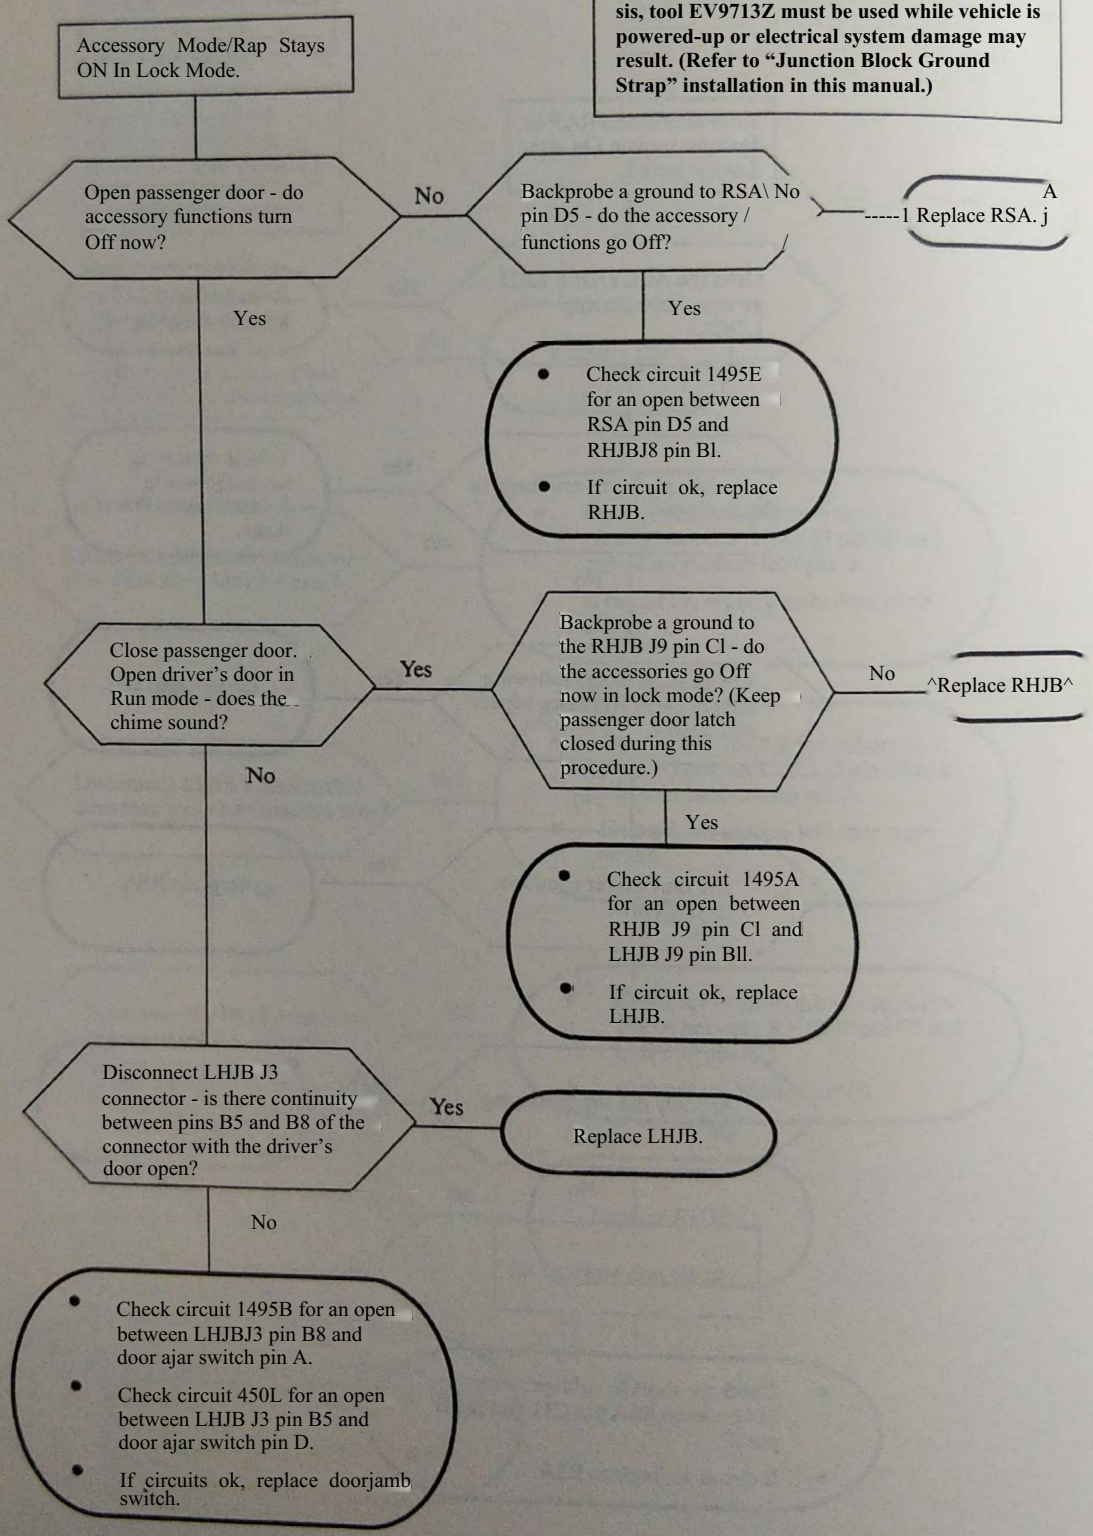
Accessory Mode/Rap Stays ON In Lock Mode.
Open passenger door - do accessory functions turn Off now?
No
Backprobe a ground to RSA\ No pin D5 - do the accessory / functions go Off?
A
-----1 Replace RSA. j
Yes
Yes
• Check circuit 1495E for an open between RSA pin D5 and RHJBJ8 pin Bl.
• If circuit ok, replace RHJB.
Close passenger door. Open driver's door in Run mode - does the chime sound?
Yes
Backprobe a ground to the RHJB J9 pin Cl - do the accessories go Off now in lock mode? (Keep passenger door latch closed during this procedure.)
No
^Replace RHJB^
No
Yes
• Check circuit 1495A for an open between RHJB J9 pin Cl and LHJB J9 pin Bll.
• If circuit ok, replace LHJB.
Disconnect LHJB J3 connector - is there continuity between pins B5 and B8 of the connector with the driver's door open?
Yes
Replace LHJB.
No
• Check circuit 1495B for an open between LHJBJ3 pin B8 and door ajar switch pin A.
• Check circuit 450L for an open between LHJB J3 pin B5 and door ajar switch pin D.
• If circuits ok, replace doorjamb switch.

CamScanner

SECURITY INOPERATIVE

CHART 6

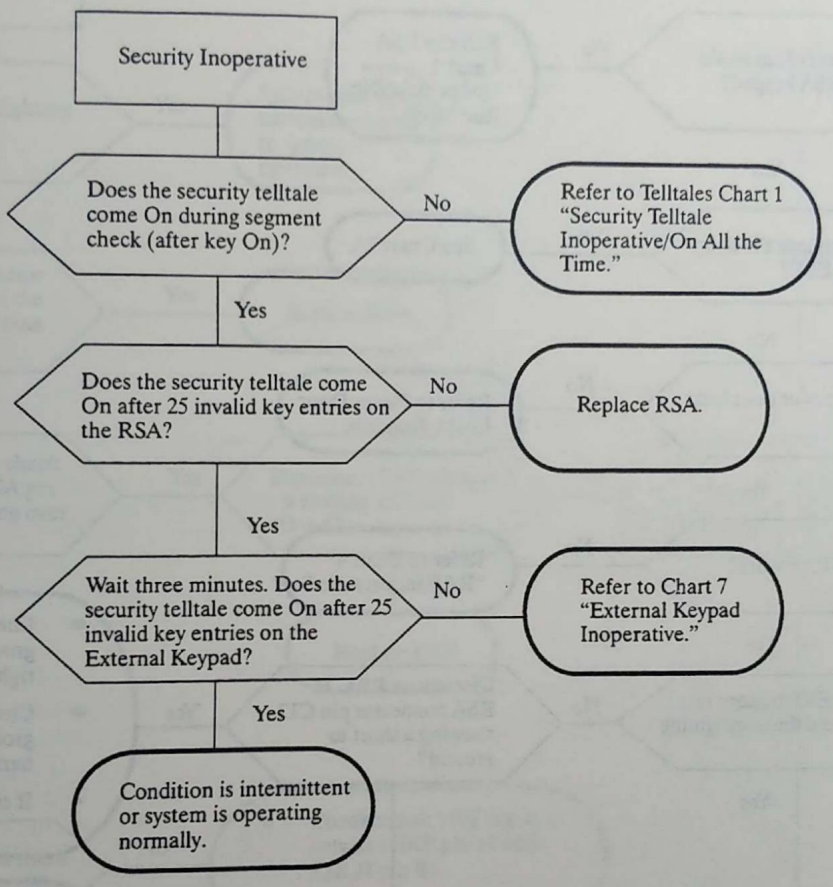
Security Inoperative
Does the security telltale come On during segment check (after key On)?
No
Refer to Telltales Chart 1 "Security Telltale Inoperative/On All the Time."
Yes
Does the security telltale come On after 25 invalid key entries on the RSA?
No
Replace RSA.
Yes
Wait three minutes. Does the security telltale come On after 25 invalid key entries on the External Keypad?
No
Refer to Chart 7 "External Keypad Inoperative."
Yes
Condition is intermittent or system is operating normally.

CamScanner

EXTERNAL KEYPAD (EKP)/BACKLIGHTING INOPERATIVE

CHART 7

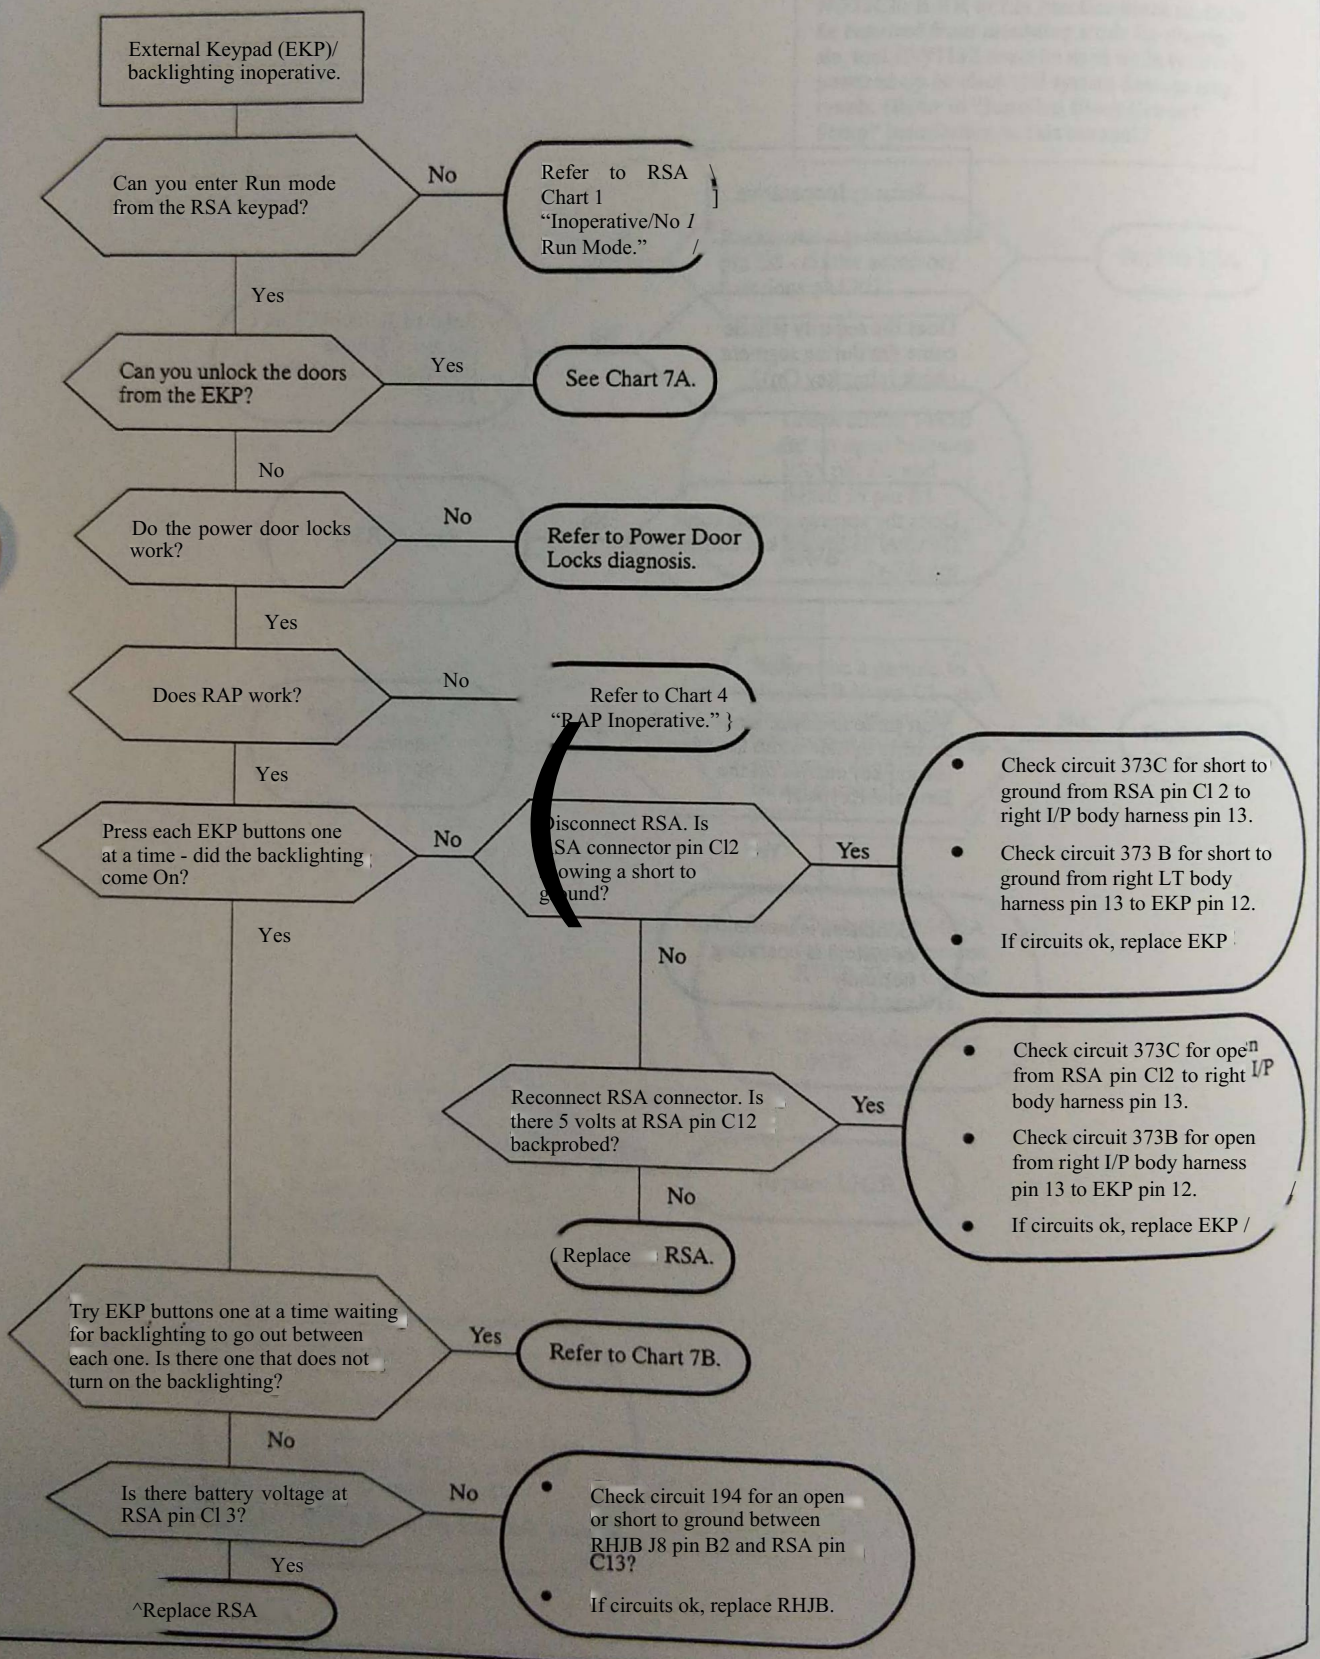
External Keypad (EKP)/ backlighting inoperative.
Can you enter Run mode from the RSA keypad?
No
Refer to RSA Chart 1 "Inoperative/No Run Mode."
Yes
Can you unlock the doors from the EKP?
Yes
See Chart 7A.
No
Do the power door locks work?
No
Refer to Power Door Locks diagnosis.
Yes
Does RAP work?
No
Refer to Chart 4 "RAP Inoperative."
Yes
Press each EKP buttons one at a time - did the backlighting come On?
No
Disconnect RSA. Is RSA connector pin Cl2 showing a short to ground?
Yes
Check circuit 373C for short to ground from RSA pin Cl 2 to right I/P body harness pin 13.
Check circuit 373 B for short to ground from right LT body harness pin 13 to EKP pin 12.
If circuits ok, replace EKP
No
Reconnect RSA connector. Is there 5 volts at RSA pin C12 backprobed?
Yes
Check circuit 373C for open from RSA pin Cl2 to right I/P body harness pin 13.
Check circuit 373B for open from right I/P body harness pin 13 to EKP pin 12.
If circuits ok, replace EKP
No
Replace RSA.
Yes
Try EKP buttons one at a time waiting for backlighting to go out between each one. Is there one that does not turn on the backlighting?
Yes
Refer to Chart 7B.
No
Is there battery voltage at RSA pin Cl 3?
No
Check circuit 194 for an open or short to ground between RHJB J8 pin B2 and RSA pin C13?
If circuits ok, replace RHJB.
Yes
^Replace RSA

CamScanner

EXTERNAL KEYPAD (EKP) INOPERATIVE

CHART 7A

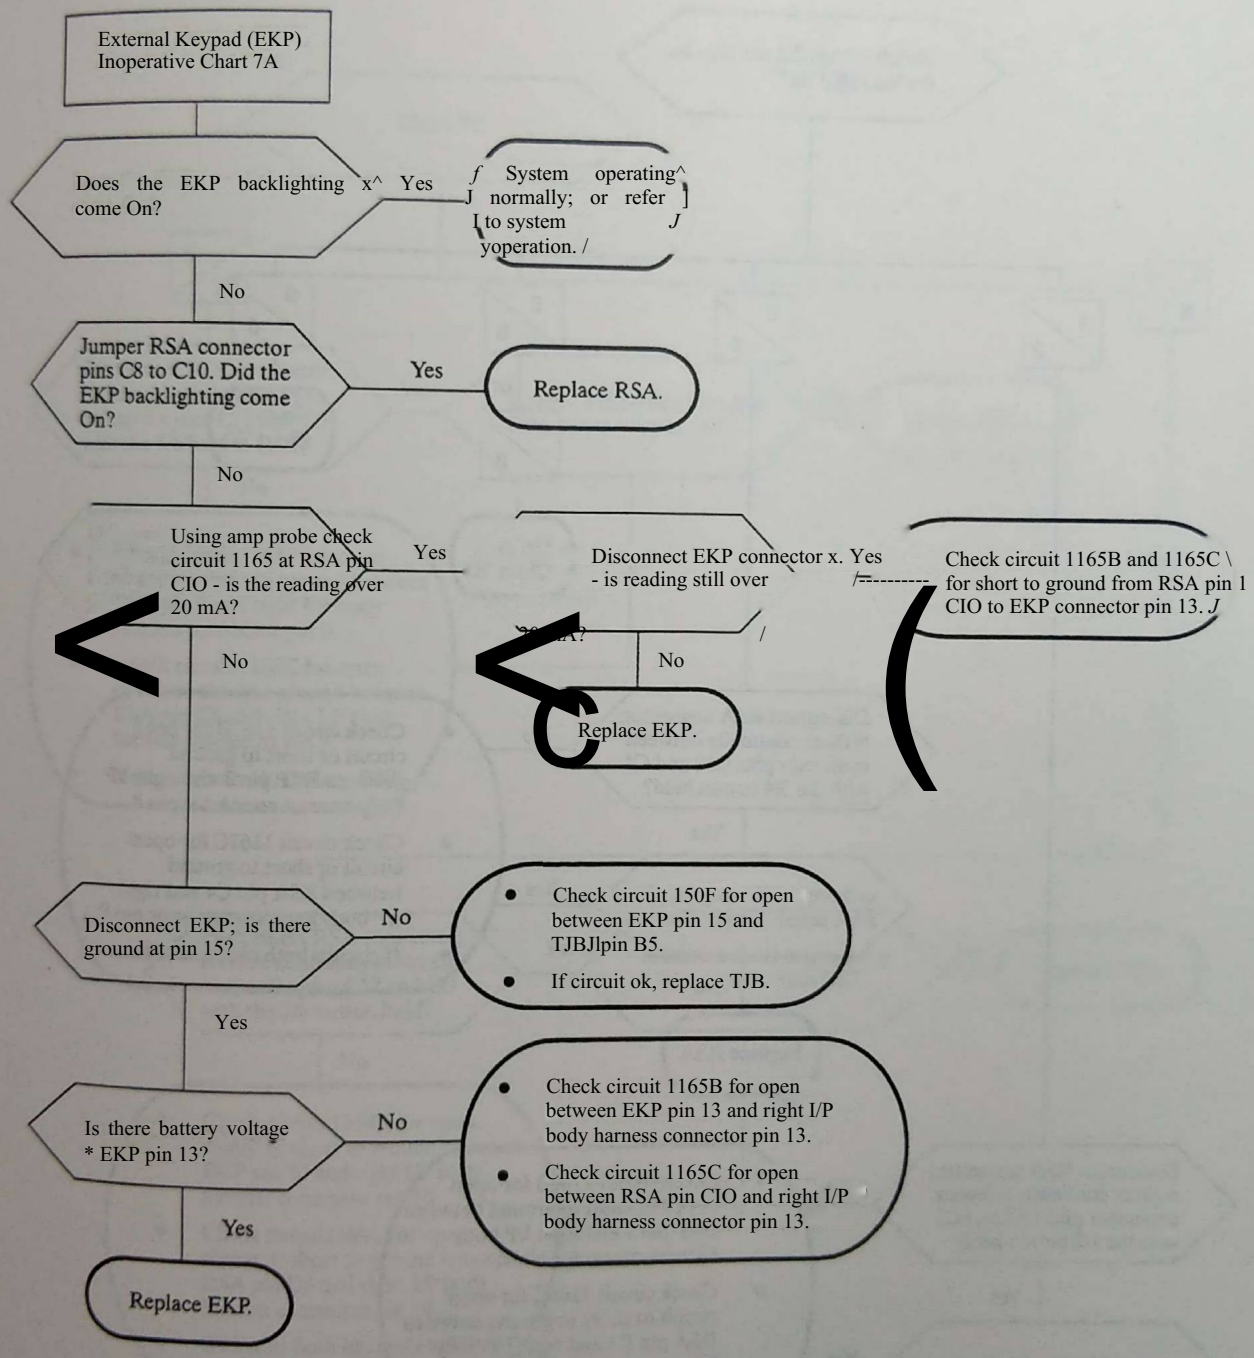
External Keypad (EKP) Inoperative Chart 7A
Does the EKP backlighting come On?
Yes
System operating normally; or refer to system operation.
No
Jumper RSA connector pins C8 to C10. Did the EKP backlighting come On?
Yes
Replace RSA.
No
Using amp probe check circuit 1165 at RSA pin CIO - is the reading over 20 mA?
Yes
Disconnect EKP connector x. - is reading still over
Yes
Check circuit 1165B and 1165C for short to ground from RSA pin 1 CIO to EKP connector pin 13.
No
No
Replace EKP.
Disconnect EKP; is there ground at pin 15?
No
Check circuit 150F for open between EKP pin 15 and TJBJlpin B5.
If circuit ok, replace TJB.
Yes
Is there battery voltage * EKP pin 13?
No
Check circuit 1165B for open between EKP pin 13 and right I/P body harness connector pin 13.
Check circuit 1165C for open between RSA pin CIO and right I/P body harness connector pin 13.
Yes
Replace EKP.

CamScanner

EXTERNAL KEYPAD (EKP) INOPERATIVE (BUTTONS 1/2 OR 3/4)

CHART 7B

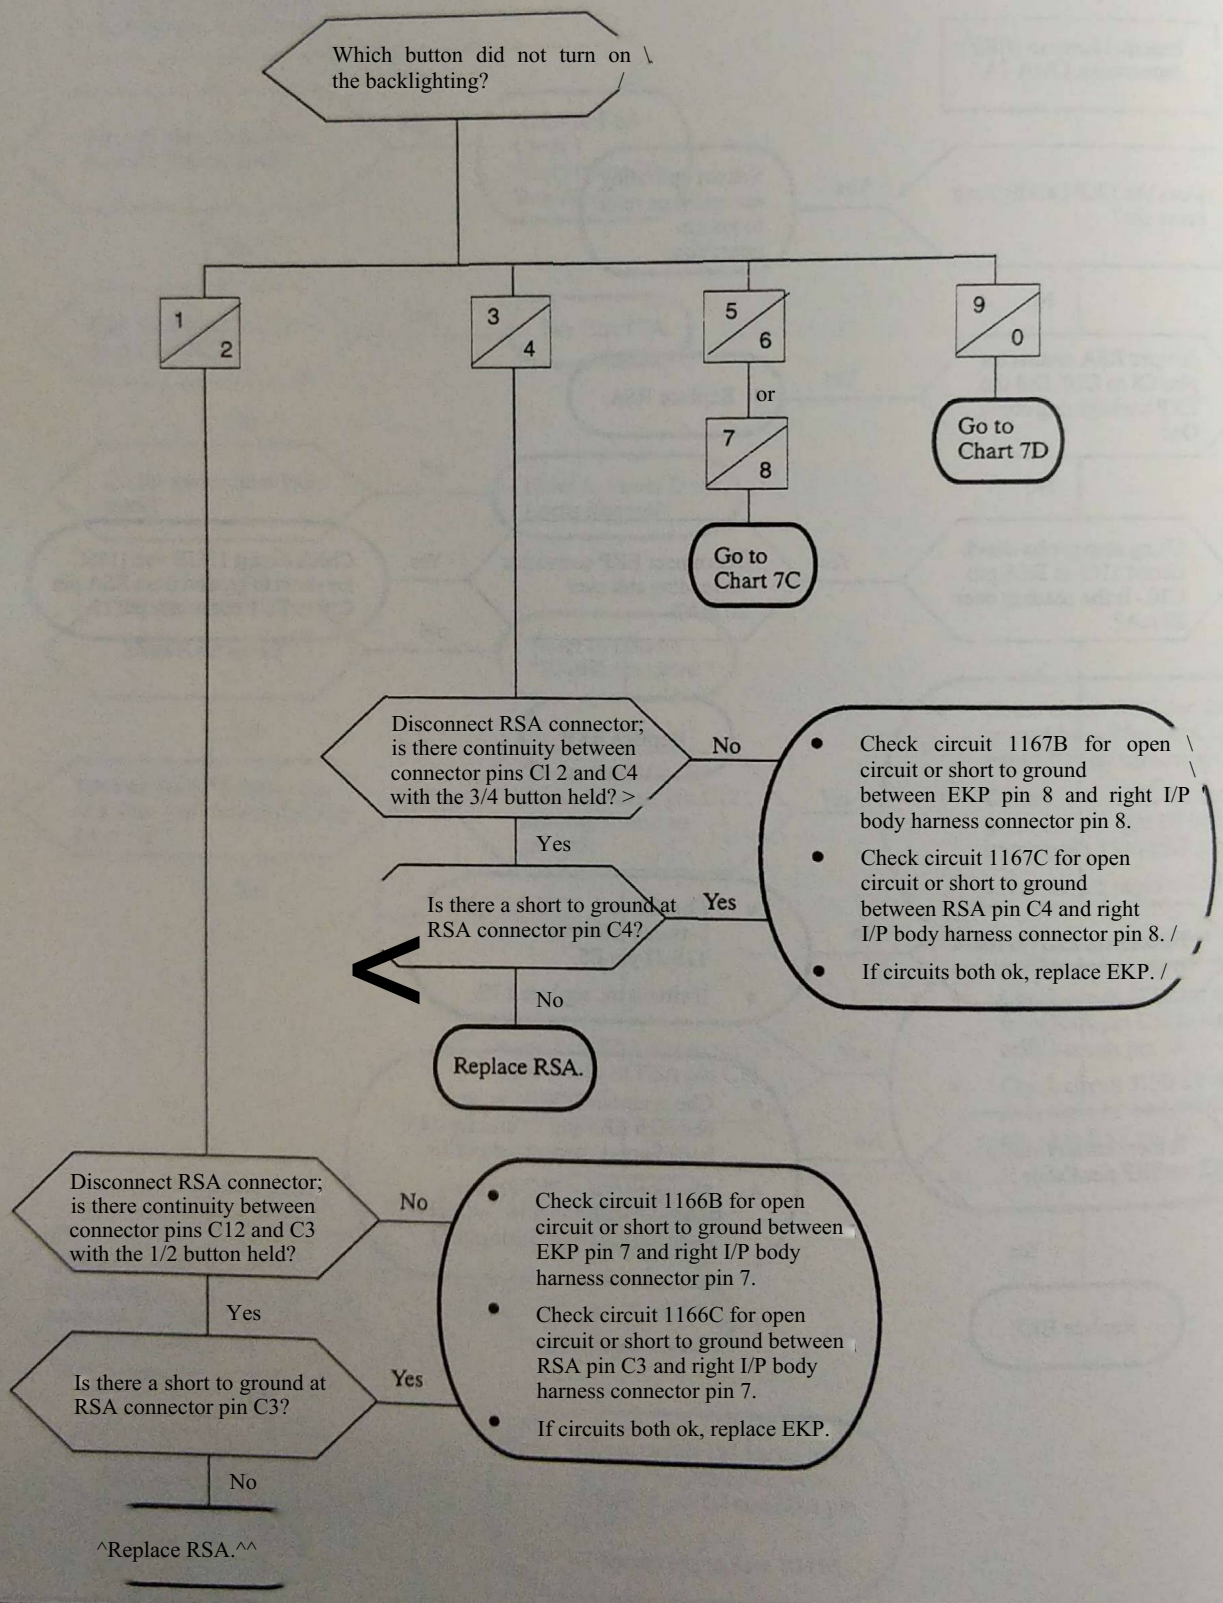
Which button did not turn on the backlighting?
1/2
3/4
5/6
or
7/8
9/0
Go to Chart 7C
Go to Chart 7D
Disconnect RSA connector; is there continuity between connector pins Cl 2 and C4 with the 3/4 button held? >
No
Yes
Is there a short to ground at RSA connector pin C4?
Yes
No
Replace RSA.
• Check circuit 1167B for open circuit or short to ground between EKP pin 8 and right I/P body harness connector pin 8.
• Check circuit 1167C for open circuit or short to ground between RSA pin C4 and right I/P body harness connector pin 8.
• If circuits both ok, replace EKP.
Disconnect RSA connector; is there continuity between connector pins C12 and C3 with the 1/2 button held?
No
Yes
Is there a short to ground at RSA connector pin C3?
Yes
No
^Replace RSA.^^
• Check circuit 1166B for open circuit or short to ground between EKP pin 7 and right I/P body harness connector pin 7.
• Check circuit 1166C for open circuit or short to ground between RSA pin C3 and right I/P body harness connector pin 7.
• If circuits both ok, replace EKP.

CamScanner

EXTERNAL KEYPAD (EKP) INOPERATIVE (BUTTONS 5/6 OR 7/8)

CHART 7C

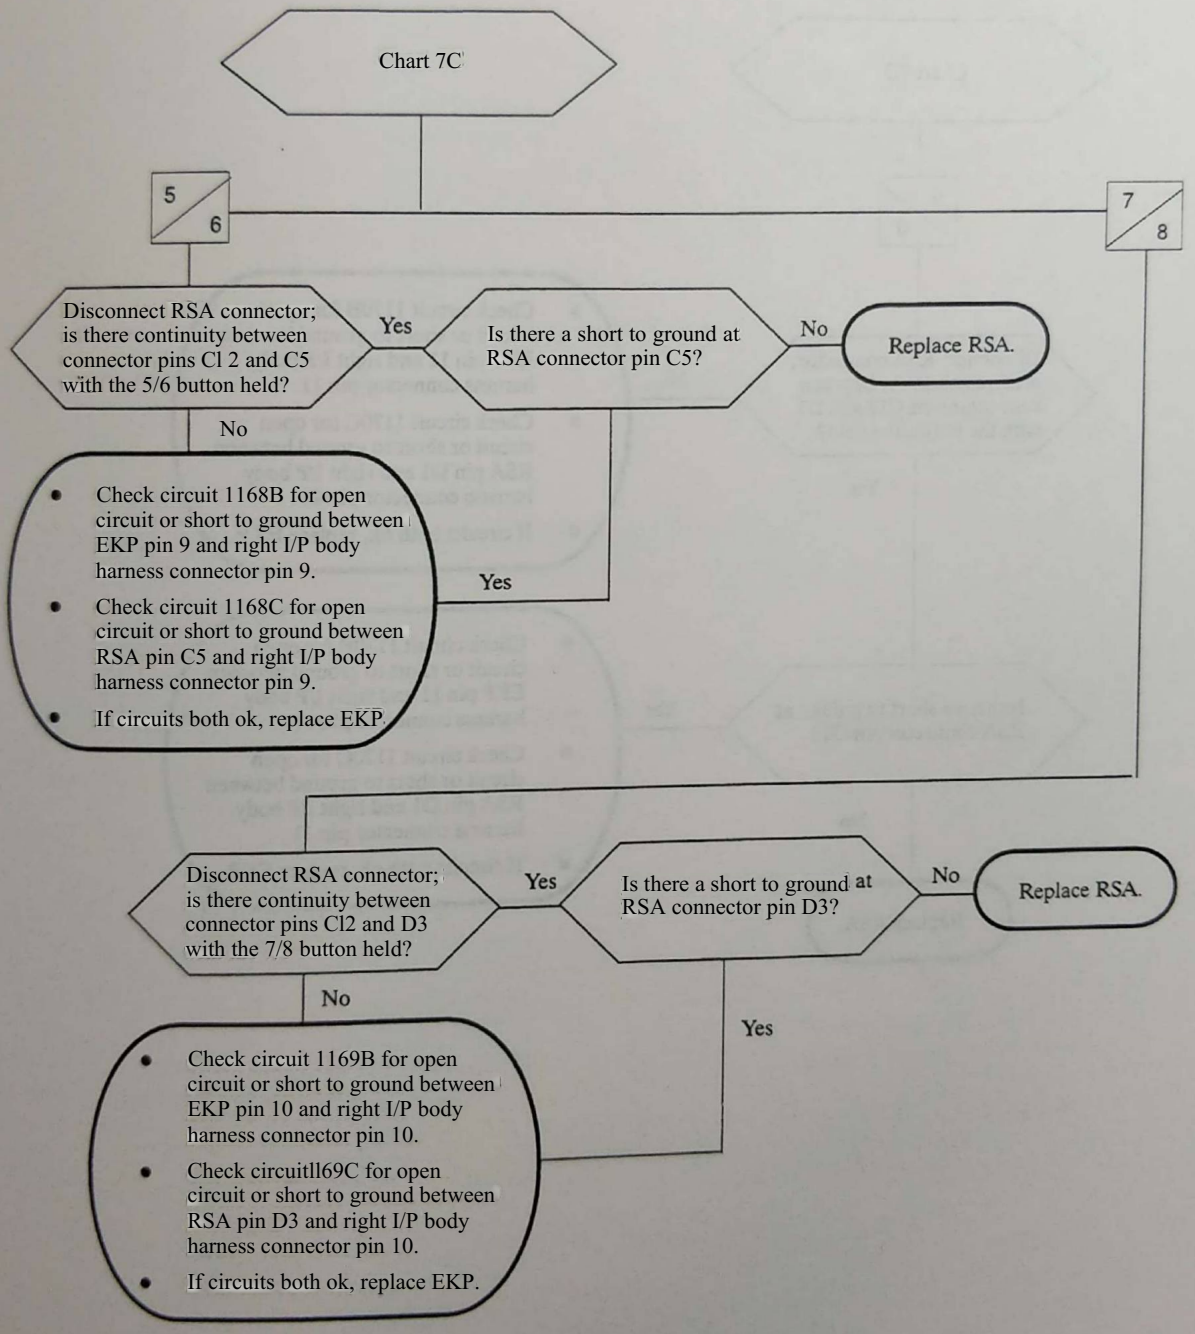
Chart 7C
5/6
7/8
Disconnect RSA connector; is there continuity between connector pins Cl 2 and C5 with the 5/6 button held?
Yes
Is there a short to ground at RSA connector pin C5?
No
Replace RSA.
No
Check circuit 1168B for open circuit or short to ground between EKP pin 9 and right I/P body harness connector pin 9.
Check circuit 1168C for open circuit or short to ground between RSA pin C5 and right I/P body harness connector pin 9.
If circuits both ok, replace EKP.
Yes
Disconnect RSA connector; is there continuity between connector pins Cl2 and D3 with the 7/8 button held?
Yes
Is there a short to ground at RSA connector pin D3?
No
Replace RSA.
No
Check circuit 1169B for open circuit or short to ground between EKP pin 10 and right I/P body harness connector pin 10.
Check circuitll69C for open circuit or short to ground between RSA pin D3 and right I/P body harness connector pin 10.
If circuits both ok, replace EKP.
Yes

CamScanner

EXTERNAL KEYPAD (EKP) INOPERATIVE (BUTTONS 9/0)

CHART 7D

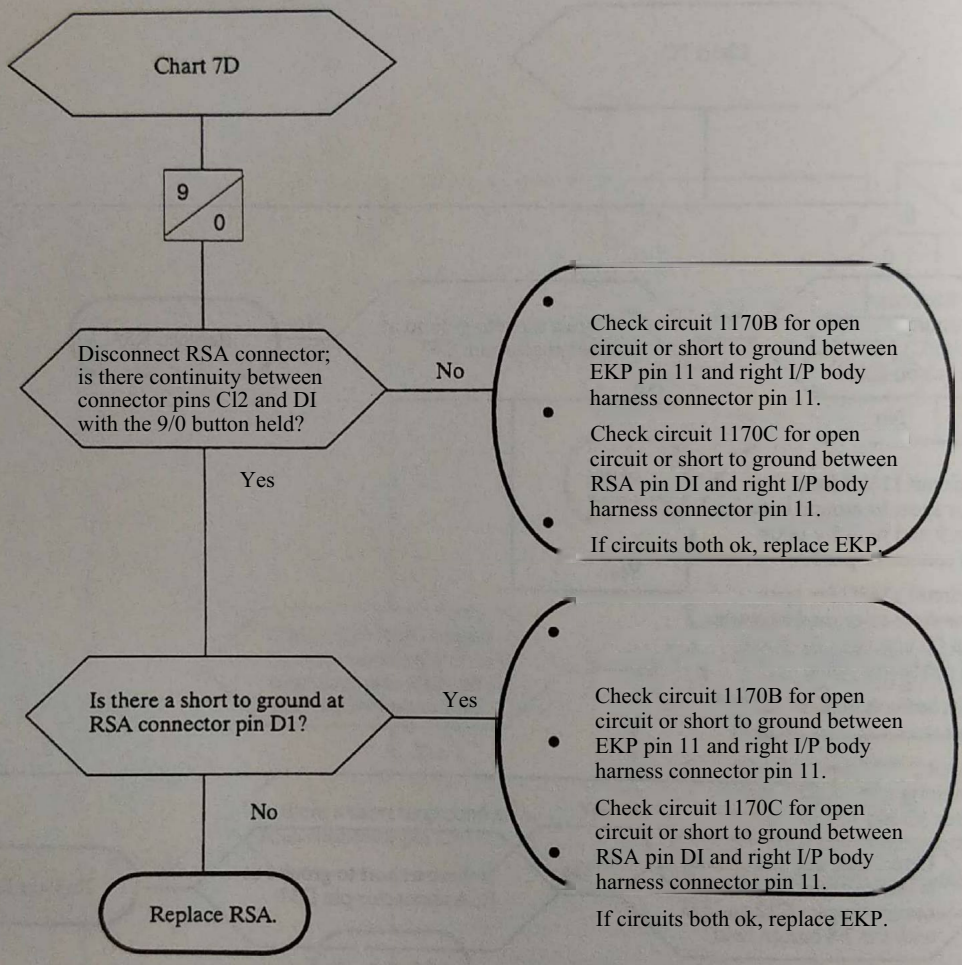
Chart 7D
9
0
Disconnect RSA connector; is there continuity between connector pins C12 and DI with the 9/0 button held?
No
Check circuit 1170B for open circuit or short to ground between EKP pin 11 and right I/P body harness connector pin 11.
Check circuit 1170C for open circuit or short to ground between RSA pin DI and right I/P body harness connector pin 11.
If circuits both ok, replace EKP.
Yes
Is there a short to ground at RSA connector pin D1?
Yes
Check circuit 1170B for open circuit or short to ground between EKP pin 11 and right I/P body harness connector pin 11.
Check circuit 1170C for open circuit or short to ground between RSA pin DI and right I/P body harness connector pin 11.
If circuits both ok, replace EKP.
No
Replace RSA.

CamScanner

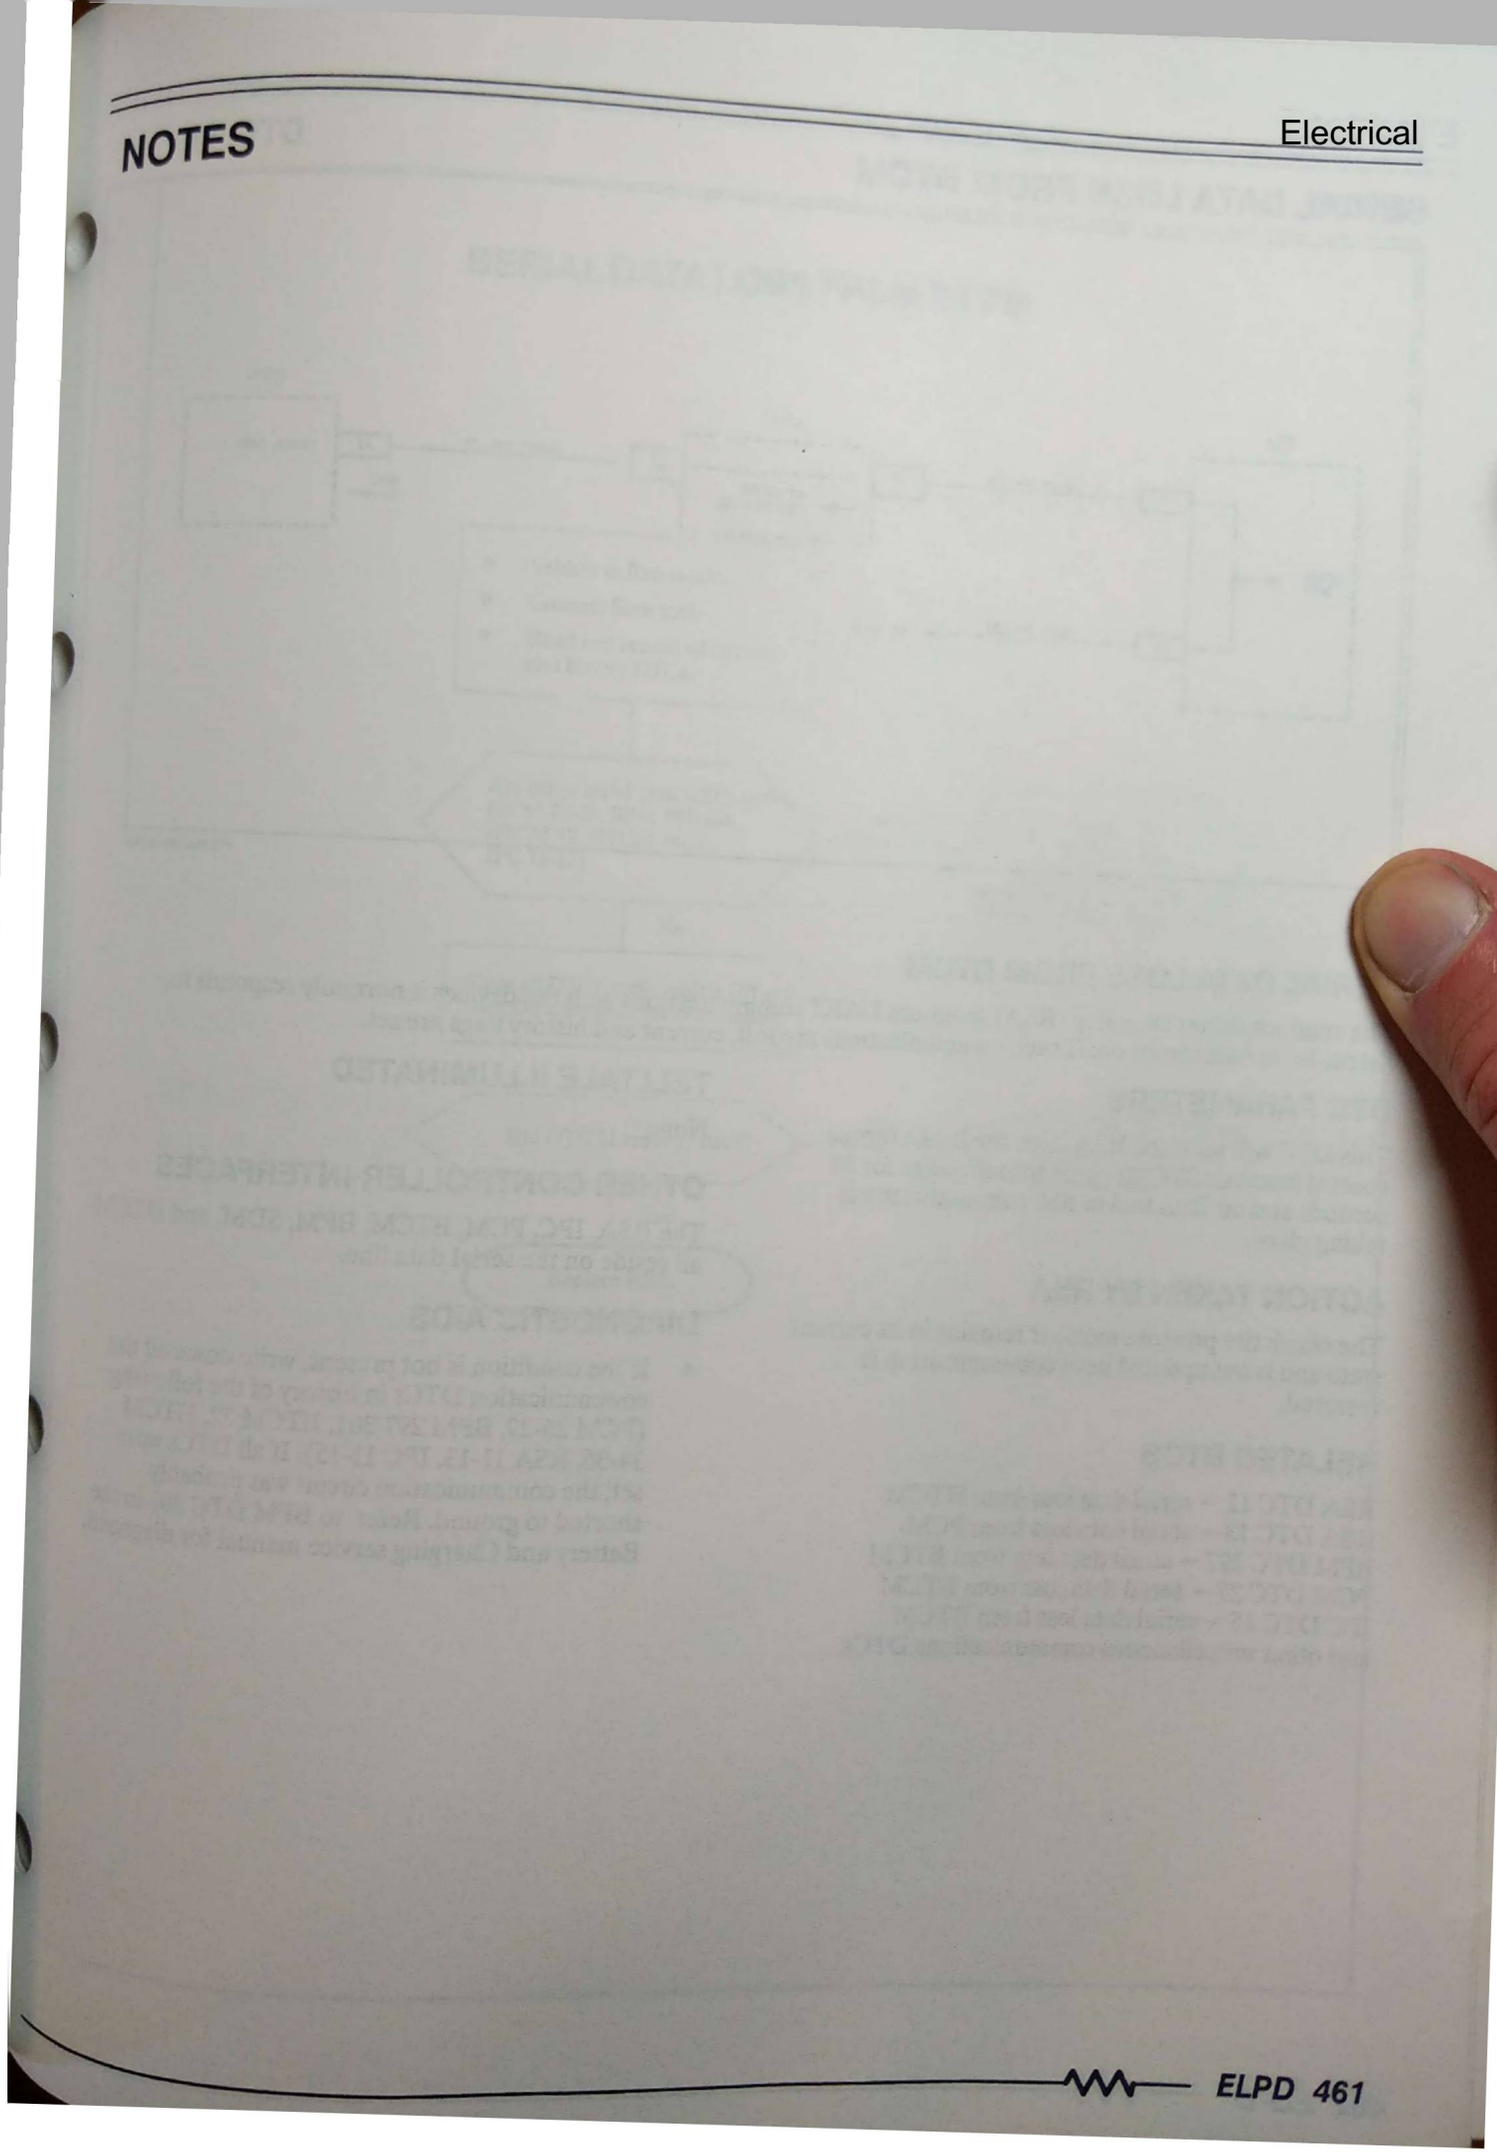

CamScanner

SERIAL DATA LOSS FROM BTCM

DTC 11

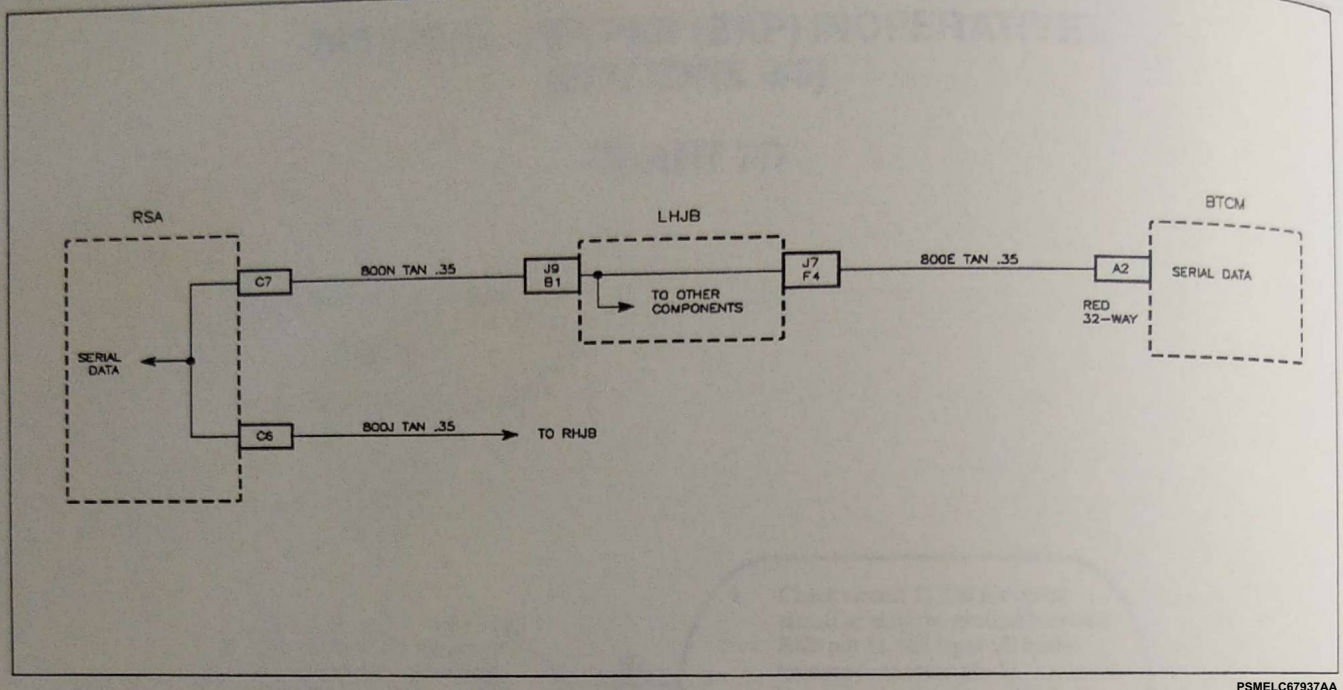

PSMELC67937AA

SERIAL DATA LOSS FROM BTCM

The run/lock shifter assembly (RSA) monitors UART communications with the devices it normally responds to. listens to, or eavesdrops on. If such communications are lost, current and history flags are set.

DTC PARAMETERS

This DTC will set if the RSA loses the brake torque control module (BTCM) eavesdrop message for 14 seconds and no Scan tool or SSS communicaton is taking place.

ACTION TAKEN BY RSA

The check tire pressure monitor remains in its current state and is not updated until communication is restored.

RELATED DTCS

RSA DTC 12 - serial data loss from HTCM
RSA DTC 13 - serial data loss from PCM
BPM DTC 297 — serial data loss from BTCM
PCM DTC 27 - serial data loss from BTCM
IPC DTC 15 - serial data loss from BTCM
and other miscellaneous communications DTCs.

TELLTALE ILLUMINATED

None

OTHER CONTROLLER INTERFACES

The RSA, IPC, PCM, BTCM, BPM, SDM. and HTCM all reside on the serial data line.

DIAGNOSTIC AIDS

- If the condition is not present, write down all the C-?EJP}unjcation DTCs in historv of the following: So[illegible]29, BPM 297-30L BTCM 72, HTCM J4'36> RSA 11-13, IPC 11-15). If all DTCs were set, the communication circuit was probably shorted to ground. Refer to BPM DTC 301 in the Battery and Charging service manual for diagnosis-

CamScanner

SERIAL DATA LOSS FROM BTCM

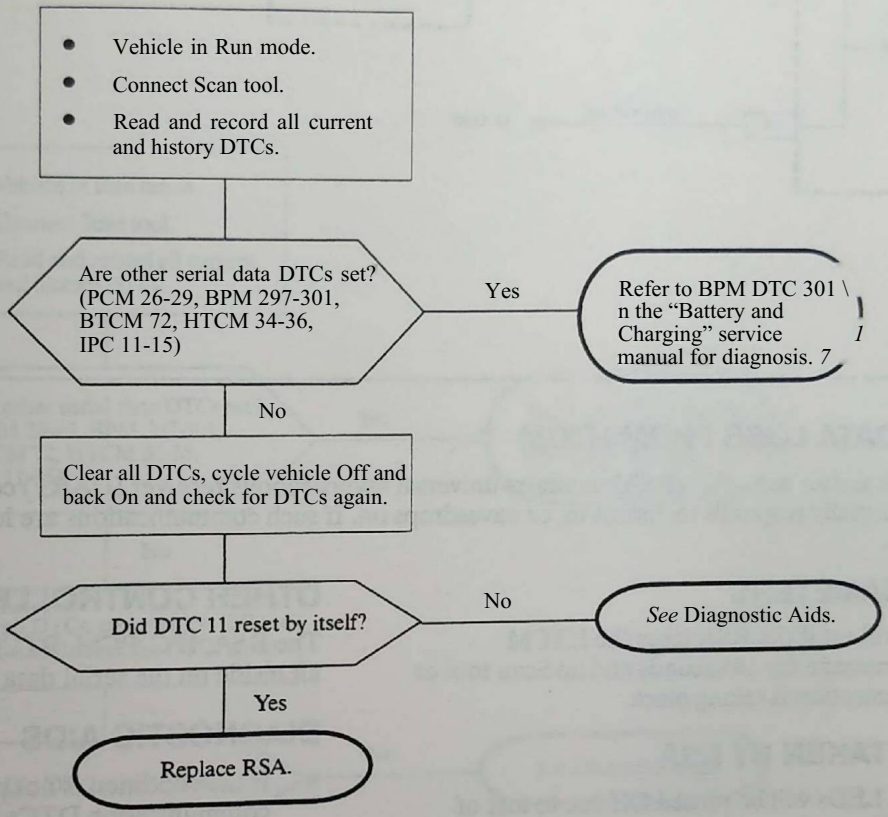
Vehicle in Run mode.
Connect Scan tool.
Read and record all current and history DTCs.
Are other serial data DTCs set? (PCM 26-29, BPM 297-301, BTCM 72, HTCM 34-36, IPC 11-15)
Yes
Refer to BPM DTC 301 \ n the "Battery and Charging" service manual for diagnosis. 7
No
Clear all DTCs, cycle vehicle Off and back On and check for DTCs again.
Did DTC 11 reset by itself?
No
See Diagnostic Aids.
Yes
Replace RSA.

CamScanner

SERIAL DATA LOSS FROM HTCM

DTC 12

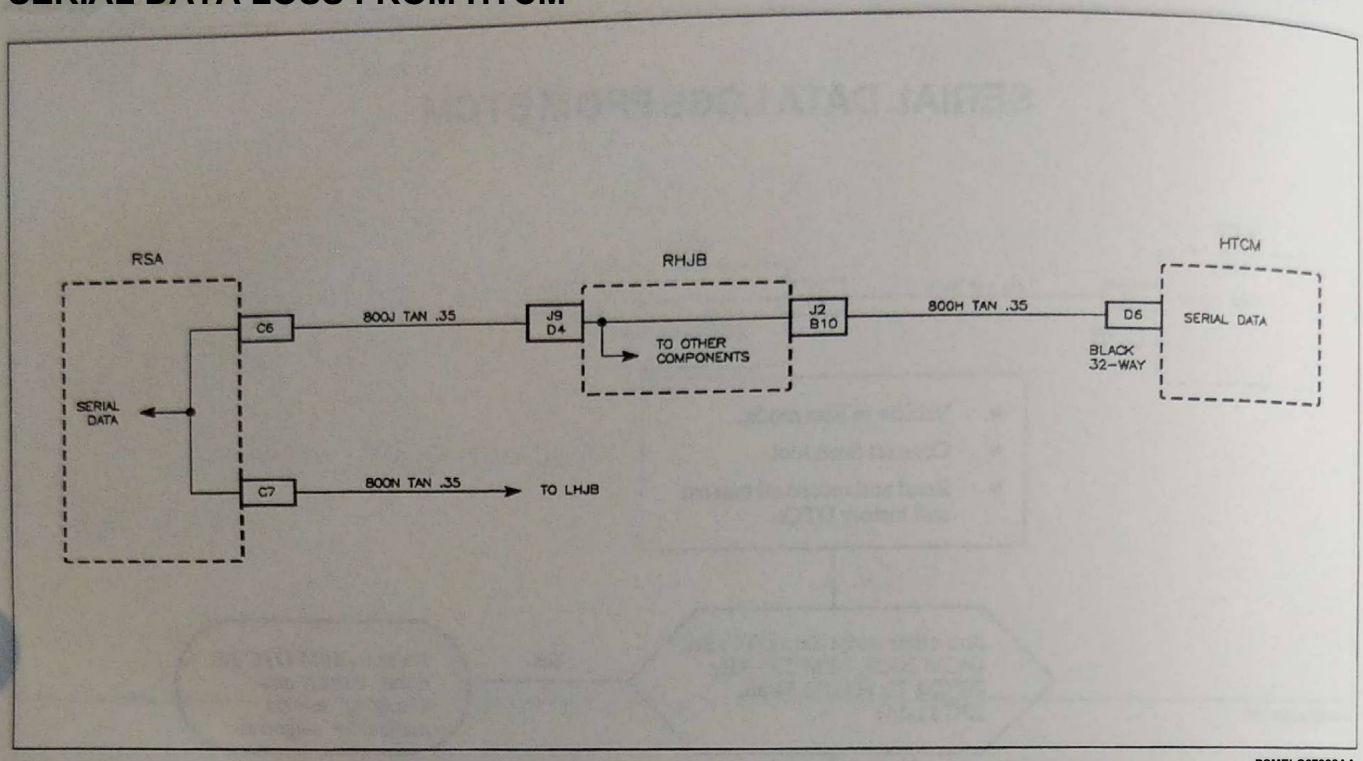

PSMELC67938AA

SERIAL DATA LOSS FROM HTCM

The run/lock shifter assembly (RSA) monitors universal asynchronous receiver (UART) communications with the devices it normally responds to, listens to, or eavesdrops on. If such communications are lost, current and history flags are set.

DTC PARAMETERS

This DTC will set if the RSA loses the HTCM eavesdrop message for 14 seconds and no Scan tool or SSS communication is taking place.

ACTION TAKEN BY RSA

The HVAC LEDs will be turned Off due to loss of communication.

RELATED DTCS

RSA DTC 11 - serial data loss from BTCM
RSA DTC 13 - serial data loss from PCM
BPM DTC 300 - serial data loss from HTCM
PCM DTC 29 - serial data loss from HTCM
IPC DTC 13 - serial data loss from HTCM
and other miscellaneous communications DTCs.

TELLTALE ILLUMINATED

None

OTHER CONTROLLER INTERFACES

The RSA, IPC, PCM, BTCM, BPM, SDM. and HTCM all reside on the serial data line.

DIAGNOSTIC AIDS

- If the condition is not present, write down all the communication DTCs in history of the following: (PCM 26-29, BPM 297-301, BTCM 72. HTCM 34-36, RSA 11-13, IPC 11-15). If all DTCs were set, the communication circuit was probably shorted to ground. Refer to BPM DTC 301 in the Battery and Charging service manual for diagnosis.

CamScanner

SERIAL DATA LOSS FROM HTCM

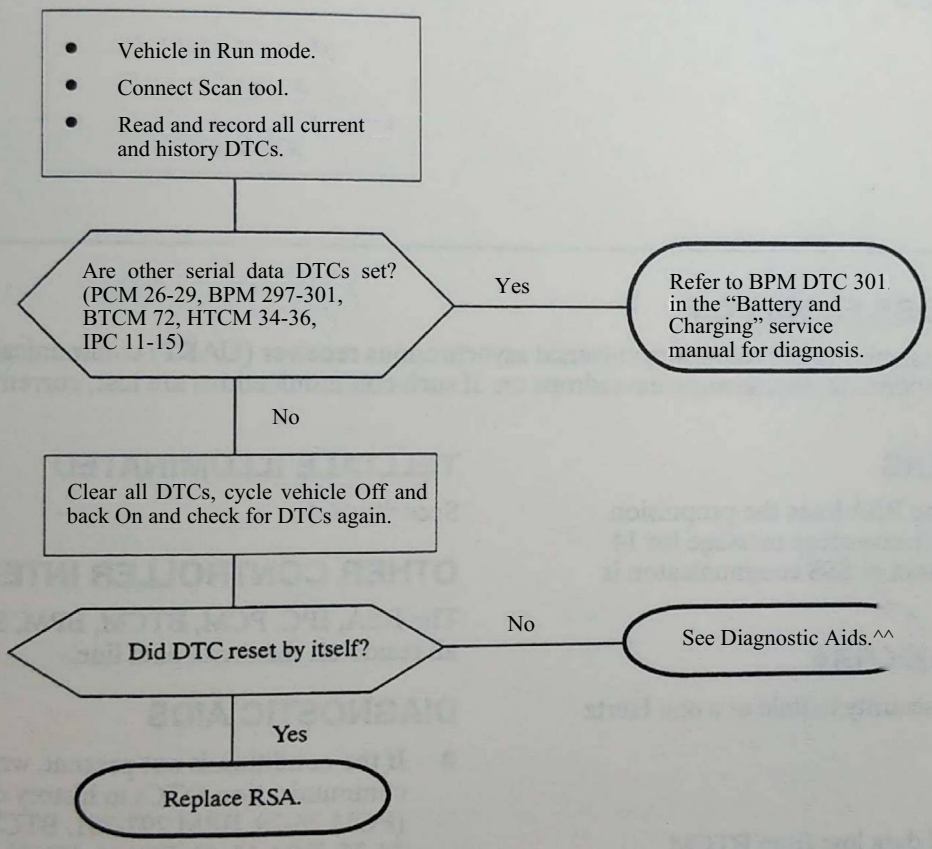
Vehicle in Run mode.
Connect Scan tool.
Read and record all current and history DTCs.
Are other serial data DTCs set? (PCM 26-29, BPM 297-301, BTCM 72, HTCM 34-36, IPC 11-15)
Yes
Refer to BPM DTC 301 in the "Battery and Charging" service manual for diagnosis.
No
Clear all DTCs, cycle vehicle Off and back On and check for DTCs again.
Did DTC reset by itself?
No
See Diagnostic Aids.^^
Yes
Replace RSA.

CamScanner

SERIAL DATA LOSS FROM PCM

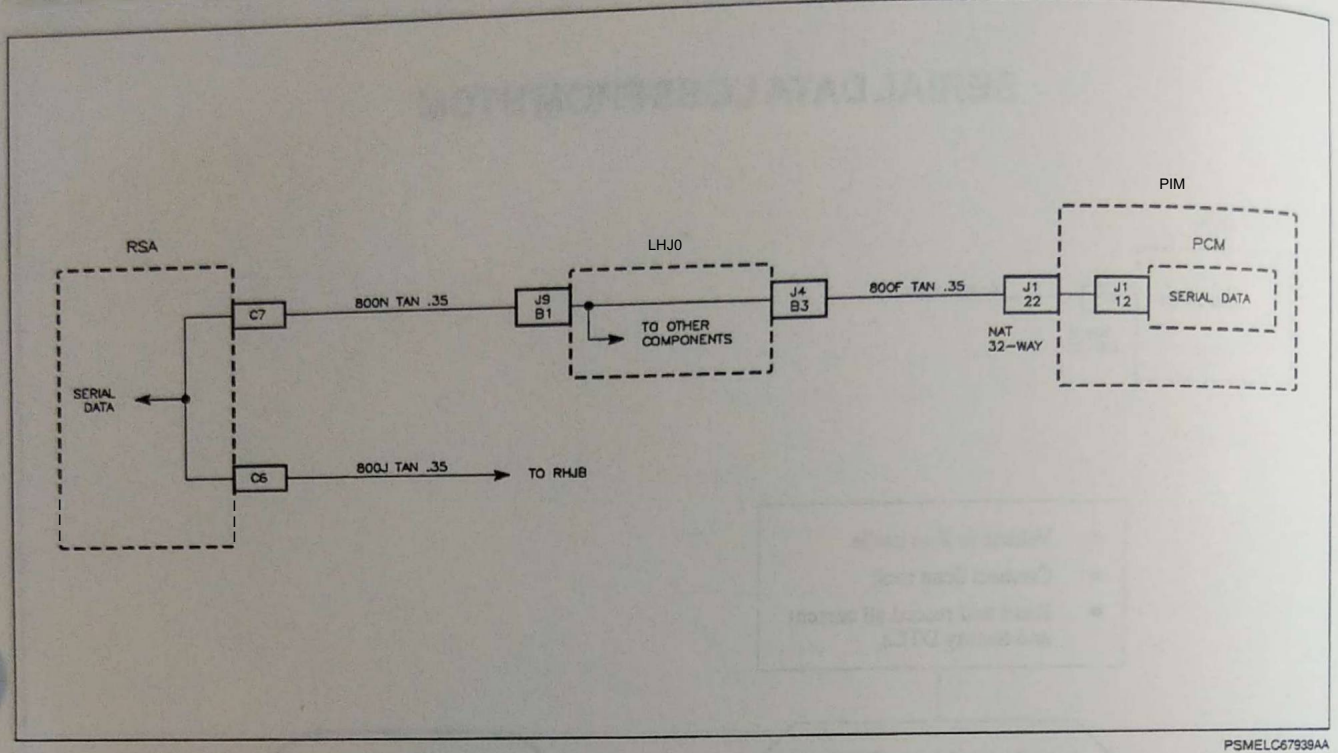

SERIAL DATA LOSS FROM PCM

The run/lock shifter assembly (RSA) monitors universal asynchronous receiver (UART) communications with the devices it normally responds to, listens to, or eavesdrops on. If such communications are lost, current and history flags are set.

DTC PARAMETERS

This DTC will set if the RSA loses the propulsion control module (PCM) eavesdrop message for 14 seconds and no Scan tool or SSS communicaton is taking place.

ACTION TAKEN BY RSA

The RSA toggles the security telltale at a one Hertz rate.

RELATED DTCS

RSA DTC 11 - serial data loss from BTCM
RSA DTC 12 - serial data loss from HTCM
BPM DTC 301 - serial data loss from PCM
HTCM DTC 35 — serial data loss from PCM
BTCM DTC 72 - serial data loss from PCM
IPC DTC 12 - serial data loss from PCM
and other miscellaneous communications DTCs.

TELLTALE ILLUMINATED

Security

OTHER CONTROLLER INTERFACES

The RSA, IPC, PCM, BTCM, BPM, SDM, and HTCM all reside on the serial data line.

DIAGNOSTIC AIDS

- If the condition is not present, write down all the communication DTCs in history of the following. (PCM 26-29, BPM 297-301, BTCM 72, HTCM 34-36, RSA 11-13, IPC 11-15). If all DTCs were set, the communication circuit was probably shorted to ground. Refer to BPM DTC 301 in the Battery and Charging service manual for diagno> - is.

CamScanner

SERIAL DATA LOSS FROM PCM

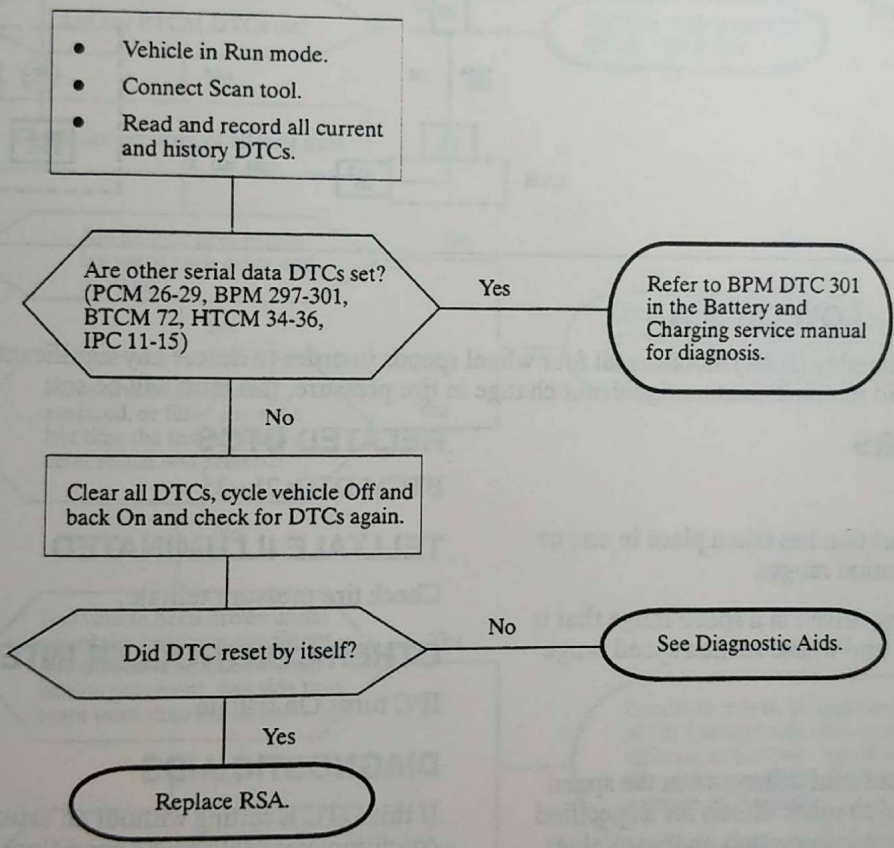
• Vehicle in Run mode.
• Connect Scan tool.
• Read and record all current and history DTCs.
Are other serial data DTCs set? (PCM 26-29, BPM 297-301, BTCM 72, HTCM 34-36, IPC 11-15)
Yes
Refer to BPM DTC 301 in the Battery and Charging service manual for diagnosis.
No
Clear all DTCs, cycle vehicle Off and back On and check for DTCs again.
Did DTC reset by itself?
No
See Diagnostic Aids.
Yes
Replace RSA.

CamScanner

TIRE PRESSURE – LOW OR HIGH

DTC 23

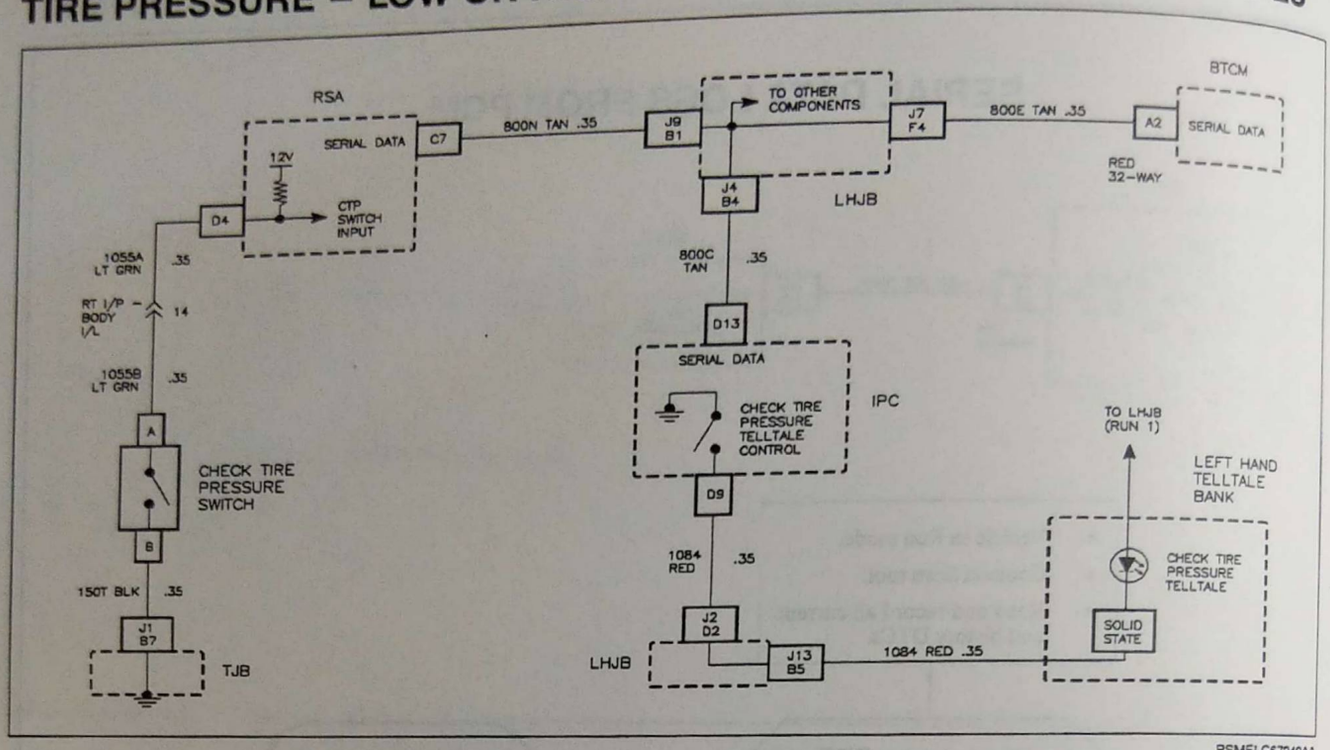

PSMELC67940AA

TIRE PRESSURE - LOW OR HIGH

The run/lock shifter assembly (RSA) monitors all four wheel speeds in order to detect any significant changes in tire pressure. If wheel speed inputs indicate a significant change in tire pressure, this fault will be set.

DTC PARAMETERS

DTC 23 will set if:

- Wheel speed calibration has taken place in one or more of the calibration ranges.
- The vehicle is being driven in a speed range that is already calibrated and whose related speed range are calibrated.

DTC 23 will set when:

The RSA detects a significant difference in the speed of one wheel compared to other wheels for a specified period of time. For more information on these values refer to check tire pressure system in this service manual.

FAILURE ACTION

Turns On telltale.

RELATED DTCS

BTCMDTCs 21-35

TELLTALE ILLUMINATED

Check tire pressure telltale.

OTHER CONTROLLER INTERFACES

IPC turns On telltale.

DIAGNOSTIC AIDS

If this DTC is setting without an actual low tire condition, unusual driving conditions is the most life cause. It is important to get as much information tire customer possible regarding the driving conditions around the time the light came on. It is important to find out what the driving conditions wer during the first few trips after the last check tire pressure system (CTPS) reset.

Any conditions that affect the speed of the wheels on one side of the vehicle differently from the other si can lead to false DTC 23's.

CamScanner

DTC 23

TIRE PRESSURE - LOW OR HIGH

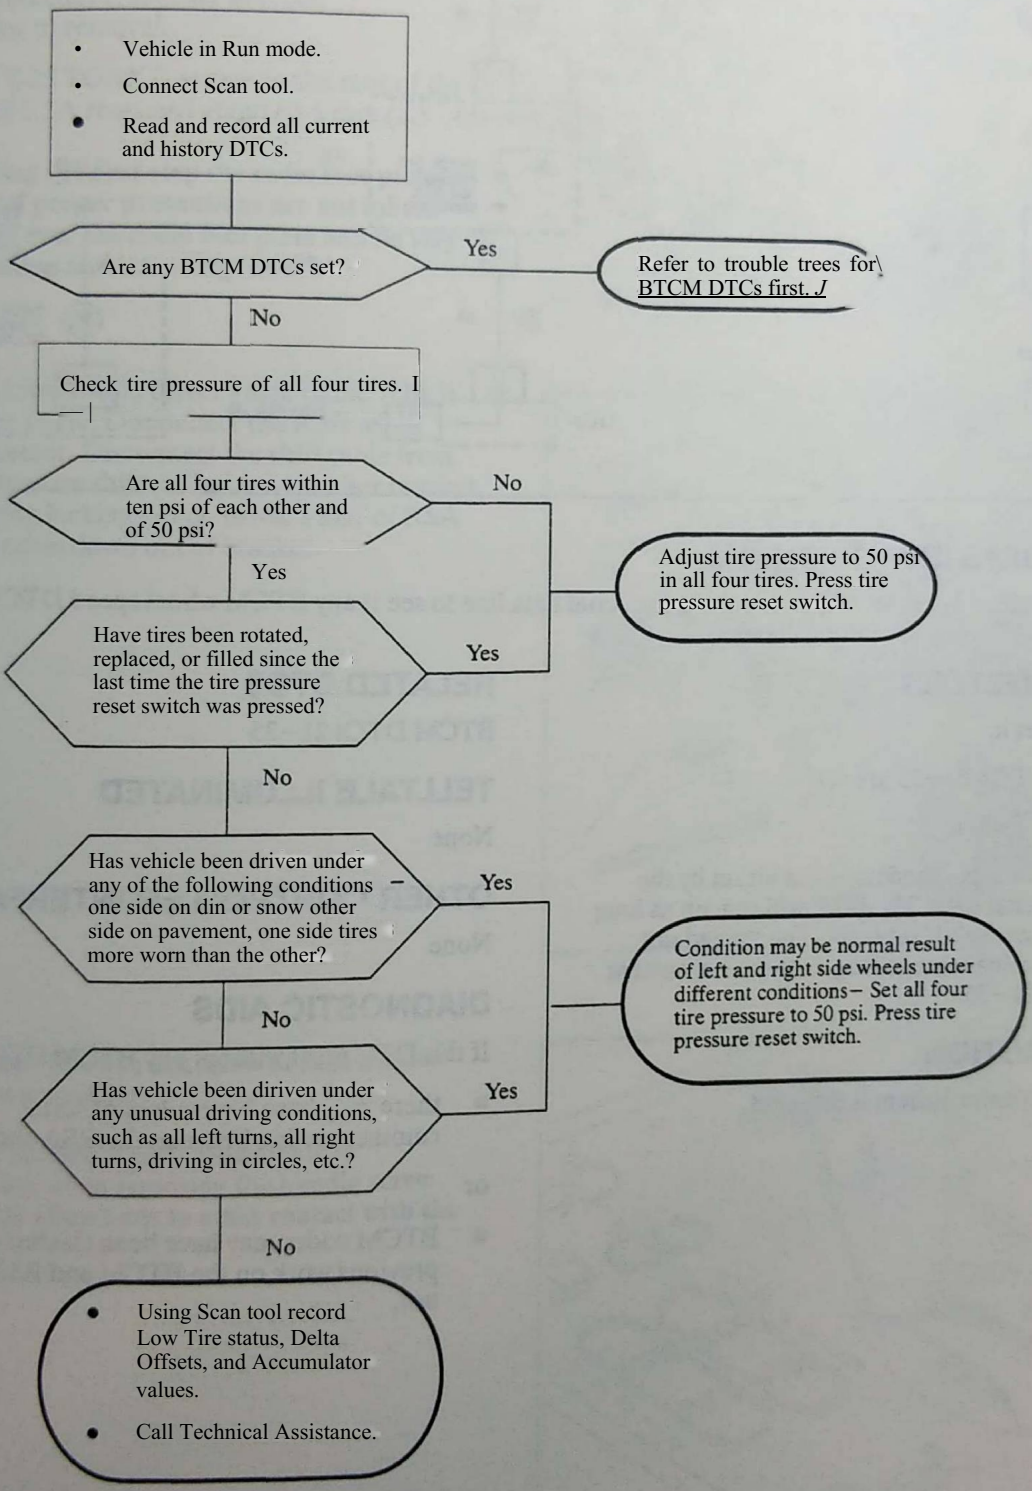
• Vehicle in Run mode.
• Connect Scan tool.
• Read and record all current and history DTCs.
Are any BTCM DTCs set?
Yes
Refer to trouble trees for BTCM DTCs first.
No
Check tire pressure of all four tires.
Are all four tires within ten psi of each other and of 50 psi?
No
Yes
Adjust tire pressure to 50 psi in all four tires. Press tire pressure reset switch.
Have tires been rotated, replaced, or filled since the last time the tire pressure reset switch was pressed?
Yes
No
Has vehicle been driven under any of the following conditions – one side on din or snow other side on pavement, one side tires more worn than the other?
Yes
Condition may be normal result of left and right side wheels under different conditions – Set all four tire pressure to 50 psi. Press tire pressure reset switch.
No
Has vehicle been diriven under any unusual driving conditions, such as all left turns, all right turns, driving in circles, etc.?
Yes
No
• Using Scan tool record Low Tire status, Delta Offsets, and Accumulator values.
• Call Technical Assistance.

CamScanner

TIRE REPORTS INVALID SIGNAL

DTC 33

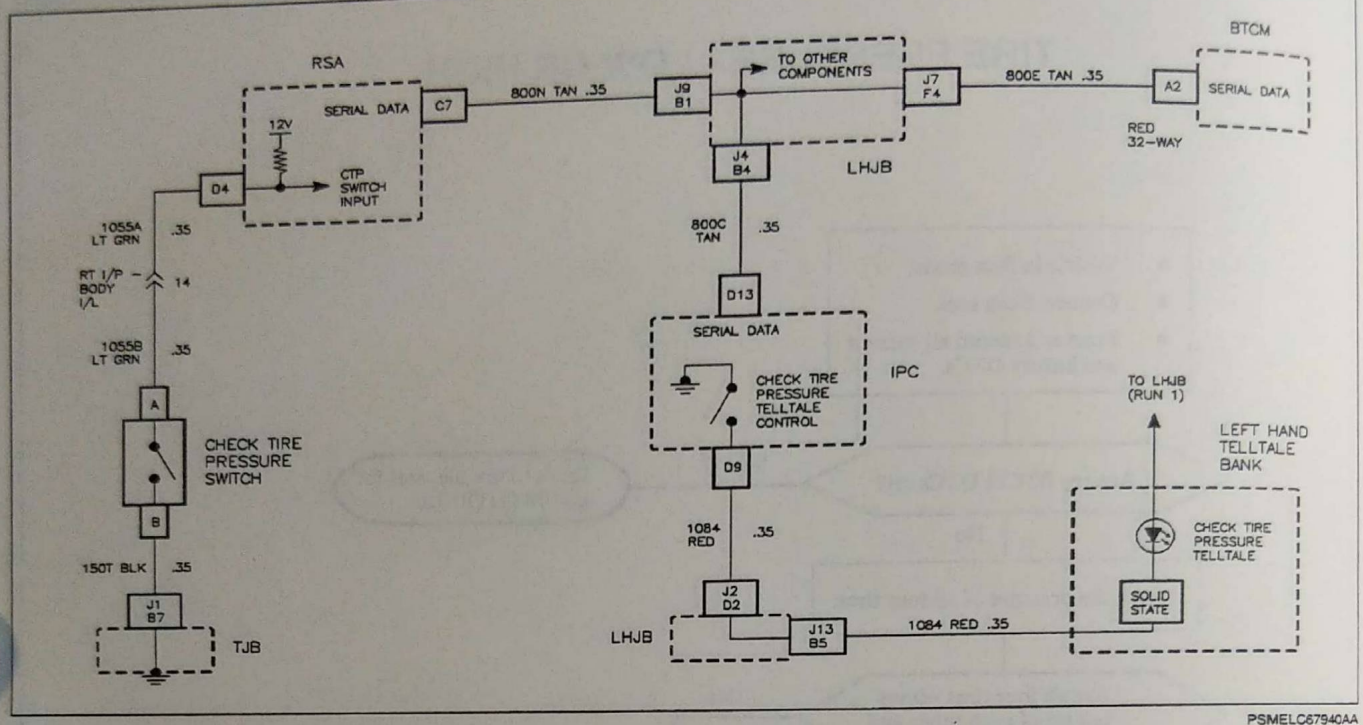

PSMELC67940AA

TIRE REPORTS INVALID SIGNAL

The run/lock shifter assembly (RSA) monitors the serial data line to see if any BTCM wheel speed DTC's set. If any wheel speed DTC's set, this fault will be set.

DTC PARAMETERS

DTC 33 will set if:

Any BTCM DTC's 21-35 are set.

DTC 33 will set when:

The RSA sees wheel speed not valid bit set by the BTCM over serial data. The DTC will remain as long as the "speed not valid" bit is set. The "speed not valid" bit will remain set as long as there is a current BTCM DTC 21-35.

FAILURE ACTION

Check Tire Pressure System is disabled.

RELATED DTCS

BTCM DTCs 21-35

TELLTALE ILLUMINATED

None

OTHER CONTROLLER INTERFACES

None

DIAGNOSTIC AIDS

If this DTC is set without any BTCM DTCs set:

- there may have been a loss of serial communication between the RSA and the Bl

or

- BTCM codes may have been cleared during previous work on the BTCM and RSA codes not.

^JH/LOCK SHIFTER ASSEMBLY TRIMPLATE > (fl SA TRIMPLATE)

REMOVAL

PORTANT: If the RSA is being replaced and is being kork to manufacturer, set user keycode ,111 prior to removal.

1. Remove the T-25 TORX " screws in the rear of the RSA and pull RSA rearward about 63.5 mm (2.5 in.).

\OTICE: During the next step the radio face plate may be damaged if proper precautions are not taken, place a drop cloth over the radio face plate and be very careful while rotating and removing the RSA.

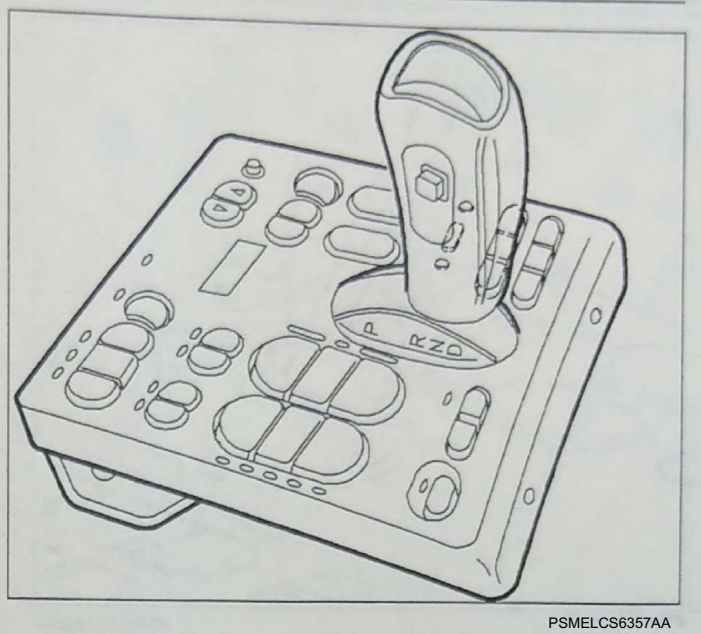

PSMELCS6357AA

2. Rotate RSA towards the driver's side of the vehicle to a 45 degree angle. Disconnect the RSA wire harness connector. Disconnect the shift cable from the shifter. Remove shift cable from retainer bracket by gently prying locking tab on driver's side of RSA and pushing cable down out of bracket.

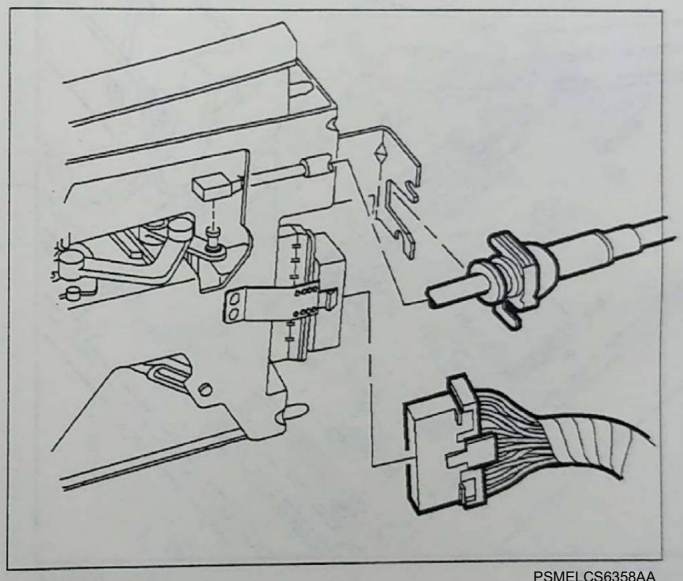

PSMELCS6358AA

3. Remove 3.2 mm (1/8 in.) hex screw at shift handle base and remove handle

NOTICE: RSA surface is very su seep table to scratc and h ^8' ^Se wh e removing the handle screw an(^e* Do not allow tools to make contact with the surface.

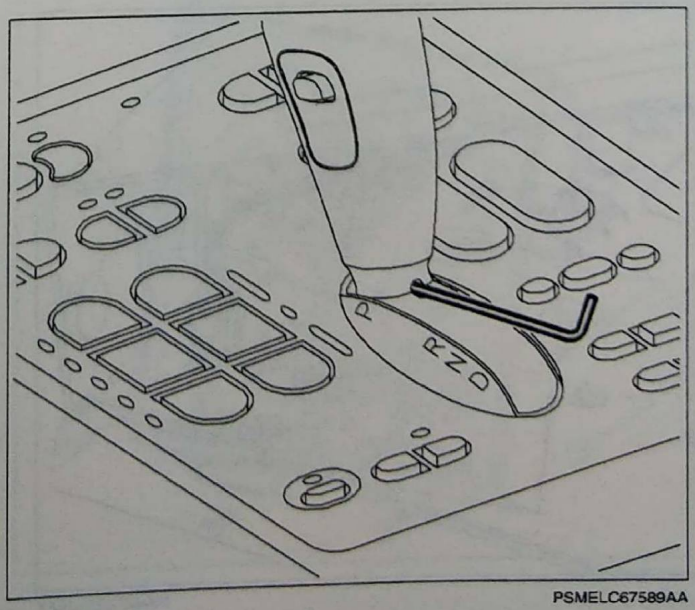

PSMELC67589AA

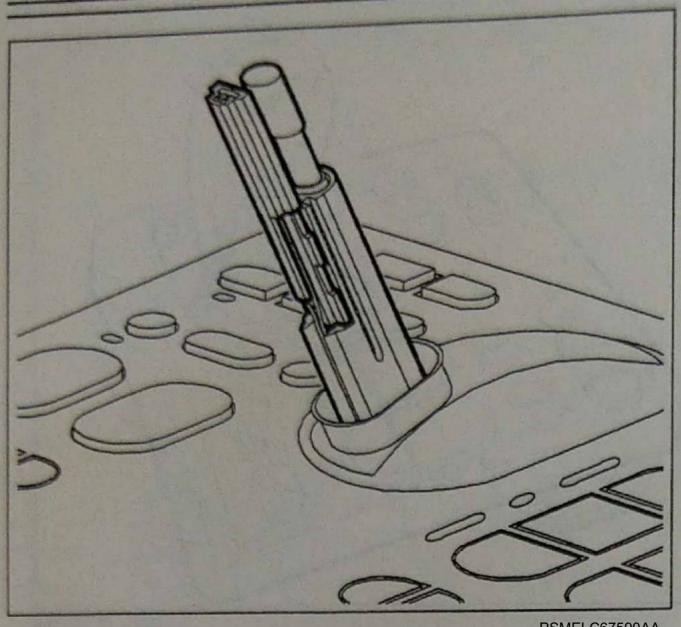

PSMELC67590AA

4. Remove metal guide from RSA.

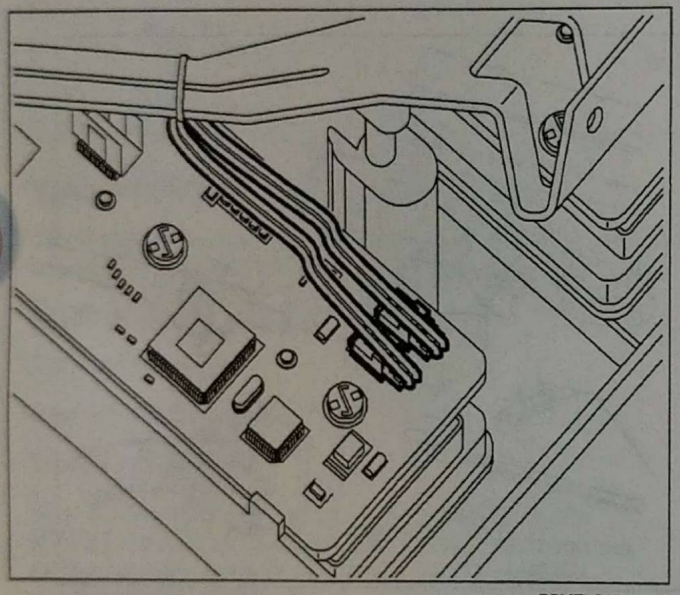

PSMELC67591AA

5. Turn RSA over and disconnect front electrical connectors from RSA circuit board.

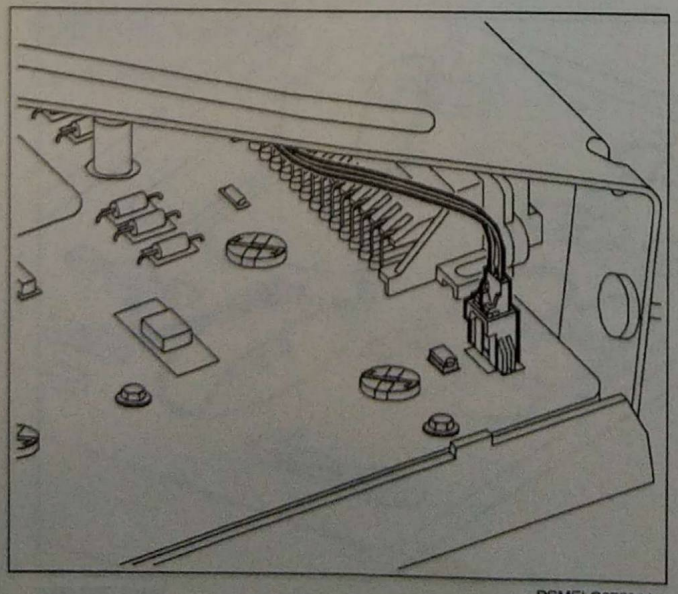

PSMELC67592AA

6. Disconnect solenoid connector from circuit board.

CamScanner

Loosen bolts ret"" in electrostatic discharge (ESDI
r shieldenoUt gh to re etc sbieW from circurtboard.

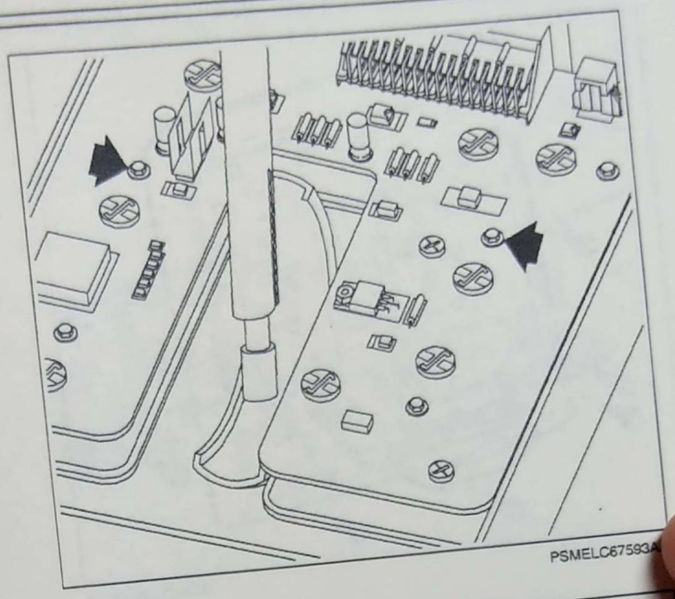

f u USA bracket away from rest of assembly and

'■ S^»a dean surface.

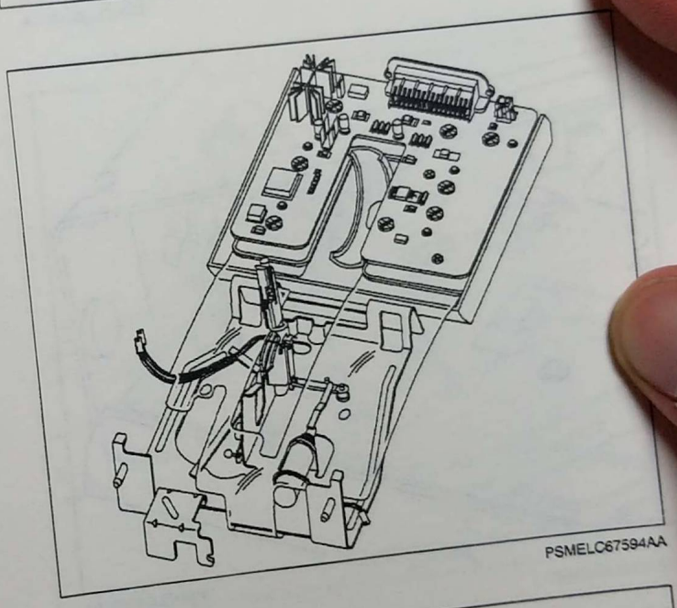

9. Unscrew seven RSA board ^rews and rem ove board and shield from RS A facepla te.

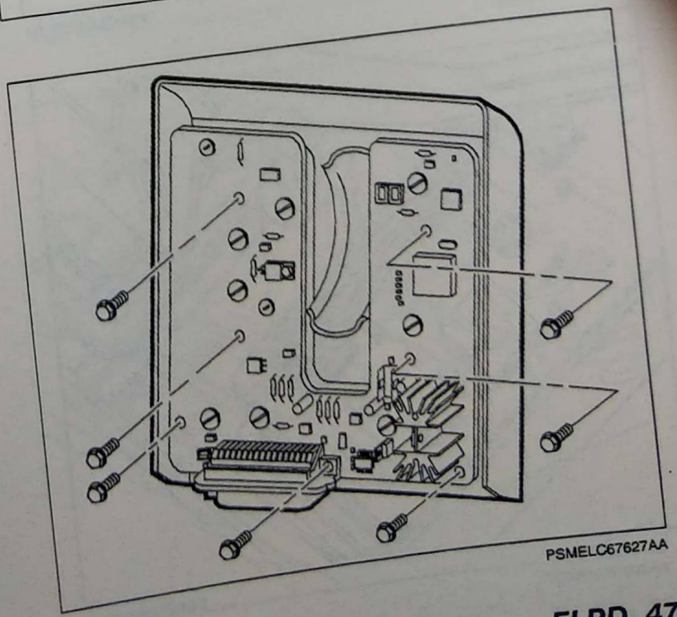

CamScanner

INSTALLATION

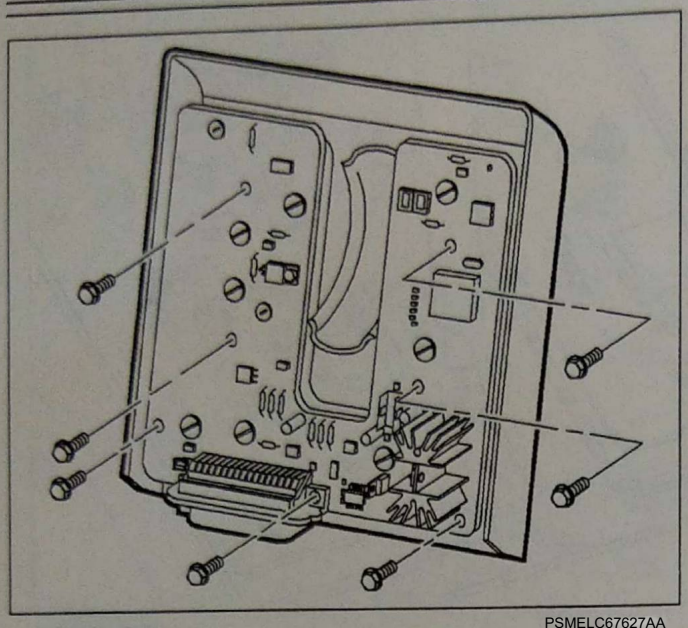

PSMELC67627AA

1. Replace RSA board and shield on new Rs\ faceplate and install seven screws.

Torque: 2 N«m (18 in-lbs)

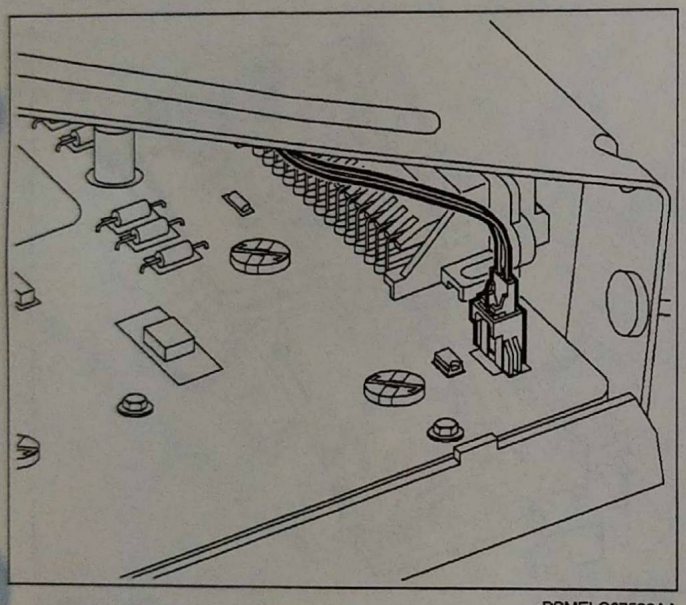

PSMELC67592AA

2. Fold RSA bracket back into rest of assembly and install RSA frame to board and faceplate and reconnect solenoid connector.

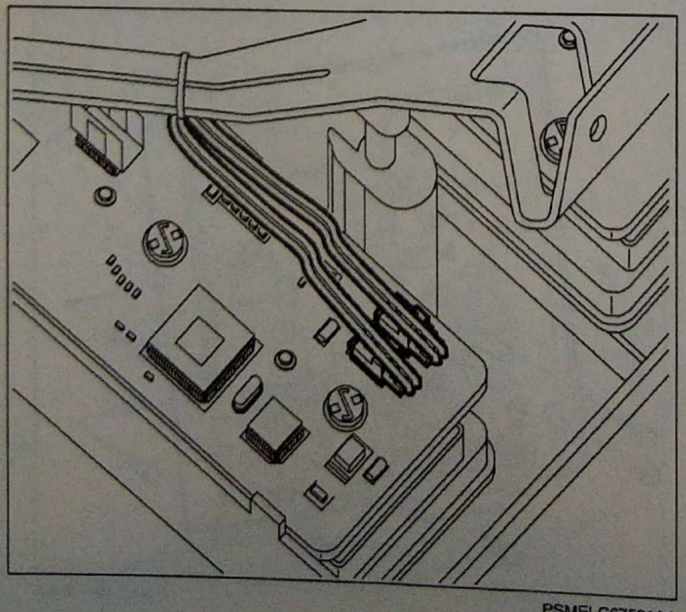

PSMELC67591AA

3. Reconnect other two connectors.

NOTICE: Make sure white connector is on the side of the shift handle.

CamScanner

4. Make certain bracket tabs are in the detents provided. Position frame against the rest of the assembly and place RSA right side up.

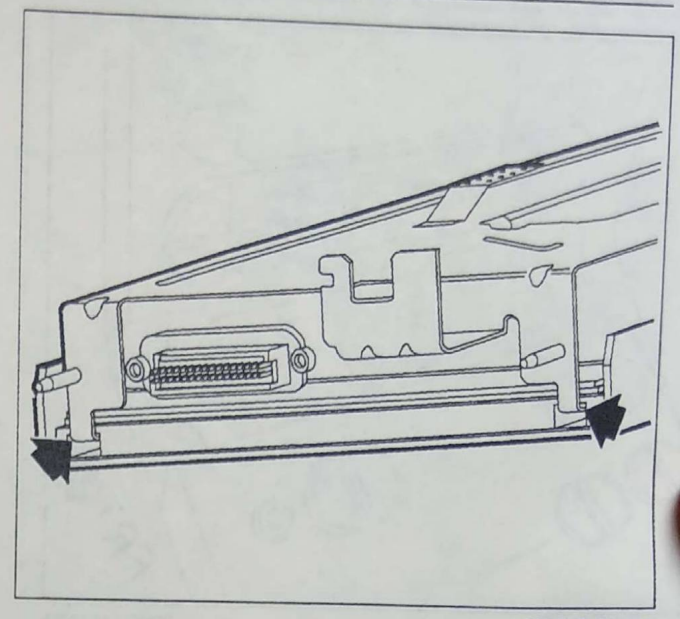

PSMELC67628AA

5. Install metal guide onto shifter rode. Position connector jumper in groove.

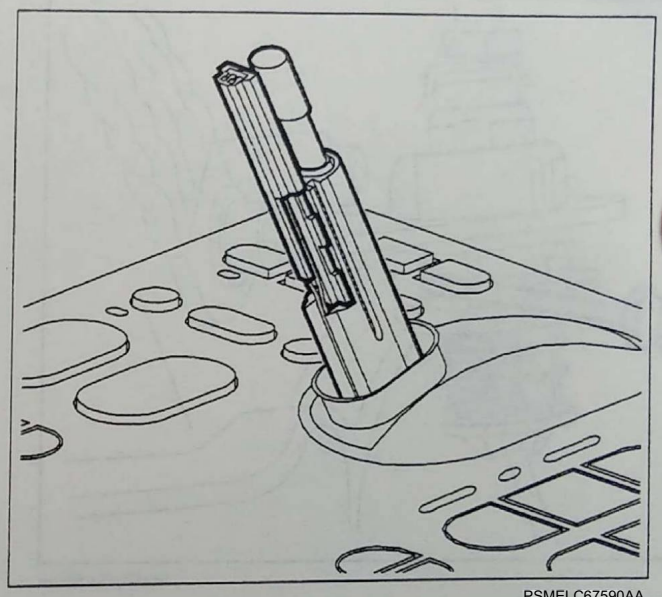

PSMELC67590AA

6. Install shift handle. Install and tighten hex screw.

Torque: **2.8 N•m (25 in-lbs)**

NOTICE: RSA surface is very susceptable to scratching. Use care when removing the handle screw and handle. Do not allow tools to make contact with the surface.

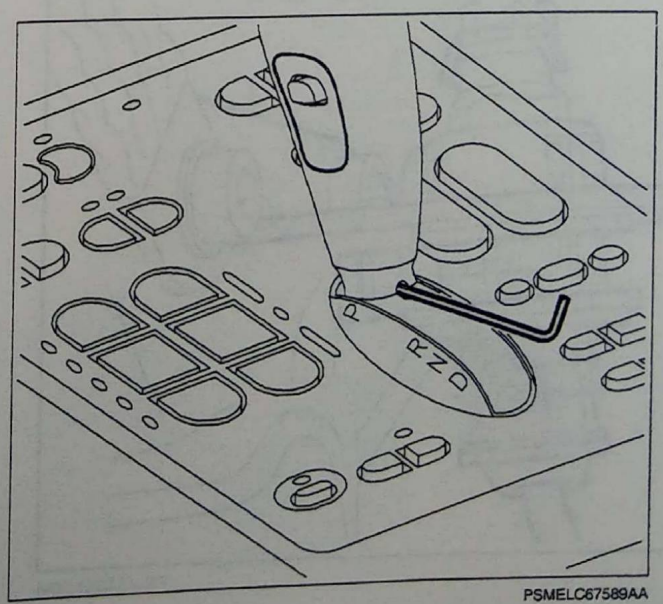

PSMELC67589AA

CamScanner

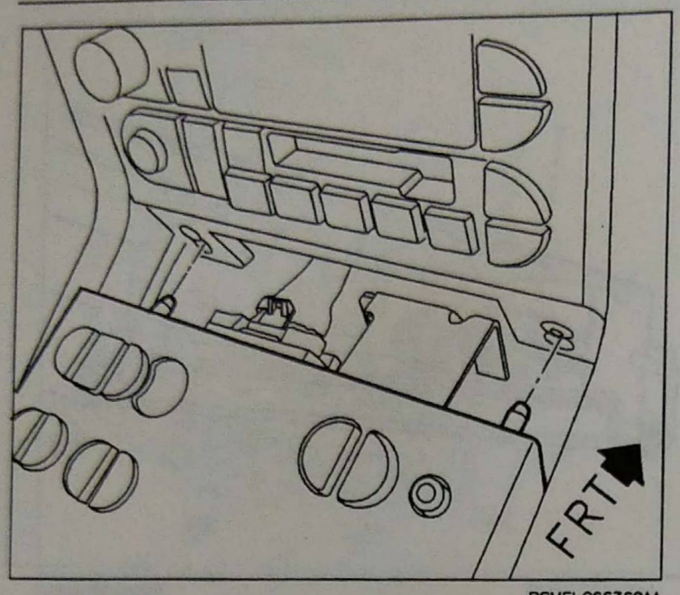

PSMELC66360AA

7. Install shift cable housing into shift bracket. Conr ıect and secure shift cable to shifter. Be sure clip lock tab is in place. Connect wire harness connector to run/lock shifter assembly (RSA).

NOTICE: Check the shift cable retention to the RSA ball socket. If the shift cable is not retained securely, replace the shift cable. If the shift cable is not retained securely it could pop off during operation resulting in loss of shifter control.

8. Align RSA locator tabs to front of IPC. and push down on the rear of the RSA. Install torx fasteners.

Torque: 6 N*m (53 in-lbs)

NOTICE: If RSA has been removed you must adjust shift cable at transaxle.

9. Adjust shift cable:
   The shift cable must be attached to the RSA with the RSA secured in position. Shift handle must be placed in neutral before cable adjustment can be performed.

10. Remove front air deflector. (Refer to "Underbody Front Air Deflector" removal procedure in this manual.)

11. Unlock u-shaped adjustment collar. Collar is located aft of drive unit bracket, and will unlock by inserting a pocket screwdriver into gap and prying towards drive unit.

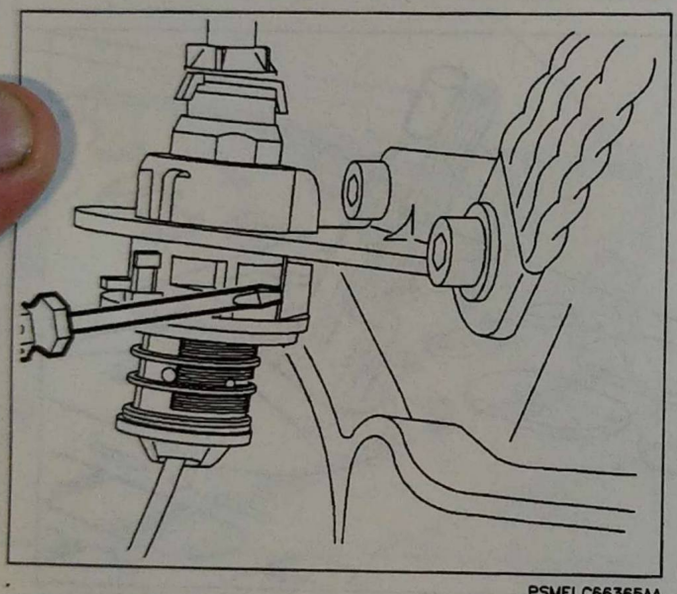

PSMELC66365AA

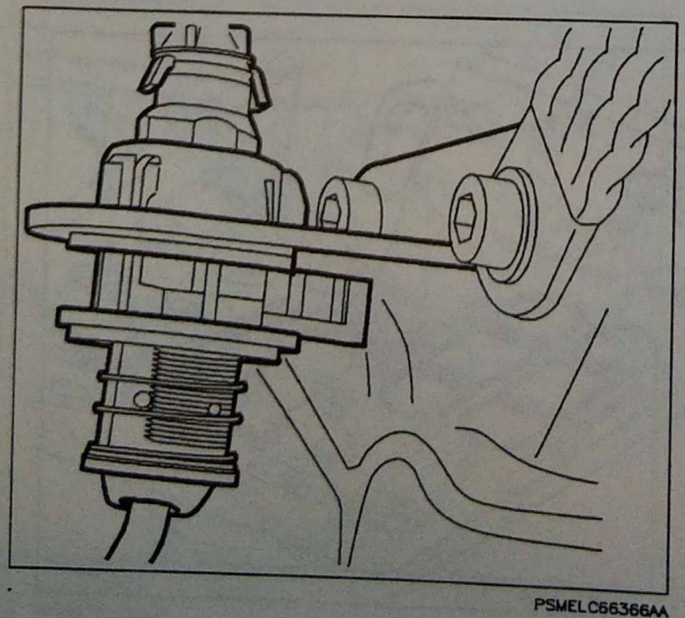

PSMELC66366AA

IMPORTANT: About 12.7 mm (1/2 in.) movement necessary to insure unlock position.

CamScanner

j2 Verify shift lever is in neutral.

ji BV hand shift park/lock lever lever to the full
> counter-clockwise position (drive) then m™.
) detent in the clockwise direction (neutraD) P one
u-shaped collar into lock position Collar wilf h us
to right side of vehicle. co,,ar will mOVe

14. Install front air deflector. (Refer to "Underh«a Front Air Deflector" manual.) inSta,,atl°n Proc^ure in tL

IMPORTANT: If RSA is replaced, it must be reprogrammed with the the service stall system. ma"“fac‘“ "« key code by nsing

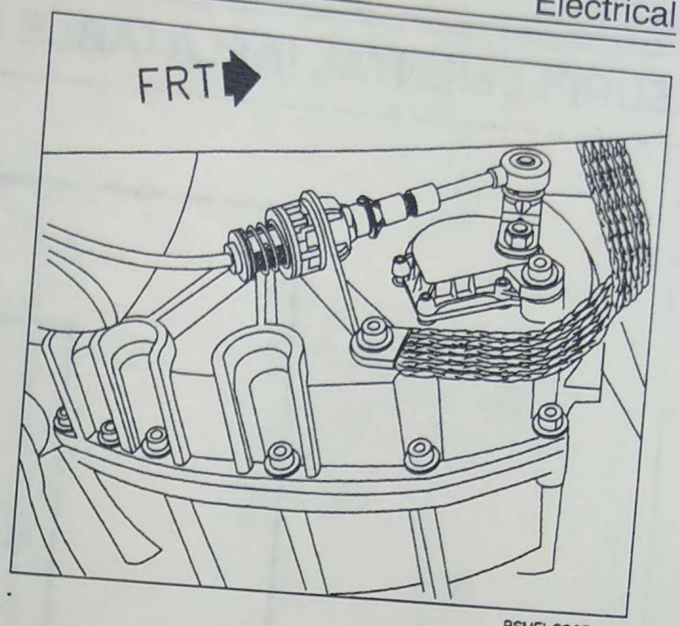

PSMELC66364AA

les CamScanner

SUPPLEMENTAL INFLATABLE RESTRAINT SYSTEM

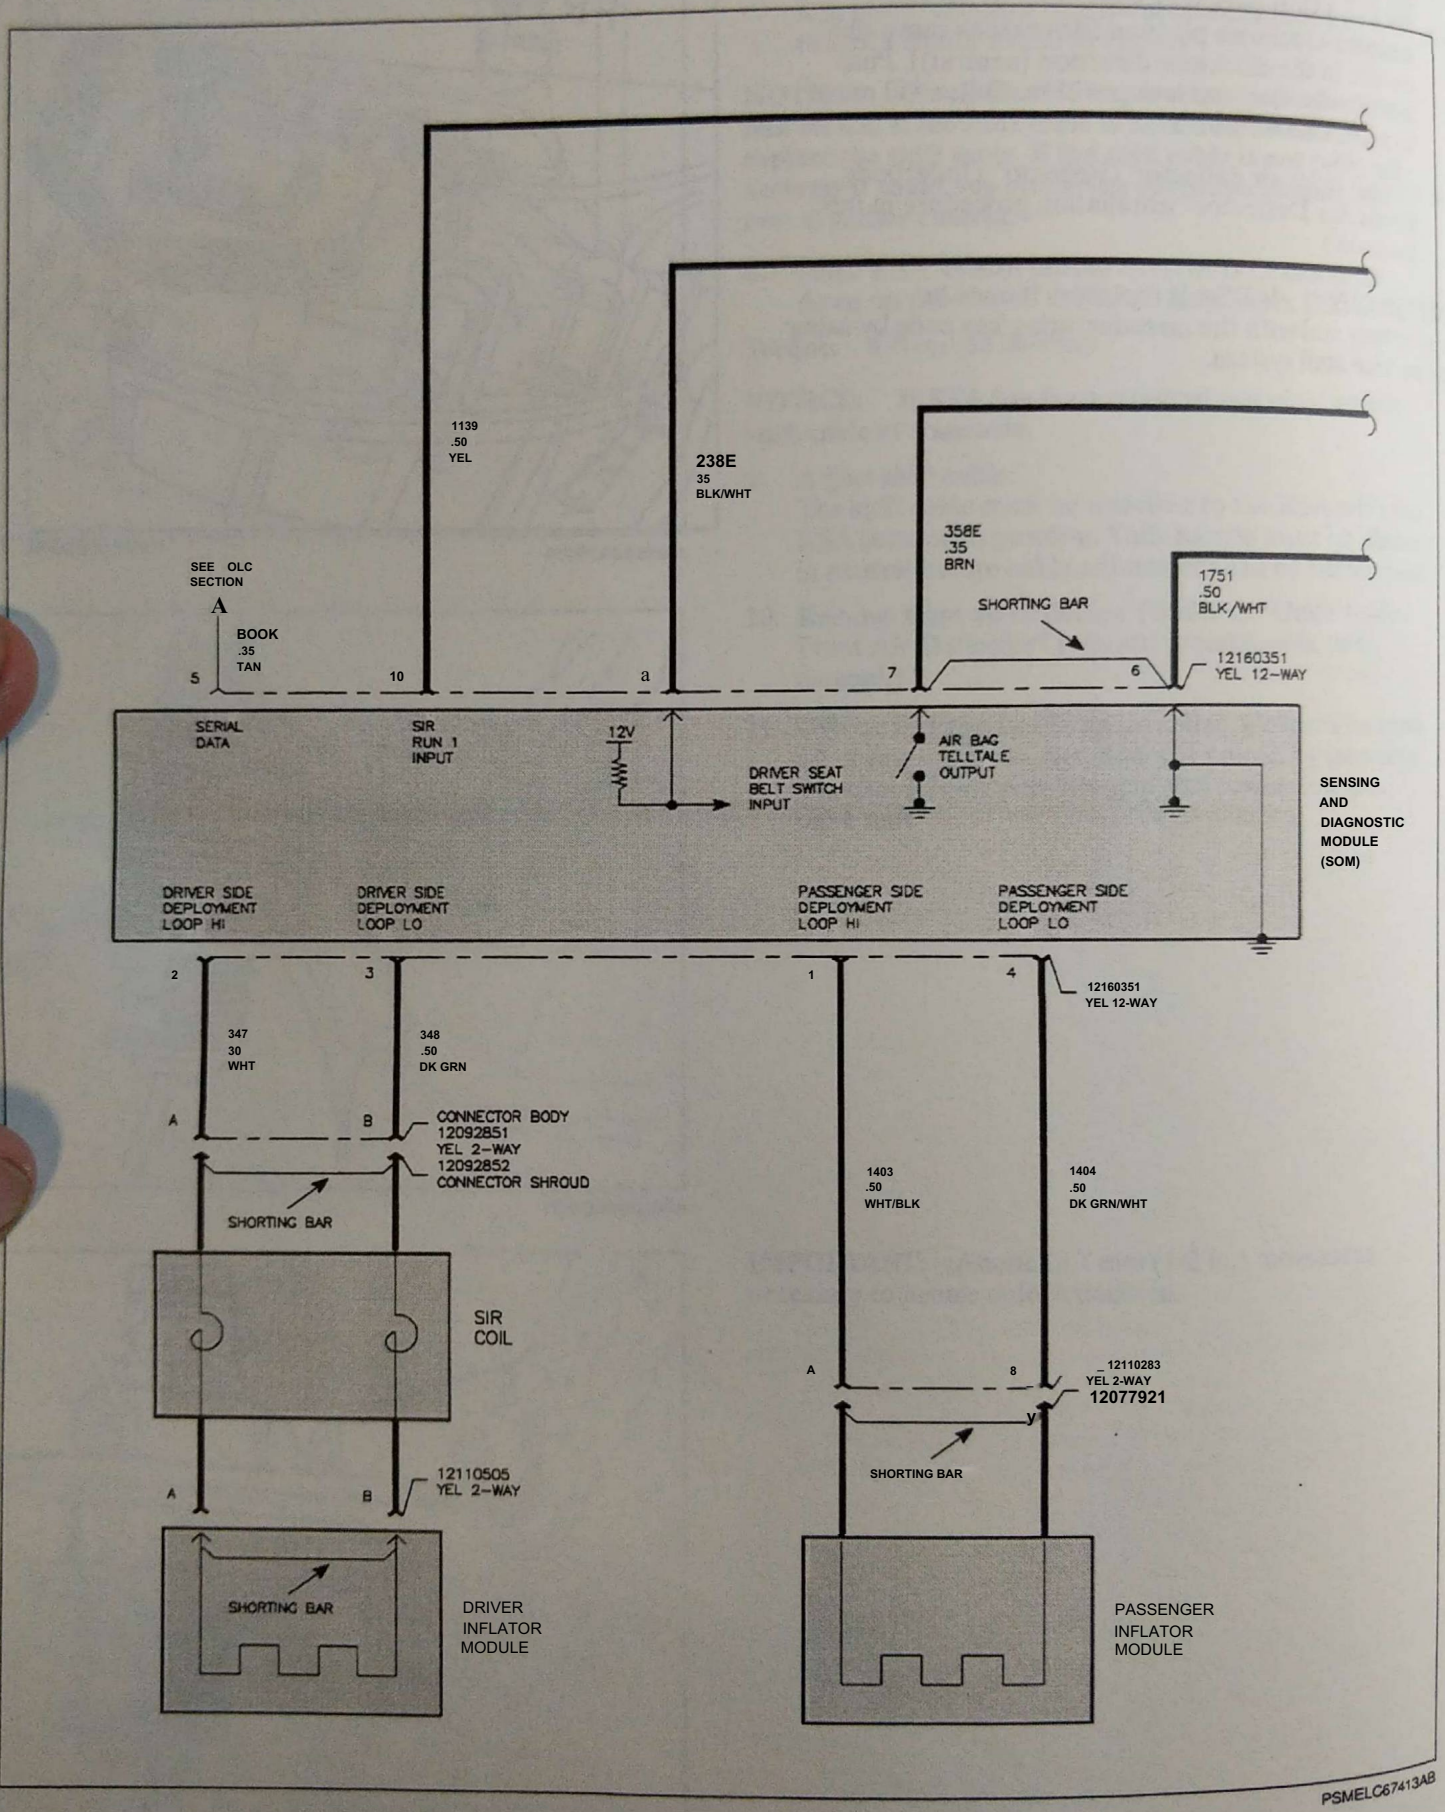

PSMELC67413AB

CamScanner

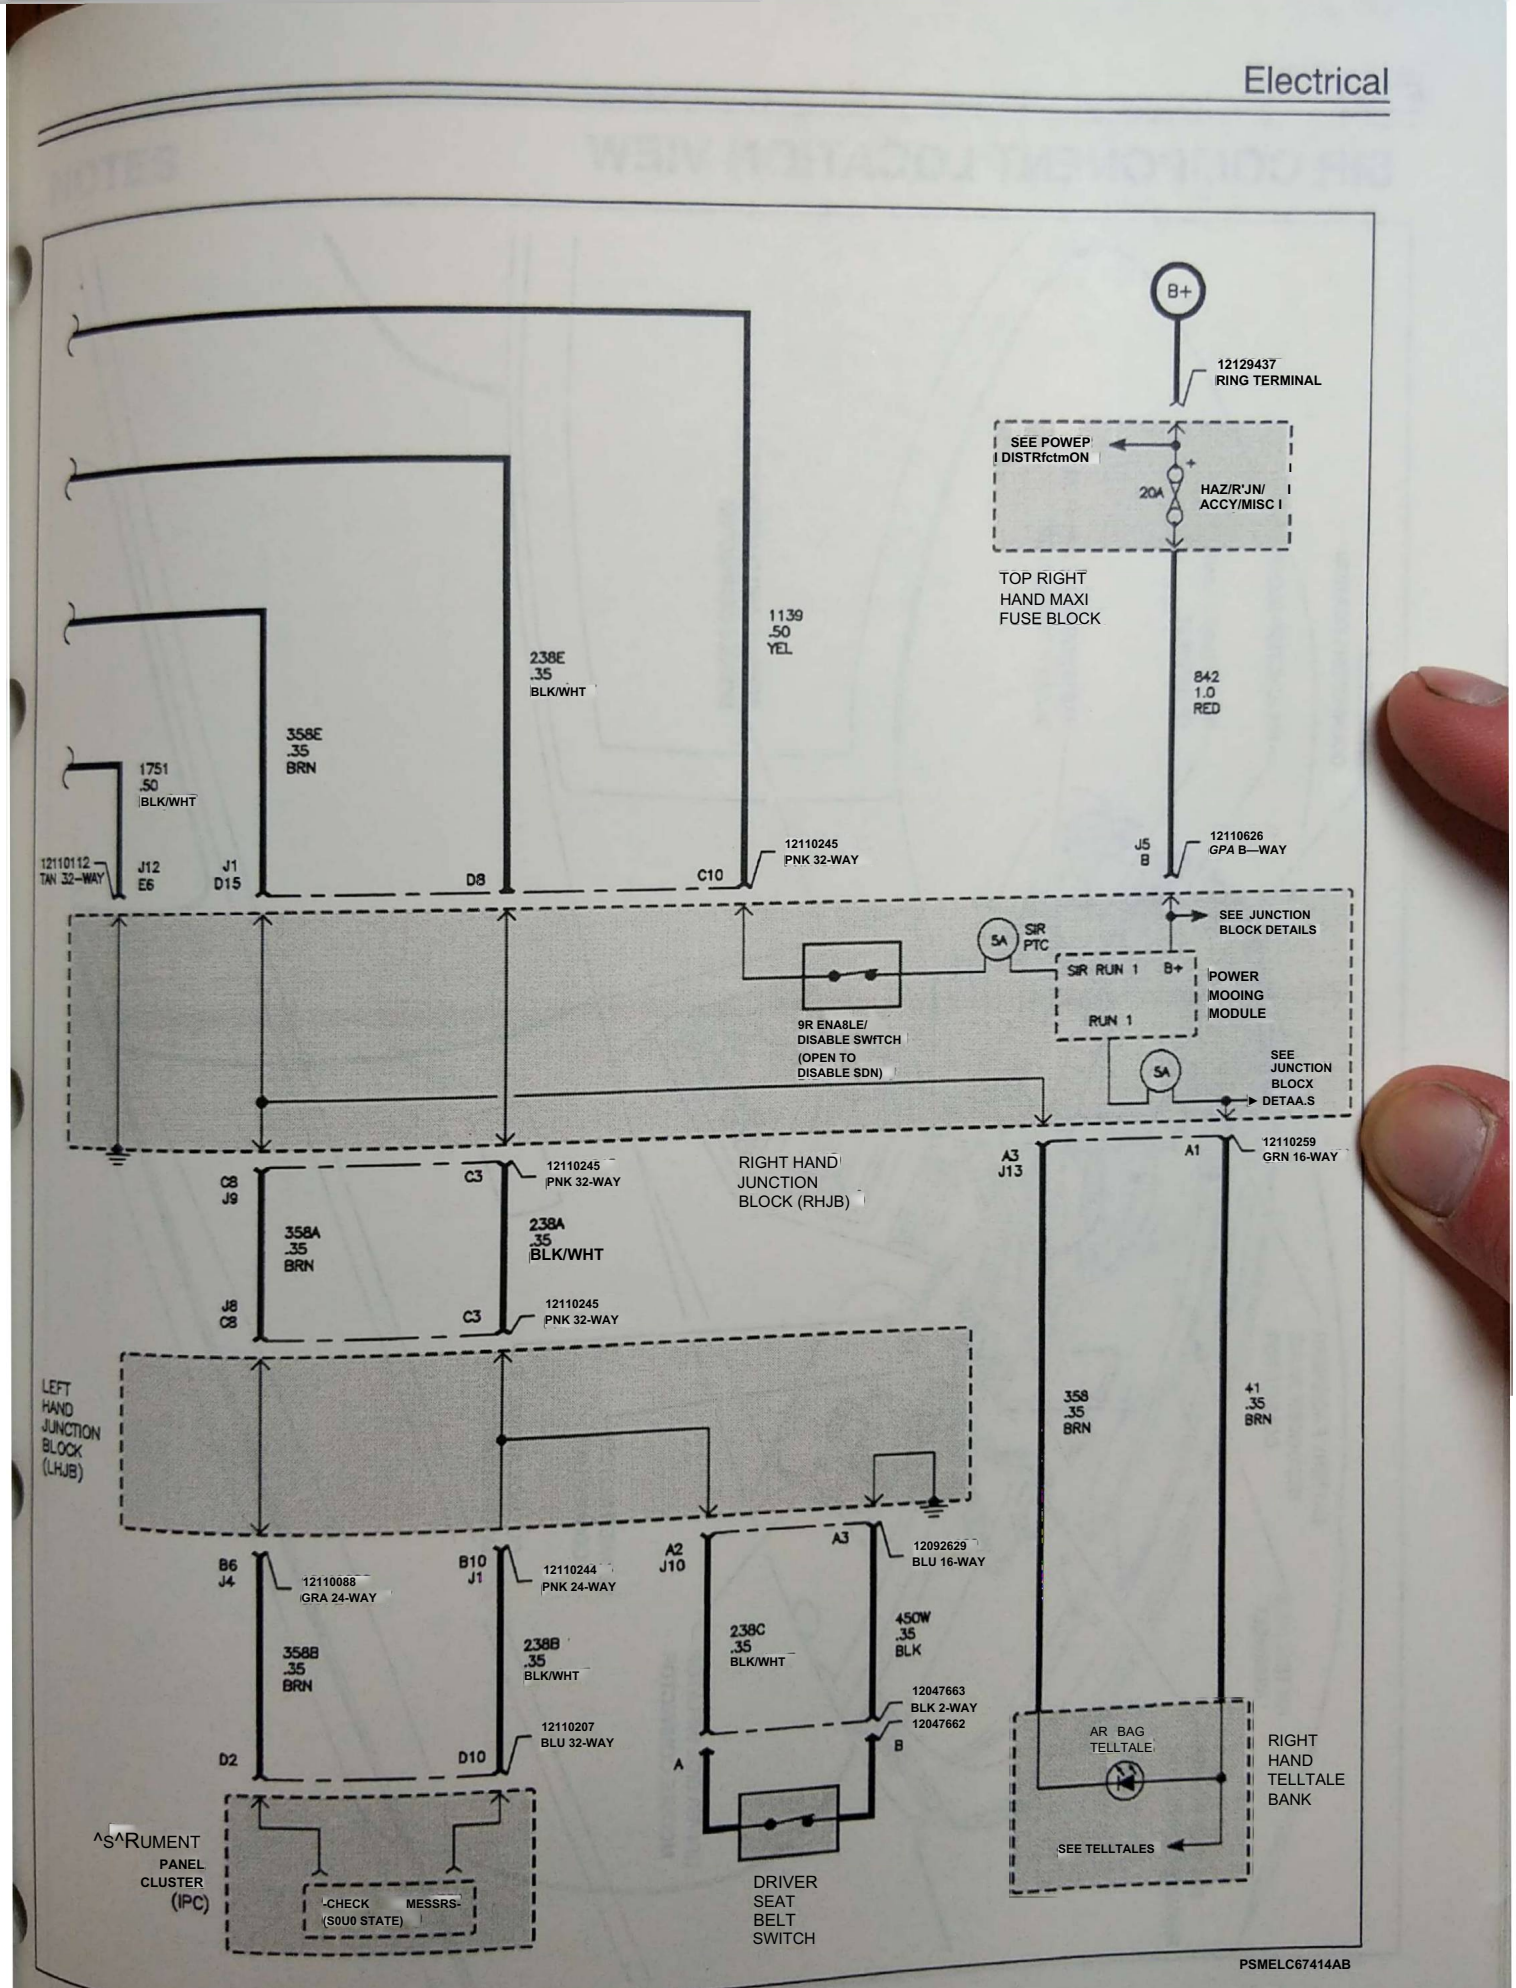
B+
12129437
RING TERMINAL
SEE POWEP
DISTRfctmON
20A
HAZ/R'JN/
ACCY/MISC I
TOP RIGHT
HAND MAXI
FUSE BLOCK
1139
.50
YEL
238E
.35
BLK/WHT
358E
.35
BRN
1751
.50
BLK/WHT
842
1.0
RED
12110112
TAN 32—WAY
J12
E6
J1
D15
D8
C10
12110245
PNK 32-WAY
J5
B
12110626
GPA B—WAY
SEE JUNCTION
BLOCK DETAILS
5A
SIR
PTC
SIR RUN 1
B+
POWER
MOOING
MODULE
RUN 1
9R ENA8LE/
DISABLE SWITCH
(OPEN TO
DISABLE SDN)
5A
SEE
JUNCTION
BLOCX
DETAA.S
C8
J9
C3
12110245
PNK 32-WAY
RIGHT HAND
JUNCTION
BLOCK (RHJB)
A3
J13
A1
12110259
GRN 16-WAY
358A
.35
BRN
238A
.35
BLK/WHT
J8
C8
C3
12110245
PNK 32-WAY
LEFT
HAND
JUNCTION
BLOCK
(LHJB)
358
.35
BRN
41
.35
BRN
B6
J4
12110088
GRA 24-WAY
B10
J1
12110244
PNK 24-WAY
A2
J10
A3
12092629
BLU 16-WAY
358B
.35
BRN
238B
.35
BLK/WHT
238C
.35
BLK/WHT
450W
.35
BLK
12047663
BLK 2-WAY
12047662
12110207
BLU 32-WAY
D2
D10
A
B
AR BAG
TELLTALE
RIGHT
HAND
TELLTALE
BANK
SEE TELLTALES
^S^RUMENT
PANEL
CLUSTER
(IPC)
-CHECK MESSRS-
(S0U0 STATE)
DRIVER
SEAT
BELT
SWITCH
PSMELC67414AB

CamScanner

SIR COMPONENT LOCATION VIEW

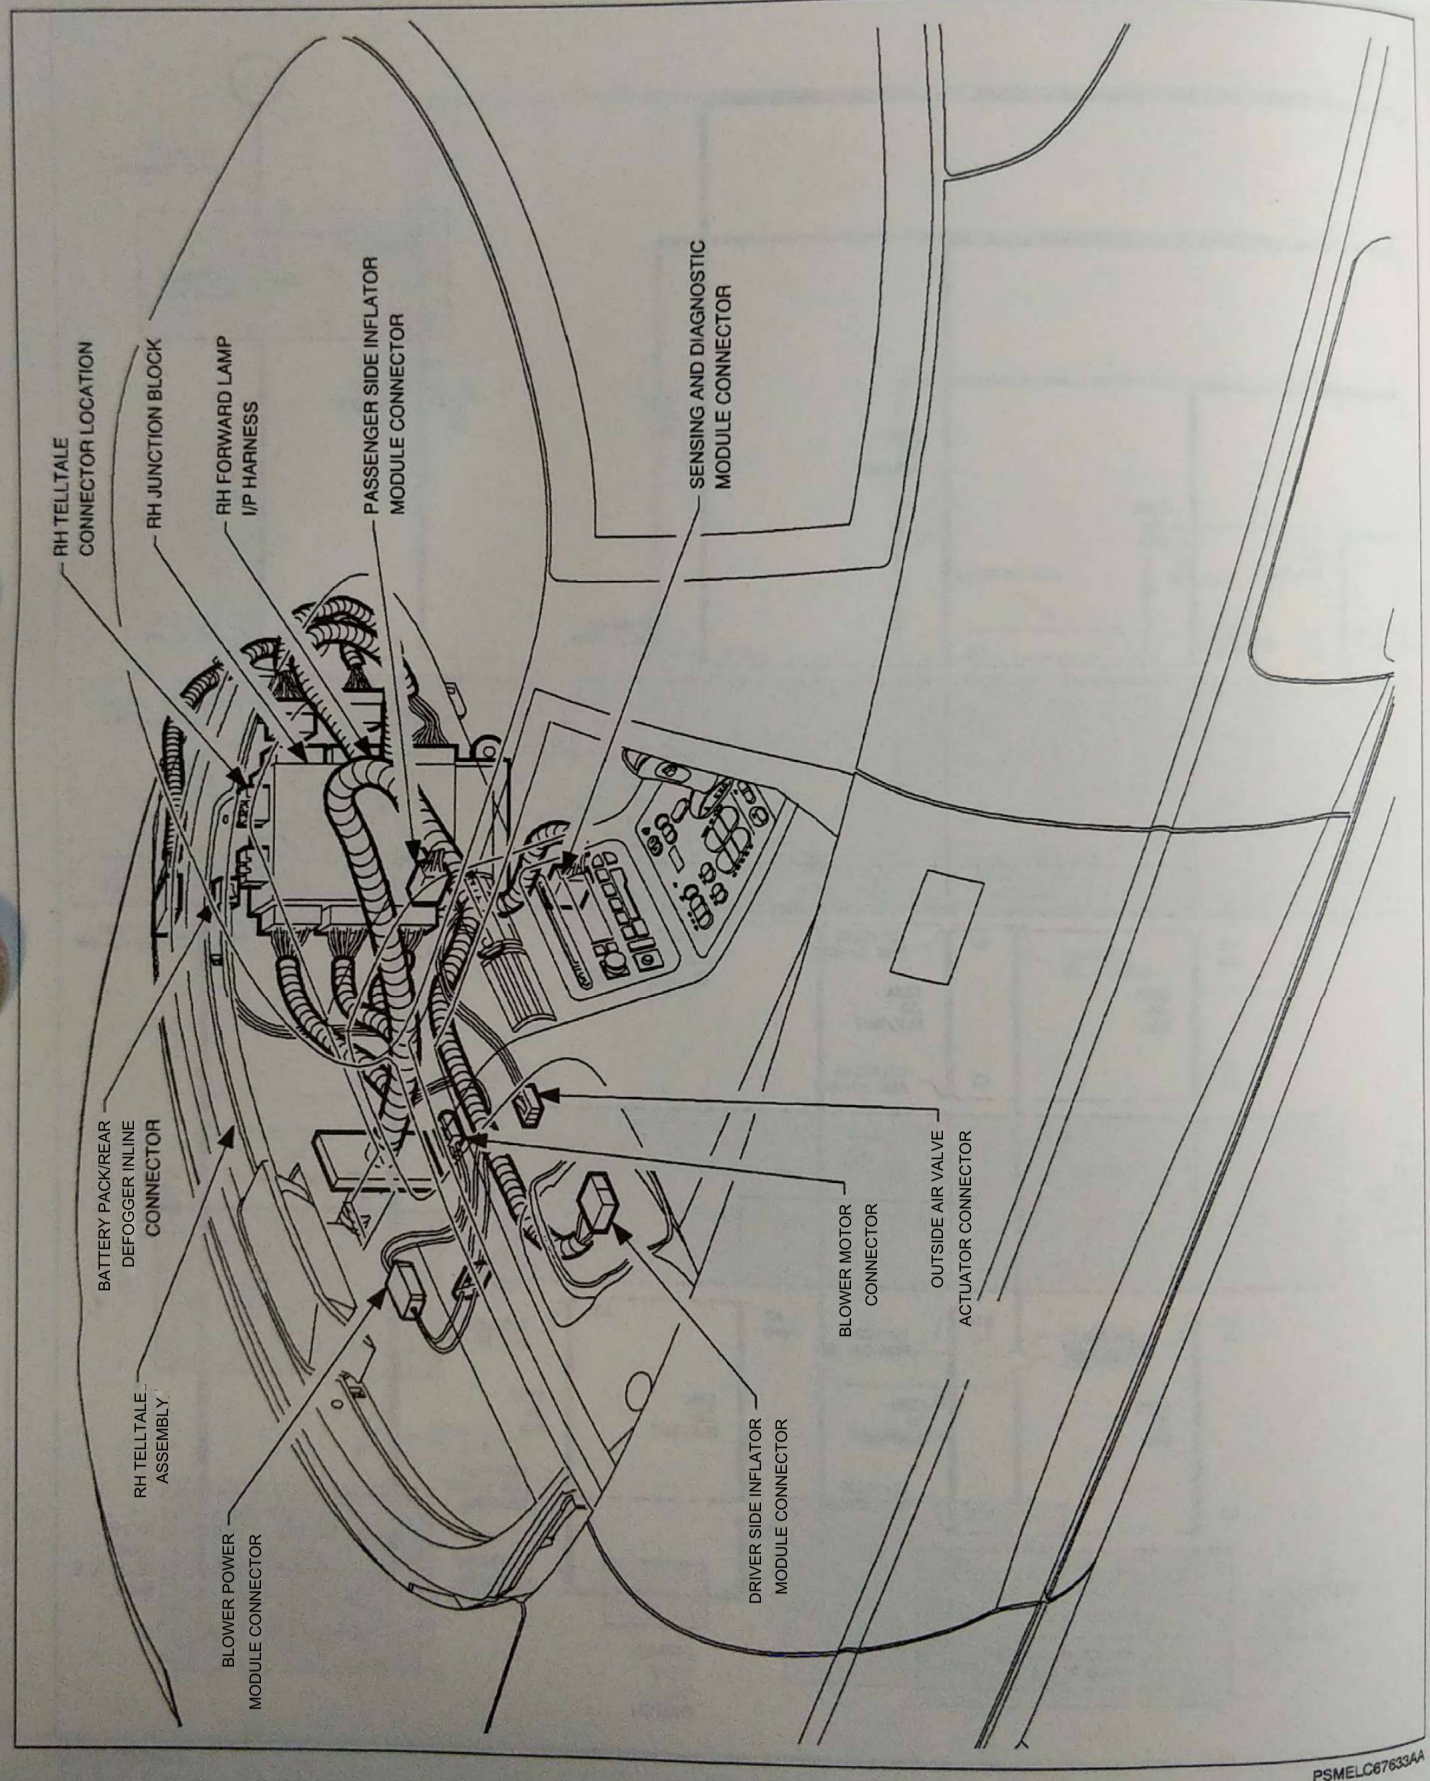
RH TELLTALE CONNECTOR LOCATION
RH JUNCTION BLOCK
RH FORWARD LAMP I/P HARNESS
PASSENGER SIDE INFLATOR MODULE CONNECTOR
SENSING AND DIAGNOSTIC MODULE CONNECTOR
BATTERY PACK/REAR DEFOGGER INLINE CONNECTOR
RH TELLTALE ASSEMBLY
BLOWER POWER MODULE CONNECTOR
DRIVER SIDE INFLATOR MODULE CONNECTOR
BLOWER MOTOR CONNECTOR
OUTSIDE AIR VALVE ACTUATOR CONNECTOR
PSMELC67633AA

NOTES

CamScanner

TELLTALES

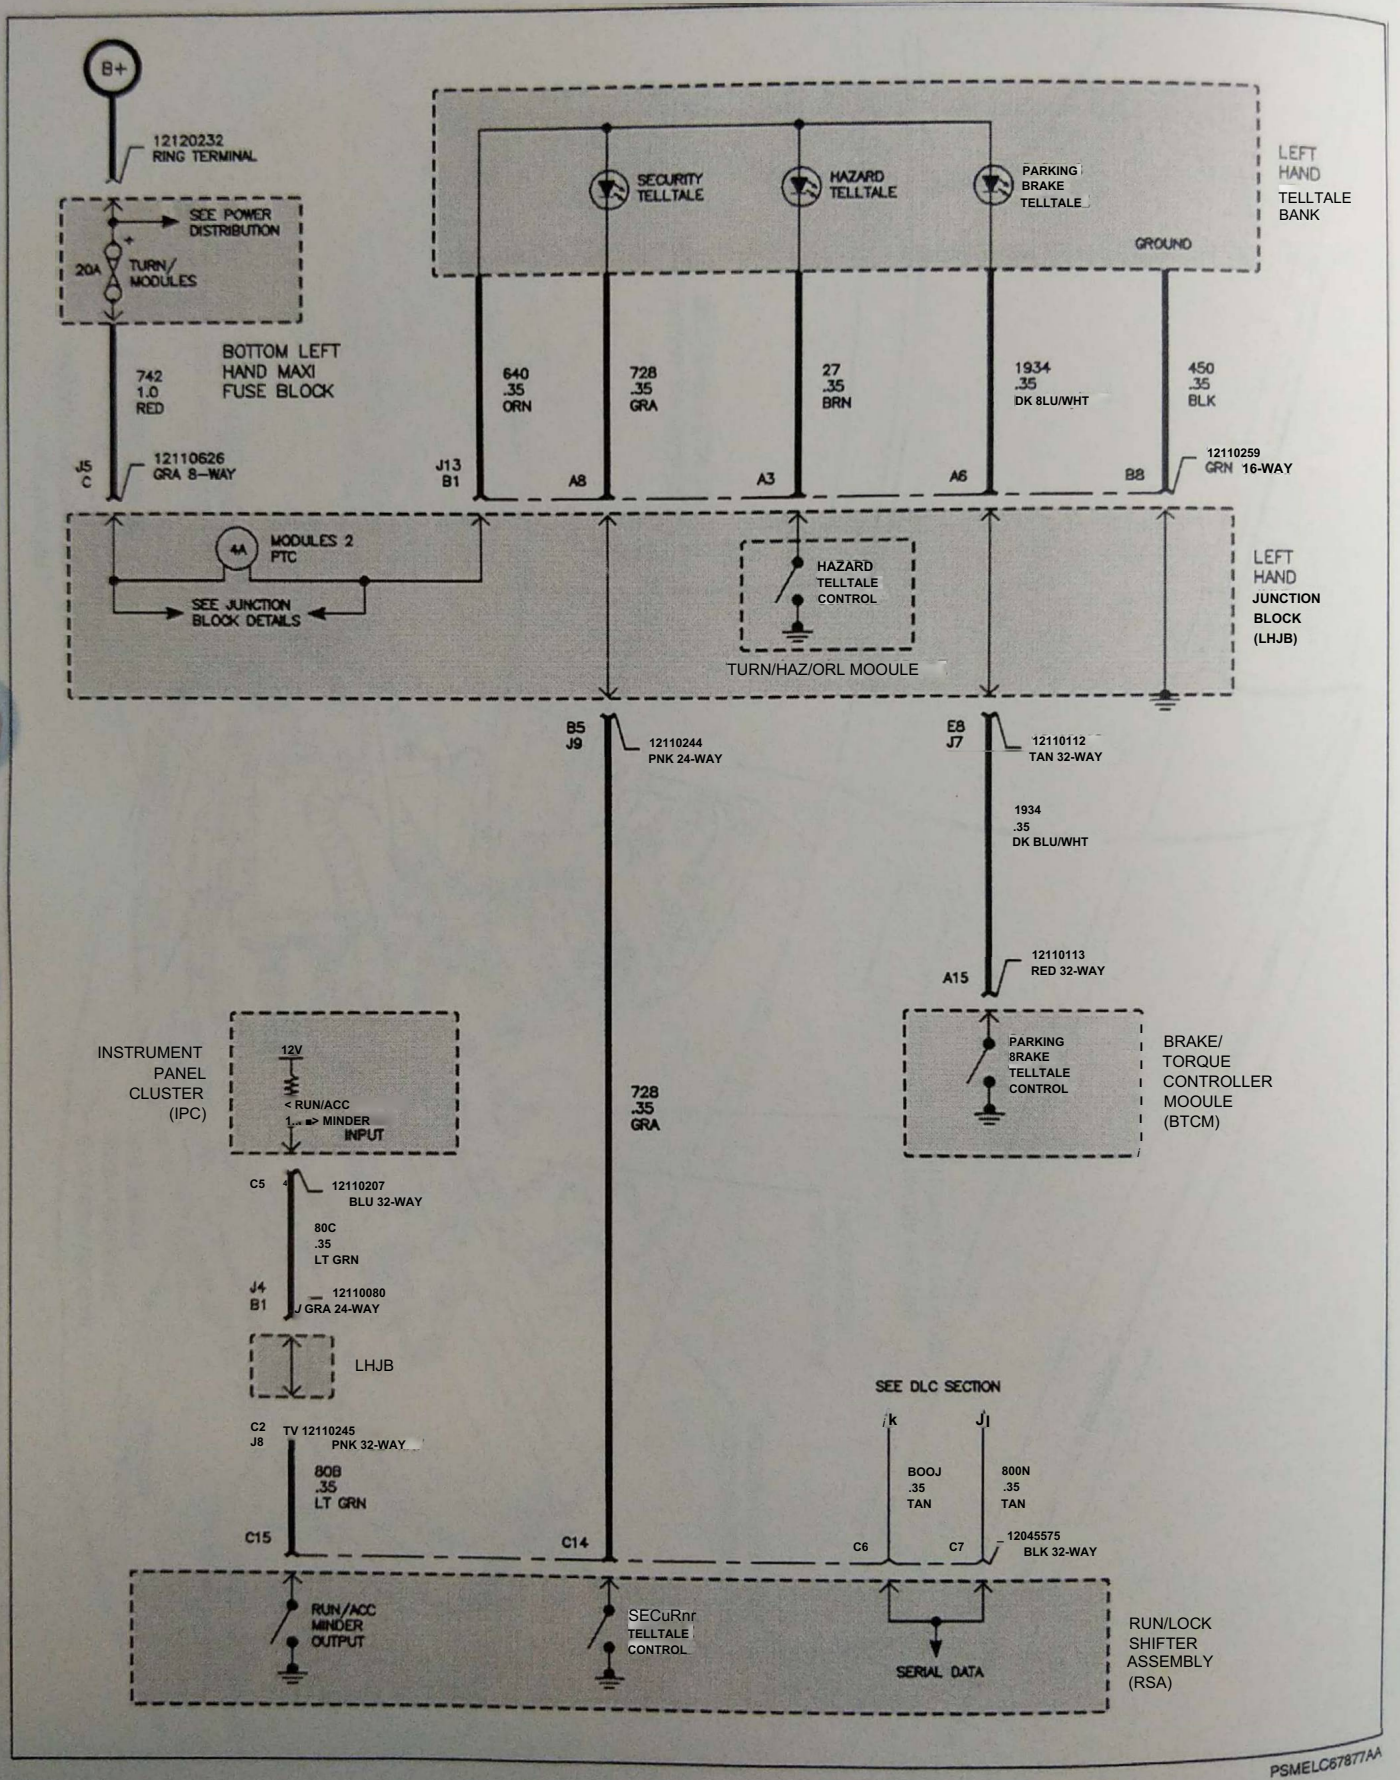

CamScanner

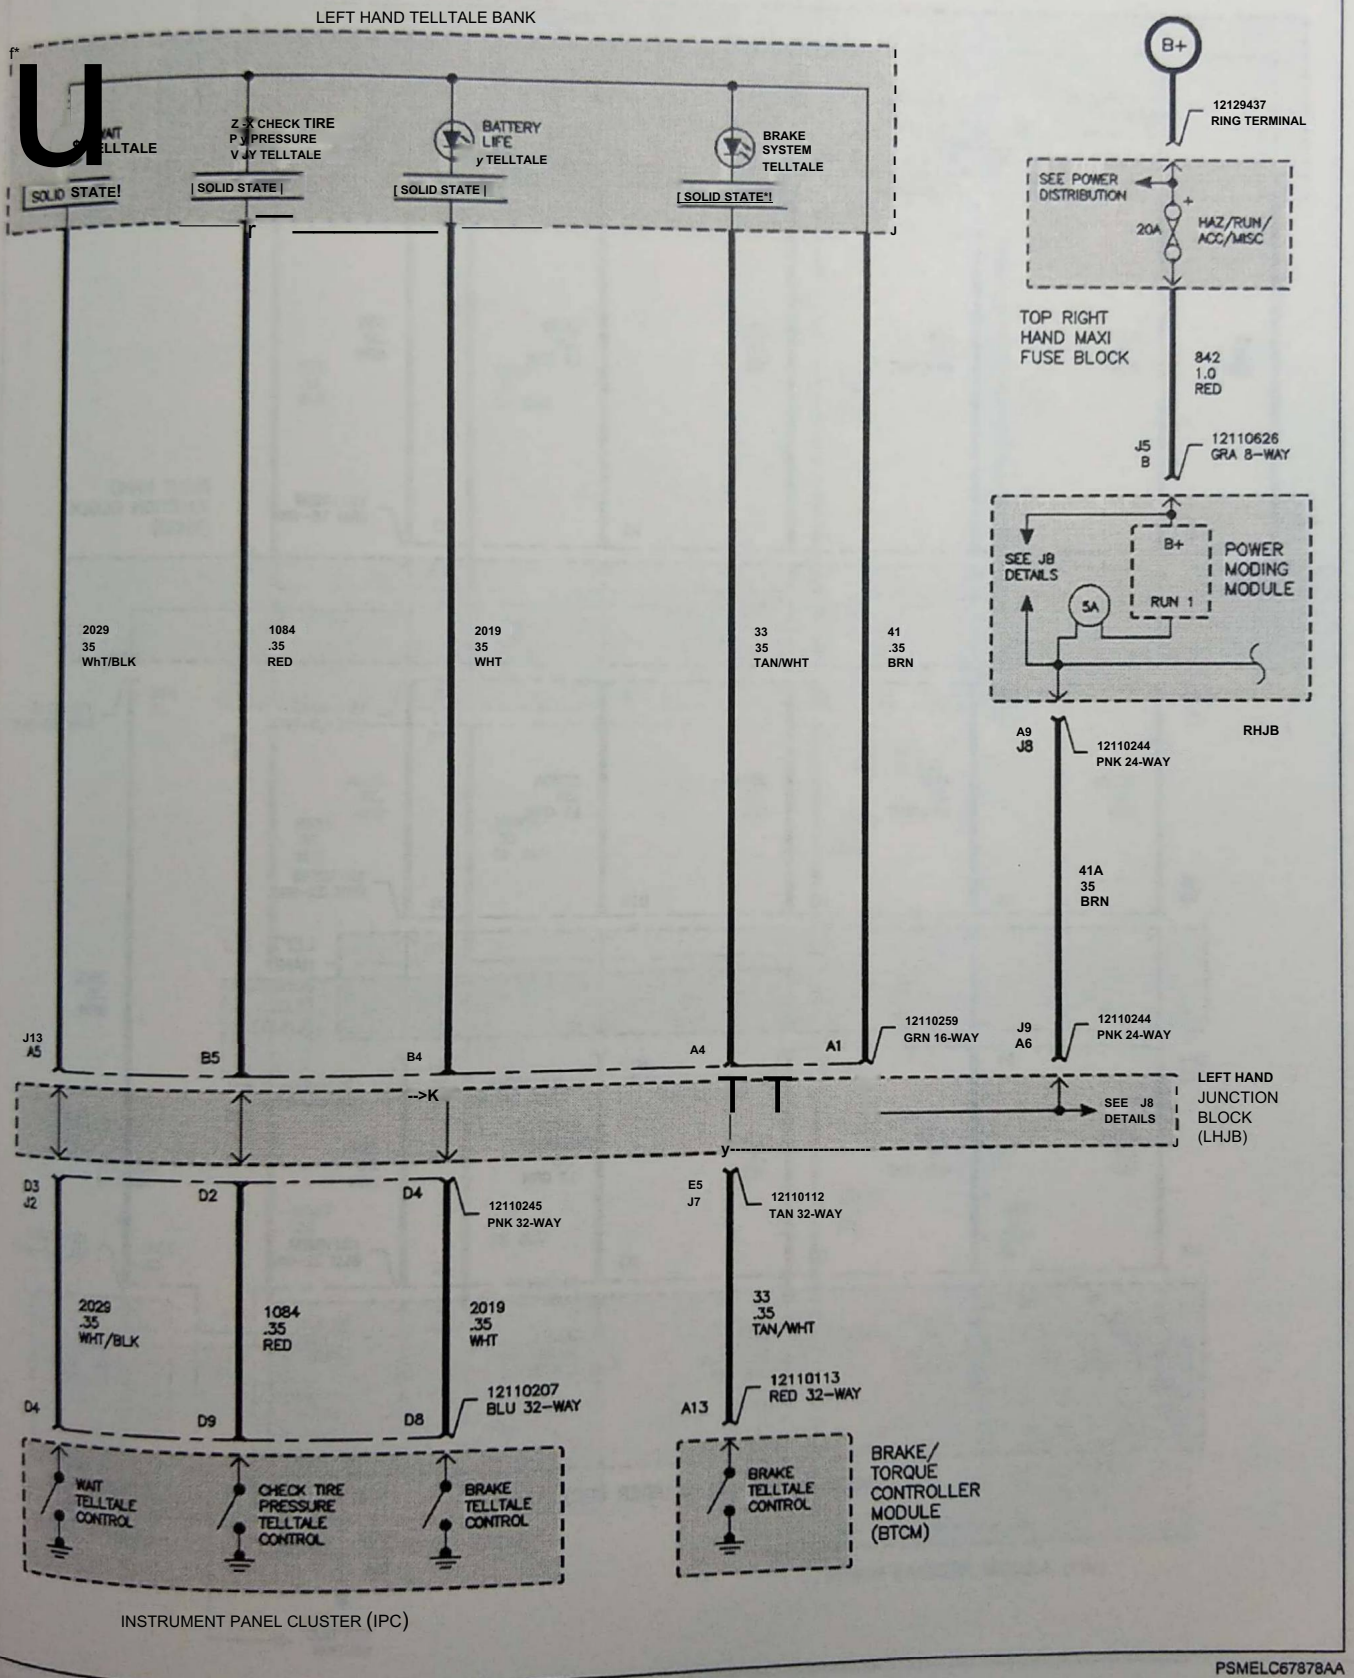

PSMELC67878AA

CamScanner

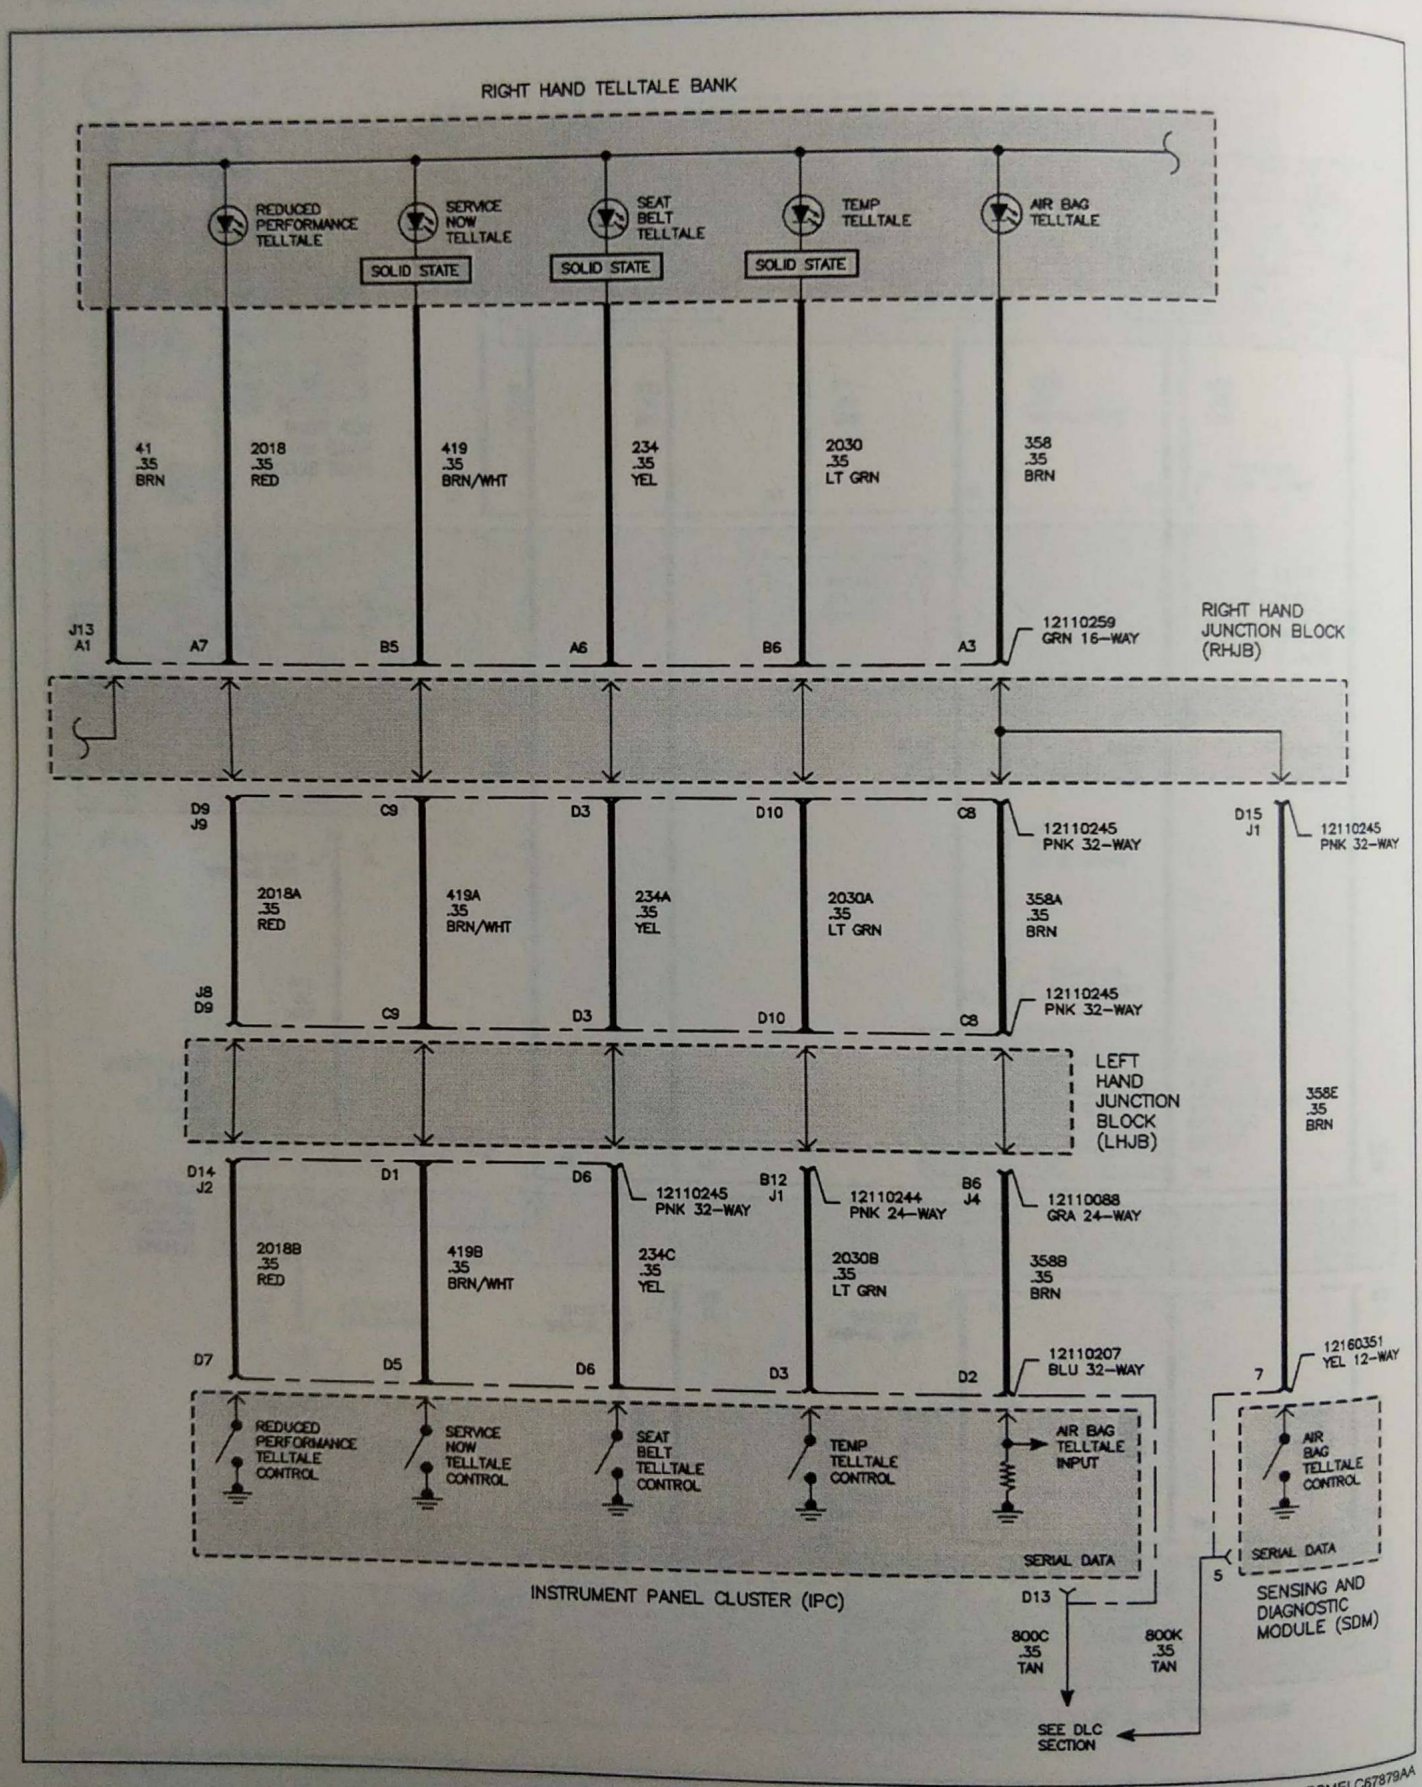
RIGHT HAND TELLTALE BANK
REDUCED PERFORMANCE TELLTALE
SERVICE NOW TELLTALE
SEAT BELT TELLTALE
TEMP TELLTALE
AIR BAG TELLTALE
SOLID STATE
SOLID STATE
SOLID STATE
41 .35 BRN
2018 .35 RED
419 .35 BRN/WHT
234 .35 YEL
2030 .35 LT GRN
358 .35 BRN
J13 A1
A7
B5
A6
B6
A3
12110259 GRN 16-WAY
RIGHT HAND JUNCTION BLOCK (RHJB)
D9 J9
C9
D3
D10
C8
12110245 PNK 32-WAY
D15 J1
12110245 PNK 32-WAY
2018A .35 RED
419A .35 BRN/WHT
234A .35 YEL
2030A .35 LT GRN
358A .35 BRN
J8 D9
C9
D3
D10
C8
12110245 PNK 32-WAY
LEFT HAND JUNCTION BLOCK (LHJB)
358E .35 BRN
D14 J2
D1
D6
12110245 PNK 32-WAY
B12 J1
12110244 PNK 24-WAY
B6 J4
12110088 GRA 24-WAY
2018B .35 RED
419B .35 BRN/WHT
234C .35 YEL
2030B .35 LT GRN
358B .35 BRN
D7
D5
D6
D3
D2
12110207 BLU 32-WAY
7
12160351 YEL 12-WAY
REDUCED PERFORMANCE TELLTALE CONTROL
SERVICE NOW TELLTALE CONTROL
SEAT BELT TELLTALE CONTROL
TEMP TELLTALE CONTROL
AIR BAG TELLTALE INPUT
AIR BAG TELLTALE CONTROL
SERIAL DATA
SERIAL DATA
5
INSTRUMENT PANEL CLUSTER (IPC)
SENSING AND DIAGNOSTIC MODULE (SDM)
D13
800C .35 TAN
800K .35 TAN
SEE DLC SECTION
PSMELC67879AA

CamScanner

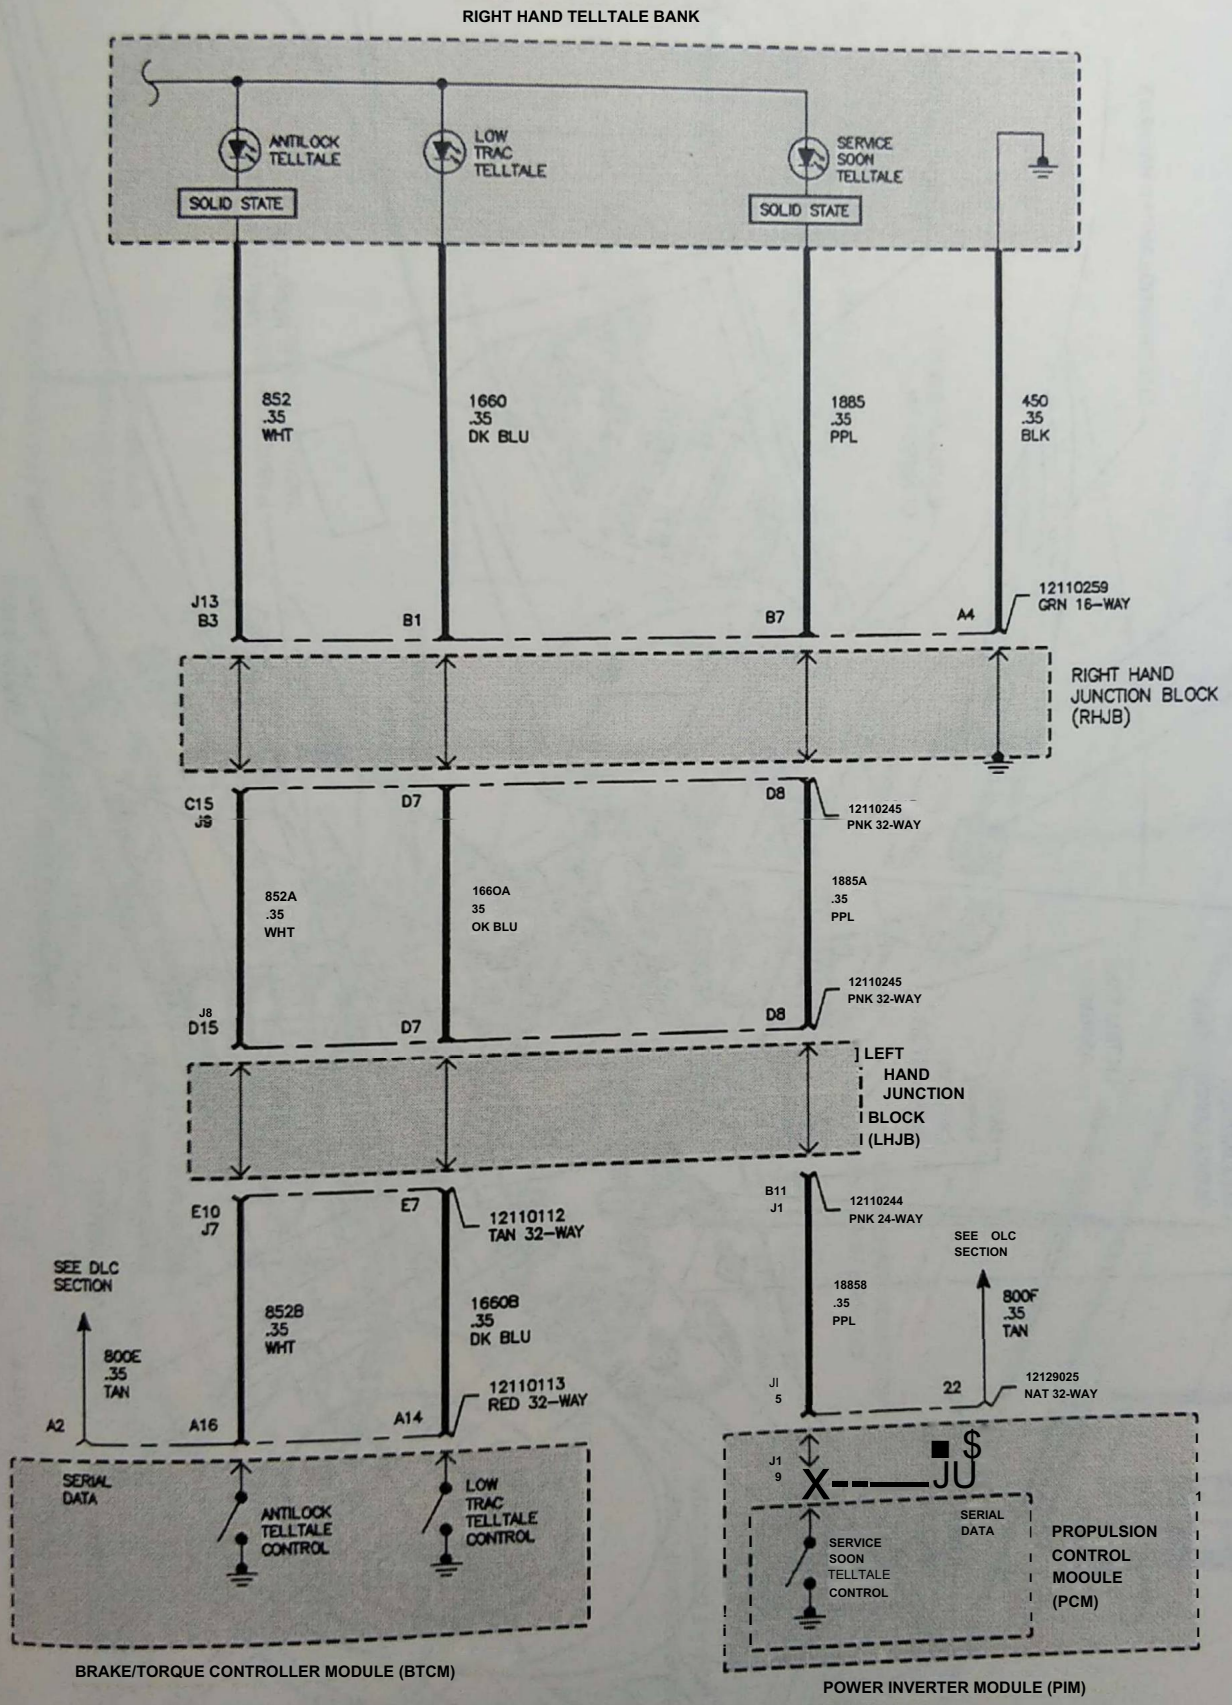

PSMELC67880AA

CamScanner

TELLTALES COMPONENT LOCATION VIEWS

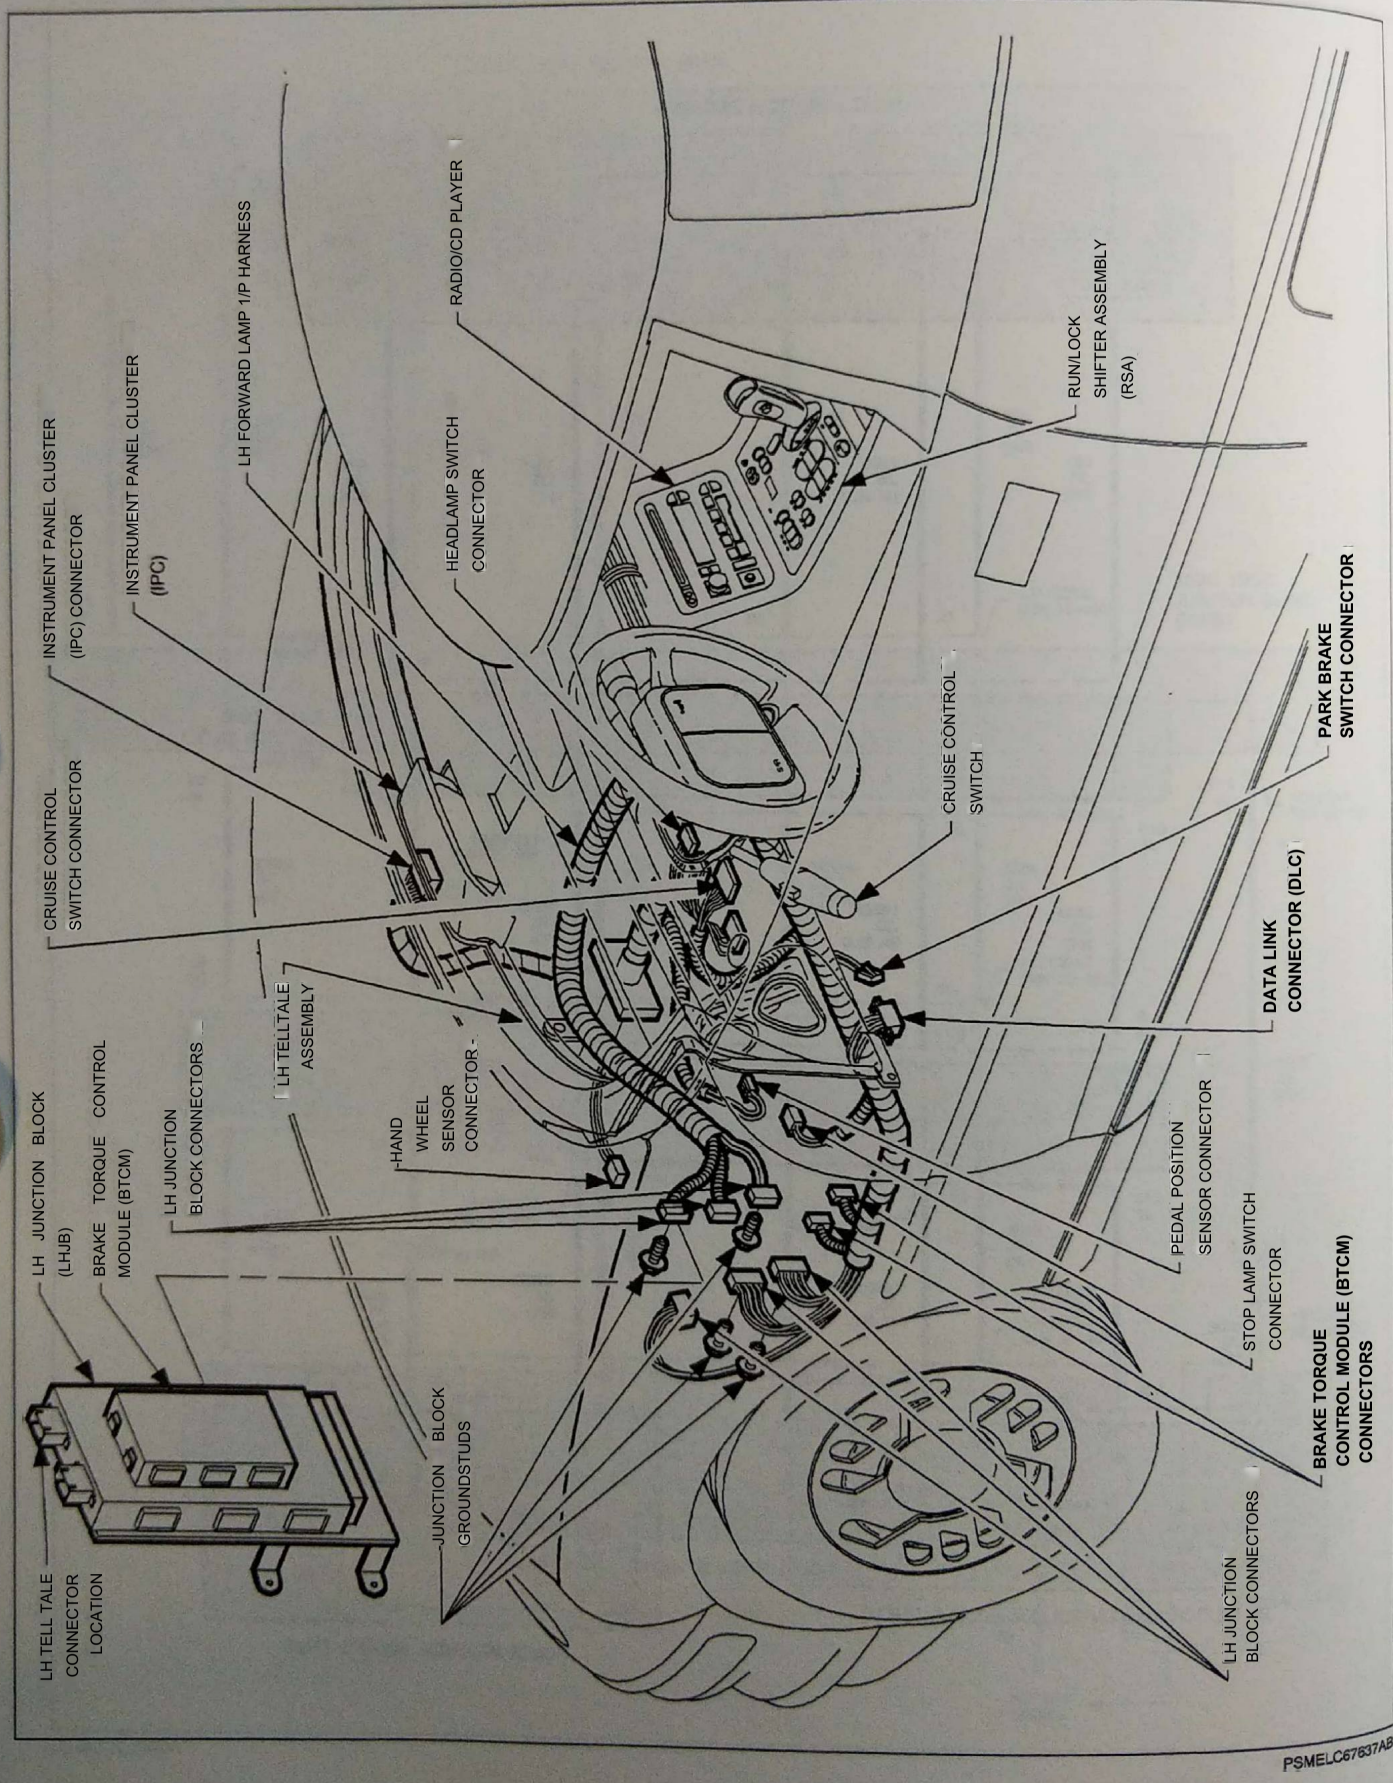

TELLTALES COMPONENT LOCATION VIEWS (CONTINUED)

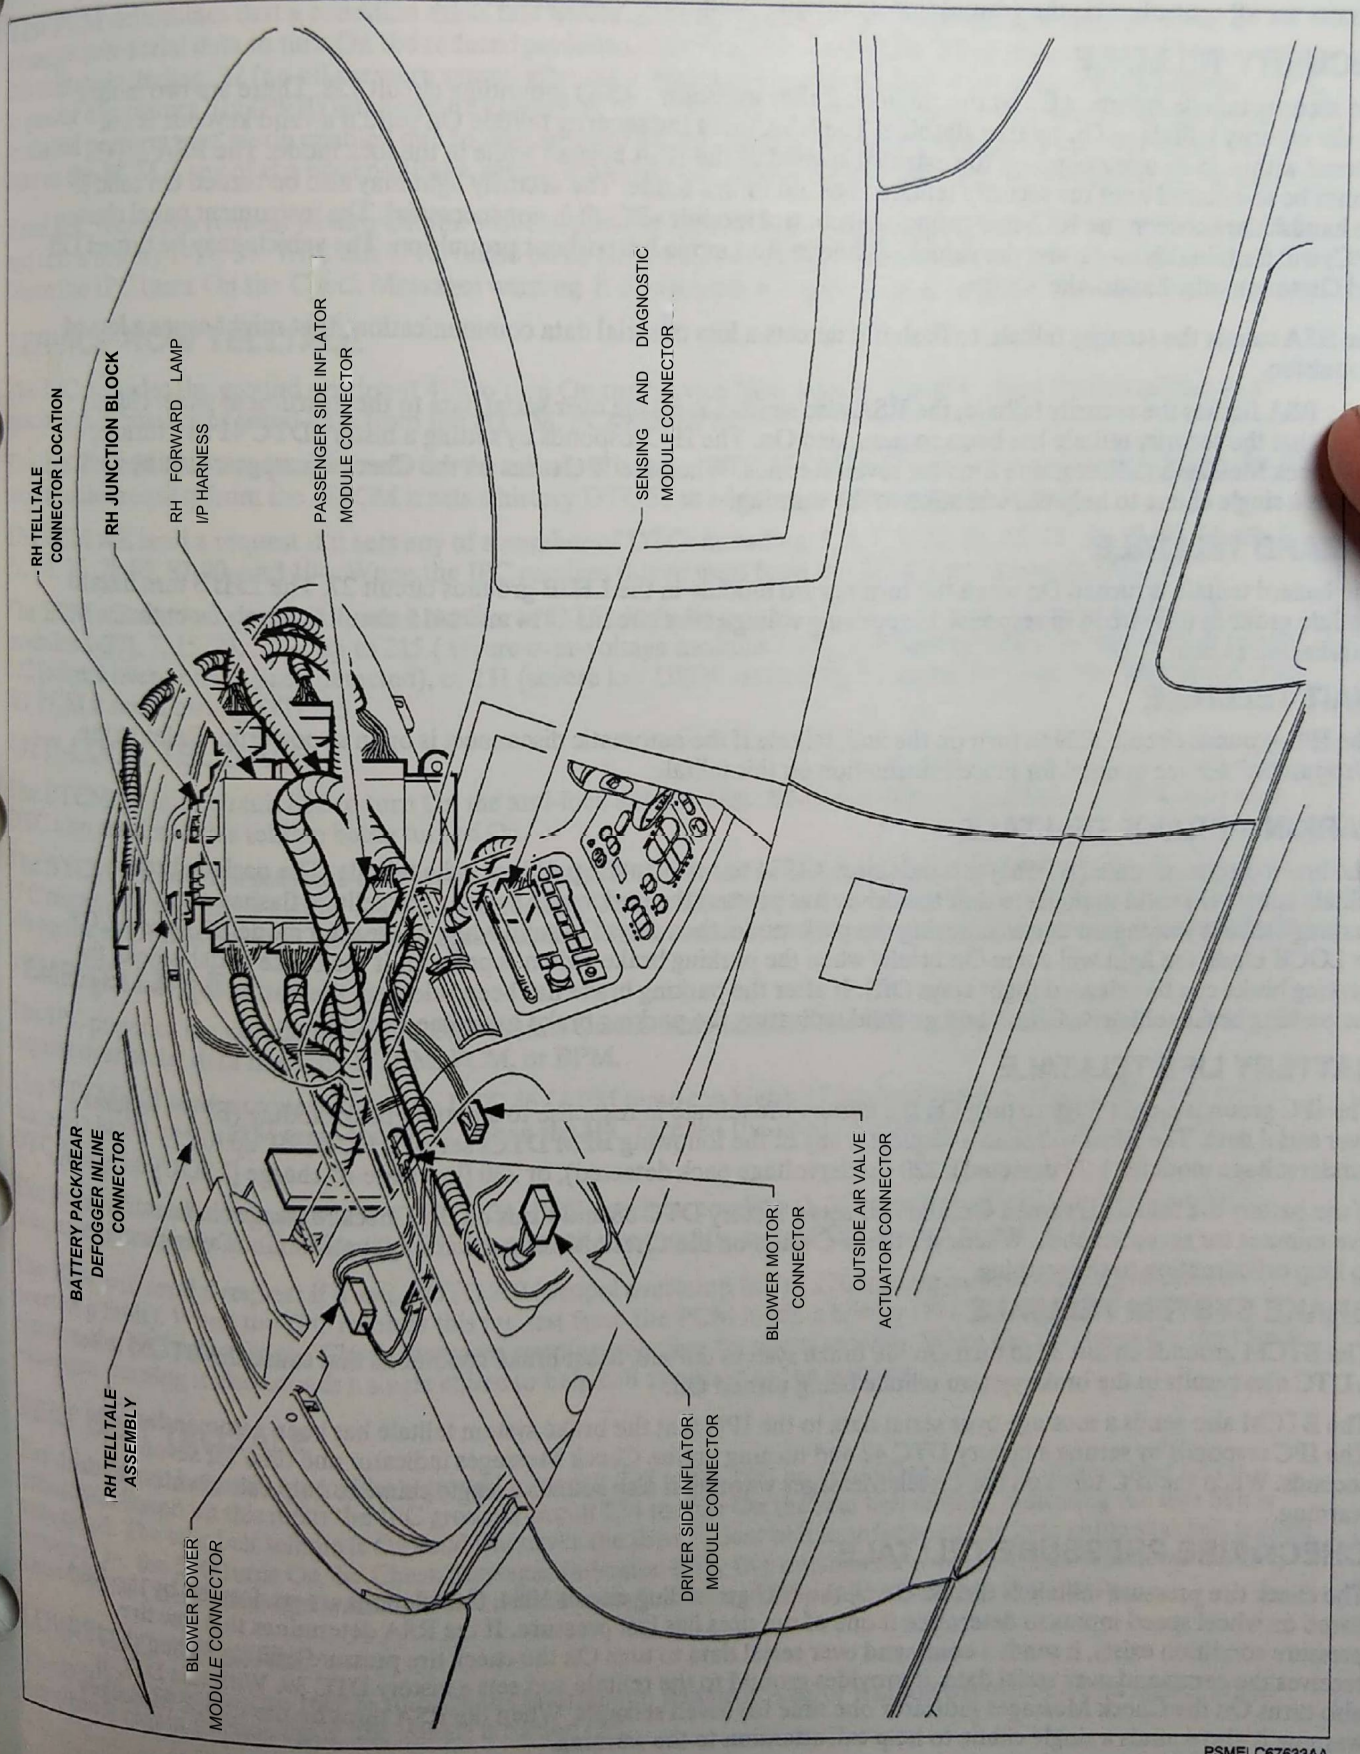
RH TELLTALE CONNECTOR LOCATION
RH JUNCTION BLOCK
RH FORWARD LAMP I/P HARNESS
PASSENGER SIDE INFLATOR MODULE CONNECTOR
SENSING AND DIAGNOSTIC MODULE CONNECTOR
BATTERY PACK/REAR DEFOGGER INLINE CONNECTOR
RH TELLTALE ASSEMBLY
BLOWER POWER MODULE CONNECTOR
DRIVER SIDE INFLATOR MODULE CONNECTOR
BLOWER MOTOR CONNECTOR
OUTSIDE AIR VALVE ACTUATOR CONNECTOR
PSMELC67633AA

TELLTALES

The power for most of the telltales comes from circuit 41, which is Run 1 power. Three telltales (security, hazard and park brake) receive a hot at all times power feed so they can be turned On without the vehicle in Run mode. The telltales are all controlled on the ground side by various modules as described below.

SECURITY TELLTALE

The security telltale is turned On by the run/lock shifter assembly (RSA) grounding circuit 728. There are two modes for the security telltale – On solid or flashing. The RSA turns the security telltale On solid if a valid keycode is not entered within 25 or more digits on the external keypad or the RSA keypad while in the lock mode. The RSA DTC cannot be re-entered until the security telltale goes out in this mode. The security light may also be turned On solid if the handshake between the RSA and propulsion control module (PCM) is not successful. The instrument panel cluster (IPC) will flash in this mode and the vehicle will be in Run mode but without propulsion. The vehicle may be turned Off and On to retry the handshake.

The RSA causes the security telltale to flash if it detects a loss of serial data communications that might cause a loss of propulsion.

If the RSA flashes the security telltale, the RSA also sends a message over serial data to the instrument panel cluster (IPC) that the security telltale has been commanded On. The IPC responds by setting a history D r L 41 and turning on the Check Messages indicator one time for seven seconds. When the IPC turns on the Check Messages warning it also sounds a single chime to help call attention to the warning.

HAZARD TELLTALE

The hazard telltale is turned On when the turn/hazard module in the LHJB grounds circuit 27. The LHJB turn hazard module grounds this circuit in response to receiving voltage over circuits 1414 and 1415 simultaneously from the turn/hazard switch.

WAIT TELLTALE

The IPC grounds circuit 2029 to turn on the wait telltale if the automatic disconnect is open at powerup. Refer to the "Propulsion" service manual for more information on this telltale.

PARKING BRAKE TELLTALE

The brake torque module (BTCM) grounds circuit 1934 to turn On the parking brake telltale. The parking brake telltale comes On solid to indicate that the driver has pressed the park brake switch. The telltale flashes when the parking brake is coming on due to entering the park mode, then stays On solid while in the Run mode. If in the ACCY or LOCK mode the light will come On briefly when the parking brake switch is pressed. If the brake pedal is held, the parking brake can be released (light stays Off). If after the parking brake has been released, the button is pressed again, the parking brake telltale will flash and go solid indicating the parking brake has come back On.

BATTERY LIFE TELLTALE

The IPC grounds circuit 2019 to turn On the battery life telltale in response to a battery pack module (BPM) request over serial data. The BPM will send a request if any of the following BPM DTCs set = 5,13, 21, 29, up to 213 (undervoltage modules 1-27 detected), 220 (undervoltage pack detected), or 230 (low state-of-charge [LSOC] detected).

If the battery life telltale is turned On, the IPC sets a history DTC 38 and turns on the Check Messages indicator even- five minutes for seven seconds. Whenever the IPC turns on the Check Messages warning it also sounds a single chime to help call attention to the warning.

BRAKE SYSTEM TELLTALE

The BTCM grounds circuit 33 to turn On the brake system telltale. Most brake conditions that cause the BTCM to set a DTC also results in the brake system telltale being turned On.

The BTCM also sends a message over serial data to the IPC that the brake system telltale has been commanded On. The IPC responds by setting a history DTC 42 and turning on the Check Messages indicator one time for seven seconds. When the IPC turns on the Check Messages warning it also sounds a single chime to help call attention to the warning.

CHECK TIRE PRESSURE TELLTALE

The check tire pressure telltale is turned On by the IPC grounding circuit 1084. Calculations are performed by the RSA based on wheel speed inputs to determine if one of the tires has lost pressure. If the RSA determines that low tire pressure condition exists, it sends a command over serial data to turn On the check tire pressure telltale. When the IPC receives the command over serial data, it provides ground to the telltale and sets a history DTC 39. With this DTC it also turns On the Check Messages indicator one time for seven seconds. When the RSA turns on the Check Messages warning it also sounds a single chime to help call attention to the warning.

For more information on the check tire pressure system refer to "Check Tire Pressure System" in this manual.

CamScanner

REDUCED PERFORMANCE TELLTALE

ft\PrgM redUCeS VehiCᵗC pcrformance lf Certain failure modes are detected, or if the batteries become severely dis a ed.

the PCM determines that a condition exists that would cause it to enter reduced norto™ ₄▪ Message over serial data to turn On the reduced performance telltale. Several PCM?DT QresuhTn^hVpc^5 * his telltale including: 32 (no oil pressure sensed after oil pressure commanded) 36 (motor tempemure ex^ee'S nj'c Kpower electronics bay (PEB) temperature exceeds 74°C), 53 (low battery power output capabilitydetected) amlof reduced performance mode enabled due to request from BPM). The BPM requests reducedperfoCnc^ lata to the PCM if any of the under-voltage, severe under-voltage, over-voltage or severe over voltage DT(S are set

[f the IPC receivess at request 1to turn On the reduced performance telltale, it grounds circuit 2018 to turn On the telltale and sets a history DTC 37. With this DTC it also turns On the Check Messages indictor one time for seven seconds. When the IPC turns On the Check Messages warning it also sounds a single chime to help call attention to the warning.

SERVICE NOW TELLTALE

The IPC provides the ground on circuit 419 to turn On the Service Now telltale. The IPC turns On this telltale as a result of a request over serial data from the HTCM, PCM. or BPM.

The HTCM will send a request to turn On the telltale if it sets a DTC 37 (APM 12V out of range major). When the IPC receives this request from the HTCM it sets a history DTC 31 in addition to turning on the telltale.

TheJPCM will send a request if it sets any of a number of DTCs including: 5, 6, 7, 9,32,43, 44,45,52,59, 60, 61, 69, 71, 72,74,76,78-85,87-90, and 104. When the IPC receives this request from the PCM it sets a history DTC 33.

The BPM will send a request if it sets a number of DTCs including: 6,14,22,30, - up to 214 (severe under-voltage modules 1-27), 7,15,23, 31 — up to 215 (severe over-voltage modules 1-27), 221 (severe under-voltage pack detected), 222 (severe over-voltage pack detected), or 231 (severe low USOC detected). When the IPC receives this request from the PCM it sets a history DTC 35.

ANTI-LOCK TELLTALE

The BTCM grounds circuit 852 to turn On the anti-lock telltale. Most brake conditions that cause the BTCM to set a IDTC also results in this telltale being turned On.

The BTCM also sends a message over serial data to the IPC that the anti-lock telltale has been commanded On. The IPC responds by setting a history DTC 43 and turning On the Check Messages indicator one time for seven seconds. Wn the IPC turns On the Check Messages warning it also sounds a single chime to help call attention to the warning.

TEMP TELLTALE

The IPC provides the ground on circuit 2030 to turn On the temp telltale. The IPC turns On this telltale as a result of a request over serial data from the HTCM, PCM, or BPM.

The HTCM will send a request if it sets a DTC 46 (APM temp too high), 47 (coolant temp too high). 48 (drive unit temp t DTC 3? high) ○r 49 (PIM tCmP t0○ high)' WhCn thC IPC reC6iVeS thiS reqU£St fr○m the HTCM K SCtS 3 hlSWry

Vhe PCM will send a request if it sets a DTC 34 (PEB overheat condition), 36 (motor temp exceeds 175°C or PEB te®perature exceeds 74°C). When the IPC receives this request from the PCM it sets a history DTC 34.

The BPM will send a reauest if it sets a DTC 269 (propel overtemp fault), 270 (charge overtemp fault), or 288 (CP overtemp fault). When XcXt.llis request from the PCM it sets a history DTC: 36.Whrie' "XVCheek Pr«ent, the IPC turns On the Check Messages warning one time for seven seconds. When the IPC turns On the Check Mt Usages warning it also sounds a single chime to help call attention to the warning.

$EAT BELT TELLTALE

The driver's seat be rovi ıd to circuit 238 to the IF an th SDM whe the ver' b lt is unbuckled. Basedo[11] n Z* P uh^^ inpu nds circuit 234 to turn ofthetea'bekt TeHUle"MintingkTs'eat'belt is unbuckled. The seat belt telltale is On solid whenever the driver's seat belt is unfastened. As long as the seat belt telltale Cs S i○n'the IpC turns On the Check Messages indicator every five minutes for seven s<co ^ Whenever the IPC X On the Check Messages warning it also sounds a single chime to help call attention to the warning.

LOW TRAC TELLTALE

few grounds circuit 1660 to turn On the low traction telltale if ABS or traction control becomes actrve. When ...e's regain traction again, the telltale is turned Off.

CamScanner

AIR BAG TELLTALE

The air bag telltale is turned On when the SDM DTC is set. The air bag telltale is also turned on disconnected.

ThP 1PC monitors the SIR telltale circuit 358 to determi , Messages indicator one time for seven seconds IPC T'lPCwrns On th^Ch^c^M^ss^eswarning ?al[s0] sounds a single chime to help call attention to the warn. J

SERVICE SOON TELLTALE

The PCM grounds circuit 1885 to turn On the service soon telltale if there is a condition present under which it is ok to drive, but the vehicle should be serviced at the driver's earliest convenience. This may occur as a result of one of a number of PCM DTCs setting, or as a request by the BPM, HTCM, APM, or BTCM.

The BPM requests the telltale be turned On for the following DTCs: 217, 219, 225, 226, 227, 228, 229, three or more of 233-266, three or more module voltage faults, 285, 286, 291,292, or 304.

The HTCM requests the telltale be turned On for the following HTCM/APM DTCs: 12,14,16,17, 27,28, 31,39 41 42,45,50,52,53,54,58,59, 60, 62, 63, or 64.

The BTCM requests the telltale be turned On for the following DTCs: 11,141,167, or 168.

The PCM sends a telltale request On its own behalf if one or more of the following DTCs set: 1, 2, 3, 4, 8, 10,11,12 13 26,27, 28,29,30, 31,33,41,42,47,48,49,50,51,54,55,56,57,73, 97, 98, 99,100,101,103,105,106 or 107.

The PCM also sends a message over serial data to the IPC that the service soon telltale has been commanded On. The IPC responds by setting a history DTC 45 and turning On the check messages indicator one time for seven seconds. When the IPC turns On the check messages warning it also sounds a single chime to help call attention to the warning.

TELLTALES TROUBLE TREE INDEX

- Chart 1 - Security Telltale Inoperative/On All the Time/Flashing
- Chart 2 - Hazard Telltale Inoperative/On All the Time
- Chart 3 - Wait Telltale Inoperative/On All the Time
- Chart 4 - Parking Brake Telltale Inoperative/On All the Time
- Chart 5 - Battery Life Telltale Inoperative/On All the Time
- Chart 6 - Brake Telltale Inoperative/On All the Time
- Chart 7 - Check Tire Pressure Telltale Inoperative/On All the Time
- Chart 8 - Reduced Performance Telltale Inoperative/On All the Time
- Chart 9 - Service Now Telltale Inoperative/On All the Time
- Chart 10 — Anti-Lock Telltale Inoperative/On All the Time
- Chart 11 - Temperature Telltale Inoperative/On All the Time
- Chart 12 - Seat Belt Telltale Inoperative/On All the Time
- Chart 13 - Low Trac Telltale Inoperative/On All the Time
- Chart 14 - Service Soon Telltale Inoperative/On All the Time
- Chart 15 - Security, Hazard, and Parking Brake Telltales All Inoperative
- Chart 16 — Left Telltale Bank Wait, Parking Brake, Brake and Check Tire Pressure Telltales All Inoperative
- Chart 17 - Right Telltale Bank All Inoperative
- Chart 18 - Right Telltale Bank Service Now, Antilock, Temp, Seat Belt and Service Soon All Inoperative

CamScanner

SECURITY TELLTALE INOPERATIVE/ON ALL THE TIME/FLASHING

CHART 1

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

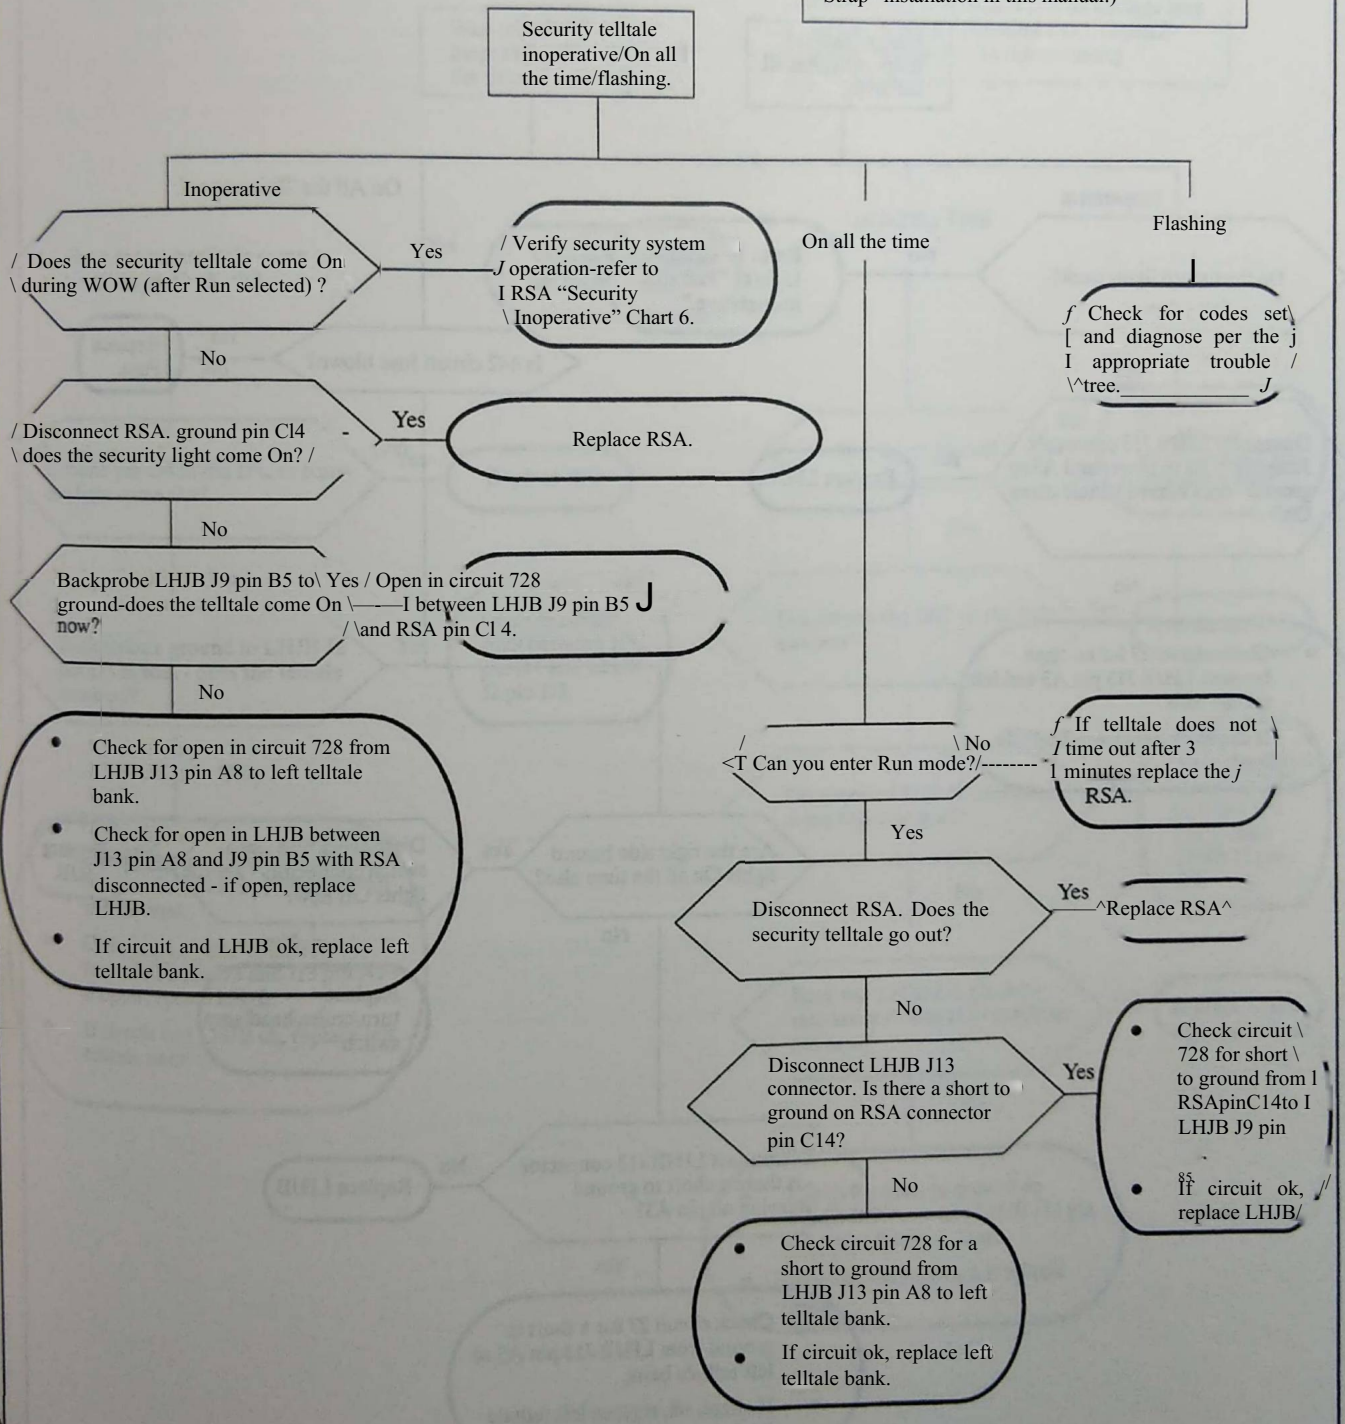
Security telltale inoperative/On all the time/flashing.
Inoperative
On all the time
Flashing
Does the security telltale come On during WOW (after Run selected) ?
Yes
Verify security system operation-refer to RSA "Security Inoperative" Chart 6.
No
Disconnect RSA. ground pin Cl4 does the security light come On?
Yes
Replace RSA.
No
Backprobe LHJB J9 pin B5 to ground-does the telltale come On now?
Yes
Open in circuit 728 between LHJB J9 pin B5 and RSA pin Cl 4.
No
Check for open in circuit 728 from LHJB J13 pin A8 to left telltale bank.
Check for open in LHJB between J13 pin A8 and J9 pin B5 with RSA disconnected - if open, replace LHJB.
If circuit and LHJB ok, replace left telltale bank.
Check for codes set and diagnose per the appropriate trouble tree.
Can you enter Run mode?
No
If telltale does not time out after 3 1 minutes replace the RSA.
Yes
Disconnect RSA. Does the security telltale go out?
Yes
Replace RSA
No
Disconnect LHJB J13 connector. Is there a short to ground on RSA connector pin C14?
Yes
Check circuit 728 for short to ground from RSApinC14to LHJB J9 pin 85.
If circuit ok, replace LHJB
No
Check circuit 728 for a short to ground from LHJB J13 pin A8 to left telltale bank.
If circuit ok, replace left telltale bank.

CamScanner

HAZARD TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 2

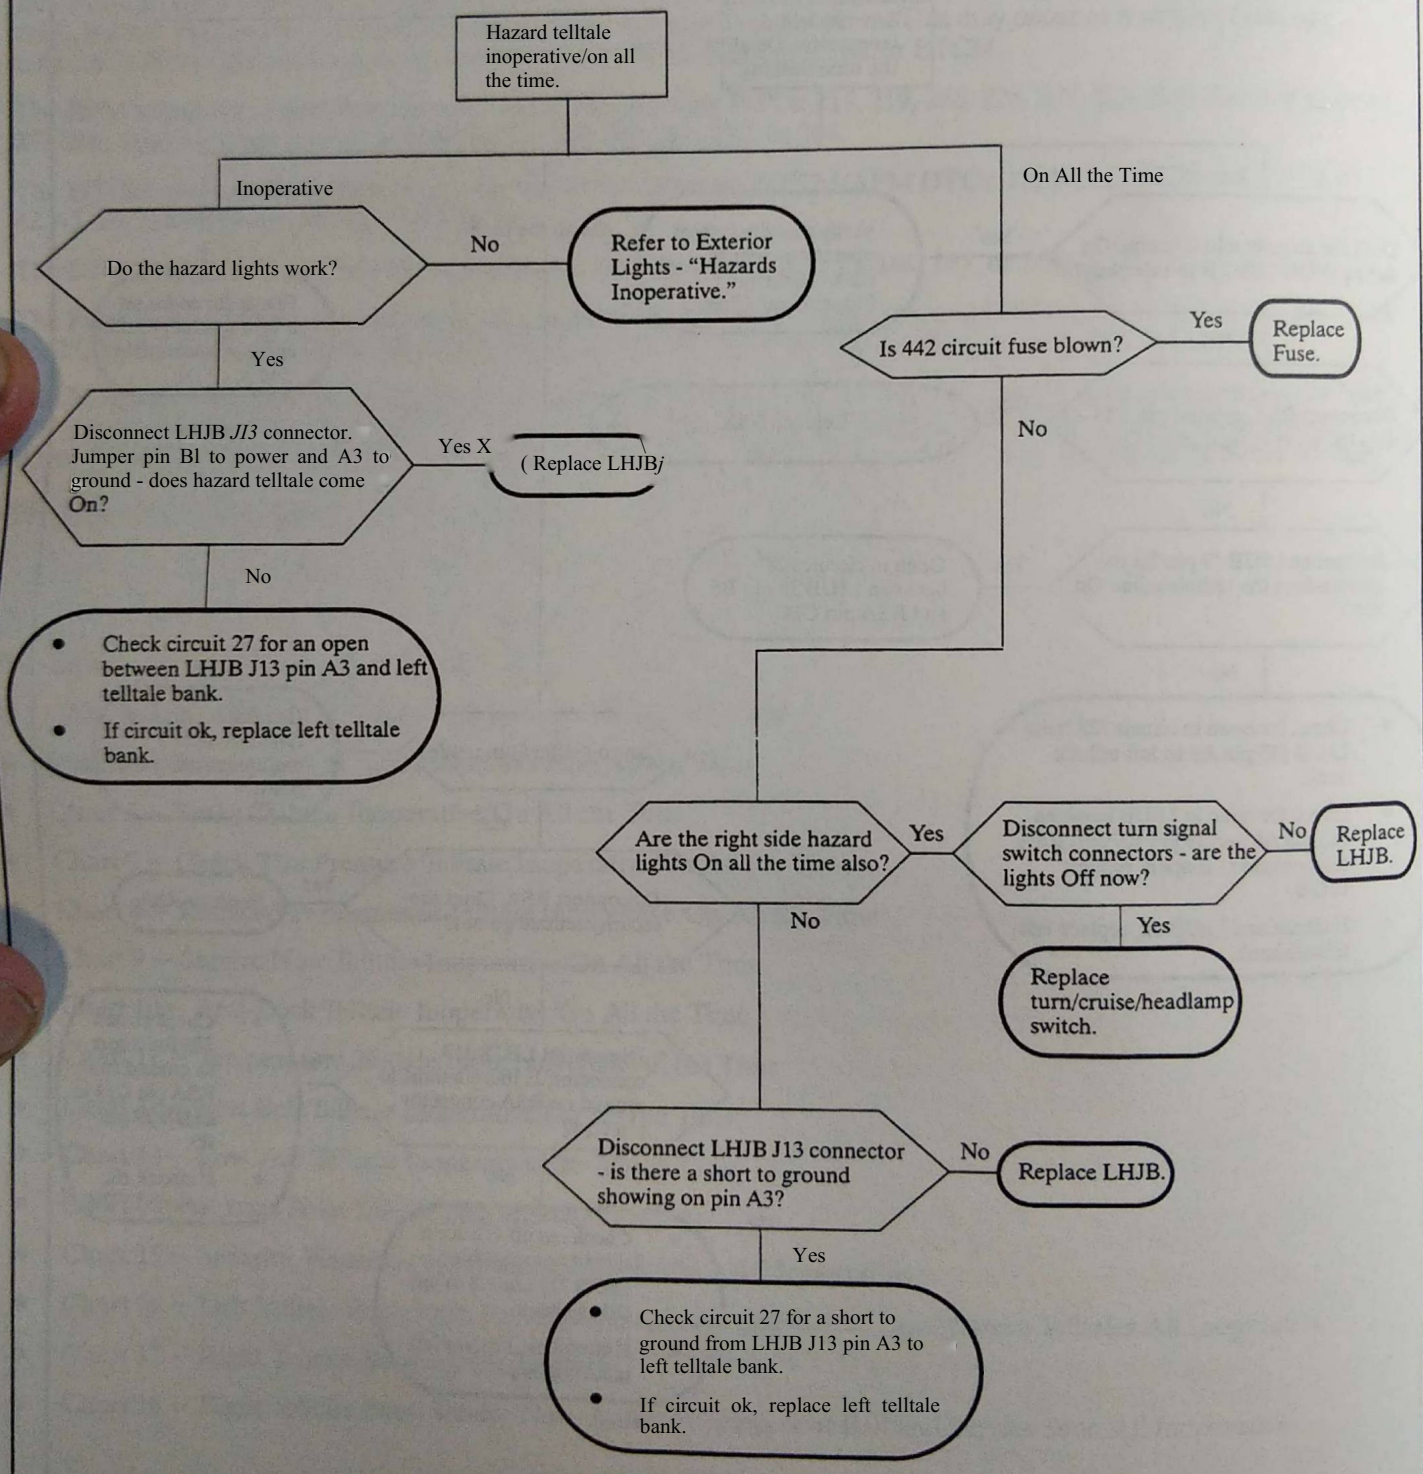
Hazard telltale inoperative/on all the time.
Inoperative
On All the Time
Do the hazard lights work?
No
Refer to Exterior Lights - "Hazards Inoperative."
Yes
Disconnect LHJB J13 connector. Jumper pin B1 to power and A3 to ground - does hazard telltale come On?
Yes X
(Replace LHJB)
No
Check circuit 27 for an open between LHJB J13 pin A3 and left telltale bank.
If circuit ok, replace left telltale bank.
Is 442 circuit fuse blown?
Yes
Replace Fuse.
No
Are the right side hazard lights On all the time also?
Yes
Disconnect turn signal switch connectors - are the lights Off now?
No
Replace LHJB.
Yes
Replace turn/cruise/headlamp switch.
No
Disconnect LHJB J13 connector - is there a short to ground showing on pin A3?
No
Replace LHJB.
Yes
Check circuit 27 for a short to ground from LHJB J13 pin A3 to left telltale bank.
If circuit ok, replace left telltale bank.

CamScanner

WAIT TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 3

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Wait telltale inoperative/On all the time.

Inoperative

Does the wait telltale come on during bulb check?

Yes → Vehicle is operating normally.

No

Ground pin D4 at the IPC in Run - does light come On?

Yes → Open in circuit 2029 between IPC pin D4 and LHJB J2 pin D3.

No

Backprobe a ground to LHJB J2 pin D3 in Run - does the telltale come on?

Yes → Check for an open in circuit 2029 between LHJB J13 pin A5 and left telltale bank.
- Check for an open in LHJB between J2 pin D3 and J13 pin A5 - if open replace LHJB.
- If circuit and LHJB ok, replace left telltale bank.

No

On All the Time

Are any codes set?

Yes → Refer to "Propulsion" service manual and diagnose codes.

No

Disconnect the IPC - is the light out now?

Yes → Replace the IPC.

No

Disconnect LHJB J2 connector - is the light out now?

Yes → Short to ground on circuit 2029 between IPC pin D4 and LHJB J2 pin 03.

No

Back out LHJB J13 pin A5 - reconnect J2 and J13 - is telltale out now?

Yes → Replace LHJB.

No

- Check for short to ground on circuit 2029 between LHJB J13 pin A5 and left telltale bank.
- If circuit ok, replace left telltale bank.

CamScanner

PARKING BRAKE TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 4

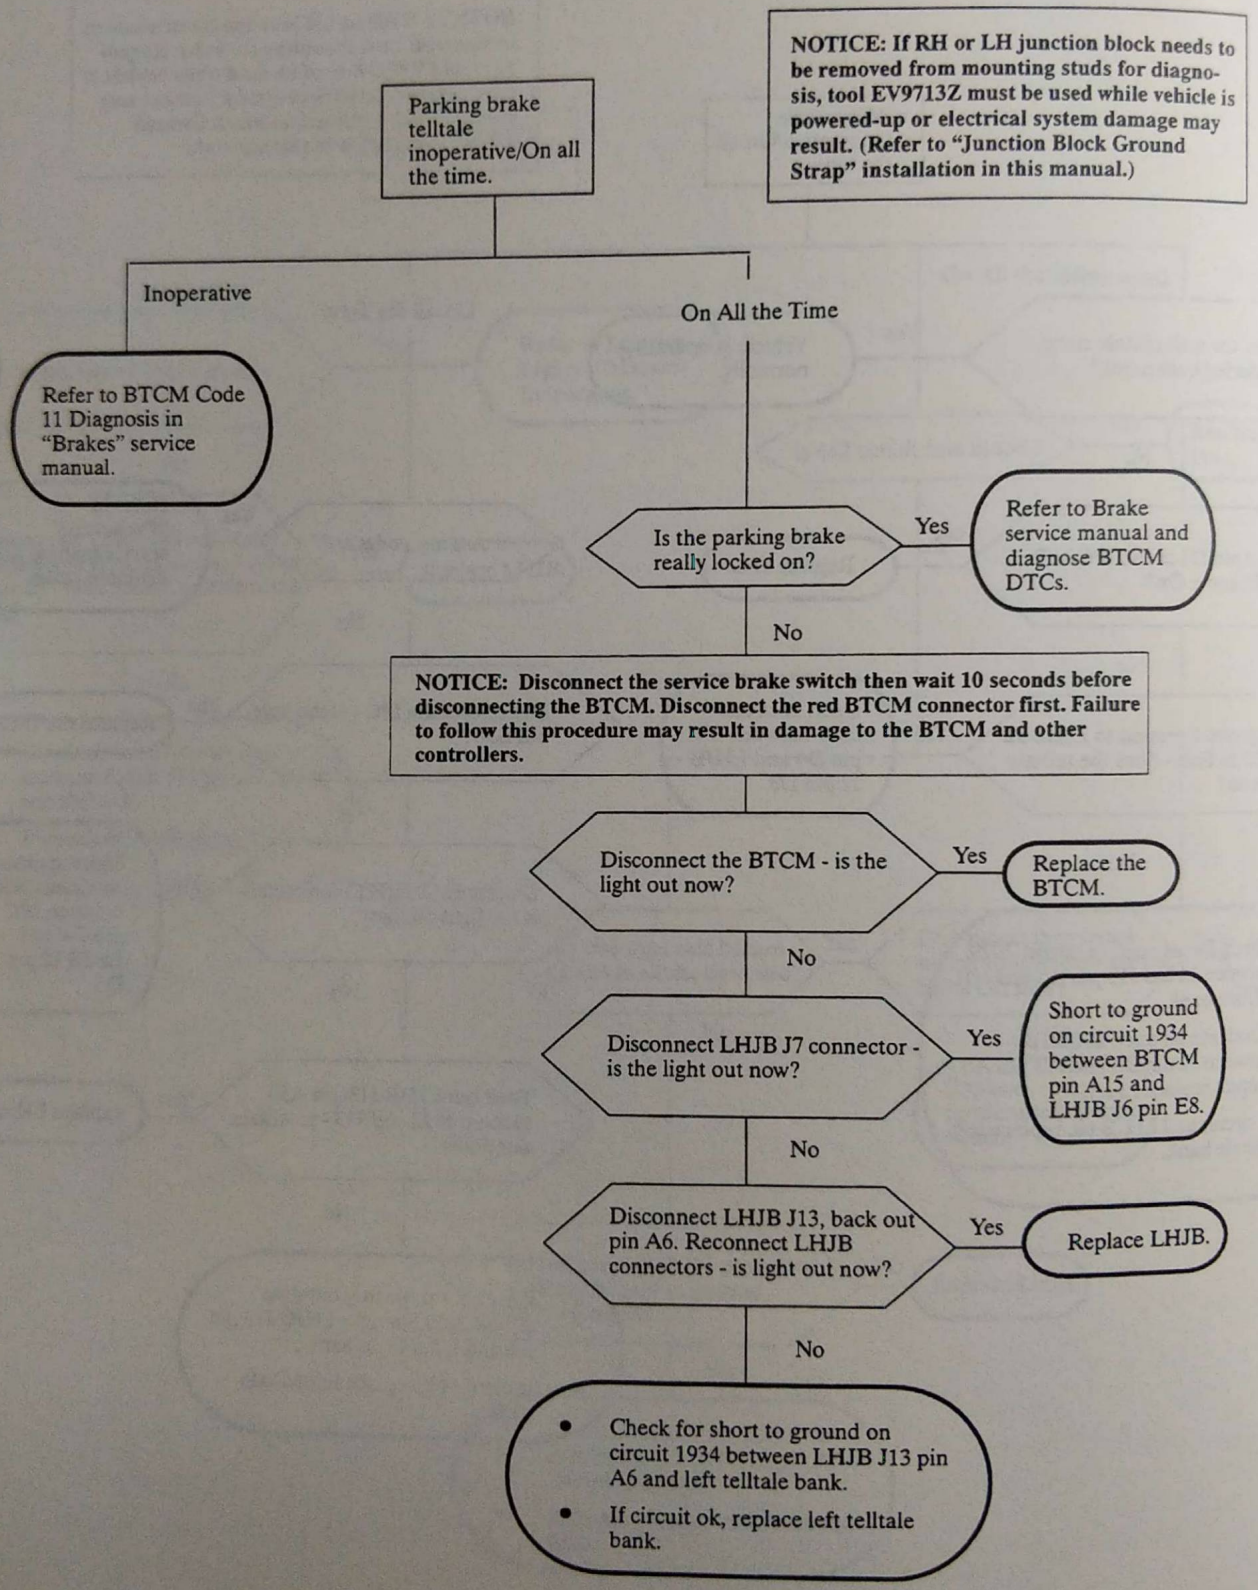
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)
Parking brake telltale inoperative/On all the time.
Inoperative
On All the Time
Refer to BTCM Code 11 Diagnosis in "Brakes" service manual.
Is the parking brake really locked on?
Yes
Refer to Brake service manual and diagnose BTCM DTCs.
No
NOTICE: Disconnect the service brake switch then wait 10 seconds before disconnecting the BTCM. Disconnect the red BTCM connector first. Failure to follow this procedure may result in damage to the BTCM and other controllers.
Disconnect the BTCM - is the light out now?
Yes
Replace the BTCM.
No
Disconnect LHJB J7 connector - is the light out now?
Yes
Short to ground on circuit 1934 between BTCM pin A15 and LHJB J6 pin E8.
No
Disconnect LHJB J13, back out pin A6. Reconnect LHJB connectors - is light out now?
Yes
Replace LHJB.
No
• Check for short to ground on circuit 1934 between LHJB J13 pin A6 and left telltale bank.
• If circuit ok, replace left telltale bank.

CamScanner

BATTERY LIFE TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 5

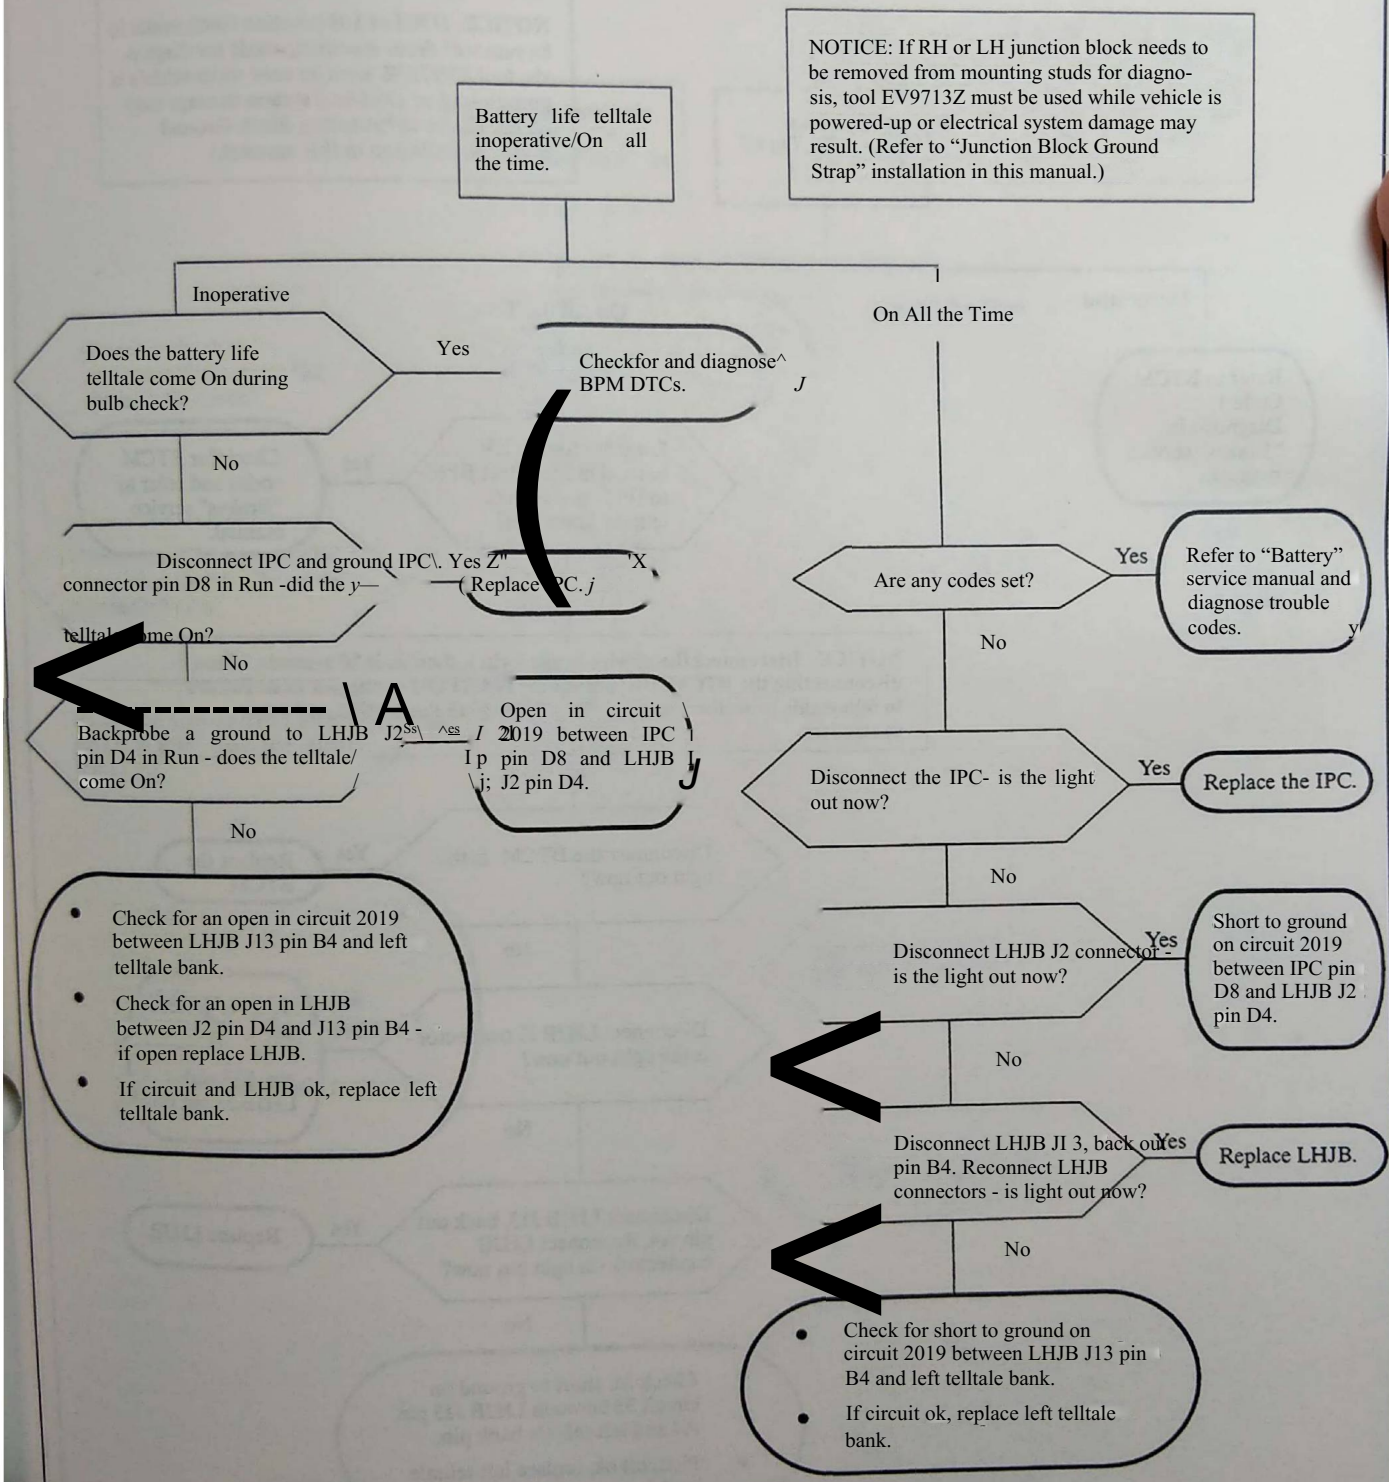
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)
Battery life telltale inoperative/On all the time.
Inoperative
On All the Time
Does the battery life telltale come On during bulb check?
Yes
Checkfor and diagnose^ BPM DTCs.
No
Disconnect IPC and ground IPC\. connector pin D8 in Run -did the telltale come On?
Yes
Replace IPC.
No
Backprobe a ground to LHJB J2 pin D4 in Run - does the telltale/ come On?
Open in circuit 2019 between IPC pin D8 and LHJB J2 pin D4.
No
Check for an open in circuit 2019 between LHJB J13 pin B4 and left telltale bank.
Check for an open in LHJB between J2 pin D4 and J13 pin B4 - if open replace LHJB.
If circuit and LHJB ok, replace left telltale bank.
Are any codes set?
Yes
Refer to "Battery" service manual and diagnose trouble codes.
No
Disconnect the IPC- is the light out now?
Yes
Replace the IPC.
No
Disconnect LHJB J2 connector - is the light out now?
Yes
Short to ground on circuit 2019 between IPC pin D8 and LHJB J2 pin D4.
No
Disconnect LHJB JI 3, back out pin B4. Reconnect LHJB connectors - is light out now?
Yes
Replace LHJB.
No
Check for short to ground on circuit 2019 between LHJB J13 pin B4 and left telltale bank.
If circuit ok, replace left telltale bank.

CamScanner

BRAKE TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 6

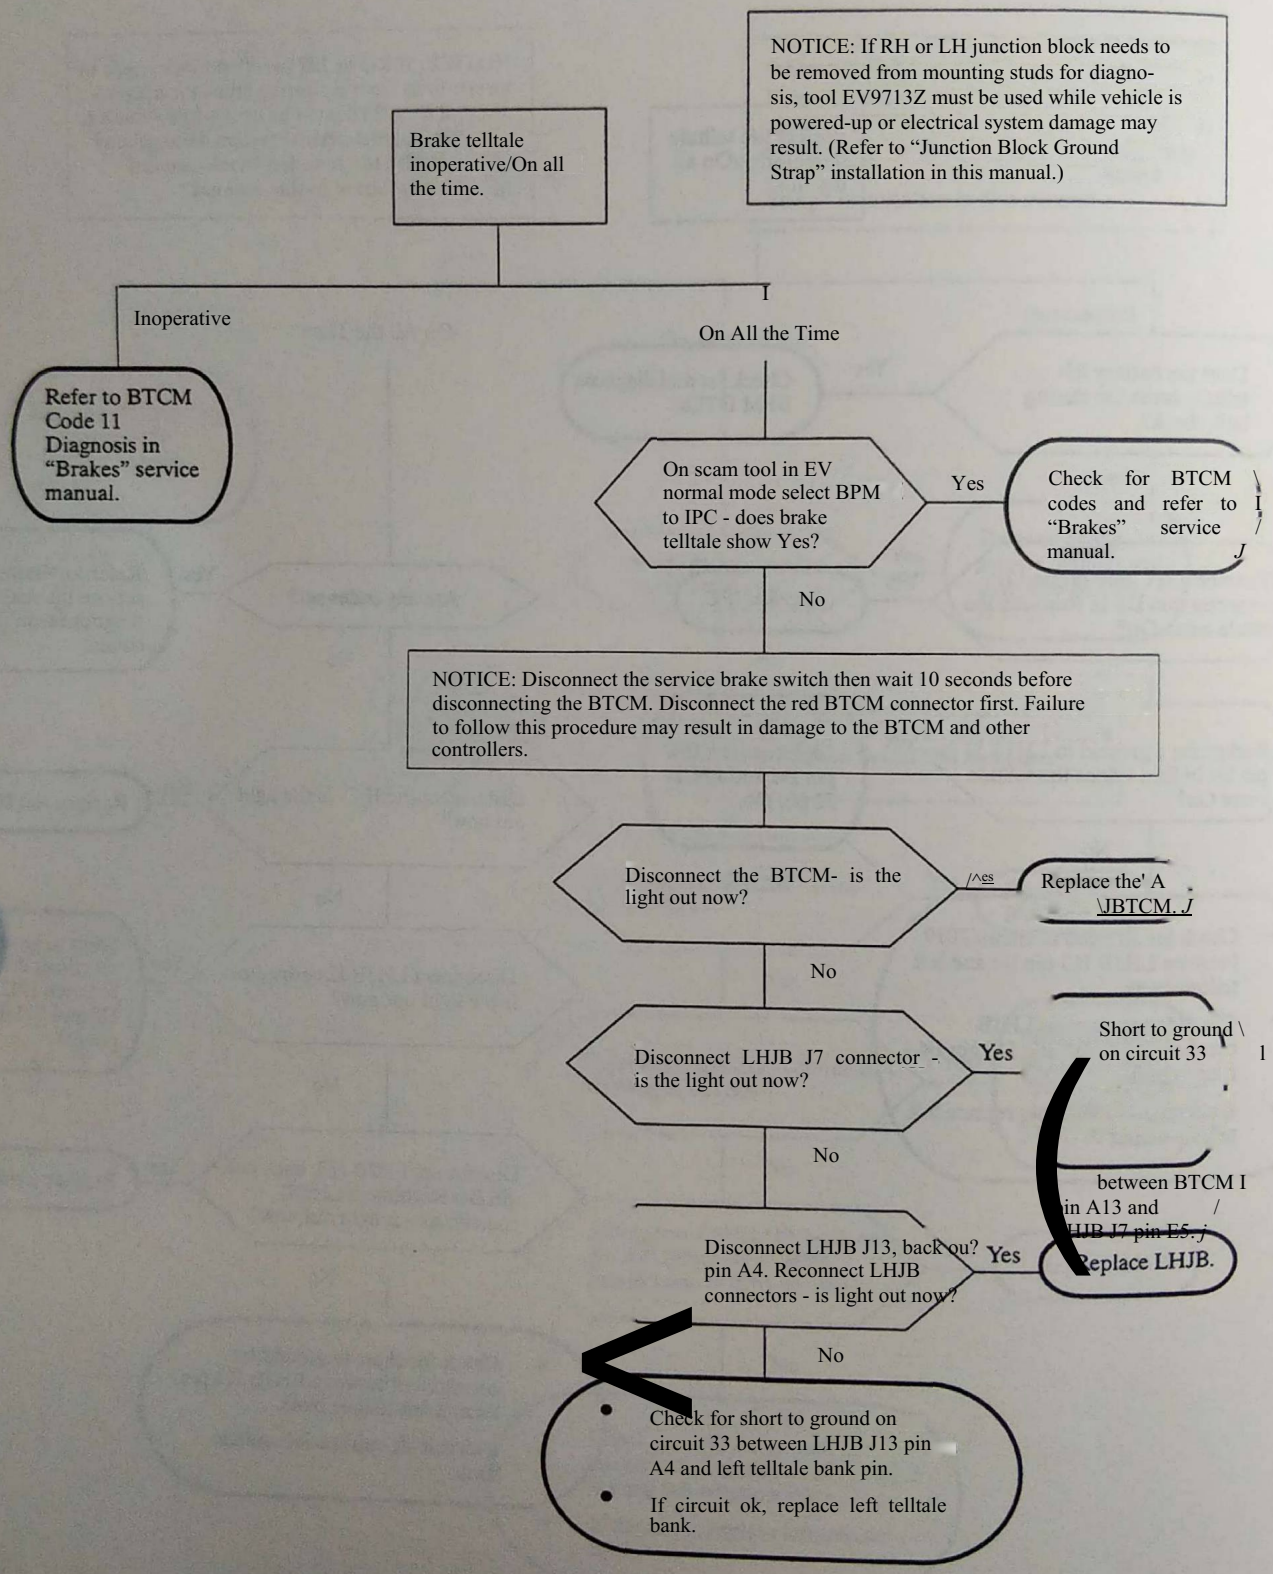
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)
Brake telltale inoperative/On all the time.
Inoperative
On All the Time
Refer to BTCM Code 11 Diagnosis in "Brakes" service manual.
On scam tool in EV normal mode select BPM to IPC - does brake telltale show Yes?
Yes
Check for BTCM codes and refer to "Brakes" service manual.
No
NOTICE: Disconnect the service brake switch then wait 10 seconds before disconnecting the BTCM. Disconnect the red BTCM connector first. Failure to follow this procedure may result in damage to the BTCM and other controllers.
Disconnect the BTCM- is the light out now?
Yes
Replace the' A \JBTCM. J
No
Disconnect LHJB J7 connector - is the light out now?
Yes
Short to ground \ on circuit 33
No
between BTCM I in A13 and / HJB J7 pin E5. j
Disconnect LHJB J13, back ou? pin A4. Reconnect LHJB connectors - is light out now?
Yes
Replace LHJB.
No
Check for short to ground on circuit 33 between LHJB J13 pin A4 and left telltale bank pin.
If circuit ok, replace left telltale bank.

CamScanner

CHECKTIRE PRESSURE TELLTALE INOPERATIVE/ON ALLTHETIME

CHART 7

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Check tire pressure telltale inoperative/On all the time.

Inoperative

Does the check tire pressure telltale come On during bulb check?

Yes → Circuit ok -if tire is low refer to Tire Pressure warning system section "Tire Low or Flat With No Low Tire Pressure TT."

No

Disconnect IPC, ground IPC N. Yes connector pin D9 - did telltale come On? → Replace IPC.

No

Backprobe a ground to LHJB J2 pin D2 in Run - does the telltale come On? Yes → Open in circuit 1084 between IPC pin D9 and LHJB J2pinD2.

No

- Check for an open in circuit 1084 between LHJB J13 pin B5 and left telltale bank.
- Check for an open in LHJB between J2 pin D2 and J13 pin B5 - if open replace LHJB.
- If circuit and LHJB ok, replace left telltale bank.

On All the Time

On scan tool in EV normal mode select RSA to BPM - does check tire pressure telltale show On? Yes → Refer to Check Tire pressure system - "Check Tire Pressure Telltale On."

No

Disconnect IPC - is the light out now? Yes → Replace the IPC.

No

Disconnect LHJB J2 connector - is the light out now? Yes → Short to ground on circuit 1084 between IPC pin D9 and LHJB J2 pin D2.

No

Disconnect LHJB J13 connector. Back out pin B5. Reconnect LHJB connectors - is light out now? Yes → Replace LHJB

No

- Check for short to ground on circuit 1084 between LHJB J13 pin B5 and left telltale bank.
- If circuit ok, replace left telltale bank.

CamScanner

REDUCED PERFORMANCE TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 8

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, too! EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Reduced performance telltale inoperative/On all the time.

Inoperative

Does the reduced performance telltale come On during bulb check?

Yes → Refer to PCM DTCs j for diagnosis.

No

Disconnect IPC. Ground pin D7 N. at the IPC in Run mode - did the telltale come On?

Yes → Replace IPC.

No

Backprobe a ground to LHJB J2 pin D14 - does the telltale come On/

Yes → Open in circuit 2018B between IPC pin D7 and LHJB J2 pin D14.

No

Backprobe a ground to RHJB J9 pin D9 in Run mode - does the teUtale come On?

Yes →
- Check for an open in circuit 2018A between RHJB J9 pin D9 and LHJBJ8 pin D9.
- If circuit ok, replace LHJB.

No

Backprobe RHJB J13 pin A7 to ground. Did telltale come On? /

Yes → Replace RHJB.

No

- Check for an open in circuit 2018 between RHJB J13 pin A7 and right telltale bank.
- If circuit and RHJB ok, replace right telltale bank.

On All the Time

Are any codes set?

Yes → Refer to appropriate service manual and diagnose codes sety

No

Disconnect the IPC- is the light out now?

Yes → Replace the IPC.

No

Disconnect LHJB J2 connector - is the telltale out now?

Yes → Short to ground on circuit 2018B between IPC pin D7 and LHJBJ2 pin D14.

No

Disconnect RHJB J9 connector - is the telltale out now?

Yes →
- Check for short to ground on circuit 2018A between RHJB 19 pin D9and LHJBJS pin D9.
- [f circuit ok replace LHJB.

No

Disconnect RHJB J13, back out pin A7. Reconnect RHJB connectors - is telltale out now?

Yes → Replace RHJB.

No

- Check for short to ground in circuit 2018 between RHJB J13 pin A7 and right telltale bank.
- If circuit ok, replace right telltale b ank.

CamScanner

SERVICE NOW TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 9

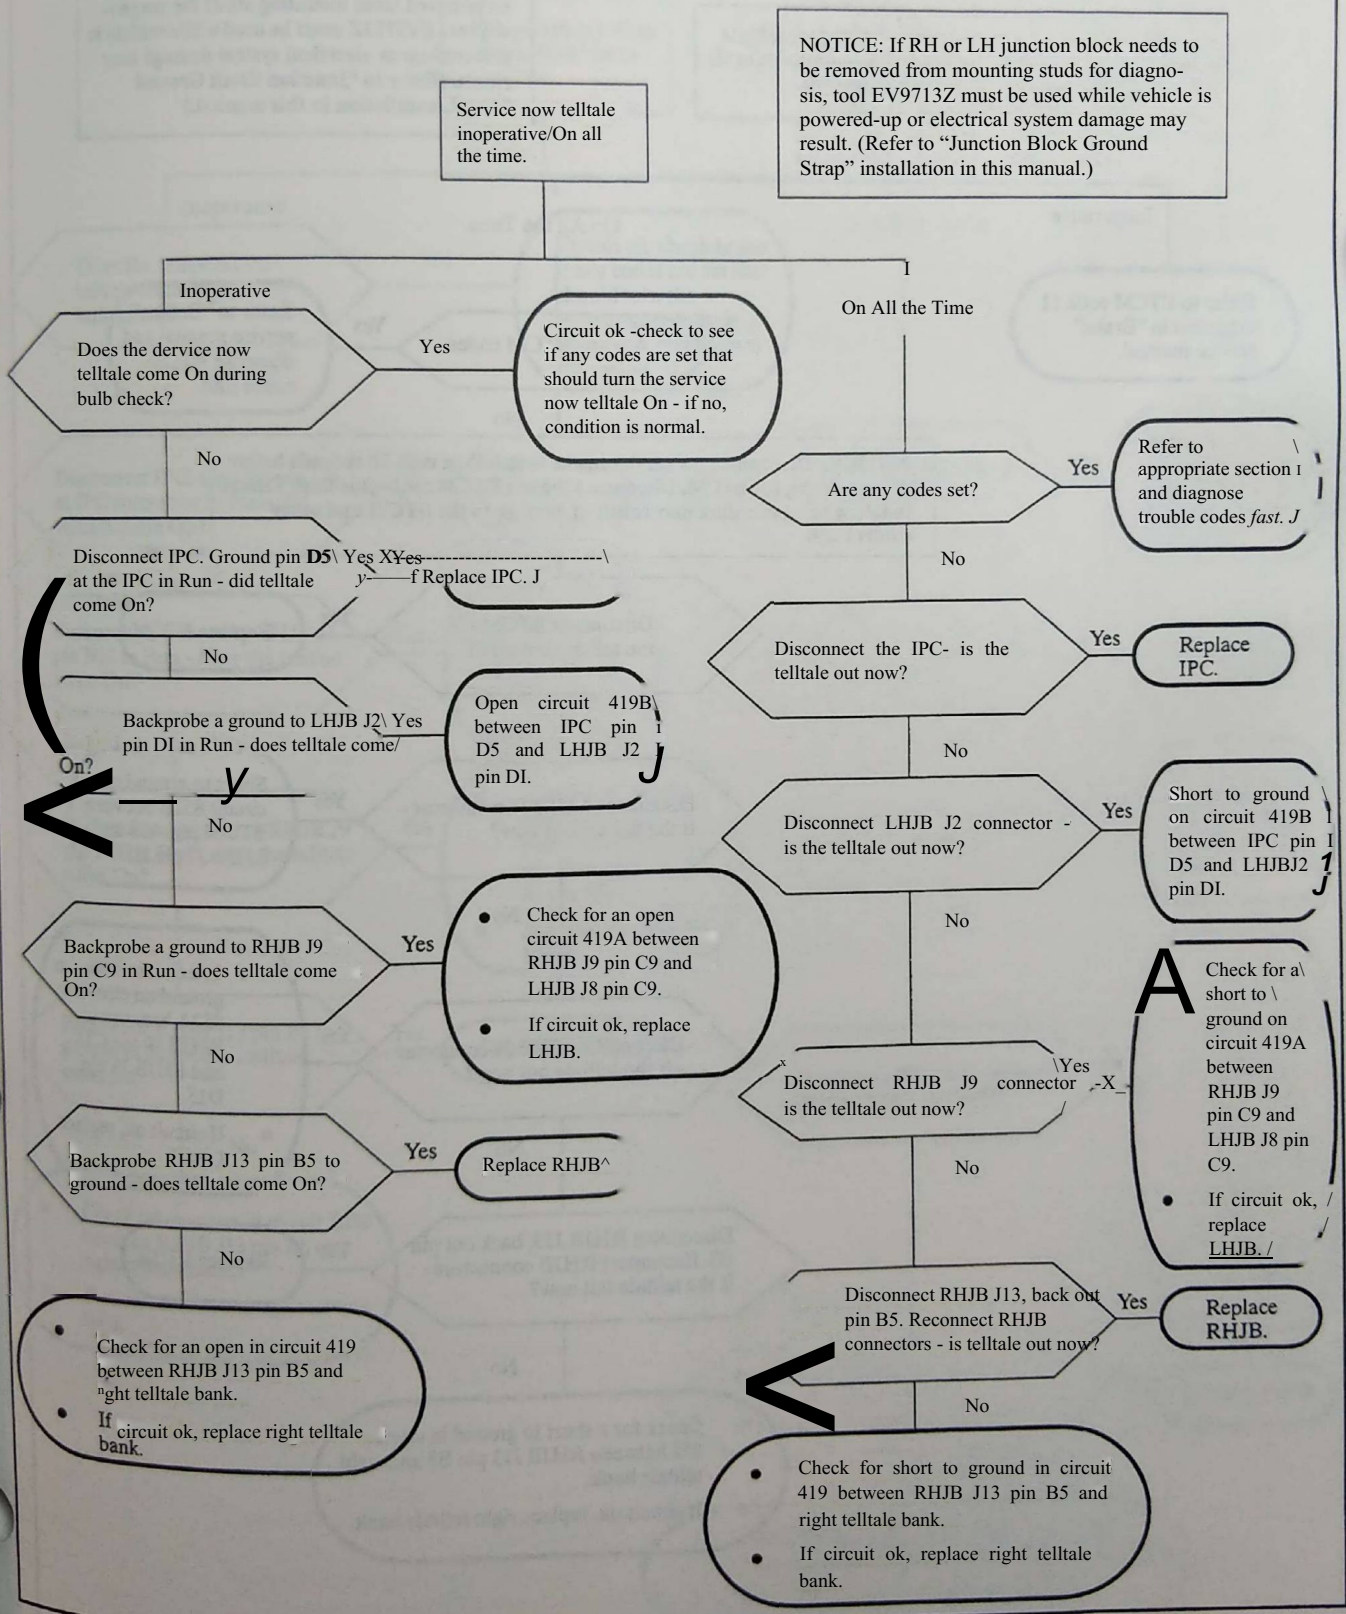
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)
Service now telltale inoperative/On all the time.
Inoperative
On All the Time
Does the dervice now telltale come On during bulb check?
Yes
Circuit ok -check to see if any codes are set that should turn the service now telltale On - if no, condition is normal.
No
Are any codes set?
Yes
Refer to appropriate section and diagnose trouble codes fast. J
No
Disconnect IPC. Ground pin D5 at the IPC in Run - did telltale come On?
Yes
Replace IPC. J
No
Disconnect the IPC- is the telltale out now?
Yes
Replace IPC.
No
Backprobe a ground to LHJB J2 pin DI in Run - does telltale come On?
Yes
Open circuit 419B between IPC pin D5 and LHJB J2 pin DI.
No
Disconnect LHJB J2 connector - is the telltale out now?
Yes
Short to ground on circuit 419B between IPC pin D5 and LHJBJ2 pin DI.
No
Backprobe a ground to RHJB J9 pin C9 in Run - does telltale come On?
Yes
Check for an open circuit 419A between RHJB J9 pin C9 and LHJB J8 pin C9.
If circuit ok, replace LHJB.
No
Disconnect RHJB J9 connector - is the telltale out now?
Yes
A
Check for a short to ground on circuit 419A between RHJB J9 pin C9 and LHJB J8 pin C9.
If circuit ok, replace LHJB.
No
Backprobe RHJB J13 pin B5 to ground - does telltale come On?
Yes
Replace RHJB^
No
Disconnect RHJB J13, back out pin B5. Reconnect RHJB connectors - is telltale out now?
Yes
Replace RHJB.
No
Check for an open in circuit 419 between RHJB J13 pin B5 and right telltale bank.
If circuit ok, replace right telltale bank.
Check for short to ground in circuit 419 between RHJB J13 pin B5 and right telltale bank.
If circuit ok, replace right telltale bank.

CamScanner

ANTI-LOCK TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 10

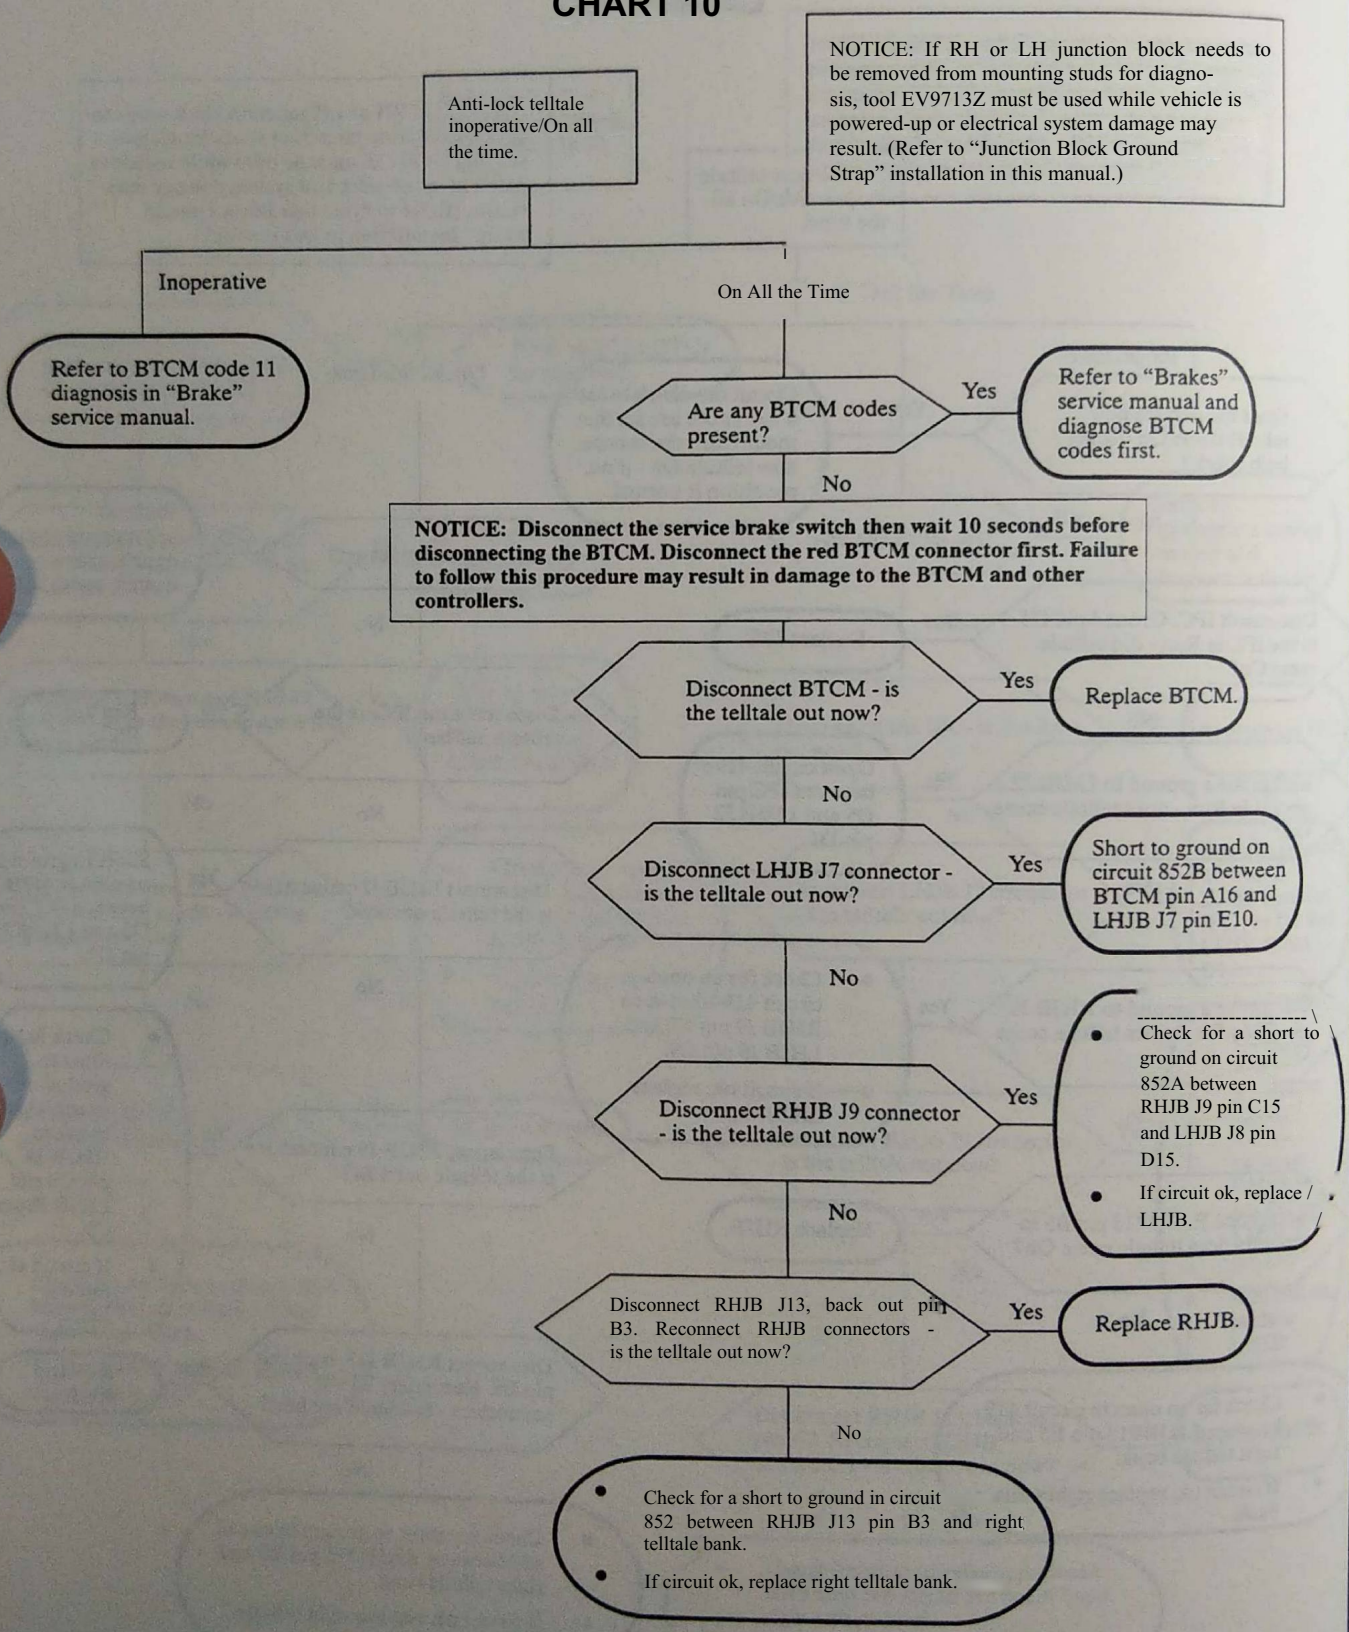
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)
Anti-lock telltale inoperative/On all the time.
Inoperative
On All the Time
Refer to BTCM code 11 diagnosis in "Brake" service manual.
Are any BTCM codes present?
Yes
Refer to "Brakes" service manual and diagnose BTCM codes first.
No
NOTICE: Disconnect the service brake switch then wait 10 seconds before disconnecting the BTCM. Disconnect the red BTCM connector first. Failure to follow this procedure may result in damage to the BTCM and other controllers.
Disconnect BTCM - is the telltale out now?
Yes
Replace BTCM.
No
Disconnect LHJB J7 connector - is the telltale out now?
Yes
Short to ground on circuit 852B between BTCM pin A16 and LHJB J7 pin E10.
No
Disconnect RHJB J9 connector - is the telltale out now?
Yes
Check for a short to ground on circuit 852A between RHJB J9 pin C15 and LHJB J8 pin D15.
If circuit ok, replace / LHJB.
No
Disconnect RHJB J13, back out pin B3. Reconnect RHJB connectors - is the telltale out now?
Yes
Replace RHJB.
No
Check for a short to ground in circuit 852 between RHJB J13 pin B3 and right telltale bank.
If circuit ok, replace right telltale bank.

CamScanner

TEMPERATURE TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 11

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Temperature telltale inoperative/On all the time.

Inoperative

Does the temperature telltale come On during bulb check?

- Yes → Circuit ok, check to see if any codes are set that should turn the temperature telltale On - if no, condition is normal.
- No → Disconnect IPC. Ground pin D3 at IPC connector in Run- did telltale come On?
  - Yes → Replace IPC.
  - No → Backprobe a ground to LHJB JI pin B12 in Run - does the telltale come On?
    - Yes → Open circuit 2030B between IPC pin D3 and LHJB JI pin B12.
    - No → Backprobe a ground to RHJB J9 pin DIO in Run - does the telltale come On?
      - Yes → • Check for an open circuit 2030A between RHJB J9 pin D10 and LHJB J8 pin D10. • If circuit ok, replace LHJB.
      - No → Backprobe RHJB J13 pin B6 to ground in Run - does telltale come On?
        - Yes → Replace RHJB^^
        - No → • Check for an open in circuit 2030 between RHJB J13 pin B6 and right telltale bank. • If circuit ok, replace right telltale bank.

On All the Time

Are any BPM, PCM, or HTCM codes set?

- Yes → Refer to appropriate service manual and diagnose trouble codes first.
- No → Disconnect IPC - is the light out now?
  - Yes → Replace IPC.
  - No → Disconnect LHJB J1 connector - is the telltale out now?
    - Yes → Short to ground on circuit 2030B between IPC pin D3 and LHJB J1 pin B12.
    - No → Disconnect RHJB J9 connector - is the telltale out now?
      - Yes → • Check for a short to ground in circuit 2030A between RHJB J9 pin DIO and LHJB JS pin DIO. • If circuit ok, replace LHJB.
      - No → Disconnect RHJB J13, back out pin B6. Reconnect RHJB connectors is telltale out now?
        - Yes → Replace RHJB^
        - No → • Check for a short to ground in circuit 2030 between RHJB J13 pin B6 and right telltale bank. • If circuit ok, replace right telltale bank.

CamScanner

SEAT BELT TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 12

NOTICE: If RJH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

Seat belt telltale inoperative/On all the time.

Inoperative

Does the seat belt telltale come On during bulb check?

Yes → If telltale will not come On with driver seat belt unfastened - refer to IPC "Seat Belt Telltale Inoperative."

No

Ground pin D6 at the IPC in Run - did telltale come On? → Replace IPC.

No

Backprobe a ground to LHJB J2 pin. B6 in Run - does the telltale come On? → Yes → Open circuit 234C between IPC pin D6 and LHJB J2 pin D6.

No

Backprobe a ground to RHJB J9 pin D3 in Run - does the telltale come On? → Yes →
- Open circuit 234A between RHJB J9 pin D3 and LHJB J8 pin D3.
- If circuit ok, replace LHJB.

No

Backprobe RHJB J13 pin A6 to ground in Run - does telltale come On? → Yes → Replace RHJB.

No

- Check for an open in circuit 234 between RHJB JI3 pin A6 and right telltale bank.
- If circuit ok, replace right telltale bank.

On All the Time (Even With Driver Belt Buckled)

On scan tool scanner select IPC general info - does drvr belt sw show Open with belt buckled*/ → No → Refer to "IPC Chart 7 - Seat Belt telltale On all the time."

Yes

Disconnect the IPC - is the light out now? → Yes → Replace IPC.

No

Disconnect LHJB J2 connector - is the telltale out now? → Yes → Short to ground on circuit 234C between IPC pin D6 and LHJB J2 pin D6.

No

Disconnect RHJB J9 connector - is the telltale out now? → Yes →
- Check for a short to ground on circuit 234A between RHJBJ9 pin D3 and LHJB J8 pin D3.
- If circuit ok, replace LHJB.

No

Disconnect RHJB J13, back out pin A6. Reconnect RHJB connectors is telltale out now? → Yes → Replace RHJB.

No

- Check for a short to ground in circuit 234 between RHJB JI3 pin A6 and right telltale bank.
- If circuit ok, replace right telltale bank.

CamScanner

LOW TRAC TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 13

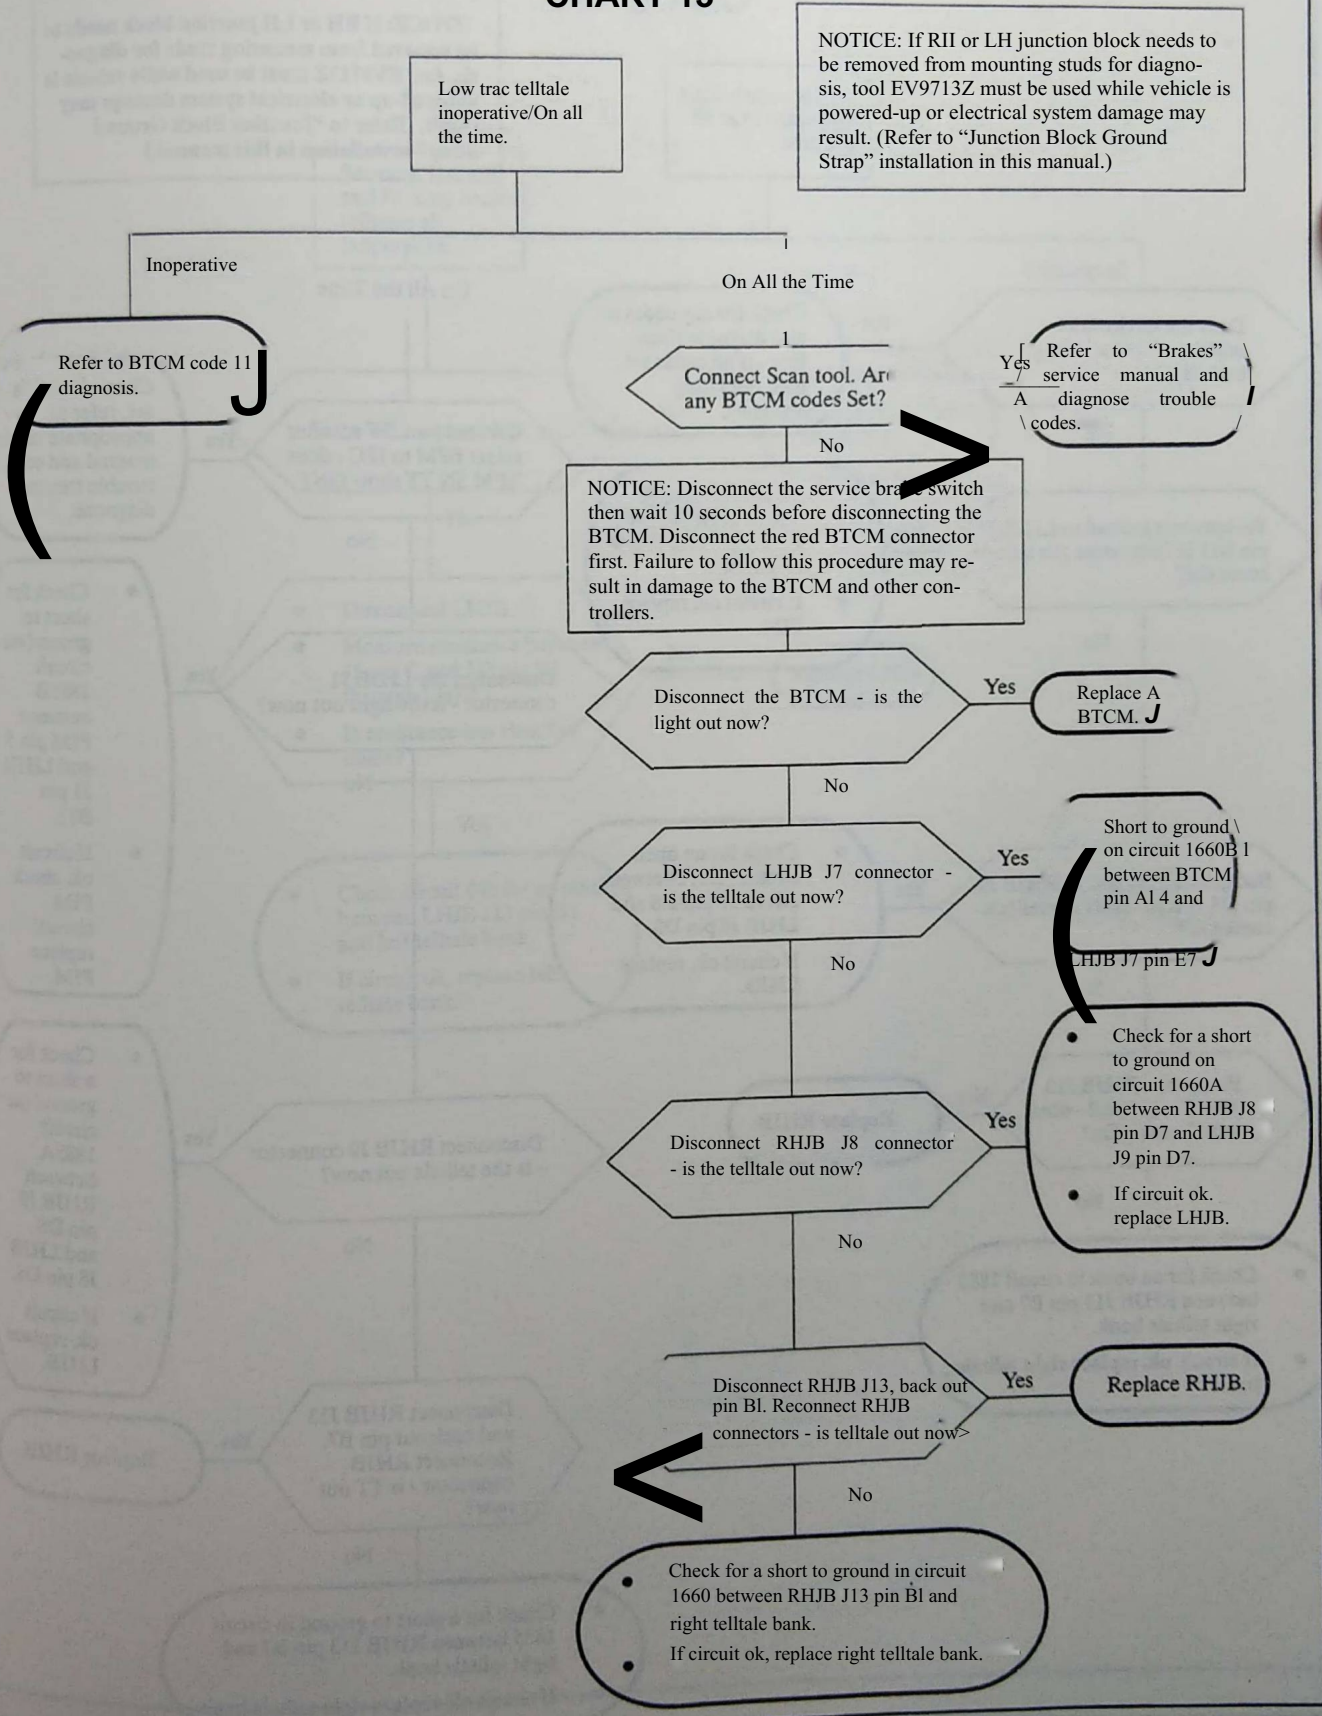
Low trac telltale inoperative/On all the time.
NOTICE: If RII or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)
Inoperative
On All the Time
Refer to BTCM code 11 diagnosis.
A
J
Connect Scan tool. Are any BTCM codes Set?
Yes
Refer to "Brakes" service manual and diagnose trouble codes.
No
NOTICE: Disconnect the service brake switch then wait 10 seconds before disconnecting the BTCM. Disconnect the red BTCM connector first. Failure to follow this procedure may result in damage to the BTCM and other controllers.
Disconnect the BTCM - is the light out now?
Yes
Replace A BTCM. J
No
A
Disconnect LHJB J7 connector - is the telltale out now?
Yes
Short to ground on circuit 1660B 1 between BTCM pin A1 4 and LHJB J7 pin E7 J
No
Disconnect RHJB J8 connector - is the telltale out now?
Yes
Check for a short to ground on circuit 1660A between RHJB J8 pin D7 and LHJB J9 pin D7.
If circuit ok. replace LHJB.
No
Disconnect RHJB J13, back out pin Bl. Reconnect RHJB connectors - is telltale out now>
Yes
Replace RHJB.
No
Check for a short to ground in circuit 1660 between RHJB J13 pin Bl and right telltale bank.
If circuit ok, replace right telltale bank.

CamScanner

SERVICE SOON TELLTALE INOPERATIVE/ON ALL THE TIME

CHART 14

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

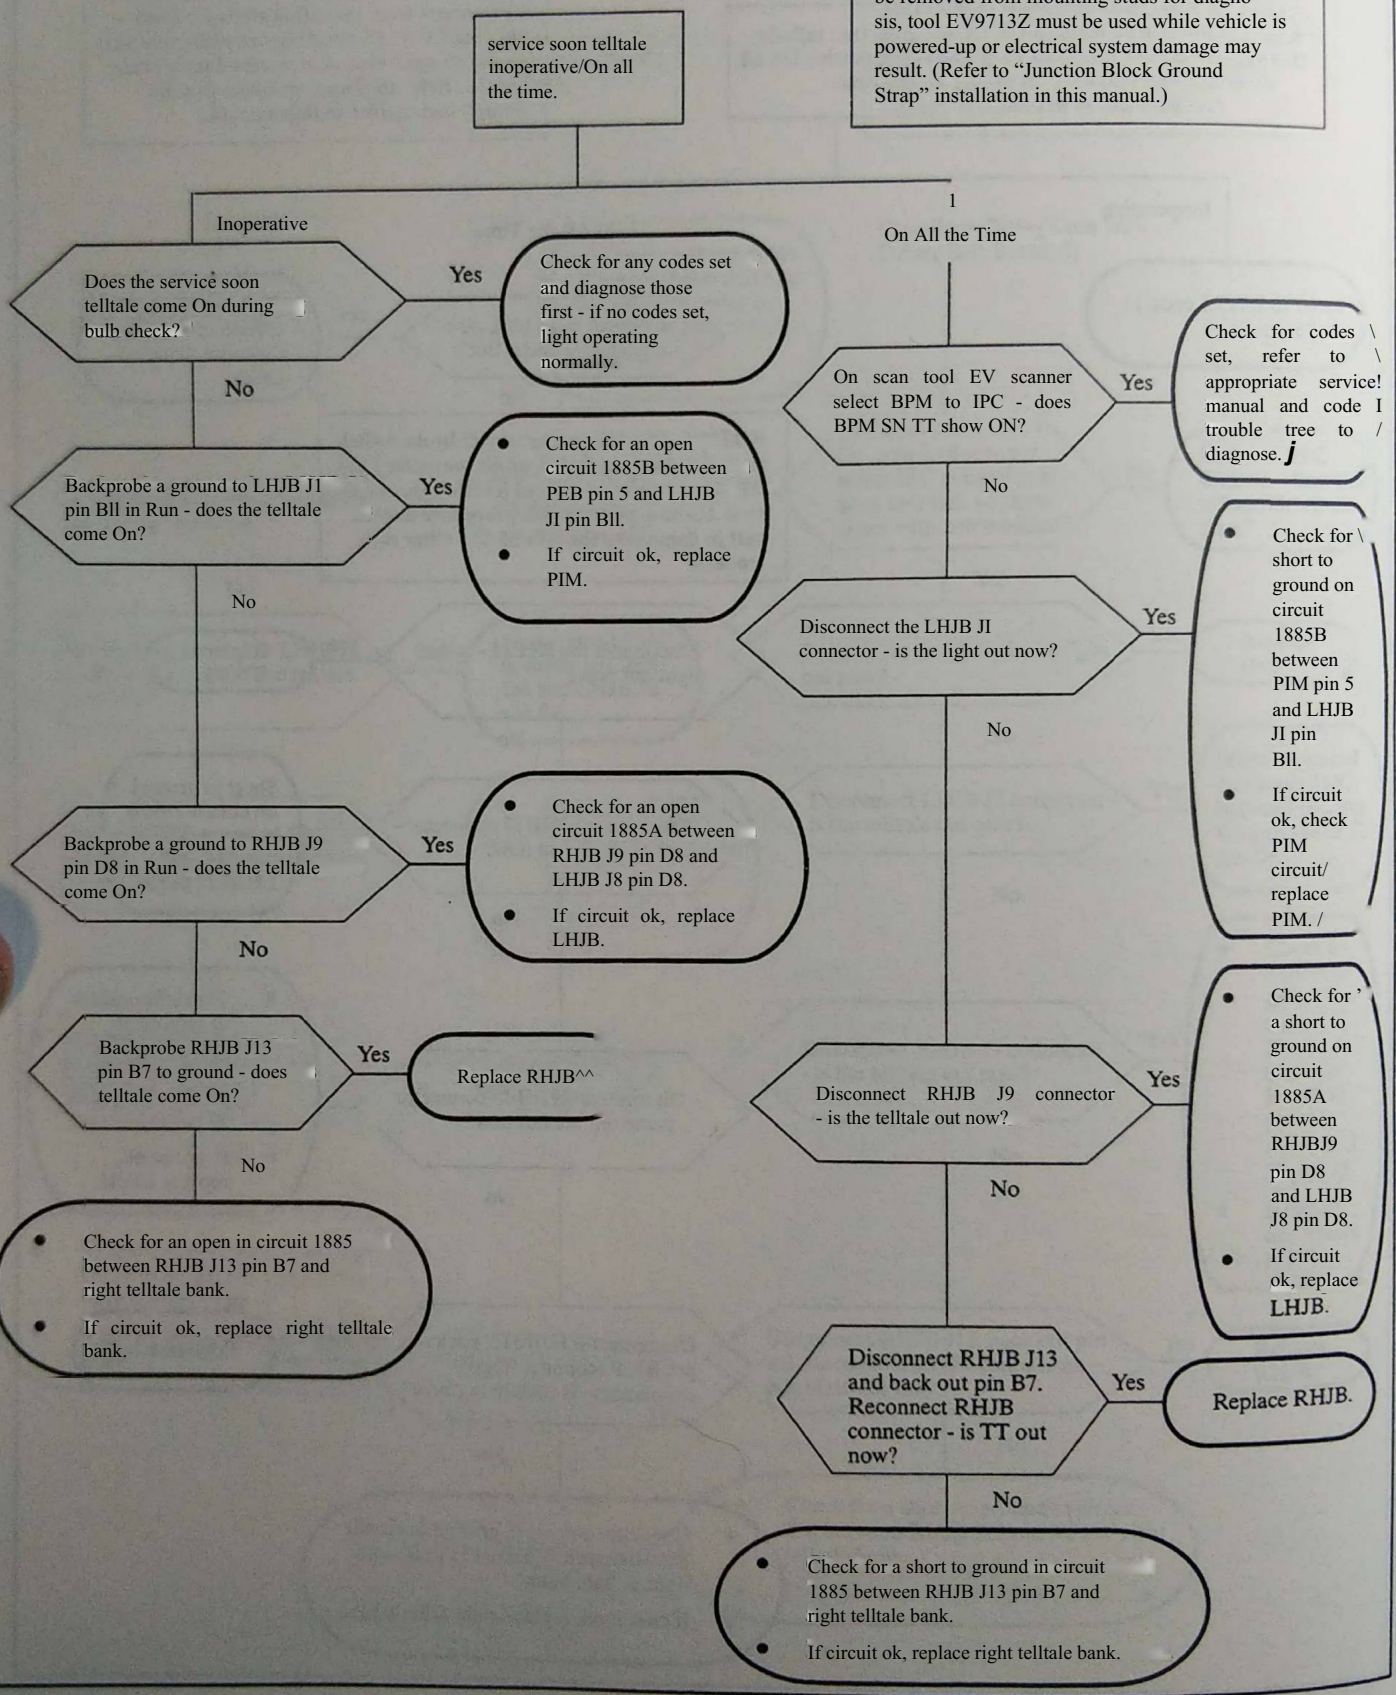
service soon telltale inoperative/On all the time.
Inoperative
1
On All the Time
Does the service soon telltale come On during bulb check?
Yes
Check for any codes set and diagnose those first - if no codes set, light operating normally.
No
Backprobe a ground to LHJB J1 pin Bll in Run - does the telltale come On?
Yes
Check for an open circuit 1885B between PEB pin 5 and LHJB JI pin Bll.
If circuit ok, replace PIM.
No
Backprobe a ground to RHJB J9 pin D8 in Run - does the telltale come On?
Yes
Check for an open circuit 1885A between RHJB J9 pin D8 and LHJB J8 pin D8.
If circuit ok, replace LHJB.
No
Backprobe RHJB J13 pin B7 to ground - does telltale come On?
Yes
Replace RHJB^^
No
Check for an open in circuit 1885 between RHJB J13 pin B7 and right telltale bank.
If circuit ok, replace right telltale bank.
On scan tool EV scanner select BPM to IPC - does BPM SN TT show ON?
Yes
Check for codes \ set, refer to \ appropriate service! manual and code I trouble tree to / diagnose. j
No
Disconnect the LHJB JI connector - is the light out now?
Yes
Check for \ short to ground on circuit 1885B between PIM pin 5 and LHJB JI pin Bll.
If circuit ok, check PIM circuit/ replace PIM. /
No
Disconnect RHJB J9 connector - is the telltale out now?
Yes
Check for ' a short to ground on circuit 1885A between RHJBJ9 pin D8 and LHJB J8 pin D8.
If circuit ok, replace LHJB.
No
Disconnect RHJB J13 and back out pin B7. Reconnect RHJB connector - is TT out now?
Yes
Replace RHJB.
No
Check for a short to ground in circuit 1885 between RHJB J13 pin B7 and right telltale bank.
If circuit ok, replace right telltale bank.

SECURITY, HAZARD, AND PARKING BRAKE TELLTALES ALL INOPERATIVE

CHART 15

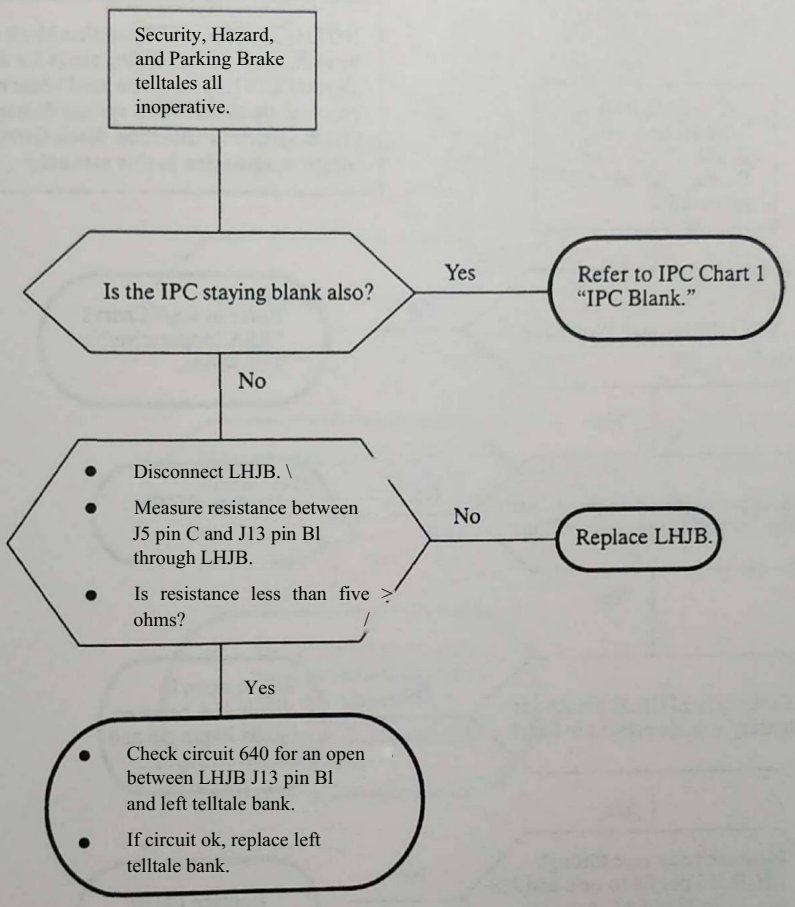
Security, Hazard, and Parking Brake telltales all inoperative.
Is the IPC staying blank also?
Yes
Refer to IPC Chart 1 "IPC Blank."
No
Disconnect LHJB. \
Measure resistance between J5 pin C and J13 pin Bl through LHJB.
Is resistance less than five ohms?
No
Replace LHJB.
Yes
Check circuit 640 for an open between LHJB J13 pin Bl and left telltale bank.
If circuit ok, replace left telltale bank.

CamScanner

LEFT TELLTALE BANK WAIT, BATTERY LIFE, BRAKE AND CHECK TIRE PRESSURE TELLTALES ALL INOPERATIVE

CHART 16

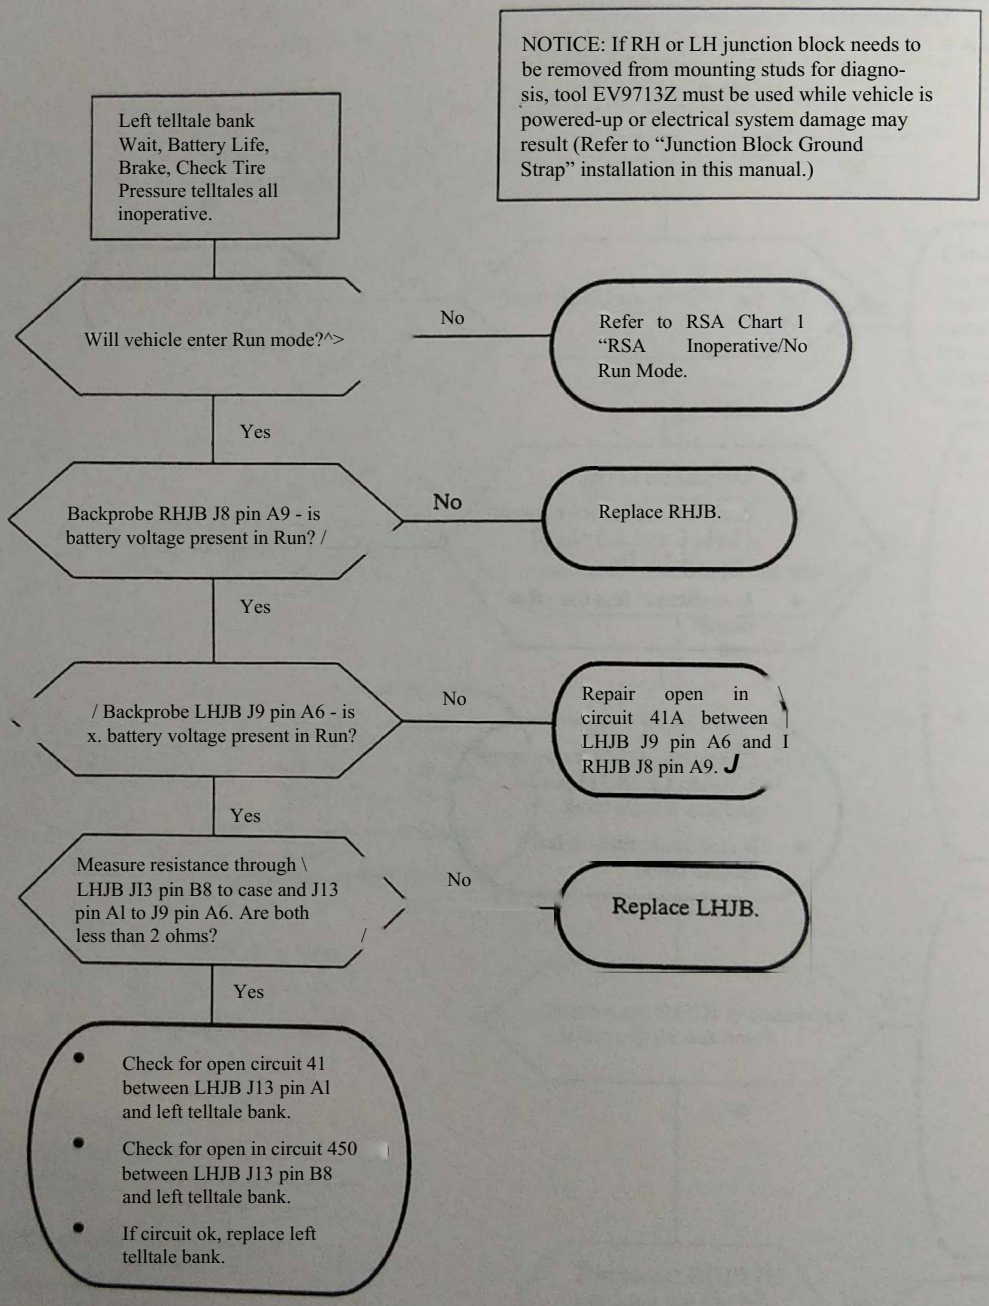
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap" installation in this manual.)
Left telltale bank Wait, Battery Life, Brake, Check Tire Pressure telltales all inoperative.
Will vehicle enter Run mode?^>
No
Refer to RSA Chart 1 "RSA Inoperative/No Run Mode.
Yes
Backprobe RHJB J8 pin A9 - is battery voltage present in Run? /
No
Replace RHJB.
Yes
/ Backprobe LHJB J9 pin A6 - is x. battery voltage present in Run?
No
Repair open in circuit 41A between LHJB J9 pin A6 and I RHJB J8 pin A9.
Yes
Measure resistance through \ LHJB JI3 pin B8 to case and J13 pin Al to J9 pin A6. Are both less than 2 ohms? /
No
Replace LHJB.
Yes
Check for open circuit 41 between LHJB J13 pin Al and left telltale bank.
Check for open in circuit 450 between LHJB J13 pin B8 and left telltale bank.
If circuit ok, replace left telltale bank.

CamScanner

RIGHT TELLTALE BANK ALL INOPERATIVE

CHART 17

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result. (Refer to "Junction Block Ground Strap" installation in this manual.)

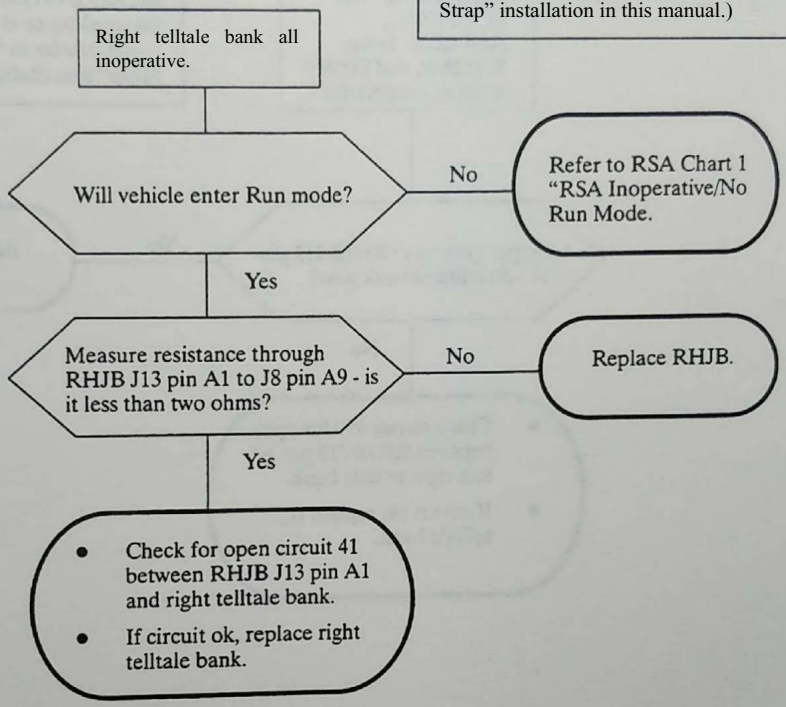
Right telltale bank all inoperative.
Will vehicle enter Run mode?
No
Refer to RSA Chart 1 "RSA Inoperative/No Run Mode.
Yes
Measure resistance through RHJB J13 pin A1 to J8 pin A9 - is it less than two ohms?
No
Replace RHJB.
Yes
Check for open circuit 41 between RHJB J13 pin A1 and right telltale bank.
If circuit ok, replace right telltale bank.

CamScanner

RIGHT TELLTALE BANK SERVICE NOW, ANTI-LOCK, TEMP, SEAT BELT AND SERVICE SOON ALL INOPERATIVE

CHART 18

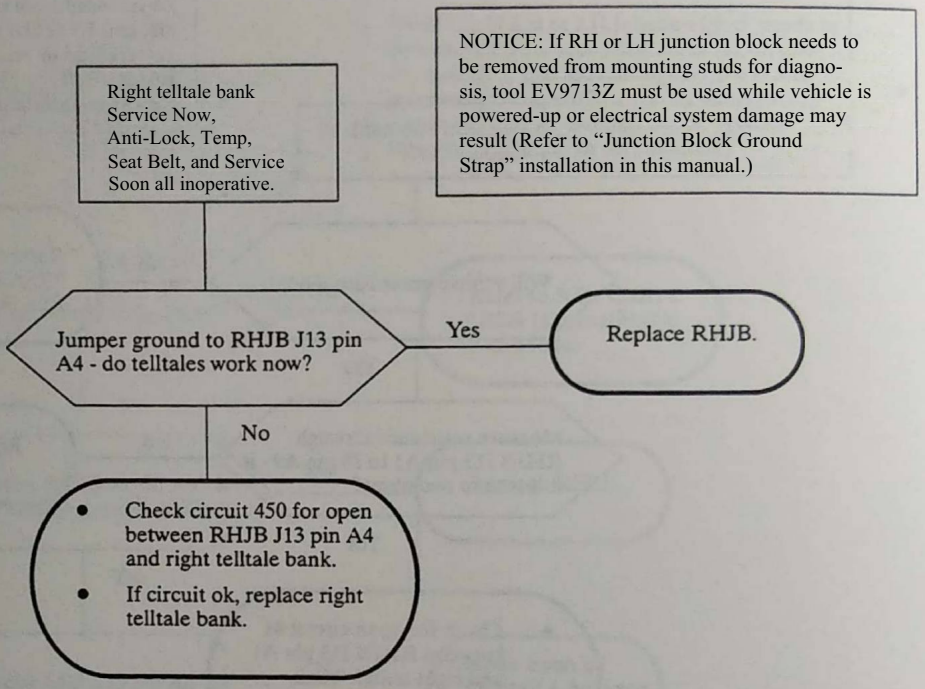
NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap" installation in this manual.)
Right telltale bank Service Now, Anti-Lock, Temp, Seat Belt, and Service Soon all inoperative.
Jumper ground to RHJB J13 pin A4 - do telltales work now?
Yes
Replace RHJB.
No
Check circuit 450 for open between RHJB J13 pin A4 and right telltale bank.
If circuit ok, replace right telltale bank.

CamScanner

NOTES

CamScanner

WINDSHIELD WIPER

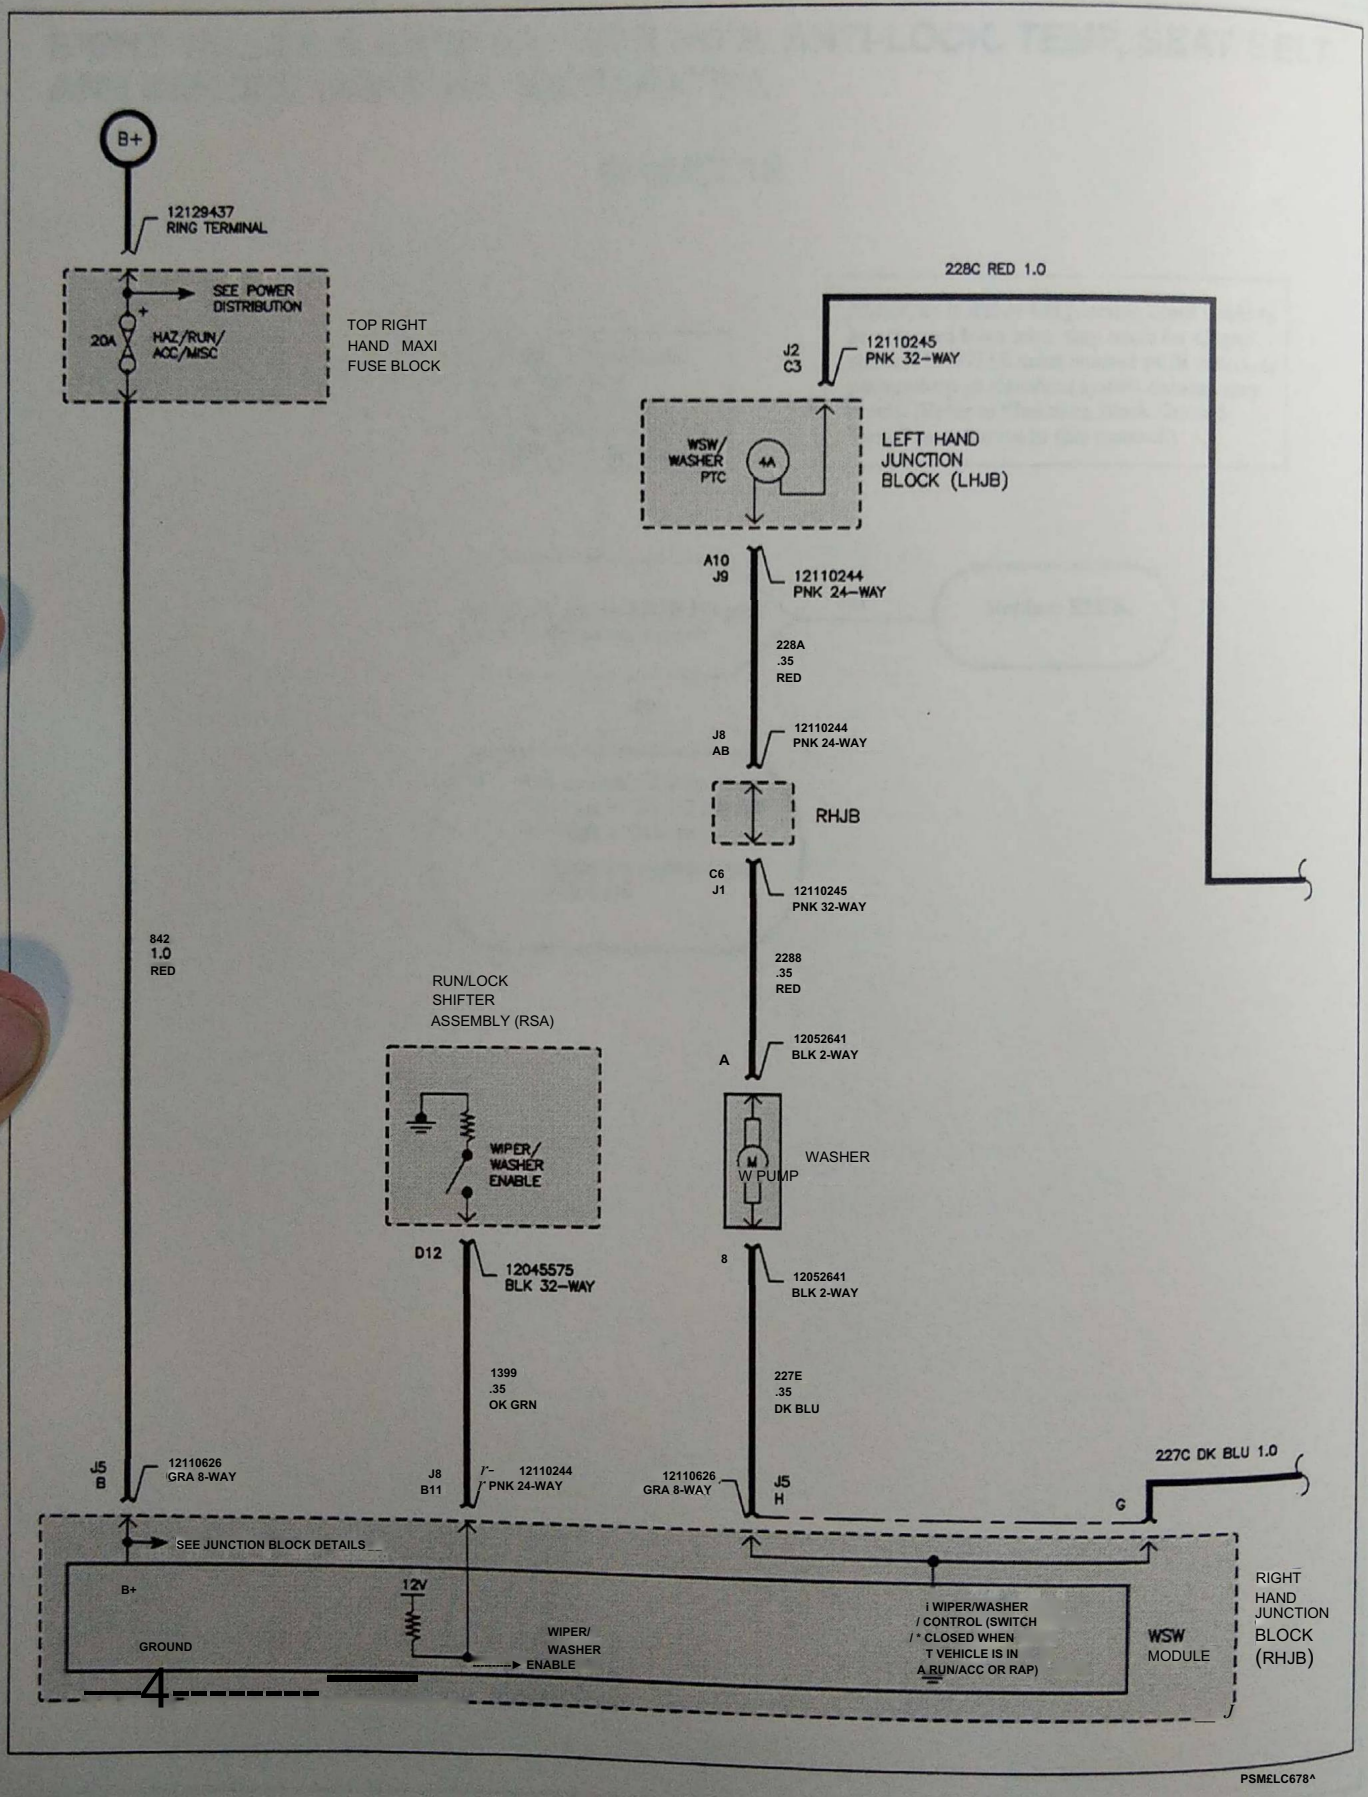

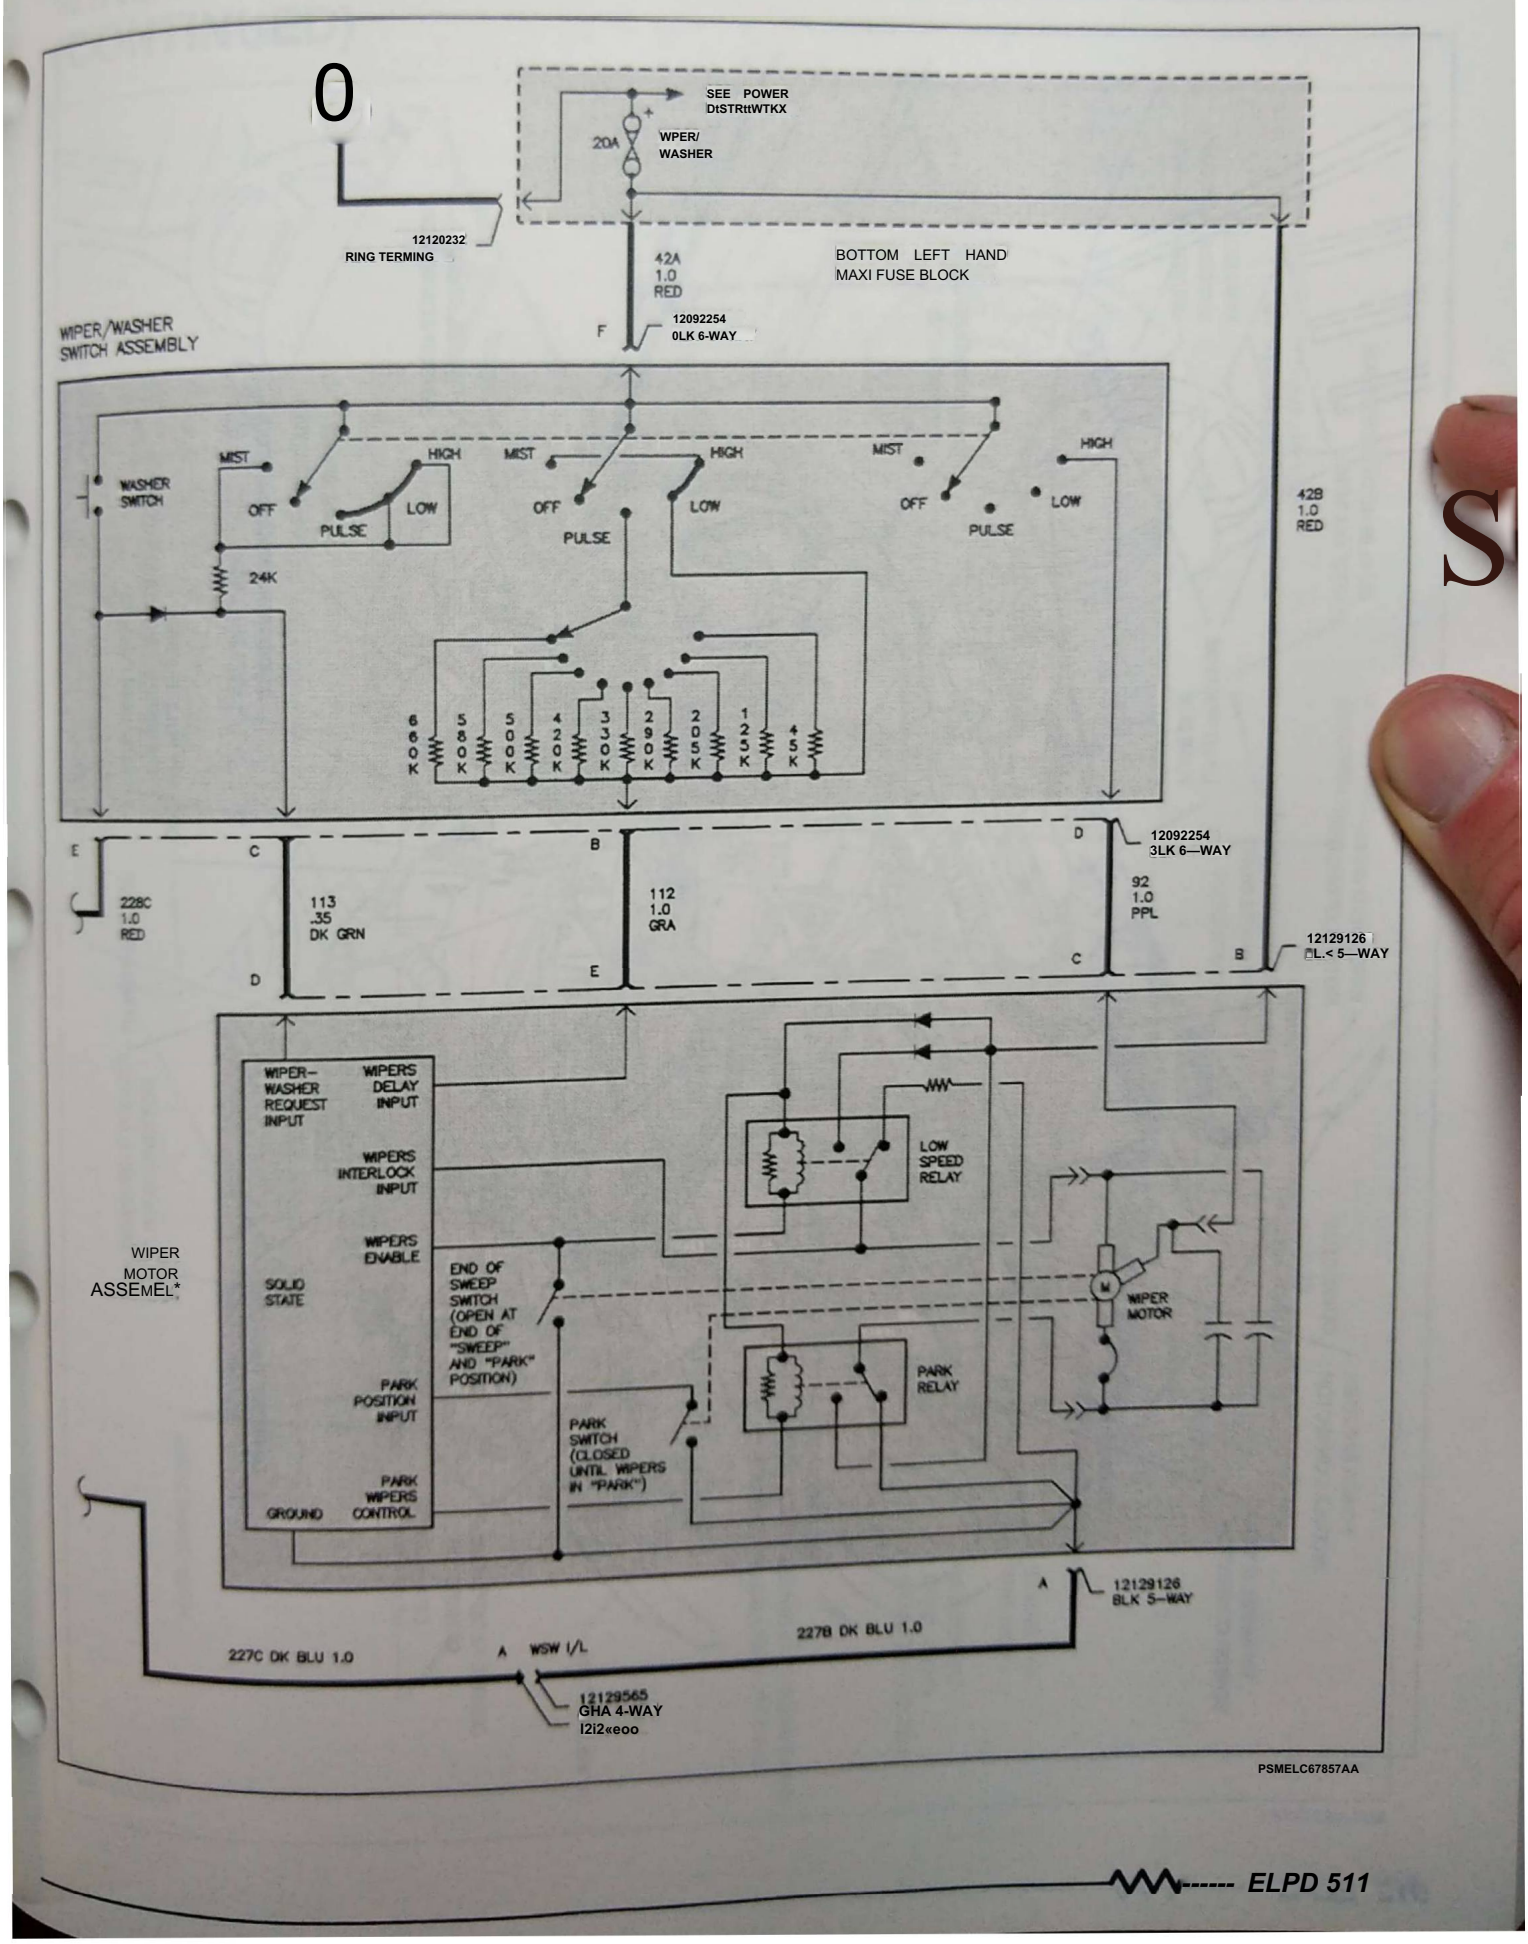
SEE POWER DtSTRttWTKX
20A
WPER/ WASHER
12120232 RING TERMING
42A 1.0 RED
BOTTOM LEFT HAND MAXI FUSE BLOCK
WIPER/WASHER SWITCH ASSEMBLY
12092254 0LK 6-WAY
WASHER SWITCH
MIST
HIGH
OFF
LOW
PULSE
24K
60K
58K
50K
42K
33K
29K
20K
12.5K
4.5K
42B 1.0 RED
12092254 3LK 6—WAY
228C 1.0 RED
113 .35 DK GRN
112 1.0 GRA
92 1.0 PPL
12129126 BLK 5—WAY
WIPER MOTOR ASSEMBLY
WIPER-WASHER REQUEST INPUT
WIPERS DELAY INPUT
WIPERS INTERLOCK INPUT
WIPERS ENABLE
SOLID STATE
END OF SWEEP SWITCH (OPEN AT END OF "SWEEP" AND "PARK" POSITION)
PARK POSITION INPUT
PARK WIPERS CONTROL
GROUND
PARK SWITCH (CLOSED UNTIL WIPERS IN "PARK")
LOW SPEED RELAY
PARK RELAY
WIPER MOTOR
227C DK BLU 1.0
WSW I/L
227B DK BLU 1.0
12129565 GHA 4-WAY
PSMELC67857AA

WINDSHIELD WIPER COMPONENT LOCATION VIEWS

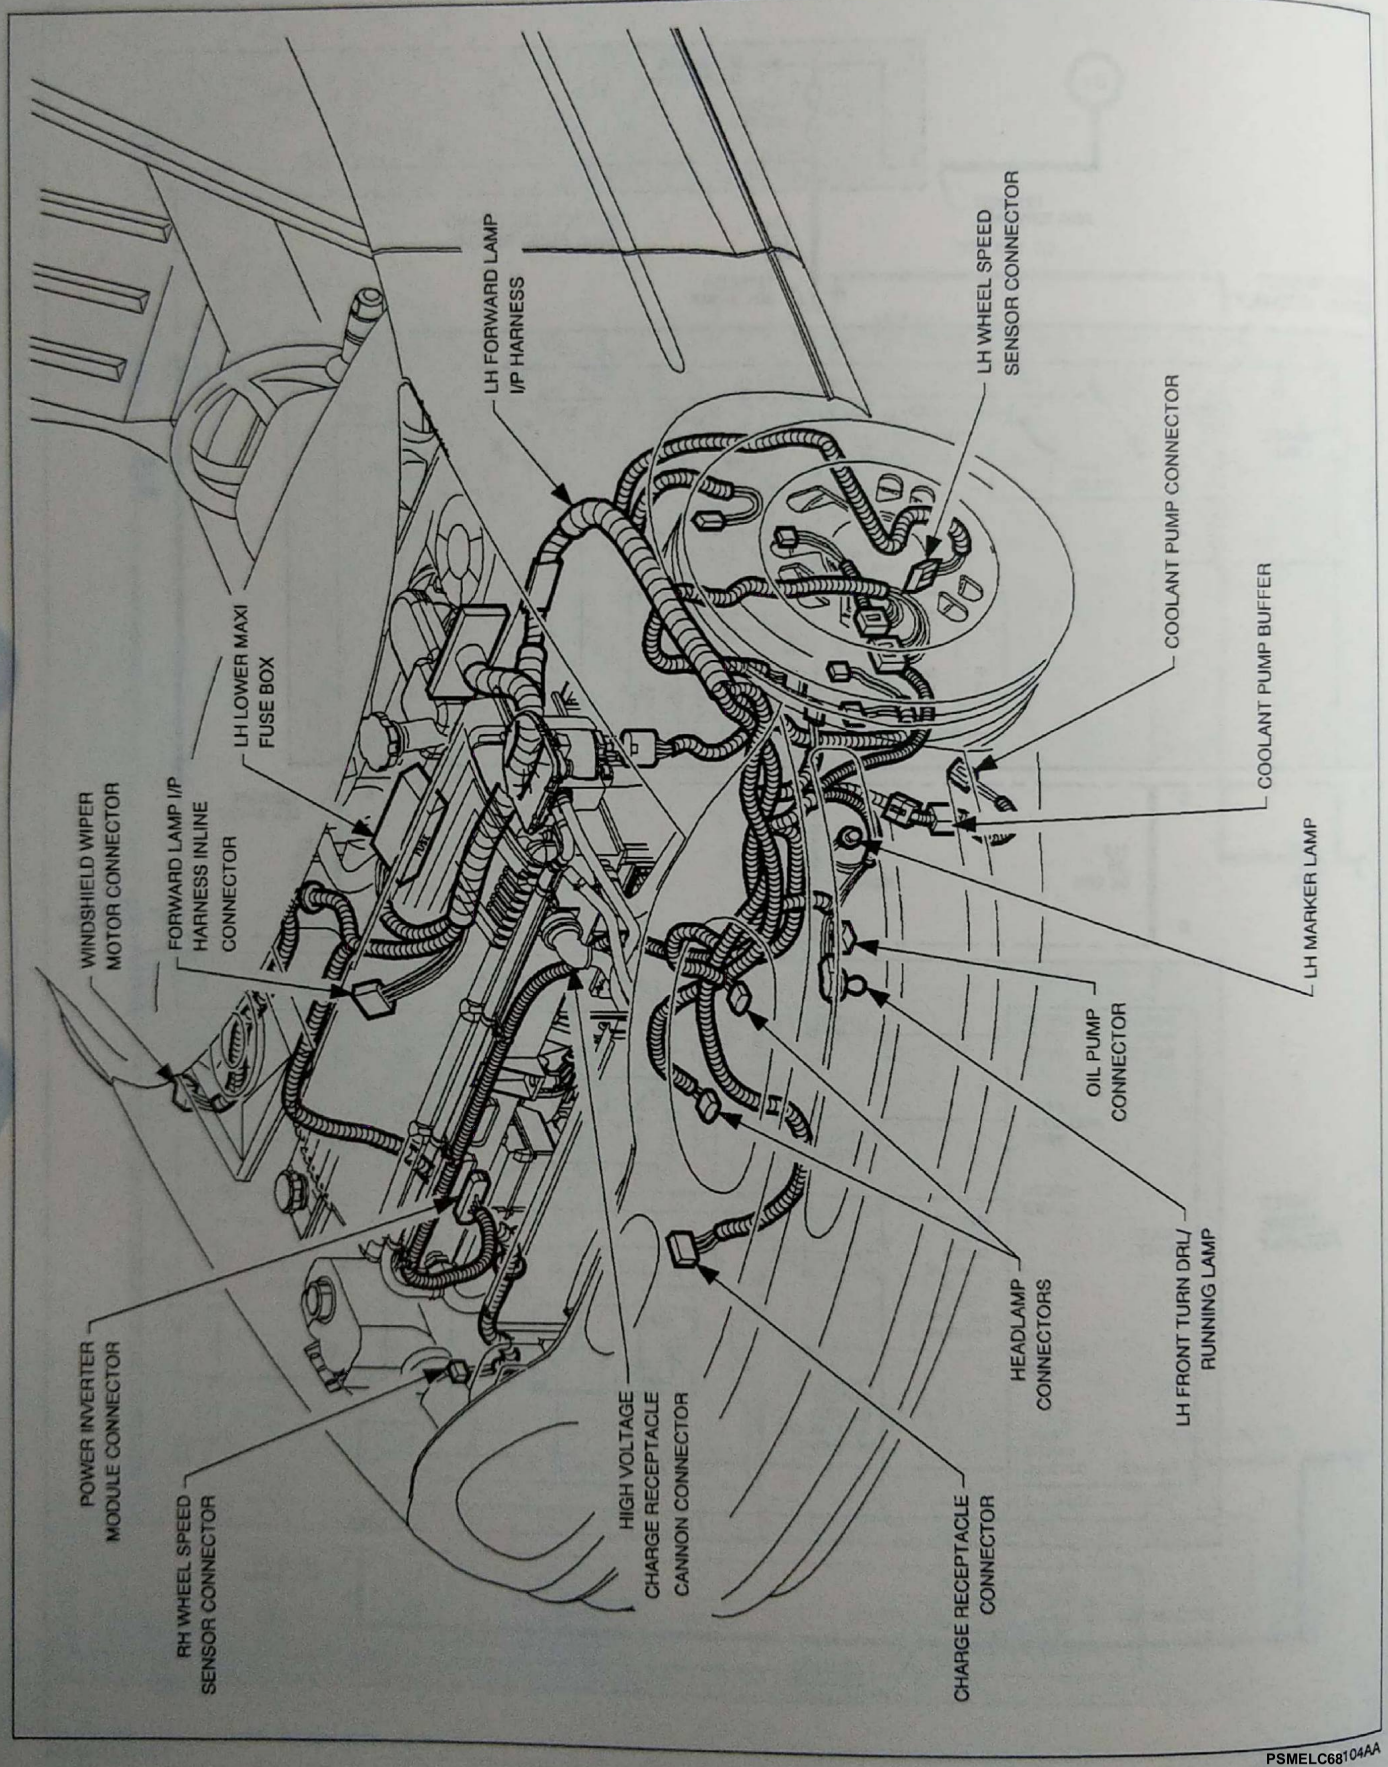
WINDSHIELD WIPER MOTOR CONNECTOR
FORWARD LAMP I/P HARNESS INLINE CONNECTOR
LH LOWER MAXI FUSE BOX
LH FORWARD LAMP I/P HARNESS
LH WHEEL SPEED SENSOR CONNECTOR
COOLANT PUMP CONNECTOR
COOLANT PUMP BUFFER
LH MARKER LAMP
OIL PUMP CONNECTOR
LH FRONT TURN DRL/ RUNNING LAMP
HEADLAMP CONNECTORS
CHARGE RECEPTACLE CONNECTOR
HIGH VOLTAGE CHARGE RECEPTACLE CANNON CONNECTOR
RH WHEEL SPEED SENSOR CONNECTOR
POWER INVERTER MODULE CONNECTOR
PSMELC68104AA

WINDSHIELD WIPER COMPONENT LOCATION VIEWS **(CONTINUED)**

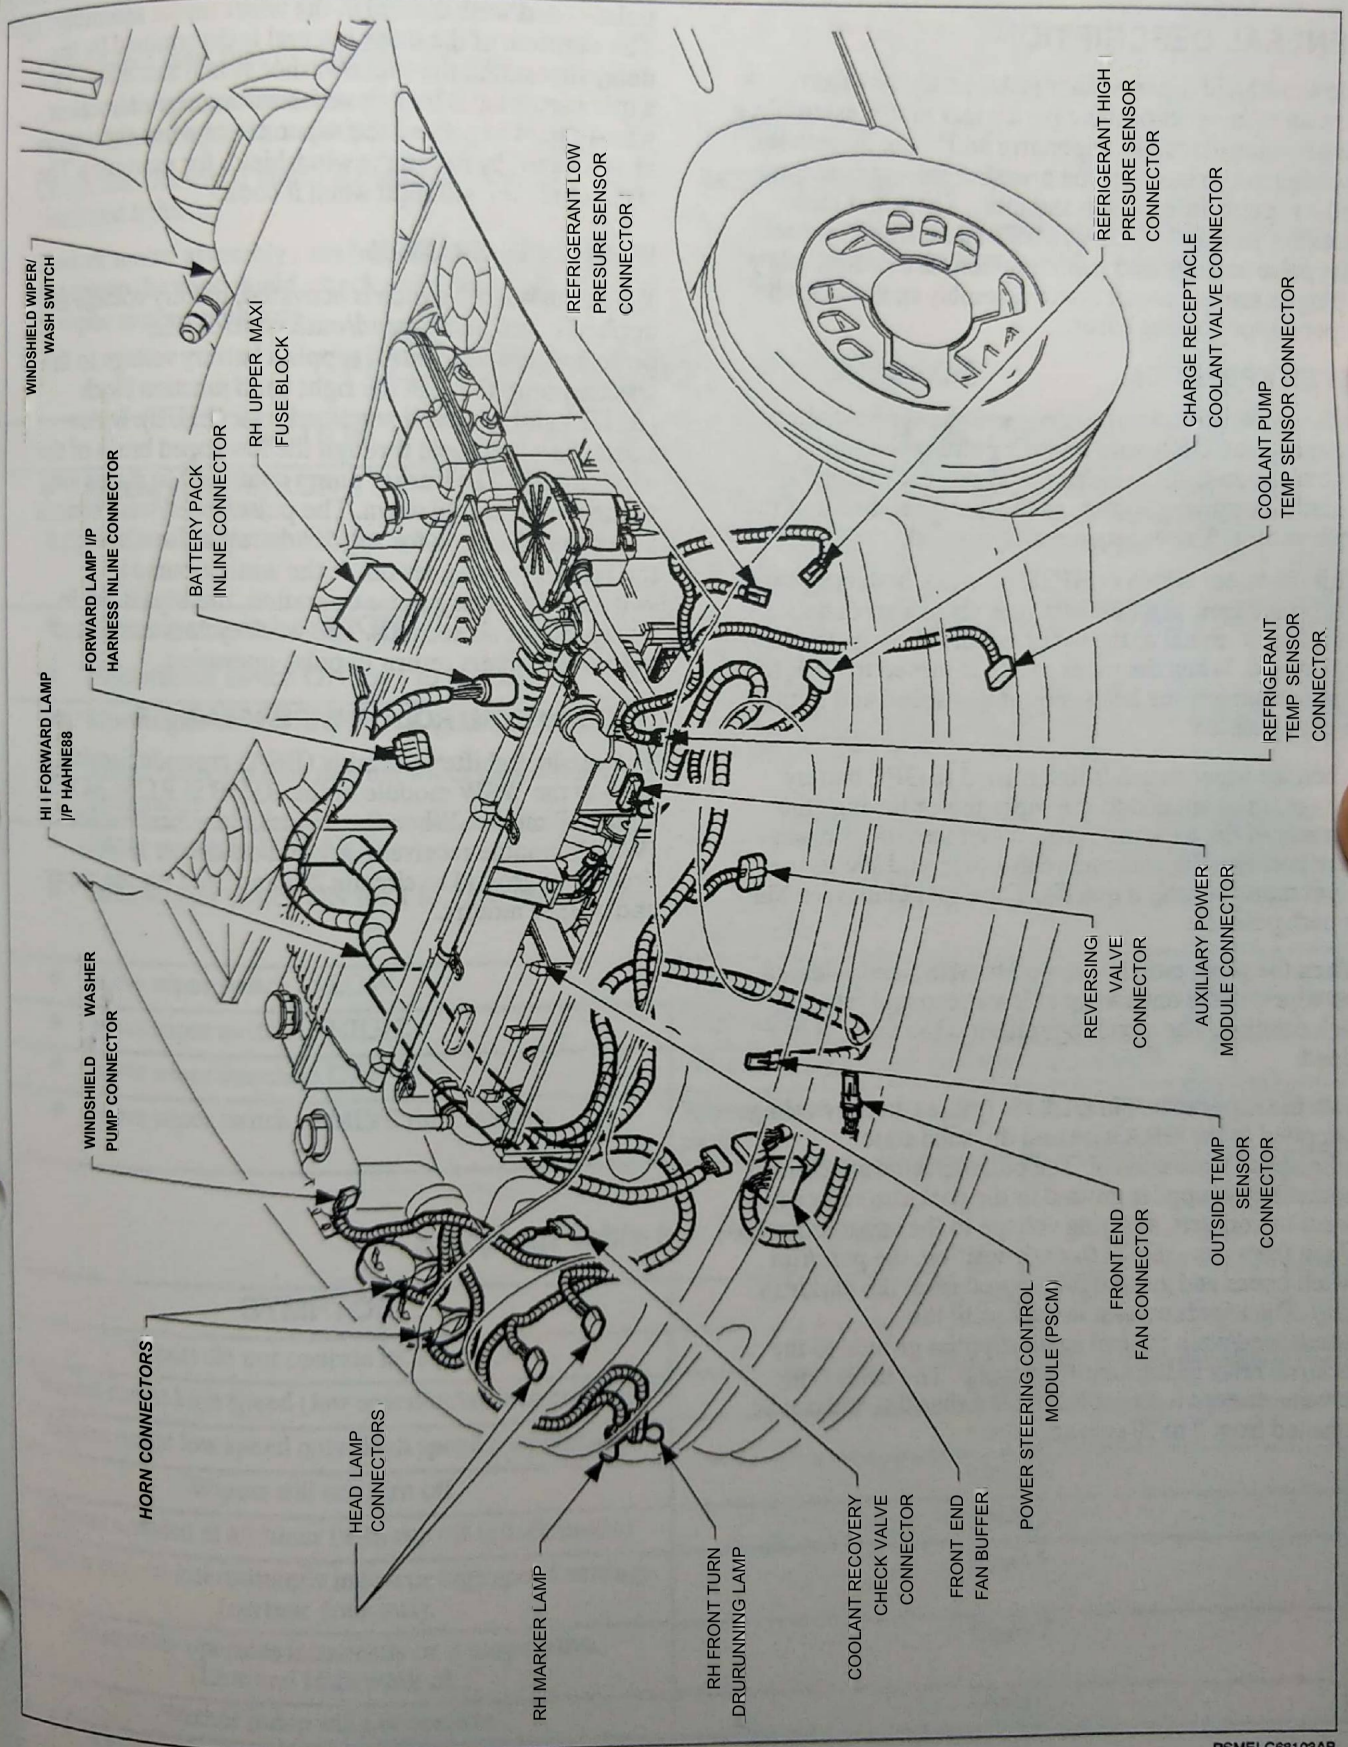
WINDSHIELD WIPER/ WASH SWITCH
BATTERY PACK INLINE CONNECTOR
RH UPPER MAXI FUSE BLOCK
REFRIGERANT LOW PRESURE SENSOR CONNECTOR
REFRIGERANT HIGH PRESURE SENSOR CONNECTOR
CHARGE RECEPTACLE COOLANT VALVE CONNECTOR
COOLANT PUMP TEMP SENSOR CONNECTOR
REFRIGERANT TEMP SENSOR CONNECTOR
FORWARD LAMP I/P HARNESS INLINE CONNECTOR
HI I FORWARD LAMP I/P HAHNE88
WINDSHIELD WASHER PUMP CONNECTOR
REVERSING VALVE CONNECTOR
AUXILIARY POWER MODULE CONNECTOR
OUTSIDE TEMP SENSOR CONNECTOR
FRONT END FAN CONNECTOR
POWER STEERING CONTROL MODULE (PSCM)
FRONT END FAN BUFFER
COOLANT RECOVERY CHECK VALVE CONNECTOR
RH FRONT TURN DRURUNNING LAMP
RH MARKER LAMP
HEAD LAMP CONNECTORS
HORN CONNECTORS
PSMELC68103AB

WINDSHIELD WIPER/WASHER SYSTEM

GENERAL DESCRIPTION

The windshield wiper/washer system consists of a permanent magnet positive park wiper motor assembly, a transmission assembly, wiper arm and blade assemblies, a washer pump mounted on a washer solvent container and a wiper/washer switch assembly. The wiper motor assembly has HIGH, LOW, MIST and DELAY modes. The pulse and demand wash functions are controlled by a plug-in printed circuit board assembly enclosed in the wiper motor housing cover.

WIPER OPERATION

In the LOW position, the wiper switch supplies battery voltage to the GRA wire and the pulse/speed/wash control grounds the park/run relay which closes its contacts, supplying voltage to the low speed brush of the wiper motor. The wipers run at low speed.

With the wiper switch in HIGH position, battery voltage is supplied from the PPL wire directly to a second armature terminal of the wiper motor. The wipers run at high speed. When the wiper switch is turned to OFF, the wipers complete the last sweep at low speed and return to park position.

When the wiper switch is first turned to OFF, battery voltage is still applied to the wiper motor through the contacts of the park/run relay. When the wipers reach park position, the park/run relay opens and shunts the wiper motor to stop it quickly. The wiper blades remain in park position.

When the wiper switch is moved to MIST and released, the wipers make one sweep at low speed and return to park position. The circuit operation is the same as low speed.

With the wiper switch in DELAY (pulse), battery voltage is applied to the GRA wire and the solid state pulse/speed/wash control. The pulse/speed/wash control momentarily supplies ground to the park/run relay which closes its contacts, applying voltage to the wiper motor. When the wipers return to park position, the park/run switch opens and ground is removed from the park/run relay. The wipers remain in park until the pulse/speed/wash control again supplies ground to the park/run relay to start another sweep. The delay time between sweeps is controlled by the rheostat and can be adjusted from 0 to 20 seconds.

PULSE SYSTEM

In the pulse operating mode the wipers make single sweeps with an adjustable time interval between sweeps The time interval is controlled by a solid state P pulse/speed/wash control in the wiper motor assembly. The duration of the delay interval is determined by the delay rheostat in the wiper/washer switch assembly. The wiper motor has a built-in self-resetting circuit breaker which opens to protect the wiper motor when the wi$_{pers}$ are blocked (by ice on the windshield, for example). The circuit breaker will reset when it cools.

WASHER OPERATION

When the washer switch is activated, battery voltage is applied to the pulse/speed/wash control. The pulse/speed/wash control supplies battery voltage to the washer pump through the right hand junction block (RHJB) and left hand junction block (LHJB). It also starts the wiper cycle through the low speed brush of the wiper motor. The washer pump continues to run as long as the switch is held down. The pulse/speed/wash control keeps the wipers on for approximately six seconds after the washer pump goes off. If the washer pump is switched On during pulse operation, the wipers run in low speed for six seconds. The wash cycle is completed before the wipers return to pulse operation.

GROUND CONTROL OF WIPER/WASHER

The run/lock shifter assembly (RSA) grounds circuit 1399 to the WSW module in the RHJB in RUN, ACCY, and RAP modes. When the windshield wiper/Washer (WSW) module receives a ground on circuit 1399, it provides a ground to circuits 227 and 5651 for the wiper and washer motors.

CamScanner

DIAGNOSIS

TROUBLESHOOTING HINTS

5 the following checks before beginning system diagnosis.

1. Check wiper maxi fuse by visual inspection .
2. Check that wiper motor and wi$_{per}$/washer switch connectors are mated correctly.
3. Check that the wiper motor mounting screw. . clean and tight. screws are
4. *If* wiper motor assembly runs but wiper blades dn not sweep the windshield, check winer t J at wiper motor crank arm. P ans mission
5. If washer docs not operate, check that:
   - Solvent container is filled.
   - Hoses are not pinched or kinked.
   - Hoses are correctly attached.
   - Nozzle is not clogged.

Refer to System Diagnosis.

SYSTEM DIAGNOSIS

Perform the pulse wiper/washer system check then refer to the appropriate symptom table for diagnostic procedures.

PULSE WIPER/WASHER SYSTEM CHECK

ACTION	NORMAL OPERATION
• Ignition switch in RUN • Hold washer switch ON for 1 to 2 seconds.	Washer sprays windshield as long as washer switch is held ON. Wipers run at low speed and continue to run for approximately 6 seconds after wash cycle is complete, then return to park position.
• Move wiper switch to HIGH. • Hold washer switch ON for 1 to 2 seconds.	Same operation as low speed wash except that wipers run at high speed.
• Move wiper switch to DELAY (pulse mode). • Adjust delay time by moving wiper switch through delay range.	Wipers make one complete sweep, then pause for 0 to 20 seconds before making next sweep.
• Wiper switch in DELAY. • Hold washer switch ON for 1 to 2 seconds.	Washer sprays as long as washer switch is held ON. Wipers run at low speed during spray period and continue for approximately 6 seconds after wash cycle. Wipers return to pulse mode.
• Move wiper switch to LOW.	Wipers run continuously at low speed.
• Move wiper switch to HIGH.	Wipers run continuously at high speed.
* Move wiper switch to OFE	Wipers return to park position at low speed.
• Move wiper switch to MIST, then release.	Wipers make one complete sweep at low speed and then park.

Symptom Table For Pulse System

SYMPTOM	PROCEDURE
Wipers do not operate in any mode.	Chart 1
Wipers run at high speed (low speed/delay inoperative)	Chart 2
^J^Pcrs run at low speed only (high speed inoperative)	Chart 3
Wipers will not turn off.	Chart 4
Wipers enabled at all times (with rap off in lock mode)	Chart 5
Wi Pers cut out intermittently in low or high speed settings (current draw test).	Chart 6
^ulse delay operates incorrectly or is inoperative. (Low and High work ok.)	Chart 7
Washer pump will not operate.	Chart 8

CamScanner

WIPERS DO NOT OPERATE IN ANY MODE
CHART 1

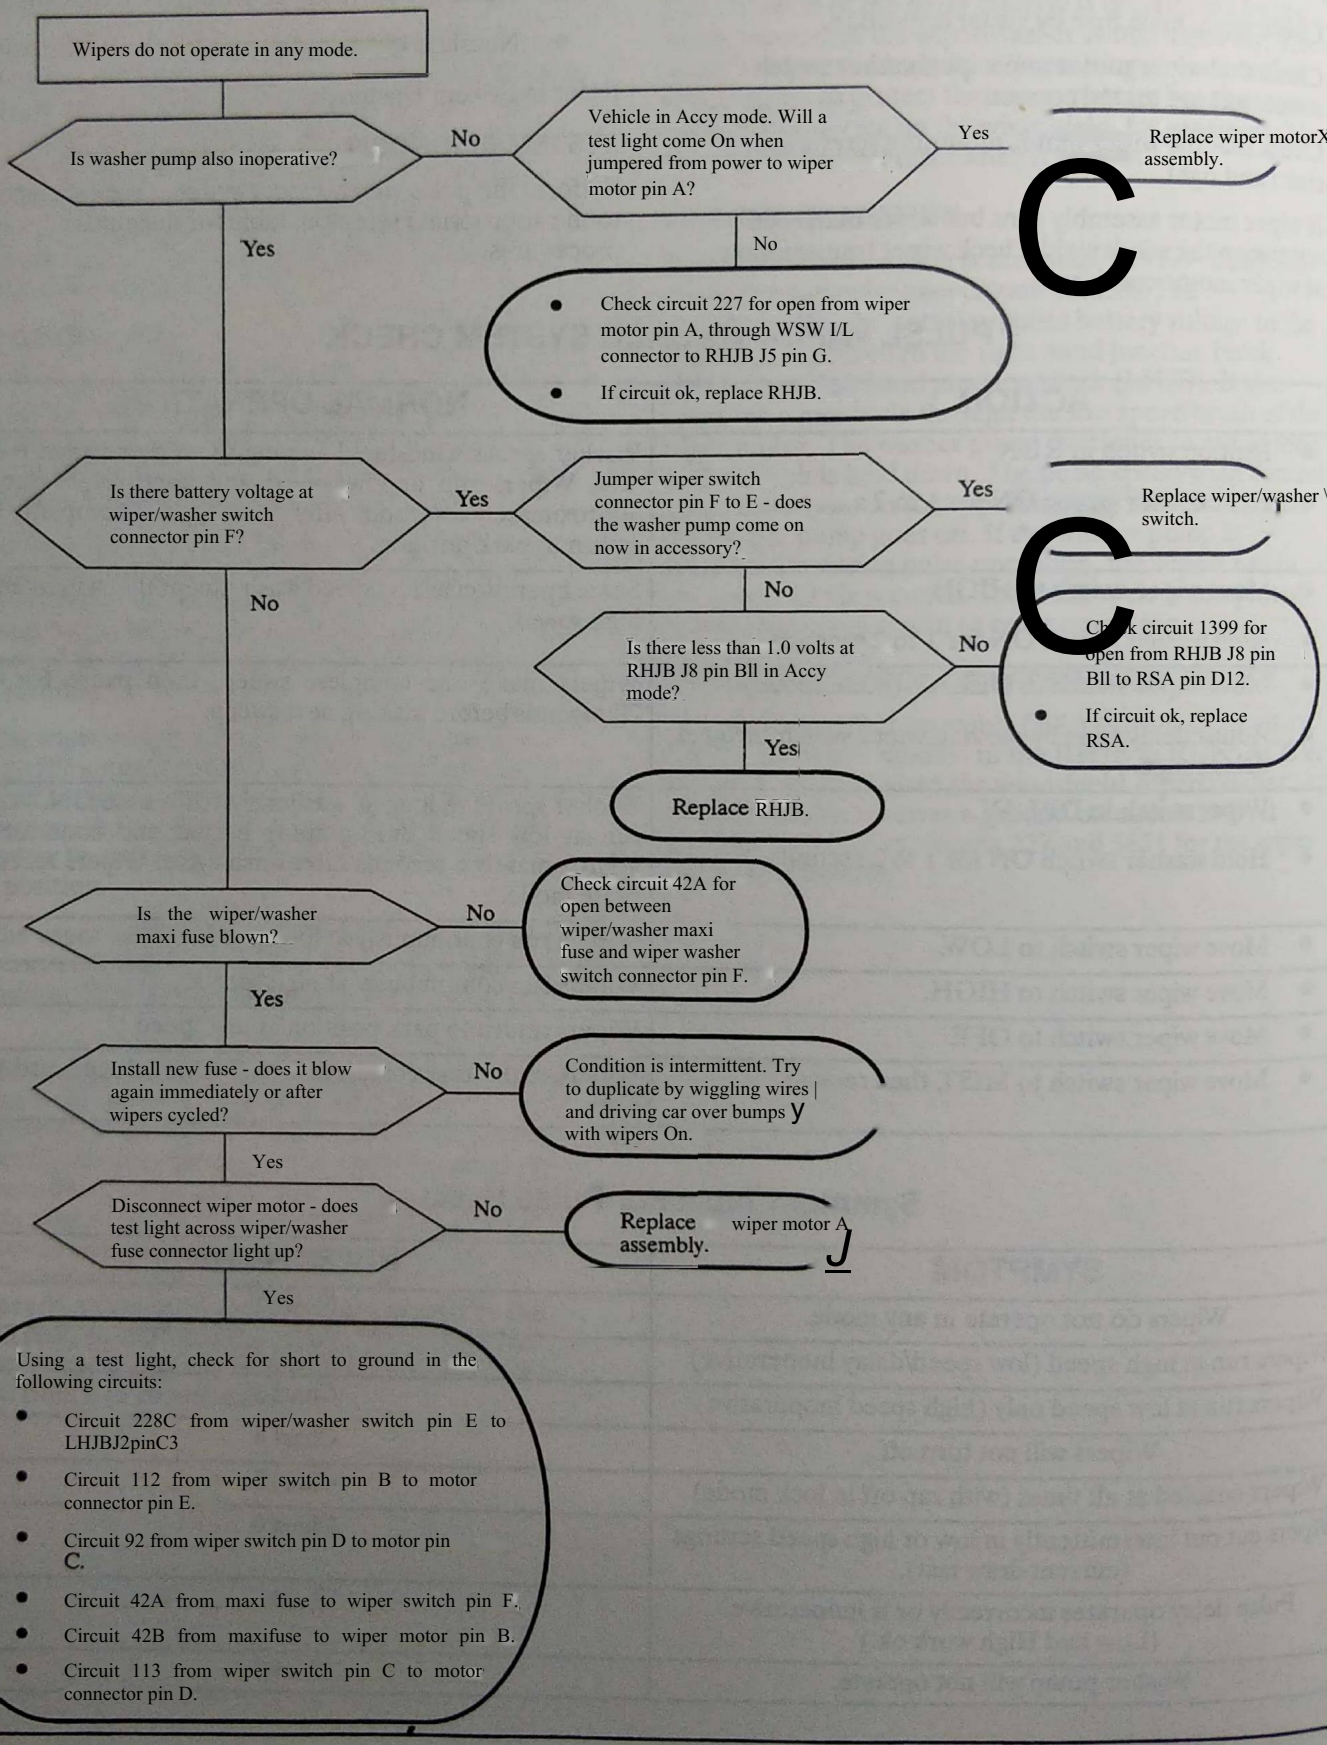
Wipers do not operate in any mode.
Is washer pump also inoperative?
No
Vehicle in Accy mode. Will a test light come On when jumpered from power to wiper motor pin A?
Yes
Replace wiper motorX assembly.
Yes
No
Check circuit 227 for open from wiper motor pin A, through WSW I/L connector to RHJB J5 pin G.
If circuit ok, replace RHJB.
Is there battery voltage at wiper/washer switch connector pin F?
Yes
Jumper wiper switch connector pin F to E - does the washer pump come on now in accessory?
Yes
Replace wiper/washer \ switch.
No
No
Is there less than 1.0 volts at RHJB J8 pin Bll in Accy mode?
No
Check circuit 1399 for open from RHJB J8 pin Bll to RSA pin D12.
If circuit ok, replace RSA.
Yes
Replace RHJB.
Is the wiper/washer maxi fuse blown?
No
Check circuit 42A for open between wiper/washer maxi fuse and wiper washer switch connector pin F.
Yes
Install new fuse - does it blow again immediately or after wipers cycled?
No
Condition is intermittent. Try to duplicate by wiggling wires and driving car over bumps with wipers On.
Yes
Disconnect wiper motor - does test light across wiper/washer fuse connector light up?
No
Replace wiper motor A assembly.
Yes
Using a test light, check for short to ground in the following circuits:
Circuit 228C from wiper/washer switch pin E to LHJBJ2pinC3
Circuit 112 from wiper switch pin B to motor connector pin E.
Circuit 92 from wiper switch pin D to motor pin C.
Circuit 42A from maxi fuse to wiper switch pin F.
Circuit 42B from maxifuse to wiper motor pin B.
Circuit 113 from wiper switch pin C to motor connector pin D.

CamScanner

WIPERS RUN AT HIGH SPEED
(LOW SPEED/DELAY INOPERATIVE)

CHART 2

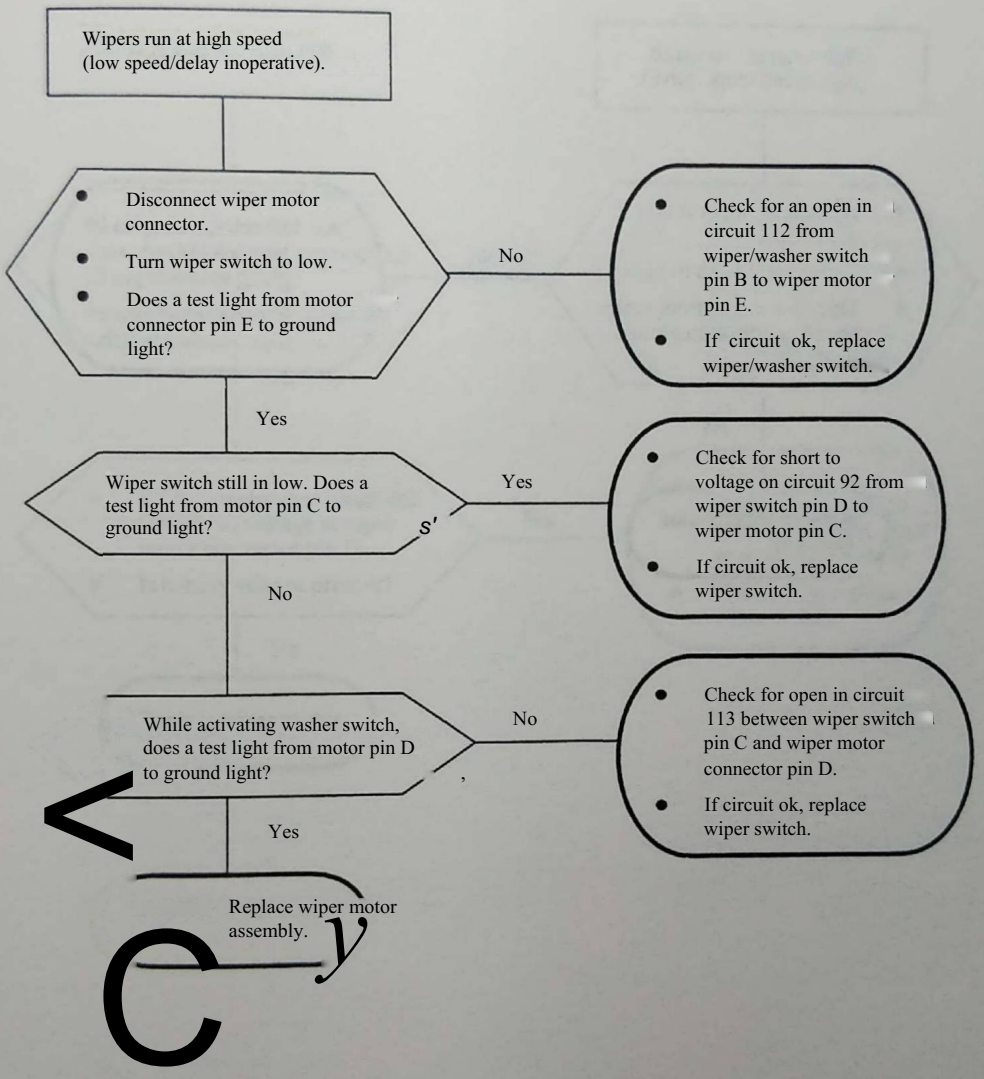
Wipers run at high speed (low speed/delay inoperative).
Disconnect wiper motor connector.
Turn wiper switch to low.
Does a test light from motor connector pin E to ground light?
No
Check for an open in circuit 112 from wiper/washer switch pin B to wiper motor pin E.
If circuit ok, replace wiper/washer switch.
Yes
Wiper switch still in low. Does a test light from motor pin C to ground light?
Yes
Check for short to voltage on circuit 92 from wiper switch pin D to wiper motor pin C.
If circuit ok, replace wiper switch.
No
While activating washer switch, does a test light from motor pin D to ground light?
No
Check for open in circuit 113 between wiper switch pin C and wiper motor connector pin D.
If circuit ok, replace wiper switch.
Yes
Replace wiper motor assembly.

CamScanner

WIPERS RUN AT LOW SPEED (HIGH SPEED INOPERATIVE)

CHART 3

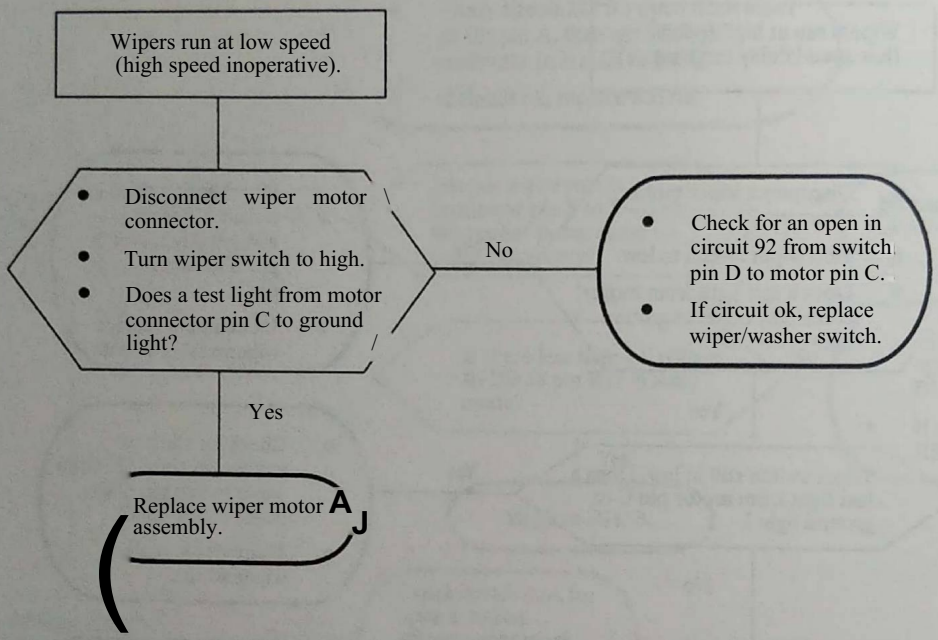
Wipers run at low speed (high speed inoperative).
Disconnect wiper motor connector.
Turn wiper switch to high.
Does a test light from motor connector pin C to ground light?
No
Check for an open in circuit 92 from switch pin D to motor pin C.
If circuit ok, replace wiper/washer switch.
Yes
Replace wiper motor assembly.
A
J

CamScanner

WIPERS WILL NOTTURN OFF

CHART 4

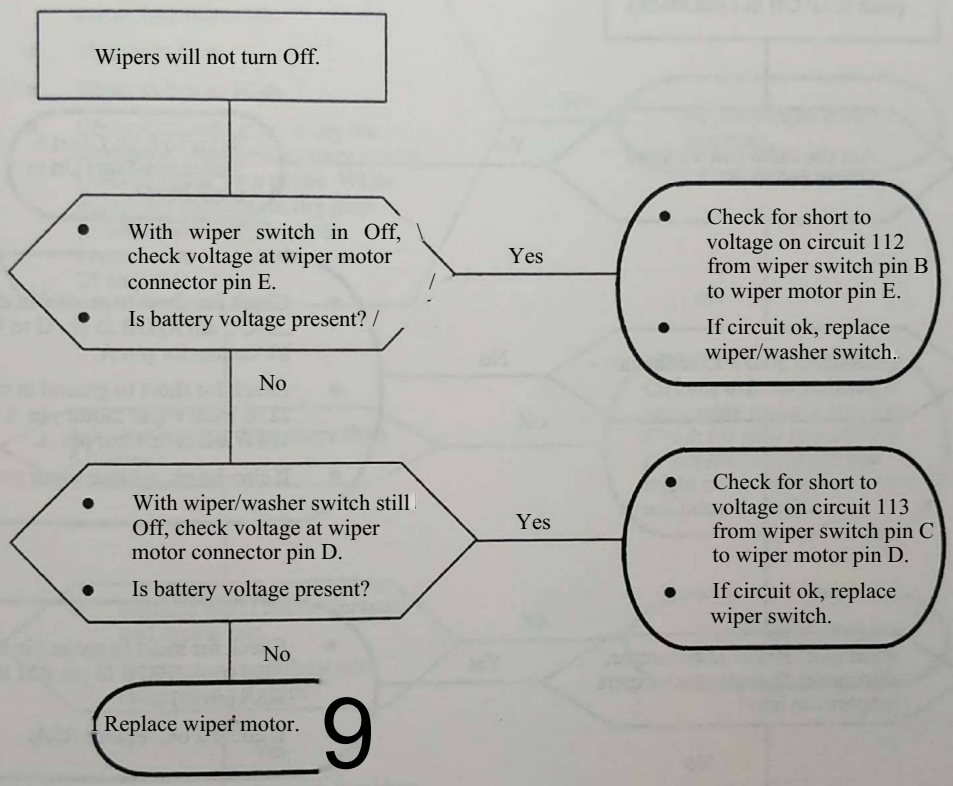
Wipers will not turn Off.
With wiper switch in Off, check voltage at wiper motor connector pin E.
Is battery voltage present?
Yes
Check for short to voltage on circuit 112 from wiper switch pin B to wiper motor pin E.
If circuit ok, replace wiper/washer switch.
No
With wiper/washer switch still Off, check voltage at wiper motor connector pin D.
Is battery voltage present?
Yes
Check for short to voltage on circuit 113 from wiper switch pin C to wiper motor pin D.
If circuit ok, replace wiper switch.
No
Replace wiper motor.
9

CamScanner

WIPERS ENABLED AT ALL TIMES (WITH RAP OFF IN LOCK MODE)

CHART 5

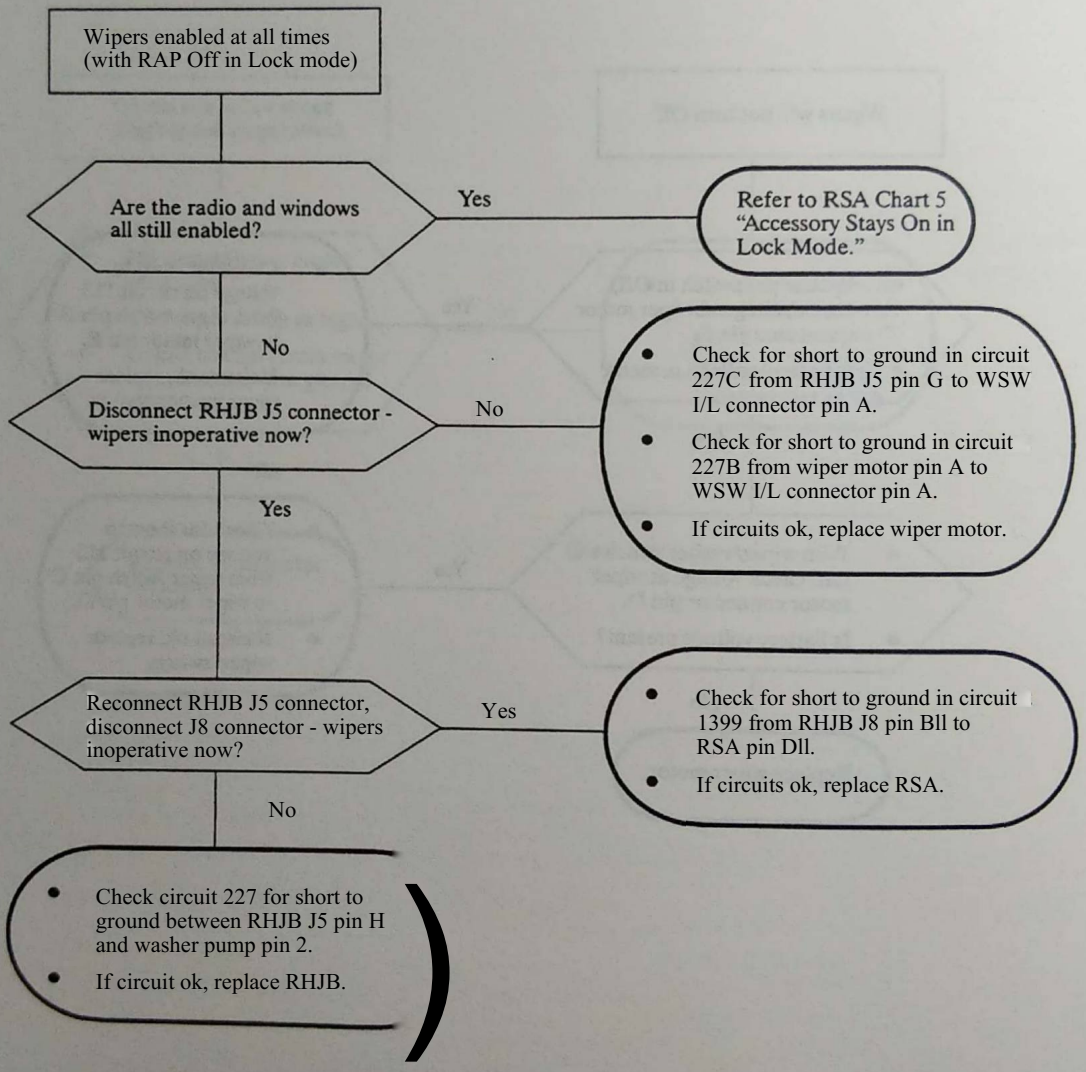
Wipers enabled at all times (with RAP Off in Lock mode)
Are the radio and windows all still enabled?
Yes
Refer to RSA Chart 5 "Accessory Stays On in Lock Mode."
No
Disconnect RHJB J5 connector - wipers inoperative now?
No
• Check for short to ground in circuit 227C from RHJB J5 pin G to WSW I/L connector pin A.
• Check for short to ground in circuit 227B from wiper motor pin A to WSW I/L connector pin A.
• If circuits ok, replace wiper motor.
Yes
Reconnect RHJB J5 connector, disconnect J8 connector - wipers inoperative now?
Yes
• Check for short to ground in circuit 1399 from RHJB J8 pin Bll to RSA pin Dll.
• If circuits ok, replace RSA.
No
• Check circuit 227 for short to ground between RHJB J5 pin H and washer pump pin 2.
• If circuit ok, replace RHJB.

CamScanner

WIPERS CUT O^INTERMI^ENTLY AT LOW OR HIGH SPEED bt I I INGS (CURRENT DRAW TEST)

CHART 6

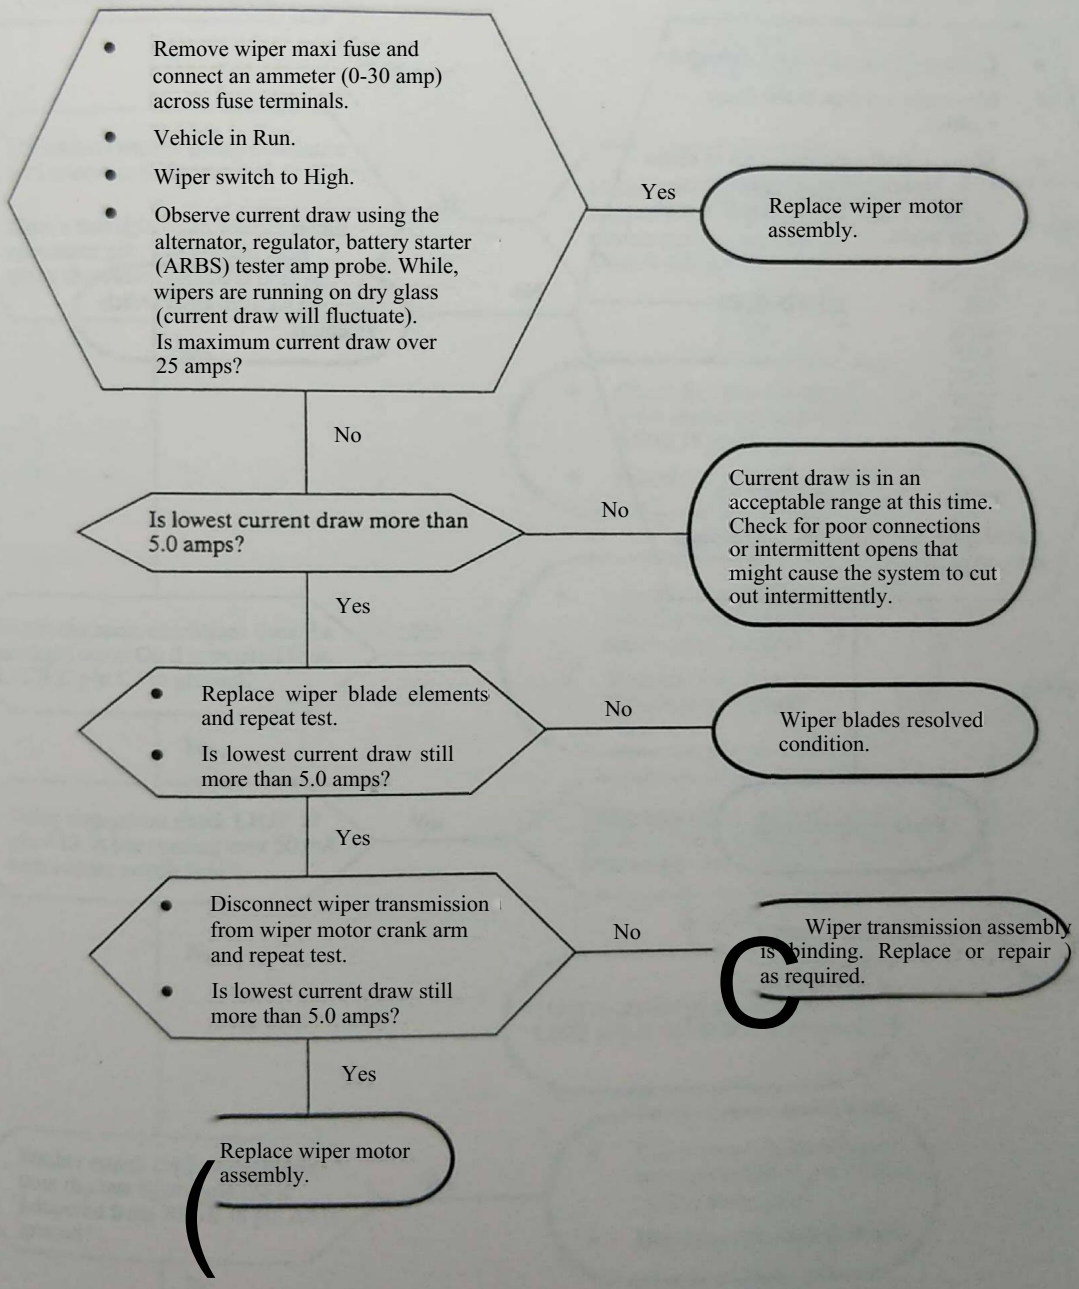
Remove wiper maxi fuse and connect an ammeter (0-30 amp) across fuse terminals.
Vehicle in Run.
Wiper switch to High.
Observe current draw using the alternator, regulator, battery starter (ARBS) tester amp probe. While, wipers are running on dry glass (current draw will fluctuate). Is maximum current draw over 25 amps?
Yes
Replace wiper motor assembly.
No
Is lowest current draw more than 5.0 amps?
No
Current draw is in an acceptable range at this time. Check for poor connections or intermittent opens that might cause the system to cut out intermittently.
Yes
Replace wiper blade elements and repeat test.
Is lowest current draw still more than 5.0 amps?
No
Wiper blades resolved condition.
Yes
Disconnect wiper transmission from wiper motor crank arm and repeat test.
Is lowest current draw still more than 5.0 amps?
No
Wiper transmission assembly is binding. Replace or repair as required.
Yes
Replace wiper motor assembly.

CamScanner

PULSE DELAY OPERATES INCORRECTLY OR IS INOPERATIVE (LOW and high WORK OK)

CHART 7

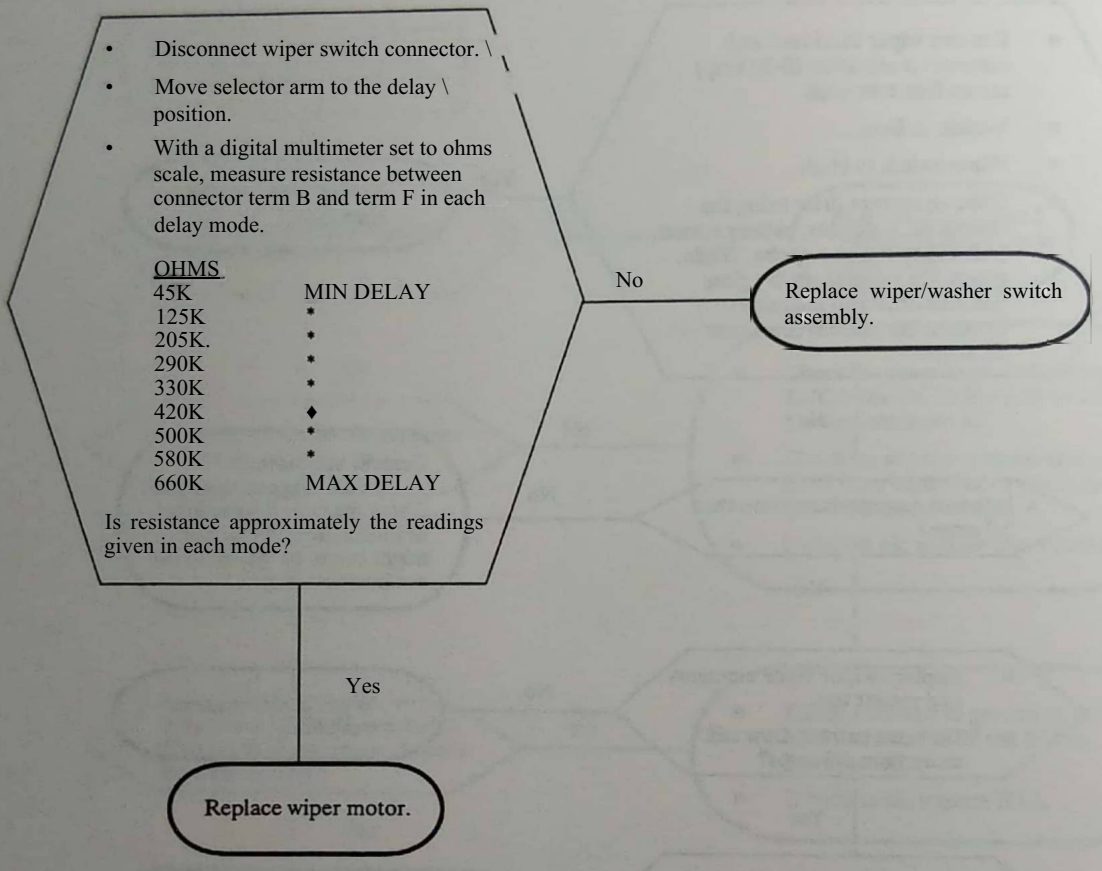

CamScanner

WASHER PUMP WILL NOT OPERATE

CHART 8

Washer pump will not operate. (Wipers operate normally).

NOTICE: If RH or LH junction block needs to be removed from mounting studs for diagnosis, tool EV9713Z must be used while vehicle is powered-up or electrical system damage may result (Refer to "Junction Block Ground Strap" installation in this manual.)

Disconnect washer pump connector and select accessory mode.

Does a test light from washer pump connector pin A to ground light when the washer switch is held on?

Yes

Under the same conditions, jumper the testlight across washer pump pins A and B. Does it still light?

Yes

f -X

i Replace washer pump, j

No

- Check for open circuit 227 from washer pump pin 2 to RHJB J5 pin H.
- If circuit is ok, replace RHJB.

No

Under the same conditions does the test light come On if jumpered from LHJB J2 pin C3 to ground?

No

- Check circuit 228C from LHJB J2 pin C3 to wiper/washer switch pin E for open.
- If circuit is ok, replace wiper/washer switch.

Yes

Using amp probe check LHJB J9 pin A10. Is the reading over 50 mA with washer switch held?

Yes

Using amp probe check RHJB Jo\ pin A8. Is the reading over 50 mA with washer switch held?

Yes

- Check for short to ground in circuit 228B from RHJB JI pin C6 to washer pump pin 1.
- If circuit is ok, replace RHJB.

No

Short to ground in circuit 228A from LHJB J9 pin A10 to RHJB J8 pin A8.

No

Washer switch On in Accy mode - does the test light come On if jumpered from RHJB J8 pin A8 to ground?

Yes

- Check circuit 228B for open between RHJB JI pin C6 and washer pump pin 1.
- If circuit is ok, replace RHJB.

No

- Check circuit 228A for open between LHJB J9 pin A10 and RHJB J8 pin A8.
- If circuit is ok, replace LHJB.

CamScanner

JUNCTION BLOCK CONNECTOR LOCATIONS

LH JUNCTION BLOCK

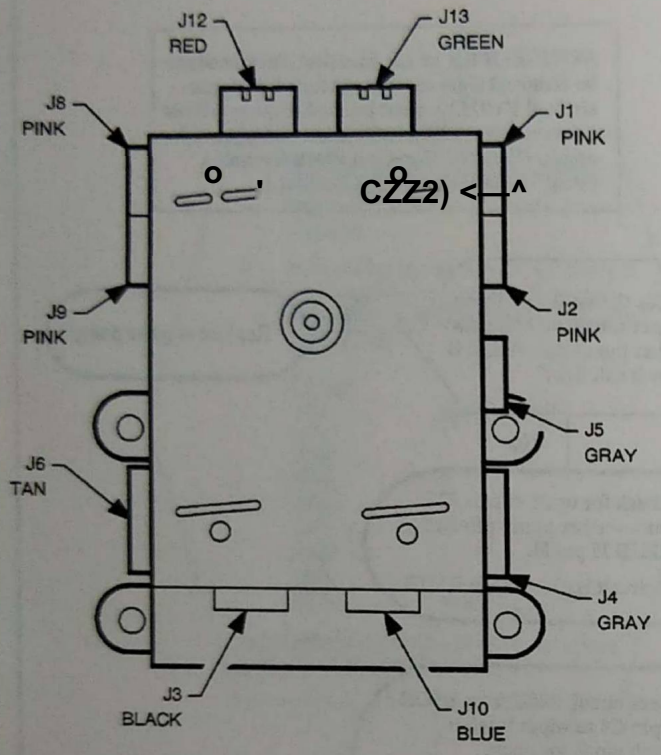

RH JUNCTION BLOCK

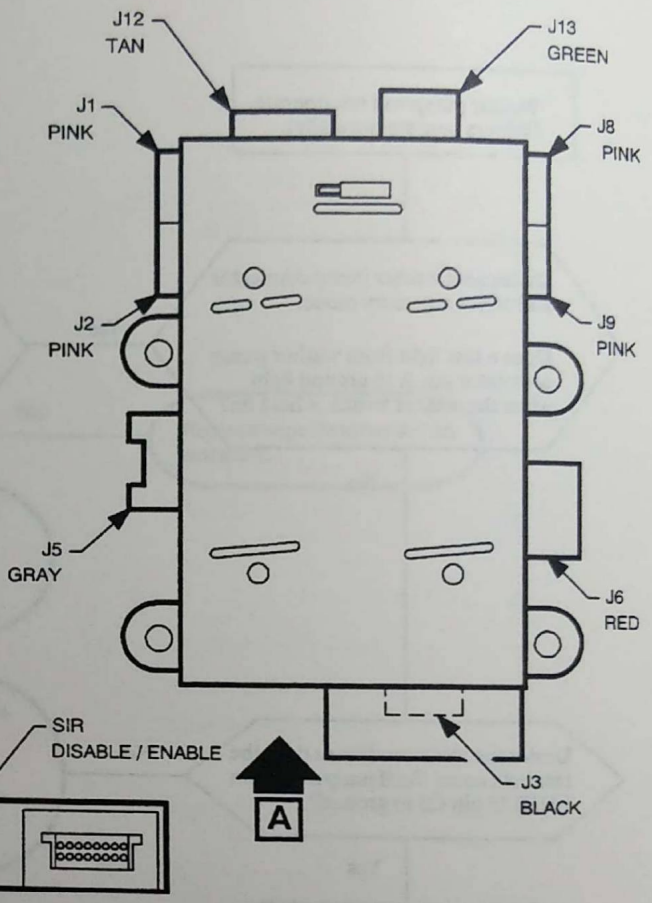

VIEW [7]

TRUNK JUNCTION BLOCK

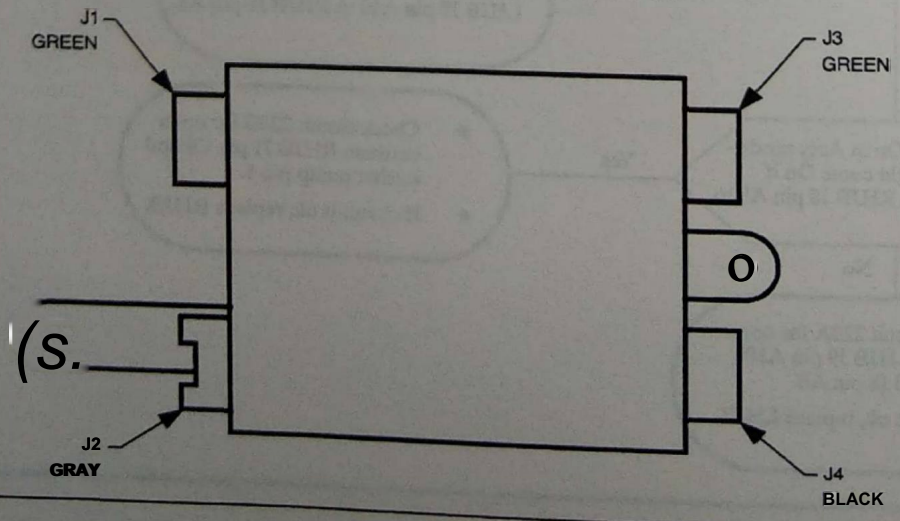

CamScanner

NOTES

CamScanner

ACCESSORY AC AND DC POWER MODULE (APM)

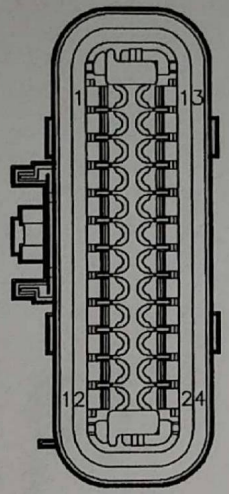

NATURAL
12129225

Location: Underhood, Left Side of Accessory Power Module

PSMELC67235AA

CamScanner

ACCESSORY AC AND DC POWER MODULE - 12129225

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
1	BRN	241B	.35	RUN 2
2	WHT	249	.35	AUX POWER SUPPLY (APS) COMMAND IN
3				
4	BLK/WHT	1085	.35	CMC SPEED COMMAND IN
5	RED	1262	.35	APM 12V STATUS BITO
6	PPL	1645	.35	BRAKE LOAD SHED
7	ORN	1263	.35	APM 12V STATUS BIT 1
8	PNK/BLK	1217	.35	CMC DC CURRENT
9	DR GRN	1264	.35	APM 12V STATUS BIT 2
10				
11				
12				
13	YEL	820C	.35	BRAKE SWITCH IN
14				
15	WHT	637	.35	HEATED W/S COMMAND IN
16				
17				
18	DKBLU	1081	.35	CMC/47V STATUS BITO
19	YEL	1082	.35	CMC/47V STATUS BIT 1
20	PPL	1083	.35	CMC/4 7 V STATUS BIT 2
21				
22				
23				
24	WHT	2O27C	.35	VEHICLE WAKE-UP

CamScanner

HARNESS CONNECTOR FACES

ACCESSORY POWER MODULE (APM)

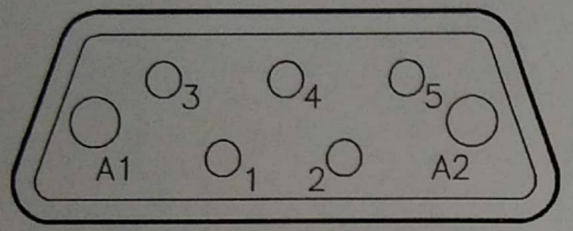

BLINDMATE

PSMELC68244AA

ACCESSORY POWER MODULE (APM)				
CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A1				HV BATT +
I				HV INTERLOCK RETURN -
2				
3				
4				
5				HV INTERLOCK +
A2				HV BATT-

Location: Underhood, Attached to Lower Left of Power Electronics Bay

CamScanner

BACKUP LAMP

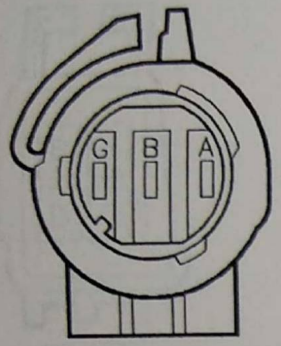

PSMELC67204AA

NATURAL
12160394

LEFT BACKUP LAMP- 12160394				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION 1
A	LT CRN	24G	.50	BACKUP LAMP HI
B				
G	BLK	150GG	.50	GROUND

Location: Exterior, Behind Turn/Stop/Back-up Lamp Housing

RIGHT BACKUP LAMP- 12160394				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	LTGRN	24F	.50	BACKUP LAMP HI
B				
G	BLK	150G	.50	GROUND

Location: Exterior, Behind Turn/Stop/Back-Up Lamp Housing

BATTERY PACK

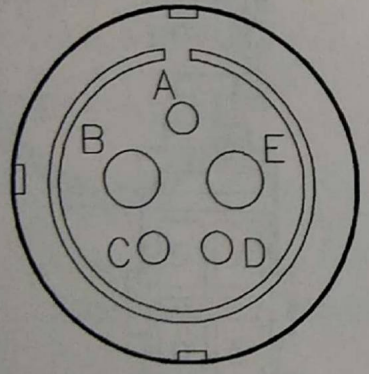

CANNON
CONNECTOR

PSMELC68240AA

BATTERY PACK CANNON CONNECTOR				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A				
B				HV-
c				HV INTERLOCK RETURN (-)
D				HV INTERLOCK (+)
E				HV (+)

Location: Underhood, Rear of Power Electronics Bay

CamScanner

HARNESS CONNECTOR FACES

BATTERY PACK FAN INLINE - FEMALE CONNECTOR

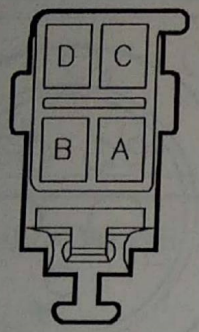

PSMELC67252AA

BLACK
12129136

BATTERY PACK FAN INLINE - 12129136				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRF: SIZE	CIRCUIT FUNCTION
A	BLK	I50L	1.0	GROUND
B	WHT	108C	.35	BATTERY PACK FAN CONTROL
C	RED	I142C	3.0	B+
D				

Location: Right Side of Think Compartment, Under Carpet

CamScanner

HARNESS CONNECTOR FACES

BATTERY PACK FAN INLINE - MALE CONNECTOR

BLACK
12129135

PSMELC67210AA

BATTERY PACK FAN INLINE - 12129135				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION 1
A	BLK	150K	3.0	GROUND
B	WHT	108E	.35	BATTERY PACK FAN CONTROL
C	RED	1142E	3.0	B+
D				

Location: Right Side of Trunk Compartment, Under Carpet

BATTERY PACK INLINE

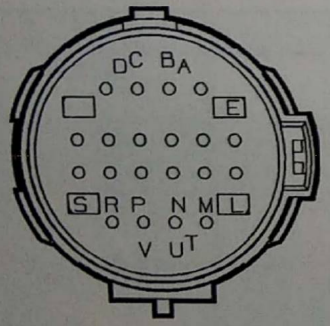

GRAY
12160544

PSMELC67244AA

BATTERY PACK INLINE - 12160544				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	ORN	840B	.35	B+
B	BRN	41S	.35	RUN 1
C	LTGRN	275B	.35	PARK SELECT IN
D	WHT	26B	.35	AUTO DISCONNECT POWER SUPPLY
E	WHT	2027F	.35	VEHICLE WAKE-UP
L	PNK	213B	.35	CHARGE PORT TEMP IN
M	PPL	18O7B	.35	CLASS 2 DATA
N	ORN	7K	.35	RUN 1 / WAKE-UP
P	TAN	800G	.35	SERIAL DATA
R	WHT	249	.35	AUXILIARY POWER SUPPLY COMMAND OUT
S	BLK	350E	.35	GROUND
T	WHT	108B	.35	BATT PACK FAN CONTROL OU'F
U	BLK	350K	.35	GROUND
V	BLK	35OS	.35	GROUND

Location: Underhood, Center Front of Dash

CamScanner

HARNESS CONNECTOR FACES

BATTERY PACK MODULE (JI)

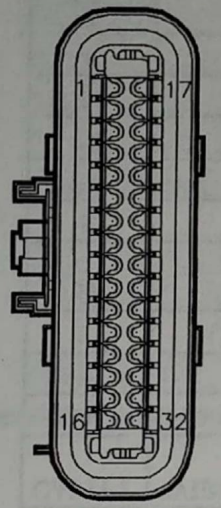

12129025

WITH RED RETAINER

Location: Underbody in Battery Pack

PSMELC68237AA

CamScanner

BATTERY PACK MODULE - JI - 12129025

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
1	LTGRN			BATT PACK HI
2	ORN			BATT. MODULE 2 VOLTAGE
3	PNK			BATT. MODULE 4 VOLTAGE
4	DK GRN			BAIT. MODULE 6 VOLTAGE
5	DK BLU			BATT. MODULE 8 VOLTAGE
6	DK BLU/WHT			BATE MODULE 10 VOLTAGE
7	YEL			BATT. MODULE 12 VOLTAGE
8	BLK			SHUNT LO
9	BLK			BATT. MODULE 14 VOLTAGE
10	GRA			BATE MODULE 16 VOLTAGE
11	TAN			BATT. MODULE 18 VOLTAGE
12	PPL/WHT			BATI'. MODULE 20 VOLTAGE
13	GRA			BATT. MODULE 22 VOLTAGE
14	YEL			BATI'. MODULE 24 VOLTAGE
15	DK BLU			BATT. MODULE 26 VOLTAGE
16				

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
17	PPL			BATT. MODULE 1 VOLTAGE
18	WHT			BATT. MODULE 3 VOLTAGE
19	BLK			BATT. MODULE 5 VOLTAGE
20	TAN			BATT. MODULE 7 VOLTAGE
21	LTGRN			BATT. MODULE 9 VOLTAGE
22	DKGRN			BATT. MODULE 11 VOLTAGE
23	WHT			SHUNT HI
24	RED			BATT. MODULE 13 VOLTAGE
25	PPL			BATT. MODULE 15 VOLTAGE
26	DK BLU/WHT			BATT. MODULE 17 VOLTAGE
27	BRN			BATT. MODULE 19 VOLTAGE
28	LT BLU			BATT. MODULE 21 VOLTAGE
29	LTGRN			BATT. MODULE 23 VOLTAGE
30	BRN			BATT. MODULE 25 VOLTAGE
31	TAN			BAIT. MODULE 26 RETURN
32	LT BLU			BATTERY PACK LO

CamScanner

HARNESS CONNECTOR FACES

BATTERY PACK MODULE

(J2)

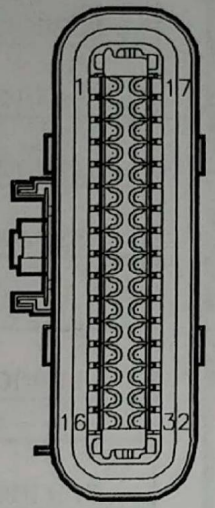

12129025
WITH CLEAR RETAINER

Location: Underbody, in Battery Pack

PSMELC68238AA

CamScanner

BATTERY PACK MODULE - .12 - 12129025 (WITH RETAINER)

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
1	WHT			GROUND
2	PNK			RUN 1
3	GRA			B+
4	DKBLU			VEHICLE WAKE-UP
5				
6				
7	BLK			PARK SELECT
8	BLK			AD STATE "A"
9	LTBLU			AD STATE "B"
10	BRN			AD STATE "C"
11	DK GRN			AD COMMAND
12	WHT			APS COMMAND
13	PNK			AD POWER SUPPLY
14	TAN			BATT PACK FAN CONTROL
15			-	-
16	YEL			GROUND

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
17	-	-	-	-
18	GRA			CHARGE RECEPT TEMP
19	-	-	-	-
20	BLK			AIRFLOW DETECT INPUT
21	—	-	-	-
22	LT BLU			MODULE 9 TEMP
23	GRA			MODULE 10 TEMP
24	DK GRN			MODULE 4 TEMP
25	LT GRN			MODULE 6 TEMP
26	PNK			MODULE 1 TEMP
27	PPL			MODULE 3 TEMP
28	TAN			INLET AIR TEMP
29	WHT			GROUND
30	ORN			CLASS 2 DATA
31	DKBLU			GROUND
32	DK GRN			SERIAL DATA

CamScanner

HARNESS CONNECTOR FACES

BATTERY RECOVERY SWITCH (BRS)

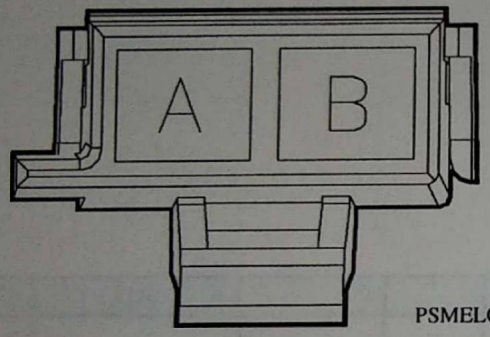

PSMELC67223AA

GRAY
12034341

BATTERY RECOVERY SWITCH - 12034341				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	LTBLU	26C	.35	AD POWER SUPPLY
B	WHT	2027E	.35	VEHICLE WAKE-UP

Location: Passenger Compartment, Under Right Side of I/P

BLOWER MOTOR MODULE

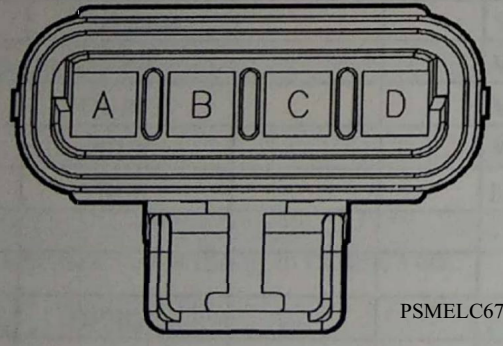

PSMELC67I76AA

DARK GREY
12129565

BLOWER MOTOR MODULE - 12129565				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK	350N	1.0	GROUND
B				
C	GRA/BLK	754	.35	BLOWER CONTROL IN
D	RED	1642	1.0	B+

Location: Passenger Compartment, In Heat Pump Ventilation Module Under Right Side of I/P

CamScanner

BRAKE PRESSURE MODULATOR

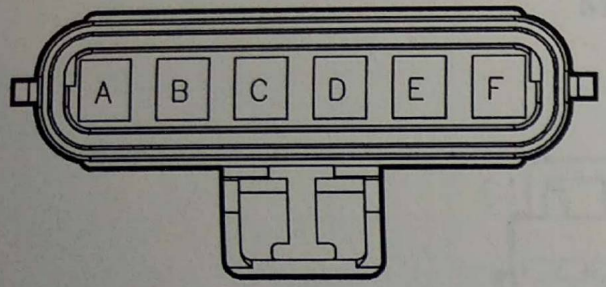

GRAY
12110295

PSMELC67567AA

BRAKE PRESSURE MODULATOR - 12110295				
CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	PPL	1282	3.0	RF MODULATOR HI
B	BLK	1283	3.0	RF MODULATOR LO
C				
D				
E	BLK	1280	3.0	LF MODULATOR HI
F	PNK	1281	3.0	LF MODULATOR LO

Location: Underhood - Bottom Of Brake Modulator

BRAKE PRESSURE SENSOR-DOWNSTREAM

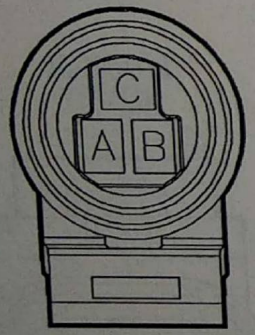

BLACK
12110192

PSMELC67231AA

BRAKE PRESSURE SENSOR - LEFT FRONT - 12110192				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK / WHT	407C	.35	GROUND
B	LT BLU / BLK	416H	.35	+5V REF
C	LTGRN	2037	.35	LF BRAKE PRESSURE SIGNAL

Location; Underhood - Lower Front Center

BRAKE PRESSURE SENSOR - RIGHT FRONT - 12110192				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK	407G	.35	GROUND
B	GRA	416G	.35	+5V REF
C	LT BLU	2036C	.35	RF BRAKE PRESSURE SIGNAL

Location: Underhood - Right Side Front Of Dash

CamScanner

HARNESS CONNECTOR FACES

BRAKE SOLENOID

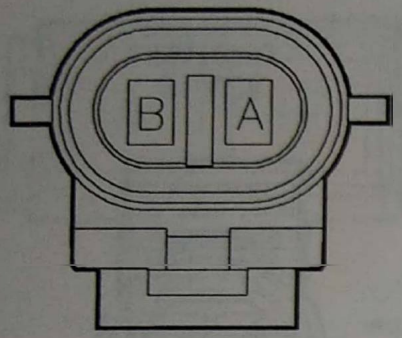

BLACK
12052641

PSMELC67232AA

BRAKE SOLENOID - LEFT FRONT - 12052641				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE:	CIRCUIT FUNCTION
1	LT BLU	1289	.50	TO RF ABS SOLENOID
2	DKGRN	1288	.50	ABS SOLENOID CONTROL

Location: Underhood — Top of Brake Modulator

BRAKE SOLENOID - RIGHT FRONT - 12052641				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
1	RED	1633E	.50	ABS SOLENOID B+
2	LT BLU	1289	.50	TO LF ABS SOLENOID

Location: Underhood - Top of Brake Modulator

CamScanner

BRAKE TORQUE CONTROLLER MODULE (BTCM)-JI

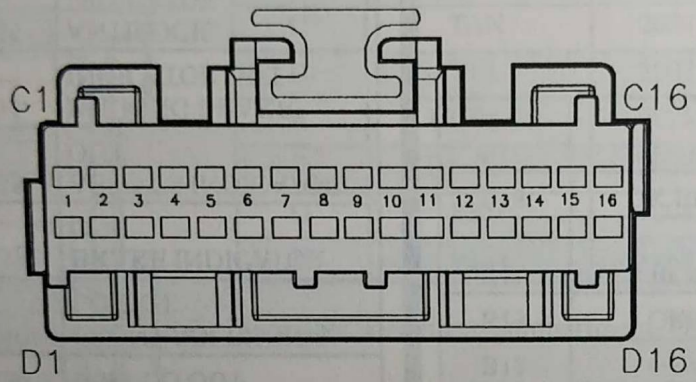

DK RED
12110113

Location: Passenger Commpartment, Under Left Side of I/P

PSMELC66035AA

CamScanner

HARNESS CONNECTOR FACES

BRAKE TORQUE CONTROLLER MODULE-JI - 12110113

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A1	BLK	407F	.35	MC2 LO
A2	TAN	800E	.35	TO LH JUNCTION BLOCK SERIAL DATA
A3	YEL	873	.80	LF WSS LO IN
A4	TAN	833	.80	RE WSS LO IN
A5	GRA	2035	.35	MC2 IN
A6	LTBLU	2036B	.35	RF BRAKE PRESSURE SENSOR IN
A7	RED	885B	.35	LR WSS LO IN
AS	BRN	882B	.35	RR WSS HI IN
A9	PNK	2031	.35	PARK BRAKE SWITCH IN
A10	LTBLU	1134	.35	PARK BRAKE SWITCH IN
All	LTGRN	1286	.50	EMB LO OUT
A12	DKGRN	1288	.50	FRONT SOLENOIDS LO OUT
A13	TAN/WHT	33	.35	BRAKE INDICATOR OUT
A14	DK BLU	1660B	.35	ABS/TCS INDICATOR OUT
A15	DK BLU/WHT	1934	.35	PARKING BRAKE INDICATOR OUT
A16	WHT	852B	.35	ANTILOCK INDICATOR

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Bl	PPL	2017	.35	RETARD REQUEST OUT
B2	DK BLU	2038	.35	RETARD ACHIEVED IN
B3	LTBLU	830	.80	LF WSS HI IN
B4	DKGRN	872	.80	RF WSS HI IN
B5	YEL	2034	.35	MC1 IN
B6	LT GRN	2037	.35	LF BRAKE PRESSURE SENSOR IN
B7	BLK	884B	.35	LR WSS HI
B8	WHT	883B	.35	RR WSS LO IN
B9	YEL	820E	.35	BRAKE SWITCH IN
B10	BLK	407A	.35	GROUND
Bll	BRN	41E	.35	B'I'CM RUN 1
BI2	GRA	416A	.35	5V REF OUT
B13	ORN	2540	.35	BTCM B+
B14	BLK	2015	.35	REAR BRAKE ENABLE RELAY OUT
B15	DK BLU	2021	.35	REGEN DISABLE OUT
B16	PNK	1632	.35	FRONT BRAKE ENABLE RELAY OUT

CamScanner

BRAKE TORQUE CONTROLLER MODULE (BTCM) – J2

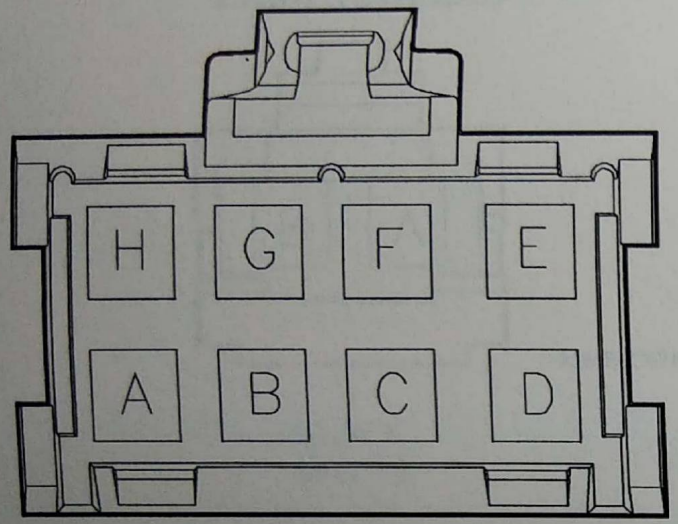

LT GRAY
12110626

PSMELC66036AA

BRAKE TORQUE CONTROLLER MODULE - J2 - 12110626				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	win'	2001	.80	LR PARK MOTOR HI OUT
B	TAN	2003	.80	LR PARK MORROR LO OUT
C	TAN	2004	.80	RR PARK MOTOR LO OUT
D	YEL	2007	.80	LR APPLY MOTOR LO OUT
E	LT BLU	2005	.80	LR APPLY MOTOR HI OUT
F	DK GRN	2006	.80	RR APPLY MOTOR LO OUT
G	BRN	2008	.80	RR APPLY MOTOR HI OUT
H	RED	1988	.80	RR PARK MOTOR HI OUT

Location: Passenger Compartment, Under Left Side of I/P

CamScanner

HARNESS CONNECTOR FACES

BRAKE TORQUE CONTROLLER MODULE (BTCM) - J3

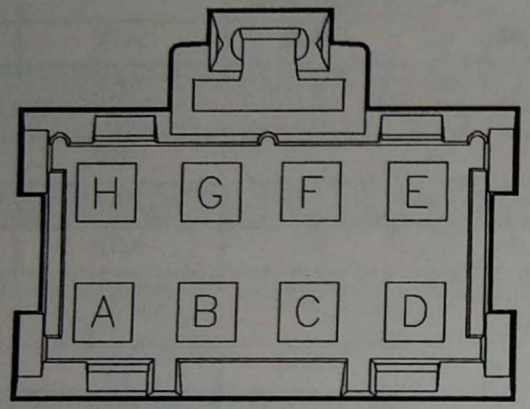

BLACK
12129088

PSMELC66037AA

BRAKE TORQUE CONTROLLER MODULE - J3 - 12129088				
CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	RED	2033	3.0	REAR BRAKE B+
B	PPL	1282	3.0	RF MOTOR HI OUT
C	BLK	1280	3.0	LF MOTOR HO OUT
D	BLK	450P	3.0	GROUND
E	BLK	450FF	3.0	GROUND
F	PNK	1281	3.0	LF MOTOR LO OUT
G	BLK	1283	3.0	RF MOTOR LO OUT
H	RED	1633B	3.0	FRONT BRAKE B+

Location: Passenger Compartment, Under Left Side of I/P

CamScanner

CENTER HIGH MOUNTED STOP LAMP (CHMSL)

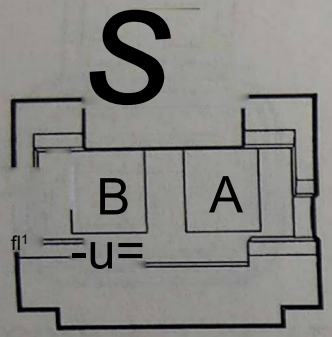

PSMELC67191AA

BLACK
8911772

CENTER HIGH MOUNTED STOP LAMP - 8911772				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK	I SOB	.50	GROUND
B	YEL	820B	.50	CHMSL HI

Location: Trunk Compartment, Under Package Shelf

CHARGER RECEPTACLE

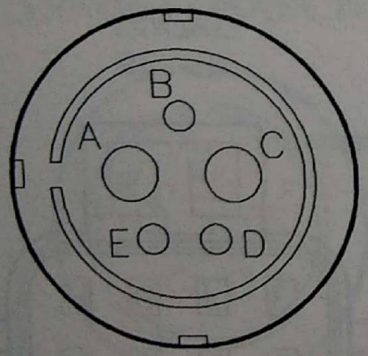

CANNON CONNECTOR PSMELC6»239AA

CHARGER RECEPTACLE CANNON CONNECTOR				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A				HV (+)
B				
C				HV(-)
D				HV INTERLOCK RETURN (-)
E				HV INTERLOCK (+)

Location: Underhood, Left Side of Power Electronics Bay

CamScanner

HARNESS CONNECTOR FACES

CHARGER RECEPTACLE

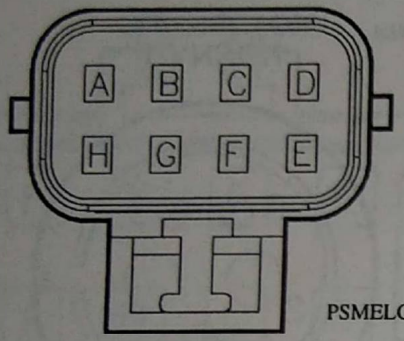

PSMELC67217AA

BLACK
12047937

CHARGER RECEPTACLE - 12047937				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	ORN	2740	.35	CHARGER COUPLER PRESENT SWITCH B+
13	DKGRN	2023	.35	CHARGER COUPLER PRESENT SWITCH OUT
C	PPL	18O7E	.35	CLASS 2 DATA
D	PNK	213C	.35	CHARGER RECEP-TACLE TEMP SEN-SOR HI
E	BLK	450EE	.35	GROUND
F				
G	WHT	2027G	.35	VEHICLE WAKE-UP
H	BLK	450H	.35	GROUND

Location: Front of Vehicle, Near Charge Receptical

CHARGER RECEPTACLE COOLANT VALVE

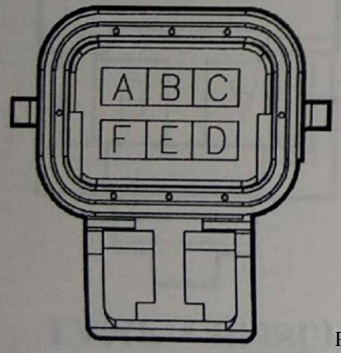

PSMELC67215AA

BLACK
12052848

CHARGER RECEPTACLE COOLANT VALVE - 12052848				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	ORN	7G	.35	RUN 1/WAKE-UP
B	TAN	134	.35	VALVE COMMAND IN
C	BLK/WHT	1704	.35	GROUND
D	GRA	605 H	.35	+5V REF IN
E	BLK	212	.35	VALVE POSI TION OUT
F				

Location: Left Front, Attached to Midrail

CamScanner

CHECK TIRE PRESSURE RESET SWITCH

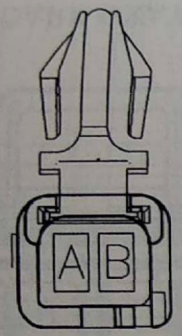

PSMELC67I87AA

BLACK
12048457

CHECK TIKE PRESSURE RESET SWITCH - 12O4K457 \				
CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION \
A	LT GRN	1O55B	.35	SWITCH HI
B	BLK	150T	.35	GROUND

Location: Trunk Compartment, Under Deck Lid

COMPRESSOR MOTOR CANNON CONNECTOR

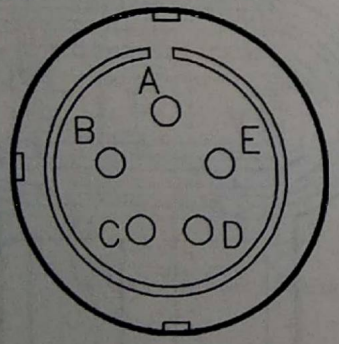

PSMELC68245AB

COMPRESSOR MOTOR CANNON CONNECTOR				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A				PHASE A
B	■			PHASE B
C				PHASE C
D				CM INTLK
E				CMRTN

Location: Underhood, Attached to Lower Left of Power Electronics Bay

CamScanner

HARNESS CONNECTOR FACES

COOLANT LEVEL SENSOR

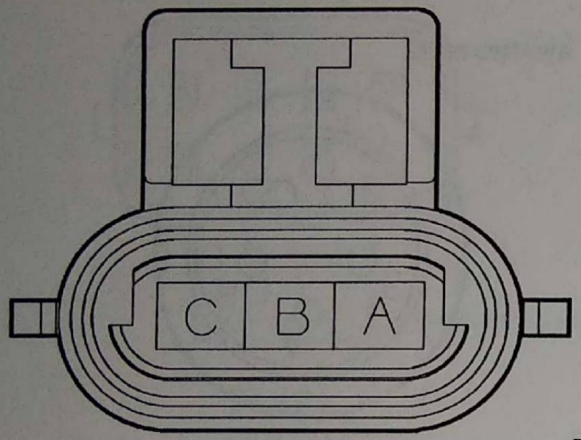

PSMELC66039AA

BLACK
12110293

COOLANT LEVEL SENSOR - 12110293				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK/WHT	450J	.35	GROUND
B	ORN	7F	.35	RUN 1/WAKE-UP
c	LT CRN	1478B	.35	COOLANT LEVEL OUT

Location: Underhood, Below Coolant Expansion Tank

COOLANT PUMP BUFFER

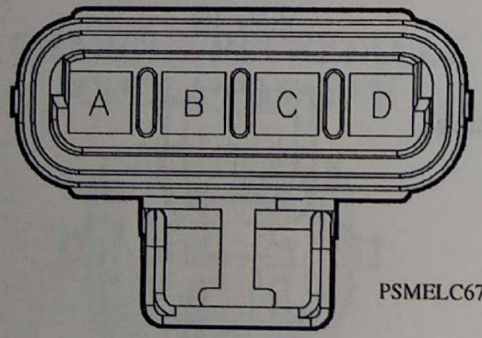

PSMELC67176AA

DARK GRAY
12129565

COOLANT PUMP BUFFER - 12129565				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	RED	442B	1.0	B+
B	PNK	2014C	.35	COOLANT PUMP COMMAND IN
C	ORN	7J	.35	RUN 1
D	BLK/WHT	450E	1.0	GROUND

Location: Left Front, Attached to Midrail

CamScanner

COOLANT PUMP TEMPERATURE SENSOR

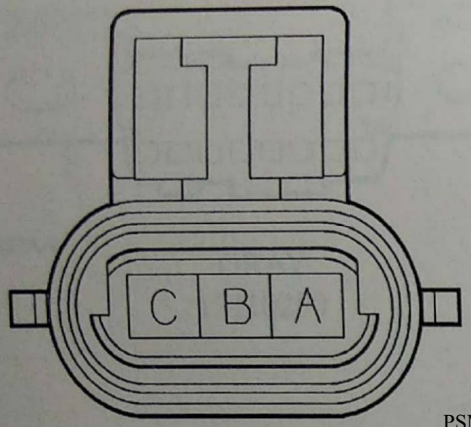

PSMELC66039AA

DARK GRAY
12129565

COOLANT PUMP TEMPERATURE SENSOR - 12J29565				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION I
A	BLK/WHT	552H	35	GROUND
B	YEL	410	.35	SENSOR Hl

Location: Underhood, At Base of Coolant Pump

COOLANT RECOVERY CHECK VALVE

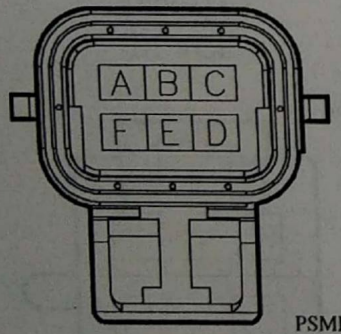

PSMELC67215AA

BLACK
12052848

COOLANT RECOVERY CHECK VALVE - 12052848				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	ORN	7B	35	RUN 1 / WAKE-UP
B	GRA/BLK	1596	35	VALVE COMMAND IN
C	BLK	452E	.35	GROUND
D	LT BLU/BLK	**605E**	**.35**	+5V REF IN
E	PPL	2028	35	VALVE POSITION OUT
F				

Location: Right Front Attached to Midrail

CamScanner

HARNESS CONNECTOR FACES

CRUISE CONTROL SWITCH

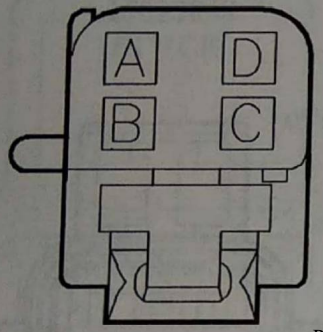

PSMELC67264AA

BLACK
12064760

CRUISE CONTROL SWITCH - 12064760				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BRN	41P	.35	RUN 1
B	DKBLU	84	.35	SET/COAST OUT
C	GRA/BLK	87	.35	RESUME/ACCEL OUT
D	GRA	397	.35	ON/OFF OUT

Location: Passenger Compartment, Attached to Steering Column

CamScanner

DATA LINK CONNECTOR (DEC)

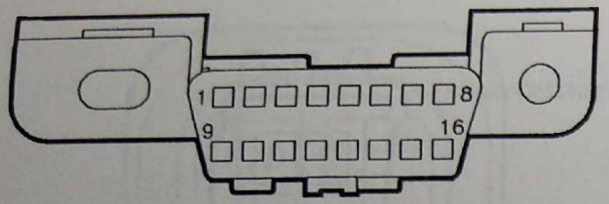

PSMELC67259AA

GRAY
12110250

DATA LINK CONNECTOR - 12110250				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION 1
1				
2	PPL	I807C	.35	CLASS 2 DATA
3				
4	BLK	450N	.35	GROUND
5	BLK	450T	.35	GROUND
6				
7				
8				
9	TAN	800L	.35	SERIAL DATA
10				
11				
12				
13				
14				
15				
16	ORN	1640	.35	B+

Location: Passenger Compartment, Under Lower Left of I/P

CamScanner

HARNESS CONNECTOR FACES

DEFOGGER AND BATTERY PACK FAN INLINE - FEMALE CONNECTOR

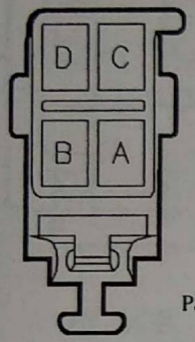

PSMELC67252AA

BLACK
12129136

DEFOGGER AND BATTERY PACK FAN INLINE - 12129136				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	RED	1242A	1.0	PRIMARY DEFOG B+
B	RED	1342A	**1.0**	SECONDARY DEFOG B+
c	RED	1142B	1.0	BATTERY PACK FAN MOTOR B+
D				

Location: Passenger Compartment, Right Side of I/P Above Junction Block

DEFOGGER AND BATTERY PACK FAN INLINE - MALE CONNECTOR

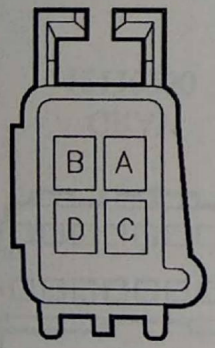

PSMELC672I0AA

BLACK
12129135

DEFOGGER AND BATTERY PACK FAN INLINE - 12129135				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	RED	1242B	2.0	PRIMARY DEFOG B+
B	RED	1342B	3.0	SECONDARY DEFOG B+
C	RED	1142C	3.0	BATTERY PACK FAN MOTOR B+
D				

Location: Passenger Compartment, Right Side of I/P Above Junction Block

CamScanner

DISCHARGE TEMPERATURE SENSOR

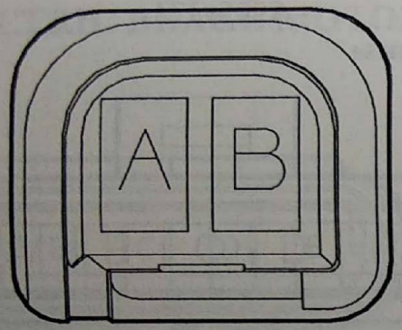

PSMELC67240AA

RED
12059252

DISCHARGE TEMPERATURE SENSOR - 12059252				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION 1
A	GRA	552E	.35	GROUND
B	DKGRN	734	.35	DISCHARGE TEMP SENSOR OUR

Location: Passenger Compartment, Inside HVAC Module

DRIVER DOOR JAMB SWITCH

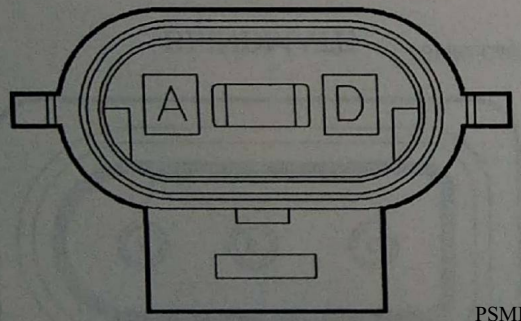

PSMELC67I99AA

BLACK
12110196

DRIVER DOOR JAMB SWITCH - 12110196				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	GRA/BLK	1495B	.35	SWITCH HI
D	BLK	450L	.35	GROUND

Location: Driver Door, Part of Latch Assembly

CamScanner

HARNESS CONNECTOR FACES

DRIVE MOTOR

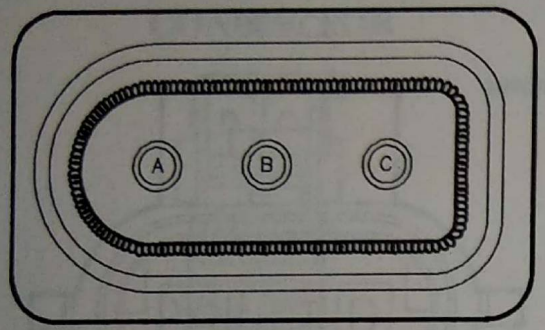

BLINDMATE PSMELC68242AA

DRIVE MOTOR BLINDMATE				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A				DRIVE MOTOR PHASE A
B				DRIVE MOTOR PHASE B
c				DRIVE MOTOR PHASE C

Location: Underhood Between Power Electronics Bay and Drive Motor

DRIVE MOTOR SPEED / DIRECTION SENSOR

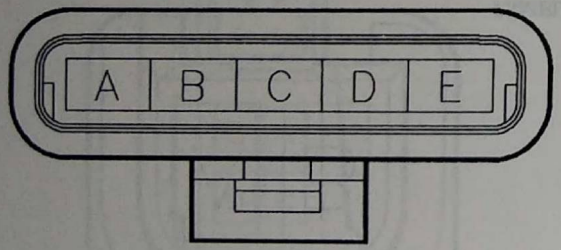

PSMELC67768AA

12145555

DRIVE MOTOR SPEED / DIRECTION SENSOR - 12145555				
CAVITY	WIRE COLOR	CIRCUIT NO.	WIRE-SIZE	CIRCUIT FUNCTION
A	BLK	552CA	.50	GROUND
B	YEL/BLK	1558CA	.50	CHANNEL B
c	BARE	514CM	.50	SPEED / DIRECTION SENSOR SHIELD
D	DK BLU	I557CA	.50	CHANNEL A
E	RED	1673CA	.50	SPEED / DIRECTION SENSOR POWER

Location: Underhood Right Side of Drive Motor

CamScanner

ELECTRIC BRAKE MOTOR

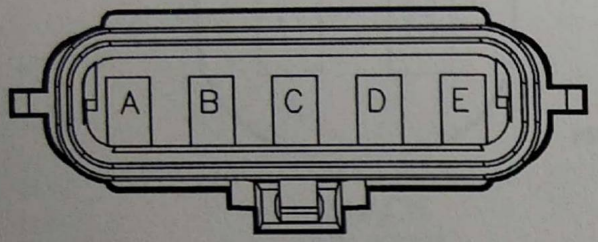

GRAY
12176429

PSMELC67568AA

ELECTRIC BRAKE MOTOR - LEFT REAR - 12176429				
CAVITY	**WIRECOLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	LTBLU	**2005**	**.80**	LR APPLY MOTOR HI
B	**WHT**	**2001**	**.80**	LR PARK MOTOR HI
C	VENT TUBE			
D	TAN	**2003**	**.80**	LR PARK MOTOR LO
E	YEL	**2007**	**.80**	LR APPLY MOTOR LO

Location: Under Left Rear Of Vehicle - On Brake Backing Plate

ELECTRIC BRAKE MOTOR - RIGHT REAR - 12176429				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	BRN	2008	.80	RR APPLY MOTOR HI
B	RED	1988	**.80**	RR PARK MOTOR HI
C	VENT TUBE			
D	ORN	2004	.80	RR PARK MOTOR LO
E	DK GRN	2006	.80	RR APPLY MOTOR LO

Location: Under Right Rear of Vehicle - At Brake Backing Plate

CamScanner

HARNESS CONNECTOR FACES

EXTERNAL KEYPAD

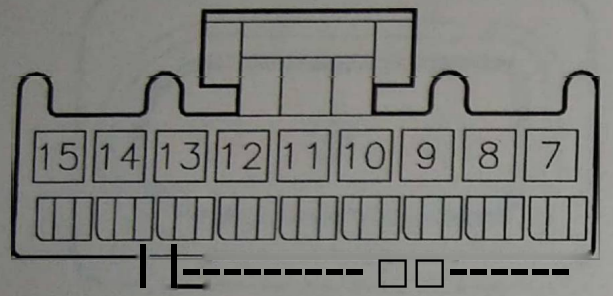

PSMELC67212AA

BLACK
12064980

EXTERNAL KEYPAD - 12064980				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
7	LTBLU/BLK	1166B	.35	KEYPAD 1/2 OUT
8	GRA/BLK	1167B	**.35**	KEYPAD 3/4 OUT
9	LT CRN / BLK	1168B	.35	KEYPAD 5/6 OUT
10	ORN/BLK	1169B	.35	KEYPAD 7/8 OUT
11	PNK/BLK	1I70B	.35	KEYPAD 9/0 OUT
12	YEL/BLK	373B	.35	KEYPAD +5V REF
13	RED/BLK	1165B	.35	KEYPAD BACKLIGHT
14				
15	BLK	I50F	.35	GROUND

Location: Left Side of Vehicle Behind External Keypad in “B” Pillar

CamScanner

FOUR BAR LAMP

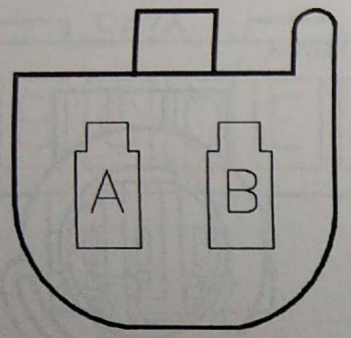

PSMELC67190AA

BLACK
12047662

FOUR BAR LAMP - 12047662				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION \
A	LT BLU	156B	.35	LAMP LO
B	ORN	1732G	.35	LAMP Hl

Location: Trunk Compartment, Center of Four Bar

FRONT ELECTROMECHANICAL BRAKE (EMB)

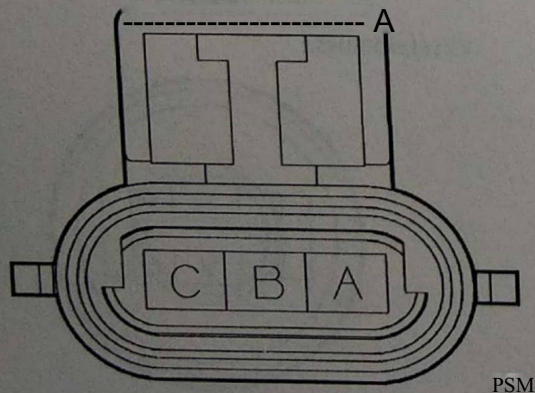

PSMELC66039AA

BLACK
12110293

FRONT ELECTROMECHANICAL BRAKE (EMB) - 12110293				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	LTGRN	1286	.50	FRONT EMB CONTROL
B				
C	RED	1633C	.50	EMB B+

Location: Underhood — Bottom of Brake Modulator

CamScanner

HARNESS CONNECTOR FACES

FRONT MARKER LAMP

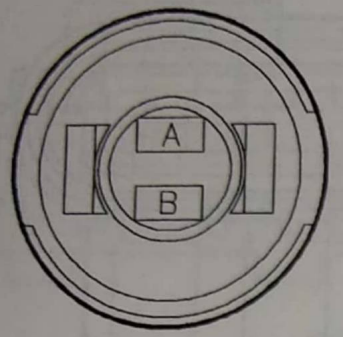

PSMELC67I73AA

GRAY
12110053

LEFT FRONT MARKER LAMP - 12110053				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	PPL	709C	.35	MARKER LAMP HI
B	BLK / WHT	4500	.35	GROUND

Location: Exterior, Lower Front Fascia

RIGHT FRONT MARKER LAMP - 12110053				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BRN/WHT	309C	.35	MARKER LAMP HI
B	BLK / WHT	350G	.35	GROUND

Location: Exterior, Lower Front Fascia

FRONT PARK/TURN LAMP

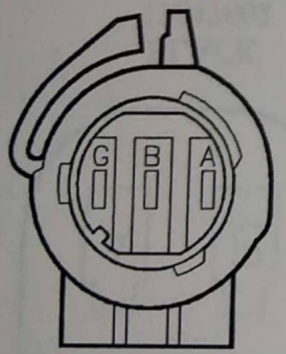

PSMELC67175AA

GRAY
12160395

LEFT FRONT PARK/TURN LAMP - 12160395				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	LTBLU	14	.50	TURN LAMP HI
B	PPL	709B	.50	PARK LAMP HI
G	BLK	450C	.50	GROUND

Location: Passenger Compartment, Attached to Steering Column

RIGHT FRONT PARK/TURN LAMP - 12160395				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	DKBLU	15	.50	TURN LAMP Hl
B	BRN / WHT	309B	.50	PARK LAMP HI
G	BLK / WHT	350C	.50	GROUND

Location: Passenger Compartment, Attached to Steering Column

CamScanner

HEADLAMP SWITCH

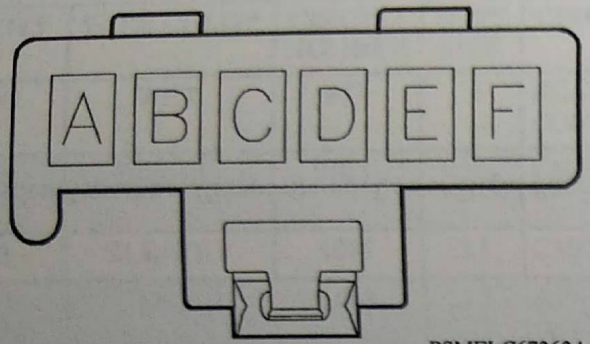

PSMELC67262AA

BLACK
12084699

HEADLAMP SWITCH 120X4699				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE I CIRCUIT SIZE	FUNCTION \
A	CRN	640C	.35	FLASH TO PASS SWITCH B+ IN
B	PPL	524B	.35	FLASH TO PASS SWITCH OUT
C	YEL	525 B	.35	LOW BEAM OUT
D	RED	342B	1.0	PARK/HEADLAMP SWITCH B+ IN
E	ORN	640B	.35	HEADLAMP SWITCH B+ IN
F	LTBLU	74	.35	PARK/HEADLAMP SWITCH OUT

Location: Passenger Compartment Attached to Steering Column

CamScanner

HEAT PUMP VENTILATION SYSTEM/THERMAL CONTROL MODULE (HTCM)

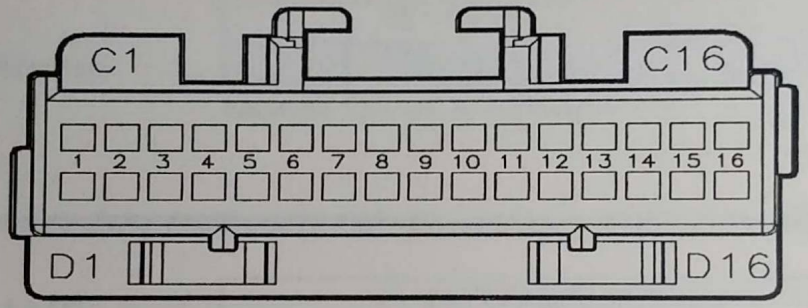

BLACK
12045575

Location: Passenger Compartment, Lower Right Side of I/P

PSMELC67247AA

CamScanner

HEAT PUMP VENTILATION SYSTEM/THERMAL CONTROL MODULE 12045575

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
C1	WHT	637	.35	HEATED W/S COMMAND
C2	DK BLU	1081	.35	CMC/47V STATUS BITO
C3	BLK/WHT	1085	.35	CMC SPEED OUT
C4	ORN	1063	.35	APM 12V STATUS BIT 1
C5	YEL	1082	.35	CMC/47V STATUS BIT 1
C6				
C7	PPL	1083	.35	CMC/47V STATUS BIT 2
C8	GRA/BLK	754	.35	BLOWER MOTOR COMMAND OUT
C9	PNK/BLK	1217	.35	CMC DC CURRENT IN
CIO	PPL	1645	.35	BRAKE LOAD SHED IN
Cll	RED	2014B	.35	COOLANT PUMP COMMAND OUT
C12				
C13	DK GRN	335	.35	COOLING FAN COMMAND OUT
C14	ORN	840R	.35	REVERSING VALVE B+
C15	BLK	452C	.35	OUTSIDE AIR VALVE GROUND
C16	WHT	2016	.35	REVERSING VALVE HI OUT

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
D1				
D2	RED	1262	.35	APM 12V STATUS BITO
D3	DK GRN	1614	.35	OUTSIDE AIR VALVE COMMAND OUT
D4	DKGRN	1264	.35	APM 12V STATUS BIT 2
D5	WHT	193C	.35	REAR DEFOGGER COMMAND OUT
D6	TAN	800H	.35	SERIAL DATA
D7				
D8				
D9	GRA/BLK	1596	.35	COOLANT RECOVERY CHECK VALVE COMMAND OUT
DIO	BRNAVHT	1218	.35	MODE *DOOR* COMMAND OUT
D11				
D12				
D13				
DI4	BLK	452B	.35	MODE DOOR GROUND
D15	WHT	2027B	.35	WAKE-UP IN
D16	BLK / WHT	350H	.35	HTCM GROUND

HEAT PUMP VENTILATION SYSTEM/THERMAL CONTROL MODULE (HTCM)

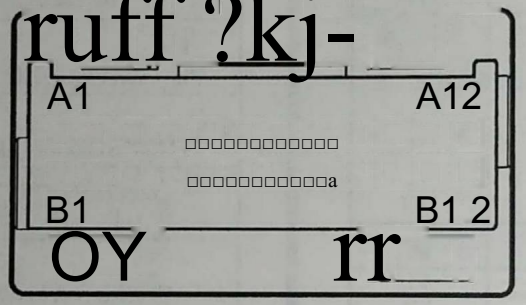

PSMELC67250AA

BLACK
12047946

Location: Passenger Compartment, Lower Right Side of I/P

CamScanner

HEAT PUMP VENTILATION SYSTEM THERMAL CONTROL MODULE - 12047946

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Al				
A2				
A3	PPL	1838	.35	OUTSIDE AIR VALVE IN
A4	PPL	2028	.35	3-WAY COOLANT VALVE IN
A5	BLK	212	.35	CHARGER RECEP-TACLE COOLANT VALVE IN
A6	RED/BLK	380	.35	LOW SIDE REFRIG PRESSURE IN
A7	LT GRN/BLK	735	.35	OUTSIDE AIR TEMP IN
AS	LTGRN	2032	.35	DRIVE MOTOR COOLANT TEMP IN
A9	DKGRN	734	.35	DISCHARGE TEMP SENSOR IN
A10	YEL	1644	.35	HIGH SIDE REFRIG PRESSURE IN
All	RED	708	.35	MODE VALVE IN
A12	YEL	410	.35	COOLANT PUMP TEMP IN

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION!
Bl	GRA	605A	.35	+5V REF SIGNAL
B2	ORN	840L	.35	HTCM B+
B3				
B4				
B5				
B6	BRN	41N	.35	HTCM RUN 1
B7				
B8	LTGRN	I478C	.35	COOLANT LEVEL IN
B9	BLK/WHT	1704	.35	CHARGER RECEP-TACLE COOLANT VALVE GROUND
BIO	TAN	134	.35	CHARGER RECEP-TACLE COOLANT VALVE COMMAND
Bll	BLK	452E	.35	COOLANT RECOV-ERY CHECK VALVE GROUND
B12	DK BLU	732	.35	REFRIG TEMP IN

Oa sCo Scanner

HARNESS CONNECTOR FACES

HIGH BEAM HEADLAMP

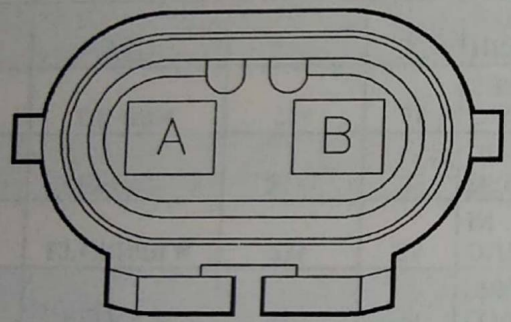

BLACK PSMELC67239A A

12059183

LEFT HIGH BEAM HEADLAMP - 12059183				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	RED	142 A	1.0	HIGH BEAM HEADLAMP B+
B	WHT	1192C	.50	HIGH BEAM HEADLAMP LO

Location: Underhood, Below Closeout Panel

RIGHT HIGH BEAM HEADLAMP - 12059183				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	RED	1542	1.0	HIGH BEAM HEADLAMP B+
B	LT CRN	I993B	.50	HIGH BEAM HEADLAMP LO

Location: Underhood, Below Closeout Panel

CamScanner

HIGH NOTE HORN

PSMELC67234AA

BLACK
12059595

HIGH NOTE HORN - 12059595				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	ORN	40	.35	**B+**
B	PPL	2025B	.35	HORN COMMAND IN
C	BLK	35OA	.35	GROUND

Location: Right Side, Above Wheel House Panel Liner

HIGH PRESSURE SENSOR

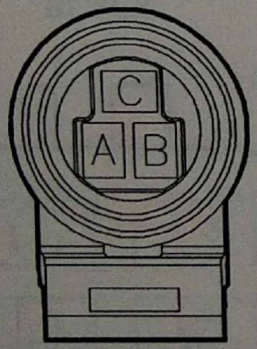

PSMELC6723IAA

BLACK
12110192

HIGH PRESSURE SENSOR - 12110192				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK	552B	.35	GROUND
B	LTBLU/BLK	605F	.35	+5V REF
C	RED/BLK	380	.35	HIGH SIDE PRESSURE OUT

Location: Underhood, Left Side Attached to Refrigerant Line

CamScanner

INSIDE REARVIEW MIRROR

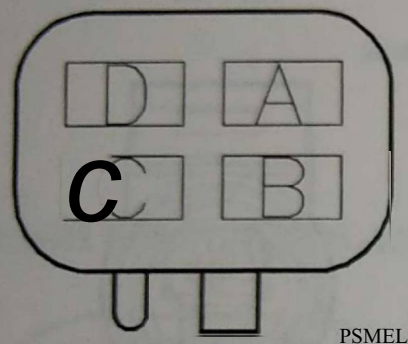

PSMELC67229AA

BLACK
12047785

INSIDE REARVIEW MIRROR - 120477X5				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	WHT	156C	.35	LAMPS LO
B	BLK	35OM	.35	LAMPS GROUND
C	ORN	1732F	.35	LAMPS HI
D				

Location: Passenger Compartment, Behind Rearview Mirror

CamScanner

INSTRUMENT PANEL CLUSTER (IPC)

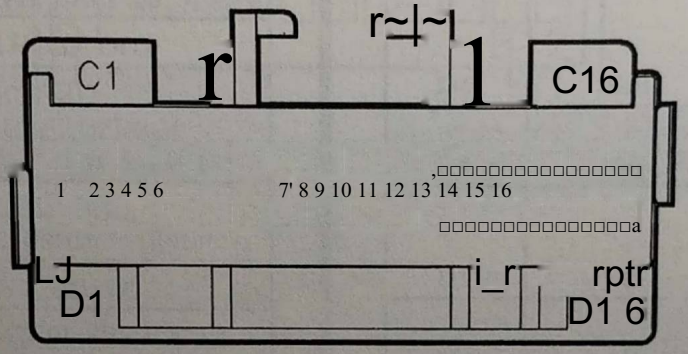

PSMELC67I84AA

LIGHT BLUE

12110207

Location: Passenger Compartment, Center of I/P

CamScanner

HARNESS CONNECTOR FACES

INSTRUMENT PANEL CLUSTER - 12110207

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Cl	BRN	41B	.35	RUN 1
C2				
C3	PNK	2026C	.35	LOW HORN OUT
C4	BRN/WHT	301C	.35	PARKLAMPS ON IN
C5	LTGRN	80C	.35	VEHICLE IN RUN/ACC IN
C6	YEL/BLK	1334C	.35	LR TURN IN
C7	LTBLU	1059	.35	PWR STRG HAND WHEEL SENSOR IN
C8	DKGRN/WHT	1335C	.35	RR TURN IN
C9	WHT	1765	.35	STEERING PUMP SPEED OUT
CIO	ORN/BLK	556	.35	PWR STRG HAND WHEEL SENSOR GROUND
CI 1	PPL	2025C	.35	HI HORN OUT
C12	BRN / WHT	230E	.35	DIM LEVEL IN
Cl 3				
C14	BLK/WHT	450S	.35	GROUND
C15	GRA	1056	.35	PWR STRG HAND WHEEL SENSOR +5V REF
C16	DKBLU	I495F	.35	DOOR AJAR IN

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
DI	DKGRN	389	.35	VSS IN
D2	BRN	358B	.35	AIR BAG IND IN
D3	PNK	2030B	.35	TEMP INDICATOR OUT
D4	GRA	2029	.35	WAIT INDICATOR OUT
D5	BRN/WHT	419B	.35	SERVICE NOW INDICATOR OUT
D6	YEL	234C	.35	SEAT BELT INDICATOR OUT
D7	RED	2018B	.35	REDUCED PERFORMANCE INDICATOR OUT
D8	WHT	2019	.35	BATTERY DAMAGE INDICATOR OUT
D9	RED	1084	.35	CHECK TIRE PRESSURE INDICATOR OUT
DIO	BLK/WHT	238B	.35	SEAT BELT INDICATOR IN
Dll				
D12				
D13	TAN	800C	.35	SERIAL DATA
D14	WHT	1192	.35	HIGH BEAMS ON IN
D15				
D16	ORN	640E	.35	B+

CamScanner

LEFT HAND JUNCTION BLOCK (LHJB) (J1)

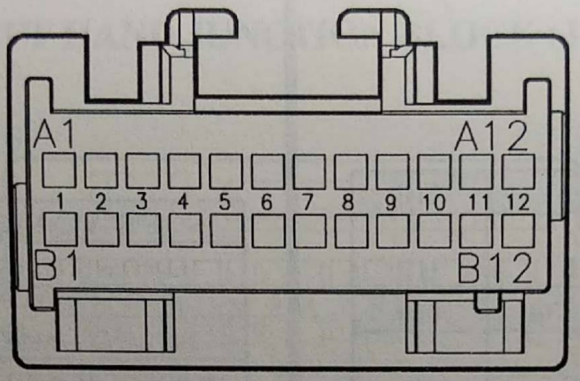

PSMELC67180AA

PINK
12110244

Location: Passenger Compartment Left, Under Left Side of I/P

CamScanner

HARNESS CONNECTOR FACES

LEFT HAND JUNCTION BLOCK - JI - 12110244

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Al	DKBLU	1495F	.35	IPC DOOR AJAR
A2	WHT	2027G	.35	CHARGE RECEPTACLE WAKE-UP
A3	ORN	7J	.35	CLNT PUMP BUFFER RUN 1 WAKE-UP
A4	ORN	7F	.35	CLNT LEVEL SENSOR RUN l/WAKE-UP
A5	ORN	640H	.35	TURN SIGNAL SWITCH
A6	ORN	640B	.35	HEADLAMP SWITCH B+
A7	ORN	640C	.35	RR LICENSE LAMP HI
A8				
A9	PPL	524B	.35	HDLPSWHIBEAM IN
A10	YEL	525B	.35	HDLP SW LO BEAM IN
All	DK GRN/WHT	1335C	.35	IPC RR TURN OUT
A12	BRNAVHT	301C	.35	IPC PARKLAMPS ON

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Bl				
B2				
B3	BLK	407E	.35	RF BRAKE PRESSURE SENSOR GROUND
B4	BLK	407C	.35	LF BRAKE PRESSURE SENSOR GROUND
B5	BLK	407B	.35	MC1PRESSURE SENSOR GROUND
B6	GRA	416F	.35	MC2 PRESSURE SENSOR +5V
B7	GRA	416E	.35	REPRESSURE SENSOR +5V
B8	GRA	416B	.35	MC1 PRESSURE SENSOR +5V
B9	GRA	416H	.35	LF PRESSURE SENSOR +5V
BIO	BLK/WHT	238B	.35	IPC LH SEAT BELT
Bll	TAN	I885B	.35	SERVICE SOON IT PASS THRU
BI2	LT GRN	2O3OB	.35	IPC TEMP TT

op 500 aanner

LEFT HAND JUNCTION BLOCK (J2)

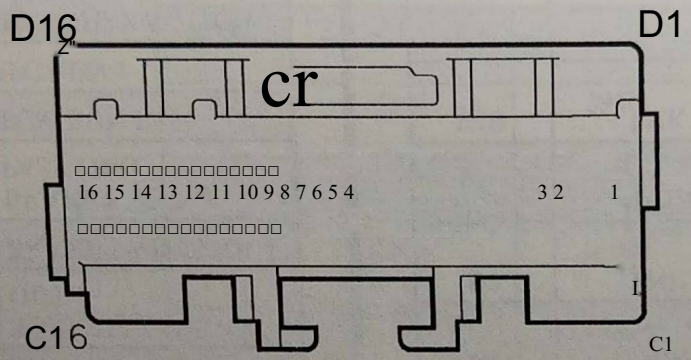

PSMELC67251A A

PINK

12110245

Location: Passenger Compartment, Under Left Side of I/P

CamScanner

HARNESS CONNECTOR FACES

LEFT HAND JUNCTION BLOCK - J2 - 12110245

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Cl	YEL/BLK	1334C	.35	IPC LR TURN OUT
C2	LT BLU	14	.50	LI-TURN LAMP HI
C3	PNK	228C	1.0	WASHER PUMP Hl
C4	WHT	17	1.0	BRAKE SWITCH IN
C5	BRN/WHT	230E	.35	IPC DIM LEVEL
C6	ORN	2740	.35	CHARGER RECEPTACLE B+
C7	LT BLU	74	1.0	HEADLAMP SWITCH OUT
C8	LTBLU/WHT	1414	.35	TURN/HAZ SWITCH OUT
C9	DK BLU/WHT	1415	.35	TURN/HAZ SWITCH OUT
CIO	BRN	86B	.80	BRAKE SWITCH OUT
Cll	BRN	86C	.35	BRAKE SWITCH PASS THRU
C12	BRN	41C	.35	PCM RUN 1
C13	BRN	41B	.35	IPC RUN 1
C14	BRN	41G	.35	TURN/HAZ SWITCH RUN 1
C15	BRN	41P	.35	CRUISE SWITCH RUN 1
C16	BRN	41R	.80	BRAKE SWITCH RUN 1

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
DI	BRN/WHT	4I9B	.35	IPC SERVICE NOW INDICATOR
D2	RED	1084	.35	IPC CHECK TIRE PRESSURE INDICATOR
D3	WHT/BLK	2029	.35	IPC WAIT INDICATOR
D4	WHT	2019	.35	IPC BATT DAMAGE INDICATOR
D5				
D6	YEL	234C	.35	IPC SEAT BELT INDICATOR
D7	LTGRN	1478B	.35	COOLANT LEVEL SENSOR
D8	PNK	2014C	.35	COOLANT PUMP BUFFER
D9	PPL	2025C	.35	HIGH NOTE HORN COMMAND IN
D10	PNK	2026C	.35	LOW NOTE HORN COMMAND IN
Dll				
D12	PPL	1807E	.35	CHARGER RECEPTACLE CLASS 2 DATA
D13	PNK	213C	.35	CHARGER RECEPTACLE TEMP
DI4	RED	2018B	.35	IPC REDUCED PERF INDICATOR
D15	TAN/WHT	816B	.35	PCM BTSI PASS THRU
D16	BLK	28	.35	HORN *COMMAND*

CamScanner

LEFT HAND JUNCTION BLOCK (LHJB)

(J3)

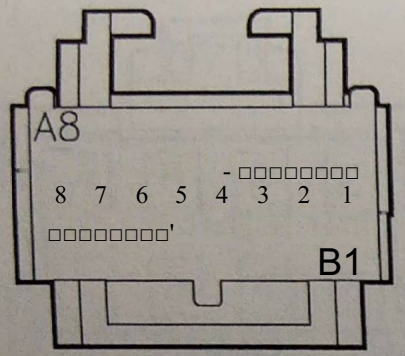

PSMELC67201AA

BLACK
12084944

LEFT HAND JUNCTION BLOCK - 13 - 120X4944

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE 1 SIZE	CIRCUIT FUNCTION \
Al	GRA	295E	.35	LH DOOR LOCK MOTOR
A2	RED/BLK	780B	.35	LH DOOR LOCK SWITCH - LOCK
A3	DKBLU	164	.50	LH POWER WINDOW MOTOR
A4	ORN	I040E	.35	LH DOOR LOCK SWITCH-HI
A5	TAN	294E	.35	LH DOOR LOCK MOTOR
A6	BRN	165	.50	LH POWER WINDOW MOTOR
A7	ORN	1040F	.35	POWER WINDOW SWITCH HI
A8	RED/WHT	88IC	.35	RH VERT MIRROR MOTOR
Bl	ORN/BLK	781B	.35	LH DOOR LOCK SWITCH - UNLOCK
B2	BLK	450B	.35	POWER MIRROR SWITCH GROUND
B3	PPL/WHT	889C	.35	RH HORIZ MIRROR MOTOR
B4	GRA	118C	.35	LF SPEAKER-
B5	BLK	450L	.35	LH DOOR JAMB SWITCH GROUND
B6	TAN	201C	.35	LFSPEAKER+
B7	BRN/WHT	1498C	.35	POWER MIRROR SWITCH HI
B8	GRA/BLK	1495B	.35	LH DOOR JAMB SWITCH Hl

Location: Passenger Compartment Under Left Side of I/P

CamScanner

HARNESS CONNECTOR FACES

LEFT HAND JUNCTION BLOCK (LHJB)

(J4)

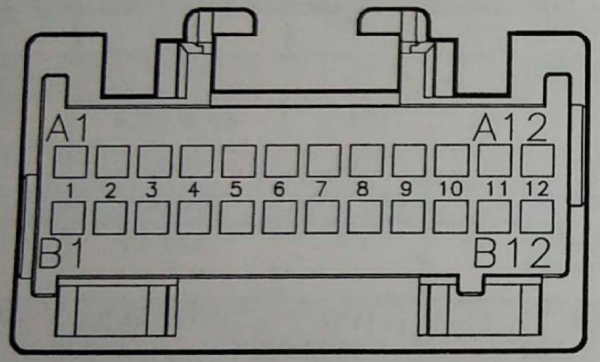

PSMELC67I83AA

GRAY
12110088

LEFT HAND JUNCTION BLOCK- J4- 12110088				
CAVITY	**WIRECOLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**(CIRCUIT FUNCTION**
A1	PPL	709C	.35	LF MARKER LAMP 41
A2	PPL	709B	.50	LF PARK LAMP HI
A3	ORN	1940	.35	OIL PUMPB+
A4	ORN	540	.35	PCM B+
A5	WHT	1192E	.35	1PC HIGH BEAM IN
A6	WHT	1192C	.50	LH HIGH BEAM - LO
A7	ORN	640E	.35	IPC B+
A8	RED	1633E	.50	RF SOLENOID B+
A9	RED	1633C	.50	FRONT ELECTRO-MAGNETIC BRAKES B+
A10	PNK	1190C	.50	LH LOW BEAM - LO
All	BRN	241E	.35	PSCM RUN 2
A12	LTBLU	820E	.35	BTCM BRAKE SWITCH OUT
Bl	LT GRN	80C	.35	IPC TO RSA PASS THRU
B2	DK BLU	179	.35	OIL PUMP MODULE IN
B3	TAN	800F	.35	PCM SERIAL DATA
B4	TAN	800C	.35	IPC SERIAL DATA
B5				
B6	BRN	358B	.35	IPC AIR BAG TT
B7				
B8				
B9				
BIO				ZJ
Bll				
B12				

Location: Passenger Compartment, Under Left *Side* of *I/P*

CamScanner

LEFT HAND JUNCTION BLOCK (LHJB) (J5)

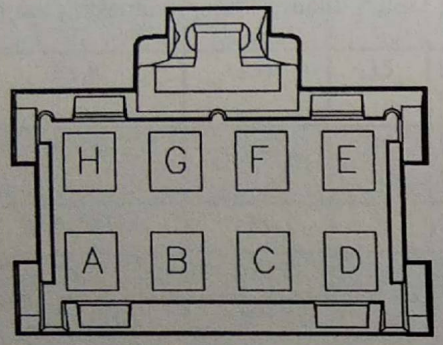

PSMELC67248AA

GRAY
12110626

LEFT HAND JUNCTION BLOCK- J5- 12110626				
CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE I SIZE	CIRCUIT FUNCTION \
A	RED	542	5.0	FRONT BRAKE FUSE 1 B+
B	RED	642	5.0	REAR BRAKE FUSE B+
C	RED	742	1.0	TURN/MODULES FUSE B+
D	RED	442A	1.0	LH PWR WINDOW/MISC FUSE B+
E	RED	1633B	3.0	BTCM B+
F	RED	2033	3.0	BTCM B+
G	BLK	450F	3.0	BTCM GROUND
H	BLK	450FF	3.0	BTCM GROUND

Location: Passenger Compartment, Under Left Side of I/P

CamScanner

LEFT HAND JUNCTION BLOCK (J6)

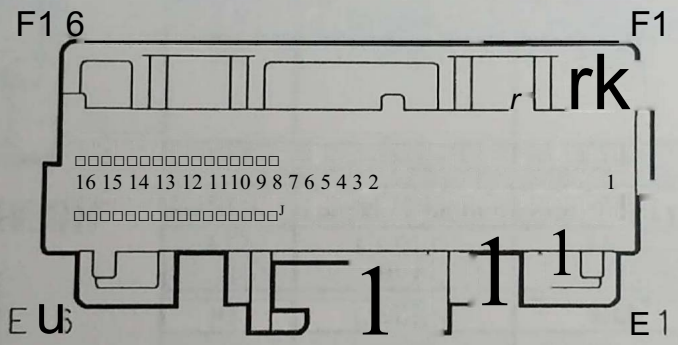

PSMELC67249AA

TAN
12110112

Location*. Passenger Compartment, Under Left Side of I/P

CamScanner

LEFT HAND JUNCTION BLOCK - J6 - 12110112

I CAVITY	WIRE COLOR	CIRCUIT 1 NUMBER	WIRE 1 SIZE	CIRCUIT FUNCTION
El	ORN	2540	.35	BTCM B+
E2	BLK	2015	.35	BTCM POWER MOD IN
E3	BLK	151	.35	PARK BRAKE SWITCH
B4	PNK	1632	.35	BTCM POWER MOD IN
E5	TAN/WHT	33	.35	BTCM BRAKE IND
E6	BLK	407 A	.35	BTCM GROUND
E7	DKBLU	1660B	.35	BTCM LOW TRAC IND
E8	DK BLU/WHT	1934	.35	BTCM PARK BRAKE IND
E9	BRN	41E	1.35	BTCM RUN 1
E10	WHT	852B	.35	BTCM ANTILOCK INDICATOR
Ell	ORN	640F	.35	PARK BRAKE SWITCH B+
E12	BRN/WHT	230F	.35	PARK BRAKE SWITCH
E13	BLK	450Y	.35	PARK BRAKE SWITCH GROUND
EI4	BLK	450N	.35	DLC GROUND
E15	BLK	450T	.35	DLC GROUND
E16	BLK	1640	.35	DLC B+

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION j
Fl	PPL	1807C	.35	DLC CLASS 2 DATA
F2				
F3	TAN	BOOL	.35	DLC SERIAL DATA
F4	TAN	800E	.35	BTCM SERIAL DATA
F5	BLK	884B	.35	BTCM LR WSS HI
F6	BRN	882B	.35	BTCM RR WSS HI
F7	WHT	883B	.35	BTCM RR WSS LO
F8	RED	885B	.35	BTCM LR WSS LO
F9	GRA	416A	.35	BTCM +5V REF
F10				
Fll				
F12				
F13				
F14				
FI5				
F16				

CamScanner

LEFT HAND JUNCTION BLOCK (J8)

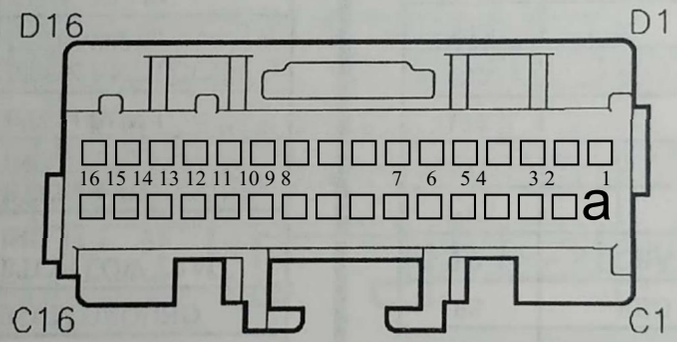

PSMELC67251A A

PINK

12110245

Location: Passenger Compartment, Under Left Side of I/P

CamScanner

LEFT HANI) JUNCTION BLOCK - J8 - 12110245

/ CAVITY	1 WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
C1 7	BLK	450M	.35	RSA GROUND
C2	LT GRN	SOB	.35	IPC TO RSA PASS THRU
C3	BLK/WHT	238A	.35	LH SEAT BELT PASS THRU
C4	BRN	24IA	.35	POWER MODING MODULE RUN 2
C5	TAN	294A	.35	LH DOOR LOCK MOTOR
C6	GRA	295A	.35	LH DOOR LOCK MOTOR
C7	PNK	213A	.35	CHARGE RECEPTACLE PASS THRU TO BPM
C8	BRN	358A	.35	SDM TO IPC
C9	BRN/WHT	419A	.35	SERVICE NOW IND
CIO	PPL	524A	.35	TO RHJB HEADLAMP/DRL MODULE
Cll	YEL	525A	.35	TO RHJB HEADLAMP/DRL MODULE
C12	ORN	340	.35	RSAB+
C13	ORN	7A	.35	COOLANT LEVEL SENSOR; COOLANT PUMP BUFFER
C14	BRNAVHT	230C	.35	RADIO DIM LEVEL
C15	BRN/WHT	230B	.35	RSA DIM LEVEL
C16	WHT	2027A	.35	BATT REC SW TO CHARGE RECEPT

CAVITY	WIRE COLOR	CIRCUIT NUMBER	1 WIRE SIZE	CIRCUIT FUNCTION 1
DI	TAN	1300	.35	RSA LH WINDOW UP
D2	RED	2014A	.35	COOLANT PUMP BUFFER
D3	YEL	234A	.35	IPC SEAT BELT IND
D4	GRA	1136	.35	RSA LH WINDOW DOWN
D5	PPL/WHT	889A	.35	PWR MIRROR SW RH HORIZONTAL
D6	BRN/WHT	1498A	.35	PWR MIRROR SW RH SELECT
D7	DKBLU	1660A	.35	BTCM LOW TRAC INDICATOR
D8	TAN	1885A	.35	PCM SERVICE SOON IND
D9	RED	2018A	.35	IPC REDUCED PERFORMANCE IND
DIO	LTGRN	2030A	.35	IPC TEMP IND
Dll	PNK	2026A	.35	HORN MOD HI CMD
D12	PPL	2025A	.35	HORN MOD LO CMD
D13	RED/WHT	881A	.35	PWR MIRR SW RH VERT
D14	ORN/BLK	781A	.35	LH DOOR LOCK SWITCH
D15	WHT	852A	.35	3TCM ANTILOCK INDICATOR
D16	PPL	1807A	.35	)LC CLASS 2 DATA

CamScanner

HARNESS CONNECTOR FACES

LEFT HAND JUNCTION BLOCK (J9)

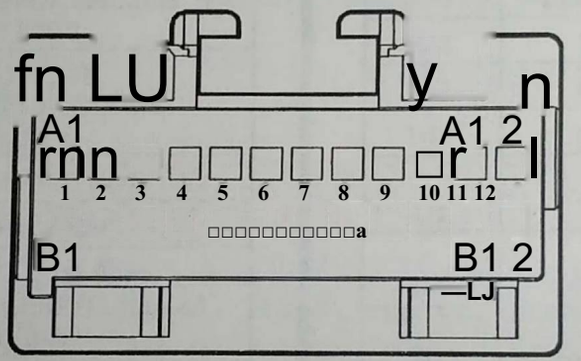

PSMELC67180AA

PINK

12110244

Location: Passenger Compartment, Under Left Side of I/P

CamScanner

LEFT HANI) JUNCTION BLOCK J9 12110244

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Al	BRN	9A	.35	REAR LICENSE LAMPS Hl REAR SIDE MARKER LAMPS HI REAR TAIL/STOP LAMPS HI
A2	YEL/BLK	1334A	.35	LR TURN LAMP HI
A3	LTGRN	1966A	.35	TORH TURN/HAZ/DRL MODULE
A4	DKGRN/WHT	1335A	.35	TORH TURN/HAZ/DRL MODULE
A5	LTBLU	20A	.80	STOP LAMPS HI
A6	BRN	41A	.35	FROM POWER MODING MODULE RUN 1
A7	YEL	820A	.35	CENTER HIGH MOUNTED STOP LAMP HI
A8	BRN/WHT	30IB	.35	HEADLAMP SW TO RADIO
A9	BRN/WHT	301E	.35	HEADLAMP SW TO RSA
A10	RED	228A	.35	WASHER PUMP HI
All	ORN	240	.35	RSAB+
A12	BRN/WHT	309A	.35	RF PARK LAMPS Hl

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Bl	TAN	KOON	.35	RSA SERIAL DATA
B2	TAN/WHT	816C	.35	RSA TO PCM
B3	GRA	118B	.35	LF SPEAKER -
B4	TAN	201B	.35	LF SPEAKER +
B5	GRA	728	.35	RSA SECURITY IND
B6	RED/BLK	780A	.35	LH DOOR LOCK SWITCH - LOCK
B7	PPL	I697A	.35	TO RHJB TURN/HAZ/DRL MODULE
B8	LT GRN	1478A	.35	COOLANTLEVEL SENSOR
B9	LTGRN	275A	.35	PRND SWITCH IN
BIO	LTGRN	275C	.35	PRND SWITCH TO RSA
Bll	LT GRN	1495A	.35	DOOR JAMB SWITCH HI
B12	LTGRN	838A	.35	TO RHJB TURN/HAZ/DRL MODULE

CamScanner

HARNESS CONNECTOR FACES

LEFT HAND JUNCTION BLOCK (LHJB)

(J10)

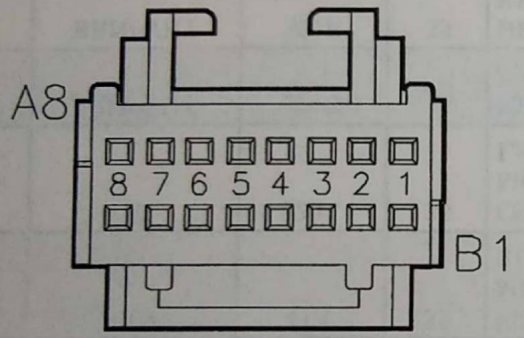

PSMELC67195AA

BLUE
12092629

LEFT HANI) JUNCTION BLOCK - J 10- 12092629				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A1	BLK	450K	.80	REAR AXLE EMI GROUND
A2	BLK/WHT	238C	.35	LH SEAT BELT SWITCH - Hl
A3	BLK	450W	.35	LH SEAT BELT SWITCH GROUND
A4				
A5				
A6				
A7				
A8				
Bl				
B2				
B3	WHT	883C	.80	RR WHEEL SPEED SENSOR LO
B4	BRN	882C	.80	RR WHEEL SPEED SENSOR Hl
B5	RED	885C	.80	LR WHEEL SPEED SENSOR LO
B6	BLK	884C	.80	LR WHEEL SPEED SENSOR Hl
B7				
B8				

Location: Passenger Compartment, Under Left Side of I/P

CamScanner

LEFT HAND JUNCTION BLOCK (LHJB) (J12)

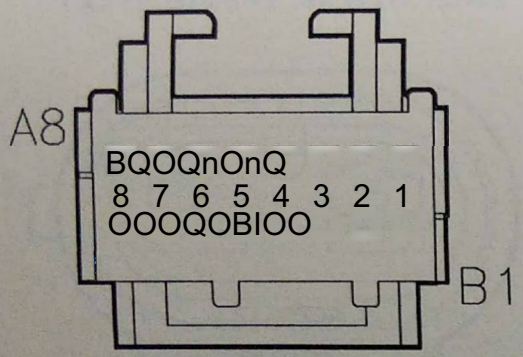

PSMELC67179AA

RED
12092632

LEFT HAND JUNCTION BLOCK - J12 - 12092632

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A1	BLK	450S	.35	DSCM GROUND
A2	BLK	450C	.50	LF PARK/TURN LAMP GROUND
A3	BLK	450G	.35	LF MARKER LAMP GROUND
A4	BLK	450P	.35	PSCM GROUND
A5	BLK	450R	.35	PCM GROUND
A6	BLK	106	.35	OIL PUMP LO
A7	BLK	450E	1.0	COOLANT PUMP BUFFER GROUND
A8	BLK	450EE	.35	CHARGE PORT GROUND
B1				
B2	BLK	450H	.35	CHARGE PORT GROUND
B3	BLK	450J	.35	COOLANTLEVEL SENSOR GROUND
B4				
B5				
B6				
B7				
B8				

Location: Passenger Compartment, Under Left Side of I/P

CamScanner

HARNESS CONNECTOR FACES

LEFT HAND JUNCTION BLOCK (LHJB)

(J13)

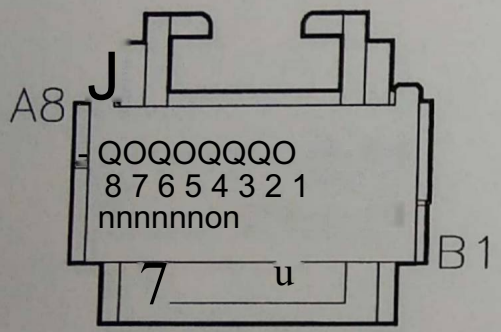

PSMELC67194AA

GREEN
12110259

LEFT HAND JUNCTION BLOCK-J13- 12110259				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Al	BRN	41	.35	LH TT BANK RUN 1
A2				
A3	BRN	27	.35	HAZARD INDICATOR
A4	TAN/WHT	33	.35	BRAKE SYSTEM INDICATOR
A5	WHT/BLK	2029	.35	WAIT INDICATOR
A6	LTBLU	1934	.35	PARKING BRAKE INDICATOR
A7				
A8	GRA	728	.35	SECURITY INDICATOR
Bl	ORN	640	.35	LHTTBANKB+
B2				
B3				
B4	WHT	2019	.35	BA'ITERY LIFE INDICATOR
B5	RED	1084	.35	CHECK TIRE PRESSURE INDICATOR
B6				
B7				
B«	BLK	450	.35	LH TT BANK GROUND

Location: Passenger Compartment, Under Left Side of I/P

CamScanner

LOW BEAM HEADLAMP

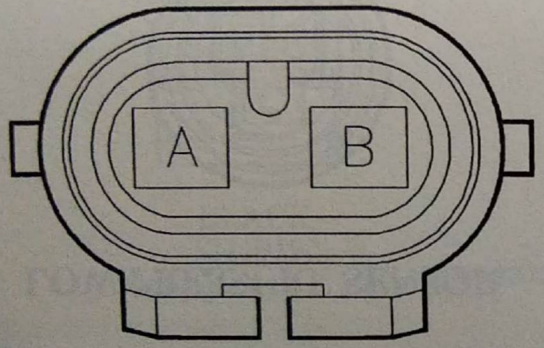

PSMELC67236AA

DARK GRAY
12059181

LEFT LOW BEAM HEADLAMP - 12059181				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	CIRCUIT FUNCTION
A	RED	342A	1.0	LOW BEAM HEADLAMP B+
B	PNK	1190	.50	LOW BEAM HEADLAMP LO

Location: Underhood, Below Closeout Panel

RIGHT LOW BEAM HEADLAMP - 12059181				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	RED	1442A	1.0	LOW BEAM HEADLAMP B+
B	TAN	1191B	.50	LOW BEAM HEADLAMP LO

Location: Underhood, Below Closeout Panel

CamScanner

HARNESS CONNECTOR FACES

LOW NOTE HORN

PSMELC67234AA

BLACK
12059595

LOW NOTE HORN - 12059595				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	ORN	140	.35	B+
13	PNK	2026B	.35	HORN COMMAND IN
C	BLK / WHT	35OB	.35	GROUND

Location: Right Side, Above Wheel House Panel Liner

LOW PRESSURE SENSOR

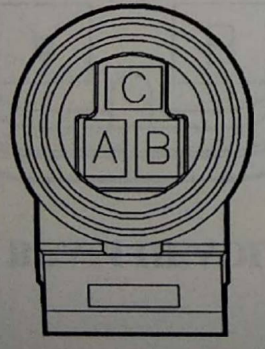

PSMELC67231AA

BLACK
12110192

LOW PRESSURE SENSOR - 12110192				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK	552C	.35	GROUND
B	GRA	6O5G	.35	+5V REF
C	YEL	1644	.35	LOW SIDE PRESSURE OUT

Location: Underhood, Center Attached to Refrigerant Line

CamScanner

MASTER CYLINDER (MC) PRESSURE SENSOR–UPSTREAM

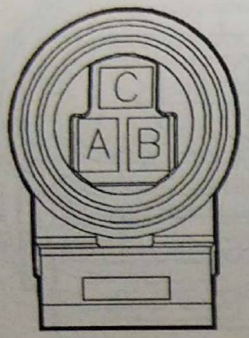

BLACK
12110192

PSMELC67231A A

MASTER CYLINDER PRESSURE SENSOR - MC1 - 12110192				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BRN	407B	.35	GROUND
B	GRA	416B	.35	+5V REF
C	YEL	2034	.35	MCI PRESSURE SIGNAL

Location: Underhood — Bottom Of Brake Modulator

MASTER CYLINDER PRESSURE SENSOR - MC2 - 12110192				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK	407F	.35	GROUND
B	GRA	4I6F	.35	+5V REF
C	GRA	2035	.35	MC2 PRESSURE SIGNAL

Location: Underhood - Bottom Of Brake Modulator

CamScanner

HARNESS CONNECTOR FACES

MODE VALVE ACTUATOR

PSMELC68246AA

BLACK
12064993

MODE VALVE ACTUATOR - 12064993				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
5	ORN	7C	.35	RUN 1/WAKE-UP
6	BRN/WHT	1218	.35	VALVE COMMAND IN
7	BLK	452B	.35	GROUND
8				
9	RED	708	.35	VALVE POSITION OUT
10	LT BLU/BLK	605B	.35	+5V REF IN

Location: Passenger Compartment, Under Right Side of I/P

MOTOR WINDING TEMPERATURE SENSOR

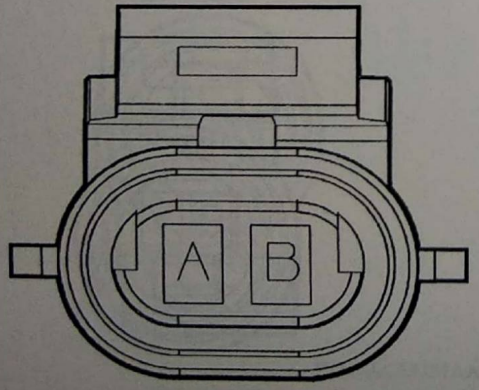

GRAY
12052644

PSMELC66031AA

MOTOR WINDING TEMPERATURE SENSOR - 12052644				
CAVITY	WIRE COLOR	CIRCUIT NO.	WIRE-SIZE	CIRCUIT FUNCTION
A	LTGRN	37	.50	SENSOR HI
B	GRA/BLK	1798	.50	GROUND

Location: Underhood, Top Center of Drive Motor

CamScanner

OIL PRESSURE SWITCH

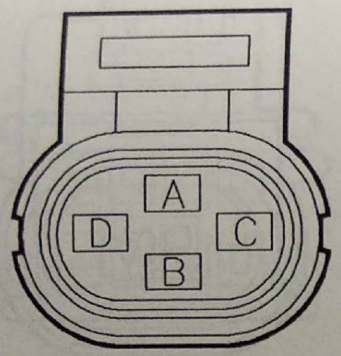

PSMELC67769AA

BROWN
12065402

OIL PRESSURE SWITCH - 12065402				
CAVITY	WIRE COLOR	CIRCUIT NO.	WIRE-SIZE	CIRCUIT FUNCTION
C	TAN/WHT	331	.80	SWITCH HI
D	ORN/BLK	1175	.80	GROUND

Location: Underhood, Center of Drive Motor

OIL PUMP

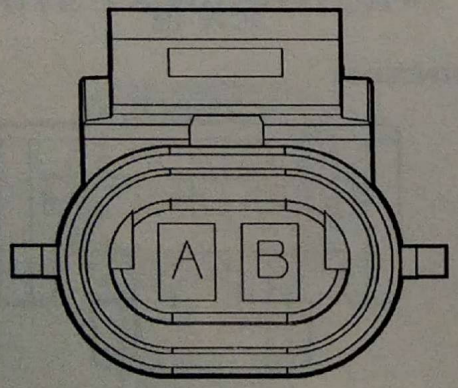

GRAY
12052644

PSMELC66031AA

OIL PUMP-12052644				
CAVITY	WIRE COLOR	CIRCUIT NO.	WIRE-SIZE	CIRCUIT FUNCTION
A	ORN	1940	.35	B+
B	BLK	106	**.35**	PUMP LO

Location: Underhood, Left Side of Drive Motor

CamScanner

HARNESS CONNECTOR FACES

OUTSIDE AIR VALVE ACTUATOR

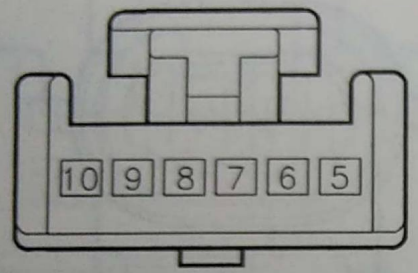

PSMELC68246AA

BLACK
12064993

OUTSIDE AIR VALVE AC TUATOR 120649«O				
CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION 1
5	ORN	7E	.35	RUN 1/WAKE-UP
6	DK CRN	1614	.35	DOOR COMMAND IN
7	BLK	452C	.35	GROUND
8				
9	PPL	1838	.35	DOOR POSITION OU T
10	GRA	605C	.35	+5V REF IN

Location: Passenger Compartment, Under Right Side of I/P

OUTSIDE TEMPERATURE SENSOR

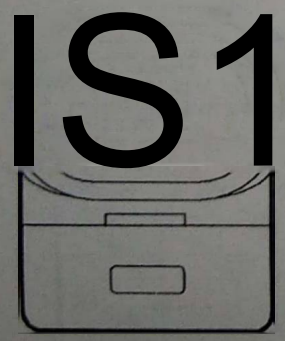

PSMELC68247AA

BLACK
12110170

OUTSIDE TEMPERATURE SENSOR - 12110170				
CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	LTGRN/BLK	735	.35	SENSOR HI
B	BLK	552F	.35	GROUND

Location: Underbody, Behind Front Fascia

CamScanner

PARK BRAKE SWITCH

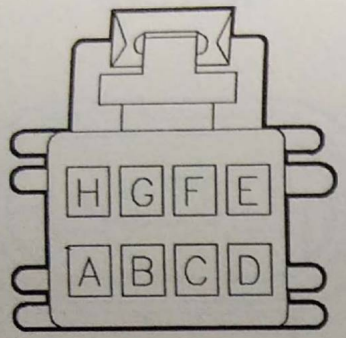

BLUE
12064766

PSMELC67230AA

PARK BRAKE SWITCH 12064766				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK	450Y	.35	GROUND
B			.35	
c	LT BLU	1134	.35	PARK BRAKE SWITCH IDLE OUT
D	ORN	64OF	.35	B+
E	BLK/WHT	151	.35	GROUND
F	PNK	2031	.35	PARK BRAKE SWITCH WAKE-UP OUT
G				
H	BRN/WHT	230F	.35	DIMMER IN

Location: I/P Lower Left

PARK REVERSE NEUTRAL DRIVE (PRND) SWITCH #1

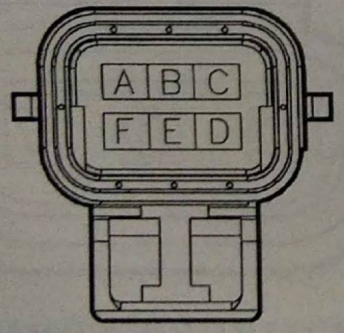

PSMELC67215AA

BLACK
12052848

PRND SWITCH #1 - 12052848				
CAVITY	WIRE COLOR	CIRCUIT NO.	WIRE-SIZE	CIRCUIT FUNCTION
A	BLK/WHT	771BC	.50	CHANNEL A
B	YEL	772BC	.50	CHANNEL B
C	GRA	773BC	.50	CHANNEL C
D	WHT	776BC	.50	PARITY
E	BLK	470BC	.50	GROUND
F				

CamScanner

HARNESS CONNECTOR FACES

PARK REVERSE NEUTRAL DRIVE (PRND) SWITCH #2

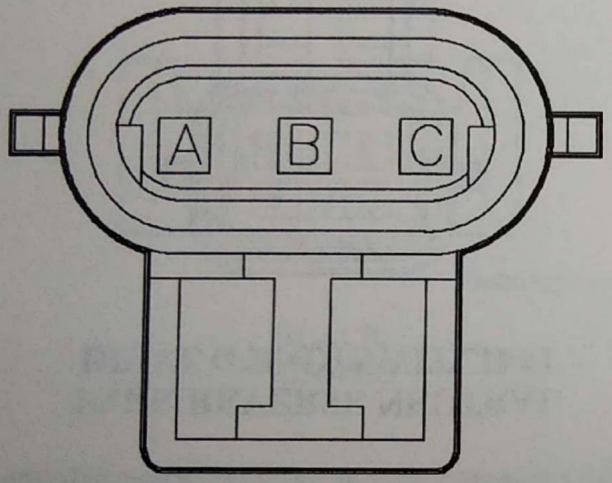

BLACK
12110293

PSMELC67I97AA

PRND SWITCH #2 - 12110293				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	ORN	2840	.80	B+
B	LT GRN	24A	.50	REVERSE SELECT
c	LTGRN	275E	.35	PARK SELECT

Location: Underhood, Lower Center of Drive Motor

CamScanner

/'VSSENGER *DOOR JAMB SWITCH*

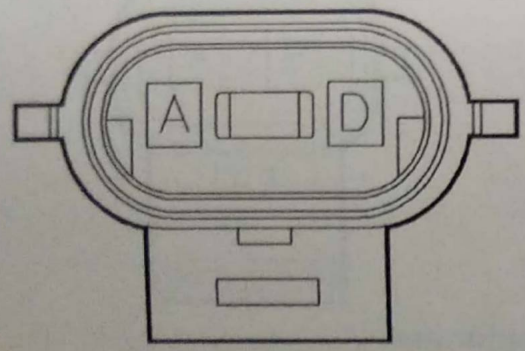

PSMELC67199AA

BLACK
12110196

PASSENGER DOOR J AMB SWITCH - 12110196				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	BLK	350J	35	GROUND
D	BLK/WHT	1495C	.35	SWITCH Hl

Location: Passenger Door, Part of Latch Assembly

CamScanner

HARNESS CONNECTOR FAC ES

PEDAL POSITION SENSOR

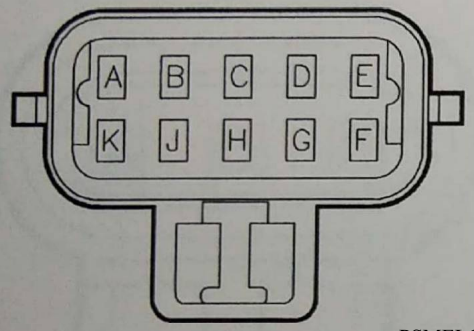

PSMELC67263AA

BLACK
12065425

PEDAL POSITION SENSOR - 12065425				
CAVITY	WIRE COLOR	CIRCUIT NO.	WIRESIZE	CIRCUIT FUNCTION
A	BRN	1271	.35	GROUND
B	PPL	1272	.35	GROUND
C	LT BLU	1162	.35	PEDAL POSITION #2
D	TAN	1274	.35	+5V REF IN
E	YEL/BLK	1275	.35	+5V REF IN
F	DKBLU	1161	.35	PEDAL POSITION #1
G	WHT/BLK	1164	.35	+5V REF IN
H				
J	GRA	1273	.35	GROUND
K	DK GRN	1163	.35	PEDAL POSITION #3

Location: Top of Accelerator Pedal

CamScanner

POWER DOOR LOCK MOTOR

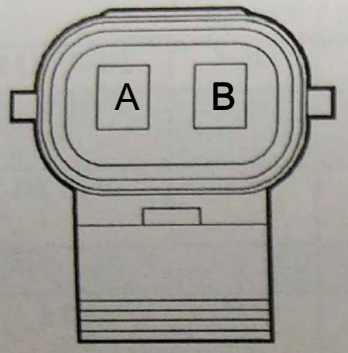

PSMELC67I98AA

BLACK
15300027

LEI« | POWER DOOR LOCK MOTOR - 15300027				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION 1**
A	TAN	294E	.35	DOOR UNLOCK
B	GRA	295E	.35	DOOR LOCK

Location: Driver Door, Part of Latch Assembly

RIGHT POWER DOOR LOCK MOTOR - 15300027				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	TAN	294C	.35	DOOR UNLOCK
B	GRA	295C	.35	DOOR LOCK

Location: Passenger Door, Part of Latch Assembly

CamScanner

HARNESS CONNECTOR FACES

POWER INVERTER MODULE (PIM) - JI

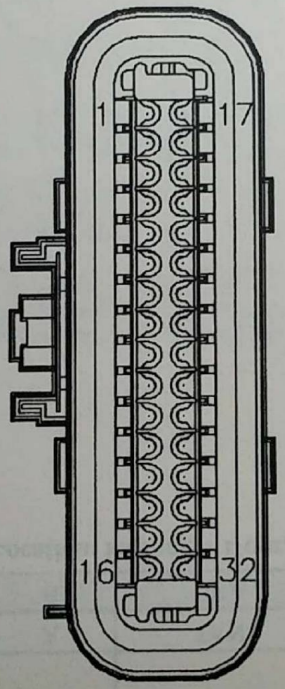

NATURAL
12129025

Location: Underhood, Center of Power Inverter Module

PSMELC67266AB

CamScanner

POWER INVERTER MODULE-JI - 12129025

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
1	BLK/WHT	450R	.35	PCM GROUND
2	WHT	1765	.35	STEERING PUMP SPEED (PSCM IN)
3	DKBLU	179	.35	OIL PUMP CONTROL OUT
4	DK GRN	389	.35	VSS OUT
5	BRN	1855B	.35	SERVICE SOON INDICATOR OUT
6	TAN/WHT	816B	.35	BTSI CONTROL OUT
7	PNK	2021	.35	REGEN DISABLE IN
8	DK GRN	2023	.35	CHARGE RECEPTACLE IN
9	DK BLU	84	.35	SET/COAST IN
10	GRA	397	.35	CRUISE ON
11	DKBLU	2038	.35	RETARD ACHIEVED OUT
12	LT GRN	1163	.35	ACCEL PEDAL IN
13	PNK	1162	.35	ACCEL PEDAL IN
14	TAN	1161	.35	ACCEL PEDAL IN
15	DK GRN	1275	.35	ACCEL PEDAL +5V REF
16	PPL	1274	.35	ACCEL PEDAL +5V REF
17	BLK	45OP	.35	PSCM GROUND
18	PPL	2017	.35	RETARD REQUEST IN
19	BRN	41C	.35	RUN 1
20	ORN	540	.35	B+
21				
22	TAN	800F	.35	SERIAL DATA
23				
24	BRN	86C	.35	BRAKE SWITCH IN
25	GRA/BLK	87	.35	RESUME/ACCEL IN
26	BRN	241E	.35	RUN 2
27				
28	RED	1273	.35	ACCEL PEDAL GROUND
29	BLK	1272	.35	ACCEL PEDAL GROUND
30	WHT	1271	.35	ACCEL PEDAL GROUND
31	YEL	1164	.35	ACCEL PEDAL +5V REF
32				

CamScanner

HARNESS CONNECTOR FACES

POWER INVERTER MODULE (J2)

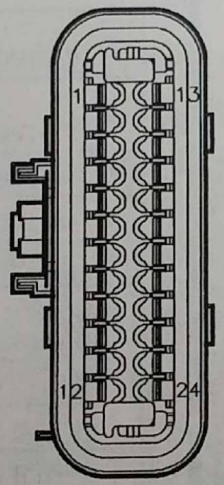

PSMELC67235AA

GRAY
12129225

Location: Underhood, Center of Power Inverter Module

CamScanner

POWER INVERTER MODULE-.12- 12129225

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
1				
2				
3				
4	PNK	1798	.50	MOTOR WINDING TEMP SENSOR GROUND
5	DKGRN	37	.50	MOTOR WINDING TEMP SENSOR HI
6	BLK	470BC	.50	PRND SWITCH GROUND
7	WHT	776BC	.50	PRND PARITY
8	GRA	773BC	.50	PRND CHANNEL C
9	YEL	772BC	.50	PRND CHANNEL B
10	BLK/WHT	771BC	.50	PRND CHANNEL A
11	ORN/BLK	1175	.80	OIL PRESSURE SWITCH GROUND
12	TAN/WHT	331	.80	OIL PRESSURE SWITCH HIGH

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
13	RED	1673CA	.50	DRIVE MOTOR ENCODER POWER
14	DK BLU/WIIT	1557CA	.50	DRIVE MOTOR ENCODER A
15	YEL/BLK	1558CA	.50	DRIVE MOTOR ENCODER B
16	BLK	552CA	.50	DRIVE MOTOR ENCODER GROUND
17	BARE	514CM		DRIVE MOTOR ENCODER SHIELD
18				
19				
20				
21				
22				
23				
24				

CamScanner

HARNESS CONNECTOR FACES

POWER DOOR LOCK SWITCH

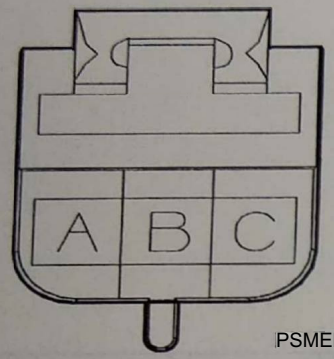

PSMELC66033AA

BLACK
12064758

LEFT POWER DOOR I,OCR SWITCH - 12064758				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	RED/BLK	780B	.35	LOCK OUT
B	ORN	1040E	.35	B+
c	ORN/BLK	781B	.35	UNLOCK OUT

Location: Driver Door

RIGHT POWER DOOR LOCK SWITCH - 12064758				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	ORN/BLK	781C	.35	UNLOCK OUT
B	ORN	740	.35	B+
c	RED/BLK	780C	.35	LOCK OUT

Location: Passenger Door

POWER MIRROR MOTOR

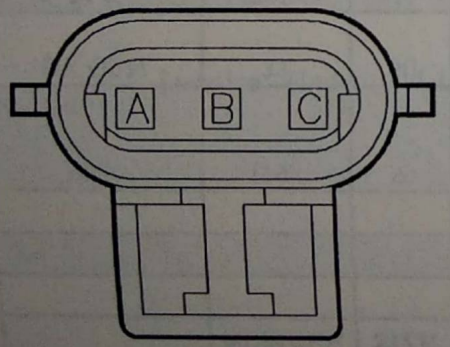

PSMELC67241A A

BLACK
V2YY0293

LEFT POWER MIRROR MOTOR - 12110293				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	LTGRN	89	.35	LH VERTICAL MOTOR
B	YEL	88	.35	DUAL CIRCUIT
C	WHT	81	.35	LH HORIZONTAL MOTOR

Location: Driver Power Mirror

RIGHT POWER MIRROR MOTOR - 12110293				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	PPL/WHT	889B	.35	RH VERTICAL MOTOR
B	BRN/WHT	1498B	.35	DUAL *CIRCUIT*
	RED/WHT	88 IB	.35	*RH HORIZONTAL* MOTOR

Vocation: Driver Power Mirror

CamScanner

POWER MIRROR SWITCH

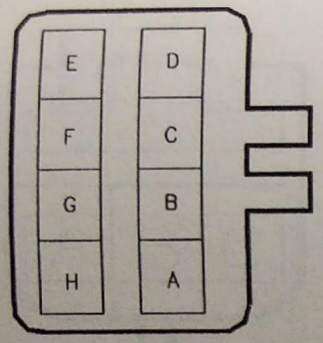

SMELCS1974AA

BLACK
12047886

POWER MIRROR SWITCH - 12047886				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	RED/WHT	88IC	.35	RH HORIZONTAL
B	PPL/WHT	889C	.35	RH VERTICAL
c	BRN/WHT	1498C	.35	RH MIRROR SELECT
D	BLK	45OB	.35	GROUND
E	ORN	1040F	.35	B+
F	LTGRN	89	.35	LH VERTICAL
G	WHT	81	.35	LH HORIZONTAL
H	YEL	88	.35	LH MIRROR SELECT

Location: Driver Door

POWER OUTLET

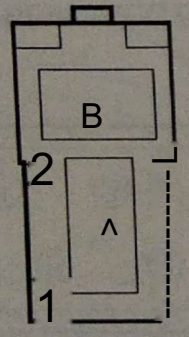

PSMELC67I92AA

DARK GRAY
12033934

POWER OUTLET -12033934				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	ORN	1440	.35	B+
B	BLK	150J	.35	GROUND

Location: Passenger Compartment, Right Rear Upper/Inner Quarter Trim Panel

CamScanner

HARNESS CONNECTOR FACES

POWER STEERING CONTROL MODULE (PSCM)

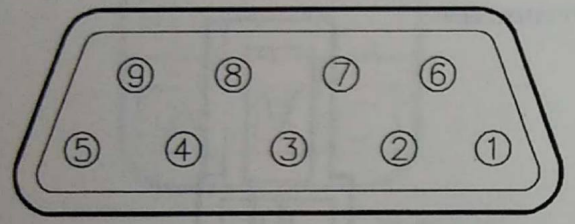

PSMELC68243AA

BLINDMATE

POWER STEERING CONTROL MODULE BLINDMATE				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
1				POWER STEERING PUMP SPEED INPUT
2				RUN 2
3				
4				PSCM HV INTERLOCK (+)
5				HV-
6				GROUND
7				
8				HV+
9				PSCM HV INTERLOCK RETURN (-)

Location: Underhood Attached to Lower Right of Power Electronics Bay.

CamScanner

POWER STEERING HAND WHEEL SENSOR

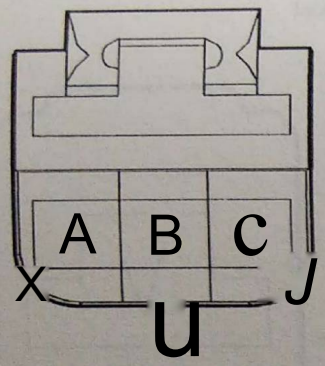

BLACK
12064758

PSMELC66033AA

POWER STEERING HAND WHEEL SENSOR - 12064758				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	GRA	1056	.35	+5 REF
B	LT BLU	1059	.35	HAND WHEEL ROTATION SIGNAL OUT
C	ORN/BLK	556	.35	GROUND

Location: Steering Column

POWER STEERING PUMP MOTOR

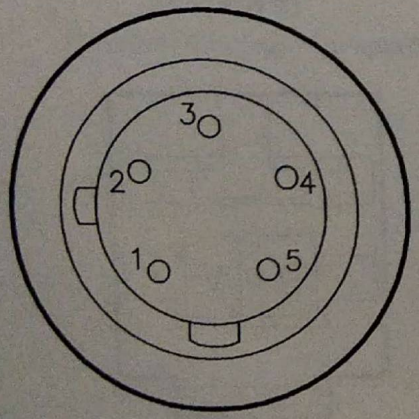

YELLOW
MOLEX CONNECTOR

PSMELC66464AC

POWER STEERING PUMP MOTOR MOLEX CONNECTOR				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
1				MOTOR PHASE A
2				MOTOR PHASE B
3				MOTOR PHASE C
4				HIGH VOLTAGE + INTERLOCK CIRCUIT
5				HIGH VOLTAGE - INTERLOCK CIRCUIT

Location: Front Side of Power Steering Control Module

CamScanner

HARNESS CONNECTOR FACES

POWER WINDOW MO TOR

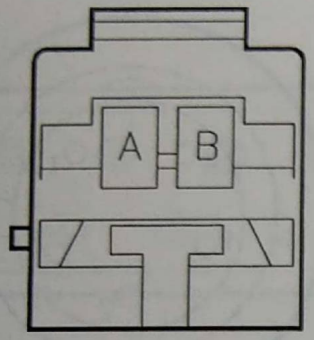

PSMELC67200AA

NATURAL
12033911

LEFT POWER WINDOW MOTOR - 12033911				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BRN	165	.50	LEFT WINDOW DOWN
B	DK BLU	164	.50	LEFT WINDOW UP

Location: Left Door

RIGHT POWER WINDOW MOTOR - 12033911				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	BRN	667	.50	RIGHT WINDOW DOWN
B	DK BLU	666	**.50**	RIGHT WINDOW UP

Location: Right Door

PRIMARY REAR DEFOGGER

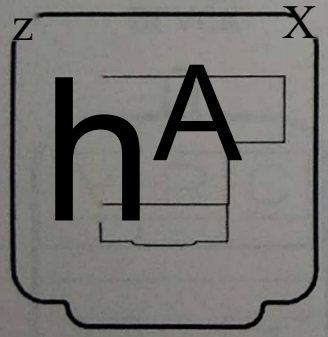

PSMELC67188AB

BLACK
12092133

PRIMARY REAR DEFOGGER - 12092133				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	RED	1242B	2.0	PRIMARY REAR DEFOG - HIGH

Location: Right Side of Rear Back Glass

PRIMARY REAR DEFOGGER - 12092133				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	LT BLU	292	2.0	PRIMARY REAR DEFOG - LOW

Location: Right Side of Rear Back Glass

CamScanner

RADIO

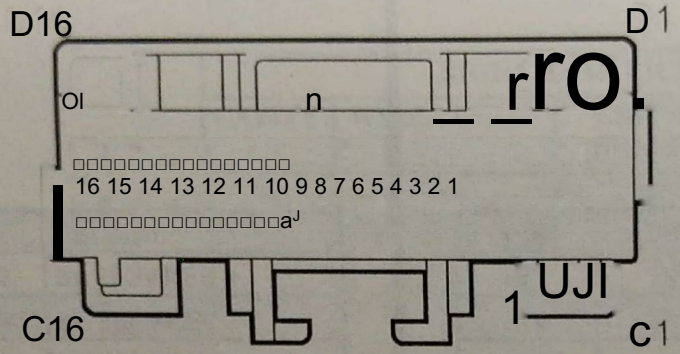

PSMELC67224AA

BLUE
12110115

Location: Passenger Compartment Center of I/P

CamScanner

HARNESS CONNECTOR FACES

RADIO -12110115

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
El				
E2				
E3				
E4				
E5				
E6				
E7				
E8				
E9				
E10				
Ell				
E12	BRN	199B	.35	LR SPEAKER +
E13	YEL	116B	.35	LR SPEAKER -
EI4	DK GRN	117B	.35	RF SPEAKER -
E15	LT GRN	200B	.35	RESPEAKER+
E16	BLK	1051	.35	GROUND

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Fl	ORN	2040	.35	B+
F2	PNK	314	.35	RADIO WAKE-UP IN
F3				
F4	BRN/WHT	230C	.35	DIM LEVEL IN
F5	BRN/WHT	301B	.35	PARK LAMP IN
F6				
F7				
F8				
F9				
FIO				
Fll				
FI2	TAN	201B	.35	LF SPEAKER +
F13	GRA	118B	.35	LF SPEAKER -
FI4	LT BLU	115B	.35	RR SPEAKER-
F15	DKBLU	46B	.35	RR SPEAKER +
F16				

CamScanner

REAR LICENSE LAMP

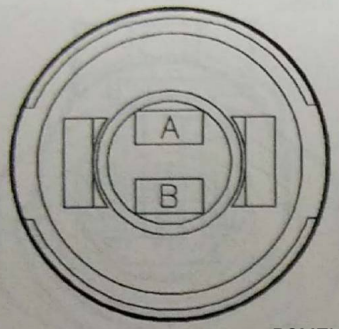

PSMELC67I73AA

GRAY
12110053

1

LEFT REAR LICENSE LAMP - 12110053				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION 1
A	DK BLU	809E	.35	LICENSE LAMP HI
B	BLK	150C	.35	GROUND

Location: Think Compartment, Attached to Dccklid

RIGHT REAR LICENSE LAMP - 12110053				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	WHT	609E	.35	LICENSE LAMP HI
B	BLK	150E	.35	GROUND

Location: Trunk Compartment, Attached to Decklid

REAR MARKER LAMP

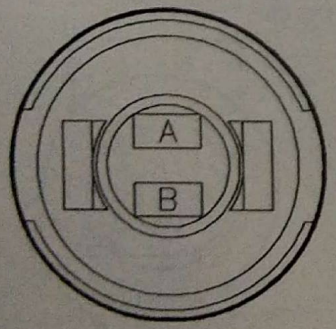

PSMELC67I73AA

GRAY
12110053

LEFT REAR MARKER LAMP - 12110053				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	DKBLU	809C	.35	MARKER LAMP HI
B	BLK	I50PP	.35	GROUND

Location: Exterior, Behind Tail/Stop Lamp Housing

RIGHT REAR MARKER LAMP - 12110053				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	WHT	609C	.35	MARKER LAMP HI
B	BLK	150P	.35	GROUND

Location: Exterior, Behind Tail/Stop Lamp Housing

CamScanner

HARNESS CONNECTOR FACES

REAR TAIL/STOP LAMP

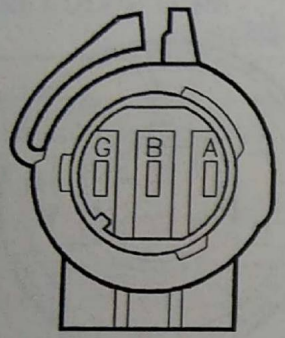

PSMELC67175AA

GRAY
12160395

LEFT REAR TAIL/STOP LAMP - 12160395				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	LTBLU	20H	.50	STOP LAMP HI
B	DK BLU	809B	.50	PARK LAMP HI
G	BLK	150SS	.50	GROUND

Location: Exterior, Behind Tail/Stop Lamp Housing

RIGHT REAR TAIL/STOP LAMP - 12160395				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	LT BLU	20G	.50	STOP LAMP HI
B	WHT	609B	.50	PARK LAMP Hl
G	BLK	150S	.50	GROUND

Location: Exterior, Behind Tail/Stop Lamp Housing

REAR TURN LAMP

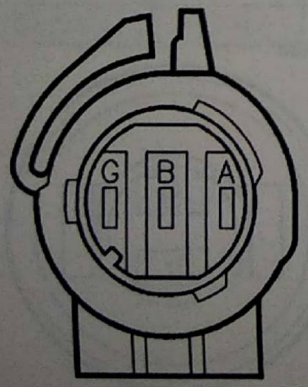

PSMELC67205AA

GRAY
12160393

LEFT REAR TURN LAMP - 12160393				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	YEL/BLK	1334F	.50	TURN LAMP HI
B	BLK	I50RR	.50	GROUND

Location: Exterior, Behind Turn/Stop Lamp Housing

RIGHT REAR TURN LAMP - 12160393				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	DK GRN/WHT	1335F	.50	TURN LAMP HI
B	BLK	150R	.50	GROUND

Location: Exterior, Behind Hirn/Stop Lamp Housing

CamScanner

REFRIGERANT TEMPERATURE SENSOR

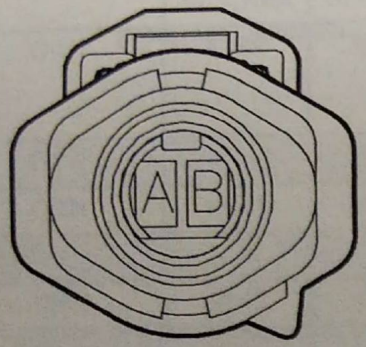

BLACK
12092512

PSMELC67245AA

/----------REFRIGERANT TEMPERATURE SENSOR - 12092512 1

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION 1
A	DK BLU	732	.35	SENSOR HI
B	GRA	552G	.35	GROUND

Location: Underhood, Left Side Attached to Refrigerant Line

REVERSING VALVE

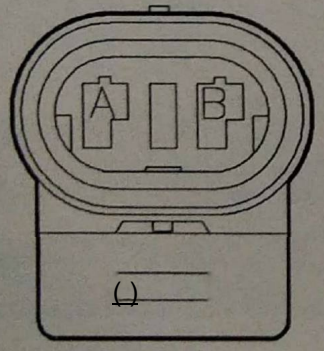

PSMELC67246AA

GRAY
12162343

REVERSING VALVE - 12162343				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK/WHT	350R	.35	GROUND
B	WHT	2016	.35	VALVE HI

Location: Underhood, Center of Crossmember

CamScanner

HARNESS CONNECTOR FACES

RIGHT HAND JUNCTION BLOCK (JI)

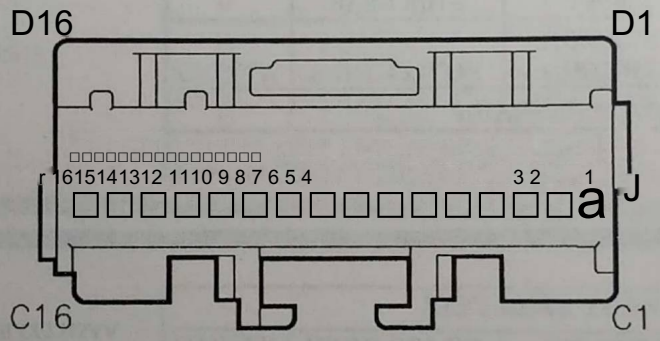

PSMELC67251AA

PINK

12110245

Location: Passenger Compartment, Under Right Side of I/P

CamScanner

RIGHT HAND JUNCTION BL' OCR-JI - 12110245

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Cl	ORN	840R	.35	TO HTCM - REVERSING VALVE B+
C2	ORN	84OL	.35	HTCM B+
C3	ORN	840B	.35	BPM B+
C4				
C5	ORN	2840	.80	PRND ENCODER B+
C6	RED	228B	.35	WASHER PUMP HI PASS THRU
C7	BRN	41S	.35	BPM RUN 1
C8	BRN	41N	.35	HTCM RUN 1
C9				
CIO	YEL	1139	.50	SDM RUN 1
Cll	BRN	241B	1 .35	APM RUN 2
C12	LTGRN	1193B	.50	RH HIGH BEAM - LO
C13	LTGRN	24A	.50	BACKUP LAMPS HI PASS THRU
C14	DKBLU	15	.50	RFTURN SIGNAL- HI
C15				
C16	YEL	820C	; .35	BRAKE SWITCH OUT TO APM

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION 1 1
DI				
D2	PNK	213B	.35	CHARGE PORT TEMP TO BPM
D3				
D4	LTGRN	275E	.35	PRND ENCODER IN
D5	LTGRN	275B	.35	PRND ENCODER TO BPM
D6	PPL	I807B	.35	BPM CLASS 2 DATA
D7	WHT	108B	.35	BATTERY PACK FAN PASS THRU
D8	BLK/WHT	238E	.35	LH SEAT BELT SWITCH TO SDM PASS THRU
D9	PNK	2014B	.35	COOLANT PUMP TO HTCM PASS THRU
DIO	LTGRN	1478C	.35	COOLANT LEVEL SENSOR TO HTCM PASS THRU
Dll	WHT	**193C**	.35	HTCM TO TJB PASS THRU
D12				
D13				
D14				
D15	BRN	358E	.35	AIR BAG INDICATOR 'ro SDM
D14				

CamScanner

RIGHT HAND JUNCTION BLOCK (RHJB) (J2)

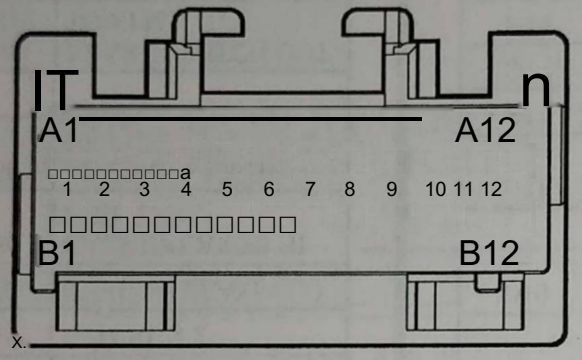

PSMF.LC67180AA

PINK
12110244

Location: Passenger Compartment Under Right Side of I/P

CamScanner

RIGHT HAND JUNCTION BLOCK-J2- 12110244

CAVITY	WIRE COLOR 1	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A1	DKBLU	1I91B	.50	RH LOW BEAM - LO
A2	ORN	40	.35	LOW NOTE HORN B+
A3	ORN	140	.35	HIGH NOTE HORN B+
A4	ORN	7K	.35	BPM RUN 1/ WAKE-UP
A5	ORN	7B	.35	COOLANT RECOV-ERY CHECK VALVE RUN 1/WAKE-UP
A6	ORN	7C	.35	MODE VALVE RUN 1/WAKE-UP
A7	ORN	7E	.35	OUTSIDE AIR VALVE RUN 1/WAKE-UP
A8	ORN	7H	.35	COOLING FAN BUFFER RUN 1/WAKE-UP
A9	ORN	7G	.35	CHARGER RECEPTACLE COOLANT VALVE RUN 1/WAKE-UP
A10	WHT	26B	.35	BPM WAKE-UP
All	BRN/WHT	309C	.35	RF PARK LAMP-HI
A12	BRN/WHT	3O9B	.50	RF MARKER LAMP-HI

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Bl				
B2	WHI’	2027 B	.35	HTCM WAKE-UP IN
B3	WHT	2027F	.35	BPM WAKE-UP IN
B4	WHT	2027C	.35	APM WAKE-UP IN
B5				
B6	PPL	2O25B	.35	LOW NOTE HORN PASS THRU
B7	PNK	2026B	.35	HIGH NOTE HORN PASS THRU
B8				
B9				
B10	TAN	800H	.35	HTCM SERIAL DATA
Bll	TAN	800G	.35	BPM SERIAL DATA
B12	TAN	800K	.35	SDM SERIAL DATA

CamScanner

HARNESS CONNECTOR FACES

RIGHT HAND JUNCTION BLOCK (RHJB) (J3)

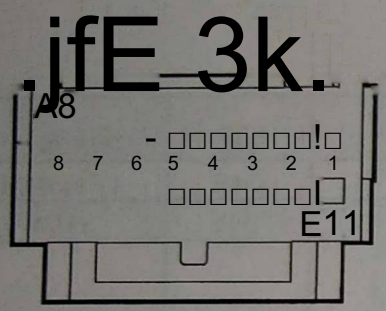

PSMELC67201A A

BLACK
12084944

RIGHT HAND JUNCTION BLOCK - J3 - 12084944				
CAVITY	WIRE COLOR	CIRCUIT NO.	WIRE-SIZE	CIRCUIT FUNCTION
A1	DKBLU	781C	.35	RH DOOR LOCK SWITCH - UNLOCK
A2	LTBLU	780C	.35	RH DOOR LOCK SWITCH - LOCK
A3	DKBLU	666	.50	RH POWER WINDOW MOTOR
A4	BRN	667	.50	RH POWER WINDOW MOTOR
A5	ORN	740	.35	RH DOOR LOCK SWITCH B+
A6	TAN	294C	.35	RH DOOR LOCK MOTOR
A7	GRA	295C	.35	RH DOOR LOCK MOTOR
A8				
B1	PPL/WHT	889B	.35	RH MIRROR HORIZON-TAL MOTOR
B2	LTGRN	200C	.35	RF SPEAKER +
B3	DK GRN	117C	.35	RF SPEAKER -
B4	BLK	350J	.35	RH DOOR JAMB SWITCH GROUND
B5	LT GRN	1495C	.35	RH DOOR JAMB SWITCH HI
B6				
B7	BRN/WHT	1498B	.35	RH MIRROR MOTOR B+
B8	RED/WHT	881B	.35	RH MIRROR VERTICAL MOTOR

Location: Passenger Compartment, Under Right Side of I/P

CamScanner

RIGHT HAND JUNCTION BLOCK (RHJB) (J5)

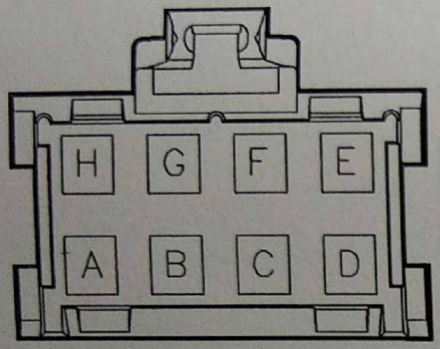

PSMELC67248AA

GRAY
12110626

RIGHT HANI) JUNCTION BLOCK - J5 - 12110626				
CAVITY	**WIRE COLOR**	**CIRCUIT NO.**	**WIRE-SIZE**	**CIRCUIT FUNCTION**
A	BLK	350F	1.0	FRONT END COOLING FAN BUFFER GROUND
B	RED	842	1.0	HAZ/RUN/ACC/MISC FUSE B+
C	RED	1442B	1.0	R HDLP LO FUSE B+
D				
E	BLK	350N	1.0	BLOWER MOTOR GROUND
F				
G	BLK	227C	1.0	WIPER MOTOR LO
H	DKBLU	227E	.35	WASHER PUMP LO

Location: Passenger Compartment, Under Right Side of I/P

CamScanner

HARNESS CONNECTOR FACES

RIGHT HAND JUNCTION BLOCK (RHJB) (J6)

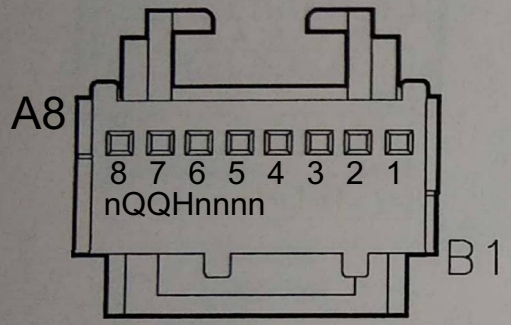

PSMELC67179AA

RED
12092632

RIGHT HAND JUNCTION BLOCK - J6 - 12092632				
CAVITY	WIRE COLOR	CIRCUIT NO.	WIRE-SIZE	CIRCUIT FUNCTION
A1	BRN	9B	.35	REAR LICENSE LAMPS HI REAR SIDE MARKER LAMPS HI REAR TAIL/STOP LAMPS HI
A2	BRN	41F	.35	DEFOGGER MODULE RUN 1
A3	ORN	1732G	.35	FOUR BAR LAMP HI
A4	ORN	I732F	.35	INSIDE REAR VIEW MIRROR
A5	ORN	1732E	.35	CARGO LAMP SWITCH HI
A6	YEL/BLK	1334B	.50	LR TURN LAMP HI
A7	DK GRN/WHT	1335B	.35	RRTURN LAMP Hl
A8	ORN	1440	.35	POWER OUTLET B+
Bl	LT BLU	20B	1.0	STOP LAMPS B+ PASS THRU
B2	BLK	350M	.35	INSIDE REAR VIEW MIRROR GROUND
B3	WHT	193B	.35	REAR DEFOGGER COMMAND - DEFOG-GER MODULE
B4	YEL	82OB	.50	CENTER HIGH MOUNTED STOP LAMP -HI
B5	WHT	108C	.35	BAIT PACK FAN PASS THRU
B6	LT BLU	156B	.35	FOUR BAR LAMP LO
B7	WHT	156	.35	INSIDE REAR VIEW MIRROR LO
B8	LT ORN	24B	1.0	BACKUP LAMPS HI PASS THRU

Location: Passenger COmpartment, Under Right Side of I/P

CamScanner

RIGHT HAND JUNCTION BLOCK (RHJB) (J8)

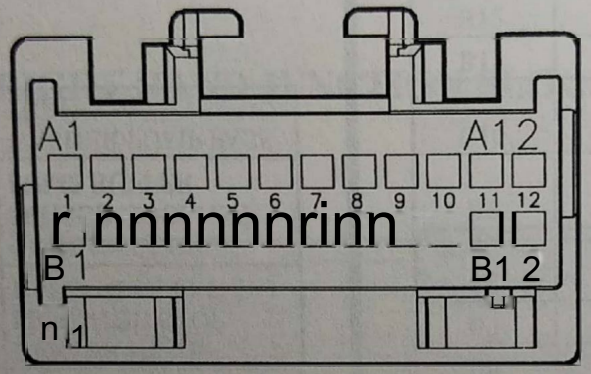

PSMELC6718OAA

PINK
12110244

Location: Passenger Compartment, Under Right Side of I/P

CamScanner

HARNESS CONNECTOR FACES

RIGHT HANI) JUNCTION BLOCK - J8 - 12110244

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Al	BRN	9A	.35	REAR LICENSE LAMPS HI REAR SIDE MARKER LAMPS HI REAR TAIL/STOP LAMPS HI
A2	YEL/BLK	I334A	.35	LR TURN LAMPS PASS THRU
A3	LT GRN	**1966A**	.35	TURN/HAZ/DRL MODULE
A4	DK GRN/WHT	1335A	.35	TURN/HAZ/DRL MODULE-RH TURN IN
A5	LTBLU	20A	.80	REAR STOP LAMPS HI PASS THRU
A6	YEL	820A	.35	CENTER HIGH MOUNTED STOP LAMP HI PASS THRU
A7	ORN	7A	.35	COOLANT LEVEL SENSOR COOLANT PUMP BUFFER
A8	RED	228A	.35	WASHER PUMP PASS THRU

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A9	BRN	41A	.35	LHJB RUN 1
A10	BRN	4IW	.35	RSA RUN 1
All	ORN	2040	.35	RADIO B+
A12	BRN/WHT	309A	.35	RF PARK LAMP HI
Bl	DK BLU/WHT	1495E	.35	RSA DOOR AJAR SIGNAL
B2	WHT	194	.35	RSA UNLOCK COMMAND
B3	TAN	819	.35	RSA RUN 1 COMMAND
B4	LT GRN	275A	.35	PRND SWITCH PASS THRU
B5	DKGRN	117B	.35	RF SPEAKER -
B6	LT GRN	200B	.35	RF SPEAKER +
B7	DK BLU	1393	.35	RSA 1NT LAMPS LO
B8	ORN	248	.35	RSA RUN 2 COMMAND
B9	PPL	1697A	.35	TURN/HAZ/DRL MODULE IN
BIO	LT GRN	1478 A	.35	COOLANT LEVEL SENSOR PASS THRU
Bll	DKGRN	1399	.35	RSA RAP COMMAND
B12	WHT	26C	.35	BATTERY RECOVERY SWITCH PASS THRU

oamScanner

RIGHT HAND JUNCTION BLOCK (J9)

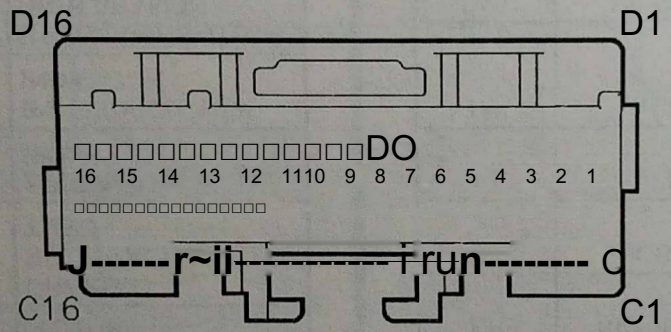

PSMELC67251AA

PINK
12110245

Location: Passenger Compartment, Under Right Side of I/P

HARNESS CONNECTOR FACES

RIGHT HAND JUNCTION BLOCK-J9-12110245

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Cl	DKBLU/WHT	1495A	.35	DOORJAMB SWITCH HI
C2	TAN	167	.35	RS A RH WINDOW DOWN
C3	BLK/WHT	238A	.35	LH SEAT BELT PASS THRU
C4	BRN	241A	.35	PSCM RUN 2
C5	ORN	294A	.35	LH DOOR LOCK MOTOR
C6	GRA	295A	.35	LH DOOR LOCK MOTOR
C7	PNK	213A	.35	CHARGE RECEPTACLE PASS THRU
C8	BRN	358A	.35	AIR BAG INDICATOR IPC
C9	BRNAVHT	419A	.35	IPC SERVICE NOW INDICATOR
CIO	PPL	524A	.35	HEADLAMP SWITCH HIGH BEAM IN
Cll	YEL	525A	.35	HEADLAMP SWI TCH LOW BEAM IN
C12	LTBLU	166	.35	RSA RH WINDOW DOWN
C13	RED/BLK	780A	.35	LH DOOR LOCK SWITCH - LOCK
C14	BLK	1051	.35	RADIO GROUND
CIS	WHT	852A	.35	BTCM ABS INDICATOR
C\6	WHT	2027 A	35	CHARGER RECEPTACLE

CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
DI	WHT	2027E	.35	BATTERY RECOVERY SWITCH WAKE-UP
D2	RED	2014A	.35	COOLANT PUMP BUFFER PASS THRU
D3	YEL	234A	.35	IPC SEAT BELT INDICATOR
D4	TAN	800J	.35	IPC SERIAL DATA
D5	PPL/WHT	889A	.35	RH HORIZONTAL MIRROR MOTOR
D6	BRN/W11T	1498A	.35	RH MIRROR MOTOR Hl
D7	DKBLU	1660A	.35	BTCM LOW TRAC INDICATOR
D8	PPL	1885A	.35	PCM SERVICE SOON INDICATOR
D9	RED	2018A	.35	IPC REDUCED PERFORMANCE INDICATOR
DIO	LTGRN	2O3OA	.35	IPC TEMP IND
Dll	PNK	2026A	.35	HIGH NO TE HORN PASS THRU
D12	PPL	2O25A	.35	LOW NOTE HORN PASS THRU
D13	RED/WHT	881A	.35	RH VERT MIRROR MOTOR
DI4	LT CRN	838A	.35	TURN/HAZ/DRL MOD
DI5	PPL	1807A	.35	BPM CLASS 2
DI6	ORN/BLK	781A	.35	RE LH DOOR LOCK SWITCH - UNLOCK

CamScanner

RIGHT HAND JUNCTION BLOCK (J12)

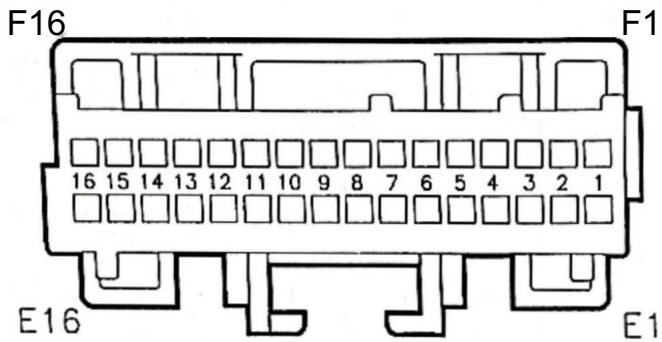

TAN

PSMELC67249AA

12110112

Location: Passenger Compartment, Under Right Side of I/P

CamScanner

HARNESS CONNECTOR FACES

RIGHT HAND JUNCTIO1S BLOCK-J12-12110112

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
El	BLK/WHT	35OH	.35	HTCM GROUND
E2	BLK	350S	.35	BPM GROUND
E3	BLK/WHT	35OB	.35	HIGH NOTE HORN GROUND
E4	BLK	350A	.35	LOW NOTE HORN GROUND
E5	BLK/WHT	350G	.35	RF MARKER LAMP GROUND
E6	BLK/WHT	1751	.35	SDM GROUND
E7	BLK/WHT	350C	.50	RF PARK/TURN LAMP GROUND
E8	BLK	350E	.35	BPM GROUND
E9				
E10				
Ell	BLK	552B	.35	LOW PRESSURE SENSOR GROUND
E12	BLK	552C	.35	HIGH PRESSURE SENSOR GROUND
El 3	BLK/WHT	350R	.35	REVERSING VALVE GROUND
E14	BLK	35OK	.35	BPM GROUND
E15	BLKAVHT	552E	.35	DISCHARGE TEMP SENSOR
E16	BLK	552F	.35	OUTSIDE TEMP SENSOR GROUND

CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Fl	BLK/WHT	552G	.35	REFRIGERANT TEMP SENSOR GROUND
1 F2	BLK	552K	.35	COOLANTTEMP SENSOR GROUND
F3	BLKAVHT	552H	.35	COOLANT PUMP TEMP SENSOR GROUND
F4				
F5				
F6				
F7				
F8				
F9				
F10	GRA	605A	.35	HTCM +5V REF
Fll	GRA/BLK	6O5B	.35	MODE VALVE +5V REF
F12	GRA	605C	.35	OUTSIDE AIR VALVE ACTUATOR +5V REF
F13	GRA/BLK	605E	.35	COOLANT RECOVERY CHECK VALVE +5V REF
F14	GRA/BLK	605F	.35	LOW PRESSURE SENSOR +5V REF
F15	GRA/BLK	605G	.35	HIGH PRESSURE SENSOR +5V REF
FI6	GRA	605H	.35	CHARGER RECEPTACLE COOLANT VALVE +5V REF

CamScanner

RIGHT HAND JUNCTION BLOCK (J13)

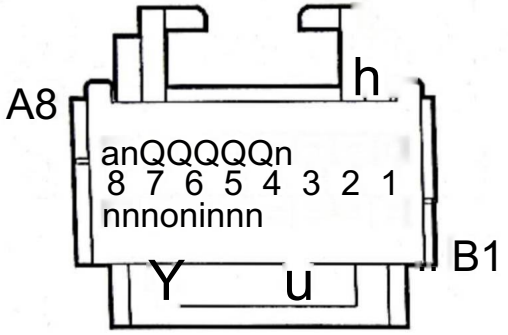

PSMELC67I94AA

GREEN
12110259

RIGHT HAND JUNCTION BLOCK - J 13 - 12110259				
CAVITY	WIRE COLOR	CIRCUIT NO.	WIRE-SIZE	CIRCUIT FUNCTION
Al	BRN	41	.35	RHTT BANK RUN 1
A2				
A3	BRN	358	.35	AIR BAG INDICATOR
A4	BLK	450	.35	RHTTBANK GROUND
A5				
A6	YEL	234	.35	SEAT BELT INDICATOR
A7	RED	2018	.35	REDUCED PER-FORMANCE INDICATOR
A8				
Bi	LTGRN	1660	.35	LOW TRAC INDICATOR
B2				
B3	WHT	852	.35	ANTILOCK INDICATOR
B4				
B5	BRN/WHT	419	.35	SERVICE NOW INDICA-TOR
B6	BLK/WHT	2030	.35	TEMP INDICATOR
B7	BRN	1885	.35	SERVICE SOON INDICA-TOR
B8				

Location: Passenger Compartment, Under Right Side of I/P

CamScanner

HARNESS CONNECTOR FACES

RIGHT I/P - BODY INLINE #1 - FEMALE CONNECTOR

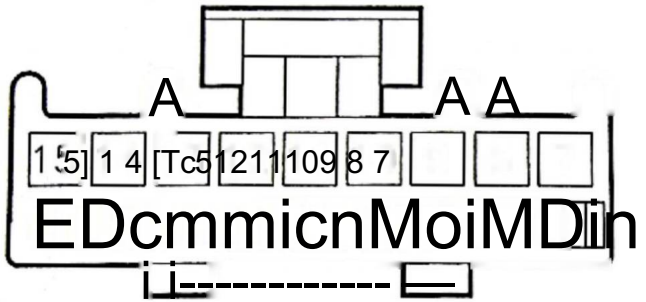

PSMELC67212AA

BLACK
12064980

RIGHT I/P - BODY INLINE #1 - 12064980				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
7	LT BLU / BLK	II66B	.35	KEYPAD 1/2 OUT
8	GRA/BLK	1167B	.35	KEYPAD 3/4 OUT
9	LTGRN/BLK	I168C	.35	KEYPAD 5/6 OUT
10	ORN/BLK	1169C	.35	KEYPAD 7/8 OUT
11	PNK/BLK	1170C	.35	KEYPAD 9/0 OUT
12	YEL/BLK	373C	.35	KEYPAD +5V REF
13	RED/BLK	1165C	.35	KEYPAD BACK-LIGHT
14	LTGRN	105 5A	.35	CHECK TIRE PRES-SURE SWITCH HI
15				

Location: Passenger Compartment, Under Right Side of I/P

CamScanner

RIGHT I/P - BODY INLINE #1 - MALE CONNECTOR

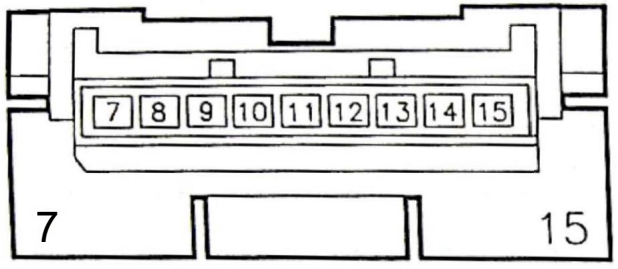

PSMELC67225AA

BLACK
12040905

RIGHT I/P-BODY INLINE##! - 120649K0				
CAVITY	**WIRECOLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
7	LT BLU/BLK	1166B	.35	KEYPAD 1/2 OUT
8	GRA/BLK	1I67B	.35	KEYPAD 3/4 OUT
9	LTGRN/BLK	II68C	.35	KEYPAD 5/6 OUT
10	ORN/BLK	I169C	.35	KEYPAD 7/8 OUT
11	PNK/BLK	1170C	.35	KEYPAD 9/0 OUT
12	YEL/BLK	373C	.35	KEYPAD +5V REF
13	RED/BLK	I165C	.35	KEYPAD BACK-LIGHT
14	LT GRN	1055A	.35	CHECK TIRE PRES-SURE SWITCH HI
15				

Location: Passenger Compartment, Under Right Side of I/P

CamScanner

HARNESS CONNECTOR FACES

RIGHT I/P - BODY INLINE #2 - FEMALE CONNECTOR

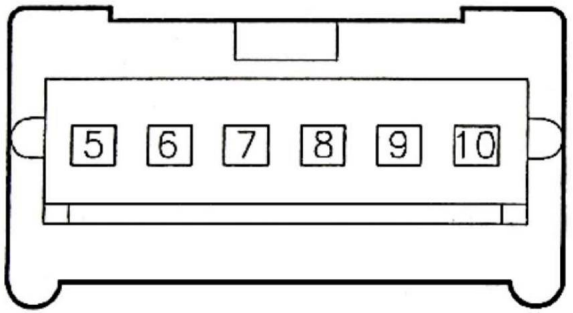

BLACK
12040953

PSMELC67226AA

RIGHT I/P-BODY INLINE #2- 12040953				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
5	BRN	I99C	.35	LR SPEAKER +
6	YEL	116C	.35	LR SPEAKER-
7	LTBLU	I15C	.35	RR SPEAKER-
8	DK BLU	46C	.35	RR SPEAKER +
9				
10				

Location: Passenger Compartment, Under Right Side of **I/P**

CamScanner

RIGHT I/P – BODY INLINE #2 – MALE CONNECTOR

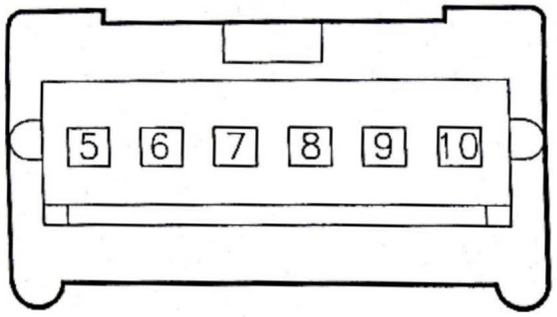

BLACK PSMELC67226AA
12040952

RIGHT I/P – BODY INLINE #2 – 12040952				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
5	BRN	199B	.35	LR SPEAKER +
6	YEL	116B	.35	LR SPEAKER –
7	LT BLU	115B	.35	RR SPEAKER –
8	DK BLU	46B	.35	RR SPEAKER +
9				
10				

Location: Passenger Compartment, Under Right Side of I/P

CamScanner

HARNESS CONNECTOR FACES

RUN/LOCK SHIFTER ASSEMBLY (RSA)

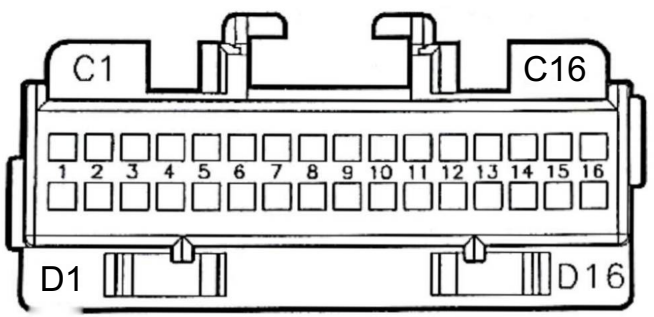

PSMELC67247AA

BLACK

12045575

Location: Passenger Compartment, Behind RSA

CamScanner

RUN/LOCK SHIFTER ASSEMBLY (R5A) - 12045575

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Cl	ORN	340	.35 I	DIMMER B+
C2	ORN	240	.35	3+
C3	LT BLU/BLK	1166B	.35	KEYPAD 1/2 IN
C4	GRA/BLK	1167B	.35	KEYPAD 3/4 IN
C5	LT GRN/BLK	1168C	.35	KEYPAD 5/6 IN
C6	TAN	800J	.35	SERIAL DATA
C7	TAN	800N	.35	SERIAL DATA
C8	LT GRN	275C	.35	PARK SELECT IN
C9	BRN/WHT	301E	.35	PARKLAMPS ON IN
C10	RED/BLK	1165C	.35	KEYPAD BACKLIGHT
Cll	PNK	314	.35	RADIO WAKE-UP IN
C12	YEL/BLK	373C	.35	KEYPAD +5V REF
C13	WHT	194	.35	DOOR UNLOCK COMMAND OUT
C14	GRA	728	.35	SECURITY INDICATOR OUT
C15	LT GRN	80B	.35	VEHICLE IN RUN/ACC OUT
C16	TAN	819	.35	RUN 1 COMMAND OUT

CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION |
DI	PNK/BLK	1170C	.35	KEYPAD 9/0 IN
D2	BRN/WHT	23OB	.35	DIM LEVEL OUT
D3	ORN/BLK	1169C	..35	KEYPAD 7/8 IN
D4	LT GRN	1055A	.35	CHECK TIRE PRESSURE IN
D5	DK BLU/WHT	1495E	.35	DOOR AJAR IN
D6				
D7	TAN	167	.35	RH POWER WINDOW DOWN OUT
D8	LTBLU	166	.35	RH POWER WINDOW UP OUT
D9	GRA	1136	.35	LH POWER WINDOW DOWN OUT
DIO	TAN	1300	.35	LH POWER WINDOW UP OUT
Dll	DKBLU	1393	.35	INT LAMPS CONTROL OUT
D12	DKGRN	1399	.35	ACC COMMAND OUT
DI3	ORN	248	.35	RUN 2 COMMAND OUT
D14	BRN	41W	.35	BTSI Hl
D15	TAN/WHT	816C	.35	BTSI LO
DI6	BLK	450M	.35	GROUND

CamScanner

HARNESS CONNECTOR FACES I

SECONDARY REAR DEFOGGER

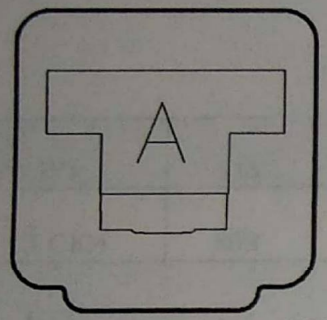

PSMELC67188AA

BLACK
12092133

SECONDARY REAR DEFOGGER - 12092133				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	RED	I342B	3.0	SECONDARY REAR DEFOG - HIGH

Location: Left Side of Rear Back Glass

SECONDARY REAR DEFOGGER - 12092133				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	PPL	681	2.0	SECONDARY REAR DEFOG - LOW

Location: Left Side of Rear Back Glass

SENSING AND DIAGNOSTIC MODULE (SDM)

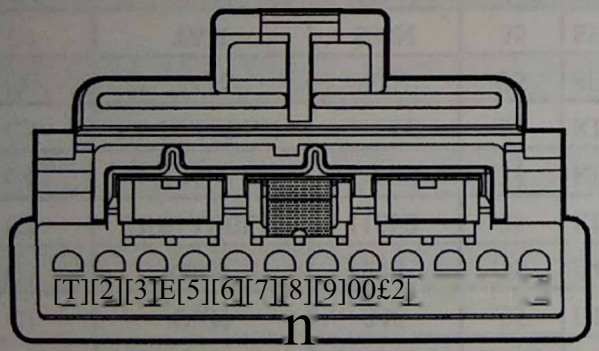

12160351
YELLOW

PSMELC66892AA

SENSING AND DIAGNOSTIC MODULE - 12160351				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
1	WHT/BLK	1403	0.50	PASSENGER HI
2	WHT	347	**0.50**	DRIVER Hl
3	DKGRN	348	0.50	DRIVER LO
4	DK GRN/WHT	1404	0.50	PASSENGER LO
5	TAN	800K	0.35	SERIAL DATA
6	BLK/WHT	1751	0.50	GROUND
7	BRN	358E	0.35	AIR BAG IND OUT
8	BLK/WHT	238E	0.35	DRIVER SEAT BELT IN
9				
10	YEL	1139	0.35	RUN 1
11				
12				

Location: RH Side of Battery Tunnel Under Carpet.

CamScanner

SIR DRIVER INFLATOR MODULE/IP-HARNESS CONNECTOR (DISABLE)

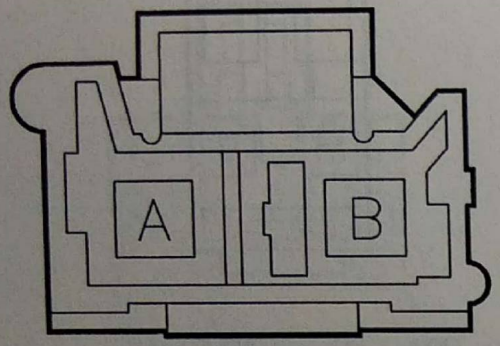

YELLOW
12092865

PSMELC66888AA

SIR DRIVER INFLATOR DISABLE/I/P HARNESS CONNECTOR (DISABLE) - 12092865				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	WHT	347	0.50	DRIVER LOOP HI
B	DK CRN	348	0.50	DRIVER LOOP LO

Location: I/P - Lower Left - Base of Steering Column

SIR DRIVER INFLATOR MODULE - COIL PIGTAIL

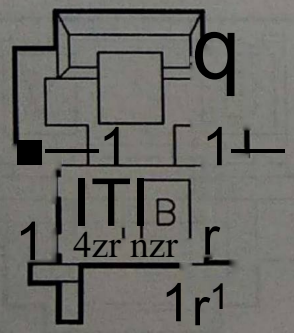

YELLOW
12110500

PSMELC66890AA

SIR DRIVER INFLATOR MODULE - COIL PIGTAIL - 12110500				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	WHT	347	0.50	DRIVER LOOP LO
B	DKGRN	348	0.50	DRIVER LOOP HI

Location: Behind Driver Inflator Module

CamScanner

HARNESS CONNECTOR FACES

SIR INFLATOR DISABLE - COIL PIGTAIL

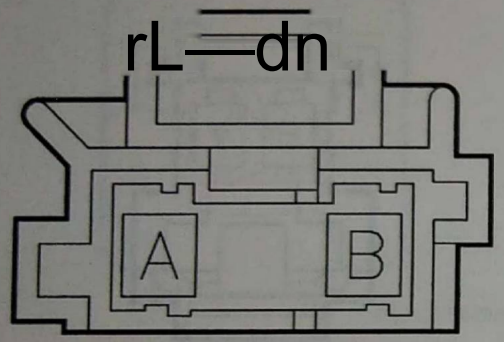

YELLOW
12092865

PSMELC66889AA

SIR INFLATOR DISABLE - COIL PIGTAIL - 12092865				
CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	WHT	347	0.50	DRIVER HI
B	DKGRN	34<8	0.50	DRIVER LO

Location: Passenger Compartment, Under Left Side of I/P - Near Base of Steering Column

SIR PASSENGER INFLATOR MODULE PIGTAIL

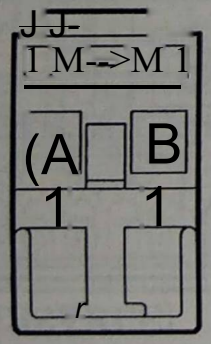

12077921

PSMELC66933AA

SIR PASSENGER INFLATOR MODULE PIGTAIL - 12077921				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	DK GRN/WHT	1403	0.50	PASSENGER HI
B	WHT/BLK	1404	0.50	PASSENGER LO

Location: Passenger Compartment, Under Right Side of I/P

CamScanner

SIR PASSENGER INFLATOR MODULE/IP - HARNESS CONNECTOR (DISABLE)

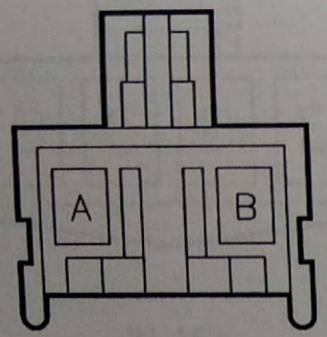

YELLOW
12110288

PSMELC66887AA

SIR PASSENGER INFLATOR MODULE/I/P HARNESS CONNECTOR (DISABLE) - 12110288				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	WHT/BLK	1403	0.50	PASSENGER HI
B	DKGRN	1404	0.50	PASSENGER LO

Location: Passenger Compartment, Under Right Side of I/P

CamScanner

HARNESS CONNECTOR FACES

SPEAKERS - FRONT/REAR

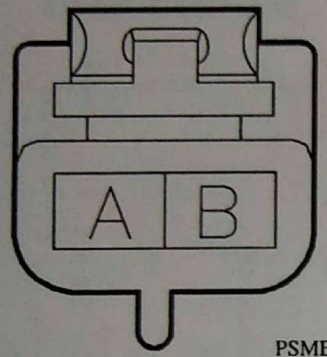

PSMELC68106AB

BLACK
12052832

LEFT FRONT SPEAKER - 12052832				
CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE: SIZE	CIRCUIT FUNCTION
A	GRA	118C	.35	SPEAKER -
B	TAN	201C	.35	SPEAKER +

Location: Left Door

RIGHT FRONT SPEAKER - 12052832				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	DKGRN	117C	.35	SPEAKER-
B	LTGRN	200C	.35	SPEAKER +

Location: Right Door

LEFT REAR SPEAKER - 12052832				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	YEL	116C	.35	SPEAKER -
B	BRN	I99C	.35	SPEAKER +

Location: Rear Package Shell

RIGHT REAR SPEAKER - 12052832				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	LTBLU	115C	.35	SPEAKER-
B	DKBLU	46C	.35	SPEAKER +

Location: Rear Package Shelf

CamScanner

HARNESS CONNECTOR FACES

STOPLAMP SWITCH

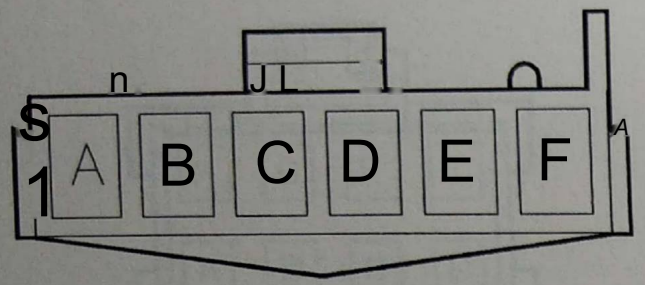

BLACK
12040551

PSMELC67258AA

STOPLAMP SWITCH - 12040551				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A	WHT	17	1.0	B+ ou r TO STOP LAMPS
B	RED	142B	1.0	B+
C	BRN	41R	.80	RUN 1
D	BRN	86B	.80	BRAKE SWITCH OUT TOPCM
E				
F				

Location: Passenger Compartment, Under Left Side of I/P - Near Brake Pedal

CamScanner

HARNESS CONNECTOR FACES

TRUNK JUNCTION BLOCK

(JD

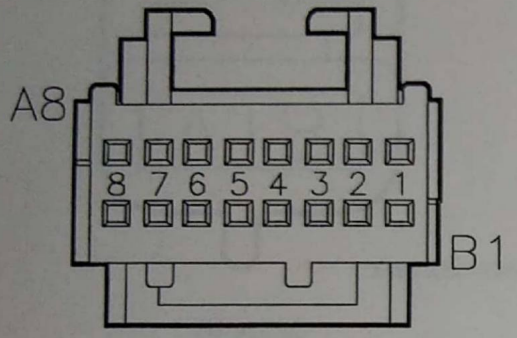

PSMELC67194AA

GREEN
12110259

TRUNK JUNCTION BLOCK - Ji - 12110259				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A1	LTGRN	24B	1.0	BACKUP LAMPS HI PASS THRU
A2	LTBLU	20B	1.0	STOP LAMPS HI PASS THRU
A3	BRN	9B	.35	LR LAMPS PTC B+ RR LAMPS PTC B+
A4	BRN	41F	.35	DEFOG MODULE RUN 1
A5	DKBLU	809E	.35	LR LICENSE LAMP HI
A6	DKGRN	1335B	.35	RR TURN LAMP HI PASS THRU
A7	WHT	609E	.35	RR LICENSE LAMP HI
A8	YEL	1334B	.50	LR TURN LAMP HI PASS THRU
Bl	BLK	150H	.35	CARGO LAMP GROUND
B2	WHT	193B	.35	REAR DEFOG COMMAND TO DEFOG MODULE
B3	BLK	150B	.50	CENTER HIGH MOUNTED STOP LAMP GROUND
B4	BLK	I50C	.35	LR LICENSE LAMP GROUND
B5	BLK	150F	.35	EXTERNAL KEYPAD GROUND
B6	BLK	150J	.35	CIGAR LIGHTER GROUND
B7	BLK	150T	.35	CHECK 'FIRE PRESSURE SWITCH GROUND
B8	BLK	150E	.35	RR LICENSE LAMP GROUND

Location: Right Side of Trunk Compartment, Under Carpet

CamScanner

TRUNK JUNCTION BLOCK (J2)

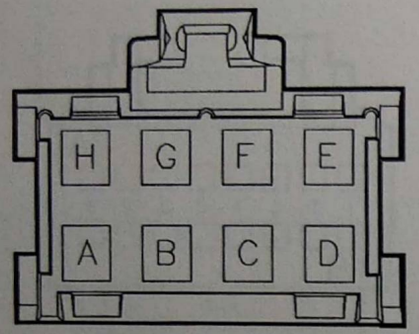

PSMELC67248AA

GRAY
12110626

TRUNK JUNCTION BLOCK-J2- 12110626				
CAVITY	**WIRE COLOR**	**CIRCUIT NUMBER**	**WIRE SIZE**	**CIRCUIT FUNCTION**
A				
B				
C				
D	BLK	I50L	1.0	BATTERY PACK FAN GROUND
E				
F				
6	LTBLU	292	2.0	PRIMARY REAR DE-FOG LO - OUT FROM DEFOG MODULE
H	PPL	681	2.0	SECONDARY REAR DEGOG LO - OUT FROM DEFOG MOD-ULE

Location: Right Side of Trunk Compartment, Under Carpet

CamScanner

HARNESS CONNECTOR FACES

TRUNK JUNCTION BLOCK (J3)

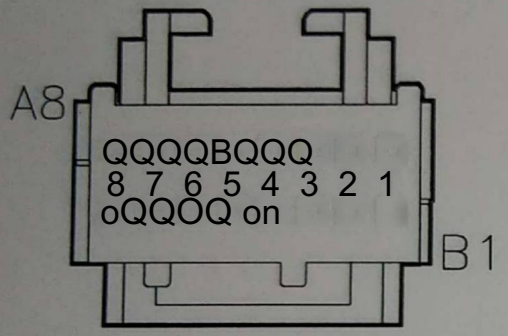

GREEN
12110259

PSMELC67I94AA

TRUNK JUNCTION BLOCK - J3 - 12110259				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Al	DK GRN/WHT	1335F	.50	RRTURN LAMP HI
A2	LTBLU	20G	.50	RR STOP LAMP HI
A3	WHT	609C	.35	RR MARKER LAMP HI
A4	WHT	609B	.50	RR TAIL LAMP HI
A5				
A6				
A7	BLK	150P	.35	RR MARKER LAMP GROUND
A8	BLK	150S	.50	RR TAIL/STOP LAMP GROUND
Bl	LT GRN	24F	.50	RH BACKUP LAMP HI
B2				
B3				
B4				
B5				
B6				
B7	BLK	150R	.50	RR TURN LAMP GROUND
B8	BLK	150G	.50	RR BACKUP LAMP GROUND

Location: Right Side of Trunk Compartment, Under Carpet

CamScanner

TRUNK JUNCTION BLOCK (J4)

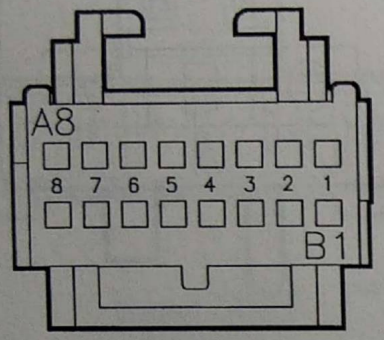

PSMELC67201AA

BLACK
12084944

TRUNK JUNCTION BLOCK - J4 - 12084944				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
Al	YEL/BLK	1334F	.50	LR TURN LAMP HI
A2	LT BLU	20H	.50	LR STOP LAMP HI
A3	DKBLU	809B	.50	LR TAIL LAMP Hl
A4	DKBLU	809C	.35	LR MARKER LAMP HI
A5				
A6				
A7	BLK	150PP	.35	LR MARKER LAMP GROUND
A8	BLK	150RR	.50	LR TURN LAMP GROUND
Bl	LTGRN	24G	.50	LR BACKUP LAMP HI
B2				
B3				
B4				
B5				
B6				
B7	BLK	150SS	.50	LR TAIL/STOP LAMP GROUND
B8	BLK	150GG	.50	LR BACKUP LAMP GROUND

Location: Right Side of Trunk Compartment, Under Carpet

CamScanner

HARNESS CONNECTOR FACES

TRUNK LAMP

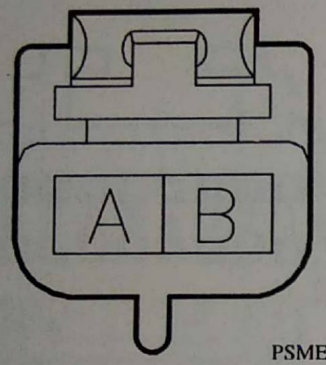

PSMELC68106AB

BLACK
12052832

TRUNK LAMP - 12052832				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK	150H	.35	GROUND
B	ORN/BLK	737	.35	FROM TRUNK LAMP SWITCH

Location: Trunk Compartment, Center of Package Shelf Near Center High Mounted Stop Lamp/CHMSL

TRUNK LAMP SWITCH

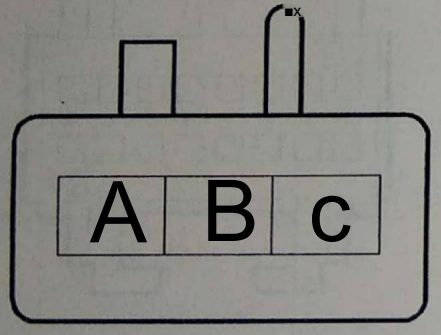

PSMELC67I86AA

BLACK
12047781

TRUNK LAMP SWITCH - 12047781				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	ORN/BLK	737	.35	SWITCH HI
B	ORN	1732E	.35	TO TRUNK LAMP
C				

Location: Trunk Compartment, Part of Latch Assembly

CamScanner

TURN/HAZARD SWITCH

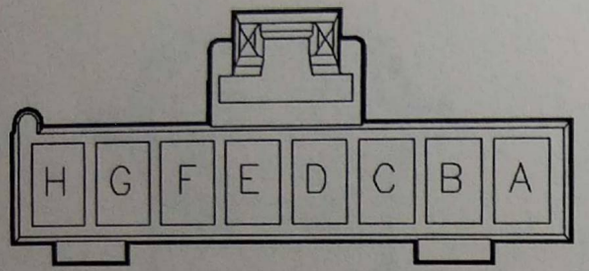

PSMELC67261AA

DARK GRAY
12092237

TURN/HAZARD SWITCH - 12092237				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A				
B	OK BLU/WHT	1415	.35	RIGHT TURN OUT
C	LT BLU/WHT	1414	.35	LEFT TURN OUT
D	ORN	640H	.35	HAZARD SWITCH B+
E	BRN	41G	.35	TURN SWITCH RUN 1
F				
G				
H	BLK	28	.35	HORN OUT

Location: Passenger Comartmcnt, Attached to Steering Column

CamScanner

HARNESS CONNECTOR FACES

WASHER PUMP

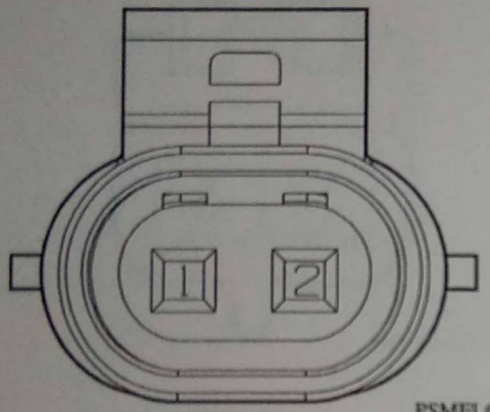

12177127

WASHER PUMP - 12177127				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
1	RED	228B	.35	WASHER PUMP HI
2	DKBLU	227E	.35	WASHER PUMP LO

Location: Underhood. in Washer Fluid Bottle

CamScanner

WHEEL SPEED SENSORS

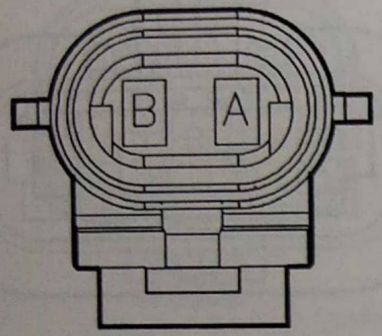

LIGHT GRAY
12052644

PSMELC67178AA

WHEEL SPEED SENSOR - LEFT FRONT - 12052644				
CAVITY	WIRECOLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	LT BLU	830	.50	WSS HI
B	YEL	873	.50	WSS LO

Location: At Left Front Wheel Bearing

WHEEL SPEED SENSOR - RIGHT FRONT - 12052644				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	DKGRN	872	.50	WSS HI
B	TAN	833	.50	WSS LO

Location: At Right Front Wheel Bearing

WHEEL SPEED SENSOR - LEFT REAR - 12052644				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK	884C	.80	WSS HI
B	RED	885C	.80	WSS LO

Location: At Left Rear Wheel Bearing

WHEEL SPEED SENSOR - RIGHT REAR - 12052644				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BRN	882C	.80	WSS HI
B	WHT	883C	.80	WSS LO

Location: At Right Rear Wheel Bearing

CamScanner

HARNESS CONNECTOR FACES

WINDSHIELD WIPER/WASHER (WSW) INLINE - FEMALE CONNECTOR

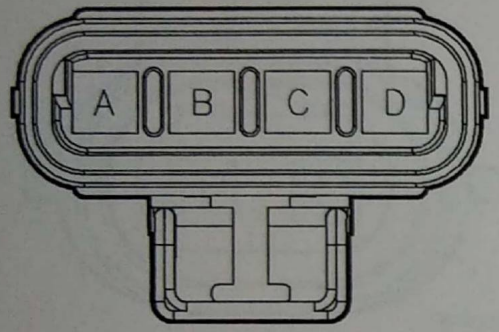

PSMELC67176AA

DARK GRAY
12129565

WINDSHIELD WIPER/WASHER INLINE - 12129565				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BRN	227B	1.0	WIPER/WASHER LO
B	BLK	407E	.35	RE BRAKE PRESSURE SENSOR GROUND
C	LT BLU/BLK	416E	.35	RE BRAKE PRESSURE SENSOR OUT
D	LT BLU	2036B	.35	RE BRAKE PRESSURE SENSOR OUT

Location: Underhood, Left Side Front of Dash

WINDSHIELD WIPER/WASHER (WSW) INLINE - MALE CONNECTOR

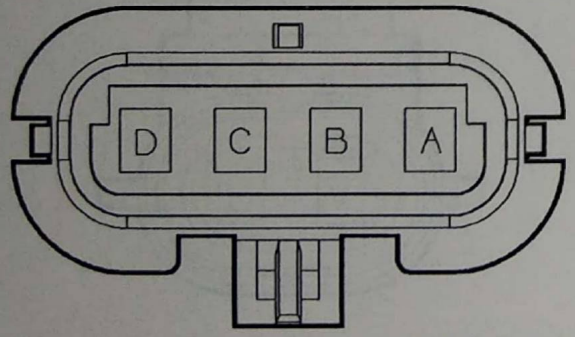

PSMELC67219AA

DARK GRAY
12129600

WINDSHIELD WIPER/WASHER INLINE - 12129600				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	BLK	227C	1.0	WIPER/WASHER LO
B	BLK	407G	.35	RF BRAKE PRESSURE SENSOR GROUND
c	GRA	416G	.35	RE BRAKE PRESSURE SENSOR OUT
D	LT BLU	2036C	.35	RE BRAKE PRESSURE SENSOR OUT

Location: Underhood, Left Side of Dash

CamScanner

WIPER MOTOR

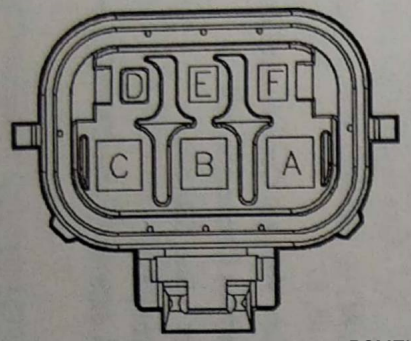

PSMELC67I77AA

BLACK
12129126

WIPER MOTOR - 12129126				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A	DK BLU	227B	1.0	WIPER MOTOR LO
B	RED	42B	1.0	B+
C	PPL	92	1.0	WIPER/WASHER SWITCH (HI) IN
D	DKGRN	113	.35	WIPER/WASHER REQUEST IN
E	GRA	112	1.0	WIPER DELAY IN

Location: Plenum, Right Side Under Leaf Screen

WIPER/WASHER SWITCH

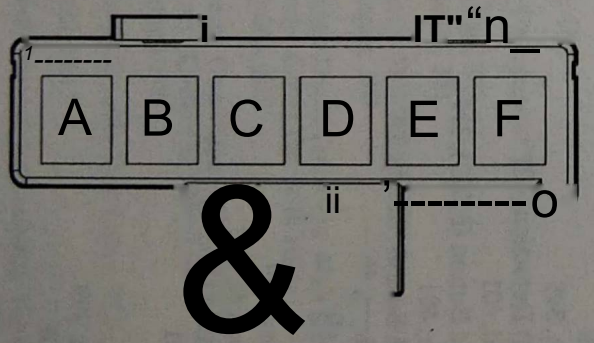

PSMELC67260AA

BLACK
12092254

WIPER/WASHER SWITCH -12092254				
CAVITY	WIRE COLOR	CIRCUIT NUMBER	WIRE SIZE	CIRCUIT FUNCTION
A				
B	GRA	112	1.0	WIPER DELAY OUT
C	DKGRN	113	.35	WIPER/WASHER REQUEST OUT
D	PPL	92	1.0	WIPER/WASHER SWITCH (HI) OUT
E	RED	228C	1.0	WASHER SWITCH OUT
F	RED	42A	**1.0**	B+

Location: Passenger Compartment, Attached to Steering Column

CamScanner

Index

A

Accessor>z AC and DC Power Module, 70, 527

Accessors' AC and DC Power Module Component Location, 74

Accessory Mode/RAP Stays On In Lock Mode, 453

Accessory Power Module (APM), 528

Air Bag (SIR) Telltale, 290

All Courtesy Lamps Inoperative All The Time, 308

All Courtesy Lamps Stay OnE(For Up To 20 Minutes After Vehicle Is Turned Off), 309

All Park and Markers Out, 180

All Rear Park Lamps Inoperative (Fronts Are Ok), 191

All Stop Lamps Inoperative (Left Rear, Right Rear and Center High Mounted Stop Lamp CHMSL), 188

Amperage (Current), 54

Antenna System Test, 409

Antenna Systems
- Test Antenna, 403
- Using a Test Antenna, 404

Anti-Lock Telltale, 293

Anti-lock Telltale Inoperative/On All The Time, 500

Antilock Brake System Component Location View, 102

Audio Systems, 395
- Cassette Tape Player, 398
  - CD Eject, 400
  - CD Load, 400
  - Compact Disc Player, 399
  - DOLBY, 399
  - Eject Button, 398
  - Error (ERR) Detection, 401
  - Fast Forward, 401
  - Fast Forward Button (FWD), 399
  - Fast Reverse, 401
  - Fast Reverse Button (REV), 399
  - Mode Switching, 401
  - NR Button, 401
  - Play, 400
  - Power Cycling, 399
  - Priority Structure, 400
  - Program Button (PROG), 399
  - Random, 401
  - Scan, 400
  - Seek, 400
  - Seek Button, 399
  - Speakers, 401
  - Stop, 400
  - Tape Load, 398
  - Theft Deterrent (Theft Lock), 401
  - VF Display, 401
- Diagnosis
  - AM Stereo, 403
  - Antenna Systems, 403
  - FM Stereo, 403
  - Radio, 402
  - Radio Inoperative Hints, 402
  - Radio Noise Hints, 403
  - Tape Player Will Not Work, 404
- Diagnosis/Troubleshooting Hints, 402
- Radio Controls
  - AM-FM Switching, 396
  - Balance, 396
  - Bass and Treble Control, 396
  - Circuit Operation, 395
  - Fade Control, 396
  - Power Button (PWR), 395
  - Preset Scan, 397
  - Recall Button (RCL), 396
  - Scan Buttons, 397
  - Seek Buttons, 397
  - Setting Time of Day, 398
  - Station Preset Setting, 397
  - Tone Control, 398
  - Tune Control, 396
  - Volume Control (VOL), 395

B

Backup Lamp, 76,529

Backup Lamps, 78

Backup Lamps Both Inoperative, Chart 3, 81

Backup Lamps Component Location, 77

Backup Lamps On All the Time, Chart 4,82

Backup Lamps Trouble Tree Index, 78

Battery Life Telltale, 288

Battery Life Telltale Inoperative/On All The Time, 495

Battery Pack
- High Voltage, 84
- Low Voltage, 85, 87

Battery Pack (Low Voltage) Component Location, 93

Battery Pack Cannon Connector, 529

Battery Pack Fan Inline, 530, 531

Battery Pack Inline, 531

Battery Pack Module
- JI, 533
- J2,535

Battery Recovery Switch, 536

Before Trouble Shooting, 49

Blower Motor Module, 536

Both Doors Lock Only (From One Or Both Switches), 340, 341

CamScanner

Both Doors Unlock Only (From One Or Both Switches), 342

Both High Beams On All The Time, 220

Both Low Beams On All The Time, 221

Both Power Mirrors Inoperative In All Directions, 351

Both Side Turn Signals Out, 183

BPM Service Now Telltale, 285

BPM Temp Telltale, 286

Brake Pressure Modulator, 537
12110295.537

Brake Pressure Sensor, 537

Brake Pressure Sensor - Down Stream, 12110192, 537

Brake Solenoid, 538
12052641.538

Brake System, 94

Brake Telltale, 292

Brake Telltale Inoperative/On All The Time, 496

Brake Torque Controller Module, JI, 540

Brake Torque Controller Module
J2,541
J3,542

Brake Torque Controller Module (BTCM) — JI, 12110113,539

Brake Torque Controller Module (BTCM) — J2, 12110626.541

Brake Torque Controller Module (BTCM) - J3, 12129088.542

Brake Transaxle Shift Interlock (BTSI) System, 104

Brake Transaxle Shift Interlock (BTSI) System Component Location, 105

Brake Transmission Shift Interlock (BTSI), 106

Brake Transmission Shift Interlock (BTSI) Solenoid Not Allowing Shift Out of Park, 107

Brake Transmission Shift Interlock (BTSI) Trouble Tree Index, 106

C

Can Shift Out of Park With Foot Off Brake Pedal, 108

Cause—to—Complaint Charts, Diagnosis, 68

Cautions, 50

CCU, General Description, Courtesy Lamp Control, 441

Center High Mounted Stop Lamp, 543

Center High Mounted Stop Lamp (CHMSL) Inoperative (Left Rear and Right Rear Stop Lamps Ok), 171

Charger Receptacle, 544

Charger Receptacle Cannon Connector, 543

Charger Receptacle Coolant Valve, 544

Check the Circuit Schematic, 68

Check Tire Pressure Reset Switch, 545

Check Tire Pressure System (CTPS), 113
Detection, 114
General Description, 113
System Reset and Calibration, 113

Check Tire Pressure System Component Location, 112

Check Tire Pressure System Schematics, 110

Check Tire Pressure Telltale, 289

Check Tire Pressure Telltale Inoperative/On All The Time, 497

Check Tire Pressure Telltale On, 115

Chime Problems, 259

Circuit Schematics, 68

Circuits, 63

Climate Control, 118

Climate Controls Location Views, 127

Compressor Motor Cannon Connector, 545

Connector Jumper Usage, 57

Connector Repair, 59

Connector Views, 68

Continuity, 54

Continuity/Resistance/Diode, 54

Coolant Level Sensor, 546

Coolant Recovery Check Valve, 547

Cooling Fan, 130

Cooling Fan Component Location View, 131

Courtesy Lamps, 301
Interior Lamp, 301

Courtesy Lamps Don't Come On From RSA Dimmer Switch Input, 307

Courtesy Lamps Don't Come On With Left Door Open Only (Come On With Right Door Open), 305

Courtesy Lamps Don't Come On With Right Door Open Only (Come On With Left Door Open), 306

Courtesy Lamps Trouble Tree Index, 301

Cruise Control, 132

Cruise Control Component Location View, 134

Cruise Control Switch, 548

Cut Lead Installation, 59, 60, 62

CamScanner

D

Data Link Connector, 136,549

Data Link Connector Component Location View, 138

Defog Stays On All The Time
(One Or Both Sides), 421

Defogger and Battery Pack Fan Inline, 550

Diagnosis, Circuit Schematics, 68

Diagnostic Service Probe, 56

Diagnostics Using the Diagnostic Service Probe, 56

Digital Multimeter, 53

Digital Multimeter Usage, 53

Dim Illumination Lamps, 140

Dim Illumination Lamps Component
Location View, 141

Diode Testing, 54

Disabling the SIR System, 27

Discharge Temperature Sensor, 551

Display Steering Chime Module (DSCM)
- Display Steering Chime Module (IPC) Trouble Tree Index, 251
- General Description
  - Air Bag Telltale, 250
  - Charge Hours and Charge Indicator, 250
  - Check Messages Warning, 250
  - Energy Remaining (State of Charge), 249
  - Hi Beam, 250
  - IPC Chimes, 250
  - Key Minder, 250
  - Power Use Display, 249
  - PRND (Park, Reverse, Neutral, Drive), 250
  - Range Displays, 249
  - Seat Belt Switch Input, 249
  - Steering Pump Speed, 248
  - TellTale Control, 248
  - Trip/Season Odometer, 250
  - Turn Signal Inputs, 249
  - Vehicle Speed Input, 249

Displays Dark with Park Lamps On (VF Dimming and Backlighting Inoperative), 143

Displays Dimming, 142
- Display Dimming Trouble Tree Index, 142

Doors Do Not Unlock From External Keypad, 344

Doors Won't Lock Or Unlock From One Or Both Switches, 347

Drive Motor Blindmate, 552

Drive Motor Speed / Direction Sensor, 552

Driver Door Jamb Switch, 551

E

Electric Brake Motor, 12176429, 553

Electric Brake Motor - Left Rear , 553

Electric Brake Motor - Right Rear, 553

Electrical Circuits, 68

Electrical Symbols, 52

Enabling the SIR System, 28

EVi Service Manual Comment Form, 655

Exterior Lights, 148,155
- Brake Lights, 155
- Daytime Running Lamps (DRL), 155
- Exterior Lights Trouble Tree Index, 155
  - Multiple Lights Out Trouble Trees, 156
  - Single Lights Out Trouble Trees, 156
- Park/Marker Lamps, 155
- Turn/Hazard Lamps, 155

Exterior Lights Component Location Views, 154

External Keypad, 554

External Keypad (EKP) Inoperative, 457
- Buttons 1/2 or 3/4, 458
- Buttons 5/6 or 7/8, 459
- Buttons 9/0,460

External Keypad (EKP)/Backlighting Inoperative, 456

F

Five-Step Trouble Shooting, 49

Flash To Pass Inoperative/Lo And High Beams Inoperative, 222

Four Bar Lamp, 555

Front Electromechanical Brake (EMB), 555

Fuse Block Details, 67
- Circuit and Cavity Location, 67
- Underhood Fuse Block #1, 67
- Underhood Fuse Block #2, 67

G

General Description, Power Distribution, 63

Glossary of Acronyms, 19

Graphic Overview, 68

Ground Circuits, 63

Ground Distribution, 194
- Ground Point Location, 205

CamScanner

H

Handling Electrostatic Discharge (ESD) Sensitive Parts, 41

Handwheel Sensor Fault, 278, 279
- Action Taken By the DSCM, 278
- Code Parameters, 278
- DSCM. DTC016, 278
- Intermittents, 278
- Other Controller Interfaces, 278
- Telltale Illuminated, 278

Hamess Connector Faces, 629

Hazard Telltale Inoperative/On All The Time, 492

Hazards Inoperative (Turn Signals Both Work Ok), 192

Headlamp Component Location Views, 208

Headlamp Switch, 557

Headlamps, 206, 209
- Circuit Operation, 209
- Flash to Pass. 209
- Headlamps Trouble Tree Index, 209
- System Check, 209

Heat Pump Ventilation System Thermal Control Module, 561

Heat Pump Ventilation System/Thermal Control Module, 559

Helpful Hints, Trouble Shooting Guides, 49

High Note Horn , 563

High Pressure Sensor, 563

High Voltage Disable, 24
- Removal, 24

High Voltage Enable, 25
- Installation, 25

Hoisting/Lifting For a Two Post Above Ground Hoist - (Side Car), 31

Hoisting/Lifting For a Two Post Inground Hoist — (Front and Rear), 33

Hom 400 Hz (Hi Note), Installation, 236

Hom 400 Hz (Lo Note), 236

Hom 500 Hz (Hi Note), 236
- Installation, 236
- Removal, 236

Hom Trouble Tree Index, 227

Homs, 224,227
- Pedestrian Alert Mode, 227
- Reverse Warning, 227

Horns Component Location View, 226

Homs Inoperative — Chart 1,228

Homs On All The Time (One Or Both) — Chart 4,233

Homs On All The Time — Chart 4a , 234

How to Use this Section of the Manual, 63

HTCM Service Now Telltale, 280

HTCM Temp Telltale, 281-

I

Inside Rearview Mirror, 564

Instrument Panel Cluster, 238, 246, 566

Instrument Panel Cluster (IPC), 248
- General Description, 248
  - Power Steering Control, 248
  - Power Steering Hand Wheel Sensor, 248

Instrument Panel Cluster (IPC) Blank, 252, 253, 254, 255

Instrument Panel Cluster Component Location View, 247

Interior Lamp Only Inoperative, 302

Interior Lights, 298

Interior Lights Component Location Views, 300

Introduction To Diagnosis of Electrical Faults, 53

IPC Flashing/Erratic, 256

J

Junction Block Component Location Views, 325

Junction Block Details, 310

Junction Blocks, 66

K

Keyless Door Unlocking, 339

Keyminder Chime - Inoperative/Stays On, 262

L

Left Door Lock Inoperative (Right Side Ok), 345

Left Front Marker Lamp, 556

Left Front Marker Out Only, 157

Left Front Park and Marker Out, 178

Left Front Park and Turn Lamps Out Only, 176

Left Front Park Lamp Out Only, 159

Left Front Park/Turn Lamp, 556

Left Front Speaker, 632

Left Front Turn Signal Out Only, 158

Left Hand Backup Light Inoperative Only, Chart 1,79

Left Hand Junction Block - JI, 568

Left Hand Junction Block - J10,580

Left Hand Junction Block — J12,581

Left Hand Junction Block - J13,582

Left Hand Junction Block — J2, 570

Left Hand Junction Block — J3, 571

CamScanner

Left Hand Junction Block - J4,572
Left Hand Junction Block - J5,573
Left Hand Junction Block - J6,575
Left Hand Junction Block - J8,577
Left Hand Junction Block — J9,579
Left Headlamp High Beam Inoperative Only, 210
Left Headlamp High Beam On All The Time, 214
Left Headlamp Low Beam Inoperative Only, 212
Left Headlamp Low Beam On All The Time, 216
Left High Beam Headlamp, 562
Left Low Beam Headlamp, 583
Left Power Door Lock Motor, 593
Left Power Door Lock Switch, 598
Left Power Mirror Motor, 598
Left Power Window Motor, 602
Left Rear and Right Rear Stop Lamps Out (Center High Mounted Stop Lamp [CHMSL] Working), 186
Left Rear License Lamp, 605
Left Rear License Lamp Out Only, 167
Left Rear Marker Out Only, 163
Left Rear Park and Stop Lamps Out Only, 184
Left Rear Park Lamp Out Only, 165
Left Rear Park, Marker and License Lamps Out, 189
Left Rear Stop Lamp Out Only, 169
Left Rear Tail/Stop Lamp, 606
Left Rear Turn Lamp, 606
Left Rear Turn Signal Out Only, 172
Left Side Power Mirror Problem, 352
Left Side Turn Signals Out with Left Turn Signals or Hazards Selected, 181
Left Telltale Bank Wait, Battery Life, Brake and Check Tire Pressure Telltales All Inoperative, 506
Left Window Goes Down Only, 372
Left Window Goes Up Only, 373
Left Window Inoperative (No Up Or Down), 374
Lifting With a Floor Jack, 34
Lifting, Jacking, and Support Points, 29
Lights On Chime Inoperative/Staying On, 260
Loss of BPM Poll, 268
Loss Of BTCM Eavesdrop, 276
Loss Of HTCM Eavesdrop, 272
Loss Of PCM Eavesdrop, 270
Loss of RSA Eavesdrop, 274
Low Note Horn, 584
Low Pressure Sensor, 584
Low Trac Telltale Inoperative/On All The Time, 503

M

Make the Repair, 68
Map Lights, 301
Map Lights Only Inoperative, 303
Master Cylinder Pressure Sensor - Downstream (MC), 12110192, 585
Master Cylinder Pressure Sensor - MC1,585
Master Cylinder Pressure Sensor - MC2, 585
Maxifuses, 64
Mode Valve Actuator, 586
Motor Winding Temperature Sensor, 586
Multimeter Display Reading, 55

N

No Accessory Mode, 451

o

Oil Pressure Switch, 587
Oil Pump, 587
On Vehicle Service, 27
Service Precautions, 27
One or More Speakers Inoperative/Noisy, 412
Only High Beams Inoperative, 218
Only Low Beams Inoperative, 219
Outside Air Valve Actuator, 588
Outside Temperature Sensor, 588

p

Parasitic Loads, 64
Park Brake Switch, 589
Parking Brake Telltale Inoperative/On All The Time, 494
Passenger Door Jamb Switch, 591
PCM Service Now Telltale, 282
PCM Service Service Soon Telltale, 296
PCM Temp Telltale, 284
Pedal Position Sensor, 592
Pedestrian Alert Mode Only Inoperative - Chart 2, 231

CamScanner

Periodic Wake-Up, 63
Positive Temperature Coefficients (PTC), 64
Power Circuits, 63
Power Distribution, 328, 333
Circuit and Cavity Location, 334
Fuse Block Details, 333
Parasitic Load Test, 65
Power Distribution Component Location View, 332
Power Door Locks, 336, 339
Power Door Locks Component Location View, 338
Power Door Locks Trouble Tree Index, 339
Power Inverter Module - JI, 595
Power Inverter Module — J2, 597
Power Mirror Switch, 599
Power Mirrors, 348, 350
Power Mirrors Component Location View, 349
Power Mirrors Trouble Tree Index, 350
Power Outlet, 356, 599
Power Outlet Component Location View, 357
Power Outlet Schematic - Symbols Example, 51
Power Steering — Lack Of Assist/Erratic Assist, 258
Power Steering Control Module, 358, 361
Power Steering Control Module Blindmate, 600
Power Steering Control Module Component Location View, 360
Power Steering Diagnostic Charts, 364, 365,366, 367
Chart 1, 364
Chart 2,365
Chart 3, 366
Chart 4,367
Power Steering Hand Wheel Sensor, 601
12064758, 601
Power Steering Pump Motor, 601
W 12092377,601
Power Windows, 368, 371
Power Windows Trouble Tree Index, 371
Power Windows Component Location View, 370
PRND Display Incorrect/All Lit Up, 267
PRND Switch #1,589
PRND Switch #2, 590
Propulsion
High Voltage, 380
Low Voltage, 382
Propulsion Component Location Views, 387
Protection Devices, 64
Pull-To-Seat Connectors, 60
Pulse Delay Operates Incorrectly or Is Inoperative (Low and High Work Ok), 522
Push-To-Seat Connectors, 59

R

Radio, 392, 604
Symptom Diagnosis, 406
Radio Component Location View, 394
Radio Controls, 395
Radio Display Blank nd Radio/Cassette/Cd Inoperative, 411
Radio Display Inoperative-Sound Works OK, 410
Radio Noise and/or Poor Reception, 407
Reading Wiring Schematics and Symbols, 50
Rear Defogger, 416, 418
Rear Defogger Trouble Tree Index, 418
Rear Defogger Component Location View, 417
Rear Defogger Inoperative, 420
Rear Defogger Inoperative (One Or Both Sides), 419
Recharging, 422
Recharging Component Location Views, 428
Reduced Performance Telltale, 287
Reduced Performance Telltale Inoperative/On All The Time, 498
Refrigerant Temperature Sensor, 607
Resistance, 54
Retained Accessory Power (RAP) Inoperative, 452
Reverse Warning Mode Only Inoperative - Chart 3,232
Reversing Valve, 607
Right Door Lock Inoperative (Left Side Ok), 346
Right Front Marker Lamp, 556
Right Front Marker Out Only, 160
Right Front Park and Marker Out, 179
Right Front Park and Turn Lamps Out Only, 177
Right Front Park Lamp Out Only, 162
Right Front Park/Turn Lamp, 556
Right Front Turn Signal Out Only, 161
Right Hand Backup Light Inoperative Only, Chart 2, 80
Right Hand Junction Block - JI, 609
Right Hand Junction Block - J12, 620
Right Hand Junction Block - J13, 621
Right Hand Junction Block - J2,611
Right Hand Junction Block - J3, 612
Right Hand Junction Block - J5, 613
Right Hand Junction Block - J6, 614

CamScanner

Right Hand Junction Block — J8, 616
Right Hand Junction Block - J9, 618
Right Headlamp High Beam Inoperative Only, 211
Right Headlamp High Beam On All The Time, 215
Right Headlamp Low Beam Inoperative Only, 213
Right Headlamp Low Beam On All The Time, 217
Right High Beam Headlamp, 562
Right I/P - Body Inline #1. 622, 623
Right I/P - Body Inline #2,624, 625
Right Low Beam Headlamp, 583
Right Power Door Lock Motor, 593
Right Power Door Lock Switch, 598
Right Power Mirror Motor, 598
Right Power Window Motor, 602
Right Rear License Lamp, 605
Right Rear License Lamp Out Only, 168
Right Rear Marker Lamp, 605
Right Rear Marker Out Only, 164
Right Rear Park and Stop Lamps Out Only, 185
Right Rear Park Lamp Out Only, 166
Right Rear Park, Marker and License Lamps Out, 190
Right Rear Speaker, 632
Right Rear Stop Lamp Out Only, 170
Right Rear Tail/Stop Lamp, 606
Right Rear Turn Lamp, 606
Right Rear Turn Signal Out Only, 174
Right Side Mirror Problem, 353
Right Side Turn Signals Out with Right Turn Signals and/or Hazards Selected, 182
Right Telltale Bank All Inoperative, 507
Right Telltale Bank Service Now, Anti-Lock, Temp, Seat Belt and Service Soon All Inoperative, 508
Right Window Goes Down Only, 376
Right Window Goes Up Only, 377
Right Window Inoperative (No Up Or Down, 378
RSA Inoperative/No Run Mode, 447, 449
Runl/Run2 Circuit Operation, 63
Run/Lock Shifter Assembly, 432,440
Run/Lock Shifter Assembly (RSA), 441, 627
General Description, 441
Airflow Controls, 445
Backlighting Dim Controls, 441
BTSI Control, 446
Cabin Preconditioning, 444
Changing the RSA Keycode, 442
Changing the External Keypad Keycode, 443
Check Tire Pressure Reset, 446
Climate Control Modes, 445
Climate Control System Buttons, 444
Coast Down Feature, 443
Defogging and De—Icing, 445
External Keypad, 442
External Keypad Keycode, 443
Fan Controls, 445
Gage Button, 444
Keyminder, 445
MI/KM Button, 444
Mode Selection (Lock, Off/Accy, and Run, 441
Power Windows, 441
Radio Wakeup, 441
Retained Accessory Power (RAP), 441
RSA Keypad, 442
Security Telltale/Disable, 442
Shifter, 445
Trip/Reset, 444
Run/Lock Shifter Assembly (RSA) Trouble Tree Index, 446
Run/Lock Shifter Assembly Component Location View, 439
Run/Lock Shifter Assembly Trimplate (RSA Trimplate), 471
Installation, 474
Removal, 471

S

Schematics, Reading, 50
Seat Belt Telltale, 294
Seat Belt Telltale Inoperative/On All The Time, 502
Seat Belt Telltale On All The Time, 266
Seatbelt Telltale Inoperative, 265
Secondary Rear Defogger, 628
Security Inoperative, 455
Security Telltale, 291
Security Telltale Inoperative/On All The Time/Flashing, 491
Security, Hazard, And Battery Life Telltales All Inoperative, 505
Sensing and Diagnostic Module, 628
Sensing and Diagnostic Module (SDM), 12160351, 628
Serial Data Loss From BTCM, 462
Serial Data Loss From HTCM, 464
Serial Data Loss From PCM, 466
Service Now Telltale Inoperative/On All The Tim, 499
Service Soon Telltale Inoperative/On All The Time, 504
Signal (Control or Data) Circuits, 63
SIR Driver Inflator Disable/I/P Hamess Connector (Disable), 629

CamScanner

SIR Driver Inflator Module, Coil Pigtail, 12110500, 629

SIR Driver Inflator Module - Coil Pigtail, 629

SIR Driver Inflator Module/IP - Harness Connector, Disable, 12092865,629

SIR Inflator Disable - Coil Pigtail, 630
12092865, 630

SIR Passenger Inflator Module Pigtail, 630
12077921.630

SIR Passenger Inflator Module/I/P Harness Connector (Disable), 631

SIR Passenger Inflator Module/IP - Hamess Connector, Disable, 12110288,631

SIR System, 27, 63

Splicing, Wire Repair, 58

Stoplamp Switch, 633
12040551,633

Sub-System Schematics, 69

Supplemental Inflatable Restraint System, 478

Supplemental Inflatable Restraint System Component Location View, 480

Symptom Table For Pulse System, 515

T

Tape Head and Capstan Cleaning, 405

Telltales, 482, 488
- Air Bag Telltale, 490
- Anti-Lock Telltale, 489
- Battery Life Telltale, 488
- Brake System Telltale, 488
- Check Tire Pressure Telltale, 488
- Hazard Telltale, 488
- Low Trac Telltale, 489
- Parking Brake Telltale, 488
- Reduced Performance Telltale, 489
- SeatBelt Telltale, 489
- Security Telltale, 488
- Service Now Telltale, 489
- Service Soon Telltale, 490
- Temp Telltale, 489
- Wait Telltale, 488

Telltales Component Location Views, 486

Telltales Trouble Tree Index, 490

Temperature Telltale Inoperative/On All The Time, 501

Terminal Removal, 59, 60, 62

Tire Low or Flat With No Check Tire Pressure Telltale, 116,117

Tire Pressure — Low or High, 468

Trouble Shooting Guides, 49

Trunk Junction Block, 635

Trunk Junction Block - JI, 634

Trunk Junction Block - J3, 636

Trunk Junction Block - J4, 637

Trunk Lamp, 301

Trunk Lamp Only Inoperative, 304

Trunk Lamp Switch, 638

Turn/Hazard Switch, 639

V

Vacuum Fluorescent (VF) On Full, Incandescents Out All the Time, 146

Vehicle Electrical Diagnosis.

Vehicle Stuck In Run Mode, 450

Vehicle ''Wake-Up Command" and ''Run 1/Wake-Up" During Charging, 63

Verify Completed Repair, 68

Verify the Problem, 68

Voltage, 54

VSS Erratic/Flashing/Zero All The Time, 257

W

Wait Telltale Inoperative/On All The Time, 493

Washer Operation, 514

Washer Pump, 640

Washer Pump Will Not Operate, 523

Weather Pack Connectors, 62

Wheel Speed Sensor, 12052644, 641

Wheel Speed Sensor - Left Front, 641

Wheel Speed Sensor - Left Rear, 641

Wheel Speed Sensor - Right Front, 641

Wheel Speed Sensor - Right Rear, 641

Windshield Wiper, 510

Windshield Wiper Component Location Views, 512

Windshield Wiper/Washer Inline, 642

Windshield Wiper/Washer System, 514
- Diagnosis, 515
  - System Diagnosis, 515
  - Troubleshooting Hints, 515
- General Description, 514
  - Ground Control of Wiper/Washer, 514
  - Pulse System, 514

Wiper Motor, 643

Wiper Operation, 514

Wiper/Washer Switch, 643

Wipers Cut Out Intermittently At Low Or High Speed Settings (Current Draw Test), 521

CamScanner

Wipers Do Not Operate In Any Mode, 516

Wipers Enabled At All Times (With Rap Off In Lock Mode), 520

Wipers Run At High Speed
High Speed Inoperative, 518
Low Speed/Delay Inoperative, 517

Wipers Will Not Turn Off, 519

Wire Repair, 58

Wire Sizes. 50

CamScanner

HARNESS CONNECTOR PART NUMBERS

PART NUMBER	PAGE(S)
12033911	602
12033934	599
12034341	536
12040551	633
12040952	625
12040953	624
12045575	559, 627
12047662	555
12047781	638
12047785	564
12047886	599
12047937	544
12047946	561
12048457	545
12052641	538
12052644	586, 587, 641
12052832	632
12052848	544, 547, 589
12059181	583
12059252	551
12059595	563
12064758	598, 601
12064760	548
12064766	589
12064980	554, 622, 623
12064993	586, 588
12065402	587
12065425	592
12077921	630
12084699	557
12084944	571, 612, 637
12092133	602, 628
12092237	639
12092254	643
12092512	607
12092629	580
12092632	581, 614
12092865	629, 630
12110053	556, 605
12110088	572
12110112	575, 620
12110113	540
12110115	604
12110170	588
12110192	537,563,584,585
12110196	551,591
12110207	566
12110244	568, 579,611,616
12110245	570, 577, 609, 618
12110250	549
12110259	582, 621, 636
12110288	631
12110293	546, 555,590, 598
12110295	537
12110626	541,573, 613, 635
12129025	533,535,595
12129088	542
12129126	643
12129135	531,550
12129136	530,550
12129225	527,597
12129565	536,546,547, 642
12129600	642
12145555	552
12160351	628
12160394	529
12160395	556, 606
12160544	531
12162343	607
12176429	553
12177127	640
15300027	593
8911772	543

CamScanner

NOTES

CamScanner

SERVICE MANUAL COMMENT FORM

£Vi ™

U: this f if
SeXte M°a™al yOU haVC any SU88eSt‘OnS Or see any areas of opportunity for Electric Vehicle
nus

Service Manual(s) that apply

Page number(s) that apply

VIN (if applicable) or model and applicable options_____

Describe in detail, the error found or the suggestion(s). Attach additional pages if necessary.

AAA---- 655

From: Retailer Firm Name---------- ----------Retailer Code ----------

City/Town_____ State ---------- Zlp ----------

Name of Person Submitting This Comment Form----------

CamScanner

Service Manual Contents

- Trouble Shooting
- Power Distribution
- Diagnostic Flow Charts
- Diagnostic Trouble Codes

4'- <

v

NOTE: **fCefer to the Index in the back of this manual or the Table of Contents in the front of this manual for location of specific component.**

CamScanner